

User Manual

High Performance/User-Friendly Powerful AC Motor Drives



Power Range:

3-phase 230V series: 0.75~37kW(1.0~50HP) 3-phase 460V series: 0.75~75kW(1.0~100HP) 3-phase 575V series: 0.75~75kW(1.0~100HP)



www.delta.com.tw/industrialautomation

ASIA

Delta Electronics, Inc.

Taoyuan1

31-1, Xingbang Road, Guishan Industrial Zone, Taoyuan County 33370, Taiwan, R.O.C. TEL: 886-3-362-6301 / FAX: 886-3-362-7267

Delta Electronics (Jiang Su) Ltd.

Wujiang Plant3

1688 Jiangxing East Road, Wujiang Economy Development Zone, Wujiang City, Jiang Su Province, People's Republic of China (Post code: 215200) TEL: 86-512-6340-3008 / FAX: 86-769-6340-7290

Delta Electronics (Japan), Inc. Tokyo Office

Delta Shibadaimon Building, 2-1-14 Shibadaimon, Minato-Ku, Tokyo, 105-0012, Japan TEL: 81-3-5733-1111 / FAX: 81-3-5733-1211

Delta Electronics (Korea), Inc.

234-9, Duck Soo BD 7F, Nonhyun-dong, Kangnam-ku, Seoul, Korea Post code : 135-010 TEL: 82-2-515-5303/5 / FAX: 82-2-515-5302

Delta Electronics (Singapore) Pte. Ltd.

8 Kaki Bukit Road 2, #04-18 Ruby Warehouse Complex, Singapore 417841 TEL: 65-6747-5155 / FAX: 65-6744-9228

Delta Energy Systems (India) Pvt. Ltd. Plot No. 27 & 31, Sector-34, EHTP,

Plot No. 27 & 31, Sector-34, EHTP, Gurgaon-122001 Haryana, India TEL: 91-124-4169040 / FAX: 91-124-4036045

AMERICA

Delta Products Corporation (USA)

Raleigh Office P.O. Box 12173,5101 Davis Drive, Research Triangle Park, NC 27709, U.S.A. TEL: 1-919-767-3813 / FAX: 1-919-767-3969

EUROPE

Deltronics (Netherlands) B.V. Eindhoven Office De Witbogt 15, 5652 AG Eindhoven, The Netherlands TEL: 31-40-259-28-50/ FAX: 31-40-259-28-51



*We reserve the right to change the information in this manual without prior notice

A NELTA V	
<i>V∽</i> ∂-В	
User Manual	
High Performance/User-Friendly Powerful AC Motor Drives	

Thank you for choosing DELTA's high-performance VFD-B Series. The VFD-B Series is manufactured with high-quality components and materials and incorporates the latest microprocessor technology available.

This manual is to be used for the installation, parameter setting, troubleshooting, and daily maintenance of the AC motor drive. To guarantee safe operation of the equipment, read the following safety guidelines before connecting power to the AC motor drive. Keep this operating manual at hand and distribute to all users for reference.

To ensure the safety of operators and equipment, only qualified personnel familiar with AC motor drive are to do installation, start-up and maintenance. Always read this manual thoroughly before using VFD-B series AC Motor Drive, especially the WARNING, DANGER and CAUTION notes. Failure to comply may result in personal injury and equipment damage. If you have any questions, please contact your dealer.

PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



- 1. AC input power must be disconnected before any wiring to the AC motor drive is made.
- A charge may still remain in the DC-link capacitors with hazardous voltages, even if the power has been turned off. To prevent personal injury, please ensure that power has been turned off before opening the AC motor drive and wait ten minutes for the capacitors to discharge to safe voltage levels.
- 3. Never reassemble internal components or wiring.
- 4. The AC motor drive may be destroyed beyond repair if incorrect cables are connected to the input/output terminals. Never connect the AC motor drive output terminals U/T1, V/T2, and W/T3 directly to the AC mains circuit power supply.
- Ground the VFD-B using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed. Refer to the Basic Wiring Diagram.
- VFD-B series is used only to control variable speed of 3-phase induction motors, NOT for 1phase motors or other purpose.
- 7. VFD-B series shall NOT be used for life support equipment or any life safety situation.



- DO NOT use Hi-pot test for internal components. The semi-conductor used in the AC motor drive is easily damaged by high-pressure.
- There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. To prevent damage to these components, do not touch these components or the circuit boards with metal objects or your bare hands.
- 3. Only qualified persons are allowed to install, wire and maintain AC motor drives.



- 1. Some parameter settings will cause the motor to run immediately after applying power.
- DO NOT install the AC motor drive in a place subjected to high temperature, direct sunlight, high humidity, excessive vibration, corrosive gases or liquids, or airborne dust or metallic particles.
- Only use AC motor drives within specification. Failure to comply may result in fire, explosion or electric shock.
- To prevent personal injury, please keep children and unqualified people away from the equipment.
- 5. When the motor cable between the AC motor drive and motor is too long, the layer insulation of the motor may be damaged. Please use a frequency inverter duty motor or add an AC output reactor to prevent damage to the motor. Refer to appendix B Reactor for details.
- The rated voltage for the AC motor drive must be ≤ 240V (≤ 480V for 460V models, ≤ 600V for 575V models) and the mains supply current capacity must be ≤ 5000A RMS (≤10000A RMS for the ≥ 40hp (30kW) models).

Preface	i
Table of Contents	iii
Chapter 1 Introduction	1-1
1.1 Receiving and Inspection	1-1
1.1.1 Nameplate Information	1-1
1.1.2 Model Explanation	1-1
1.1.3 Series Number Explanation	1-2
1.1.4 Drive Frames	1-2
1.2 Appearances	1-2
1.3 Preparation for Installation and Wiring	1-4
1.3.1 Remove Keypad	1-4
1.3.2 Remove Front Cover	1-6
1.4 Lifting	1-7
1.5 Storage	1-8
Chapter 2 Installation and Wiring	2-1
2.1 Ambient Conditions	2-1
2.2 Installation	2-1
2.3 Dimensions	2-3
2.4 Wiring	2-12
2.4.1 Basic Wiring	2-13

2.4.2 External Wiring	2-18
2.4.3 Main Terminals Connections	2-19
2.4.4 Control Terminals	2-21
2.4.5 Main Circuit Terminals	2-26
Chapter 3 Start Up	3-1
3.1 Preparations before Start-up	3-1
3.2 Operation Method	3-2
3.3 Trial Run	3-2
Chapter 4 Digital Keypad Operation	4-1
4.1 Description of the Digital Keypad VFD-PU01	4-1
4.2 How to Operate the Digital Keypad VFD-PU01	4-3
Chapter 5 Parameters	5-1
5.1 Summary of Parameter Settings	5-2
5.2 Parameter Settings for Applications	5-18
5.3 Description of Parameter Settings	5-23
Chapter 6 Fault Code Information	6-1
6.1 Common Problems and Solutions	6-1
6.2 Reset	6-4
Chapter 7 Troubleshooting	7-1
7.1 Over Current (OC)	7-1
7.2 Ground Fault	7-2
7.3 Over Voltage (OV)	7-2
7.4 Low Voltage (Lv)	7-3
7.5 Over Heat (OH)	7-4
7.6 Overload	7-4

	7.7 Display of PU01 is Abnormal	7-5
	7.8 Phase Loss (PHL)	7-5
	7.9 Motor cannot Run	7-6
	7.10 Motor Speed cannot be Changed	7-7
	7.11 Motor Stalls during Acceleration	7-8
	7.12 The Motor does not Run as Expected	7-8
	7.13 Electromagnetic/Induction Noise	7-9
	7.14 Environmental Condition	7-9
	7.15 Affecting Other Machines	7-10
Cł	hapter 8 Maintenance and Inspections	8-1
Aŗ	ppendix A Specifications	A-1
Aŗ	ppendix B Accessories	B-1
	B.1 All Brake Resistors & Brake Units Used in AC Motor Drives	B-1
	B.1.1 Dimensions and Weights for Brake Resistors	B-4
	B.1.2 Specifications for Brake Unit	B-6
	B.1.3 Dimensions for Brake Unit	B-7
	B.2 AMD - EMI Filter Cross Reference	B-8
	B.2.1 Dimensions	B-12
	B.3 PG Card (for Encoder)	B-20
	B.3.1 PG02 Installation	B-20
	B.3.1.1 PG Card and Pulse Generator (Encoder)	B-21
	B.3.1.2 PG-02 Terminal Descriptions	B-23
	B.3.2 PG03	B-25
	B.3.2.1 Installation	B-25

B.3.2.2 PG Card and Pulse Generator (Encoder)	B-26
B.3.2.3 PG-03 Terminal Descriptions	B-27
B.4 Remote Controller RC-01	B-30
B.5 Remote Panel Adapter (RPA 01)	B-31
B.6 AC Reactor	B-32
B.6.1 AC Input Reactor Recommended Value	B-32
B.6.2 AC Output Reactor Recommended Value	В-33
B.6.3 Applications for AC Reactor	B-35
B.7 Zero Phase Reactor (RF220X00A)	B-37
B.8 DC Choke Recommended Values	B-36
B.9 No-fuse Circuit Breaker Chart	B-38
B.10 Fuse Specification Chart	B-39
B.11 PU06	B-40
B.11.1 Description of the Digital keypad VFD-PU06	B-40
B.11.2 Explanation of Display Message	B-40
B.11.3 Operation Flow Chart	B-41
Appendix C How to Select the Right AC Motor Drive	C-1
C.1 Capacity Formulas	C-2
C.2 General Precaution	C-4
C.3 How to Choose a Suitable Motor	C-5

 
1.1 Receiving and Inspection

This VFD-B AC motor drive has gone through rigorous quality control tests at the factory before shipment. After receiving the AC motor drive, please check for the following:


- Check to make sure that the package includes an AC motor drive, the User Manual/Quick Start and CD, dust covers and rubber bushings.
- Inspect the unit to assure it was not damaged during shipment.
- Make sure that the part number indicated on the nameplate corresponds with the part number of your order.

1.1.1 Nameplate Information


Example for 1HP/0.75kW 3-phase 230V AC motor drive



1.1.2 Model Explanation

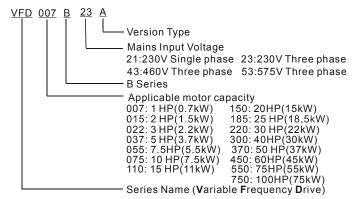

Chapter 1 Introduction | VFD-B Series 1.1.3 Series Number Explanation

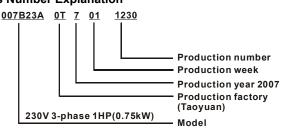

If the nameplate information does not correspond to your purchase order or if there are any problems, please contact your distributor.

Frame	Power range	Models
А	1hp (0.75kW)	VFD007B23A/43A/53A
A1	1-2hp (0.75-1.5kW)	VFD007B21A, VFD015B21A/23A/43A/53A
A2	2-3hp (1.5-2.2kW)	VFD015B21B/23B, VFD022B23B/43B/53A
В	3-5hp (2.2-3.7kW)	VFD022B21A, VFD037B23A/43A/53A
		VFD055B23A/43A/53A,
С	7.5-15hp (5.5-11kW)	VFD075B23A/43A/53A,
		VFD110B23A/43A/53A
D	20-30hp (15-22kW)	VFD150B23A/43A/53A,
		VFD185B23A/43A/53A,
		VFD220B23A/43A/53A
E	40-60hp (30-45kW)	VFD300B43A/53A, VFD370B43A/53A,
		VFD450B43A/53A
E1	40-100hp (30-75kW)	VFD300B23A, VFD370B23A,
		VFD550B43C/53A, VFD750B43C/53A


Please refer to Chapter 2.3 for exact dimensions.

1.2 Appearances

(Refer to chapter 2.3 for exact dimensions)


1-3HP/0.75-2.2kW (Frame A, A1, A2)

3-5HP/2.2-3.7kW (Frame B)

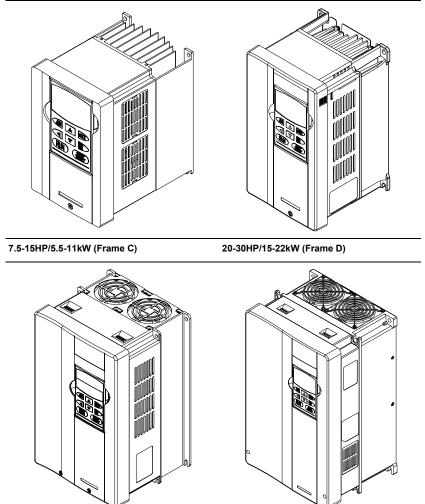

40-100HP/30-75kW (Frame E, E1)

75-100HP/55-75kW (Frame F)

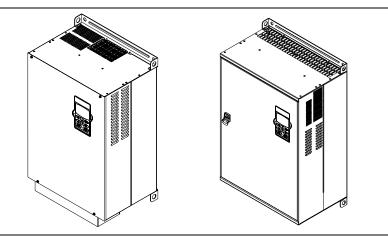


1.3 Preparation for Installation and Wiring

1.3.1 Remove Keypad


1-3HP/0.75-2.2kW (Frame A, A1, A2)

3-5HP/2.2-3.7kW (Frame B)

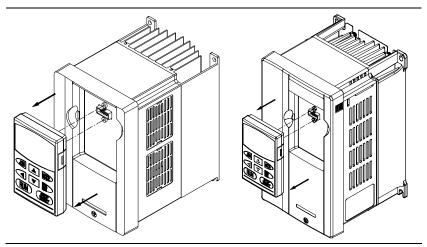



7.5-15HP/5.5-11kW (Frame C)

20-30HP/15-22kW (Frame D)

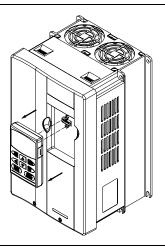


40-100HP/30-75kW (Frame E, E1)

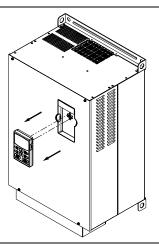

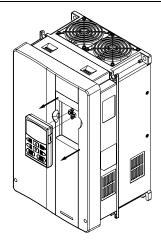


75-100HP/55-75kW (Frame F)

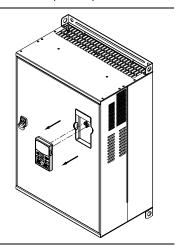

1.3.2 Relilove Fiblit Cover


1-3HP/0.75-2.2kW (Frame A, A1, A2)

3-5HP/2.2-3.7kW (Frame B)

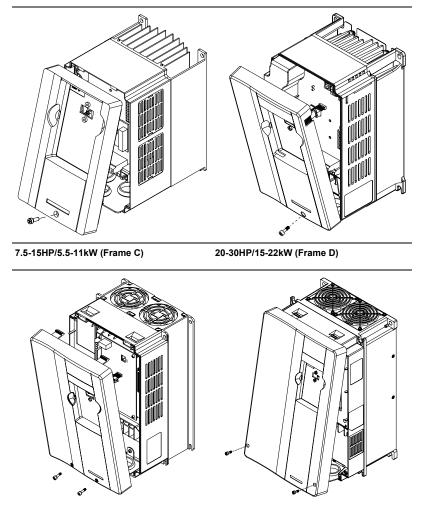

40-100HP/30-75kW (Frame E, E1)


75-100HP/55-75kW (Frame F)

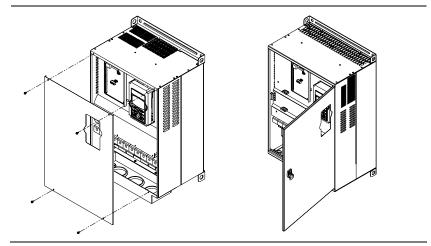


1.4 Lifting

Please carry only fully assembled AC motor drives as shown in the following.



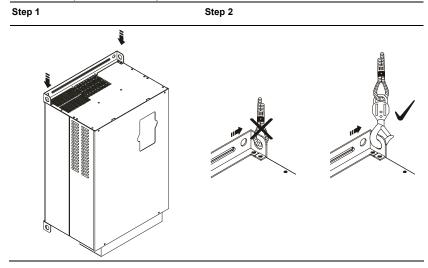

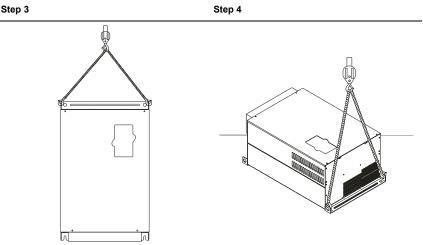

1.5 Storage

The AC motor drive should be kept in the shipping carton or crate before installation. In order to retain the warranty coverage, the AC motor drive should be stored properly when it is not to be used for an extended period of time. Storage conditions are:

Store in a clean and dry location free from direct sunlight or corrosive fumes.

Store within an ambient temperature range of -20 °C to +60 °C.

Store within a relative humidity range of 0% to 90% and non-condensing environment.

Store within an air pressure range of 86 kPA to 106kPA.

- 1. DO NOT store in an area with rapid changes in temperature. It may cause condensation and frost.
- DO NOT place on the ground directly. It should be stored properly. Moreover, if the surrounding environment is humid, you should put exsiccator in the package.
- If the AC motor drive is stored for more than 3 months, the temperature should not be higher than 30 °C. Storage longer than one year is not recommended, it could result in the degradation of the electrolytic capacitors.
- 4. When the AC motor drive is not used for a long time after installation on building sites or places with humidity and dust, it's best to move the AC motor drive to an environment as stated above.

2.1 Ambient Conditions

Install the AC motor drive in an environment with the following conditions:

Operation	Air Temperature: Relative Humidity: Atmosphere pressure: Installation Site Altitude: Vibration:	-10 ~ +40°C (14 ~ 104°F) <90%, no condensation allowed 86 ~ 106 kPa <1000m <20Hz: 9.80 m/s ² (1G) max 20 ~ 50Hz: 5.88 m/s ² (0.6G) max
Storage Transportation	Temperature: Relative Humidity: Atmosphere pressure: Vibration:	-20°C ~ +60°C (-4°F ~ 140°F) <90%, no condensation allowed 86 ~ 106 kPa <20Hz: 9.80 m/s ² (1G) max 20 ~ 50Hz: 5.88 m/s ² (0.6G) max
Pollution Degree	2: good for a factory type env	vironment.




- Operating, storing or transporting the AC motor drive outside these conditions may cause damage to the AC motor drive.
- 2. Failure to observe these precautions may void the warranty!

2.2 Installation

- Mount the AC motor drive vertically on a flat vertical surface by using bolts or screws. Other directions are not allowed.
- The AC motor drive will generate heat during operation. Allow sufficient space around the unit for heat dissipation.
- The heat sink temperature may rise to 90°C when running. The material on which the AC motor drive is mounted must be noncombustible and be able to withstand this high temperature.
- 4. When the AC motor drive is installed in a confined space (e.g. cabinet), the surrounding temperature must be within 10 ~ 40°C with good ventilation. DO NOT install the AC motor drive in a space with bad ventilation.

- 5. When installing multiple AC motor drives in the same cabinet, they should be adjacent in a row with enough space in-between. When installing one AC motor drive below another one, use a metal separation barrier between the AC motor drives to prevent mutual heating.
- Prevent fiber particles, scraps of paper, saw dust, metal particles, etc. from adhering to the heatsink.

Minimum Mounting Clearances

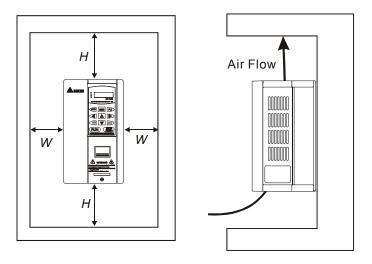



НР	W	Н
	mm (inch)	mm (inch)
1-5HP	50 (2)	150 (6)
7.5-20HP	75 (3)	175 (7)
25-75HP	75 (3)	200 (8)
100HP and above	75 (3)	250 (10)


2.3 Dimensions

(Dimensions are in millimeter and [inch])

Frame A: VFD007B23A/43A/53A

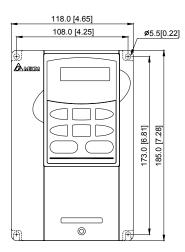


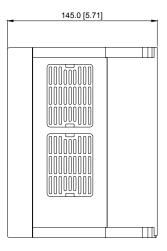


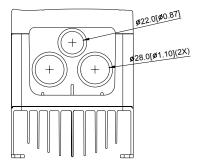



R2.75[0.11]

 Frame A1: VFD007B21A, VFD015B21A/23A/43A/53A

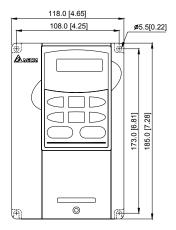


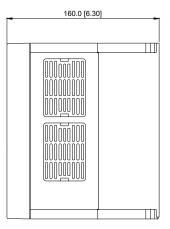

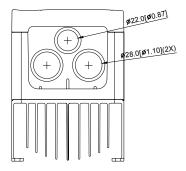





Frame A2: VFD015B21B/23B, VFD022B23B/43B/53A

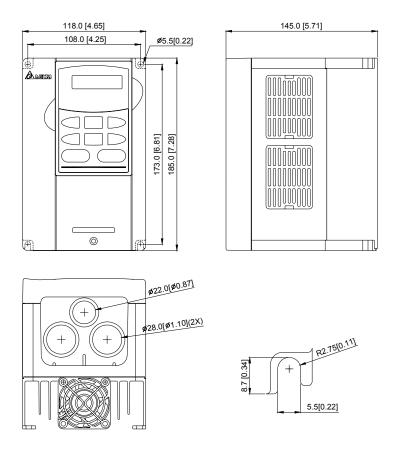


Frame B: VFD022B21A, VFD037B23A/43A/53A

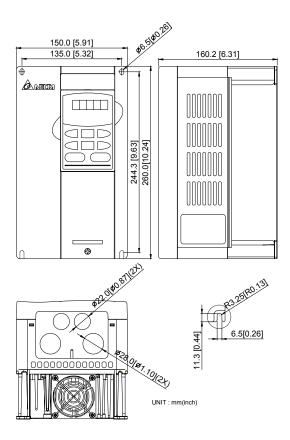


Frame C: VFD055B23A/43A/53A, VFD075B23A/43A/53A, VFD110B23A/43A/53A

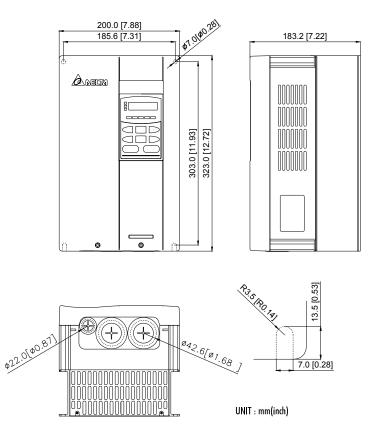


Frame D: VFD150B23A/43A/53A, VFD185B23A/43A/53A, VFD220B23A/43A/53A

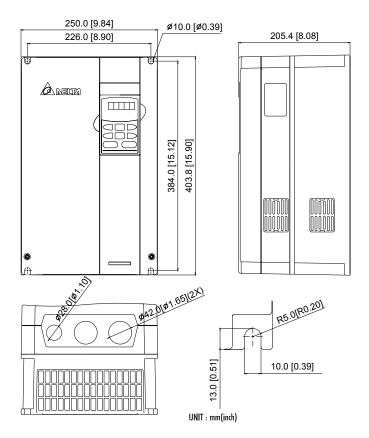




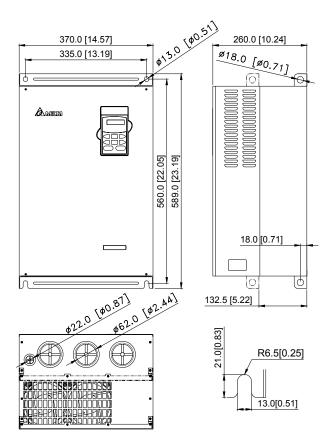

Frame E1: VFD300B23A, VFD370B23A, VFD550B43C/53A, VFD750B43C/53A

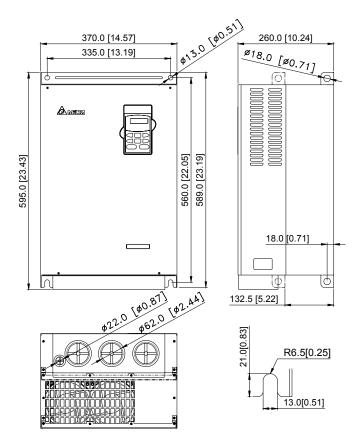

VFD-PU01

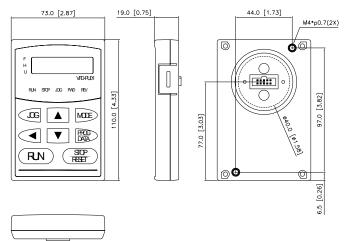

2.4 Wiring

After removing the front cover, check if the power and control terminals are clear of debris. Be sure to observe the following precautions when wiring.

General Wiring Information

Applicable Codes

All VFD-B series are Underwriters Laboratories, Inc. (UL) and Canadian Underwriters Laboratories (cUL) listed, and therefore comply with the requirements of the National Electrical Code (NEC) and the Canadian Electrical Code (CEC).

Installation intended to meet the UL and cUL requirements must follow the instructions provided in "Wiring Notes" as a minimum standard. Follow all local codes that exceed UL and cUL requirements. Refer to the technical data label affixed to the AC motor drive and the motor nameplate for electrical data.

The "Line Fuse Specification" in Appendix B, lists the recommended fuse part number for each VFD-B Series part number. These fuses (or equivalent) must be used on all installations where compliance with U.L. standards is a required.

2.4.1 Basic Wiring

- Make sure that power is only applied to the R/L1, S/L2, T/L3 terminals. Failure to comply may result in damage to the equipment. The voltage and current should lie within the range as indicated on the nameplate.
- Check the following items after completing the wiring:
 - 1. Are all connections correct?
 - 2. No loose wires?
 - 3. No short-circuits between terminals or to ground?

A charge may still remain in the DC bus capacitors with hazardous voltages even if the power has been turned off. To prevent personal injury, please ensure that the power is turned off and wait ten minutes for the capacitors to discharge to safe voltage levels before opening the AC motor drive.



- All the units must be grounded directly to a common ground terminal to prevent electric shock, fire and interference.
- Only qualified personnel familiar with AC motor drives are allowed to perform installation, wiring and commissioning.
- 3. Make sure that the power is off before doing any wiring to prevent electric shocks.

Basic Wiring Diagrams

Users must connect wires according to the circuit diagrams on the following pages. Do not plug a modem or telephone line to the RS-485 communication port or permanent damage may result. The pins 1 & 2 are the power supply for the optional copy keypad PU06 only and should not be used for RS-485 communication.

Chapter 2 Installation and Wiring | VFD-B Series Figure 1 for models of VFD-B Series VFD007B21A/23A/43A/53A, VFD015B21A/21B/23A/23B/43A/53A, VFD022B23B/43B/53A


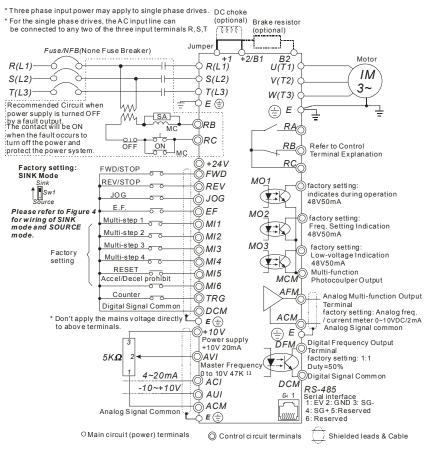


Figure 2 for models of VFD-B Series VFD022B21A, VFD037B23A/43A/53A, VFD055B23A/43A/53A, VFD075B23A/43A/53A, VFD110B23A/43A/53A

* Three phase input power may apply to single phase drives.

* For the single phase drives, the AC input line can be connected to any two of the three input terminals R,S,T

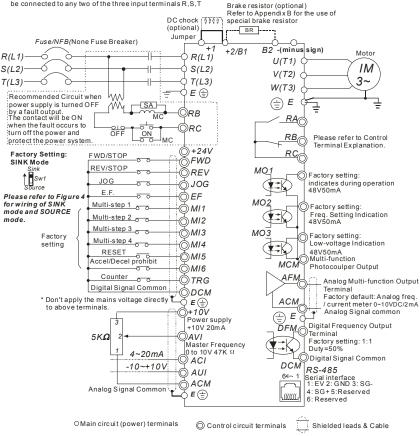

Chapter 2 Installation and Wiring | VFD-B Series Figure 3 for models of VFD-B Series VFD150B23A/43A/53A, VFD185B23A/43A/53A, VFD220B23A/43A/53A, VFD300B23A/43A/53A, VFD370B23A/43A/53A, VFD450B43A/53A, VFD550B43C/53A, VFD750B43C/53A

* Three phase input power may apply to single phase drives.


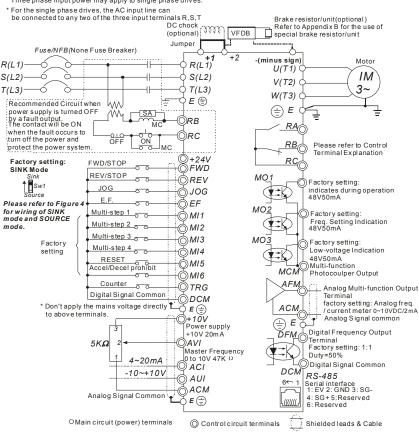


Figure 4 Wiring for SINK mode and SOURCE mode

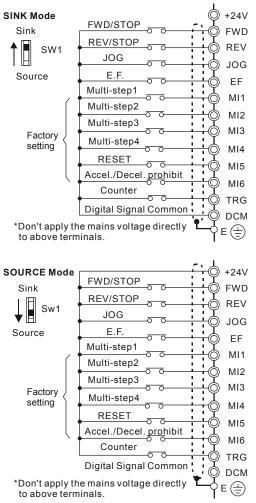

2.4.2 External Wiring

Power Supply		Items	Explanations
		Power supply	Please follow the specific power supply requirements shown in Appendix A.
	O FUSE/NFB	Fuse/NFB (Optional)	There may be an inrush current during power up. Please check the chart of Appendix B and select the correct fuse with rated current. Use of an NFB is optional.
$\frac{1}{T}$	Magnetic contactor	Magnetic contactor (Optional)	Please do not use a Magnetic contactor as the I/O switch of the AC motor drive, as it will reduce the operating life cycle of the AC drive.
EMI Filter	Input AC Line Reactor Zero-phase Reactor	Input AC Line Reactor (Optional)	Used to improve the input power factor, to reduce harmonics and provide protection from AC line disturbances (surges, switching spikes, short interruptions, etc.). AC line reactor should be installed when the power supply capacity is 500kVA or more or advanced capacity is activated . The wiring distance should be \leq 10m. Refer to appendix B for details.
	T/L3 ⊕ +1 ⊕ DC +2/B1 ⊕ Chock +2/B1 ⊕ U B2 ⊕ -1 ⊕ U B2 ⊕ U	Zero-phase Reactor (Ferrite Core Common Choke) (Optional)	Zero phase reactors are used to reduce radio noise especially when audio equipment is installed near the inverter. Effective for noise reduction on both the input and output sides. Attenuation quality is good for a wide range from AM band to 10MHz. Appendix B specifies the zero phase reactor. (RF220X00A)
	Zero-phase Reactor	EMI filter (Optional)	To reduce electromagnetic interference, please refer to Appendix B for more details.
	Output AC Line Reactor	Brake Resistor (Optional)	Used to reduce the deceleration time of the motor. Please refer to the chart in Appendix B for specific Brake Resistors.
Motor		Output AC Line Reactor (Optional)	Motor surge voltage amplitude depends on motor cable length. For applications with long motor cable (>20m), it is necessary to install a

Terminal Symbol		Explanation of Terminal Function
R, S, T	R/L1, S/L2, T/L3	AC line input terminals (1-phase/3-phase)
U, V, W	U/T1, V/T2, W/T3	AC drive output terminals for connecting 3-phase induction motor
P1, P2	+1, +2	Connections for DC Choke (optional)
P-B, P2/B1~B2	+2/B1~B2	Connections for Brake Resistor (optional)
P2~N, P2/B1~N	+2~(-), +2/B1~(-)	Connections for External Brake Unit (VFDB series)
(-	÷	Earth connection, please comply with local regulations.

 
2.4.3 Main Terminals Connections

Mains power terminals (R/L1, S/L2, T/L3)

- Connect these terminals (R/L1, S/L2, T/L3) via a no-fuse breaker or earth leakage breaker to 3-phase AC power (some models to 1-phase AC power) for circuit protection. It is unnecessary to consider phase-sequence.
- It is recommended to add a magnetic contactor (MC) in the power input wiring to cut off power quickly and reduce malfunction when activating the protection function of AC motor drives. Both ends of the MC should have an R-C surge absorber.
- Do NOT run/stop AC motor drives by turning the power ON/OFF. Run/stop AC motor drives by RUN/STOP command via control terminals or keypad. If you still need to run/stop AC drives by turning power ON/OFF, it is recommended to do so only ONCE per hour.
- Do NOT connect 3-phase models to a 1-phase power source.

Control circuit terminals (U, V, W)

When the AC drive output terminals U/T1, V/T2, and W/T3 are connected to the motor terminals U/T1, V/T2, and W/T3, respectively, the motor will rotate counterclockwise (as viewed on the shaft end of the motor) when a forward operation command is received. To permanently reverse the direction of motor rotation, switch over any of the two motor leads.



- DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- With long motor cables, high capacitive switching current peaks can cause over-current, high leakage current or lower current readout accuracy. To prevent this, the motor cable should be less than 20m for 3.7kW models and below. And the cable should be less than 50m for 5.5kW models and above. For longer motor cables use an AC output reactor.
- Use a well-insulated motor, suitable for inverter operation.

 
Terminals [+1, +2] for connecting DC reactor



To improve the power factor and reduce harmonics, connect a DC reactor between terminals [+1, +2]. Please remove the jumper before connecting the DC reactor.

NOTE Models of 15kW and above have a built-in DC reactor.

Terminals [+2/B1, B2] for connecting brake resistor and terminals [+1, +2/B1] for connecting external brake unit




- Connect a brake resistor or brake unit in applications with frequent deceleration ramps, short deceleration time, too low brake torque or requiring increased brake torque.
- If the AC motor drive has a built-in brake chopper (all models of 11kW and below), connect the external brake resistor to the terminals [+2/B1, B2].
- Models of 15kW and above don't have a built-in brake chopper. Please connect an external optional brake unit (VFDB-series) and brake resistor. Refer to VFDB series user manual for details.
- Connect the terminals [+(P), -(N)] of the brake unit to the AC motor drive terminals [+2(+2/B1), (-)]. The length of wiring should be less than 5m with twisted cable.
- When not used, please leave the terminals [+2/B1, -] open.



1. Short-circuiting [B2] or [-] to [+2/B1] can damage the AC motor drive.


Grounding terminals (+)

 - Make sure that the leads are connected correctly and the AC drive is properly grounded. (Ground resistance should not exceed 0.1Ω.)
- Use ground leads that comply with local regulations and keep them as short as possible.
- Multiple VFD-B units can be installed in one location. All the units should be grounded directly to a common ground terminal, as shown in the figure below. Ensure there are no ground loops.



2.4.4 Control Terminals

Circuit diagram for digital inputs (SINK current 16mA.)

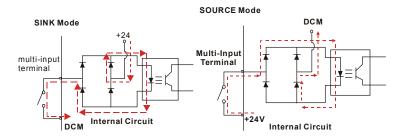

Terminal symbols and functions

Terminal Symbol	Terminal Function	Factory Settings (SINK) ON: Connect to DCM	
FWD	Forward-Stop command	ON: OFF:	Run in FWD direction Stop acc. to Stop Method
REV	Reverse-Stop command	ON: OFF:	Run in REV direction Stop acc. to Stop Method

	lation and Wiring VFD-B Series		
Terminal Symbol	Terminal Function	Factory Settings (SINK) ON: Connect to DCM	
JOG	Jog command	ON: JOG operation OFF: Stop acc. to Stop Method	
EF	External fault	ON: External Fault. Display "EF" and stop acc. To Stop Method. OFF: No fault	
TRG	External counter input	ON: At every pulse counter is advanced by 1.	
MI1	Multi-function Input 1		
MI2	Multi-function Input 2		
MI3	Multi-function Input 3	Refer to Pr.04-04 to Pr.04-09 for programming	
MI4	Multi-function Input 4	the Multi-function Inputs.	
MI5	Multi-function Input 5		
MI6	Multi-function Input 6		
DFM	Digital Frequency Meter (Open Collector Output) DFM-DCM Max: 48V 50mA 50mA 100%	Pulse voltage output monitor signal, proportional to output frequency Duty-cycle: 50% Ratio: Pr.03-07 Min. load: 10KΩ Max. current: 50mA Max. voltage: 48VDC.	
+24V	DC Voltage Source	+24VDC, 20mA used for SOURCE mode.	
DCM	Digital Signal Common	Common for digital inputs and used for SINK mode.	
RA	Multi-function Relay output (N.O.) a	Resistive Load: 5A(N.O.)/3A(N.C.) 240VAC 5A(N.O.)/3A(N.C.) 24VDC	
RB	Multi-function Relay output (N.C.) b	Inductive Load: 1.5A(N.O.)/0.5A(N.C.) 240VAC	
RC	Multi-function Relay common	1.5A(N.O.)/0.5A(N.C.) 24VDC Refer to Pr.03-00 for programming	

Terminal Symbol Terminal Function Factory Settings (SINK) ON: Connect to DCM MO1 Multi-function Output 1 (Photocoupler) Maximum 48VDC, 50mA Refer to Pr.03-01 to Pr.03-03 for programmi MO2 Multi-function Output 2 (Photocoupler) Mo1~MO3-DCM Max: 48Vdc 50mA MO3 Multi-function Output 3 (Photocoupler) Mo1~MO3 Multi-function Output 3 MCM Multi-function output common Common for Multi-function Outputs +10V Potentiometer power supply +10VDC 20mA AVI Analog voltage Input AVI Impedance: 0 ~ Max. Output Frequency (Pr.01-00 Selection: 47kΩ Resolution: AVI Analog voltage Input internal circuit Impedance: 0 ~ Max. Output Frequency (Pr.01-00 Selection: 0 ~ 10VDC = 0 ~ Max. Output Frequency (Pr.01-00 Set-up:
MO1 Multi-function Output 1 (Photocoupler) Maximum 48VDC, 50mA MO2 Multi-function Output 2 (Photocoupler) Maximum 48VDC, 50mA MO2 Multi-function Output 2 (Photocoupler) Max: 48Vdc 50mA MO3 Multi-function Output 3 (Photocoupler) Mo1~MO3 MCM Multi-function output 3 (Photocoupler) Mo1~MO3 MCM Multi-function output common Common for Multi-function Outputs +10V Potentiometer power supply +10VDC 20mA AVI Analog voltage Input AVI Impedance: 0 ~ Max. Output Frequency (Pr.01-00 AVI Avi and an analog voltage Input AVI Impedance: 0 ~ Max. Output Frequency (Pr.01-00
MO1(Photocoupler)Refer to Pr.03-01 to Pr.03-03 for programmiMO2Multi-function Output 2 (Photocoupler)Mo1~MO3-DCMMax: 48Vdc 50mAMO3Multi-function Output 3 (Photocoupler)Mo1~MO3Mo1~MO3MO3Multi-function Output 3 (Photocoupler)Internal CircuitMCMMulti-function output commonCommon for Multi-function Outputs+10VPotentiometer power supply+10VDC 20mA+10VPotentiometer power supply+10VDC 20mAAVIImpedance: 0 ~ Max. Output Frequency (Pr.01-000 ~ Max. Output Frequency (Pr.02-13, Pr.10-00
(Photocoupler) Refer to Pr.03-01 to Pr.03-03 for programmi MO2 Multi-function Output 2 (Photocoupler) Mo1~MO3-DCM Max: 48Vdc 50mA MO3 Multi-function Output 3 (Photocoupler) Mo1~MO3 Max: 48Vdc 50mA MO3 Multi-function Output 3 (Photocoupler) Mo1~MO3 Max: 48Vdc 50mA MO3 Multi-function Output 3 (Photocoupler) Mo1~MO3 Max: 48Vdc 50mA MCM Multi-function output 3 (Photocoupler) Mo1~MO3 Max: 48Vdc 50mA MCM Multi-function output 3 (Photocoupler) Common for Multi-function Outputs +10V Potentiometer power supply +10VDC 20mA AVI Analog voltage Input (Avi) Impedance: 47kΩ Resolution: 10 bits Range: 0 ~ 10VDC = 0 ~ Max. Output Frequency (Pr.01-00 Selection: Pr.02-00, Pr.02-13, Pr.10-00
MO2 Multi-function Output 2 (Photocoupler) MO1~MO3 MO3 Multi-function Output 3 (Photocoupler) MO1~MO3 MCM Multi-function Output 3 (Photocoupler) Internal Circuit MCM Multi-function output common Common for Multi-function Outputs +10V Potentiometer power supply +10VDC 20mA Avia Analog voltage Input MO1~MO3 Impedance: 47kΩ Resolution: Avia Avia Multi-function output MO1~MO3 Selection: Avia Avia Provenue Selection: Pr.02-00, Pr.02-13, Pr.10-00 Pr.02-00, Pr.02-13, Pr.10-00
MO3 (Photocoupler) Internal Circuit MCM Multi-function output common Common for Multi-function Outputs +10V Potentiometer power supply +10VDC 20mA +10V Potentiometer power supply +10VDC 20mA Analog voltage Input Impedance: 47kΩ AVI Avir circuit Resolution: 10 bits Range: 0 ~ 10VDC = 0 ~ Max. Output Selection: Pr.02-00, Pr.02-13, Pr.10-00
+10V Potentiometer power supply +10VDC 20mA Analog voltage Input Impedance: 47kΩ Avii 4Vi circuit Resolution: 10 bits Avii 4Vii 0 ~ 10VDC = 0 ~ Max. Output Frequency (Pr.01-00) Selection: Pr.02-00, Pr.02-13, Pr.10-00
Analog voltage Input Impedance: 47kΩ Avi Avi circuit Resolution: 10 bits AVI Avi ≤ 0 ~ 10VDC = Avi ≤ Selection: Pr.02-00, Pr.02-13, Pr.10-00
AVI
AVI AVI AVI AVI AVI AVI AVI AVI
AVI Range: 0 ~ 10VDC = AVI Range: 0 ~ Max. Output Frequency (Pr.01-00 Frequency (Pr.02-13, Pr.10-00
AVI
AVI AVI ACM Selection: Pr.02-00, Pr.02-13, Pr.10-00
Pr.10-00
Sel-up. F1.04-00 ~ F1.04-03
Analog current Input Impedance: 250Ω
ACI circuit Resolution: 10 bits
ACI Range: 4 ~ 20mA =
ACI
Selection: Pr.02-00, Pr.02-13, Pr.10-00
ACM internal circuit Set-up: Pr.04-11 ~ Pr.04-14
Auviliary apples voltage input Impedance: 47kΩ
Auxiliary analog voltage input
AUI circuit AUI circuit AUI circuit Range: -10 ~ +10VDC =
AUI
Selection: Pr.02-00, Pr.02-13,
Pr.10-00


Chapter 2 Installation and Wiring | VFD-B Series

Terminal Symbol	Terminal Function	Factory Settings (SINK) ON: Connect to DCM
AFM	Analog output meter ACM circuit AFM potentiometer Max. 2mA	0 to 10V, 2mAImpedance:470ΩOutput current2mA maxResolution:8 bitsRange:0 ~ 10VDCFunction:Pr.03-05
ACM	Analog control signal (common)	Common for AVI, ACI, AUI, AFM

Control signal wiring size: 18 AWG (0.75 mm²) with shielded wire.

Analog input terminals (AVI, ACI, AUI, ACM)

 - Analog input signals are easily affected by external noise. Use shielded wiring and keep it as short as possible (<20m) with proper grounding. If the noise is inductive, connecting the shield to terminal ACM can bring improvement.</p>
- If the analog input signals are affected by noise from the AC motor drive, please connect a capacitor and ferrite core as indicated in the following diagrams:



wind each wires 3 times or more around the core

Digital inputs (FWD, REV, JOG, EF, TRG, MI1~MI6, DCM)

When using contacts or switches to control the digital inputs, please use high quality components to avoid contact bounce.

Digital outputs (MO1, MO2, MO3, MCM)

- Make sure to connect the digital outputs to the right polarity, see wiring diagrams.
- When connecting a relay to the digital outputs, connect a surge absorber or fly-back diode across the coil and check the polarity.

General

- Keep control wiring as far away as possible from the power wiring and in separate conduits to avoid interference. If necessary let them cross only at 90° angle.
- The AC motor drive control wiring should be properly installed and not touch any live power wiring or terminals.


- If a filter is required for reducing EMI (Electro Magnetic Interference), install it as close as possible to AC drive. EMI can also be reduced by lowering the Carrier Frequency.
- When using a GFCI (Ground Fault Circuit Interrupter), select a current sensor with sensitivity of 200mA, and not less than 0.1-second detection time to avoid nuisance tripping. For the specific GFCI of the AC motor drive, please select a current sensor with sensitivity of 30mA or above.



Damaged insulation of wiring may cause personal injury or damage to circuits/equipment if it comes in contact with high voltage.

2.4.5 Main Circuit Terminals

Frame A, A1, A2: VFD007B21A/23A/43A/53A, VFD015B21A/21B//23A/23B/43A/53A, VFD022B23B/43B/53A

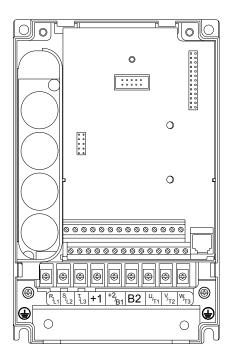

Control Terminal


Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal

Torque: 18 kgf-cm (15.6 in-lbf)

Wire Gauge: 10-18 AWG (5.3-0.8 $\rm mm^2)$ stranded wire, 12-18 AWG (3.3-0.8 $\rm mm^2)$ solid wire Wire Type: Copper only, 75°C

Frame B: VFD022B21A, VFD037B23A/43A/53A

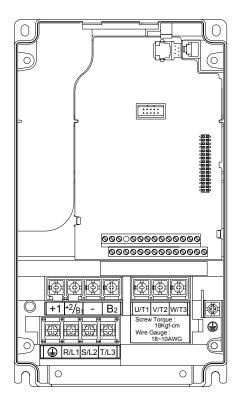


Control Terminal

Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2mm²)

Power Terminal Torque: 18 kgf-cm (15.6 in-lbf) Wire Gauge: 10-18 AWG (5.3-0.8mm²) Wire Type: Stranded copper only, 75°C

Frame C: VFD055B23A/43A/53A, VFD075B23A/43A/53A, VFD110B23A/43A/53A

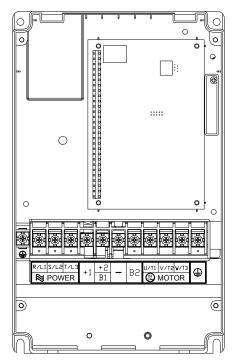


Control Terminal Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2mm²)

Power Terminal Torque: 30Kgf-cm (26 in-lbf) Wire: 8-12 AWG (8.4-3.3mm²) Wire Type: Stranded Copper only, 75°C

NOTE To connect 6 AWG (13.3 mm²) wires, use Recognized Ring Terminals

Frame D: VFD150B23A/43A/53A, VFD185B23A/43A/53A, VFD220B23A/43A/53A

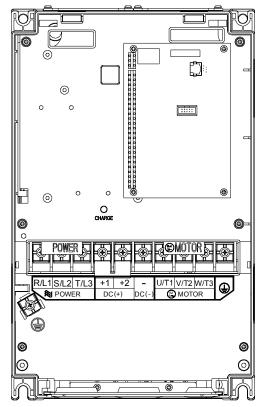

Control Terminal

Torque: 4Kgf-cm (3 in-lbf)

Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal


Torque: 30Kgf-cm (26 in-lbf)

Wire: 2-8 AWG (33.6-8.4 mm²)

Wire Type: Stranded Copper only, 75°C

NOTE To connect 6 AWG (13.3 mm²) wires, use Recognized Ring Terminals

Frame E1: VFD300B23A, VFD370B23A, VFD550B43C, VFD750B43C, VFD550B53A, VFD750B53A

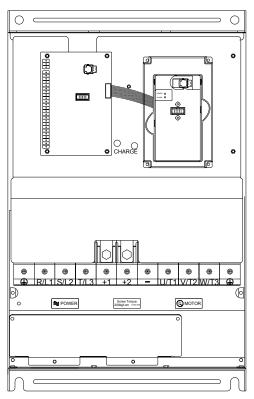


Control Terminal Torque: 4Kgf-cm (3 in-lbf)

Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal Torque: 200kgf-cm (173 in-lbf) Wire Gauge: 1 - 3/0 AWG (42.4-85 mm²) Wire Type: Stranded copper only, 75°C

Frame E: VFD300B43A, VFD370B43A, VFD450B43A, VFD300B53A, VFD370B53A, VFD450B53A

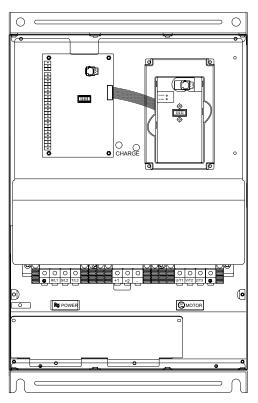

Control Terminal Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal

Torque: 58.7kgf-cm (50.9 in-lbf) max. Wire Gauge: 2-6AWG (33.6-13.3 mm²)

Wire Type: Stranded copper only, 75°C

3.1 Preparations before Start-up

Carefully check the following items before proceeding.

- Make sure that the wiring is correct. In particular, check that the output terminals U, V, W. are NOT connected to power and that the drive is well grounded.
- Verify that there are no short-circuits between terminals and from terminals to ground or mains power.
- Check for loose terminals, connectors or screws.
- Verify that no other equipment is connected to the AC motor
- Make sure that all switches are OFF before applying power to ensure that the AC motor drive doesn't start running and there is no abnormal operation after applying power.
- Make sure that the front cover is correctly installed before applying power.
- Do NOT operate the AC motor drive with humid hands.
- Check the following items after applying power:
 - The keypad should light up as follows (normal status with no error)



When power is ON, LEDs "F", "STOP" and "FWD" should light up. The display will show '60.00" with the least signification "0" flashing.

- If the drive has built-in fan (2.2kW and above) it should run. The factory setting of Fan Control Pr.03-12=00 (Fan always on).

3.2 Operation Method

Refer to 4.2 How to operate the digital keypad VFD-PU01 and chapter 5 parameters for setting. Please choose a suitable method depending on application and operation rule. The operation is usually used as shown in the following table.

Operation Method	Frequency Source		Operation Command Source
PU01 keypad			RUN STOP RESET
Operate from external signal	AVI, ACI, AUI	Parameter setting: 04-04=11 04-05=12	External terminals input: FWD-DCM REV-DCM

3.3 Trial Run

After finishing checking the items in "3.1 preparation before start-up", you can perform a trial run. The factory setting of the operation source is from the keypad (Pr.02-01=00).

- 1. After applying power, verify that LED "F" is on and the display shows 60.00Hz.
- 2. Setting frequency to about 5Hz by using V key.
- 3. Pressing RUN key for forward running. And if you want to change to reverse running,

you should press key in the page. And if you want to decelerate to stop, please press key.

- 4. Check following items:
 - Check if the motor direction of rotation is correct.
 - Check if the motor runs steadily without abnormal noise and vibration.
 - Check if acceleration and deceleration are smooth.


If the results of trial run are normal, please start the formal run.



- Stop running immediately if any fault occurs and refer to the troubleshooting guide for solving the problem.
- Do NOT touch output terminals U, V, W when power is still applied to L1/R, L2/S, L3/T even when the AC motor drive has stopped. The DC-link capacitors may still be charged to hazardous voltage levels, even if the power has been turned off.
- To avoid damage to components, do not touch them or the circuit boards with metal objects or your bare hands.

This page intentionally left blank.


4.1 Description of the Digital Keypad VFD-PU01

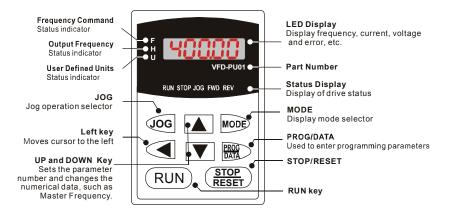

Display Message	Descriptions
6000	Displays the AC drive Master Frequency.
• <u>5000</u>	Displays the actual output frequency present at terminals U/T1, V/T2, and W/T3.
, 1800.0	User defined unit (where U = F x Pr.00-05)
8 5.8	Displays the output current present at terminals U/T1, V/T2, and W/T3.
-Frd-	Displays the AC motor drive forward run status.

Chapter 4 Digital Keypad Operation | VFD-B Series

Display Message	Descriptions
-r&u-	Displays the AC motor drive reverse run status.
c 20	The counter value (C).
8-88	Displays the selected parameter.
18	Displays the actual stored value of the selected parameter.
33	External Fault.
	Display "End" for approximately 1 second if input has been accepted by
-End-	pressing DATA key. After a parameter value has been set, the new value is automatically stored in memory. To modify an entry, use the , , , , , and , keys.
-800-	Display "Err", if the input is invalid.

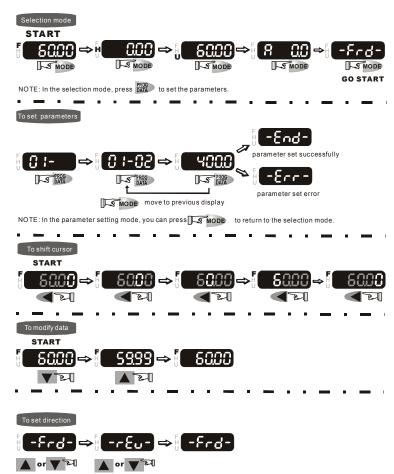

4.2 How to Operate the Digital Keypad VFD-PU01

Chapter 4 Digital Keypad Operation | VFD-B Series

This page intentionally left blank.

Chapter 5 Parameters

The VFD-B parameters are divided into 12 groups by property for easy setting. In most applications, the user can finish all parameter settings before start-up without the need for readjustment during operation.

The 12 groups are as follows:

- Group 0: User Parameters
- Group 1: Basic Parameters
- Group 2: Operation Method Parameters
- Group 3: Output Function Parameters
- Group 4: Input Function Parameters
- Group 5: Multi-Step Speed and PLC Parameters
- **Group 6: Protection Parameters**
- Group 7: Motor Parameters
- Group 8: Special Parameters
- Group 9: Communication Parameters
- Group 10: PID Control Parameters
- Group 11: Fan & Pump Control Parameters

5.1 Summary of Parameter Settings

 \mathcal{M} : The parameter can be set during operation.

Group 0 User Parameters

Parameter	Explanation	Settings		Customer
00-00	Identity Code of the AC motor drive	Read-only	Setting ##	
00-01	Rated Current Display of the AC motor drive	Read-only	#.#	
00-02	Parameter Reset	 08: Keypad lock 09: All parameters are reset to factory settings (50Hz, 220V/380V/575V) 10: All parameters are reset to factory settings (60Hz, 220V/440V/575V) 	00	
≁ 00-03	Start-up Display Selection	 00: Display the frequency command value (LED F) 01: Display the actual output frequency (LED H) 02: Display the content of user-defined unit (LED U) 03: Multifunction display, see Pr.00-04 04: FWD/REV command 	00	
≁ 00-04	Content of Multi Function Display	 00: Display output current (A) 01: Display counter value (C) 02: Display process operation (1.tt) 03: Display DC-BUS voltage (u) 04: Display output voltage (E) 05: Output power factor angle (n) 06: Display output power (P) 07: Display actual motor speed (HU) 08: Display the estimated value of torque as it relates to current (t) 09: Display PG numbers/10ms (G) 10: Display analog feedback signal value (b)(%) 11: Display AVI (U1.) (%) 12: Display AUI (U3.) (%) 14: Display the temperature of heat sink (°C) 	00	
≠ 00-05	User-Defined Coefficient K	0.01 to 160.00	1.00	
00-06	Software Version	Read-only	#.##	
00-07	Password Input	00 to 65535	00	
00-08	Password Set	00 to 65535	00	
00-09	Control Method	00: V/f Control 01: V/f + PG Control 02: Vector Control 03: Vector + PG Control	00	

Parameter	Explanation	Settings	Factory Setting
00-10	Reserved		

Group 1 Basic Parameters

Parameter	•	Settings	Factory Setting	Customer
01-00	Maximum Output Frequency (Fmax)	50.00 to 400.00 Hz	60.00	
01-01	Maximum Voltage Frequency (Fbase)	0.10 to 400.00 Hz	60.00	
		230V series: 0.1V to 255.0V	220.0	
01-02	Maximum Output Voltage (Vmax)	460V series: 0.1V to 510.0V	440.0	
	voltage (vmax)	575V series: 0.1V to 637.0V	575.0	
01-03	Mid-Point Frequency (Fmid)	0.10 to 400.00 Hz	0.50	
	Mid-Point Voltage	230V series: 0.1V to 255.0V	1.7	
01-04	(Vmid)	460V series: 0.1V to 510.0V	3.4	
	· · · ·	575V series: 0.1V to 637.0V	4.8	
01-05	Minimum Output Frequency (Fmin)	0.10 to 400.00 Hz	0.50	
	Minimum Output	230V series: 0.1V to 255.0V	1.7	
01-06	Minimum Output Voltage (Vmin)	460V series: 0.1V to 510.0V	3.4	
		575V series: 0.1V to 637.0V	4.8	
01-07	Output Frequency Upper Limit	1 to 120%	100	
01-08	Output Frequency Lower Limit	0 to100 %	0	
⊮ 01-09	Accel Time 1	0.01 to 3600.0 sec	10.0	
⊮ 01-10	Decel Time 1	0.01 to 3600.0 sec	10.0	
⊮ 01-11	Accel Time 2	0.01 to 3600.0 sec	10.0	
⊮ 01-12	Decel Time 2	0.01 to 3600.0 sec	10.0	
		y setting for models of 30hp (22kW) and above	is 60sec.	
₩01-13	Jog Acceleration Time	0.1 to 3600.0 sec	1.0	
⊮ 01-14	Jog Frequency	0.10 Hz to 400.00 Hz	6.00	
		00: Linear Accel/Decel		
	Auto acceleration / deceleration (refer to	01: Auto Accel, Linear Decel		
★ 01-15		02: Linear Accel, Auto Decel	00	
<i>A</i> 01-13	Accel/Decel time	03: Auto Accel/Decel (Set by load)	00	
	setting)	04: Auto Accel/Decel (set by Accel/Decel Time setting)		
01-16	Acceleration S- Curve	00 to 07	00	
01-17	Deceleration S- Curve	00 to 07	00	
⊮ 01-18	Accel Time 3	0.01 to 3600.0 sec	10.0	
₩01-19	Decel Time 3	0.01 to 3600.0 sec	10.0	
⊮ 01-20	Accel Time 4	0.01 to 3600.0 sec	10.0	

Parameter	Explanation	Settings	Factory Setting	Customer
⊮ 01-21	Decel Time 4	0.01 to 3600.0 sec	10.0	
	01-18 ~ 01-21: Factor	y setting for models of 30hp (22kW) and above i	s 60sec.	
⊮ 01-22	Jog Deceleration Time	0.1 to 3600.0 sec	1.0	
01-23	Accel/Decel Time Unit	00: Unit: 1 sec 01: Unit: 0.1 sec 02: Unit: 0.01 sec	01	

Group 2 Operation Method Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
		 00: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. 01: 0 to +10V from AVI 		
		02: 4 to 20mA from ACI		
	Source of First	03: -10 to +10Vdc from AUI		
₩ 02-00	Master Frequency Command	04: RS-485 serial communication (RJ-11). Last used frequency saved.	00	
		05: RS-485 serial communication (RJ-11). Last used frequency not saved.		
		06: Combined use of master and auxiliary frequency command (See Pr. 02-10 to 02-12)		
	Source of First Operation Command	00: Digital keypad (PU01)		
		01: External terminals. Keypad STOP/RESET enabled.		
⊮ 02-01		02: External terminals. Keypad STOP/RESET disabled.	00	
		03: RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled.		
		04: RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled.		
		00: STOP: ramp to stop; E.F.: coast to stop		
02-02	Stop Method	01: STOP: coast to stop; E.F.: coast to stop 02: STOP: ramp to stop; E.F.: ramp to stop 03: STOP: coast to stop; E.F.: ramp to stop	00	
		230V&460V:1-5hp/0.75-3.7kW: 1-15kHz	15	
		7.5-25hp/5.5-18.5kW: 01-15kHz	09	
	DMMA On the	I I	09	
02-03	PWM Carrier Frequency	30-60hp/22-45kW: 01-09kHz		
02 00	Selections	75-100hp/55-75kW: 01-06kHz	06	
		575V: 1-15hp/0.75-11kW: 01-10 kHz	06	
		20-60hp/15-45kW: 01-08 kHz	06 06	
		75-100hp/55-75kW: 01-06kHz	06	

Parameter	Explanation	Settings	Factory	Customer
		00: Enable forward/reverse operation	Setting	
02-04	Motor Direction	01: Disable reverse operation	00	
02 01	Control	02: Disabled forward operation	00	
	2-wire/3-wire	00: 2-wire: FWD/STOP, REV/STOP		
02-05	Operation Control	01: 2-wire: FWD/REV, RUN/STOP	00	
	Modes	02: 3-wire operation		
02-06	Line Start Lockout	 00: Disable. Operation status is not changed even if operation command source Pr.02- 01 and/or Pr.02-14 is changed. 01: Enable. Operation status is not changed even if operation command source Pr.02- 01 and/or Pr.02-14 is changed. 02: Disable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed. 03: Enable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed. 	00	
		00: Decelerate to 0 Hz		
02-07	Loss of ACI Signal	01: Coast to stop and display "EF"	00	
02-07	(4-20mA)	02: Continue operation by last frequency	00	
		command		
	Up/Down Mode	00: Based on accel/decel time		
⊮ 02-08		01: Constant speed	00	
		02: Based on accel/decel time, but frequency command will be 0 when stopped.		
₩02-09	Accel/Decel Rate of Change of UP/DOWN Operation with Constant Speed	0.01~1.00 Hz/msec	0.01	
⊮ 02-10	Source of the Master Frequency Command	 00: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. 01: 0 to +10V from AVI 02: 4 to 20mA from ACI 03: -10 to +10Vdc from AUI 04: RS-485 serial communication (RJ-11). 	00	
₩ 02-11	Source of the Auxiliary Frequency Command	Last used frequency saved. 00: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. 01: 0 to +10V from AVI 02: 4 to 20mA from ACI 03: -10 to +10Vdc from AUI 04: RS-485 serial communication (RJ-11). Last used frequency saved.	00	
⊮ 02-12	Combination of the Master and Auxiliary Frequency Command	00: Master frequency + auxiliary frequency 01: Master frequency - auxiliary frequency	00	

Parameter	Explanation	Settings	Factory Setting	Customer
≁ 02-13	Source of Second Frequency Command	 00: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. 01: 0 to +10V from AVI 02: 4 to 20mA from ACI 03: -10 to +10Vdc from AUI 04: RS-485 serial communication (RJ-11). Last used frequency saved 05: RS-485 serial communication (RJ-11). Last used frequency not saved. 06: Combined use of master and auxiliary frequency command (See Pr. 02-10 to 02- 12) 	00	
★ 02-14	Source of Second Operation Command	 Digital keypad (PU01) External terminals. Keypad STOP/RESET enabled. External terminals. Keypad STOP/RESET disabled. RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled. RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled. 	00	
⊮ 02-15	Keypad Frequency Command	0.00 ~ 400.00Hz	60.00	

Group 3 Output Function Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
03-00	Multi-Function Output Relay (RA1,	00: No function 01: AC drive operational	08	
03-00	RB1, RC1)	02: Master frequency attained 03: Zero speed		
02.04	Multi-Function	04: Over torque detection 05: Base-Block (B.B.) indication	01	
03-01	03-01 Output Terminal MO1	06: Low-voltage indication		
		07: Operation mode indication		
03-02	Multi-Function Output Terminal MO2	08: Fault indication 09: Desired frequency attained 1 10: PLC program running	02	
	WO2	11: PLC program step completed		
03-03	Multi-Function	12: PLC program completed	20	
	Output Terminal MO3	13: PLC program operation paused		
	WO3	14: Terminal count value attained		
		15: Preliminary count value attained		
		16: Auxiliary motor No.1		
		17: Auxiliary motor No.2		

		Chapter 5 Parameters VFD-B Se				
Parameter	Explanation	Settings	Setting	Customer		
		18: Auxiliary motor No.3				
		19: Heat sink overheat warning				
		20: AC motor drive ready				
		21: Emergency stop indication				
		22: Desired frequency attained 2				
		23: Software brake signal				
		24: Zero speed output signal				
		25: Under-current detection				
		26: Operation indication (H>=Fmin)				
		27: Feedback signal error				
		28: User-defined low-voltage detection				
		29: Brake control (Desired frequency attained 3)				
03-04	Desired Frequency	0.00 to 400.00 Hz	0.00			
	Attained 1					
		00: Analog frequency meter				
		01: Analog current meter				
03-05	Analog Output	02: Output voltage	00			
00 00	Signal	03: Output frequency command	00			
		04: Output motor speed				
		05: Load power factor (cos90° to Cos0°)				
x 03-06	Analog Output Gain	01 to 200%	100			
★ 03-07	Digital Output	01 to 20	01			
(00.00	Multiplying Factor	004 05500				
№ 03-08	Terminal Count Value	00 to 65500	00			
(00.00	Preliminary Count					
₩03-09	Value	00 to 65500	00			
03-10	Desired Frequency	0.00 to 400.00 Hz	0.00			
	Attained 2	00: Preliminary count value attained, no EF				
	EF Active When	display				
03-11	Preliminary Count	01: Preliminary count value attained, EF	00			
	Value Attained	active				
		00: Fan always ON				
		01: 1 minute after AC motor drive stops, fan	ĺ			
		will be OFF	ĺ			
03-12	Fan Control	02: AC motor drive runs and fan ON, AC	00			
		motor drive stops and fan OFF	ĺ			
		03: Fan ON to run when preliminary heatsink	ĺ			
		temperature attained	ļ			
03-13	Brake Release	0.00 to 400.00Hz	0.00			
	Frequency					
03-14	Brake Engage	0.00 to 400.00Hz	0.00			
	Frequency	l	L			

Group 4 Input Function Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
⊮ 04-00	AVI Analog Input Bias	0.00~200.00 %	0.00	
04-01	AVI Bias Polarity	00: Positive bias 01: Negative bias	00	
⊮ 04-02	AVI Input Gain	1 to 200 %	100	
04-03	AVI Negative Bias, Reverse Motion Enable/Disable	00: No AVI negative bias command 01: Negative bias: REV motion enabled 02: Negative bias: REV motion disabled	00	
04-04	Multi-Function Input Terminal 1 (MI1)	00: No function 01: Multi-Step speed command 1 02: Multi-Step speed command 2	01	
04-05	Multi-Function Input Terminal 2 (MI2)	 03: Multi-Step speed command 3 04: Multi-Step speed command 4 05: External reset (N.O.) 06: Accel/Decel inhibit 07: Accel/Decel time selection command 1 08: Accel/Decel time selection command 2 	02	
04-06	Multi-Function Input Terminal 3 (MI3)	09: External base block (N.O.) 10: External base block (N.C.) 11: Up: Increment master frequency	03	
04-07	Multi-Function Input Terminal 4 (MI4)	 12: Down: Decrement master frequency 13: Counter reset 14: Run PLC program 15: Pause PLC program 	04	
04-08	Multi-Function Input Terminal 5 (MI5)	16: Auxiliary motor No.1 output disable 17: Auxiliary motor No.2 output disable 18: Auxiliary motor No.3 output disable 19: Emergency stop (N.O.)	05	
04-09	Multi-Function Input Terminal 6 (MI6)	 20: Emergency stop (N.C.) 21: Master frequency selection AVI/ACI 22: Master frequency selection AVI/AUI 23: Operation command selection (keypad/external terminals) 24: Auto accel/decel mode disable 25: Forced stop (N.C.) 26: Forced stop (N.O.) 27: Parameter lock enable (N.O.) 28: PID function disabled 29: Jog FWD/REV command 30: External reset (N.C.) 	06	

Parameter	Explanation	Settings	Factory	
	•	31: Source of second frequency command	Setting	
		enabled		
		32: Source of second operation command enabled		
		33: One shot PLC		
		34: Proximity sensor input for simple Index function		
		35: Output shutoff stop (NO)		
		36: Output shutoff stop (NC)		
04-10	Digital Terminal Input Debouncing Time	1 to 20 (*2ms)	01	
⊮ 04-11	ACI Analog Input Bias	0.00~200.00 %	0.00	
04.40		00: Positive bias	00	
04-12	ACI Bias Polarity	01: Negative bias	00	
⊮ 04-13	ACI Input Gain	01 to 200 %	100	
	ACI Negative Bias,	00: No ACI negative bias command		
04-14	Reverse Motion Enable/Disable	01: Negative bias: REV motion enabled	00	
		02: Negative bias: REV motion disabled		
⊮ 04-15	AUI Analog Input Bias	0.00~200.00 %	0.00	
04.40		00: Positive bias		
04-16	AUI Bias Polarity	01: Negative bias	00	
⊮ 04-17	AUI Input Gain	01 to 200 %	100	
	AUI Negative Bias	00: No AUI negative bias command		
04-18	Reverse Motion Enable/Disable	01: Negative bias: REV motion enabled	00	
		02: Negative bias: REV motion disabled 0.00 to 10.00 sec	0.05	
04-19	AVI Analog Input Delay	0.00 to 10.00 sec	0.05	
04-20	ACI Analog Input Delay	0.00 to 10.00 sec	0.05	
04-21	AUI Analog Input Delay	0.00 to 10.00 sec	0.05	
	Analog Input	00: 0.01Hz		
04-22	Frequency Resolution	01: 0.1Hz	01	
04-23	Gear Ratio for Simple Index Function	4 ~ 1000	200	
04-24	Index Angle for Simple Index Function	0.0 ~360.0°	180.0	
⊮ 04-25	Deceleration Time for Simple Index Function	0.00 ~100.00 sec	0.00	

Group 5 Multi-Step Speed and PLC Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
₩05-00	1 st Step Speed Frequency	0.00 to 400.00 Hz	0.00	
₩05-01	2 nd Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-02	3 rd Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-03	4 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-04	5 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-05	6 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
₩ 05-06	7 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-07	8 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-08	9 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-09	10 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
x 05-10	11 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
₩05-11	12 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
⊮ 05-12	13 th Step Speed	0.00 to 400.00 Hz	0.00	
⊮ 05-13	Frequency 14 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
₩05-14	15 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
05-15	PLC Mode	00: Disable PLC operation01: Execute one program cycle02: Continuously execute program cycles03: Execute one program cycle step by step	00	
		04: Continuously execute program cycles step by step		
05-16	PLC Forward/ Reverse Motion	00 to 32767 (00: FWD, 01: REV)	00	
05-17	Time Duration of 1st Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-18	Time Duration of 2nd Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-19	Time Duration of 3rd Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-20	Time Duration of 4th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-21	Time Duration of 5th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	

Chapter 5 Parameters VFD-B Sel				
Parameter	Explanation	Settings	Factory Setting	
05-22	Time Duration of 6th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-23	Time Duration of 7th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-24	Time Duration of 8th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-25	Time Duration of 9th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-26	Time Duration of 10th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-27	Time Duration of 11th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-28	Time Duration of 12th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-29	Time Duration of 13th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-30	Time Duration of 14th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-31	Time Duration of 15th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-32	Time Unit Settings	00: 1 sec 01: 0.1 sec	00	
05-33	The Amplitude of Wobble Vibration	0.00~400.00 Hz	0.00	
05-34	Wobble Skip Frequency	0.00~400.00 Hz	0.00	

Group 6 Protection Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
06-00	Over-Voltage Stall Prevention	230V series: 330.0V to 410.0V 460V series: 660.0V to 820.0V 575V series: 825.0V to1025.0V 00: Disable over-voltage stall prevention	390.0V 780.0V 975.0V	
06-01	Over-Current Stall Prevention during Accel	20 to 250%	170	
06-02	Over-Current Stall Prevention during Operation	20 to 250%	170	
06-03	Over-Torque Detection Mode (OL2)	 00: Disabled 01: Enabled during constant speed operation. After the over-torque is detected, keep running until OL1 or OL occurs. 02: Enabled during constant speed operation. After the over-torque is detected, stop running. 	00	

Parameter	Explanation	Settings	Factory Setting	Customer
06-03	Over-Torque Detection Mode (OL2)	 03: Enabled during accel. After the over- torque is detected, keep running until OL1 or OL occurs. 04: Enabled during accel. After the over- torque is detected, stop running. 		
06-04	Over-Torque Detection Level	10 to 200%	150	
06-05	Over-Torque Detection Time	0.1 to 60.0 sec	0.1	
06-06	Electronic Thermal Overload Relay Selection	00: Standard motor (self cooled by fan)01: Special motor (forced external cooling)02: Disabled	02	
06-07	Electronic Thermal Characteristic	30 to 600 sec	60	
06-08	Present Fault Record	00: No fault 01: Over current (oc) 02: Over voltage (ov) 03: Over heat (oH) 04: Over load (oL) 05: Over load (oL1) 06: External fault (EF) 07: IGBT protection (occ)		
06-09	Second Most Recent Fault Record	 08: CPU failure (cF3) 09: Hardware protection failure (HPF) 10: Excess current during acceleration (ocA) 11: Excess current during deceleration (ocd) 12: Excess current during steady state (ocn) 13: Ground fault (GFF) 14: Reserved 	00	
06-10	Third Most Recent Fault Record	15: CF1 16: CF2 17: Reserved 18: Motor over-load (oL2) 19: Auto Acel/Decel failure (CFA) 20: SW/Password protection (codE)		
06-11	Fourth Most Recent Fault Record	 21: External Emergency Stop (EF1) 22: Phase-Loss (PHL) 23: Preliminary count value attained, EF active (cEF) 24: Under-current (Lc) 25: Analog feedback signal error (AnLEr) 26: PG feedback signal error (PGErr) 		

Parameter	Explanation	Settings	Factory Setting	Customer
06-12	Under-Current Detection Level	00~100% (00: Disabled)	00	
06-13	Under-Current Detection Time	0.1~ 3600.0 sec	10.0	
06-14	Under-Current Detection Mode	 00: Warn and keep operating 01: Warn and ramp to stop 02: Warn and coast to stop 03: Warn, after coast to stop, restart (delay 06-15 setting time) 	00	
06-15	Under-Current Detection Restart Delay Time (Lv)	1~600 Min.	10	
06-16	User-Defined Low- Voltage Detection Level	00: Disabled 230V: 220 to 300VDC 460V: 440 to 600VDC 575V: 520 to 780VDC	00	
06-17	User-Defined Low- Voltage Detection Time	0.1~ 3600.0 sec	0.5	
06-18	Reserved			

Group 7 Motor Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
₩07-00	Motor Rated Current	30 to 120%	100	
₩ 07-01	Motor No-Load Current	01 to 90%	40	
₩ 07-02	Torque Compensation	0.0 to 10.0	0.0	
₩ 07-03	Slip Compensation (Used without PG)	0.00 to 3.00	0.00	
07-04	Number of Motor Poles	02 to 10	04	
07-05	Motor Parameters Auto Tuning	00: Disable 01: Auto tuning R1 02: Auto tuning R1 + no-load test	00	
07-06	Motor Line-to-line Resistance R1	00~65535 mΩ	00	
07-07	Reserved			
07-08	Motor Rated Slip	0.00 to 20.00 Hz	3.00	
07-09	Slip Compensation Limit	0 to 250%	200	
07-10	Reserved			
07-11	Reserved			

Parameter	Explanation	Settings	Factory Setting	Customer
07-12	Torque Compensation Time Constant	0.01 ~10.00 Sec	0.05	
07-13	Slip Compensation Time Constant	0.05 ~10.00 sec	0.10	
07-14	Accumulative Motor Operation Time (Min.)	00 to 1439 Min.	00	
07-15	Accumulative Motor Operation Time (Day)	00 to 65535 Day	00	

Group 8 Special Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
08-00	DC Brake Current Level	00 to 100%	00	
08-01	DC Brake Time during Start-Up	0.0 to 60.0 sec	0.0	
08-02	DC Brake Time during Stopping	0.0 to 60.0 sec	0.0	
08-03	Start-Point for DC Brake	0.00 to 400.00Hz	0.00	
08-04	Momentary Power Loss Operation Selection	 00: Operation stops after momentary power loss 01: Operation continues after momentary power loss, speed search starts with the Master Frequency reference value 02: Operation continues after momentary power loss, speed search starts with the minimum frequency 	00	
08-05	Maximum Allowable Power Loss Time	0.1 to 5.0 sec	2.0	
08-06	B.B. Time for Speed Search	0.1 to 5.0 sec	0.5	
08-07	Current Limit for Speed Search	30 to 200%	150	
08-08	Skip Frequency 1 Upper Limit	0.00 to 400.00 Hz	0.00	
08-09	Skip Frequency 1 Lower Limit	0.00 to 400.00 Hz	0.00	
08-10	Skip Frequency 2 Upper Limit	0.00 to 400.00 Hz	0.00	
08-11	Skip Frequency 2 Lower Limit	0.00 to 400.00 Hz	0.00	
08-12	Skip Frequency 3 Upper Limit	0.00 to 400.00 Hz	0.00	
08-13	Skip Frequency 3 Lower Limit	0.00 to 400.00 Hz	0.00	

	Спарter 5 Parameters VFD-в Senes				
Parameter	Explanation	Settings	Factory Setting	Customer	
08-14	Auto Restart After Fault	00 to 10 (00=disable)	00		
08-15	Auto Energy Saving	00: Disable 01: Enable	00		
08-16	AVR Function	00: AVR function enable 01: AVR function disable 02: AVR function disable for decel.	00		
08-17	Software Brake Level	230V series: 370 to 430V 460V series: 740 to 860V 575V series: 925 to1075V	380 760 950		
08-18	Base-block Speed Search	00: Speed search starts with last frequency command 01: Starts with minimum output frequency	00		
08-19	Speed Search during Start-up	00: Speed search disable 01: Speed search enable	00		
₩08-20	Speed Search Frequency during Start-up	00: Setting frequency 01: Maximum operation frequency (01-00)	00		
08-21	Auto Reset Time at Restart after Fault	00 to 60000 sec	600		
⊮ 08-22	Compensation Coefficient for Motor Instability	00~1000	00		

Group 9 Communication Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
₩ 09-00	Communication Address	01 to 254	01	
₩ 09-01	Transmission Speed	00: Baud rate 4800bps 01: Baud rate 9600bps 02: Baud rate 19200bps 03: Baud rate 38400bps	01	
₩ 09-02	Transmission Fault Treatment	00: Warn and keep operating 01: Warn and ramp to stop 02: Warn and coast to stop 03: No warning and keep operating	03	
≠ 09-03	Time-out Detection	0.0 ~ 60.0 seconds 0.0: Disable	0.0	
₩ 09-04	Communication Protocol	00: 7,N,2 (Modbus, ASCII) 01: 7,E,1 (Modbus, ASCII) 02: 7,O,1 (Modbus, ASCII) 03: 8,N,2 (Modbus, ASCI) 04: 8,E,1 (Modbus, RTU) 05: 8,O,1 (Modbus, RTU)	00	

Parameter	Explanation	Settings	Factory Setting	Customer
09-05	Reserved			
09-06	Reserved			
₩09-07	Response Delay Time	00 ~ 200 msec	00	

Group 10 PID Control Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
10-00	Input terminal for PID Feedback	 00: Inhibit PID operation 01: Negative PID feedback from external terminal (AVI) 0 to +10V 02: Negative PID feedback from external terminal (ACI) 4 to 20mA 03: Positive PID feedback from external terminal (AVI) 0 to +10V 04: Positive PID feedback from external terminal (ACI) 4 to 20mA 	00	
10-01	Gain over PID Detection value	0.00 to 10.00	1.00	
⊮ 10-02	Proportional Gain (P)	0.0 to 10.0	1.0	
⊮ 10-03	Integral Gain (I)	0.00 to 100.00 sec (0.00=disable)	1.00	
x 10-04	Derivative Control (D)	0.00 to 1.00 sec	0.00	
10-05	Upper Bound for Integral Control	00 to 100%	100	
10-06	Primary Delay Filter Time	0.0 to 2.5 sec	0.0	
10-07	PID Output Freq Limit	0 to 110%	100	
10-08	Feedback Signal Detection Time	0.0 to 3600.0 sec	60.0	
⊮ 10-09	Treatment of the Erroneous Feedback Signals	00: Warn and keep operation 01: Warn and RAMP to stop 02: Warn and COAST to stop	00	
10-10	PG Pulse Range	1 to 40000	600	
10-11	PG Input	00: Disable PG 01: Single phase 02: Forward / Counterclockwise rotation 03: Reverse / Clockwise rotation	00	
₩10-12	ASR (Auto Speed Regulation) control (with PG only) (P)	0.0 to 10.0	1.0	

Parameter	Explanation	Settings	Factory Setting	Customer
⊮ 10-13	ASR (Auto Speed Regulation) control (with PG only) (I)	0.00 to 100.00 (0.00 disable)	1.00	
10-14	Speed Control Output Frequency Limit	0.00 to 100.00 Hz	10.00	
10-15	Sample time for refreshing the content of 210DH and 210EH	0.01~1.00 seconds	0.10	
10-16	Deviation Range of PID Feedback Signal Error	0.00~100.00%	100.00	

Group 11 Fan & Pump Control Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
11-00	V/f Curve Selection	00: V/f curve determined by Pr.01-00 to Pr.01-06 01: 1.5 power curve 02: 1.7 power curve 03: Square curve 04: Cube curve	00	
11-01	Start-Up Frequency of the Auxiliary Motor	0.00 to 400.00 Hz	0.00	
11-02	Stop Frequency of the Auxiliary Motor	0.00 to 400.00 Hz	0.00	
11-03	Time Delay before Starting the Auxiliary Motor	0.0 to 3600.0 sec	0.0	
11-04	Time Delay before Stopping the Auxiliary Motor	0.0 to 3600.0 sec	0.0	
11-05	Sleep/Wake Up Detection Time	0.0 ~6550.0 sec	0.0	
11-06	Sleep Frequency	0.00~Fmax	0.00	
11-07	Wakeup Frequency	0.00~Fmax	0.00	

5.2 Parameter Settings for Applications

Speed Search

Applications	Purpose	Functions	Related Parameters
Windmill, winding machine, fan and all inertia load	Restart free- running motor	Before the free-running motor is completely stopped, it can be restarted without detecting motor speed. The AC motor drive will auto search motor speed and will accelerate when its speed is the same as the motor speed.	08-06 08-07 08-19 08-20

DC Brake before Running

Applications	Purpose	Functions	Related Parameters
When e.g. windmills, fans and pumps rotate freely by wind or flow without applying power	standstill.	If the running direction of the free- running motor is not steady, please execute DC brake before start-up.	08-00 08-01

Motor power switch-over between AC motor drive and commercial power

Applications	Purpose	Functions	Related Parameters
Windmills, pumps, extruders	Switching motor power between AC motor drive and commercial power	When switching motor power between the AC motor drive and commercial power, it is unnecessary to stop the motor or start by commercial power with heavy duty before switching to by AC motor drive control	03-00 03-01 03-02 03-03

Energy Saving

Applications	Purpose	Functions	Related Parameters
Punching machines and precision machinery	Energy saving and less vibrations	Energy saving when the AC motor drive runs at constant speed, yet full power acceleration and deceleration For precision machinery it also helps to lower vibrations.	08-15

Multi-step Operation

Applications	Purpose	Functions	Related Parameters
Conveying machinery		To control 15-step speeds and duration by simple contact signal.	04-04~04-09 05-00~05-14

Switching acceleration and deceleration times

Applications	Purpose	Functions	Related Parameters
Auto turntable for conveying machinery	Switching acceleration and deceleration times by external signal	Switching the multi-step acceleration/deceleration by external signals. When an AC motor drive drives two or more motors, it can reach high-speed but still start and stop smoothly.	01-09~01-12 01-18~01-21 04-04~04-09

Overheat Warning

Applications	Purpose	Functions	Related Parameters
Air conditioner	Safety measure	When the AC motor drive overheats, it uses a thermal sensor to generate a overheat warning.	03-00~03-03 04-04~04-09

Two-wire/three-wire

Applications	Purpose	Functions	Related Parameters
General application	To run, stop, forward and reverse by external terminals	FWD/STOP 60 FWD:(*OPEW*:STOP) (*CLOSE*:FWD) REV/STOP 60 REV.(*OPEW*:STOP) (*CLOSE*: REV) DCM VFD-E RUN/STOP 60 FWD:(*OPEW*:STOP) (*CLOSE*:RUN) FWD/REV 60 FWD:(*OPEW*:STOP) (*CLOSE*:REV) DCM VFD-E STOP RUN FWD:(*CLOSE*:RUN) (*CLOSE*:REV) DCM VFD-E	02-05 04-04~04-09
		REV:("OPEN": FWD) ("CLOSE": REV) DCM VFD-B	

Operation Command

Applications	Purpose	Functions	Related Parameters
General application	Selecting the source of control signal	Selection of AC motor drive control by external terminals, digital keypad or RS485.	03-01 04-04~04-09

Frequency Hold

Applications	Purpose	Functions	Related Parameters
General application	Acceleration/ deceleration pause	Hold output frequency during Acceleration/deceleration	04-04~04-09

Auto Restart after Fault

Applications	Purpose	Functions	Related Parameters
Air conditioners, remote pumps	For continuous and reliable operation without operator intervention	The AC motor drive can be restarted/reset automatically up to 10 times after a fault occurs.	08-14~08-21

Emergency Stop by DC Brake

Applications	Purpose	Functions	Related Parameters
High-speed rotors	Emergency stop without brake resistor	AC motor drive can use DC brake for emergency stop when a quick stop is needed without brake resistor. When used often, take motor cooling into consideration.	08-00 08-02 08-03

Over-torque Setting

Applications	Purpose	Functions	Related Parameters
Pumps, fans and extruders	To protect machines and to have continuous/ reliable operation	The over-torque detection level can be set. Once OC stall, OV stall and over- torque occurs, the output frequency will be adjusted automatically. It is suitable for machines like fans and pumps that require continuous operation.	06-00~06-05

Upper/Lower Limit Frequency

Applications	Purpose	Functions	Related Parameters
Pump and fan	Control the motor speed within upper/lower limit	When user cannot provide upper/lower limit, gain or bias from external signal, it can be set individually in AC motor drive.	01-07 01-08

Skip Frequency Setting

Applications	Purpose	Functions	Related Parameters
Pumps and fans	To prevent machine vibrations	The AC motor drive cannot run at constant speed in the skip frequency range. Three skip frequency ranges can be set. It is used to smooth vibration at certain frequencies.	08-00~08-13

Carrier Frequency Setting

Applications	Purpose	Functions	Related Parameters
General application	Low noise	The carrier frequency can be increased when required to reduce motor noise.	02-03

Keep Running when Frequency Command is Lost

Applications	Purpose	Functions	Related Parameters
Air conditioners	For continuous operation	When the frequency command is lost by a system malfunction, the AC motor drive can still run. Suitable for intelligent air conditioners.	02-07

Display the Speed of Load

Applications	Purpose	Functions	Related Parameters
General application	Display running status	Display motor speed(rpm) and machine speed(rpm) on keypad.	00-04 03-05

Output Signal during Running

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	Signal available to stop braking when the AC motor drive is running. (This signal will disappear when the AC motor drive is free-running.)	03-00~03-03

Output Signal in Zero Speed

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	When the output frequency is lower than the min. output frequency, a signal is given for external system or control wiring.	03-00~03-03

Output Signal at Desired Frequency

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	When the output frequency is at the desired frequency (by frequency command), a signal is sent by an external system or control wiring.	03-00~03-03

Output Signal for Base Block

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	When executing Base Block, a signal is sent by an external system or control wiring.	03-00~03-03

Overheat Warning for Heat Sink

Applications	Purpose	Functions	Related Parameters	
General application	For safety	When heat sink is overheated, it will send a signal by an external system or control wiring.	03-00~03-03	

Multi-function Analog Output

Applications	Purpose	Functions	Related Parameters
General application	Display running status	The value of frequency, output current/voltage can be read by adding a frequency meter or voltage/current meter.	03-05

5.3 Description of Parameter Settings

00 - 00 Ide	tity Code of the AC motor drive	
Se	ngs Read Only	Factory setting: ##
00 - 01 Ra	d Current Display of the AC motor drive	
Se	ngs Read Only	Factory setting: #.#

Group 0: User Parameters **X**: This parameter can be set during operation.

Pr. 00-00 displays the identity code of the AC motor drive. The capacity, rated current, rated voltage and the max. carrier frequency relate to the identity code. Users can use the following table to check how the rated current, rated voltage and max. carrier frequency of the AC motor drive correspond to the identity code.

Pr.00-01 displays the rated current of the AC motor drive. By reading this parameter the user can check if the AC motor drive is correct.

				2	30V Se	eries						
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50
Pr.00-00	04	06	08	10	12	14	16	18	20	22	24	26
Rated Output Current (A)	5.0	7.0	11	17	25	33	49	65	75	90	120	146
Max. Carrier Frequency				1	15kHz						9 kHz	

						460V	Serie	s							
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
Pr.00-00	05	07	09	11	13	15	17	19	21	23	25	27	29	31	33
Rated Output Current (A)	2.7	4.2	5.5	8.5	13	18	24	32	38	45	60	73	91	110	150
Max. Carrier Frequency				1	15 kH:	z					9 k	Hz		6 k	Hz

						575V	Serie	S							
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
Pr.00-00	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114
Rated Output Current (A)	1.7	3.5	4.5	7.5	10	13.5	19	22	27	34	41	52	62	80	100
Max. Carrier Frequency			-	10 kH:	Z					8 k	Hz			6 k	Hz

Chapter 5 Parameters | VFD-B Series 00 - 02 Parameter Reset Factory Setting: 00 Settings 08 Keypad Lock 09 All parameters are reset to factory settings (50Hz, 220V/380V/575V) 10 All parameters are reset to factory settings (60Hz, 220V/440V/575V) m This parameter allows the user to reset all parameters to the factory settings except the fault records (Pr.06-08 ~ Pr.06-11). 50Hz: Pr.01-01 is set to 50Hz and Pr.01-02 is set to 230V, 400V or 575V. 60Hz: Pr.01-01 is set to 60Hz and Pr.01-02 is set to 230V, 460V or 575V. m When Pr.00-02=08, the VFD-PU01 keypad is locked. To unlock the keypad, set Pr.00-02=00. ✓ Start-up Display Selection 00 - 03 Factory Setting: 00

- Settings 00 Display the frequency command value. (LED F)
 - 01 Display the actual output frequency (LED H)
 - 02 Display the content of user-defined unit (LED U)
 - 03 Multifunction display, see Pr.00-04
 - 04 FWD/REV command

This parameter determines the start-up display page after power is applied to the drive.

00 - 04 / Content of Multi-Function Display

Factory Setting: 00

Settings	00	Display the output current in A supplied to the motor	8 28
	01	Display the counter value which counts the number of pulses on TRG terminal	c 20
	02	When the PLC function is active, the current step and its remaining operation time in s are shown.	6. 23
	03	Display the actual DC BUS voltage in VDC of the AC motor drive	<u>03 103</u>
	04	Display the output voltage in VAC of terminals U, V, W to the motor.	[22203]
	05	Display the power factor angle in $^{\rm o}$ of terminals U, V, W to the motor.	n 88
	06	Display the output power in kW of terminals U, V and W to the motor.	P 000

00 - 04	Content of N	/ulti-Function Display		
	07	Display the actual motor speed in rpm (enabled in vector control mode or PG (Encoder) feedback control) (LED H and LED U).	H.	88
	08	Display the estimated value of torque in Nm as it relates to current.	٤	88
	09	Display PG encoder feedback pulses/10ms. Display value= (rpm*PPR)/6000 (see note)	6	88
	10	Display analog feedback signal value in %.	6	881
	11	Display the signal of AVI analog input terminal in %. Range 0~10V corresponds to 0~100%. (LED U)	u l	88
	12	Display the signal of ACI analog input terminal in %. Range 4~20mA corresponds to 0~100%. (LED U)	. <mark>.</mark> 2	88
	13	Display the signal of AUI analog input terminal in %. Range -10V~10V corresponds to 0~100%. (LED U)	u <u>3</u>	88
	14	Display the temperature of heat sink in °C.	<u>ک</u>	88

This parameter sets the display when Pr. 00-03 is set to 03.

- Pr.00-04=09. The display value is (((rpm/60)*PPR)/1000ms)*10ms with rpm=motor speed in revs/min and PPR=encoder pulse per revolution
- When the display shows the multi-function display (Pr.00-03=03), the user also can view other information by pressing the "LEFT" key on the VFD-PU01 keypad.

00 - 05 XUser Defin	ed Coefficient K	Unit: 0.01
Settings	0.01 to d 160.00	Factory Setting: 1.00

The coefficient K determines the multiplying factor for the user-defined unit.

The display value is calculated as follows:

U (User-defined unit) = Frequency Command * K (Pr.00-05)

H (actual output) = Actual output frequency * K (Pr.00-05)

Example:

A conveyor belt runs at 13.6m/s at motor speed 60Hz.

K = 13.6/60 = 0.23 (0.226667 rounded to 2 decimals), therefore Pr.00-05=0.23

With Frequency command 35Hz, display shows LED U and 35*0.23=8.05m/s.

(To increase accuracy, use K=2.27 or K=22.67 and disregard decimal point.)

00 - 06	Software Ver	sion
	Settings	Read Only
	Display	#.##

00 - 07 Password Input			Unit: 1
	Settings	00 to 65535	Factory Setting: 00
	Display 00~02 (times of wrong password)		

The function of this parameter is to input the password that is set in Pr.00-08. Input the correct password here to enable changing parameters. You are limited to a maximum of 3 attempts. After 3 consecutive failed attempts, a blinking "PcodE" will show up to force the user to restart the AC motor drive in order to try again to input the correct password.

00 - 08	Password Set Unit: 1					
	Settings	00 to 6	5535 Factory Setting: 00			
	Display	00	No password set or successful input in Pr. 00-07			
		01	Password has been set			

To set a password to protect your parameter settings.

If the display shows 00, no password is set or password has been correctly entered in Pr.00-

07. All parameters can then be changed, including Pr.00-08.

The first time you can set a password directly. After successful setting of password the display will show 01.

Be sure to record the password for later use.


To cancel the parameter lock, set the parameter to 00 after inputting correct password into Pr. 00-07.

The password consists of min. 2 digits and max. 5 digits.

How to make the password valid again after decoding by Pr.00-07:

Method 1: Re-input original password into Pr.00-08 (Or you can enter a new password if you want to use a changed or new one).

Method 2: After rebooting, password function will be recovered.

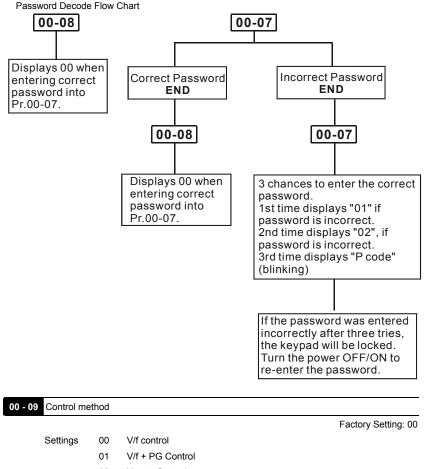

- 02 Vector Control
- 03 Vector + PG Control
- This parameter determines the control method of the AC motor drive.
- PG is encoder (Pulse Generator) feedback for which an option PG card is required.

Group 1: Basic Parameters

01 - 00	Maximum (Dutput Frequency (Fmax)	Unit: 0.01
	Settings	50.00 to 400.00 Hz	Factory Setting: 60.00

This parameter determines the AC motor drive's Maximum Output Frequency. All the AC motor drive frequency command sources (analog inputs 0 to +10V, 4 to 20mA and -10V to +10V) are scaled to correspond to the output frequency range.

01 - 01	Maximum '	Voltage Frequency (Fbase)	Unit: 0.01
	Settings	0.10 to 400.00Hz	Factory Setting: 60.00

This value should be set according to the rated frequency of the motor as indicated on the motor nameplate. Maximum Voltage Frequency determines the v/f curve ratio. For example, if the drive is rated for 460 VAC output and the Maximum Voltage Frequency is set to 60Hz, the drive will maintain a constant ratio of 7.66 V/Hz (460V/60Hz=7.66V/Hz). This parameter value must be equal to or greater than the Mid-Point Frequency (Pr.01-03).

01 - 02	Maximun	n Output Volta	Unit: 0.1	
	Settings	230V series	0.1 to 255.0V	Factory Setting: 220.0
		460V series	0.1 to 510.0V	Factory Setting: 440.0
		575V series	0.1 to 637.0V	Factory Setting: 575.0

This parameter determines the Maximum Output Voltage of the AC motor drive. The Maximum Output Voltage setting must be smaller than or equal to the rated voltage of the motor as indicated on the motor nameplate. This parameter value must be equal to or greater than the Mid-Point Voltage (Pr.01-04).

01 - 03	Mid-Point Fre	equency (Fmid)	Unit: 0.01
	Settings	0.10 to 400.00Hz	Factory Setting: 0.50

This parameter sets the Mid-Point Frequency of the V/f curve. With this setting, the V/f ratio between Minimum Frequency and Mid-Point frequency can be determined. This parameter must be equal to or greater than Minimum Output Frequency (Pr.01-05) and equal to or less than Maximum Voltage Frequency (Pr.01-01).

01 - 04	Mid-Point V	/oltage (Vmid)		Unit: 0.1
	Settings	230V series	0.1 to 255.0V	Factory Setting: 1.7
		460V series	0.1 to 510.0V	Factory Setting: 3.4
		575V series	0.1 to 637.0V	Factory Setting: 4.8

- This parameter sets the Mid-Point Voltage of any V/f curve. With this setting, the V/f ratio between Minimum Frequency and Mid-Point Frequency can be determined. This parameter must be equal to or greater than Minimum Output Voltage (Pr.01-06) and equal to or less than Maximum Output Voltage (Pr.01-02).
- This parameter is ineffective when Pr.11-00 is set to 1 to 4.

01 - 05 Minimum	Output Frequency (Fmin)	Unit: 0.01
Settings	0.10 to 400.00Hz	Factory Setting: 0.50


- This parameter sets the Minimum Output Frequency of the AC motor drive. This parameter must be equal to or less than Mid-Point Frequency (Pr.01-03).
- The settings of 01-03, 01-04, and 01-06 are invalid in Vector Control mode.

01 - 06	Minimum Outp	ut Voltage (Vmin)		Unit: 0.1
	Settings	230V series	0.1 to 255.0V	Factory Setting: 1.7
		460V series	0.1 to 510.0V	Factory Setting: 3.4
		575V series	0.1 to 637.0V	Factory Setting: 4.8

- This parameter sets the Minimum Output Voltage of the AC motor drive. This parameter must be equal to or less than Mid-Point Voltage (Pr.01-04).
- $\label{eq:product} \square \qquad \mbox{The settings of Pr.01-01 to Pr.01-06 have to meet the condition of Pr.01-02 <math display="inline">\geq$ Pr.01-04 \geq Pr.01-06 and Pr.01-01 \geq Pr.01-03 \geq Pr.01-05.

01 - 07	Output Frequency Upper Limit	Unit: 1
	Settings 1 to 120%	Factory Setting: 100

- This parameter must be equal to or greater than the Output Frequency Lower Limit (Pr.01-08). The Maximum Output Frequency (Pr.01-00) is regarded as 100%.
- Output Frequency Upper Limit value = (Pr.01-00 * Pr.01-07)/100.

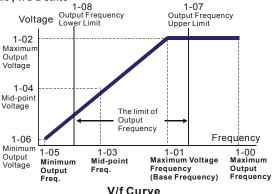

01 - 08	Output Freq	uency Lower Limit	Unit: 1
	Settings	0 to 100%	Factory Setting: 0

- The Upper/Lower Limits are to prevent operation errors and machine damage.
- If the Output Frequency Upper Limit is 50Hz and the Maximum Output Frequency is 60Hz, the Output Frequency will be limited to 50Hz.
- If the Output Frequency Lower Limit is 10Hz, and the Minimum Output Frequency (Pr.01-05) is set to 1.0Hz, then any Command Frequency between 1.0-10Hz will generate a 10Hz output from the drive.
- This parameter must be equal to or less than the Output Frequency Upper Limit (Pr.01-07).
- The Output Frequency Lower Limit value = (Pr.01-00 * Pr.01-08) /100.

01 - 09	✓ Acceleration Time 1 (Taccel 1)	Unit: 0.1/0.01		
01 - 10	✓ Deceleration Time 1 (Tdecel 1)	Unit: 0.1/0.01		
01 - 11	✓ Acceleration Time 2 (Taccel 2)	Unit: 0.1/0.01		
01 - 12	✓ Deceleration Time 2 (Tdecel 2)	Unit: 0.1/0.01		
01 - 18	✓ Acceleration Time 3 (Taccel 3)	Unit: 0.1/0.01		
01 - 19	✓ Deceleration Time 3 (Tdecel 3)	Unit: 0.1/0.01		
01 - 20	Acceleration Time 4 (Taccel 4)			
01 - 21	✓ Deceleration Time 4 (Tdecel 4)	Unit: 0.1/0.01		
	Settings 0.01 to 3600.0 sec	Factory Setting: 10.0		


Factory setting for models of 30hp (22kW) and above is 60sec.

Factory Setting: 01

01 - 23 Accel/Decel Time Unit

Settings	00	Unit: 1 sec
	01	Unit: 0.1 sec
	02	Unit: 0.01 sec

- The Acceleration Time is used to determine the time required for the AC motor drive to ramp from 0 Hz to Maximum Output Frequency (Pr.01-00). The rate is linear unless S-Curve is "Enabled". see Pr.01-16.
- The Deceleration Time is used to determine the time required for the AC motor drive to decelerate from the Maximum Output Frequency (Pr.01-00) down to 0 Hz. The rate is linear unless S-Curve is "Enabled.", see Pr.01-17.
- The Acceleration/Deceleration Time 1, 2, 3, 4 are selected according to the Multi-Function Input Terminals Settings. See Pr.04-04 to Pr.04-09 for more details.
- In the diagram shown below, the Acceleration/Deceleration Time of the AC motor drive is the time between 0 Hz to Maximum Output Frequency (Pr.01-00). Suppose the Maximum Output Frequency is 60 Hz, Minimum Output Frequency (Pr.01-05) is 1.0 Hz, and Acceleration/Deceleration Time is 10 seconds. The actual time for the AC motor drive to accelerate from start-up to 60 Hz and to decelerate from 60Hz to 1.0Hz is in this case 9.83

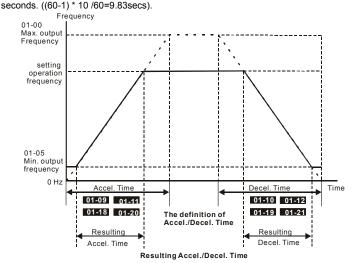


Chapter 5 Parameters VFD-B Series								
Unit: 0.1	13							
Factory Setting: 1.0	Settings 0.1 to 3600.0 sec							
Unit: 0.1	eleration Time	01 - 22 × Jog Dece						
Factory Setting: 1.0	0.1 to 3600.0 sec	Settings 0.1 to 3600.0 sec						
Unit: 0.1	uency	01 - 14 X Jog Frequency						
Factory Setting: 1.0	0.10 to 400.00Hz	Settings						

Both external terminal JOG and key "JOG" on the keypad can be used. When the Jog command is "ON", the AC motor drive will accelerate from Minimum Output Frequency (Pr.01-05) to Jog Frequency (Pr.01-14). When the Jog command is "OFF", the AC motor drive will decelerate from Jog Frequency to zero. The used Accel/Decel time is set by the Jog Accel/Decel time (Pr.01-13, Pr.01-22).

Before using the JOG command, the drive must be stopped first. And during Jog operation, other operation commands cannot be accepted, except command via the FORWARD,

REVERSE and STOP keys on the digital keypad.

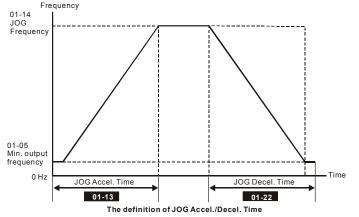

01 -15 X Auto-Acceleration / Deceleration

Factory Setting: 00

- Settings 00 Linear acceleration / deceleration
 - 01 Auto acceleration, linear Deceleration.
 - 02 Linear acceleration, auto Deceleration.
 - 03 Auto acceleration / deceleration (set by load)
 - 04 Auto acceleration / deceleration (set by Accel/Decel Time setting)

With Auto acceleration / deceleration it is possible to reduce vibration and shocks during starting/stopping the load.

During Auto acceleration the torque is automatically measured and the drive will accelerate to the set frequency with the fastest acceleration time and the smoothest start current.

During Auto deceleration, regenerative energy is measured and the motor is smoothly stopped with the fastest deceleration time.

But when this parameter is set to 04, the actual accel/decel time will be equal to or more than parameter Pr.01-09 ~Pr.01-12 and Pr.01-18 to Pr.01-21.

- Auto acceleration/deceleration makes the complicated processes of tuning unnecessary. It makes operation efficient and saves energy by acceleration without stall and deceleration without brake resistor.
- In applications with brake resistor or brake unit, Auto deceleration shall not be used.

01 - 16	Acceleration	S-Curve		
01 - 17	Deceleration	S-Curve		
				Factory Setting: 00
5	Settings	00	S-curve disabled	

01 to 07	S-curve enabled (07 is smoothest)
----------	-----------------------------------


This parameter is used to ensure smooth acceleration and deceleration via S-curve.

The S-curve is disabled when set to 00 and enabled when set to 01 to 07.

Setting 01 gives the quickest and setting 07 the longest and smoothest S-curve.

The AC motor drive will not follow the Accel/Decel Times in Pr.01-09 to Pr.01-12 and Pr.01-18 to Pr.01-21 when S-curve is enabled.

The diagram below shows that the original setting of the Accel/Decel Time is only for reference when the S-curve is enabled. The actual Accel/Decel Time depends on the selected S-curve (01 to 07).

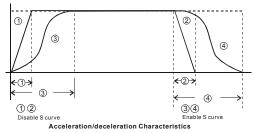

Group 2: Operation Method Parameters

02 - 00	✓ Source of	of First M	laster Frequency Command
			Factory Setting: 00
	Settings	00	Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
		01	AVI 0 ~ +10VDC
		02	ACI 4 ~ 20mA
		03	AUI -10 ~ +10VDC
		04	RS-485 serial communication (RJ-11). Last used frequency saved.
		05	RS-485 serial communication (RJ-11). Last used frequency not saved.
		06	Combined use of master and auxiliary frequency command See Pr. 02-10 to 02-12
02 - 13	✓ Source o	of Secon	d Master Frequency Command
			Factory Setting: 00
	Settings	00	Digital keypad UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
		01	AVI 0 ~ +10VDC
		02	ACI 4 ~ 20mA
		03	AUI -10 ~ +10VDC
		04	RS-485 serial communication (RJ-11). Last used frequency saved.
		05	RS-485 serial communication (RJ-11). Last used frequency not saved.
		06	Combined use of master and auxiliary frequency command See Pr. 02-10 to 02-12
🕮 Th	iese parame	ters set f	the Master Frequency Command Source of the AC motor drive.

02 - 01 🗡	✓ Source of First Operation Command					
			Factory Setting: 00			
Se	ettings	00	Digital keypad (PU01)			
		01	External terminals. Keypad STOP/RESET enabled.			
		02	External terminals. Keypad STOP/RESET disabled.			
			RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled.			
			RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled.			

			Chapter 5 Parameters VFD-B Series
02 -	14 X Source o	f Secon	d Operation Command
			Factory Setting: 00
	Settings	00	Digital keypad (PU01)
		01	External terminals. Keypad STOP/RESET enabled.
		02	External terminals. Keypad STOP/RESET disabled.
		03	RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled.
		04	RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled.
	When the AC r	notor dr	ive is controlled by external terminal, please refer to Pr.02-05 for details.
	The first /secor	nd frequ	ency/operation command is enabled/disabled by Multi Function Input
	Terminals. Plea	ase refe	er to of Pr.04-04 ~ 04-09.
02 -	10 X Source o	f the Ma	aster Frequency Command
			Factory Setting: 00
	Settings	00	Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
		01	AVI 0 ~ +10VDC
		02	ACI 4 ~ 20mA
		03	AUI -10 ~ +10VDC
		04	RS-485 serial communication (RJ-11). Last used frequency saved.
02 -	11 X Source o	f the Au	ixiliary Frequency Command
-			Factory Setting: 00
	Settings	00	Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
		01	AVI 0 ~ +10VDC
		02	ACI 4 ~ 20mA
		03	AUI -10 ~ +10VDC
		04	RS-485 serial communication (RJ-11). Last used frequency saved.
02 -	12 Combina Command	tion of t	he Master and Auxiliary Frequency
			Factory Setting: 00
	Settings	00	Master frequency + Auxiliary frequency
		01	Master frequency - Auxiliary frequency


These three parameters (Pr.02-10~02-12) are enabled when Pr.02-00 or Pr.02-13 are set to

06. If they are enabled, the frequency command will be determined by these parameters.


			Factory Setting: 00
Settings	00	STOP: ramp to stop	E.F.: coast to stop
	01	STOP: coast to stop	E.F.: coast to stop
	02	STOP: ramp to stop	E.F.: ramp to stop
	03	STOP: coast to stop	E.F.: ramp to stop

- The parameter determines how the motor is stopped when the AC motor drive receives a valid stop command or detects External Fault.
 - Ramp: the AC motor drive decelerates to Minimum Output Frequency (Pr.01-05) according to the deceleration time and then stops.
 - Coast: the AC motor drive stops the output instantly upon command, and the motor free runs until it comes to a complete standstill.
 - The motor stop method is usually determined by the characteristics of the motor load and how frequently it is stopped.
 - (1) It is recommended to use "ramp to stop" for safety of personnel or to prevent material from being wasted in applications where the motor has to stop after the drive is stopped. The deceleration time has to be set accordingly.
 - (2) If the motor free running is allowed or the load inertia is large, it is recommended to select "coast to stop".

For example: blowers, punching machines, centrifuges and pumps.

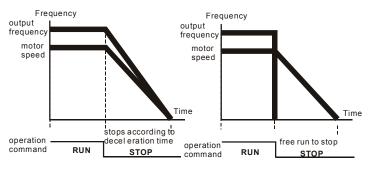

ramp to stop and free run to stop

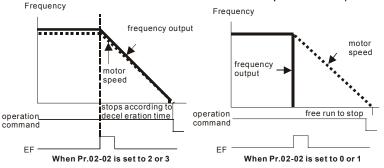

02 - 03

PWM Carrier Frequency Selections

Unit: 1

230V/460V Series					
Power	1-5hp	7.5-25hp	30-60hp	75-100hp	
Fower	0.75-3.7kW	5.5-18.5kW	22-45kW	55-75kW	
Setting Range	01-15 kHz	01-15 kHz	01-09 kHz	01-06 kHz	
Factory Setting	15 kHz	09 kHz	06 kHz	06 kHz	

575V Series				
Power	1-15hp	20-60hp	75-100hp	
Fower	0.75-11kW	15-45kW	55-75kW	
Setting Range	01-10 kHz	01-08 kHz	01-06 kHz	
Factory Setting	06 kHz	06 kHz	06 kHz	

This parameter determines the PWM carrier frequency of the AC motor drive.

Carrier Frequency	Acoustic Noise	Electromagnetic Noise or leakage current	Heat Dissipation	Current Wave
1kHz	Significant ∱	Minimal 1	Minimal ↑	-√√√√- ^{Minimal}
8kHz				
15kHz	↓ Minimal	↓ Significant	↓ Significant	

From the table, we see that the PWM carrier frequency has a significant influence on the electromagnetic noise, AC motor drive heat dissipation, and motor acoustic noise.


Chap	oter 5 Parameters	s VFD-B Serie	is
02	- 04 Motor Di	rection Contro	
			Factory Setting: 00
	Settings	00 E	Enable Forward/Reverse operation
		01 D	Disable Reverse operation
		02 D	Disabled Forward operation
ш	The parame	ter determines	s the AC motor drive direction of rotation. See Chapter 2 for definition
	of direction of	of rotation.	
02	- 05 2-wire/ 3	-wire Operatio	on Control Modes
			Factory Setting: 00
	Settings	00 2	2-wire: FWD/STOP, REV/STOP
		01 2	-wire: FWD/REV, RUN/STOP
		02 3	-wire Operation
Ω	There are th	ree different ty	ypes of control modes:
		,	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
		02-05	External Terminal
			FWD/STOP
	<u> </u>	<u>2-wire</u> FWD /STOF	("CLOSE":FWD)
	00	REV / STOP	REV/STOP
			DCM VFD-B
		2-wire	RUN/STOP FWD:("OPEN":STOP) ("CLOSE":RUN)
	01	FWD/ REV	
		RUN / STO	P FWD/REV REV:("OPEN": FWD) ("CLOSE": REV)
			DCM VFD-B
			STOP RUN
			EF: ("OPEN":STOP)
	02 3-wire		
			REV:("OPEN": FWD) REV/FWD ("CLOSE": REV)
			DCM VED-B

	t Lockout	02-06 Line Start
Factory Setting: 00		
Disable. Operation status is not changed even if operation command source Pr.02-01 and/or Pr.02-14 is changed.	00	Settings
Enable. Operation status is not changed even if operation command source $Pr.02-01$ and/or $Pr.02-14$ is changed.	01	
Disable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed.	02	
Enable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed.	03	

This parameter determines the response of the drive when power is on and the operation command source is changed.

Pr.02-06	Start lockout (Run when power is ON)	Operation status when operation command source is changed
0	Disable (AC motor drive will run)	Keep previous status
1	Enable (AC motor drive won't run)	Keep previous status
2	Disable (AC motor drive will run)	Change according to the new operation command source
3	Enable (AC motor drive won't run)	Change according to the new operation command source


- When the operation command source is from an external terminal and operation command is ON (FWD/REV-DCM=close), the AC motor drive will operate according to Pr.02-06 after power is applied. <For terminals FWD and REV only>
 - 1. When Pr.02-06 is set to 0 or 2, AC motor drive will run immediately.
 - When Pr.02-06 is set to 1 or 3, AC motor drive will remain stopped until operation command is received after previous operation command is cancelled.

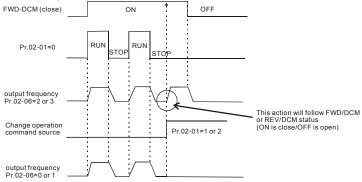

- When the operation command source isn't from the external terminals, independently from whether the AC motor drive runs or stops, the AC motor drive will operate according to Pr.02-06 if the two conditions below are both met.
 - When operation command source is changed to external terminal (Pr.02-01=1 or 2, Pr.02-14=1 or 2)
 - 2. The status of terminal and AC motor drive is different.

And the operation of the AC motor drive will be:

- 1. When setting 0 or 1, the status of AC motor drive is not changed by the terminal status.
- 2. When setting 2 or 3, the status of AC motor drive is changed by the terminal status.

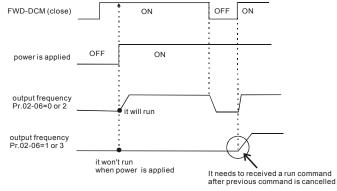

The Line Start Lockout feature does not guarantee that the motor will never start under this condition. It is possible the motor may be set in motion by a malfunctioning switch.

02-07 Loss of ACI Signal (4-20mA)

Factory	Setting:	00
---------	----------	----

Settings 00 Decelerate to 0Hz

- 01 Coast to stop and display "EF"
- 02 Continue operation by the last frequency command
- Description: This parameter determines the behavior when ACI is lost.

When set to 00 or 02, it will display warning message "AnLEr" on the keypad in case of loss of ACI signal and execute the setting. When ACI signal is recovered, the warning message usually disappears automatically. If the warning message is still displayed, please press "MODE" key to make it disappear.

02 -	08 × Up/Down	n Mode		
				Factory Setting: 00
	Settings	00	Based on Accel/Decel time acc. to Pr.01-09 to 01-21	to 01-12 and Pr.01-18
		01	Constant speed (acc. to Pr. 02-09)	
		02	Based on Accel/Decel time acc. to Pr.01-09 to 01-21, but frequency command will be 0	
02 -	• 09 Accel/De Constant S		e of Change of UP/DOWN Operation with	Unit: 0.01
	Settings	0.01 [,]	~1.00 Hz/ms	Factory Setting: 0.01
	These parame	ters dete	ermine the increase/decrease of the master fre	equency when operated
	via the Multi-Function Inputs when Pr.04-04~Pr.04-09 are set to 11 (Up command) or 12			Up command) or 12
	(Down comma	nd).		
		_		

02 - 15 📈 K	eypad Frequency Command	Unit: 0.01
Set	ings 0.00 ~ 400.00Hz	Factory Setting: 60.00

This parameter can be used to set frequency command or read keypad frequency command.

Group 3: Output Function Parameters

03 - 00	Multi-function Output Relay (RA1, RB1, RC1)	
		Factory Setting: 08
03 - 01	Multi-function Output Terminal MO1	
		Factory Setting: 01
03 - 02	Multi-function Output Terminal MO2	
		Factory Setting: 02
03 - 03	Multi-function Output Terminal MO3	

Factory Setting: 20


Settings	Function	Description
00	No Function	
01	AC Drive Operational	Active when there is an output from the drive or RUN command is "ON".
02	Master Frequency Attained	Active when the AC motor drive reaches the output frequency setting.
03	Zero Speed	Active when Command Frequency is lower than the Minimum Output Frequency.
04	Over-Torque Detection	Active as long as over-torque is detected. (Refer to Pr.06-03 ~ Pr.06-05)
05	Baseblock (B.B.) Indication	Active when the output of the AC motor drive is shut off during baseblock. Base block can be forced by Multi-function input (setting 9 or 10).
06	Low-Voltage Indication	Active when low voltage(Lv) is detected.
07	Operation Mode Indication	Active when operation command is controlled by external terminal.
08	Fault Indication	Active when faults occur (oc, ov, oH, oL, oL1, EF, cF3, HPF, ocA, ocd, ocn, GFF).
09	Desired Frequency Attained 1	Active when the desired frequency (Pr.03-04) is attained.
10	PLC Program Running	Active when PLC Program is running.
11	PLC Program Step Completed	Active for 0.5 sec each time the multi-step speed is attained.
12	PLC Program Completed	Active for 0.5 sec when the PLC program cycle has completed
13	PLC Operation Paused	Active when PLC operation is paused.

0	E	Chapter 5 Parameters VFD-B Serie
Settings	Function	Description
14	Terminal Count Value Attained	Active when the counter reaches Terminal Count Value.
15	Preliminary Count Value Attained	Active when the counter reaches Preliminary Count Value.
16 17	Auxiliary Motor 1, 2 and 3	For the fan & pump control applications, one can use the Multi-function Output Terminals (1-3) to define the auxiliary motor. When using with group 10 PID Controls and group 11
18		Fan and Pump Control, it can control flow of many motors.
19	Heat Sink Overheat Warning (OH1)	When the heatsink overheats, it will signal to prevent OH from turning off the drive. When it is higher than 85°C (185°F), it will be ON. If not, it will be OFF.
20	AC Motor Drive Ready	Active when the drive is on and no abnormality detected.
21	Emergency Stop Indication	Active once the drive's emergency stop function is activated.
22	Desired Frequency Attained 2	Active when the desired frequency (Pr.03-10) is attained.
23	Software Brake Signal	This function is used in conjunction with a VFDB Brake Unit. The output will be activated when the drive needs help braking the load. A smooth deceleration is achieved by using this function.
24	Zero Speed Output Signal	Active unless there is an output frequency present at terminals U/T1, V/T2, and W/T3.
25	Under-current Detection	Active once the drive's current has fallen below its minimum allowable value. (Refer to Pr.06-12, 06-13)
26	Operation Indication (H>=Fmin)	Active when there is output voltage from U, V, W.
27	Feedback Signal Error	Active when the feedback signal is abnormal. (Refer to Pr.10-08, Pr.10-16)
28	User-defined Low- voltage Detection	Active once the DC Bus voltage is too low. (Refer to Pr.06- 16, Pr.06-17)
29	Brake Control (Desired Frequency Attained 3)	Active when output frequency \ge Pr.03-13. Deactivated when output frequency \le Pr.03-14 after STOP command.

03 - 04	Desired Fr	equency Attained 1	Unit: 0.01
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00

03 - 10	Desired Freque	ency Attained 2	Unit: 0.01
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00

If a multi-function output terminal is set to function as Desired Frequency Attained 1 or 2 (Pr.03-00 to Pr.03-03 = 09 or 22), then the output will be activated when the programmed frequency is attained.

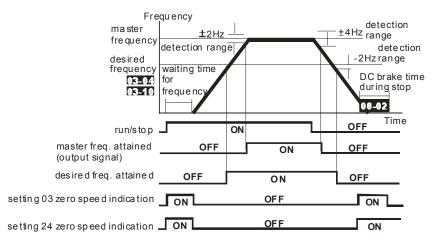

output timing chart of multiple function terminals when setting to frequency attained or zero speed indication

03 - 05	Analog Output Signal (AFM)		
			Factory Setting: 00
	Settings	00	Analog Frequency Meter (0 to Maximum Output Frequency)
		01	Analog Current Meter (0 to 250% of rated AC motor drive current)
		02	Output voltage (0 to Pr.01-02)
		03	Output frequency command (0 to Maximum Frequency)
		04	Output motor speed (0 to the Maximum Frequency)
		05	Load power factor (cos90° to 0°)

This parameter sets the function of the AFM output 0~+10VDC (ACM is common).

03 - 06 × Analog Ou	ıtput Gain	Unit: 1
Settings	01 to 200%	Factory Setting: 100

This parameter sets the voltage range of the analog output signal.

- When Pr.03-05 is set to 0, the analog output voltage is directly proportional to the output frequency of the AC motor drive. With Pr.03-06 set to 100%, the Maximum Output Frequency (Pr.01-00) of the AC motor drive corresponds to +10VDC on the AFM output.
- Similarly, if Pr.03-05 is set to 1, the analog output voltage is directly proportional to the output current of the AC drive. With Pr.03-06 set to 100%, then 2.5 times the rated current corresponds to +10VDC on the AFM output.

Any type of voltmeter can be used. If the meter reads full scale at a voltage less than 10 volts, the parameter 03-06 should be set using the following formula:

Pr. 03-06 = ((meter full scale voltage)/10) x 100%

For Example: When using the meter with full scale of 5 volts, adjust Pr.03-06 to 50%. If

Pr.03-05 is set to 0, then 5VDC will correspond to Maximum Output Frequency.


03 - 07 🗡 Digi	al Output Multiplying Factor	Unit: 1
Setting	s 01 to 20 times	Factory Setting: 01

This parameter determines the multiplying factor for the AC drives digital output frequency at the digital output terminals (DFM-DCM). The pulse frequency is equal to the AC motor drive output frequency multiplied by Pr.03-07. (Pulse frequency = actual output frequency x Pr.03-07)

03	- 08 X Terminal Count Value	Unit: 1
	Settings 00 to 65500	Factory Setting: 00
Ш	This parameter sets the count value of the internal counter. The external	ernal terminal TRG
	increases the internal counter. Upon completion of counting, the spe	ecified output terminal will
	be activated. (Pr.03-00 to Pr.03-03 set to 14).	
	When the display shows c5555, the drive has counted 5,555 times.	If display shows c5555•, it
	means that real counter value is between 55,550 to 55,559.	

03 - 09 🗡 Prelimin	nary Count Value	Unit: 1
Settings	00 to 65500	Factory Setting: 00

- When the counter value reaches this value, the corresponding multi-function output terminal will be activated, provided one of Pr.03-00 to Pr.03-03 set to 15 (Preliminary Count Value Setting). This multi-function output terminal will be deactivated upon completion of Terminal Count Value Attained.
- The timing diagram:

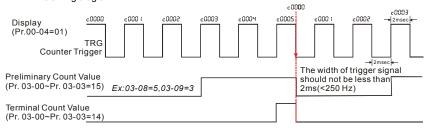

03 - 11 EF Active when Preliminary Count Value Attained

			Factory Setting: 00
Settings	00	Preliminary count value attained, no EF display	
	01	Preliminary count value attained, EF active	


If this parameter is set to 01 and the desired value of counter is attained, the AC drive will treat it as a fault. The drive will stop and show the "cEF" message on the display.

03 - 12	Fan Control		
			Factory Setting: 00
	Settings	00	Fan always ON
		01	1 minute after AC motor drive stops, fan will be OFF
		02	AC motor drive runs and fan ON, AC motor drive stops and fan OFF
		03	Fan ON to run when preliminary heatsink temperature attained

This parameter determines the operation mode of cooling fan.

03 - 13	Brake Relea	se Frequency	Unit: 0.01
	Settings	0.00 to 400.00Hz	Factory Setting: 0.00
03 - 14	Brake Engag	ge Frequency	Unit: 0.01
	Settings	0.00 to 400.00Hz	Factory Setting: 0.00

These two parameters are used to set control of mechanical brake via the output terminals (MO1~MO3) when Pr.03-00~03-03 is set to 29. Refer to the following example for details. Example:

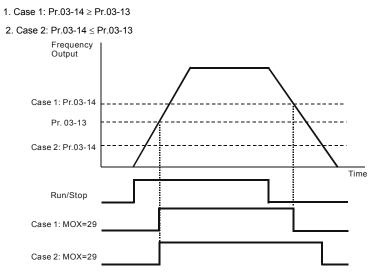

Note: MOX: setting value of Pr.03-00~Pr.03-03

Group 4: Input Function Parameters

Group 4	. input i unc	uonra	ameters		
04 - 00	✓AVI Analo	og Input	Bias	Unit: 0.0	01
-	Settings	0.00 t	o 200.00%		Factory Setting: 0.00
04 - 01	AVI Bias Po	olarity			
					Factory Setting: 00
	Settings	00	Positive Bias		
		01	Negative Bias		
04 - 02	✓AVI Input	Gain		Unit: 1	
	Settings	1 to 2	00%		Factory Setting: 100
04 - 03	AVI Negativ	ve Bias,	Reverse Motion Enable/Disable		
					Factory Setting: 00
	Settings	00	No AVI Negative Bias Command		
		01	Negative Bias: REV Motion Enabled		
		02	Negative Bias: REV Motion Disabled		
04 - 11	✓ACI Anale	og Input	Bias	Unit: 0.0	01
	Settings	0.00 t	o 200.00%		Factory Setting: 0.00
04 - 12	ACI Bias	Polarity	,		
		,			Factory Setting: 00
	Settings	00	Positive Bias		
		01	Negative Bias		
04 - 13	✓ACI Input	Gain		Unit: 1	
	Settings	01 to	200%		Factory Setting: 100
04 - 14	ACI Negativ	/e Bias,	Reverse Motion Enable/Disable		
					Factory Setting: 00
	Settings	00	No ACI Negative Bias Command		
		01	Negative Bias: REV Motion Enabled		
		02	Negative Bias: REV Motion Disabled		
04 - 15	✓ AUI Anale	og Input	Bias	Unit: 0.0	01
	Settings	0.00 t	o 200.00%		Factory Setting: 0.00
04 - 16	AUI Bias Po	olarity			
					Factory Setting: 00
	Settings	00	Positive Bias		
		01	Negative Bias		
04 - 17	✓AUI Input	Gain		Unit: 1	
	Settings	01 t	o 200%		Factory Setting: 100
	•				

04 - 18 AUI Negative Bias, Reverse Motion Enable/Disable

Factory Setting: 00


Settings	00	No AUI Negative Bias Command
	01	Negative Bias: REV Motion Enabled
	02	Negative Bias: REV Motion Disabled

In a noisy environment, it is advantageous to use negative bias to provide a noise margin.

Pr.04-00 ~ 04-03, Pr.04-11 ~ 04-18 are used when the source of frequency command is the analog signal. Refer to the following examples.


Example 1: Standard application

This is the most used setting. The user only needs to set Pr.02-00 to 01, 02 or 03. The frequency command comes from external potentiometer/current signal on AVI, ACI or AUI.

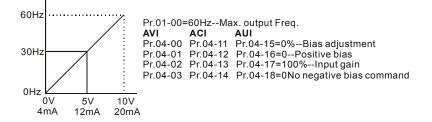


Example 2: Use of bias

This example shows the influence of changing the bias. When the input is 0V (4mA) the output frequency is 10 Hz. At mid-point a potentiometer will give 40 Hz. Once the Maximum Output Frequency is reached, any further increase of the potentiometer or signal will not increase the output frequency. (To use the full potentiometer range, please refer to Example 3.) The value of external input voltage/current 0-8.33V (4-17.33mA) corresponds to the setting frequency 10-60Hz.

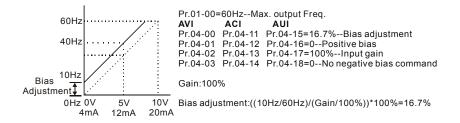


Example 3: Use of bias and gain for use of full range

This example also shows a popular method. The whole scale of the potentiometer can be used as desired. In addition to signals of 0 to 10V and 4 to 20mA, the popular voltage signals also include signals of 0 to 5V, 4 to 20mA or any value under 10V. Regarding the setting, please refer to the following examples.

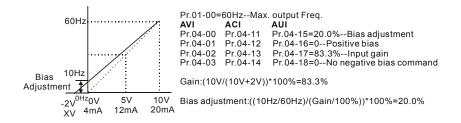


Example 4: Use of 0-5V potentiometer range via gain adjustment

This example shows a potentiometer range of 0 to 5 Volts. Instead of adjusting gain as shown in the example below, you can set Pr. 01-00 to 120Hz to achieve the same results.

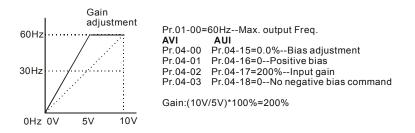

Example 5: Use of negative bias in noisy environment

 
In this example, a 1V negative bias is used. In noisy environments it is advantageous to use negative bias to provide a noise margin (1V in this example).



Example 6: Use of negative bias in noisy environment and gain adjustment to use full


potentiometer range

In this example, a negative bias is used to provide a noise margin. Also a potentiometer frequency gain is used to allow the Maximum Output Frequency to be reached.

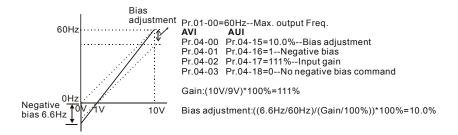


Example 7: Use of 0-10V potentiometer signal to run motor in FWD and REV direction

In this example, the input is programmed to run a motor in both forward and reverse direction. The motor will be idle when the potentiometer position is at mid-point of its scale. Using this example will disable the external FWD and REV controls.

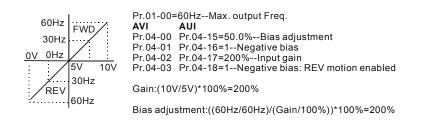

Chapter 5 Parameters | VFD-B Series Example 8: Use negative slope

In this example, the use of negative slope is shown. Negative slopes are used in applications for control of pressure, temperature or flow. The sensor that is connected to the input generates a large signal (10V or 20mA) at high pressure or flow. With negative slope settings, the AC motor drive will slow stop the motor. With these settings the AC motor drive will always run in only one direction (reverse). This can only be changed by exchanging 2 wires to the motor.

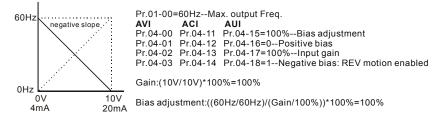

04 - 19	AVI Analo	g Input Delay	Unit: 0.01
	Settings	0.00 to 10.00 sec	Factory Setting: 0.05
04 - 20	ACI Analog	Input Delay	Unit: 0.01
	Settings	0.00 to 10.00 sec	Factory Setting: 0.05
04 - 21	AUI Analog	Input Delay	Unit: 0.01
	Settings	0.00 to 10.00 sec	Factory Setting: 0.05

These input delays can be used to filter noisy analog signals.

04 - 22	Analog Input Frequency Resolution						
•							Factory Setting: 0
	Settings	00	0.01Hz				
		01	0.1Hz				

It is used to set the unit of the resolution of frequency command when the input source is an analog signal.

04 - 04 Multi-function Input Terminal (MI1)	
	Factory Setting: 01
04 - 05 Multi-function Input Terminal (MI2)	
	Factory Setting: 02
04 - 06 Multi-function Input Terminal (MI3)	
	Factory Setting: 03
04 - 07 Multi-function Input Terminal (MI4)	
	Factory Setting: 04
04 - 08 Multi-function Input Terminal (MI5)	
	Factory Setting: 05
04 - 09 Multi-function Input Terminal (MI6)	

Factory Setting: 06

Settings	Function	Description
00	No Function	Any unused terminals should be programmed to 0 to insure they have no effect on operation.
01	Multi-Step Speed Command 1	These four inputs select the multi-speed defined by Pr.05-00 to Pr.05-14 as shown in the diagram at the
02	Multi-Step Speed Command 2	end of this table.
03	Multi-Step Speed Command 3	NOTE: Pr.05-00 to Pr.05-14 can also be used to control output speed by programming the AC motor drive's internal PLC function. There are 17 step
04	Multi-Step Speed Command 4	speed frequencies (including Master Frequency and Jog Frequency) to select for application.
05	External Reset (N.O.)	The External Reset has the same function as the Reset key on the Digital keypad. After faults such as O.H., O.C. and O.V. are cleared this input can be used to reset the drive.
06	Accel/Decel Inhibit	When the command is active, acceleration and deceleration is stopped and the AC motor drive maintains a constant speed.
07	Accel/Decel Time Selection Command 1	Used to select the one of four Accel/Decel Times (Pr.01-09 to Pr.01-12, Pr.01-18 to Pr.01-21). See
08	Accel/Decel Time Selection Command 2	explanation at the end of this table.

Chapter 5 Parameters | VFD-B Series


Settings	Function	Description	
09	External Base Block (N.O.) (Refer to Pr. 08-06)	Parameter values 9, 10 program Multi-Function Input Terminals for external Base Block control. NOTE: When a Base-Block signal is received, the AC motor drive will block all output and the motor	
10	External Base Block (N.C.) (Refer to Pr. 08-06)	will free run. When base block control is deactivated, the AC drive will start its speed search function and synchronize with the motor speed, and then accelerate to Master Frequency.	
11	UP: Increment Master Frequency	Increment/decrement the Master Frequency each time an input is received or continuously when the input stays active. When both inputs are active at the same	
12	DOWN: Decrement Master Frequency	time, the Master Frequency increment/decrement is halted. Please refer to Pr.02-08, 02-09. This function is also called "motor potentiometer".	
13	Counter Reset	When active, the counter is reset and inhibited. To enable counting the input should be OFF. Refer to Pr.03-08 and 03-09.	
14	Run PLC Program	To run the AC motor drive internal PLC program. NOTE: Pr.05-00 to Pr.05-16 define the PLC program.	
15	Pause PLC Program	When the PLC program runs, a Multi-Function Input Terminal, when set to 15, can be used to pause the PLC program.	
16	Auxiliary Motor No.1 output disable	Parameter value 16 to 18 program Multi-Function Input Terminal to disable the corresponding auxiliary motor	
17	Auxiliary Motor No.2 output disable	via the AC motor drive Multi-function Output Terminals – Pr.03-00 to 3-03 (Relay and MO1 to MO3) when set to	
18	Auxiliary Motor No.3 output disable	16-18.	
19	Emergency Stop (N.O.)	When set to 19 or 20, the Multi-Function Input Terminal can be used to stop the AC motor drive in case of mathematics in the condition. It will display "FE1"	
20	Emergency Stop (N.C.)	malfunction in the application. It will display "EF1". Please "RESET" after the fault has been cleared. Refer to Pr.02-02 for Stop Method.	
21	Master Frequency Selection AVI/ACI	ON: ACI OFF: AVI Pr.02-00 and Pr.02-13 are disabled if this parameter value 21 is set. See the explanation below the table.	
22	Master Frequency Selection AVI/AUI	ON: AUI OFF: AVI Pr.02-00 and Pr.02-13 are disabled if this parameter value 22 is set. See the explanation below the table.	
23	Operation Command Selection (keypad PU01/external terminals)	ON: Operation command via Ext. Terminals OFF: Operation command via Keypad PU01 Pr.02-01 and Pr.02-14 are disabled if this parameter value 23 is set. See the explanation below the table.	
24	Auto accel/decel mode disable	ON: Linear accel/decel (Auto accel/decel mode set by Pr.01-15 disabled) OFF: Auto accel/decel mode	

Settings	Function	Description
25	Forced Stop (N.C.)	These two parameters have the same function as the "STOP" command with stop method acc. to Pr.02-02.
26	Forced Stop (N.O.)	No error message is displayed. When parameter value 25 or 26 is enabled, a new RUN command is needed.
27	Parameter lock enable (N.O.)	When this setting is enabled, all parameters will be locked and write parameters are disabled.
28	PID function disabled	When the input is ON for this setting, the PID function will be disabled.
29	Jog FWD/REV command	ON: REV OFF: FWD This command will be effective only when external terminal JOG is active.
30	External Reset (N.C.)	The function is the same as setting 05 but for use with normally close contact.
31	Source of second frequency command enabled	Used to select the first/second frequency command source. Refer to Pr.02-00 and 02-13. ON: 2 nd Frequency command source OFF: 1 st Frequency command source
32	Source of second operation command enabled	Used to select the first/second operation command source. Refer to Pr.02-01 and 02-14. ON: 2 nd Operation command source OFF: 1 st Operation command source
33	One shot PLC	The function is the same as setting 14 but the trigger signal is a one shot pulse, for example: a push button input. It can be cancelled by a "STOP" command.
34	Proximity sensor input for simple Index function	This function should be used with Pr.04-23 ~ Pr.04-25.
35	Output Shutoff Stop (N.O.)	AC motor drive will stop output and the motor free run if one of these settings is enabled. If the status of terminal
36	Output Shutoff Stop (N.C.)	is changed, AC motor drive will restart from 0Hz.

N.O.= Normally Open.

N.C.= Normally Closed.


When parameter value 21 and 22 are set and these two terminals are ON, the priority of analog input signals are AVI > ACI > AUI.

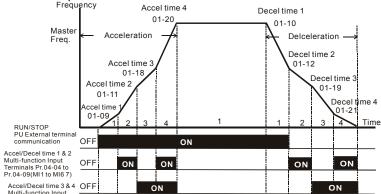

Multi-function Input Terminals Pr.04-04 to Pr.04-09(MI1 to MI6 8)

Accel/Decel Time and Multi-function Input Terminals

	MI2=08	MI1=07
Accel/decel time 1	OFF	OFF
Accel/decel time 2	OFF	ON
Accel/decel time 3	ON	OFF
Accel/decel time 4	ON	ON

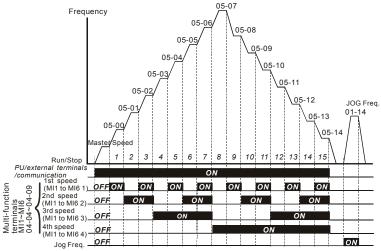

Multi-speed via External Terminals

	MI4=4	MI3=3	MI2=2	MI1=1
Master frequency	OFF	OFF	OFF	OFF
1 st speed	OFF	OFF	OFF	ON
2 nd speed	OFF	OFF	ON	OFF
3 rd speed	OFF	OFF	ON	ON
4 th speed	OFF	ON	OFF	OFF
5 th speed	OFF	ON	OFF	ON
6 th speed	OFF	ON	ON	OFF
7 th speed	OFF	ON	ON	ON
8 th speed	ON	OFF	OFF	OFF
9 th speed	ON	OFF	OFF	ON
10 th speed	ON	OFF	ON	OFF
11 th speed	ON	OFF	ON	ON
12 th speed	ON	ON	OFF	OFF
13 th speed	ON	ON	OFF	ON
14 th speed	ON	ON	ON	OFF
15 th speed	ON	ON	ON	ON


04 - 10 Digital Terminal Input Debouncing Time

1 to 20

Unit: 2

Settings


Factory Setting: 1

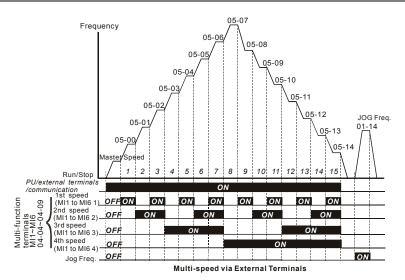

This parameter is to delay the signals on digital input terminals. 1 unit is 2 msec, 2 units are 4 msec, etc. The delay time is used to debounce noisy signals that could cause the digital terminals to malfunction.

04 - 23	Gear Ratio for Simple Index Function		
	Settings	4 ~ 1000	Factory Setting: 200
04 - 24	Index Angle	or Simple Index Function	Unit: 0.1
	Settings	0.0 ~360.0°	Factory Setting: 180.0
04 - 25	Deceleration	Time for Simple Index Function	Unit: 0.01
	Settings	0.00 ~100.00 sec	Factory Setting: 0.00

- The simple index function is used to position the machine/motor at the same position when it stops. The function should be used with setting 34 for Multi-Function Input Terminals (04-04 to 04-09).
- The function diagram is shown below. The machine is driven by a gear motor or other reduction gearbox. The trigger position of the proximity sensor is used as the starting point of the index angle. When the stop command is initiated, the AC motor drive will not decelerate until the proximity sensor is triggered. After that the AC motor drive begins to decelerate and stop according to the Pr.04-24 and Pr.04-25.

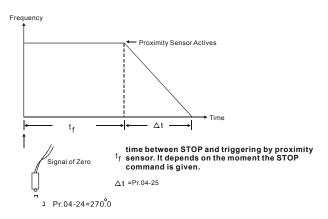

05 - 00	✓ 1st Step Speed Frequency	Unit: 0.01	
05 - 01	✓2nd Step Speed Frequency	Unit: 0.01	
05 - 02	✓ 3rd Step Speed Frequency		
05 - 03	✓4th Step Speed Frequency	Unit: 0.01	
05 - 04	✓ 5th Step Speed Frequency	Unit: 0.01	
05 - 05	✓6th Step Speed Frequency	Unit: 0.01	
05 - 06	✓7th Step Speed Frequency	Unit: 0.01	
05 - 07	✓8th Step Speed Frequency	Unit: 0.01	
05 - 08	✓9th Step Speed Frequency	Unit: 0.01	
05 - 09	✓ 10th Step Speed Frequency	Unit: 0.01	
05 - 10	✓11th Step Speed Frequency	Unit: 0.01	
05 - 11	✓12th Step Speed Frequency	Unit: 0.01	
05 - 12	✓13th Step Speed Frequency	Unit: 0.01	
05 - 13	✓14th Step Speed Frequency	Unit: 0.01	
05 - 14	✓15th Step Speed Frequency	Unit: 0.01	
		Factory Setting: 0.00	

Group 5: Multi-step speeds and PLC (Process Logic Control) parameters

Settings 0.00 to 400.00 Hz

The Multi-Function Input Terminals (refer to Pr.04-04 to 04-09) are used to select one of the AC motor drive Multi-step speeds. The speeds (frequencies) are determined by Pr.05-00 to 05-14 as shown above. They are also used in conjunction with Pr.05-15 to 05-31 for PLC programs.


05 - 15	PLC Mode		
			Factory Setting: 00
	Settings	00	Disable PLC operation
		01	Execute one program cycle
		02	Continuously execute program cycles
		03	Execute one program cycle step by step
		04	Continuously execute program cycles step by step

This parameter selects the mode of PLC operation for the AC motor drive. The AC motor drive will change speeds and directions according to the desired user programming.

This parameter can be applied in the PLC operation of general small machines, food processing machines and washing equipment.

Example 1 (Pr.05-15 = 1): Execute one cycle of the PLC program. The parameter settings are:

- 1. Pr.05-00 to 05-14: 1st to 15th speed (sets the frequency of each speed)
- Pr.04-04 to 04-09: Multi-Function Input Terminals (set one multi-function terminal as 14 PLC auto-operation).
- Pr.03-00 to 03-03: Multi-Function Output Terminals (set a Multi-Function Terminal as 10-PLC running indication, 11-PLC step completed and/or 12-PLC program completed).
- 4. Pr.05-15: PLC mode setting.
- 5. Pr.05-16: Direction of operation for the 1st to 15th speed.
- 6. Pr.05-17 to 05-31: Operation time setting of the 1st to 15th speed.

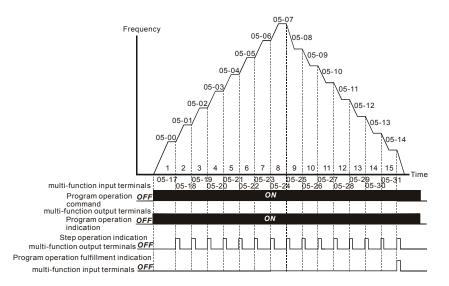




The above diagram shows one complete PLC cycle. To restart the cycle, turn the PLC program off and on again.

Example 2 (Pr.05-15 = 2): Continuously execute program cycles:

The diagram above shows the PLC program stepping through each speed. Setting Pr.05-15 to 2 continuously executes the program. To stop the PLC program, one must either pause the program or turn it off. (Refer to Pr.04-04 to 04-09 values 14 and 15).


Example 3 (Pr.05-15 = 3) Execute one cycle step by step:

The example below shows how the PLC can perform one cycle at a time, within a complete cycle. Each step will use the accel/decel times in Pr.01-09 to Pr.01-12. Note that the actual time each step stays at its intended frequency is reduced, due to the time for accel/decel.

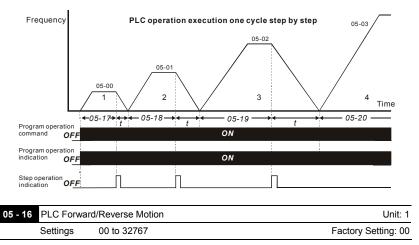

This parameter controls the direction of motion for the Multi-Step Speeds Pr.05-00 to Pr.05-14 during PLC mode. All other direction commands are invalid during the PLC mode.

The equivalent 15-bit number is used to program the forward/reverse motion for each of the 15 speed steps. The binary notation for the 15-bit number must be translated into decimal notation and then entered.

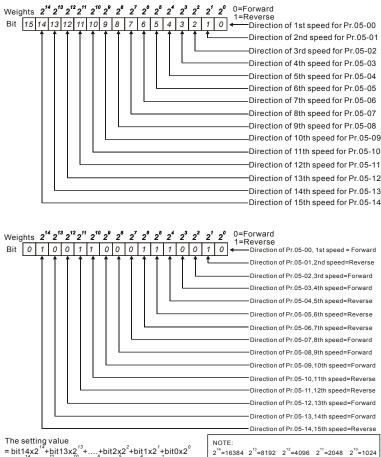

= bit4x2⁻¹ +bit3x2⁻¹ +...+bit2x2²+bit1x2¹+bit0x2⁰ = 1x2⁻¹ +1x2⁻¹ +1x2⁻¹ +1x2² +1x2² +1x2¹ +1x2¹ = 13384+2048+1024+64+32+16+2 =19570 Setting 05-16

	_	Chapter 5 Parameters VFD-B Series
05 - 17	Time Duration of 1st Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 18	Time Duration of 2nd Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 19	Time Duration of 3rd Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 20	Time Duration of 4th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 21	Time Duration of 5th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 22	Time Duration of 6th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 23	Time Duration of 7th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 24	Time Duration of 8th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 25	Time Duration of 9th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 26	Time Duration of 10th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 27	Time Duration of 11th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 28	Time Duration of 12th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 29	Time Duration of 13th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 30	Time Duration of 14th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 31	Time Duration of 15th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
	Settings 0.0 to 65500	Factory Setting: 0.0


Pr.05-17 to Pr.05-31 correspond to operation time of each step speed defined by Pr.05-00 to Pr.05-14. The maximum setting of 65500 seconds will be displayed as "t6550•". If display shows "t6550", it means 6550 seconds.

If a parameter is set to "00" (0 sec), the corresponding step will be skipped. This is commonly used to reduce the number of program steps.

05 -	32 Time Unit S	Settings			
					Factory Setting: 00
	Settings	00	1 sec		
		01	0.1 sec		
Ĥ	This parameter	sets th	e time unit for Pi	r.05-17~Pr.05-31.	
05 -	33 The Amplit	ude of V	Vobble Vibration		
	Settings	0.0	0 to 400.00 Hz		Factory Setting: 0.00
05 -	34 Wobble Sk	ip Frequ	iency		
	Settings	0.00	to 400.00 Hz		Factory Setting: 0.00
	The frequency	change	will be as show	n in the following diagra	am. These two parameters are

specific for textile machinery.

- Frequency of \triangle top point F_{up}= master frequency F + Pr.05-33 + Pr.05-34.
- Frequency of Δ down point F_{down}= master frequency F Pr.05-33 Pr.05-34.

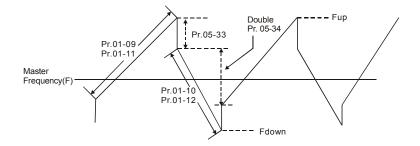


Group 6: Protection Parameters

06 - 00	Over-Vol	tage Stall Pre	vention	Unit: 0.1
	Settings	230V series	330.0 to 410.0V	Factory Setting: 390.0
		460V series	660.0 to 820.0V	Factory Setting: 780.0
		575V series	825.0 to 1025.0V	Factory Setting: 975.0
		00	Disable Over-voltage Stall Prevention (with resistor)	ı brake unit or brake

- During deceleration, the DC bus voltage may exceed its Maximum Allowable Value due to motor regeneration. When this function is enabled, the AC motor drive will not decelerate further and keep the output frequency constant until the voltage drops below the preset value again.
- Over-Voltage Stall Prevention must be disabled (Pr.06-00=00) when a brake unit or brake resistor is used.




With moderate inertia load, over-voltage stall prevention will not occur and the real deceleration time will be equal to the setting of deceleration time. The AC drive will automatically extend the deceleration time with high inertia loads. If the deceleration time is critical for the application, a brake resistor or brake unit should be used.

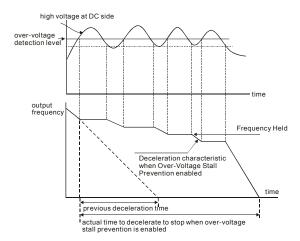

06 - 01	Over-Curre	ent Stall Prevention during Acceleration	Unit: 1
	Settings	20 to 250%	Factory Setting: 170


A setting of 100% is equal to the Rated Output Current of the drive.

During acceleration, the AC drive output current may increase abruptly and exceed the value specified by Pr.06-01 due to rapid acceleration or excessive load on the motor. When this function is enabled, the AC drive will stop accelerating and keep the output frequency constant until the current drops below the maximum value.

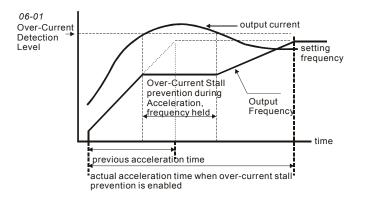

06 - 02 Over-curre	ent Stall Prevention during Operation	Unit: 1
Settings	20 to 250%	Factory Setting: 170

If the output current exceeds the setting specified in Pr.06-02 when the drive is operating, the drive will decrease its output frequency to prevent the motor stall. If the output current is lower than the setting specified in Pr.06-02, the drive will accelerate again to catch up with the set frequency command value.

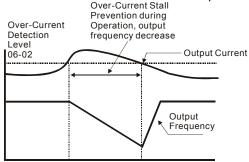

over-current stall prevention during operation

06 - 03Over-Torque Detection Mode (OL2) Factory Setting: 00 00 Over-Torque detection disabled. Settings 01 Over-Torque detection enabled during constant speed operation. After over-torgue is detected, keep running until OL1 or OL occurs. 02 Over-Torque detection enabled during constant speed operation. After over-torque is detected, stop running, 03 Over-Torque detection enabled during acceleration. After overtorque is detected, keep running until OL1 or OL occurs. 04 Over-Torque detection enabled during acceleration. After overtorque is detected, stop running. m This parameter determines the operation mode of the drive after the over-torque (OL2) is detected via the following method: if the output current exceeds the over-torque detection level (Pr.06-04) longer than the setting of Pr.06-05 Over-Torgue Detection Time, the warning message "OL2" is displayed. If a Multi-Functional Output Terminal is set to over-torque detection (Pr.03-00~03-03=04), the output is on. Please refer to Pr.03-00~03-03 for details.

06 - 04 Over-Torq	ue Detection Level (OL2)	Unit: 1
Settings	10 to 200%	Factory Setting: 150

This setting is proportional to the Rated Output Current of the drive.

06 - 05 Over-	Torque Detection Time (OL2)	Unit: 0.1
Settin	gs 0.1 to 60.0 sec	Factory Setting: 0.1

This parameter sets the time for how long over-torque must be detected before "OL2" is displayed.

Chapter 5 Parameters	VFD-D 3	Series	
06 - 06 Electronic	Thermal	l Overload Relay Selection (OL1)	
		Factory S	Setting: 02
Settings	00	Operate with a Standard Motor (self-cooled by fan)	
	01	Operate with a Special Motor (forced external cooling)	
	02	Operation disabled	
This function is	used to	o protect the motor from overloading or overheating.	
06 - 07 Electronic 1	Thermal	I Characteristic	Unit: 1
Settings	30 to	o 600 sec Factory S	Setting: 60
The parameter	determ	nines the time required for activating the l ² t electronic thermal	protection
Ope	20	elow shows I ² t curves for 150% output power for 1 minute.	
06 - 09 Second Mo	st Rece	ent Fault Record	
06 - 10 Third Most	Recent	Fault Record	
06 - 11 Fourth Rec	ent Fau	ult Record	
		Factory S	Setting: 00
Readings	00	No fault	
	01	Over-current (oc)	
	02	Over-voltage (ov)	
	03	Overheat (oH)	
	04	Overload (oL)	
	05	Overload1 (oL1)	
	06	External fault (EF)	

- 07 IGBT protection (occ)
- 08 CPU failure (cF3)
- 09 Hardware protection failure (HPF)
- 10 Current exceeds 2 times rated current during accel.(ocA)
- 11 Current exceeds 2 times rated current during decel.(ocd)
- 12 Current exceeds 2 times rated current during steady state operation (ocn)
- 13 Ground fault (GFF)
- 14 Reserved
- 15 CPU READ failure (CF1)
- 16 CPU WRITE failure (CF2)
- 17 Reserved
- 18 Motor over load (oL2)
- 19 Auto accel/decel failure (CFA)
- 20 Software/password protection (codE)
- 21 Emergency stop (EF1)
- 22 Phase-Loss (PHL)
- 23 Preliminary count value attained, EF active (cEF)
- 24 Under-current (Lc)
- 25 Analog feedback signal error (AnLEr)
- 26 PG feedback signal error (PGErr)
- In Pr.06-08 to Pr.06-11 the four most recent faults that occurred, are stored. After removing the cause of the fault, use the reset command to reset the drive.

06 - 12	Under-Curr	ent Det	ection Level	Unit: 1
	Settings	00 ~	100%	Factory Setting: 00
		00 E	Disabled	
06 - 13	Under-Curr	ent Det	ection Time	Unit: 0.1
	Settings	0.1~	3600.0 sec	Factory Setting: 10.0
06 - 14	Under-Curr	ent Det	ection Mode	
				Factory Setting: 00
	Settings	00	Warn and keep operating	
		01	Warn and ramp to stop	
		02	Warn and coast to stop	
		03	Warn, after coast to stop, restart (delay 06-1	5 setting time)

06 - 15	Under-Cu	rrent Dete	ction	Rest	art De	lay	Time			Unit: 1
	Settings	1~600) min						Factory S	etting: 10
~						_		 		

If output current is lower than the setting Pr.06-12 for a time that exceeds Pr.06-13 setting during operation, the AC drive will warn per Pr.06-14 setting. If Pr.06-14 is set to 03, the AC drive will restart after the delay time set by Pr.06-15 is up.

06 - 16	User-Define	d Low-Voltage Detection Level (Lv)	Unit: 1
	Settings	00 Disabled	
		230V series: 220 ~ 300VDC	Factory Setting: 00
		460V series: 440 ~ 600VDC	Factory Setting: 00
		575V series: 520 ~ 780VDC	Factory Setting: 00
06 - 17	User-Define	d Low-Voltage Detection Time	Unit: 0.1
	Settings	0.1~ 3600.0 sec	Factory Setting: 0.5

When the DC BUS voltage is lower than the setting of Pr.06-16 for a time exceeding the setting of Pr.06-17, the AC motor drive will output a signal when Pr.03-00 ~ Pr.03-03 is set to 28.

Group 7: Motor Parameters

07	-00 × Motor R	ated Current	Unit: 1
	Settings	30 to 120%	Factory Setting: 100
ш	Use the follow	ing formula to calculate the percentage value	e entered into this parameter:
	(Motor Current	t / AC Drive Current) x 100%	
	with Motor Cur	rent=Motor rated current in A shown to moto	or nameplate
	AC Drive Curre	ent=Rated current of AC drive in A (see Pr.00	0-01)
ш	Pr.07-00 and F	Pr.07-01 must be set if the drive is programm	ned to operate in Vector Control
	mode (Pr.0-09	= 2 or 3). They also must be set if the "Electronic electronic ele	tronic Thermal Overload Relay"
	(Pr.06-06) or "	Slip Compensation" functions are selected.	
07	- 01 × Motor N	p-load Current	Unit: 1
	Settings	01 to 90%	Factory Setting: 40
Q	The rated curr	ent of the AC drive is regarded as 100%. The	e setting of the Motor no-load
	current will affe	ect the slip compensation.	
Ĥ		ect the slip compensation. lue must be less than Pr.07-00 (Motor Rated	l Current).
	The setting va		
	The setting va	lue must be less than Pr.07-00 (Motor Rated	Unit: 0.1
07	The setting val	lue must be less than Pr.07-00 (Motor Rated	Unit: 0.1 Factory Setting: 0.0
	The setting val - 02 / Torque (Settings This paramete	Compensation 0.0 to 10.0	Unit: 0.1 Factory Setting: 0.0
07	The setting val - 02 // Torque (Settings This paramete higher torque.	Compensation 0.0 to 10.0 r may be set so that the AC drive will increas	Unit: 0.1 Factory Setting: 0.0
07	The setting values of the setting values of the settings of the settings of the settings. This parameter higher torque. Too high torque of the setting the setting values of the	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode.	Unit: 0.1 Factory Setting: 0.0
07	The setting va • 02	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. le compensation can overheat the motor.	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a
07	The setting val • 02 // Torque (Settings This paramete higher torque. Too high torque • 03 // Slip Con Settings	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. e compensation can overheat the motor.	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a Unit: 0.01 Factory Setting: 0.00
07	The setting val • 02 // Torque (Settings This parameter higher torque. Too high torque • 03 // Slip Con Settings While driving a	Iue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. e compensation can overheat the motor. npensation (Used without PG) 0.00 to 3.00	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a Unit: 0.01 Factory Setting: 0.00 on the AC motor drive will cause an
07	The setting val - 02 / Torque (Settings This paramete higher torque. Too high torqu - 03 / Slip Con Settings While driving a increase in slip	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. e compensation can overheat the motor. Inpensation (Used without PG) 0.00 to 3.00 an asynchronous motor, increasing the load o	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a Unit: 0.01 Factory Setting: 0.00 on the AC motor drive will cause ar
07	The setting val • 02 // Torque (Settings This paramete higher torque. Too high torque • 03 // Slip Con Settings While driving a increase in slip increasing the	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. the compensation can overheat the motor. Inpensation (Used without PG) 0.00 to 3.00 an asynchronous motor, increasing the load of o and decrease in speed. This parameter may	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a Unit: 0.01 Factory Setting: 0.00 on the AC motor drive will cause ar by be used to compensate the slip to of the AC motor drive is bigger than
07	The setting val • 02 // Torque (Settings This paramete higher torque. Too high torque • 03 // Slip Con Settings While driving a increase in slip increasing the	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. e compensation can overheat the motor. npensation (Used without PG) 0.00 to 3.00 an asynchronous motor, increasing the load of o and decrease in speed. This parameter may output frequency. When the output current of bad current (Pr.07-01), the AC drive will adjust	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a Unit: 0.01 Factory Setting: 0.00 on the AC motor drive will cause ar by be used to compensate the slip to of the AC motor drive is bigger than
07	The setting val • 02 / Torque (Settings This paramete higher torque. Too high torqu • 03 / Slip Con Settings While driving a increase in slip increasing the the motor no-lo this parameter	Lue must be less than Pr.07-00 (Motor Rated Compensation 0.0 to 10.0 r may be set so that the AC drive will increas Only to be used for V/f control mode. e compensation can overheat the motor. npensation (Used without PG) 0.00 to 3.00 an asynchronous motor, increasing the load of o and decrease in speed. This parameter may output frequency. When the output current of bad current (Pr.07-01), the AC drive will adjust	Unit: 0.1 Factory Setting: 0.0 se its voltage output to obtain a Unit: 0.01 Factory Setting: 0.00 on the AC motor drive will cause ar by be used to compensate the slip b of the AC motor drive is bigger than

This parameter sets the number of motor poles (must be an even number).

07 - 05 Motor Parameters Auto Tuning

Factory Setting: 00

Settings	00	Disable
	01	Auto Tuning R1 (motor doesn't run)
	02	Auto Tuning R1 + No-load Test (with running motor)

- Start Auto Tuning by pressing RUN key after this parameter is set to 01 or 02. When set to 01, it will only auto detect R1 value and Pr.07-01 must be input manually. When set to 02, the AC motor drive should be unloaded and the values of Pr.07-01 and Pr.07-06 will be set automatically.
- The steps to AUTO-Tuning are:
 - Make sure that all the parameters are set to factory settings and the motor wiring is correct.
 - Make sure the motor has no-load before executing auto-tuning and the shaft is not connected to any belt or gear motor.
 - 3. Fill in Pr.01-01, Pr.01-02, Pr.07-00, Pr.07-04 and Pr.07-08 with correct values.
 - 4. After Pr.07-05 is set to 2, the AC motor drive will execute auto-tuning immediately after receiving a "RUN" command. (Note: The motor will run!). The total auto tune time will be 15 seconds + Pr.01-09 + Pr.01-10. Higher power drives need longer Accel/|Decel time (factory setting is recommended). After executing, Pr.07-05 is set to 0.
 - After successful execution, the drive will set Pr.07-01 and Pr.07-06 accordingly. If not, repeat steps 3 and 4.
 - Then you can set Pr.00-09 to 02/03 and set other parameters according to your application requirement.

- 1. In vector control mode it is not recommended to have motors run in parallel.
- 2. It is not recommended to use vector control mode if motor rated power exceeds the rated power of

the AC motor drive.

07 - 06 Motor	Line-to-line Resistance R1	Unit: 1
Setting	s 00 to 65535 mΩ	Factory Setting: 00

The motor auto tune procedure will set this parameter. The user may also set this parameter without using Pr.07-05.

07 - 07 Reserved

 Refer to the rated rpm and the number of poles on the nameplate of the motor and use the following equation to calculate the rated slip. Rated Slip (Hz) = F_{base} (Pr.01-01 base frequency) - (rated rpm x motor pole 120) This parameter is valid only in vector mode. 07 - 09 Slip Compensation Limit Unit: Settings 00 to 250% Factory Setting: 20 This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Settings 0.05 ~10.00 sec Factory Setting: 0.1 		Rated Slip	Unit: 0.01
following equation to calculate the rated slip. Rated Slip (Hz) = F _{base} (Pr.01-01 base frequency) - (rated rpm x motor pole 120) This parameter is valid only in vector mode. 07 - 09 Slip Compensation Limit Unit: Settings 00 to 250% Factory Setting: 20 This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation.	Settings	s 0.00 to 20.00Hz	Factory Setting: 3.00
Rated Slip (Hz) = F _{base} (Pr.01-01 base frequency) - (rated rpm x motor pole 120) This parameter is valid only in vector mode. 07 - 09 Slip Compensation Limit Unit: Settings 00 to 250% Factory Setting: 20 This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation were presented on the compensation.	Refer to the	e rated rpm and the number of poles on the namep	late of the motor and use the
 This parameter is valid only in vector mode. 07 - 09 Slip Compensation Limit Unit: Settings 00 to 250% Factory Setting: 20 This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec, its response time for the compensation without and pr.07-13 are set to 10.00 sec. 	following e	quation to calculate the rated slip.	
07 - 09 Slip Compensation Limit Unit: Settings 00 to 250% Factory Setting: 20 Image: This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~ 10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~ 10.00 sec Factory Setting: 0.1 Image: Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. Image: When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation withe compensation withe compensation with the compensation with the	Rated Slip	(Hz) = F _{base} (Pr.01-01 base frequency) - (rated rpm	x motor pole 120)
Settings 00 to 250% Factory Setting: 20 This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant 01 ~ 10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant 01 ~ 10.00 sec Factory Setting: 0.1 Settings 0.01 ~ 10.00 sec Factory Setting: 0.1 Settings 0.05 ~ 10.00 sec Factory Setting: 0.1 Settings 0.05 ~ 10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensat	This param	eter is valid only in vector mode.	
 This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation we have a set of the compensation we set of the compensa	07 - 09 Slip Co	mpensation Limit	Unit: 1
 08). Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the pr.07-12 and Pr.07-13 are set to 10.00 sec. 	Settings	s 00 to 250%	Factory Setting: 200
Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant 07 - 13 Slip Compensation Time Constant 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.1 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation withe compensation with the compensation with the compensa	This param	eter sets the upper limit of the compensation freque	ency (the percentage of Pr.07-
frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz. 07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~ 10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~ 10.00 sec Factory Setting: 0.1 Instrume Settings 0.05 ~ 10.00 sec Factory Setting: 0.1 Instrume Settings 0.05 ~ 10.00 sec Factory Setting: 0.1 Instrume When Pr.07-12 and Pr.07-13 changes the response time for the compensation. Instrume When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with	08).		
07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation of the compensatic of the compensation of the compensation of the comp	Example: v	hen Pr.07-08=5Hz and Pr.07-09=150%, the upper	limit of the compensation
07 - 10 Reserved 07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation of the compensatic of the compensation of the compensation of the comp	frequency i	s 7.5Hz. Therefore, for a 50Hz motor, the max. out	put is 57.5Hz.
07 - 11 Reserved 07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation of the compensat			•
07 - 12 Torque Compensation Time Constant Unit: 0.0 Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensatio	07 - 10 Reserv	ed	
Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation withe compensation withe compensation with the compensation with the c	07 - 11 Reserv	ed	
Settings 0.01 ~10.00 sec Factory Setting: 0.0 07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation withe compensation withe compensation with the compensation with the c	7		
07 - 13 Slip Compensation Time Constant Unit: 0.0 Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the compensation withe compensatin with the compensatin with the compensation with the		Compensation Time Constant	Unit: 0.01
Settings 0.05 ~10.00 sec Factory Setting: 0.1 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation with the	07 - 12 Torque	s 0.01 ~10.00 sec	Factory Setting: 0.05
 Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation. When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation w 	-		
When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation w	Settings		Unit: 0.01
,,	Settings 07 - 13 Slip Co	mpensation Time Constant	Unit: 0.01 Factory Setting: 0.10
be the longest. But if the settings are too short, unstable system may occur.	Settings 07 - 13 Slip Co Settings	mpensation Time Constant s 0.05 ~10.00 sec	Factory Setting: 0.10
	Settings 07 - 13 Slip Co Settings Setting Pr.0	mpensation Time Constant s 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for	Factory Setting: 0.10
	Settings 07 - 13 Slip Co Settings Setting Pr.0 When Pr.0	mpensation Time Constant s 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for 7-12 and Pr.07-13 are set to 10.00 sec, its response	Factory Setting: 0.10 the compensation. e time for the compensation wil
07 - 14 Accumulative Motor Operation Time (Min.) Unit:	Settings 07 - 13 Slip Co Settings Setting Pr.0 When Pr.0	mpensation Time Constant s 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for 7-12 and Pr.07-13 are set to 10.00 sec, its response	Factory Setting: 0.10 the compensation. e time for the compensation wil
Settings 00 ~1439 Factory Setting: 0	Settings 07 - 13 Slip Co Settings Setting Pr.0 When Pr.0 be the long	mpensation Time Constant 5 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for 7-12 and Pr.07-13 are set to 10.00 sec, its response est. But if the settings are too short, unstable syste	Factory Setting: 0.10 the compensation. e time for the compensation wil
07 - 15 Accumulative Motor Operation Time (Day) Unit:	Setting: 07 - 13 Slip Co Setting: Setting Pr.(When Pr.0) be the long 07 - 14 Accument	mpensation Time Constant s 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for 7-12 and Pr.07-13 are set to 10.00 sec, its response est. But if the settings are too short, unstable syste ulative Motor Operation Time (Min.)	Factory Setting: 0.10 the compensation. e time for the compensation wil m may occur.
Settings 00 ~65535 Factory Setting: 0	Settings 07 - 13 Slip Co Settings Setting Pr.0 When Pr.0 be the long 07 - 14 Accument Settings	mpensation Time Constant s 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for 7-12 and Pr.07-13 are set to 10.00 sec, its response est. But if the settings are too short, unstable syste ulative Motor Operation Time (Min.) s 00 ~1439	Factory Setting: 0.10 the compensation. e time for the compensation wil m may occur. Unit: 1
Pr.07-14 and Pr.07-15 are used to record the motor operation time. They can be cleared by	Settings 07 - 13 Slip Co Settings Setting Pr.0 When Pr.0 be the long 07 - 14 Accume Settings 07 - 15 Accume	mpensation Time Constant 0.05 ~10.00 sec 07-12 and Pr.07-13 changes the response time for 7-12 and Pr.07-13 are set to 10.00 sec, its response est. But if the settings are too short, unstable syste ulative Motor Operation Time (Min.) 00 ~1439 ulative Motor Operation Time (Day)	Factory Setting: 0.10 the compensation. e time for the compensation wil m may occur. Unit: 1 Factory Setting: 00

Chapter 5 Parameters | VFD-B Series Group 8: Special Parameters

08 ·	DC Brake 0	Current Level	Unit: 1
	Settings	00 to 100%	Factory Setting: 00
	•		ke Current output to the motor during start-up and
	stopping. when	i setting DC Brake Curre	nt, the Rated Current (Pr.00-01) is regarded as 100%.
	It is recommen	ded to start with a low D0	C Brake Current Level and then increase until proper
	holding torque	has been attained.	
08 ·	01 DC Brake	Time during Start-up	Unit: 0.1
	Settings	0.0 to 60.0 sec	Factory Setting: 0.0
ш	This parameter	determines the duration	of the DC Brake current after a RUN command. When
	the time has ela	apsed, the AC motor driv	e will start accelerating from the Minimum Frequency


(Pr.01-05).

08 - 02	DC Brake	Fime during Stopping	Unit: 0.1
	Settings	0.0 to 60.0 sec	Factory Setting: 0.0

This parameter determines the duration of the DC Brake current during stopping. If stopping with DC Brake is desired, Pr.02-02 Stop Method must be set to 00 or 02 for RAMP stop.

08 - 03	Start-Point for	or DC Brake	Unit: 0.01
	Settings	0.00 to 400.00Hz	Factory Setting: 0.00

This parameter determines the frequency when DC Brake will begin during deceleration.

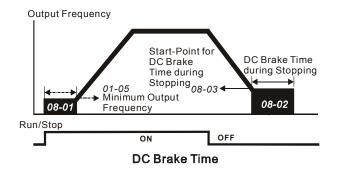

- DC Brake during Start-up is used for loads that may move before the AC drive starts, such as fans and pumps. Under such circumstances, DC Brake can be used to hold the load in position before setting it in motion.
- DC Brake during stopping is used to shorten the stopping time and also to hold a stopped load in position. For high inertia loads, a dynamic brake resistor or brake unit may also be needed for fast decelerations.

08 -	04 Momentary	/ Power	Loss Operation Selection	
			Factory Setting: 00	
	Settings	00	Operation stops after momentary power loss.	
	01 Operation continues after momentary power loss, speed search starts with the Master Frequency reference value.			
		02	Operation continues after momentary power loss, speed search starts with the minimum frequency.	
ш	This paramete	r determ	ines the operation mode when the AC motor drive restarts from a	

momentary power loss.

When using a PG card with PG (encoder), speed search will begin at the actual PG (encoder) feedback speed and settings 01 and 02 will be invalid.

08 - 05 Maximum Allowable Power Loss Time	e Unit: 0.1
Settings 0.1 to 5.0 sec	Factory Setting: 2.0


- If the duration of a power loss is less than this parameter setting, the AC motor drive will resume operation. If it exceeds the Maximum Allowable Power Loss Time, the AC motor drive output is then turned off (coast stop).
- □ The selected operation after power loss in Pr.08-04 is only executed when the maximum allowable power loss time is ≤5 seconds and the AC motor drive displays "Lu". But if the AC motor drive is powered off due to overload, even if the maximum allowable power loss time is ≤5 seconds, the operation mode as set in Pr.08-04 is not executed. In that case it starts up normally.

08 - 06	Baseblock T	ime for Speed Search (BB)	Unit: 0.1
	Settings	0.1 to 5.0 sec	Factory Setting: 0.5

- When momentary power loss is detected, the AC drive will block its output and then wait for a specified period of time (determined by Pr.08-06, called Base-Block Time) before resuming operation. This parameter should be set at a value to ensure that any residual regeneration voltage from the motors on the output has disappeared before the drive is activated again.
- This parameter also determines the waiting time before resuming operation after External Baseblock and after Auto Restart after Fault (Pr.08-14).
- When using a PG card with PG (encoder), speed search will begin at the actual PG (encoder) feedback speed and settings 01 and 02 in Pr.08-04 will be invalid.

08 - 07	Current Lim	it for Speed Search	Unit: 1
	Settings	30 to 200%	Factory Setting: 150


Following a momentary power loss, the AC motor drive will start its speed search operation only if the output current is greater than the value set by Pr.8-07. When the output current is less than the value of Pr.8-07, the AC motor drive output frequency is at "speed synchronization point". The drive will start to accelerate or decelerate back to the operating frequency at which it was running prior to the power loss.

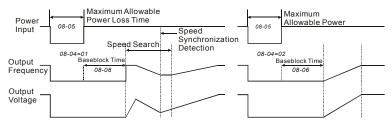



08 - 08 Skip Frequency 1 Upper Limit	Unit: 0.01
08 - 09 Skip Frequency 1 Lower Limit	Unit: 0.01
08 - 10 Skip Frequency 2 Upper Limit	Unit: 0.01
08 - 11 Skip Frequency 2 Lower Limit	Unit: 0.01
08 - 12 Skip Frequency 3 Upper Limit	Unit: 0.01
08 - 13 Skip Frequency 3 Lower Limit	Unit: 0.01
Settings 0.00 to 400.00Hz	Factory Setting: 0.00

- These parameters set the Skip Frequencies. It will cause the AC motor drive to never remain within these frequency ranges with continuous frequency output.
- These six parameters should be set as follows $Pr.08-08 \ge Pr.08-09 \ge Pr.08-10 \ge Pr.08-11 \ge Pr.08-12 \ge Pr.08-13$.

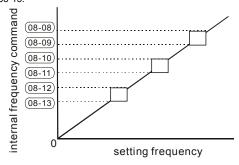


08 - 14	Auto Restar	t After Fault	Unit: 1
	Settings	00 to 10	Factory Setting: 00
		00 Disable	

- Only after an over-current OC or over-voltage OV fault occurs, the AC motor drive can be reset/restarted automatically up to 10 times.
- Setting this parameter to 00 will disable the reset/restart operation after any fault has occurred. When enabled, the AC motor drive will restart with speed search, which starts at the frequency before the fault. To set the waiting time before restart after a fault, please set Pr. 08-06 Base Block Time for Speed Search.

08 - 21 Auto Reset Ti	me at Restart after Fault	Unit: 1
Settings	00 to 60000 sec	Factory Setting: 600

This parameter should be used in conjunction with Pr.08-14.

For example: If Pr.08-14 is set to 10 and Pr.08-21 is set to 600s (10 min), and if there is no fault for over 600 seconds from the restart for the previous fault, the Auto Reset Time for restart after fault will be reset to 10.

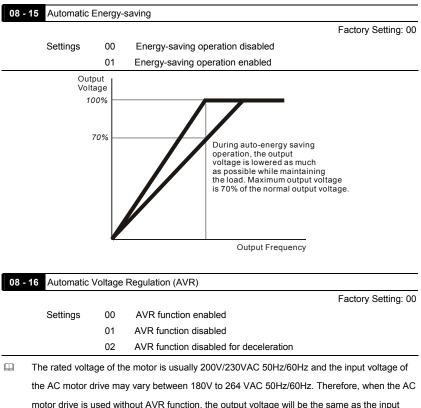


voltage. When the motor runs at voltages exceeding the rated voltage with 12% - 20%, its lifetime will be shorter and it can be damaged due to higher temperature, failing insulation and unstable torque output.

- AVR function automatically regulates the AC motor drive output voltage to the Maximum Output Voltage (Pr.01-02). For instance, if Pr.01-02 is set at 200 VAC and the input voltage is at 200V to 264VAC, then the Maximum Output Voltage will automatically be reduced to a maximum of 200 VAC.
- When motor stops with deceleration, it will shorten deceleration time. When setting this parameter to 02 with auto acceleration/deceleration, it will offer a quicker deceleration.

	_		Chapter 5 Parameters VFD-B Series
08 - 17		Brake Level I Level of the Brake Resistor)	Unit: 1
	Settings	230V series: 370 to 430V	Factory Setting: 380
		460V series: 740 to 860V	Factory Setting: 760
		575V series: 925 to 1075V	Factory Setting: 950

This parameter sets the DC-bus voltage at which the brake chopper is activated.

This parameter will be invalid for models above 15kW/20hp for which VFDB brake unit must be used.

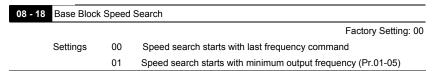

This parameter determines the AC motor drive restart method after External Base Block is enabled.

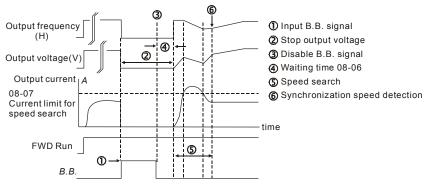


Fig. 1: B.B. speed search with last output frequency downward timing chart


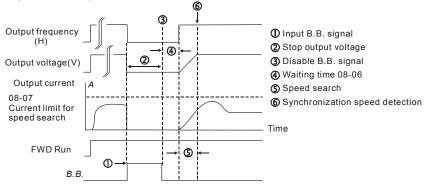


Fig. 2: B.B. speed search with last output frequency downward timing chart

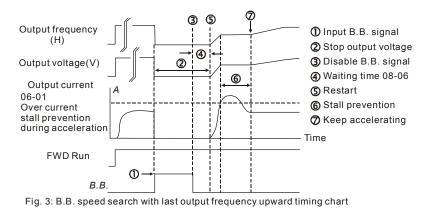

08 - 19	Speed Sea	rch duri	ng Start-up	
				Factory Setting: 00
	Settings	00	Speed search disable	
		01	Speed search enable	

This parameter is used for starting and stopping a motor with high inertia. A motor with high inertia will take a long time to stop completely. By setting this parameter, the user does not need to wait for the motor to come to a complete stop before restarting the AC motor drive. If a PG card and encoder is used on the drive and motor, then the speed search will start from the speed that is detected by the encoder and accelerate quickly to the commanded frequency. Pr.08-04 and Pr.08-06 will be disabled when using this parameter with PG feedback control.

Please make sure Pr.07-04, Pr.10-10, and Pr.10-11 are set correctly. An incorrect setting may cause the motor to exceed its speed limit and permanent damage to the motor and machine can occur.

08 -	20 × Speed S	earch I	Frequency during Start-up	
				Factory Setting: 00
	Settings	00	Setting Frequency	
		01	Maximum Operation Frequency (01-00)	
	This paramete	r deteri	nines the start value of the speed search frequency	ι.
08 -	22 × Compen	sation	Coefficient for Motor Instability	Unit: 1
	Settings	00~	1000	Factory Setting: 00
	The drift currer	nt will o	ccur in a specific zone of the motor and instability in	n the. By using this
	parameter, gre	atly im	proves motor instability.	
ш	The drift currer	nt zone	of the larger horsepower motor is usually in the low	v frequency range.
m	A setting of mo	ore than	500 is recommended	

Group 9: Communication Parameters

There is a built-in RS-485 serial interface, marked RJ-11 (jack) is located near the control terminals. The pins are defined below:



- 1. When connecting to the communication connector, please use RJ11 6P2C/6P4C
- 2. When connecting to the PU, please use RJ12.
- Please notice that pin 1 is only for internal communication and external keypad. Please do not use in other way to prevent drive malfunction or damage. For RS485 communication, please only use pin 3 and pin 4.

Each VFD-B AC drive has a pre-assigned communication address specified by Pr.09-00. The RS485 master then controls each AC motor drive according to its communication address.

09	-00 × Commur	nication Address	
	Settings	01 to 254	Factory Setting: 01
£	If the AC motor	r drive is controlled by F	RS-485 serial communication, the communication
	address for this	s drive must be set via t	his parameter. And the communication address for each
	AC motor drive	e must be different and u	unique.

09 - 01	✓ Transmis	ssion Sp	eed	
				Factory Setting: 01
	Settings	00	Baud rate 4800 bps (bits / second)	
		01	Baud rate 9600 bps	
		02	Baud rate 19200 bps	
		03	Baud rate 38400 bps	

This parameter is used to set the transmission speed between the RS485 master (PLC, PC, etc.) and AC motor drive.

09 -	02 / Transmis	ssion Fa	ault Treatment	
				Factory Setting: 03
	Settings	00	Warn and keep operating	
		01	Warn and RAMP to stop	
		02	Warn and COAST to stop	
		03	No warning and keep operating	
D	This paramete	r is set t	o how to react if transmission errors occur.	
D	See list of erro	r messa	ges below (see section 3.6.)	
09 -	03 x Time-out	Detect	ion	Unit: 0.1
	Settings	0.0	~ 60.0 sec	Factory Setting: 0.0
		0.0	Disable	
0	lf Pr.09-03 is n	ot equa	I to 0.0, Pr.09-02=00~02, and there is no comr	nunication on the bus
	during the Tim	e Out de	etection period (set by Pr.09-03), "cE10" will be	e shown on the keypad.
09 -	04 × Commun	nication	Protocol	
				Factory Setting: 00
	Settings	00	Modbus ASCII mode, protocol <7,N,2>	
		01	Modbus ASCII mode, protocol <7,E,1>	
		02	Modbus ASCII mode, protocol <7,0,1>	
		03	Modbus RTU mode, protocol <8,N,2>	
		04	Modbus RTU mode, protocol <8,E,1>	
		05	Modbus RTU mode, protocol <8,0,1>	
2	1. Control by P	C or PL	.C	
★A	,		o communicate on Modbus networks using one	e of the following modes:
		•	and Code for Information Interchange) or RTU (
	`		aired mode along with the period port communi	

Users can select the desired mode along with the serial port communication protocol in Pr.09-04. ★Code Description:

ASCII mode:

Each 8-bit data is the combination of two ASCII characters. For example, a 1-byte data:

64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex).

Character	ʻ0'	'1'	'2'	'3'	'4'	'5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H

Character	'8'	' 9'	'A'	'B'	ʻC'	'D'	'E'	'F'
ASCII code	38H	39H	41H	42H	43H	44H	45H	46H


RTU mode:

Each 8-bit data is the combination of two 4-bit hexadecimal characters. For example, 64


Hex.

2. Data Format

```
For ASCII mode:
```

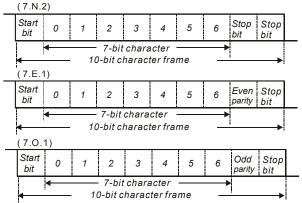

For RTU mode:

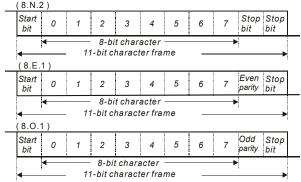

3. Communication Protocol

3.1 Communication Data Frame:

ASCII mode:

STX	Start character ':' (3AH)
Address Hi	Communication address:
Address Lo	8-bit address consists of 2 ASCII codes
Function Hi	Command code:
Function Lo	8-bit command consists of 2 ASCII codes
DATA (n-1)	Contents of data:
to	Nx8-bit data consist of 2n ASCII codes
DATA 0	n<=20, maximum of 40 ASCII codes
LRC CHK Hi	LRC check sum:
LRC CHK Lo	8-bit check sum consists of 2 ASCII codes
END Hi	End characters:
END Lo	END1= CR (0DH), END0= LF(0AH)

RTU mode:

START	A silent interval of more than 10 ms
Address	Communication address: 8-bit address
Function	Command code: 8-bit command
DATA (n-1) to DATA 0	Contents of data: n×8-bit data, n<=40 (20 x 16-bit data)
CRC CHK Low	CRC check sum:
CRC CHK High	16-bit check sum consists of 2 8-bit characters
END	A silent interval of more than 10 ms

3.2 Address (Communication Address)

Valid communication addresses are in the range of 0 to 254. A communication address equal to 0, means broadcast to all AC drives (AMD). In this case, the AMD will not reply any message to the master device.

00H: broadcast to all AC drives

01H: AC drive of address 01

0FH: AC drive of address 15

10H: AC drive of address 16

FEH: AC drive of address 254

For example, communication to AMD with address 16 decimal (10H):

ASCII mode: Address='1','0' => '1'=31H, '0'=30H

RTU mode: Address=10H

3.3 Function (Function code) and DATA (data characters)

The format of data characters depends on the function code.

03H: read data from register

06H: write single register

08H: loop detection

10H: write multiple registers

The available function codes and examples for VFD-B are described as follows:

(1) 03H: multi read, read data from registers.

Example: reading continuous 2 data from register address 2102H, AMD address is 01H.

ASCII mode:

Command message:					
STX	·.'				
Address	ʻ0'				
Address	'1'				
Function	ʻ0'				
Function	'3'				
	'2'				
Starting data address	'1'				
	ʻ0'				
	'2'				
	ʻ0'				
Number of data	'0'				
(count by word)	'0'				
	'2'				
LRC Check	'D'				
LIVE OHECK	'7'				
END	CR				
LIND	LF				

Response message:

i teoponeo meesage.	
STX	·:'
Address	ʻ0'
Address	'1'
	ʻ0'
Function	'3'
Number of data	ʻ0'
(Count by byte)	'4'
Content of starting address 2102H	'1'
	'7'
	'7'
	ʻ0'
Content of address 2103H	ʻ0'
	ʻ0'
	ʻ0'
	ʻ0'
LRC Check	'7'
	'1'
END	CR
	LF

RTU mode:

Command message:

Address	01H
Function	03H
Starting data	21H
address	02H
Number of data	00H
(count by word)	02H
CRC CHK Low	6FH
CRC CHK High	F7H

Response message:

Address	01H
Function	03H
Number of data	04H
(count by byte)	
Content of address	17H
2102H	70H
Content of address	00H
2103H	00H
CRC CHK Low	FEH
CRC CHK High	5CH

(2) 06H: single write, write single data to register.

Example: writing data 6000(1770H) to register 0100H. AMD address is 01H.

ASCII mode:

Command message:

Command message.	
STX	:
Address	ʻ0'
	'1'
Function	ʻ0'
T directori	'6'
Data address	ʻ0'
	'1'
	'0'
	ʻ0'
Data content	'1'
	'7'
	'7'
	'0'
LRC Check	'7'
	'1'
END	CR
	LF

RTU mode:

Command message:

01H
06H
01H
00H
17H
70H
86H
22H

Response message:

i teoponeo meseago:	
STX	·.'
Address	ʻ0'
	'1'
Function	ʻ0'
	'6'
Data address	ʻ0'
	'1'
	ʻ0'
	ʻ0'
Data content	'1'
	'7'
	'7'
	ʻ0'
LRC Check	'7'
	'1'
END	CR
	LF

Response message:

Address	01H
Function	06H
Data address	01H
	00H
Data content	17H
	70H
CRC CHK Low	86H
CRC CHK High	22H

(3) 08H: loop detection

This command is used to detect if the communication between master device (PC or PLC) and AC motor drive is normal. The AC motor drive will send the received message to the master device. **ASCII mode:**

Command message:	
STX	·.'
Address	ʻ0'
	'1'
Function	ʻ0'
Function	'8'
Data address	ʻ0'
	ʻ0'
	ʻ0'
	ʻ0'
Data content	'1'
	'7'
	'7'
	'0'
LRC Check	'7'

Response message:	
STX	
Address	' 0'
	'1'
Function	ʻ0'
	'8'
Data address	ʻ0'
	ʻ0'
	ʻ0'
	ʻ0'
Data content	'1'
	'7'
	'7'
	ʻ0'
LRC Check	'7'

Chapter 5 Parameters | VFD-B Series

Command message:

	5
	' 0'
END	CR
	LF

RTU mode:

Command message:

Address	01H
Function	08H
Data address	00H
	00H
Data content	17H
Data content	70H
CRC CHK Low	EEH
CRC CHK High	1FH

Response message:

	ʻ0'
END	CR
	LF

Response message:

Address	01H
Function	08H
Data address	00H
	00H
Data content	17H
Data content	70H
CRC CHK Low	EEH
CRC CHK High	1FH

(4) 10H: write multiple registers (write multiple data to registers)

Example: Set the multi-step speed,

Pr.05-00=50.00 (1388H), Pr.05-01=40.00 (0FA0H). AC drive address is 01H.

ASCII Mode:

Command message:	
STX	·:'
Address 1	' 0'
Address 0	'1'
Function 1	'1'
Function 0	'0'
	·0'
Starting data	'5'
address	'0'
	ʻ0'
	'0'
Number of data	'0'
(count by word)	'0'
	'2'
Number of data	ʻ0'
(count by byte)	'4'
	'1'
The first data	'3'
content	'8'
	'8'
	ʻ0'
The second data	'F'
content	'A'
	ʻ0'
LDC Chaok	ʻ9'
LRC Check	'A'
END	CR
LND	LF

Response message:	
STX	·.,
Address 1	ʻ0'
Address 0	'1'
Function 1	'1'
Function 0	'0'
	'0'
Starting data	'5'
address	ʻ0'
	ʻ0'
	ʻ0'
Number of data	ʻ0'
(count by word)	ʻ0'
	'2'
LRC Check	'E'
	'8'
	CR
END	LF

RTU mode:

Command	message.

Command message.	
01H	
10H	
05H	
00H	
00H'	
02H	
04	
13H	
88H	
0FH	
A0H	
'4D'	
'D9'	

Response message:

Address	01H
Function	10H
Starting data address	05H
	00H
Number of data	00H
(count by word)	02H
CRC Check Low	41H
CRC Check High	04H

3.4 Check sum

ASCII mode:

LRC (Longitudinal Redundancy Check) is calculated by summing up, module 256, the values of the bytes from ADR1 to last data character then calculating the hexadecimal representation of the 2's-complement negation of the sum.

For example, reading 1 word from address 0401H of the AC drive with address 01H.

071/	4.7
STX	
Address 1	ʻ0'
Address 0	'1'
Function 1	ʻ0'
Function 0	'3'
Starting data address	ʻ0'
	'4'
	ʻ0'
	'1'
Number of data	ʻ0'
	ʻ0'
	ʻ0'
	'1'
LRC Check 1	'F'
LRC Check 0	'6'
END 1	CR
END 0	LF

01H+03H+04H+01H+00H+01H=0AH, the 2's-complement negation of 0AH is <u>F6</u>H.

RTU mode:

Address	01H
Function	03H
Starting data address	21H
	02H

Number of data	00H
(count by word)	02H
CRC CHK Low	6FH
CRC CHK High	F7H

CRC (Cyclical Redundancy Check) is calculated by the following steps:

Step 1: Load a 16-bit register (called CRC register) with FFFFH.

Step 2: Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.

Step 3: Examine the LSB of CRC register.

Step 4: If the LSB of CRC register is 0, shift the CRC register one bit to the right with MSB zero filling, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right with MSB zero filling, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.

Step 5: Repeat step 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.

Step 6: Repeat step 2 to 5 for the next 8-bit byte of the command message. Continue doing this until all bytes have been processed. The final contents of the CRC register are the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, i.e. the lower order byte will be transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments:

Unsigned char* data ← a pointer to the message buffer

Unsigned char length ← the quantity of bytes in the message buffer

The function returns the CRC value as a type of unsigned integer.

Unsigned int crc_chk(unsigned char* data, unsigned char length){

```
int j;
unsigned int reg_crc=0xFFF;
while(length--){
    reg_crc ^= *data++;
    for(j=0;j<8;j++){
        if(reg_crc & 0x01){ /* LSB(b0)=1 */
            reg_crc=(reg_crc>>1) ^ 0xA001;
    }else{
        reg_crc=reg_crc >>1;
    }
}
```

```
}
return reg_crc;
```

}

3.5 Address list

The contents of available addresses are shown as below:

Content	Address	Function		
AC drive Parameters	GGnn H	GG means parameter group, nn means parameter number, for example, the address of Pr 4-01 is 0401H. Referencing to chapter 5 for the function of each parameter. When reading parameter by command code 03H, only one parameter can be read at one time.		
	2000H	Bit 0-1	00B: No function 01B: Stop 10B: Run 11B: Jog + Run	
		Bit 2-3	Reserved	
		Bit 4-5	00B: No function 01B: FWD 10B: REV 11B: Change direction	
Command Write only	2000H	Bit 6-7	00B: Comm. forced 1st accel/decel 01B: Comm. forced 2nd accel/decel 10B: Comm. forced 3rd accel/decel 11B: Comm. forced 4th accel/decel	
		Bit 8-11	Represented 16 step speeds.	
		Bit 12	0: No comm. multi step speed or accel/decel time 1: Comm. multi step speed or accel/decel time	
		Bit 13-15	Reserved	
	2001H	Frequency	command	
		Bit 0	1: EF (external fault) on	
	2002H			
		Bit 2-15	Reserved	
Status		Error code:		
monitor	2100H	00: No error occurred		
Read only		01: Over-current (oc)		
		02: Over-voltage (ov)		
		03: Overheat (oH)		
		04: Overload (oL)		
		05: Overload1 (oL1)		
		06: External fault (EF)		
		07: IGBT short circuit protection (occ)		
		08: CPU failure (cF3)		
		09: Hardware protection failure (HPF)		
		10: Current exceeds 2 times rated current during accel (ocA) 11: Current exceeds 2 times rated current during decel (ocd)		
1	I	11. Current exceeds 2 times rated current during decel (ocd)		

arameters VFD-E		Eunction		
Content	Address	Function		
		12: Current exceeds 2 times rated current during steady state		
			tion (ocn)	
			nd Fault (GFF)	
			oltage (Lv)	
	2100H		ailure 1 (cF1)	
			ailure 2 (cF2)	
		17: Base		
		18: Overlo		
		19: Auto a	accel/decel failure (cFA)	
			are protection enabled (codE)	
		21: EF1 Emergency stop		
		22: PHL (Phase-Loss)		
		23: cEF (Preliminary count value attained, EF active)		
		24: Lc (Ur	nder-current)	
			r (Analog feedback signal error)	
			r (PG feedback signal error)	
		Status of		
			LED: 0: light off, 1: light up	
			00: RUN LED	
	2101H	Bit 0-4	01: STOP LED	
		02: JOG LED		
			03: FWD LED	
		04: REV LED		
		Bit 5 0: F light off, 1: F light on		
		Bit 6 0: H light off, 1: H light on		
		Bit 7 0: "u" light off, 1: "u" light on		
		Bit 8 1: Master frequency Controlled by communication interface		
		Bit 9 1: Master frequency controlled by analog signal		
		1: Operation command controlled by		
		Bit 10 communication interface		
		Bit 11 1: Parameters have been locked		
		Bit 12	0: AC drive stops, 1: AC drive operates	
		Bit 13	1: Jog command	
1		Bit 14-15	Reserved	
	2102H		y command (F)	
1	2102H	Output fre	equency (H)	
1	2100H	Output cu	rrent (AXXX.X)	
	2104H		Voltage (UXXX.X)	
	2105H		Itage (EXXX.X)	
	2100H		ber of Multi-Step Speed Operation	
	2107H		ber of PLC operation	
Status	2100H		f external TRIGGER	
monitor	2103H			
Read only	210AH	Power factor angle Estimated torque ratio (XXX.X)		
	210DH	Motor speed (rpm)		
	2100H		(low word) /unit time (Pr.10-15)	
1	210EH	PG nulse	(high word) /unit time (Pr.10-15)	
	210EH	Output po		
	2100 H	Reserved		
	2200H	Feedback Signal (XXX.XX %)		
1	220011	recuback Signal (XXX.XX %)		

Chapter 5 Parameters | VFD-B Series

Content	Address	Function	
	2201H	User-defined (Low word)	
	2202H	User-defined (High word)	
	2203H	AVI analog input (XXX.XX %)	
	2204H	ACI analog input (XXX.XX %)	
	2205H	AUI analog input (XXX.XX %)	
	2206H	Display temperature of heatsink (°C)	

3.6 Exception response:

The AC motor drive is expected to return a normal response after receiving command messages from the master device. The following depicts the conditions when no normal response is replied to the master device.

The AC motor drive does not receive the messages due to a communication error; thus, the AC motor drive has no response. The master device will eventually process a timeout condition.

The AC motor drive receives the messages without a communication error, but cannot handle them. An exception response will be returned to the master device and an error message "CExx" will be displayed on the keypad of AC motor drive. The xx of "CExx" is a decimal code equal to the exception code that is described below.

In the exception response, the most significant bit of the original command code is set to 1, and an exception code which explains the condition that caused the exception is returned.

Example of an exception response of command code 06H and exception code 02H:

ASCII mode:			
STX	·.'		
Address Low	'0'		
Address High	'1'		
Function Low	'8'		
Function High	'6'		
Exception code	'0'		
Exception code	'2'		
LRC CHK Low	'7'		
LRC CHK High	'7'		
END 1	CR		
END 0	LF		

RTU mode

Address	01H
Function	86H
Exception code	02H
CRC CHK Low	C3H
CRC CHK High	A1H

The explanation of exception codes:

Exception code	Explanation
01 Illegal function code: 01 The function code received in the command message is not available for the AC motor drive.	
02	Illegal data address: The data address received in the command message is not available for the AC motor drive.
03	Illegal data value: The data value received in the command message is not available for the AC drive.
04	Slave device failure: The AC motor drive is unable to perform the requested action.

Chapter 5 Parameters | VFD-B Series


Exception code	Explanation
10	Communication time-out: If Pr.09-03 is not equal to 0.0, Pr.09-02=00~02, and there is no communication on the bus during the Time Out detection period (set by Pr.09-03), "cE10" will be shown on the keypad.

3.7 Communication program of PC:


The following is a simple example of how to write a communication program for Modbus ASCII mode on a PC by C language. #include<stdio.h> #include<dos.h> #include<conio.h> #include<process.h> #define PORT 0x03F8 /* the address of COM1 */ /* the address offset value relative to COM1 */ #define THR 0x0000 #define RDR 0x0000 #define BRDL 0x0000 #define IER 0x0001 #define BRDH 0x0001 #define LCR 0x0003 #define MCR 0x0004 #define LSR 0x0005 #define MSR 0x0006 unsigned char rdat[60]; /* read 2 data from address 2102H of AC drive with address 1 */ unsigned char tdat[60]={':','0','1','0','3','2','1','0','2', '0','0','0','2','D','7','\r','\n'}; void main(){ int i: outportb(PORT+MCR,0x08); /* interrupt enable */ outportb(PORT+IER.0x01); /* interrupt as data in */ outportb(PORT+LCR,(inportb(PORT+LCR) | 0x80)); /* the BRDL/BRDH can be access as LCR.b7==1 */ outportb(PORT+BRDL,12); /* set baudrate=9600, 12=115200/9600*/ outportb(PORT+BRDH.0x00); /* set protocol, <7,N,2>=06H, <7,E,1>=1AH, <7,O,1>=0AH, outportb(PORT+LCR,0x06); <8,N,2>=07H, <8,E,1>=1BH, <8,O,1>=0BH */ for(i=0;i<=16;i++){

```
while(!(inportb(PORT+LSR) & 0x20)); /* wait until THR empty */
outportb(PORT+THR,tdat[i]); /* send data to THR */ }
i=0;
while(!kbhit()){
if(inportb(PORT+LSR) & 0x01){ /* b0==1, read data ready */
rdat[i++]=inportb(PORT+RDR); /* read data form RDR */
} }
```

09 - 05	Reserved
09 - 06	Reserved

 

 This parameter is the response delay time after AC drive receives communication command as shown in the following.



* This parameter is only for firmware version 4.01 and higher.

Chapter 5 Parameters | VFD-B Series Group 10: PID Control

10 - 00	Input Terminal for PID Feedback			
			Factory Setting: 00	
	Settings	00	Inhibit PID operation: external terminals AVI, ACI may be used for frequency command if required (Pr.02-00).	
		01	Negative PID feedback from external terminal AVI (0 ~ +10VDC).	
		02	Negative PID feedback from external terminal ACI (4 ~ 20mA).	
		03	Positive PID feedback from external terminal AVI (0 ~ +10VDC).	
		04	Positive PID feedback from external terminal ACI (4 ~ 20mA).	

- Note that the measured variable (feedback) controls the output frequency (Hz). Select input terminal accordingly. Make sure this parameter setting does not conflict with the setting for Pr.02-00 (Master Frequency).
- When Pr.02-00 is set to 01 or 02, the set point (Master Frequency) for PID control is obtained from the AVI/ACI external terminal (0 to +10V or 4-20mA) or from multi-step speed. When Pr.02-00 is set to 00, the set point is obtained from the keypad.
- Negative feedback means: +target value feedback

Positive feedback means: -target value + feedback.

10 - 01 Gain Over the PID Detection Value Un	it: 0.01
Settings 0.00 to 10.00 Factory Settin	g: 1.00

This is the gain adjustment over the feedback detection value. Refer to PID control block diagram in Pr.10-06 for detail.

10 - 02	✓ Proportio	onal Gain (P)	Unit: 0.01
	Settings	0.0 to 10.0	Factory Setting: 1.0

This parameter specifies proportional control and associated gain (P). If the other two gains (I and D) are set to zero, proportional control is the only one effective. With 10% deviation (error) and P=1, the output will be P x10% x Master Frequency.



The parameter can be set during operation for easy tuning.

		Chapter 5 Parameters VFD-B Series
10 - 03 × Integral	Gain(I)	Unit: 0.01
Settings	0.00 to 100.00 sec	Factory Setting: 1.00
	0.00 Disable	

This parameter specifies integral control (continual sum of the deviation) and associated gain

(I). When the integral gain is set to 1 and the deviation is fixed, the output is equal to the input (deviation) once the integral time setting is attained.

The parameter can be set during operation for easy tuning.

10 - 04	✓ Derivative	Control (D)	Unit: 0.01
	Settings	0.00 to 1.00 sec	Factory Setting: 0.00

This parameter specifies derivative control (rate of change of the input) and associated gain (D). With this parameter set to 1, the PID output is equal to differential time x (present deviation – previous deviation). It increases the response speed but it may cause overcompensation.


The parameter can be set during operation for easy tuning.

10 ·	05 Upper Bour	nd for Integral Control	Unit: 1	
	Settings	00 to 100 %	Factory Setting: 100	
ш	This parameter	defines an upper bound or limit for	the integral gain (I) and therefore limits the	
	Master Frequer	ncy.		
	The formula is:	Integral upper bound = Maximum C	utput Frequency (Pr.01-00) x (Pr.10-05).	
	This parameter can limit the Maximum Output Frequency.			

10 - 06 Primary De	elay Filter Time	Unit: 0.1
Settings	0.0 to 2.5 sec	Factory Setting: 0.0

To avoid amplification of measurement noise in the controller output, a derivative digital filter is inserted. This filter helps to dampen oscillations.

The complete PID diagram is shown on the following page:

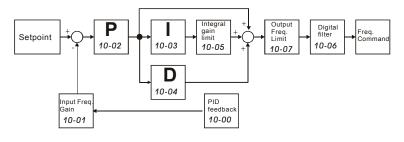

10 - 07	PID Output	Frequency Limit	Unit: 1
	Settings	00 to 110 %	Factory Setting: 100

This parameter defines the percentage of output frequency limit during the PID control. The formula is Output Frequency Limit = Maximum Output Frequency (Pr.01-00) X Pr.10-07 %. This parameter will limit the Maximum Output Frequency. An overall limit for the output frequency can be set in Pr.01-07.

10 - 08	Feedback	Signal Detection Time	Unit: 0.1
	Settings	0.0 to d 3600.0 sec	Factory Setting: 60.0

This parameter defines the time during which the PID feedback must be abnormal before a warning (see Pr.10-09) is given. It also can be modified according to the system feedback signal time.

If this parameter is set to 0.0, the system would not detect any abnormality signal.

10 - 09	09 ✓ Treatment of the Erroneous Feedback Signals (for PID and PG feedback error)			PG feedback error)
				Factory Setting: 00
	Settings	00	Warning and keep operating	
		01	Warning and RAMP to stop	
		02	Warning and COAST to stop	
m	motor driv	o option .	when the feedback signals (analog DID fee	dhaak ar DC (anadar)

AC motor drive action when the feedback signals (analog PID feedback or PG (encoder) feedback) are abnormal according to Pr.10-16.

10 - 16	Deviation Ra	inge of PID Feedback Signal Error	Unit: 0.01
	Settings	0.00~100.00%	Factory Setting: 100.00


Chapter 5 Parameters | VFD-B Series

The base is Pr.01-00. When in PID feedback control, if | Source of PID reference target feedback | > Pr.10-16 and exceeds Pr.10-08 detection time, the AC drive will operate according to Pr.10-09.

10	10 - 10 PG Pulse Range			Unit: 1
	Settings	1~4	0000 (Max=20000 for 2-pole motor)	Factory Setting: 600
	A Pulse Gener	ator (PC	B) or encoder is used as a sensor that p	rovides a feedback signal of the
	motor speed. T	his para	ameter defines the number of pulses for	each cycle of the PG control.
Ш	For PG or encoder feedback an option PG-card is needed.			
10	- 11 PG Input			
				Factory Setting: 00
	Settings	00	Disable PG	

00 Disable PG
01 Single phase
02 Forward / Counterclockwise rotation
03 Reverse / Clockwise rotation

□ The relationship between the motor rotation and PG input is illustrated below:

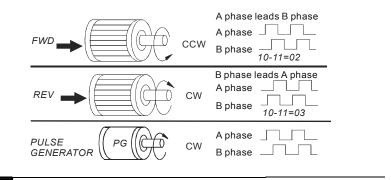

10 - 12 💉 ASR (A	Unit: 0.1	
Settings	0.0 to 10.0	Factory Setting: 1.0

This parameter specifies Proportional control and associated gain (P), and is used for speed control with PG (encoder) feedback.



The parameter can be set during operation for easy tuning.

10 - 13	🖌 ASR (Auto	Unit: 0.01	
	Settings	0.00 to 100.00	Factory Setting: 1.00
		0.00 disable	

This parameter specifies Integral control and associated gain (I), and is used for speed control with PG (encoder) feedback.



The parameter can be set during operation for easy tuning.


10	- 14 Speed Cor	trol Output Frequency Limit	Unit: 0.01
	Settings	0.00 to 100.00 Hz	Factory Setting: 10.00
~			

This parameter limits the amount of correction by the PI control on the output frequency when controlling speed via PG (encoder) feedback. It can limit the maximum output frequency.

	10 - 15 Sample time for refreshing the content of 210DH and 210EH		
S	ettings	0.01~1.00 seconds	Factory Setting: 0.10

When the signal source of feedback control is PG (encoder) and it needs to read the pulse numbers from communication, this parameter can be used to set the refresh time of two communication addresses (210D and 210E).

Speed Control Diagram

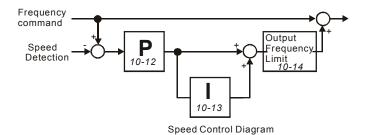


11 - 00 V/f Curv	00 V/f Curve Selection		
Factory Setting: 00		Factory Setting: 00	
Settings	00	V/f curve determined by Pr.01-00 to Pr.01-06.	
	01	1.5 power curve	
	02	1.7 power curve	
	03	Square curve	
	04	Cube curve	

Group 11: Fan and Pump Control Parameters

Confirm the load curve and select the proper V/f curve before use.

The available V/f curves are shown below:

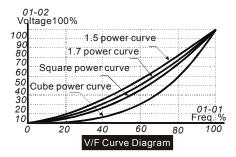

11 - 01	Start-up Free	quency of the Auxiliary Motor	Unit: 0.01
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00

This parameter serves as a reference for the startup value of the auxiliary motor. If the setting is 0, the auxiliary motor cannot be activated.

11 - 02 Stop F	requency of the Auxiliary Motor	Unit: 0.01
Setting	s 0.00 to 400.00 Hz	Factory Setting: 0.00

When the output frequency reaches this parameter value, the auxiliary motor will be stopped. There must be a minimum of 5 Hz difference between the start frequency and stop frequency of auxiliary motor. (Pr.11-01-Pr.11-02) > 5 Hz.

11 - 03 Time De	elay before Starting the Auxiliary Motor	Unit: 0.1
Settings	0.0 to 3600.0 sec	Factory Setting: 0.0

Chap	Chapter 5 Parameters VFD-B Series			
11	11 - 04 Time Delay before Stopping the Auxiliary Motor Unit: 0.1			
	Settings 0.0 to 3600.0 sec	Factory Setting: 0.0		
Ш	The number of Multi-function Output terminals set to 16, 17, 18 decides	the number of auxiliary		
	motors. The maximum is three.			
	The start/stop frequency of the auxiliary motor must have a minimum of	5Hz difference.		
	The start/stop delay time can prevent the AC motor drive from overload	ed during		
	starting/stopping.			

These parameters determine the starting sequence of auxiliary motors.

The auxiliary motor started first will be stopped first.


Example: Start sequence: motor 1 -> motor 2 -> motor 3

Stop sequence: motor 1 -> motor 2 -> motor 3

The flowchart of auxiliary motor start/stop sequence:


Pr.11-01 Start-up frequency = 50 Hz, Pr.11-02 Stop frequency = 20 Hz

Pr.11-03 Time delay before start up = 10 sec, Pr.11-04 Time delay before stopping = 5 sec

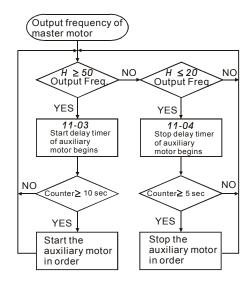

			Chapter 5 Parameters VFD-B Series
11 - 05	Sleep/Wake	Up Detection Time	Unit: 0.1
	Settings	0.0 to 6550.0 sec	Factory Setting: 0.0
11 - 06	Sleep Frequ	lency	Unit: 0.01
	Settings	0.00 to Fmax Hz	Factory Setting: 0.00
11 - 07	Wakeup Fre	equency	Unit: 0.01
	Settings	0.00 to Fmax Hz	Factory Setting: 0.00

- When the actual output frequency \leq Pr.11-06 and the time exceeds the setting of Pr.11-05, the AC motor drive will be in sleep mode.
- When the actual frequency command > Pr.11-07 and the time exceeds the setting of Pr.11-05, the AC motor drive will restart.
- When the AC motor drive is in sleep mode, frequency command is still calculated by PID.
 When frequency reaches wake up frequency, AC motor drive will accelerate from Pr.01-05 min.
 frequency by V/f curve.
- The wake up frequency must be higher than sleep frequency.

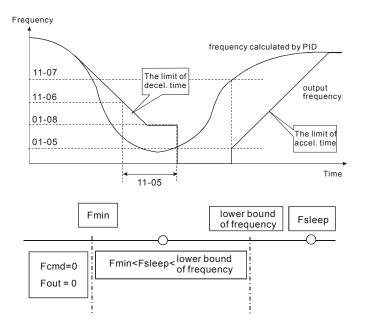

Chapter 5 Parameters | VFD-B Series

- \square When output frequency \leq sleep frequency and time > detection time, it will go into sleep mode.
- When min. output frequency ≤ PID frequency ≤ lower bound of frequency and sleep function is enabled (output frequency ≤ sleep frequency and time > detection time), frequency will be 0 (in sleep mode). If sleep function is disabled, frequency command = lower bound frequency.
- $\label{eq:When PID frequency < min. output frequency and sleep function is enabled (output frequency <math display="block">\leq \text{ sleep frequency and time > detection time), output frequency =0 (in sleep mode).}$

If output frequency \leq sleep frequency but time < detection time, frequency command = lower frequency. If sleep function is disabled, output frequency =0.

This page intentionally left blank.

Chapter 6 Fault Code Information

The AC motor drive has a comprehensive fault diagnostic system that includes several different alarms and fault messages. Once a fault is detected, the corresponding protective functions will be activated. The following faults are displayed as shown on the AC motor drive digital keypad display. The four most recent faults can be read from the digital keypad or communication.



Wait 5 seconds after a fault has been cleared before performing reset via keypad of input terminal.

	6.1	Common	Problems	and	Solutions
--	-----	--------	-----------------	-----	-----------

Fault Name	Fault Descriptions	Corrective Actions
oc	Over current Abnormal increase in current.	 Check if motor power corresponds with the AC motor drive output power. Check the wiring connections to U, V, W for possible short circuits. Check the wiring connections between the AC motor drive and motor for possible short circuits, also to ground.
occ	IGBT protection (Insulated Gate Bipolar Transistor)	 Check for loose contacts between AC motor drive and motor. Increase the Acceleration Time. Check for possible excessive loading conditions at the motor. If there are still any abnormal conditions when operating the AC motor drive after a short- circuit is removed and the other points above are checked, it should be sent back to manufacturer.
ou	Over voltage The DC bus voltage has exceeded its maximum allowable value.	 Check if the input voltage falls within the rated AC motor drive input voltage range. Check for possible voltage transients. DC-bus over-voltage may also be caused by motor regeneration. Either increase the Decel. Time or add an optional brake resistor (and brake unit). Check whether the required brake power is within the specified limits.

Fault Name	Fault Descriptions	Corrective Actions
οН	Overheating Heat sink temperature too high	 Ensure that the ambient temperature falls within the specified temperature range. Make sure that the ventilation holes are not obstructed. Remove any foreign objects from the heatsinks and check for possible dirty heat sink fins. Check the fan and clean it. Provide enough spacing for adequate ventilation. (See chapter 2)
٤٥	Low voltage The AC motor drive detects that the DC bus voltage has fallen below its minimum value.	 Check whether the input voltage falls within the AC motor drive rated input voltage range. Check for abnormal load in motor. Check for correct wiring of input power to R- S-T (for 3-phase models) without phase loss.
οί	Overload The AC motor drive detects excessive drive output current. NOTE: The AC motor drive can withstand up to 150% of the rated current for a maximum of 60 seconds.	 Check whether the motor is overloaded. Reduce torque compensation setting in Pr.7- 02. Use the next higher power AC motor drive model.
ol I	Overload 1 Internal electronic overload trip	 Check for possible motor overload. Check electronic thermal overload setting. Use a higher power motor. Reduce the current level so that the drive output current does not exceed the value set by the Motor Rated Current Pr.7-00.
530	Overload 2 Motor overload.	 Reduce the motor load. Adjust the over-torque detection setting to an appropriate setting (Pr.06-03 to Pr.06-05).
KPF, I	GFF hardware error	
HPF2	CC (current clamp)	Return to the factory.
HPF.3	OC hardware error	· · · · · · · · · · · · · · · · · · ·
HPF.4	OV hardware error	
cE-	Communication Error	 Check the RS485 connection between the AC motor drive and RS485 master for loose wires and wiring to correct pins. Check if the communication protocol, address, transmission speed, etc. are properly set. Use the correct checksum calculation. Please refer to group 9 in the chapter 5 for detail information.

Fault		Chapter 6 Fault Code Information VFD-B Series
Fault Name	Fault Descriptions	Corrective Actions
0CR	Over-current during acceleration	 Short-circuit at motor output: Check for possible poor insulation at the output lines. Torque boost too high: Decrease the torque compensation setting in Pr.7-02. Acceleration Time too short: Increase the Acceleration Time. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.
ocd	Over-current during deceleration	 Short-circuit at motor output: Check for possible poor insulation at the output line. Deceleration Time too short: Increase the Deceleration Time. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.
000	Over-current during constant speed operation	 Short-circuit at motor output: Check for possible poor insulation at the output line. Sudden increase in motor loading: Check for possible motor stall. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.
EF	External Fault	 Input EF (N.O.) on external terminal is closed to GND. Output U, V, W will be turned off. Give RESET command after fault has been cleared.
EF 1	Emergency stop	 When the multi-function input terminals MI1 to MI6 are set to emergency stop (setting 19 or 20), the AC motor drive stops output U, V, W and the motor coasts to stop. Press RESET after fault has been cleared.
د۶∶	Internal EEPROM can not be programmed.	Return to the factory.
cF2	Internal EEPROM can not be read.	Return to the factory.
cF33	U-phase error	
	V-phase error	
	W-phase error OV or LV	Return to the factory.
<u>cF36</u> cF3.7	Current sensor error	
cF3.8		1
EcodE	Software protection failure	Return to the factory.
PcodE	Password is locked.	Keypad will be locked. Turn the power ON after power OFF to re-enter the correct password. See Pr.00-07 and 00-08.
cF8	Auto accel/decel failure	 Check if the motor is suitable for operation by AC motor drive. Check if the regenerative energy is too large. Load may have changed suddenly.

Fault Name	Fault Descriptions	Corrective Actions	
GEE	Ground fault	 When (one of) the output terminal(s) is grounded, short circuit current is more than 50% of AC motor drive rated current, the AC motor drive power module may be damaged. NOTE: The short circuit protection is provided for AC motor drive protection, not for protection of the user. Check whether the IGBT power module is damaged. Check for possible poor insulation at the output line. 	
55	External Base Block. (Refer to Pr. 08-06)	 When the external input terminal (B.B) is active, the AC motor drive output will be turned off. Deactivate the external input terminal (B.B) to operate the AC motor drive again. 	
80660	Analog feedback error or ACI open circuit	 Check parameter settings and wiring of Analog feedback (Pr.10-00). Check for possible fault between system response time and the feedback signal detection time (Pr.10-08). 	
PGErr	PG feedback signal error	 Check parameter settings and signal type of PG feedback (Pr.10-10 and Pr.10-11). Check if the wiring of PG card is correct. 	
808	Auto Tuning Error	 Check cabling between drive and motor Check Pr.07-05 	
c8F	EF when preliminary count value attained	 Check counter trigger signal Check Pr.03-09, Pr.03-11setting 	
٤c	Under Current	1. Check Load current 2. Check Pr.06-12 to Pr.06-15 setting	
PHL	Phase Loss Check input phase wiring for loose contacts.		


6.2 Reset

There are three methods to reset the AC motor drive after solving the fault:


- 1. Press RESET key on PU01.
- 2. Set external terminal to "RESET" (set one of Pr.04-04~Pr.04-09 to 05) and then set to be ON.
- 3. Send "RESET" command by communication.




Make sure that RUN command or signal is OFF before executing RESET to prevent damage or personal injury due to immediate operation.

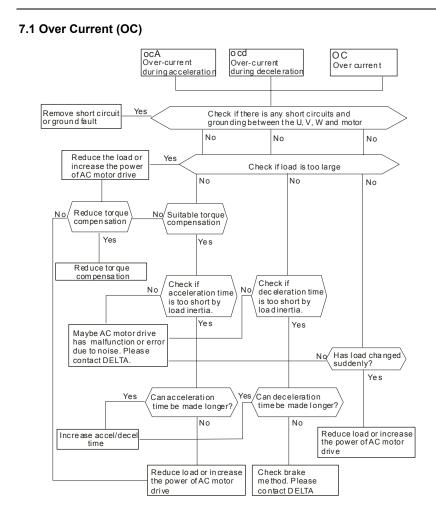


7.2 Ground Fault

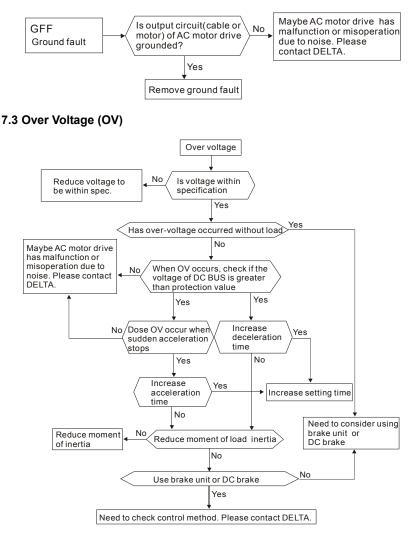


7.4 Low Voltage (Lv)

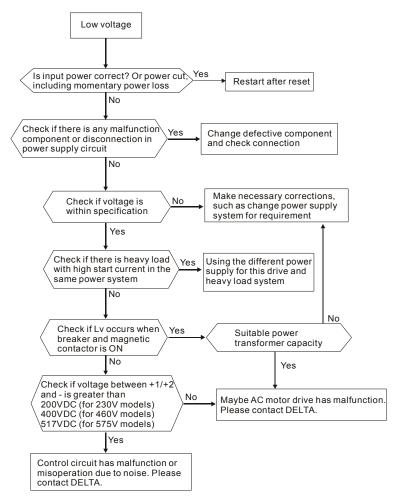


7.5 Over Heat (OH)

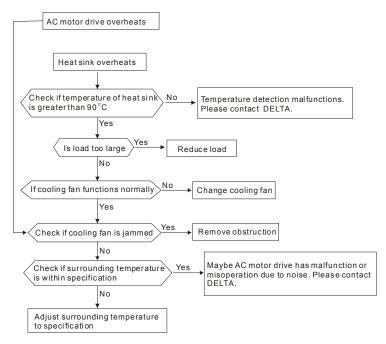


7.6 Overload

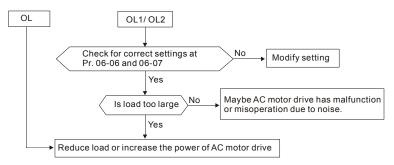

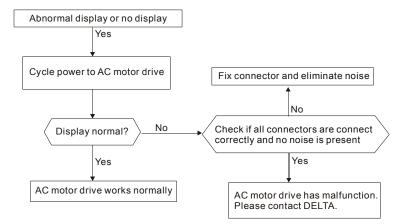


7.7 Display of PU01 is Abnormal


7.8 Phase Loss (PHL)

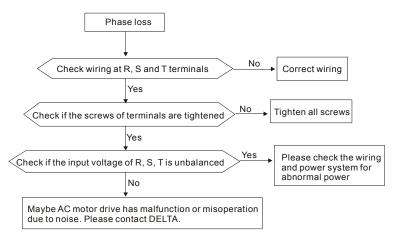


7.9 Motor cannot Run

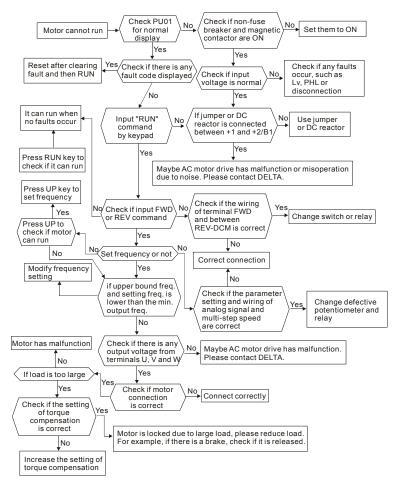


7.10 Motor Speed cannot be Changed

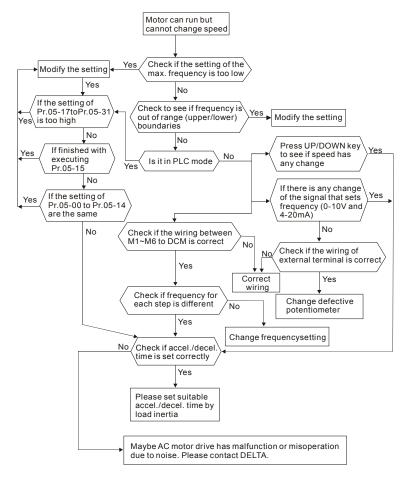

7.11 Motor Stalls during Acceleration

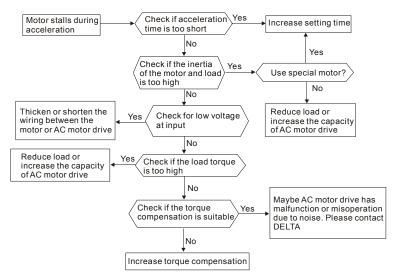

7.12 The Motor does not Run as Expected

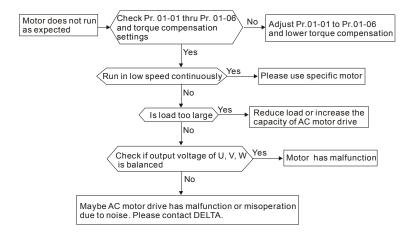

7.13 Electromagnetic/Induction Noise

There are many noises surround the AC motor drives and invade it by radiation or power circuit. It may cause the misoperation of control circuit and even damage the AC motor drive. Of course, that is a solution to increase the noise tolerance of AC motor drive. But it is not the best one due to the limit. Therefore, solve it from the outside as following will be the best.

- 1. Add surge suppressor on the relay or contact to suppress switching surge between ON/OFF.
- Shorten the wiring length of the control circuit or serial circuit and separate from the main AC circuit wiring.
- Comply with the wiring regulation for those shielded wire and use isolation amplifier for long wire length.
- The grounding terminal should comply with the local regulation and ground independently, i.e. not to have common ground with electric welding machine and power equipment.
- Connect a noise filter at the input terminal of the AC motor drive to prevent noise from power circuit.

In a word, three-level solutions for electromagnetic noise are "no product", "no spread" and "no receive".

7.14 Environmental Condition

Since the AC motor drive is an electronic device, you should comply with the environmental condition stated in the Chapter 2.1. The following steps should also be followed.

- To prevent vibration, anti-vibration spacer is the last choice. The vibration tolerance must be within the specification. The vibration effect is equal to the mechanical stress and it cannot occur frequently, continuously or repeatedly to prevent damaging to the AC motor drive.
- Store in a clean and dry location free from corrosive fumes/dust to prevent corrosion and poor contacts. It also may cause short by low insulation in a humid location. The solution is to use both paint and dust-proof. For particular occasion, use the enclosure with whole-seal structure.
- 3. The surrounding temperature should be within the specification. Too high or low temperature will affect the lifetime and reliability. For semiconductor components, damage will occur once any specification is out of range. Therefore, it is necessary to clean and periodical check for the air cleaner and cooling fan besides having cooler and sunshade. In additional, the microcomputer may not work in extreme low temperature and needs to have heater.
- Store within a relative humidity range of 0% to 90% and non-condensing environment. Do not turn off the air conditioner and have exsiccator for it.


7.15 Affecting Other Machines

AC motor drive may affect the operation of other machine due to many reasons. The solutions are as follows.

High Harmonic at Power Side

If there is high harmonic at power side during running, the improved methods are:

- 1. Separate power system: use transformer for AC motor drive.
- Use reactor at the power input terminal of AC motor drive or decrease high harmonic by multiple circuit.
- If phase lead capacitors are used (never on the AC motor drive output!!), use serial reactors to prevent capacitors damage from high harmonics.

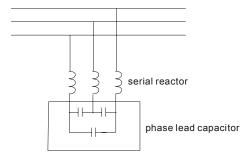

Motor Temperature Rises

When the motor is induction motor with ventilation-cooling-type used in variety speed operation, bad cooling will happen in the low speed. Therefore, it may overheat. Besides, high harmonic is in output waveform to increase copper loss and iron loss. Following measures should be used by load situation and operation range when necessary.

- 1. Use the motor with independent power ventilation or increase the horsepower.
- 2. Use inverter duty motor.
- 3. Do NOT run at low speeds for long time.

Chapter 8 Maintenance and Inspections

Modern AC motor drives are based on solid state electronics technology. Preventive maintenance is required to operate this AC motor drive in its optimal condition, and to ensure a long life. It is recommended to have a check-up of the AC motor drive performed by a qualified technician.

Daily Inspection:

Basic check-up items to detect if there were any abnormalities during operation are:

- 1. Whether the motors are operating as expected.
- 2. Whether the installation environment is abnormal.
- 3. Whether the cooling system is operating as expected.
- 4. Whether any irregular vibration or sound occurred during operation.
- 5. Whether the motors are overheating during operation.
- 6. Always check the input voltage of the AC drive with a Voltmeter.

Periodic Inspection:

Before the check-up, always turn off the AC input power and remove the cover. Wait at least 10 minutes after all display lamps have gone out, and then confirm that the capacitors have fully discharged by measuring the voltage between +1/+2 and -. The voltage between +1/+2 and - should be less than 25VDC.



- 1. Disconnect AC power before processing!
- Only qualified personnel can install, wire and maintain AC motor drives. Please take off any metal objects, such as watches and rings, before operation. And only insulated tools are allowed.
- 3. Never reassemble internal components or wiring.
- 4. Prevent electric shocks.

Ambient environment

Check Items		Maintenance Period		
	Methods and Criterion	Daily Half Year	One Year	
Check the ambient temperature, humidity, vibration and see if there is any dust, gas, oil or water drops	Visual inspection and measurement with equipment with standard specification	0		
Check for any dangerous objects near drive and motor	Visual inspection	0		

Voltage

Check Items			Maintenance Period		
	Methods and Criterion	Daily	Half Year	One Year	
Check if the voltage circuit and control of correct		Measure with multimeter with standard specification	0		

Keypad

Check Items			Maintenance Period		
	Methods and Criterion	Daily Half Year	Half Year	One Year	
Is the display clear for reading	Visual inspection	0			
Any missing characters	Visual inspection	0			

Mechanical parts

Check Items			Maintenance Period		
	Methods and Criterion	Daily	Daily Half Year	One Year	
If there is any abnormal sound or vibration	Visual and aural inspection		0		
If there are any loose screws	Tighten the screws		0		

Check Items			Maintenance Period		
	Methods and Criterion	Daily	Half Year	One Year	
Check parts for deformity or damaged	Visual inspection		0		
If there is any color change caused by overheating	Visual inspection		0		
Check for dust and dirt	Visual inspection		0		

Main circuit

Check Items		Maintenance Period		
	Methods and Criterion	Daily	Daily Half Year	One Year
If there are any loose or missing screws	Tighten or replace the screw		0	
If machine or insulator is deformed, cracked, damaged or with color change due to overheating or ageing	Visual inspection NOTE: Please ignore the color change of copper plate		0	
Check for dust and dirt	Visual inspection		0	

Terminals and wiring of main circuit

Check Items	Methods and Criterion		Maintenance Period		
	methods and Criterion	Daily	Half Year	One Year	
If the wiring is color change or deformation due to overheat	Visual inspection		0		
If the insulator of wiring is damaged or color change	Visual inspection		0		
If there is any damage	Visual inspection		0		

DC capacity of main circuit

		Maintenance Period					
Check Items	Methods and Criterion	Daily	Half Year	One Year			
If there is any leak of liquid, color change, crack or deformation	Visual inspection	0					
Measure static capacity when required	Static capacity \geq initial value X 0.85		0				

Resistor of main circuit

		Maintenance Period				
Check Items	Methods and Criterion	Daily	Half Year	One Year		
If there is any peculiar smell or insulator cracks due to overheat	Visual inspection, smell		0			
If there is any disconnection	Visual inspection or measure with multimeter after removing wiring between +1/+2 ~ -		0			
	Resistor value should be within \pm 10%					

Transformer and reactor of main circuit

		Maintenance Period				
Check Items	Methods and Criterion	Daily	Half Year	One Year		
If there is any abnormal vibration or peculiar smell	Visual, aural inspection and smell		0			

Magnetic contactor and relay of main circuit

		Maintenance Period				
Check Items	Methods and Criterion	Daily	Half Year	One Year		
If there are any loose screws	Visual and aural inspection	0				
Check to see if contacts work correctly	Visual inspection	0				

Printed circuit board and connector of main circuit

		Maintenance Period					
Check Items	Methods and Criterion	Daily	Half Year	One Year			
If there are any loose screws and connectors	Tighten the screws and press the connectors firmly in place.		0				
If there is any peculiar smell and color change	Visual inspection		0				
If there is any crack, damage, deformation or corrosion	Visual inspection		0				
If there is any liquid is leaked or deformation in capacity	Visual inspection		0				

Cooling fan of cooling system

		Maintenance Period					
Check Items	Methods and Criterion	Daily	Half Year	One Year			
If there is any abnormal sound or vibration	Visual, aural inspection and turn the fan with hand (turn off the power before operation) to see if it rotates smoothly			0			
If there is any loose screw	Tighten the screw			0			
If there is any color change due to overheat	Change fan			0			

Ventilation channel of cooling system

		Maintenance Period				
Check Items	Methods and Criterion	Daily	Half Year	One Year		
If there is any obstruction in the heat sink, air intake or air outlet	Visual inspection	0				

Chapter 8 Maintenance and Inspections | VFD-B Series

This page intentionally left blank.

	Voltage Class	230V Class											
	Model Number VFD-XXXB	007	015	022	037	055	075	110	150	185	220	300	370
Ma (k\	ax. Applicable Motor Output V)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37
Ma	ax. Applicable Motor Output (hp)	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50
b	Rated Output Capacity (kVA)	1.9	2.5	4.2	6.5	9.5	12.5	18.3	24.7	28.6	34.3	45.7	55.0
ating	Rated Output Current (A)	5.0	7.0	11	17	25	33	49	65	75	90	120	145
Output R	Maximum Output Voltage (V)				3-Ph	ase Pro	oportior	nal to Ir	nput Vo	ltage			
utpi	Output Frequency (Hz)	0.1~400 Hz											
ō	Carrier Frequency (kHz)	1-15 1-9											
	Rated Input Current (A)	Sing	gle/3-ph	nase				3	3-phase	9			
		11.9/ 5.7	15.3/ 7.6	22/ 15.5	20.6	26	34	50	60	75	90	110	142
t Rating	Input Current for 1-phase models when using 3-phase power	7.0	9.4	14.0				•		•	•		•
Input	Rated Voltage/Frequency	20	gle/3-ph)0-240 50/60H;	V,	3-phase 200-240V, 50/60Hz								
	Voltage Tolerance						<u>+</u> 10%	%(180~	264 V)				
	Frequency Tolerance						<u>+</u> 5%	%(47~6	3 Hz)				
	ooling Method	Natural						n Cool					_
N	'eight (kg)	2.7	3.2	4.5	6.8	8	10	13	13	13	13	36	36

	Voltage Class	460V Class														
	Model Number VFD-XXXB	007	015	022	037	055	075	110	150	185	220	300	370	450	550	750
I	Max. Applicable Motor Output (kW)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Ma	x. Applicable Motor Output (hp)	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
б	Rated Output Capacity (kVA)	2.3	3.2	4.2	6.5	9.9	13.7	18.3	24.4	28.9	34.3	45.7	55.6	69.3	84	114
Rating	Rated Output Current (A)	2.7	4.2	5.5	8.5	13	18	24	32	38	45	60	73	91	110	150
ut R	Maximum Output Voltage (V)	3-phase Proportional to Input Voltage														
utput	Output Frequency (Hz)	0.1~400 Hz														
ō	Carrier Frequency (kHz)		1-15 1-9										1	-6		
	Rated Input Current (A)		3-phase													
Rating	Rated Input Current (A)	3.2	4.3	5.9	11.2	14	19	25	32	39	49	60	63	90	130	160
Ra	Rated Voltage						3-	ohase	380	to 480	V					
nput	Voltage Tolerance							<u>+</u> 1	0%(3	42~5	28 V)					
-	Frequency Tolerance							±	5%(4	7~63	Hz)					
Co	ooling Method	Natural Fan Cooled														
W	eight (kg)	2.7	3.2	4.5	6.8	8	10	13	13	13	13	36	36	36	50	50

	Voltage Class	575V Class														
	Model Number VFD-XXXB	007	015	022	037	055	075	110	150	185	220	300	370	450	550	750
N	lax. Applicable Motor Output (kW)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Ma	x. Applicable Motor Output (hp)	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
б	Rated Output Capacity (kVA)	1.7	3.5	4.5	7.5	10	13.4	18.9	21.9	26.9	33.9	40.8	51.8	61.7	79.7	99.6
Output Rating	Rated Output Current (A)	1.7	3.5	4.5	7.5	10	13.5	19	22	27	34	41	52	62	80	100
ut R	Maximum Output Voltage (V)		3-phase Proportional to Input Voltage													
Outp	Output Frequency (Hz)	0.1~400 Hz														
0	Carrier Frequency (kHz)				1-10						1.	-8			1	-6
	Rated Input Current (A)							3	-phas	е			_	_	_	
ting	nated input ourient (rt)	1.2	3.1	4.0	8.3	10.3	13.8	18.2	22	27.7	32	41	52	62	74	91
t Ra	Rated Voltage						3-1	phase	500 1	to 600	V					
nput Rating	Voltage Tolerance						-15%	5 ~ +1	0% (4	25~6	60V)					
-	Frequency Tolerance							± 5%	o (47~	63Hz)					
Со	oling Method	Nat	Natural Fan Cooled													
We	eight (kg)	2.7	3.2	4.5	6.8	8	10	13	13	13	13	36	36	36	50	50

			General Specifications							
	Control Syste	em	SPWM(Sinusoidal Pulse Width Modulation) control (V/f or sensorless vector control)							
	Frequency S Resolution	etting	0.01Hz							
	Output Frequ	ency Resolution	0.01Hz							
Characteristics	Torque Char	acteristics	Including the auto-torque, auto-slip compensation; starting torque can be 150% at 1.0Hz							
acte	Overload En	durance	150% of rated current for 1 minute							
char	Skip Frequer	псу	Three zones, settings range 0.1-400Hz							
	Accel/Decel	Time	0.1 to 3600 seconds (4 Independent settings for Accel/Decel time)							
Control	Stall Prevention Level 20 to 250%, setting of rated current									
0	O DC Brake		Operation frequency 0.1-400.0Hz output 0-100% rated current							
	Regenerated	Brake Torque	Approx. 20%(up to 125% possible with option brake resistor or brake unit externally mounted, 1-15HP brake chopper built-in)							
	V/f Pattern		Adjustable V/f pattern, 1.5 power curve, 1.7 power curve, square and cube curve							
6	Frequency	Keypad	Setting by 🔺 💌							
Characteristics	Setting	External Signal	Potentiometer-5k Ω /0.5W, 0 to +10VDC; -10 to +10VDC, 4 to 20mA RS-485 interface; Multi-Function Inputs 1 to 6 (15 steps, Jog, up/down)							
Irac	Operation	Keypad	Set by RUN, STOP and JOG							
ng Che	Setting Signal	External Signal	2 wires/3 wires (Fwd, Rev, EF), JOG operation, RS-485 serial interface (MODBUS), process logic control							
Operati	Multi-Function Input Signal		Multi-step selection 0 to 15, Jog, accel/decel inhibit, first to forth accel/decel switches, counter, PLC operation, external Base Block (NC, NO), auxiliary m control is invalid, ACI/AVI/AUI selections, driver reset, UP/DOWN key setting sink/source selection and reel diameter initialization							

1		General Specifications					
	Multi-Function Output Indication	AC drive operating, frequency attained, non-zero, Base Block, fault indication, local/remote indication, PLC operation indication, auxiliary motor output, driver is ready, overheat alarm, emergency stop and signal loss alarm					
	Analog Output Signal	Output frequency/current/voltage/frequency command/speed/factor					
-	Alarm Output Contact	Contact will be On when it malfunctions (1 Form C contact or 3 open collector outputs)					
	Operation Functions	AVR, accel/decel S-Curve, over-voltage/over-current stall prevention, fault records, reverse inhibition, momentary power loss restart, DC brake, auto torque/slip compensation, auto tuning, adjustable carrier frequency, output frequency limits, parameter lock/reset, vector control, counter, PG feedback control, PID control, fan & pump control, external counter, PLC, MODBUS communication, abnormal reset, abnormal re-start, power-saving, sleep/revival function, digital frequency output, fan control, sleep/wake frequency, master/auxiliary frequency, ta/2nd frequency source selections					
	Protection Functions	Over voltage, over current, under voltage, under current, external fault, overload, ground fault, overheating, electronic thermal, IGBT short circuit					
	Display Keypads	8-key, 7-segment LED with 5-digit, 8 status LEDs, master frequency, output frequency, output current, custom units, parameter values for setup and lock, faults, RUN, STOP, RESET, FWD/REV, JOG					
	Enclosure Rating	IP20					
ions	Pollution Degree	2					
ndit	Installation Location	Altitude 1,000 m or lower, keep from corrosive gasses, liquid and dust					
al Co	Ambient Temperature	-10°C to 40°C Non-Condensing and not frozen					
Enviromental Conditions	Storage/ Transportation Temperature	-20 °C to 60 °C					
Invii	Ambient Humidity	Below 90% RH (non-condensing)					
	Vibration	9.80665m/s^2 (1G) less than 20Hz, 5.88m/s^2 (0.6G) at 20 to 50Hz					
Арр	provals						

Appendix A Specifications | VFD-B Series

This page intentionally left blank.

B.1 All Brake Resistors & Brake Units Used in AC Motor Drives

Note: Please only use DELTA resistors and recommended values. Other resistors and values will void Delta's warranty. Please contact your nearest Delta representative for use of special resistors. For instance, in 460V series, 100hp/75kW, the AC motor drive needs 2 brake units with total of 16 brake resistors, so each brake unit uses 8 brake resistors. The brake unit should be at least 10 cm away from AC motor drive to avoid possible interference. Refer to the "Brake Unit Module User Manual" for further details.

Voltage		icable	Full	Resistor	Brake Unit Part No. and Quantity		Brake Resistors Part No. and Quantity		Brake	Min. Equivalent
taç	M	otor	Load	value spec					Torque	Resistor Value
N	hp	kW	Torque	for each AC					10%ED	for each AC
-	•		Nm	Motor Drive		,				Motor Drive
	1	0.75	0.427	80W 200 Ω			BR080W200	1	125	82 Ω
	2	1.5	0.849	300W 100 Ω			BR300W100	1	125	82 Ω
	3	2.2	1.262	300W 100 Ω			BR300W100	1	125	82 Ω
~	5	3.7	2.080	400W 40 Ω			BR400W040	1	125	33 Ω
Series	7.5	5.5	3.111	500W 30 Ω			BR500W030	1	125	30 Ω
Se	10	7.5	4.148	1000W 20 Ω			BR1K0W020	1	125	20 Ω
230V	15	11	6.186	2400W 13.6 Ω			BR1K2W6P8	2	125	13.6 Ω
23	20	15	8.248	3000W 10 Ω	2015	1	BR1K5W005	2	125	10 Ω
	25	18.5	10.281	4800W 8 Ω	2022	1	BR1K2W008	4	125	8Ω
	30	22	12.338	4800W 6.8 Ω	2022	1	BR1K2W6P8	4	125	6.8 Ω
	40	30	16.497	6000W 5 Ω	2015	2	BR1K5W005	4	125	5Ω
	50	37	20.6	9600W 4Ω	2015	2	BR1K2W008	8	125	4Ω
	1	0.75	0.427	80W 750 Ω			BR080W750	1	125	160 Ω
	2	1.5	0.849	300W 400 Ω			BR300W400	1	125	160 Ω
	3	2.2	1.262	300W 250 Ω			BR300W250	1	125	160 Ω
	5	3.7	2.080	400W 150 Ω			BR400W150	1	125	130 Ω
	7.5	5.5	3.111	500W 100 Ω			BR500W100	1	125	91 Ω
ŝ	10	7.5	4.148	1000W 75 Ω			BR1K0W075	1	125	62 Ω
Series	15	11	6.186	1000W 50 Ω			BR1K0W050	1	125	39 Ω
s,	20	15	8.248	1500W 40 Ω	4030	1	BR1K5W040	1	125	40 Ω
460V	25	18.5	10.281	4800W 32 Ω	4030	1	BR1K2W008	4	125	32 Ω
4	30	22	12.338	4800W 27.2 Ω	4030	1	BR1K2W6P8	4	125	27.2 Ω
1	40	30	16.497	6000W 20 Ω	4030	1	BR1K5W005	4	125	20 Ω
1	50	37	20.6	9600W 16 Ω	4045	1	BR1K2W008	8	125	16 Ω
	60	45	24.745	9600W 13.6Ω	4045	1	BR1K2W6P8	8	125	13.6 Ω
1	75	55	31.11	12000W 10 Ω	4030	2	BR1K5W005	8	125	10 Ω
	100	75	42.7	19200W 6.8 Ω	4045	2	BR1K2W6P8	16	125	6.8 Ω


App	Appendix B Accessories		VFD-B Series							
Voltage		icable otor kW	Full Load Torque Nm	Resistor value spec for each AC Motor Drive	Brake Unit Part No. and Quantity		Brake Resistors Part No. and Quantity		Brake Torque 10%ED	Min. Equivalent Resistor Value for each AC Motor Drive
	1	0.75	0.427	300W 400 Ω			BR300W400	1	125	200 Ω
	2	1.5	0.849	300W 250 Ω			BR300W250	1	125	200 Ω
	3	2.2	1.262	400W 150 Ω			BR400W150	1	125	130 Ω
	5	3.7	2.080	400W 150 Ω			BR400W150	1	125	130 Ω
	7.5	5.5	3.111	500W 100 Ω			BR500W100	1	125	82 Ω
	10	7.5	4.148	500W 100 Ω			BR500W100	1	125	82 Ω
Series	15	11	6.186	500W 100 Ω			BR500W100	1	125	82 Ω
	20	15	8.248	3000W 60 Ω	5055	1	BR1K0W020	3	125	60 Ω
75V	25	18.5	10.281	4000W 50 Ω	5055	1	BR1K0W050	4	125	50 Ω
57!	30	22	12.338	6000W 40 Ω	5055	1	BR1K2W008	5	125	40 Ω
	40	30	16.497	6000W 34 Ω	5055	1	BR1K2W6P8	5	125	34 Ω
	50	37	20.6	7500W 25 Ω	5055	1	BR1K5W005	5	125	25 Ω
	60	45	24.745	12000W 20 Ω	5055	1	BR1K2W008	10	125	20 Ω
	75	55	31.11	12000W 17 Ω	5055	1	BR1K2W6P8	10	125	17 Ω
	100	75	42.7	15000W 12.5 Ω	5055	2	BR1K5W005	10	125	12.5 Ω

Appendix B Accessories VFD-B Series


- 1. Please select the factory setting resistance value (Watt) and the duty-cycle value (ED%).
- If damage to the drive or other equipment are due to the fact that the brake resistors and the brake modules in use are not provided by Delta, the warranty will be void.
- 3. Take into consideration the safety of the environment when installing the brake resistors.
- If the minimum resistance value is to be utilized, consult local dealers for the calculation of the Watt figures.
- Please select thermal relay trip contact to prevent resistor over load. Use the contact to switch power off to the AC motor drive!
- 6. When using more than 2 brake units, equivalent resistor value of parallel brake unit can't be less than the value in the column "Minimum Equivalent Resistor Value for Each AC Drive" (the right-most column in the table). An example of 575V 100HP, the min. equivalent resistor value for each AC motor drive is 12.5Ω with 2 brake units connection. Therefore, the equivalent resistor value for each brake unit should be 25Ω.
- Please read the wiring information in the user manual of brake unit thoroughly prior to taking into operation.

8. Definition for Brake Usage ED%

 Explanation: The definition of the barking usage ED(%) is for assurance of enough time for the brake unit and brake resistor to dissipate away heat generated by braking. When the brake resistor heats up, the resistance would increase with temperature, and brake torque would decrease accordingly. Suggest cycle time is one minute



9. For safety reasons, install a thermal overload relay between brake unit and brake resistor. Together with the magnetic contactor (MC) in the mains supply circuit to the drive it offers protection in case of any malfunctioning. The purpose of installing the thermal overload relay is to protect the brake resistor against damage due to frequent brake or in case the brake unit is continuously on due to unusual high input voltage. Under these circumstances the thermal overload relay switches off the power to the drive. Never let the thermal overload relay switch off only the brake resistor as this will cause serious damage to the AC Motor Drive. NFB

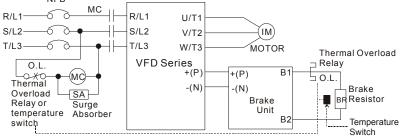


Note1: When using the AC drive with DC reactor, please refer to wiring diagram in the AC drive user manual for the wiring of terminal +(P) of Brake unit.

Note2: Do NOT wire terminal -(N) to the neutral point of power system.

Appendix B Accessories | VFD-B Series B.1.1 Dimensions and Weights for Brake Resistors

(Dimensions are in millimeter)


Order P/N: BR080W200, BR080W750, BR300W070, BR300W100, BR300W250, BR300W400, BR400W150, BR400W040

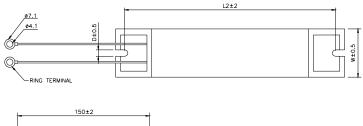




Model no.	L1	L2	Н	D	W	Max. Weight (g)
BR080W200	140	405	20	F 0	<u> </u>	400
BR080W750	140	125	20	5.3	60	160
BR300W070						
BR300W100	045	200	20	F 0	<u></u>	750
BR300W250	215	200	30	5.3	60	750
BR300W400						
BR400W150	005	050	20	F 0	<u></u>	000
BR400W040	265	250	30	5.3	60	930

Order P/N: BR500W030, BR500W100, BR1KW020, BR1KW075

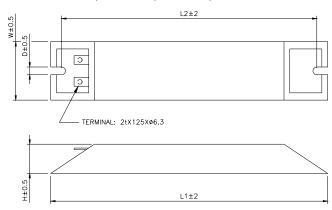

Model no.	L1	L2	Н	D	W	Max. Weight (g)
BR500W030	335	320	30	5.3	60	1100
BR500W100 BR1KW020						
BR1KW075	400	385	50	5.3	100	2800

Order P/N: BR1K0W050, BR1K2W008, BR1K2W6P8, BR1K5W005, BR1K5W040

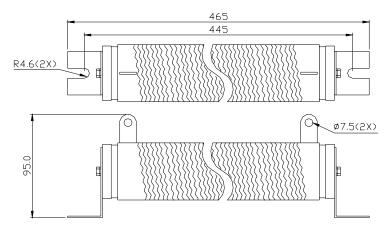


B.1.2 Specifications for Brake Unit

		230V	Series		460V Se	eries	575V Series	
		2015	2022	4030	4045	4132	5055	
	Max. Motor Power (kW)	15	22	30	45	132	55	
ing	Max. Peak Discharge Current (A) 10%ED	40	60	40	60	240	60	
Output Rating	Continuous Discharge Current (A)	15	20	15	18	75	20	
Outpr	Brake Start-up Voltage (DC)	330/345/360/380 /400/415±3V		660/690 0/800/8		618/642/667 /690/725/75 0±6V	950±8V	
Input Rating	DC Voltage	200~400VDC			400~800	IVDC	607~ 1000VD C	
ы	Heat Sink Overheat	Temperature over +95°C (203 °F)						
Protection	Alarm Output	Relay contact 5A 120VAC/28VDC (RA, RB, RC)						
Pro	Power Charge Display	Blackout until bus (+~-) voltage is below 50VDC						
t	Installation Location	Indoor (no corrosive gases, metallic dust)						
Environment	Operating Temperature	-10°C ~ +50°C (14°F to 122°F)						
nn	Storage Temperature	-20°C ~ +60°C (-4°F to 140°F)						
virc	Humidity	90% Non-condensing						
En	Vibration	9.8m/s ² (1G) under 20Hz 2m/s ² (0.2G) at 20~50Hz						
W	all-mounted Enclosed Type			IP50		IP10	IP50	

B.1.3 Dimensions for Brake Unit

(Dimensions are in millimeter[inch])

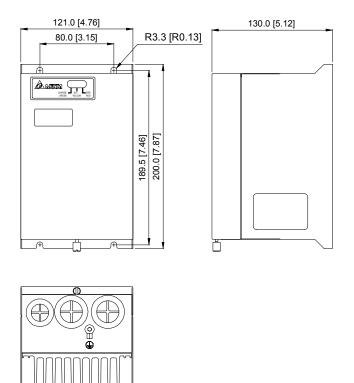

B.2 AMD - EMI Filter Cross Reference

AC Drives	Model Number	FootPrint
VFD007B21A, VFD015B21A	RF015B21AA	Y
VFD022B21A	RF022B21BA	Y
VFD007B43A, VFD015B43A, VFD022B43B	RF022B43AA	Y
VFD037B43A	RF037B43BA	Y
VFD055B43A, VFD075B43A, VFD110B43A	RF110B43CA	Y
VFD007B23A, VFD015B23A	10TDT1W4C	N
VFD022B23A, VFD037B23A	26TDT1W4C	N
VFD055B23A, VFD075B23A, VFD150B43A, VFD185B43A	50TDS4W4C	Ν
VFD110B23A, VFD150B23A, VFD220B43A, VFD300B43A, VFD370B43A	100TDS84C	Ν
VFD550B43C, VFD750B43C	200TDDS84C	Ν
VFD185B23A, VFD220B23A, VFD300B23A, VFD450B43A	150TDS84C	Ν
VFD370B23A	180TDS84C	Ν
VFD022B23B	20TDT1W4D	Ν
VFD022B21B	35DRT1W3C	Ν
VFD037B43B, VFD037B23B	26TDT1W4B4	Ν

Installation

All electrical equipment, including AC motor drives, will generate high-frequency/low-frequency noise and will interfere with peripheral equipment by radiation or conduction when in operation. By using an EMI filter with correct installation, much of the interference can be eliminated. It is recommended to use DELTA EMI filter to have the best interference elimination performance.

We assure that it can comply with following rules when AC motor drive and EMI filter are installed and wired according to user manual:

- EN61000-6-4
- EN61800-3: 1996 + A11: 2000
- EN55011 (1991) Class A Group 1 (1st Environment, restricted distribution)

General precaution


- 1. EMI filter and AC motor drive should be installed on the same metal plate.
- Please install AC motor drive on same footprint with EMI filter or install EMI filter as close as possible to the AC motor drive.
- 3. All wiring should be as short as possible.
- 4. Metal plate should be grounded.
- The cover of EMI filter and AC motor drive or grounding should be fixed on the metal plate and the contact area should be as large as possible.

Choose suitable motor cable and precautions

Improper installation and choice of motor cable will affect the performance of EMI filter. Be sure to observe the following precautions when selecting motor cable.

- 1. Use the cable with shielding (double shielding is the best).
- The shielding on both ends of the motor cable should be grounded with the minimum length and maximum contact area.
- 3. Remove any paint on metal saddle for good ground contact with the plate and shielding.

Remove any paint on metal saddle for good ground contact with the plate and shielding.

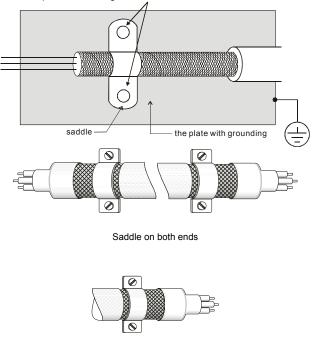

Saddle on one end

The length of motor cable

When motor is driven by an AC motor drive of PWM type, the motor terminals will experience surge voltages easily due to components conversion of AC motor drive and cable capacitance. When the motor cable is very long (especially for the 460V series), surge voltages may reduce insulation quality. To prevent this situation, please follow the rules below:

- Use a motor with enhanced insulation.
- Connect an output reactor (optional) to the output terminals of the AC motor drive
- The length of the cable between AC motor drive and motor should be as short as possible (10 to 20 m or less)
- For models 7.5hp/5.5kW and above:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	66 ft (20m)	328 ft (100m)	1312 ft (400m)
230VAC input voltage	1312 ft (400m)	1312 ft (400m)	1312 ft (400m)

For models 5hp/3.7kW and less:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	66 ft (20m)	165 ft (50m)	165 ft (50m)
230VAC input voltage	328 ft (100m)	328 ft (100m)	328 ft (100m)

When a thermal O/L relay protected by motor is used between AC motor drive and motor, it may malfunction (especially for 460V series), even if the length of motor cable is only 165 ft (50m) or less. To prevent it, please use AC reactor and/or lower the carrier frequency (Pr. 02-03 PWM carrier frequency).



Never connect phase lead capacitors or surge absorbers to the output terminals of the AC motor drive.


- If the length is too long, the stray capacitance between cables will increase and may cause leakage current. It will activate the protection of over current, increase leakage current or not insure the correction of current display. The worst case is that AC motor drive may be damaged.
- If more than one motor is connected to the AC motor drive, the total wiring length is the sum of the wiring length from AC motor drive to each motor.

B.2.1 Dimensions


Dimensions are in millimeter and (inch)

Order P/N: RF015B21AA / RF022B43AA




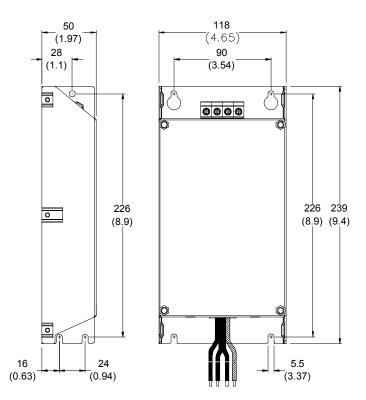


Order P/N: RF022B21BA / RF037B43BA

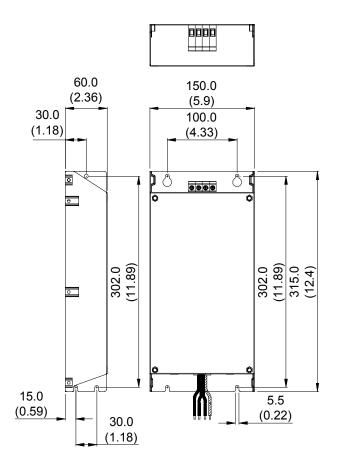


Appendix B Accessories | VFD-B Series Order P/N: RF110B43CA

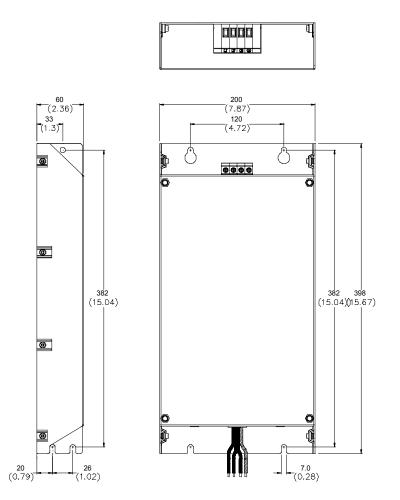


Order P/N: 10TDT1W4C

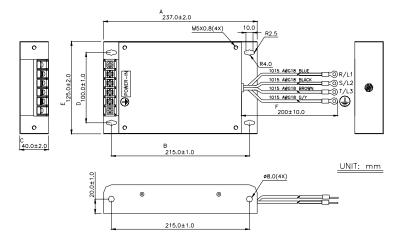


Order P/N: 26TDT1W4C

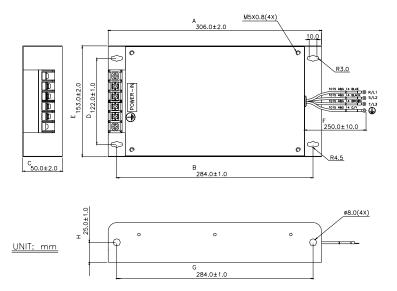


Order P/N: 50TDS4W4C

 

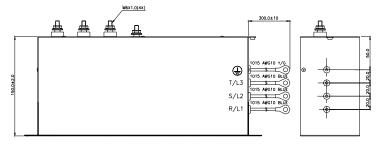


Order P/N: 100TDS84C

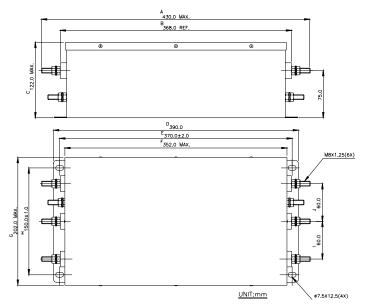


Revision July 2008, BE16, SW V4.08 & V5.00

Order P/N: 200TDDS84C

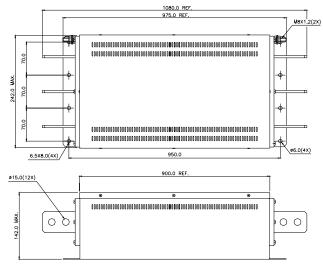


Order P/N: 150TDS84C

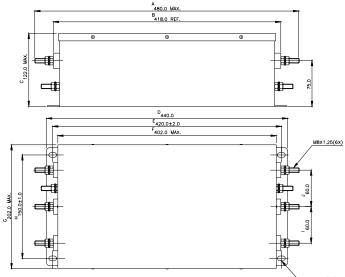


@7.5X12.5(4X)


Order P/N: 180TDS84C

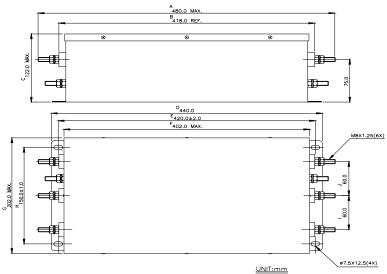

Order P/N: 20TDT1W4D

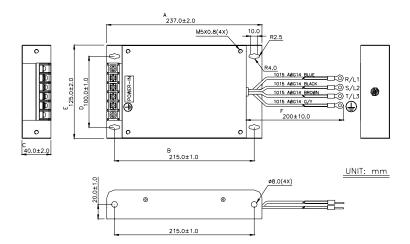

Order P/N: 26TDT1W4B4

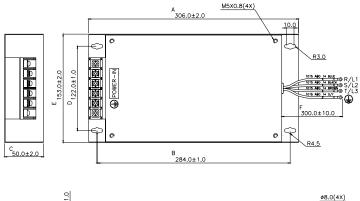




B.3 PG Card (for Encoder)


(Refer to Pr.10-10 to 10-15 of related parameter settings)

B.3.1 PG02 Installation


1. 1-2hp (0.75-1.5kW)

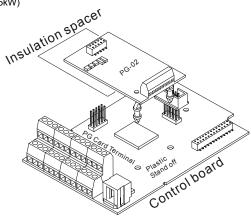

2. 3-5hp (2.2-3.7kW)

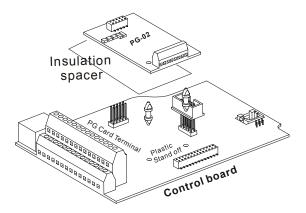


3. 7.5hp (5.5kW) and above

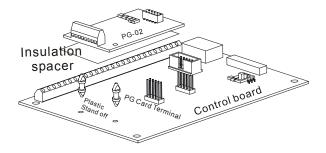


B.3.1.1 PG Card and Pulse Generator (Encoder)

1. Basic Wiring Diagram

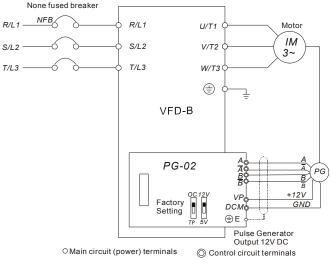


PG-02 and Pulse Generator Connections

2. Basic Wiring Diagram with RPM Meter Attached.

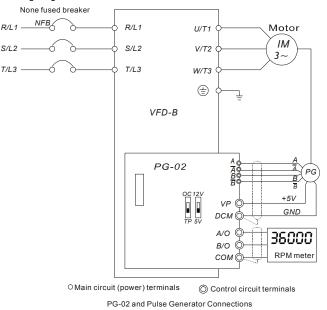

3. When Pulse Generator (Encoder) is Open Collector type, please refer to following wiring.

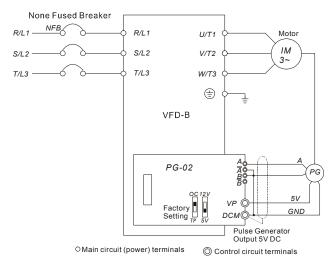

Revision July 2008, BE16, SW V4.08 & V5.00

B.3.1.2 PG-02 Terminal Descriptions

1. Terminals

Terminal Symbols	Descriptions
VP	Power source of PG-02 (FSW1 can be switched to 12V or 5V) Output Voltage: (+12VDC \pm 5% 200mA) or (+5VDC \pm 2% 400mA)
DCM	Power source (VP) and input signal (A, B) common
д-74, _{В-} В	Input signal from Pulse Generator. Input type is selected by FSW2. It can be 1-phase or 2-phase input. Maximum 500kP/sec (z-phase function is reserved). If the voltage exceeds 12V, it needs to use TP type with connecting the external current limiting resistor(R). The current should be within 5 to 15mA. The formal of current limiting resistor is: $5mA \leq \frac{Vin - 2V}{480\Omega + R} \leq 15mA$
A/O, B/O	PG-02 output signal for use with RPM Meter. (Open Collector) Maximum DC24V 100mA
СОМ	PG-02 output signal (A/O, B/O) common.

2. Wiring Notes

The control, power supply and motor leads must be laid separately. They must not be fed through the same cable conduit / trunk.

a. Please use a shielded cable to prevent interference. Do not run control wires


parallel to any high voltage AC power line (220 V and above).

- b. Connect shielded wire to DCM $\stackrel{(1)}{\equiv}$ only.
- c. Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).


Types of Pulse Generators	Maximum Wire Length	Wire Gauge	
Output Voltage	50m		
Open Collector	50m	1.25mm ² (AWG16) or above	
Line Driver	300m		
Complementary	70m		

d. Wire length:

3. Control Terminals Block Designations.

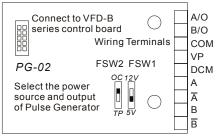


4. Types of Pulse Generators (Encoders)

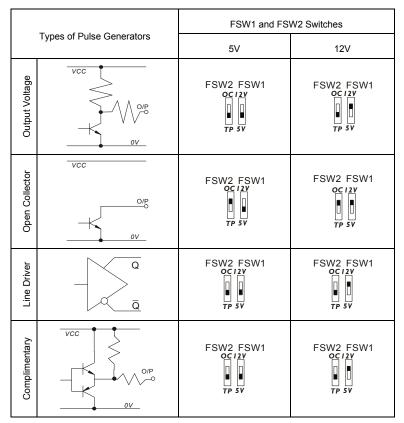


B.3.2 PG03

B.3.2.1 Installation

1. 1~3HP (0.75kW~2.2kW)

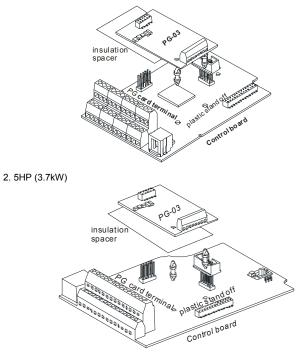


3. 7.5HP (5.5kW) and above

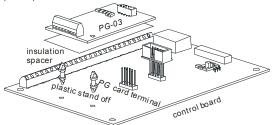

B.3.2.2 PG Card and Pulse Generator (Encoder)

1. Basic wiring diagram

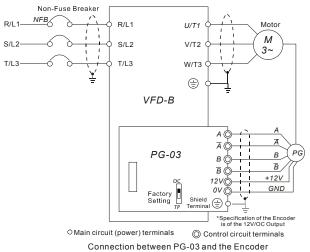

2. Connect Externally with the Encoder of 12V Power Supply and Output Signals to

Non-Fuse Breaker R/L1-R/L1 U/T1 Motor М S/L2 S/L2 V/T2 ¢ 3~ T/L3-T/L3 W/T3 C ۲ VFD-B Α Ā Ā PG в PG-03 в (В B 12V GND 0V (TF TP *Specification of the Encoder is of 12V/OC output, which could also connect externally with the RPM wire A/O 36000 B/O ΟV RPM Meter Shield Terminal *Power of the RPM meter should be supplied by the customers O Main circuit (power) terminals O Control circuit terminals

Additional Tachometer

Connection between PG-03 and the Encoder

B.3.2.3 PG-03 Terminal Descriptions

1. Terminals


Terminal Symbols	Descriptions
+12V	Power Supply of the Encoder: +12V Output Voltage: +12V±5% 200mA
0V	Common point for the power supply and the signal
д-Ā , _{В-} В	Input signal from Pulse Generator. Input type is selected by FSW2. It can be 1-phase or 2-phase input. Maximum 500kP/sec (2-phase function is reserved). If the voltage exceeds 12V, it needs to use TP type with connecting the external current limiting resistor(R). The current should be within 5 to 15mA. The formal of current limiting resistor is: $5mA \leq \frac{Vin - 2V}{600\Omega + R} \leq 15mA$
A/O, B/O	The Encoder signal output Maximum: DC24V 300mA
	Common point for signal grounding

2. Wiring Notes

- Please use a shield cable to prevent interference. Do not run control wire parallel to any high voltage AC power line (220V and up).
- b) Connect shielded wire to $\stackrel{(\perp)}{=}$ E only.
- c) Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- d) Wire length:

The Output Types of the Encoder	Maximum Wire Length	Wire Gauge
Output Voltage	50m	
Open Collector	50m	2
Line Driver	300m	1.25mm ² (AWG16) or above
Complementary	70m	

3. Control Terminals Block Designations.

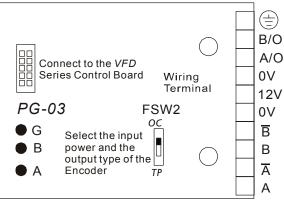


4. Encoder types

Output Types of the Encoder		FSW2 Switch
Output Voltage		OC I TP
Open Collector		OC I TP
Line Driver		OC I TP
Complimentary		0 P

Appendix B Accessories | VFD-B Series

B.4 Remote Controller RC-01

Dimensions are in millimeter

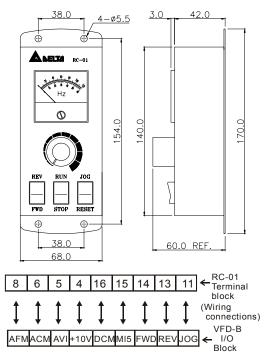

VFD-B Programming:

Pr.02-00 set to 1

Pr.02-01 set to 1 (external controls)


Pr.02-05 set to 1 (setting Run/Stop and Fwd/Rev controls)

Pr.04-08 (MI5) set to 05 (External reset)

NOTE: It needs to set the switch SW1 to SINK mode.


B.5 Remote Panel Adapter (RPA 01)

Remote panel adapter for VFDPU01

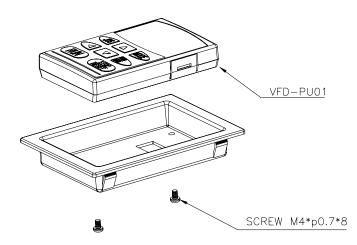

Mounting hole dimensions (Dimensions are in millimeter)

Following is the mounting hole dimension of the plate for RPA01. Please choose the applicable one from below, depending on the plate thickness (t).

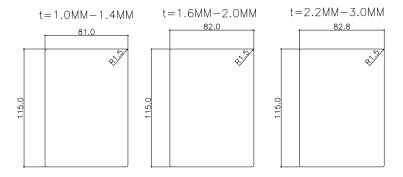

B.6 AC Reactor

B.6.1 AC Input Reactor Recommended Value

230V, 50/60Hz, 1-Phase

1.14/	HP	Fundamental	Fundamental Max. continuous	Inductance (mH)
kW	пг	Amps	Amps	3~5% impedance
0.75	1	8	12	1.5
1.5	2	12	18	1.25
2.2	3	18	27	0.8

460V, 50/60Hz, 3-Phase

1414/		Fundamental	Max.	Inductar	nce (mH)
kW	HP	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	4	6	9	12
1.5	2	4	6	6.5	9
2.2	3	8	12	5	7.5
3.7	5	8	12	3	5
5.5	7.5	12	18	2.5	4.2
7.5	10	18	27	1.5	2.5
11	15	25	37.5	1.2	2
15	20	35	52.5	0.8	1.2
18.5	25	35	52.5	0.8	1.2
22	30	45	67.5	0.7	1.2
30	40	55	82.5	0.5	0.85
37	50	80	120	0.4	0.7
45	60	80	120	0.4	0.7
55	75	100	150	0.3	0.45
75	100	130	195	0.2	0.3

kW	HP	Fundamental	Max.	Inductar	nce (mH)
ĸvv	пр	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	2	3	20	32
1.5	2	4	6	9	12
2.2	3	4	6	9	12
3.7	5	8	12	5	7.5
5.5	7.5	8	12	3	5
7.5	10	12	18	2.5	4.2
11	15	18	27	1.5	2.5
15	20	25	37.5	1.2	1.8
18.5	25	25	37.5	1.2	1.8
22	30	35	52.5	0.8	1.2
30	40	45	67.5	0.7	1.2
37	50	55	82.5	0.5	0.85
45	60	80	120	0.4	0.7
55	75	80	120	0.4	0.7
75	100	100	150	0.3	0.45

B.6.2 AC Output Reactor Recommended Value

230V, 50/60Hz, 3-Phase

1-10/		Fundamental	Max.	Inductar	nce (mH)
kW	ΗP	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	8	12	3	5
1.5	2	8	12	1.5	3
2.2	3	12	18	1.25	2.5
3.7	5	18	27	0.8	1.5
5.5	7.5	25	37.5	0.5	1.2
7.5	10	35	52.5	0.4	0.8
11	15	55	82.5	0.25	0.5
15	20	80	120	0.2	0.4
18.5	25	80	120	0.2	0.4
22	30	100	150	0.15	0.3
30	40	130	195	0.1	0.2
37	50	160	240	0.075	0.15

Appendix B Accessories | VFD-B Series

460V, 50/60Hz, 3-Phase

kW	HP	Fundamental	Max.	Inductar	nce (mH)
KVV	пР	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	4	6	9	12
1.5	2	4	6	6.5	9
2.2	3	8	12	5	7.5
3.7	5	12	18	2.5	4.2
5.5	7.5	18	27	1.5	2.5
7.5	10	18	27	1.5	2.5
11	15	25	37.5	1.2	2
15	20	35	52.5	0.8	1.2
18.5	25	45	67.5	0.7	1.2
22	30	45	67.5	0.7	1.2
30	40	80	120	0.4	0.7
37	50	80	120	0.4	0.7
45	60	100	150	0.3	0.45
55	75	130	195	0.2	0.3
75	100	160	240	0.15	0.23

575V, 50/60Hz, 3-Phase

kW	HP Fundamental		Max.	Inductance (mH)		
ĸvv	пр	Amps	continuous Amps	3% impedance	5% impedance	
0.75	1	2	3	20	32	
1.5	2	4	6	9	12	
2.2	3	4	6	9	12	
3.7	5	8	12	5	7.5	
5.5	7.5	8	12	3	5	
7.5	10	12	18	2.5	4.2	
11	15	18	27	1.5	2.5	
15	20	25	37.5	1.2	1.8	

Appendix B Accessories | VFD-B Series


kW	HP	Fundamental	Max. continuous	Inductar	nce (mH)
K V V		Amps	Amps	3% impedance	5% impedance
18.5	25	25	37.5	1.2	1.8
22	30	35	52.5	0.8	1.2
30	40	45	67.5	0.7	1.2
37	50	55	82.5	0.5	0.85
45	60	80	120	0.4	0.7
55	75	80	120	0.4	0.7
75	100	100	150	0.3	0.45

B.6.3 Applications for AC Reactor

Connected in input circuit


Application 1	Question
When more than one AC motor drive is connected to the same power, one of them is ON during operation.	When applying to one of the AC motor drive, the charge current of capacity may cause voltage ripple. The AC motor drive may damage when over current occurs during operation.

Correct wiring

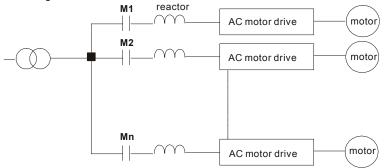


Application 2	Question
	Surges will be generated at the instant of
	silicon rectifier switching on/off. These surges
	may damage the mains circuit.

Correct wiring

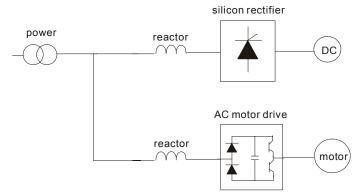


Application 3	Question
Used to improve the input power factor, to reduce harmonics and provide protection from AC line disturbances- (surges, switching spikes, short interruptions, etc.). AC line reactor should be installed when the power supply capacity is 500kVA or more and exceeds 6 times the inverter capacity, or the mains wiring distance $\leq 10m$.	When power capacity is too large, line impedance will be small and the charge current will be too large. That may damage AC motor drive due to higher rectifier temperature.

 Correct wiring



B.7 Zero Phase Reactor (RF220X00A)

 Dimensions are in millimeter and (inch)




Cable type	Reco	mmend Size	Qty.	Wiring Method	
(Note)	AWG	mm²			
Single-	≦10	≦5.3	≦5.5	1	Diagram A
core	≦2	≦33.6	≦38	4	Diagram B
Three-	≦12	≦3.3	≦3.5	1	Diagram A
core	≦1	≦42.4	≦50	4	Diagram B

Note: 600V Insulated unshielded Cable.

Diagram A

Please wind each wire 4 times around the core. The reactor must be put at inverter output as close as possible.

 


 


Diagram B

 Please put all wires through 4 cores in series without winding.



Note 1: The table above gives approximate wire size for the zero phase reactors but the selection is ultimately governed by the type and diameter of cable fitted i.e. the cable must fit through the center hole of zero phase reactors.

Note 2: Only the phase conductors should pass through, not the earth core or screen.

Note 3: When long motor output cables are used an output zero phase reactor may be required to reduce radiated emissions from the cable.

B.8 DC Choke Recommended Values

230V DC Choke

Input voltage	kW	HP	DC Amps	Inductance (mh)
	0.75	1	9	7.50
	1.5	2	12	4.00
230Vac	2.2	3	18	2.75
50/60Hz	3.7	5	25	1.75
3-Phase	5.5	7.5	32	0.85
	7.5	10	40	0.75
	11	15	62	0.61
230Vac	0.75	1	9	12.00
50/60Hz	1.5	2	12	8.00
1-Phase	2.2	3	18	6.00

460V DC Choke

Input voltage	kW	HP	DC Amps	Inductance (mh)
	0.75	1	4	25.00
	1.5	2	9	11.50
460Vac	2.2	3	9	11.50
50/60Hz	3.7	5	12	6.00
3-Phase	5.5	7.5	18	3.75
	7.5	10	25	4.00
	11	15	32	2.68

575V DC Choke

Input voltage	kW	HP	DC Amps	Inductance (mh)
	0.75	1	4	25
	1.5	2	9	11.5
575Vac	2.2	3	9	11.5
50/60Hz	3.7	5	12	6
3-Phase	5.5	7.5	18	6
	7.5	10	25	4
	11	15	32	2.68



It is built-in DC chock in 15kW to 75kW models.

B.9 No-fuse Circuit Breaker Chart

For 1-phase/3-phase drives, the current rating of the breaker shall be within 2-4 times maximum input current rating.

(Refer to Appendix A for rated input current)

1-phase		3-phase					
Model	Recommended no-fuse breaker (A)	Model	Recommended no-fuse breaker (A)	Model	Recommended no-fuse breaker (A)		
VFD007B21A	20	VFD007B23A	10	VFD220B23A	175		
VFD015B21A/B	30	VFD007B43A	5	VFD220B43A	100		
VFD022B21A	50	VFD007B53A	5	VFD220B53A	60		
		VFD015B23A/B	15	VFD300B23A	225		
		VFD015B43A	10	VFD300B43A	125		
		VFD015B53A	5	VFD300B53A	75		
		VFD022B23A	30	VFD370B23A	250		
		VFD022B43B	15	VFD370B43A	150		
		VFD022B53A	10	VFD370B53A	100		
		VFD037B23A	40	VFD450B43A	175		
		VFD037B43A	20	VFD450B53A	125		
		VFD037B53A	15	VFD550B43C	250		
		VFD055B23A	50	VFD550B53A	150		
		VFD055B43A	30	VFD750B43C	300		
		VFD055B53A	20	VFD750B53A	175		
		VFD075B23A	60				
		VFD075B43A	40				
		VFD075B53A	30				
		VFD110B23A	100				
		VFD110B43A	50				
		VFD110B53A	40				
		VFD150B23A	125				
		VFD150B43A	60				
		VFD150B53A	40				
		VFD185B23A	150				
		VFD185B43A	75				
		VFD185B53A	50				


B.10 Fuse Specification Chart

Model I (A) Input VFD007B21A 11.2 VFD007B23A 5.7 VFD007B43A 3.2 VFD007B53A 1.2	t Output 5.0 5.0 2.7	I (A) 20 10	Line Fuse Bussmann P/N JJN-20
VFD007B21A 11.9 VFD007B23A 5.7 VFD007B43A 3.2	5.0 5.0 2.7	20 10	JJN-20
VFD007B23A 5.7 VFD007B43A 3.2	5.0 2.7	10	
VFD007B43A 3.2	2.7		
		-	JJN-10
VFD007B53A 1.2		5	JJS-5
	1.7	3	JJS-3
VFD015B21A/B 15.3		30	JJN-30
VFD015B23A/B 7.6	7.0	15	JJN-15
VFD015B43A 4.3	4.2	10	JJS-10
VFD015B53A 3.1	3.5	5	JJS-6
VFD022B21A 22.0		50	JJN-50
VFD022B23A 15.5		30	JJN-30
VFD022B43B 5.9	5.5	15	JJS-15
VFD022B53A 4.0	4.5	10	JJS-10
VFD037B23A 20.6		40	JJN-40
VFD037B43A 11.2		20	JJS-20
VFD037B53A 8.3	6.7	15	JJS-15
VFD055B23A 26	25	50	JJN-50
VFD055B43A 14	13	30	JJS-30
VFD055B53A 10.3		20	JJS-20
VFD075B23A 34	33	60	JJN-60
VFD075B43A 19	18	40	JJS-40
VFD075B53A 13.8		25	JJS-25
VFD110B23A 50	49	100	JJN-100
VFD110B43A 25	24	50	JJS-50
VFD110B53A 18.2	19	35	JJS-35
VFD150B23A 60	65	125	JJN-125
VFD150B43A 32	32	60	JJS-60
VFD150B53A 22	22	40	JJS-40
VFD185B23A 75	75	150	JJN-150
VFD185B43A 39	38	75	JJS-70
VFD185B53A 27.7	27	50	JJS-50
VFD220B23A 90	90	175	JJN-175
VFD220B43A 49	45	100	JJS-100
VFD220B53A 32	34	60	JJS-60
VFD300B23A 110	120	225	JJN-225
VFD300B43A 60	60	125	JJS-125
VFD300B53A 41	41	75	JJS-70
VFD370B23A 142		250	JJN-250
VFD370B43A 63	73	150	JJS-150
VFD370B53A 52	52	100	JJS-100
VFD450B43A 90	91	175	JJS-175
VFD450B53A 62	62	125	JJS-125
VFD550B43C 130	110	250	JJS-250
VFD550B53A 74	80	150	JJS-150
VFD750B43C 160	150	300	JJS-300
VFD750B53A 91	100	175	JJS-175

Smaller fuses than those shown in the table are permitted.

B.11 PU06

B.11.1 Description of the Digital keypad VFD-PU06

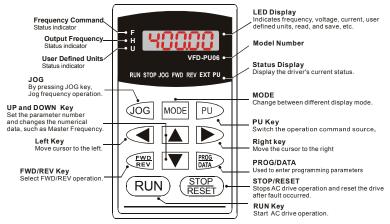


B.11.2 Explanation of Display Message

Display Message	Descriptions
6000	The AC motor drive Master Frequency Command.
• <u>5888</u>	The Actual Operation Frequency present at terminals U, V, and W.
, 180.00	The custom unit (u)
<u>8 5.0</u>	The output current present at terminals U, V, and W.
r8830	Press to change the mode to READ. Press PROG/DATA for about 2 sec or until it's flashing, read the parameters of AC drive to the digital keypad PU06. It can read 4 groups of parameters to PU06. (read 0 - read 3)
5808-	Press to change the mode to SAVE. Press PROG/DATA for about 2 sec or until it's flashing, then write the parameters from the digital keypad PU06 to AC drive. If it has saved, it will show the type of AC motor drive.

Display Message	Descriptions
08-00	The specified parameter setting.
	The actual value stored in the specified parameter.
E.F.	External Fault
-End-	"End" displays for approximately 1 second if the entered input data have been accepted. After a parameter value has been set, the new value is automatically stored in memory. To modify an entry, use the or respectively keys.
-800-	"Err" displays if the input is invalid.
[[-3]	Communication Error. Please check the AC motor drive user manual (Chapter 5, Group 9 Communication Parameter) for more details.

B.11.3 Operation Flow Chart

VFD-PU06 Operation Flow Chart

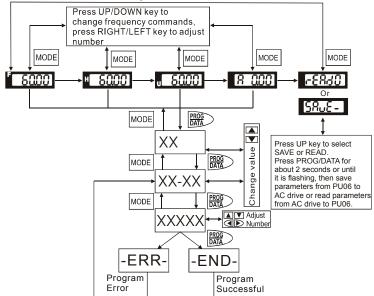

This page intentionally left blank.

Appendix C How to Select the Right AC Motor Drive

The choice of the right AC motor drive for the application is very important and has great influence on its lifetime. If the capacity of AC motor drive is too large, it cannot offer complete protection to the motor and motor maybe damaged. If the capacity of AC motor drive is too small, it cannot offer the required performance and the AC motor drive maybe damaged due to overloading.

But by simply selecting the AC motor drive of the same capacity as the motor, user application requirements cannot be met completely. Therefore, a designer should consider all the conditions, including load type, load speed, load characteristic, operation method, rated output, rated speed, power and the change of load capacity. The following table lists the factors you need to consider, depending on your requirements.

Item		Related Specification			
		Speed and torque characteristics	Time ratings	Overload capacity	Starting torque
Load type	Friction load and weight load Liquid (viscous) load Inertia load Load with power transmission	•			•
Load speed and torque characteristics	Constant torque Constant output Decreasing torque Decreasing output	•	•		
Load characteristics	Constant load Shock load Repetitive load High starting torque Low starting torque	•	•	•	•
Continuous operation, Short-time operation Long-time operation at medium/low speeds			•	•	
Maximum output current (instantaneous) Constant output current (continuous)		•		•	
Maximum frequency, Base frequency		•			
Power supply transformer capacity or percentage impedance Voltage fluctuations and unbalance Number of phases, single phase protection Frequency				•	•
Mechanical friction, losses in wiring				•	•
Duty cycle modification			•		

C.1 Capacity Formulas

1. When one AC motor drive operates one motor

The starting capacity should be less than 1.5x rated capacity of AC motor drive

The starting capacity=

 $\frac{k \times N}{973 \times \eta \times \cos \varphi} \left(T_{L} + \frac{GD^{2}}{375} \times \frac{N}{t_{A}} \right) \leq 1.5 \times the _capacity_of_AC_motor_drive(kVA)$

2. When one AC motor drive operates more than one motor

- 2.1 The starting capacity should be less than the rated capacity of AC motor drive
 - Acceleration time ≤60 seconds

The starting capacity=

$$\frac{k \times N}{\eta \times \cos \varphi} \left[n_{\tau} + n_{s} (k_{s-1}) \right] = P_{Cl} \left[1 + \frac{n_{\tau}}{n_{\tau}} (k_{s-1}) \right] \leq 1.5 \times the _capacity_of_AC_motor_drive(kVA)$$

Acceleration time \geq 60 seconds

The starting capacity=

$$\frac{k \times N}{\eta \times \cos \varphi} [n_{\tau} + n_{s}(k_{s-1})] = P_{C} \left[1 + \frac{n_{s}}{n_{\tau}} (k_{s-1})\right] \leq the _capacity_of_AC_motor_drive(kVA)$$

2.2 The current should be less than the rated current of AC motor drive(A)

■ Acceleration time ≤60 seconds

 $n_r + I_M \Big[1 + \frac{n_s}{n_r} \Big(k_s - 1 \Big) \Big] \le 1.5 \times the _rated _current_of _AC_motor_drive(A)$

■ Acceleration time ≥60 seconds

$$n_{\tau} + I_{M} \Big[1 + \frac{n_{s}}{n_{\tau}} \big(k_{s} - 1 \big) \Big] \leq the _rated _current_of_AC_motor_drive(A)$$

2.3 When it is running continuously

The requirement of load capacity should be less than the capacity of AC motor drive(kVA)
 The requirement of load capacity=

 $\frac{k \times P_M}{\eta \times \cos\varphi} \le the _capacity_of_AC_motor_drive(kVA)$

The motor capacity should be less than the capacity of AC motor drive

$$k \times \sqrt{3} \times V_M \times I_M \times 10^{-3} \le the _capacity_of_AC_motor_drive(kVA)$$

The current should be less than the rated current of AC motor drive(A)

 $k \times I_M \leq the_rated_current_of_AC_motor_drive(A)$

Symbol explanation

P_M	: Motor shaft output for load (kW)
η	: Motor efficiency (normally, approx. 0.85)
$\cos \varphi$: Motor power factor (normally, approx. 0.75)
V_M	: Motor rated voltage(V)
Ім	: Motor rated current(A), for commercial power
k	: Correction factor calculated from current distortion factor (1.05 - 1.1, depending on PWM method)
P_{C1}	: Continuous motor capacity (kVA)
ks	: Starting current/rated current of motor
n_T	: Number of motors in parallel
ns	: Number of simultaneously started motors
GD^2	: Total inertia (GD ²) calculated back to motor shaft (kg m ²)
T_L	: Load torque
<i>t</i> A	: Motor acceleration time
Ν	: Motor speed

C.2 General Precaution

Selection Note

- 1. When the AC Motor Drive is connected directly to a large-capacity power transformer (600kVA or above) or when a phase lead capacitor is switched, excess peak currents may occur in the power input circuit and the converter section may be damaged. To avoid this, use an AC input reactor (optional) before AC Motor Drive mains input to reduce the current and improve the input power efficiency.
- When a special motor is used or more than one motor is driven in parallel with a single AC Motor Drive, select the AC Motor Drive current ≥1.25x(Sum of the motor rated currents).
- 3. The starting and accel./decel. characteristics of a motor are limited by the rated current and the overload protection of the AC Motor Drive. Compared to running the motor D.O.L. (Direct On-Line), a lower starting torque output with AC Motor Drive can be expected. If higher starting torque is required (such as for elevators, mixers, tooling machines, etc.) use an AC Motor Drive of higher capacity or increase the capacities for both the motor and the AC Motor Drive.
- 4. When an error occurs on the drive, a protective circuit will be activated and the AC Motor Drive output is turned off. Then the motor will coast to stop. For an emergency stop, an external mechanical brake is needed to quickly stop the motor.

Parameter Settings Note

- The AC Motor Drive can be driven at an output frequency up to 400Hz (less for some models) with the digital keypad. Setting errors may create a dangerous situation. For safety, the use of the upper limit frequency function is strongly recommended.
- High DC brake operating voltages and long operation time (at low frequencies) may cause overheating of the motor. In that case, forced external motor cooling is recommended.
- 3. Motor accel./decel. time is determined by motor rated torque, load torque, and load inertia.


4. If the stall prevention function is activated, the accel./decel. time is automatically extended to a length that the AC Motor Drive can handle. If the motor needs to decelerate within a certain time with high load inertia that can't be handled by the AC Motor Drive in the required time, either use an external brake resistor and/or brake unit, depending on the model, (to shorten deceleration time only) or increase the capacity for both the motor and the AC Motor Drive.

C.3 How to Choose a Suitable Motor

Standard motor

When using the AC Motor Drive to operate a standard 3-phase induction motor, take the following precautions:

- 1. The energy loss is greater than for an inverter duty motor.
- Avoid running motor at low speed for a long time. Under this condition, the motor temperature may rise above the motor rating due to limited airflow produced by the motor's fan. Consider external forced motor cooling.
- When the standard motor operates at low speed for long time, the output load must be decreased.
- 4. The load tolerance of a standard motor is as follows:

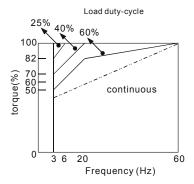

 If 100% continuous torque is required at low speed, it may be necessary to use a special inverter duty motor.

Appendix C How to Select the Right AC Motor Drive | VFD-B Series

- Motor dynamic balance and rotor endurance should be considered once the operating speed exceeds the rated speed (60Hz) of a standard motor.
- Motor torque characteristics vary when an AC Motor Drive instead of commercial power supply drives the motor. Check the load torque characteristics of the machine to be connected.
- Because of the high carrier frequency PWM control of the VFD series, pay attention to the following motor vibration problems:
 - Resonant mechanical vibration: anti-vibration (damping) rubbers should be used to mount equipment that runs at varying speed.
 - Motor imbalance: special care is required for operation at 50 or 60 Hz and higher frequency.
 - To avoid resonances, use the Skip frequencies.
- 9. The motor fan will be very noisy when the motor speed exceeds 50 or 60Hz.

Special motors:

1. Pole-changing (Dahlander) motor:

The rated current is differs from that of a standard motor. Please check before operation and select the capacity of the AC motor drive carefully. When changing the pole number the motor needs to be stopped first. If over current occurs during operation or regenerative voltage is too high, please let the motor free run to stop (coast).

2. Submersible motor:

The rated current is higher than that of a standard motor. Please check before operation and choose the capacity of the AC motor drive carefully. With long motor cable between AC motor drive and motor, available motor torque is reduced.

3. Explosion-proof (Ex) motor:

Needs to be installed in a safe place and the wiring should comply with the (Ex) requirements. Delta AC Motor Drives are not suitable for (Ex) areas with special precautions.

4. Gear reduction motor:

The lubricating method of reduction gearbox and speed range for continuous operation will be different and depending on brand. The lubricating function for operating long time at low speed and for high-speed operation needs to be considered carefully.

5. Synchronous motor:

The rated current and starting current are higher than for standard motors. Please check before operation and choose the capacity of the AC motor drive carefully. When the AC motor drive operates more than one motor, please pay attention to starting and changing the motor.

Power Transmission Mechanism

Pay attention to reduced lubrication when operating gear reduction motors, gearboxes, belts and chains, etc. over longer periods at low speeds. At high speeds of 50/60Hz and above, lifetime reducing noises and vibrations may occur.

Motor torque

The torque characteristics of a motor operated by an AC motor drive and commercial mains power are different.

Below you'll find the torque-speed characteristics of a standard motor (4-pole, 15kW):

Appendix C How to Select the Right AC Motor Drive | VFD-B Series

