

Smarter. Greener. Together.

Industrial Automation Headquarters

Delta Electronics, Inc.

Taoyuan Technology Center No.18, Xinglong Rd., Taoyuan City, Taoyuan County 33068, Taiwan TEL: 886-3-362-6301 / FAX: 886-3-371-6301

Asia

Delta Electronics (Jiangsu) Ltd.

Wujiang Plant 3
1688 Jiangxing East Road,
Wujiang Economic Development Zone
Wujiang City, Jiang Su Province,
People's Republic of China (Post code: 215200)
TEL: 86-512-6340-3008 / FAX: 86-769-6340-7290

Delta Greentech (China) Co., Ltd.

238 Min-Xia Road, Pudong District, ShangHai, P.R.C. Post code: 201209 TEL: 86-21-58635678 / FAX: 86-21-58630003

Delta Electronics (Japan), Inc.

Tokyo Office 2-1-14 Minato-ku Shibadaimon, Tokyo 105-0012, Japan TEL: 81-3-5733-1111 / FAX: 81-3-5733-1211

Delta Electronics (Korea), Inc.

1511, Byucksan Digital Valley 6-cha, Gasan-dong, Geumcheon-gu, Seoul, Korea, 153-704 TEL: 82-2-515-5303 / FAX: 82-2-515-5302

Delta Electronics Int'l (S) Pte Ltd

4 Kaki Bukit Ave 1, #05-05, Singapore 417939 TEL: 65-6747-5155 / FAX: 65-6744-9228

Delta Electronics (India) Pvt. Ltd.

Plot No 43 Sector 35, HSIIDC Gurgaon, PIN 122001, Haryana, India TEL: 91-124-4874900 / FAX: 91-124-4874945

Americas

Delta Products Corporation (USA)

Raleigh Office P.O. Box 12173,5101 Davis Drive, Research Triangle Park, NC 27709, U.S.A. TEL: 1-919-767-3800 / FAX: 1-919-767-8080

Delta Greentech (Brasil) S.A

Sao Paulo Office
Rua Itapeva, 26 - 3° andar Edificio Itapeva One-Bela Vista
01332-000-São Paulo-SP-Brazil
TEL: +55 11 3568-3855 / FAX: +55 11 3568-3865

Europe

Deltronics (The Netherlands) B.V.

Eindhoven Office De Witbogt 20, 5652 AG Eindhoven, The Netherlands TEL: 31-40-2592850 / FAX: 31-40-2592851

*We reserve the right to change the information in this catalogue without prior notice. 2016-10-21



Delta Elevator Drive VFD-ED Series User Manual





Thank you for choosing DELTA's high-performance VFD-ED Series. The VFD-ED Series is manufactured with high-quality components and materials and incorporates the latest microprocessor technology available.

This manual is to be used for the installation, parameter setting, troubleshooting, and daily maintenance of the AC motor drive. To guarantee safe operation of the equipment, read the following safety guidelines before connecting power to the AC motor drive. Keep this operating manual at hand and distribute to all users for reference.

To ensure the safety of operators and equipment, only qualified personnel familiar with AC motor drive are to do installation, start-up and maintenance. Always read this manual thoroughly before using VFD-ED series AC Motor Drive, especially the WARNING, DANGER and CAUTION notes. Failure to comply may result in personal injury and equipment damage. If you have any question, please contact your dealer.

PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



- 1. AC input power must be disconnected before any wiring to the AC motor drive is made.
- 2. A charge may still remain in the DC-link capacitors with hazardous voltages, even if the power has been turned off. To prevent personal injury, please ensure that power has turned off before opening the AC motor drive and wait ten minutes for the capacitors to discharge to safe voltage levels.
- 3. Never reassemble internal components or wiring.
- 4. The AC motor drive may be destroyed beyond repair if incorrect cables are connected to the input/output terminals. Never connect the AC motor drive output terminals U/T1, V/T2, and W/T3 directly to the AC mains circuit power supply.
- 5. Ground the VFD-ED using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed. Refer to the Basic Wiring Diagram.
- VFD-ED series is used only to control variable speed of 3-phase induction motors, NOT for 1-phase motors or other purpose.
- VFD-ED series shall NOT be used for life support equipment or any life safety situation.



- 1. DO NOT use Hi-pot test for internal components. The semi-conductor used in AC motor drive easily damage by high-voltage.
- 2. There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. To prevent damage to these components, do not touch these components or the circuit boards with metal objects or your bare hands.
- 3. Only qualified persons are allowed to install, wire and maintain AC motor drives.



- Some parameters settings can cause the motor to run immediately after applying power.
- 2. DO NOT install the AC motor drive in a place subjected to high temperature, direct sunlight, high humidity, excessive vibration, corrosive gases or liquids, or airborne dust or metallic particles.
- 3. Only use AC motor drives within specification. Failure to comply may result in fire, explosion or electric shock.
- 4. To prevent personal injury, please keep children and unqualified people away from the equipment.
- 5. When the motor cable between AC motor drive and motor is too long, the layer insulation of the motor may be damaged. Please use a frequency inverter duty motor or add an AC output reactor to prevent damage to the motor. Refer to appendix B Reactor for details.
- 6. The rated voltage for AC motor drive must be \leq 240V (\leq 480V for 460V models) and the mains supply current capacity must be \leq 5000A RMS (\leq 10000A RMS for the \geq 40hp (30kW) models)

Firmware version: 1.04

Table of Contents

CHA	APTER 1 INTRODUCTION	1-1
	1-1 Receiving and Inspection	1-1
	1-2 Nameplate Information	
	1-3 Model Name	1- 1
	1-4 Serial Number	1-1
	1-5 RFI Switch	1-2
	1-6 Dimensions.	1-6
СНА	APTER 2 INSTALLATION	2-1
	2-1 Minimum Mounting Clearance and Installation	2-1
	2-2 Minimum Mounting Clearance	2-2
СНА	APTER 3 WIRING	3-1
	3-1 Wiring	3-2
	3-2 System Wiring Diagram	
СНА	APTER 4 MAIN CIRCUIT TERMINALS	
	4-1 Main Circuit Diagram	4-1
	4-2 Main Circuit Terminals	
СНР	PATER 5 CONTROL TERMINALS	
0	5-1 Remove the Cover before Wiring	
	5-2 Specification of the Control Terminals	
	5-3 Control Circuit Terminal Sockets	
СНА	APTER 6 OPTIONAL ACCESSORIES	6-1
	6-1 All Brake Resistors and Brake Units Used in AC Motor Drives	6-1
	6-2 Non-fuse Circuit Breaker	6-4
	6-3 Fuse Specification Chart	6-4
	6-4 AC/DC Reactor	
	6-5 Zero Phase Reactor	6-7
	6-6 EMI Filter	6-10
	6-7 Digital Keypad	6-13
	6-8 USB/RS-485 Communication Interface IFD6530	6-16
СНА	APTER 7 OPTION CARDS	7-1
	Remove the top cover	7-1
	Screws' Specification for Option Card Terminals	7-2
	7-1 EMED-PGABD-1	7-3
	7-2 FMFD-PGHSD-1	7-7

CHAPTER 8 SPECIFICATION	8-1
8-1 230V Series	8-1
8-2 460V Series	8-1
General Specifications	8-2
CHAPTER 9 DIGITAL KEYPAD	9-1
9-1 Descriptions of Digital Keypad	9-1
9-2 Operating the Built-in Digital Keypad	9-3
9-3 Description of Digital Keypad KPC-CC01	9-4
9-4 Function of Digital Keypad KPC-CC01	9-6
9-5 Fault Code Description of Digital Keypad KPC-CC01	9-18
9-6 TPEditor Installation	9-22
CHAPTER 10 AUTO-TUNING PROCESSS	10-1
CHAPTER 11 SUMMARPY OF PARAMETERS	11-1
CHAPTER 12 DESCRIPTION OF PARAMETER SETTINGS	12-1
CHAPTER 13 WARNING CODES	13-1
CHAPTER 14 FAULT CODES	14-1
CHAPTER 15 SUGGESTION & ERROR CORRECTIONS FOR STANDARD AC MO	TOR DRIVES15-1
CHAPTER 16 FUNCTION OF SAFETY TORQUE OFF	16-1
APPENDIX A. AC MOTOR DRIVES EMC STANDARD INSTALLATION GUIDE	i

01 Introduction


1-1 Receiving and Inspection

After receiving the AC motor drive, please check for the following:

- 1) Inspect the unit after unpacking to assure it was not damaged during shipment. Make sure that the part number printed on the package corresponds with the part number indicated on the nameplate.
- 2) Make sure that the voltage for the wiring lie within the range as indicated on the nameplate. Install the AC motor drive according to this manual.
- 3) Before applying the power, make sure that all the devices, including power, motor, control board and digital keypad, are connected correctly.
- 4) When wiring the AC motor drive, make sure that the wiring of input terminals "R/L1, S/L2, T/L3" and output terminals "U/T1, V/T2, W/T3" are correct to prevent drive damage.
- 5) When power is applied, select the language and set parameter groups via the digital keypad (KPED-LE01). When executing a trial run, begin with a low speed and then gradually increase the speed until the desired speed is reached.

1-2 Nameplate Information


Using 15HP/11kW 230V, 3-Phase as an example.

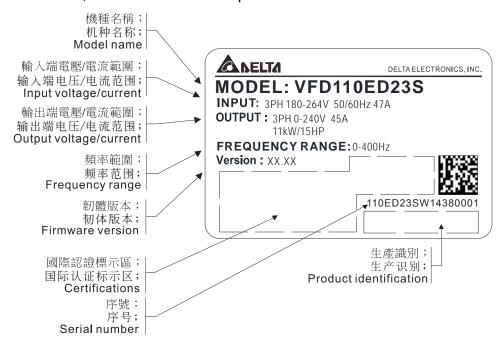

1-3 Model Name

VFD 110 ED 23 S Version type Input Voltage 23:230V 3-PHASE 43:460V 3-PHASE Ed series Appicable motor capacity 220:30HP(22kW) 022:3HP(2.2kW) 040:5HP(4.0kW) 300:40HP(30kW) 370:50HP(37kW) 055:7.5HP(5.5kW) 075:10HP(7.5kW) 450:60HP(45kW) 110:15HP(11kW) 150:20HP(15kW) 185:25HP(18.5kW) 550:75HP(55kW) 750:100HP(75kW)

1-4 Serial Number

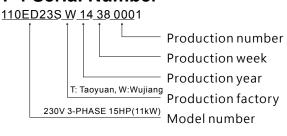


Series name (Variable Frequency Drive)

1-5 RFI Switch

The AC motor drive may emit the electrical noise. The RFI switch is used to suppress the interference (Radio Frequency Interference) on the power line. The RFI Switch of Frame C, D, E are at similar position (Frame B doesn't have a RFI Switch). Open the top cover to remove the RFI switch as shown in the image below.

Frame E

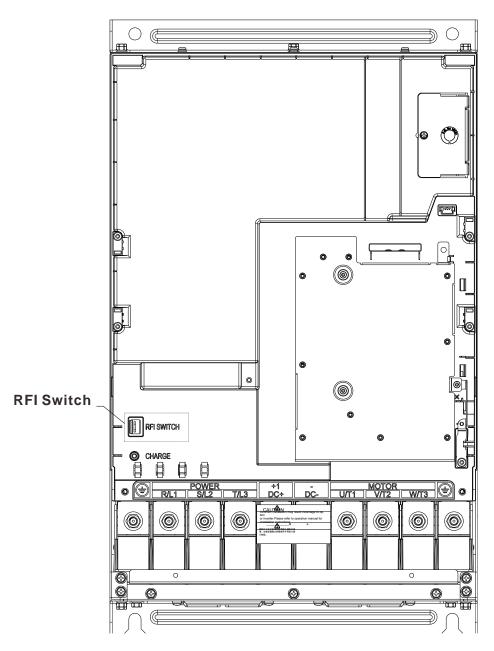


Isolating main power from ground:

When the power distribution system of the Power Regenerative Unit is a floating ground system (IT) or an asymmetric ground system (TN), the RFI short-circuit cable must be cut off. Cutting off the short-circuit cable also cuts off the internal RFI capacitor (filter capacitor) between the system's frame and the central circuits to avoid damaging the central circuits and (according to IEC 61800-3) reduce the ground leakage current.

Important points regarding ground connection

- ☑ To ensure the safety of personnel, proper operation, and to reduce electromagnetic radiation, the Power Regenerative Unit must be properly grounded during installation.
- ☑ The diameter of the cables must meet the size specified by safety regulations.
- ☑ The shielded cable must be connected to the ground of the Power Regenerative Unit to meet safety regulations.
- ☑ The shielded cable can only be used as the ground for equipment when the aforementioned points are met.
- ☑ When installing multiple sets of Power Regenerative Units, do not connect the grounds of the Power Regenerative Units in series. As shown below

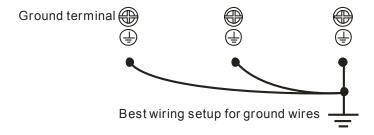

Pay particular attention to the following points:

- ☑ After turning on the main power, do not cut the RFI short-circuit cable while the power is on.
- ☑ Make sure the main power is turned off before cutting the RFI short-circuit cable.
- ☑ Cutting the RFI short-circuit cable will also cut off the conductivity of the capacitor. Gap discharge may occur once the transient voltage exceeds 1000V.

If the RFI short-circuit cable is cut, there will no longer be reliable electrical isolation. In other words, all controlled input and outputs can only be seen as low-voltage terminals with basic electrical isolation. Also, when the internal RFI capacitor is cut off, the Power Regenerative Unit will no longer be electromagnetic compatible.

- ☑ The RFI short-circuit cable may not be cut off if the main power is a grounded power system.
- ☑ The RFI short-circuit cable may not be cut off while conducting high voltage tests. When conducting a high voltage test to the entire facility, the main power and the motor must be disconnected if leakage current is too high.

Floating Ground System (IT Systems)


A floating ground system is also called IT system, ungrounded system, or high impedance/resistance (greater than 30Ω) grounding system.

- ☑ Disconnect the ground cable from the internal EMC filter.
- ☑ In situations where EMC is required, check whether there is excess electromagnetic radiation affecting nearby low-voltage circuits. In some situations, the adapter and cable naturally provide enough suppression. If in doubt, install an extra electrostatic shielded cable on the power supply side between the main circuit and the control terminals to increase security.
- ☑ Do not install an external RFI/EMC filter, the EMC filter will pass through a filter capacitor, thus connecting power input to ground. This is very dangerous and can easily damage the Power Regenerative Unit.

Asymmetric Ground System (Corner Grounded TN Systems)


Caution: Do not cut the RFI short-circuit cable while the input terminal of the Power Regenerative Unit carries power.

In the following four situations, the RFI short-circuit cable must be cut off. This is to prevent the system from grounding through the RFI capacitor, damaging the Power Regenerative Unit.

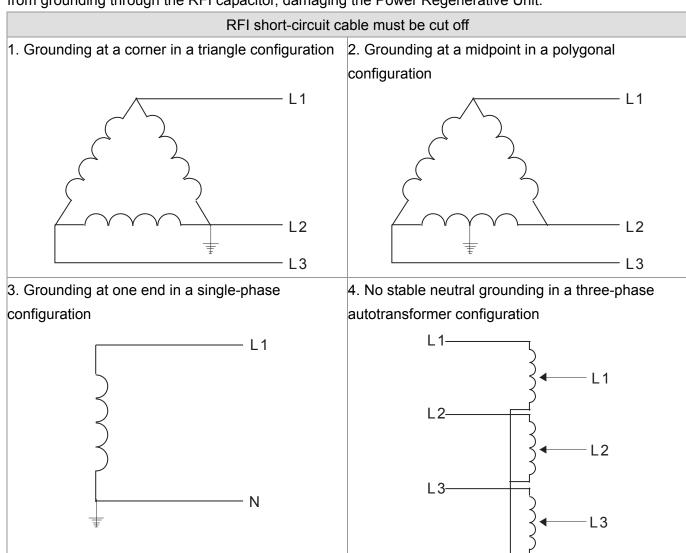


Use RFI short-circuit

Internal grounding through RFI capacitor, which reduces electromagnetic radiation. In a situation with higher requirements for electromagnetic compatibility, and using a symmetrical grounding power system, an EMC filter can be installed. For example, the diagram on the right is a symmetrical grounding power system.

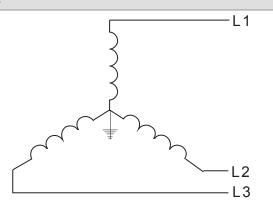


1-6 Dimensions

Frame B VFD022ED21S, VFD037ED21S, VFD040ED23S/43S;

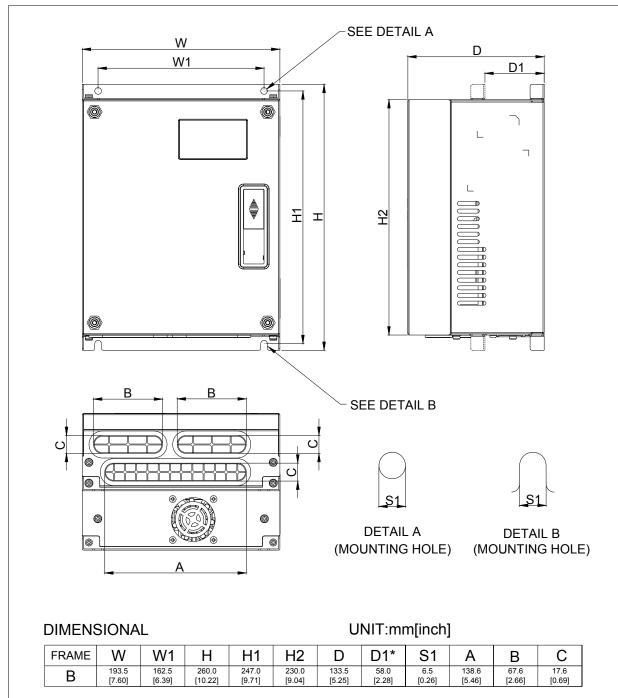


^{*}D1: This dimension is for flange mounting application reference.

Frame C VFD055ED23S/43S, VFD075ED23S/43S, VFD110ED23S/43S, VFD150ED43S, VFD185ED43S;

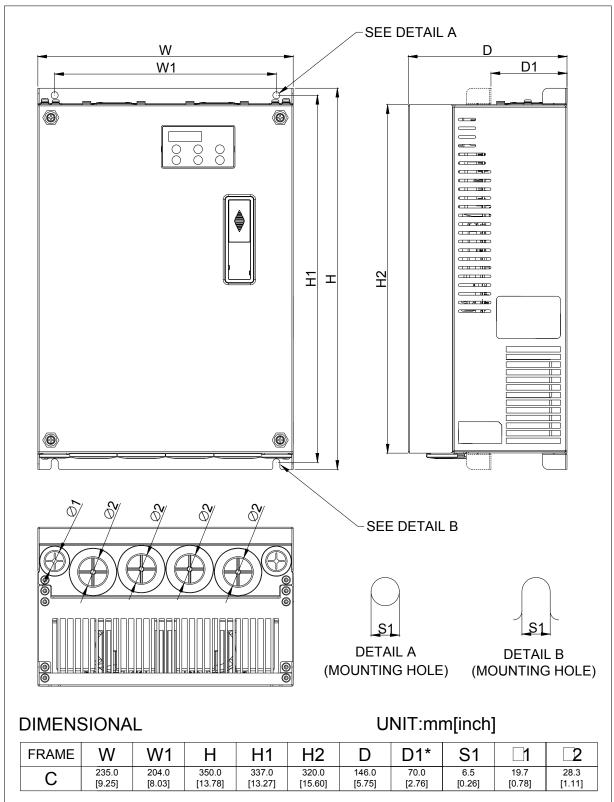

Frame D VFD150ED23S, VFD185ED23S, VFD220ED23S/43S, VFD300ED43S;

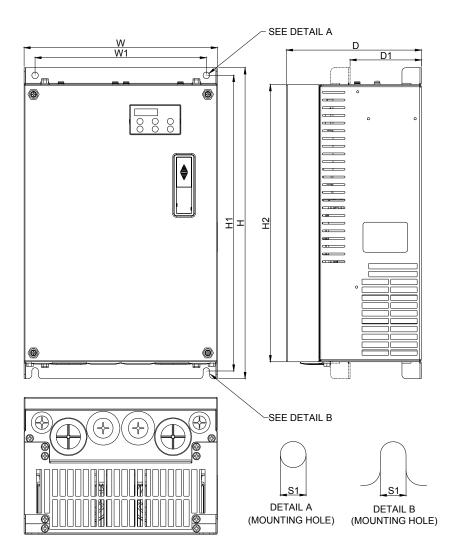


DIMENSIONAL

UNIT:mm[inch]

FRAME	W	W1	Н	H1	H2	D	D1*	S1
D	255.0	226.0	403.8	384.0	360.0	178.0	94.0	8.5
	[10.04]	[8.90]	[15.90]	[15.12]	[14.17]	[7.01]	[3.70]	[0.33]

*D1: This dimension is for flange mounting application reference.

Frame E VFD300ED23S, VFD370ED23S/43S, VFD450ED43S, VFD550ED43S, VFD750ED43S;

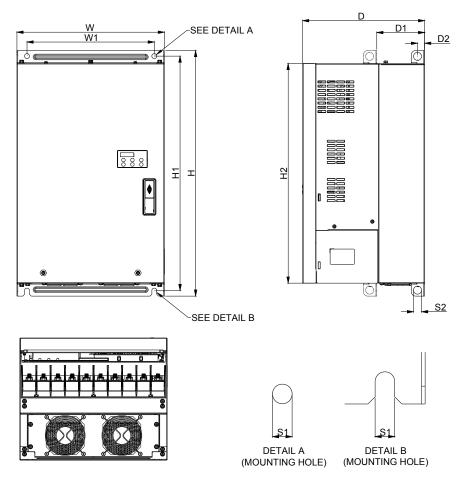

DIMENSIONAL


UNIT:mm[inch]

FRAME	W	W1	Н	H1	H2	D	D1*	D2	S1	S2
Е	330.0	285.0	550.0	525.0	492.0	273.4	107.2	16.0	11.0	18.0
	[12.99]	[11.22]	[21.65]	[20.67]	[19.37]	[10.76]	[4.22]	[0.63]	[0.43]	[0.71]

^{*}D1: This dimension is for flange mounting application reference.

Built-In Digital Keypad

KPED-LE01

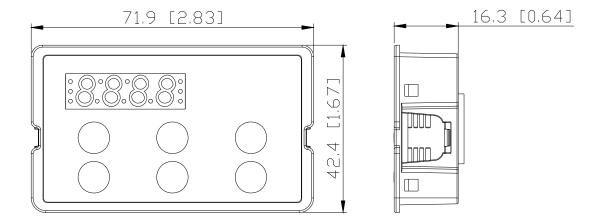


02 Installation


2-1 Minimum Mounting Clearance and Installation



- ☑ Prevent fiber particles, scraps of paper, shredded wood saw dust, metal particles, etc. from adhering to the heat sink
- ☑ Install the AC motor drive in a metal cabinet. When installing one drive below another one, use a metal separation between the AC motor drives to prevent mutual heating and to prevent the risk of fire accident.
- ☑ Install the AC motor drive in Pollution Degree 2 environments only: normally only nonconductive pollution occurs and temporary conductivity caused by condensation is expected.

The image below is for reference only.

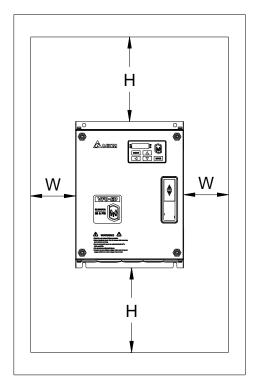

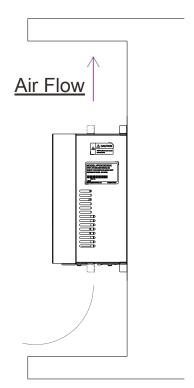

2-2 Minimum mounting clearance

Horsepower	Width	Height
	mm (inch)	mm (inch)
3-5HP	50 (2)	150 (6)
7.5-20HP	75 (3)	175 (7)
25-30HP	75 (3)	200 (8)
40-100HP	75(3)	200(8)

Frame	Capacity	Model No.
В	3.0-5.0HP (2.2-4kW)	VFD022ED21S, VFD037ED21S, VFD040ED23S/43S
С	7.5-15HP (5.5-11kW)	VFD055ED23S/43S, VFD075ED23S/43S, VFD110ED23S/43S, VFD150ED43S, VFD185ED43S
D	20-40HP (15-30kW)	VFD150ED23S, VFD185ED23S, VFD220ED23S/43S VFD300ED43S
E	40-100HP (30-75kW)	VFD300ED23S, VFD370ED23S/43S, VFD450ED43S, VFD550ED43S, VFD750ED43S

NOTE

The minimum mounting clearances stated in the table above applies to AC motor drives frame B, C, D and E. A drive which fails to follow the minimum mounting clearances may cause the fan to malfunction and heat dissipation problem.

		Air f	low rate	Power Dissipation AC motor drive					
Model No.	Flov	v Rate(cfm	1)	Flow Rate(m3/hr)			Power Dissipation		
	External	Internal	Total	External	Internal	Total	Loss External (Heat Sink)	Internal	Total
VFD022ED21S	13.7	-	13.7	23.3	-	23.3	60	36	96
VFD037ED21S	23.9	-	23.9	40.7	-	40.7	84	46	130
VFD040ED23S	23.9	-	23.9	40.7	-	40.7	133	49	182
VFD055ED23S	48.5	-	48.5	82.4	-	82.4	212	67	279
VFD075ED23S	48.5	-	48.5	82.4	-	82.4	292	86	379
VFD110ED23S	47.9	-	47.9	81.4	-	81.4	355	121	476
VFD150ED23S	64.6	-	64.6	109.8	-	109.8	490	161	651
VFD185ED23S	102.3	-	102.3	173.8	-	173.8	638	184	822
VFD220ED23S	102.8	-	102.8	174.7	-	174.7	723	217	939
VFD300ED23S	179	30	209	304	51	355	932	186	1118
VFD370ED23S	179	30	209	304	51	355	1112	222	1334
VFD040ED43S	13.7	•	13.7	23.3	-	23.3	123	42	165
VFD055ED43S	48.5	-	48.5	82.4	-	82.4	185	55	240
VFD075ED43S	48.5	-	48.5	82.4	-	82.4	249	71	320


VFD110ED43S	47.9	-	47.9	81.4	_	81.4	337	94	431
VFD150ED43S	46.1	-	46.1	78.4	-	78.4	302	123	425
VFD185ED43S	46.1	-	46.1	78.4	-	78.4	391	139	529
VFD220ED43S	102.8	-	102.8	174.7	-	174.7	642	141	783
VFD300ED43S	83.7	-	83.7	142.2	-	142.2	839	180	1019
VFD370ED43S	179	30	209	304	51	355	803	252	1055
VFD450ED43S	179	30	209	304	51	355	1014	270	1284
VFD550ED43S	179	30	209	304	51	355	1244	275	1519
VFD750ED43S	186	30	216	316	51	367	1541	338	1878

Derating Capacity of Carrier Frequency (Fc):

Frame	В	С	D	E	E
Fc(kHz)	2.2~4 kW	5.5~11 kW	15~22 kW	30~45 kW	55~75kW
0	100%	100%	100%	100%	100%
1	100%	100%	100%	100%	100%
2	100%	100%	100%	100%	100%
3	100%	100%	100%	100%	100%
4	100%	100%	100%	100%	100%
5	100%	100%	100%	100%	100%
6	100%	100%	100%	100%	100%
7	100%	100%	100%	90.73%	-
8	100%	100%	100%	82.20%	-
9	94.24%	100%	92.32%	74.31%	-
10	88.92%	100%	85.21%	-	-
11	82.54%	95.35%	78.63%	-	-
12	78.08%	91.02%	72.53%	-	-
13	73.95%	86.98%	66.87%	-	-
14	70.14%	84.14%	61.62%	-	-
15	66.61%	80.67%	56.74%	-	-


Derating Curve of Carrier Frequency (Fc):

lo derating curve

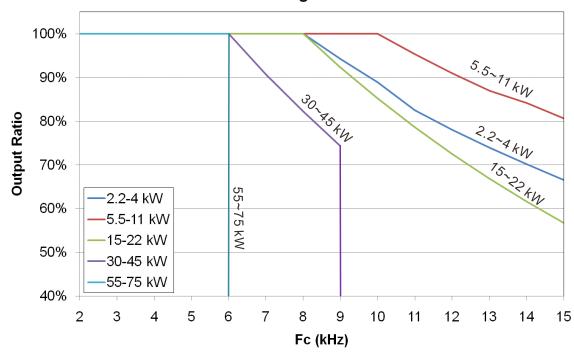


Ambient Temperature Derating Curve:

Temperature derating curve

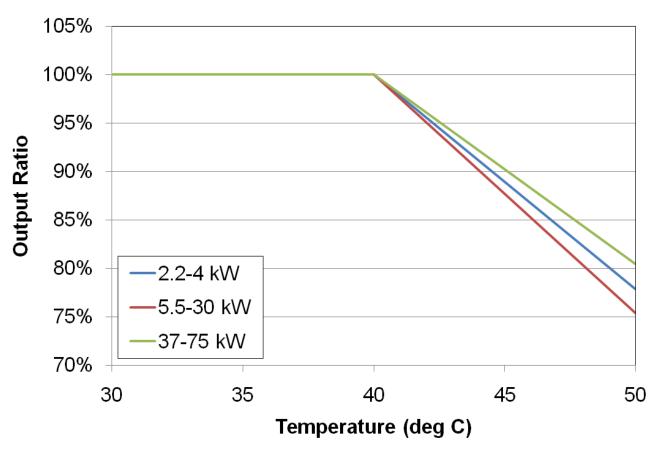

Altitude Derating Curve:

Altitude Derating Curve

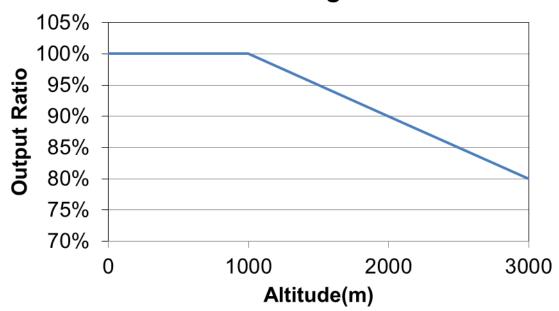

03 Wiring

After removing the front cover, examine if the power and control terminals are clearly noted. Read following precautions before wiring.

- Make sure that power is only applied to the R/L1, S/L2, and T/L3 terminals. Failure to comply may result in damage to the equipment. The voltage and current should lie within the range as indicated on the nameplate (Chapter 1-1).
- ☑ All the units must be grounded directly to a common ground terminal to prevent lightning strike or electric shock.
- Make sure to fasten the screw of the main circuit terminals to prevent sparks which is made by the loose screws due to vibration.





- ☑ It is crucial to turn off the AC motor drive power before any wiring installation is made. A charge may still remain in the DC bus capacitors with hazardous voltages even if the power has been turned off therefore it is suggested for users to measure the remaining voltage before wiring. For your personal safety, do not perform any wiring before the voltage drops to a safe level < 25 Vdc. Wiring installation with remaining voltage condition may cause sparks and short circuit.
- Only qualified personnel familiar with AC motor drives is allowed to perform installation, wiring and commissioning. Make sure the power is turned off before wiring to prevent electric shock.




- ☑ When wiring, please choose the wires with specification that comply with local regulation for your personal safety.
- ☑ Check following items after finishing the wiring:
 - Are all connections correct?
 - 2. Any loosen wires?
 - 1. Any short-circuits between the terminals or to ground?

3-1 Wiring

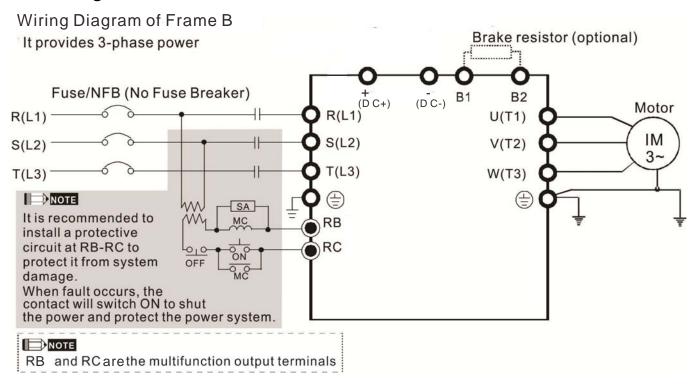

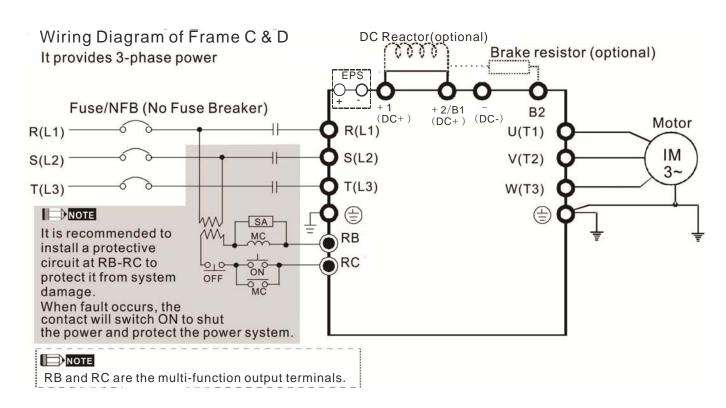

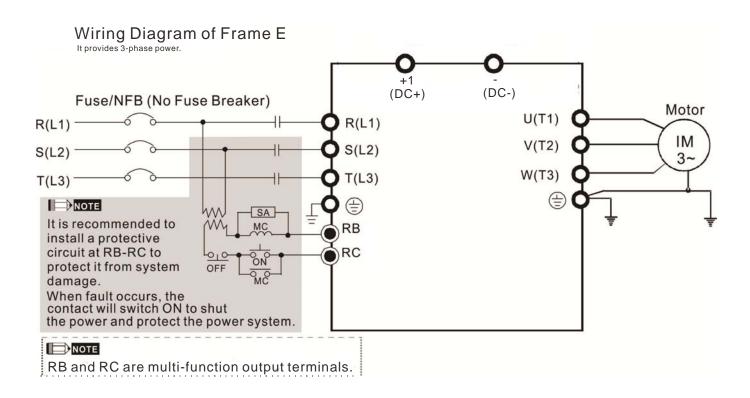

See page 3-5 for the wiring diagram of Emergency Power Supply (EPS).

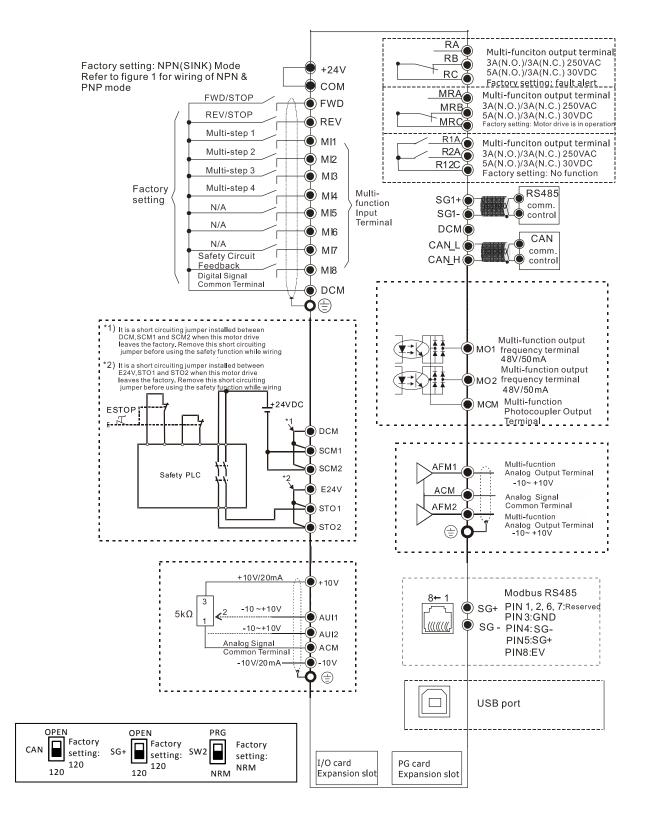


Figure 1
Switching between two modes: SINK(NPN) /SOURCE(PNP)


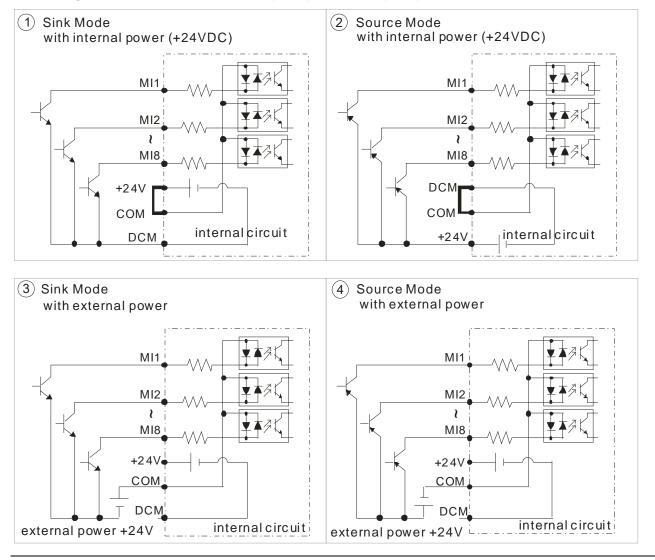


Figure 2. Emergency Power Supply (EPS) system wiring diagrams


For Frame B, C, D & E:


(1) Single phase UPS or battery can only be used on the main power supply

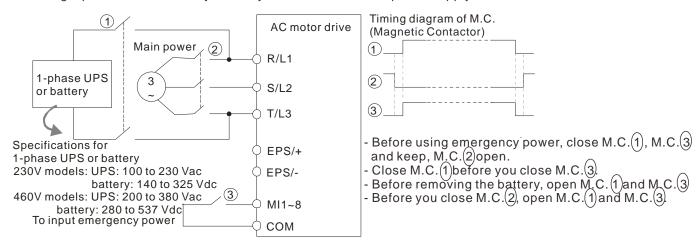

For Frame C & D:

(2) When the voltage of the main power supply is lower than 140Vdc(230V models) / 280Vdc (460V models), have the control power supply connected to a single phase UPS or a battery.

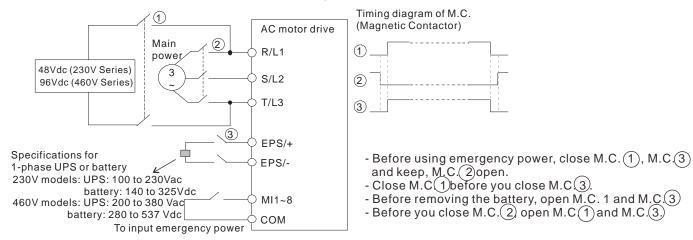

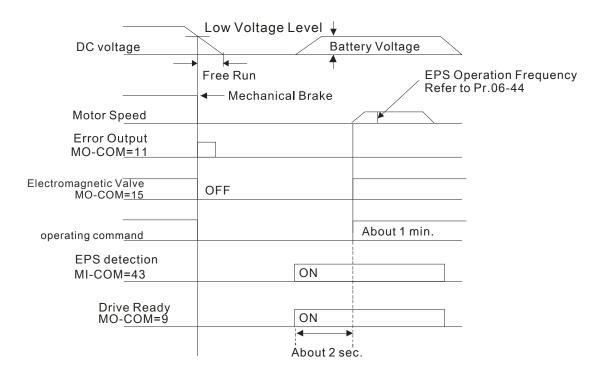


Notes about the emergency power supply (EPS).

Be aware of the following conditions when emergency power is ON:

- 1. Fan will not run to save energy from EPS.
- 2. Parameter setting will not be saved. When the power is turned off then applies again, the parameter setting will be gone.
- 3. Operate by the speed set at Pr.06-44.
- 4. Protections for low voltage and phase loss in NOT available.
- 5. Display DC-BUS voltage by Pr.06-29


3-2 System Wiring Diagram

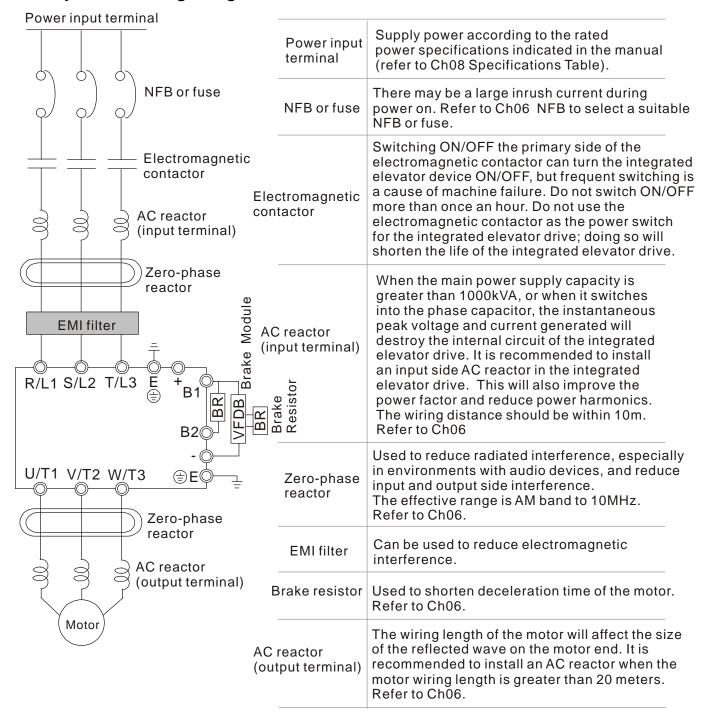


04 Main Circuit Terminals

4-1 Main Circuit Diagram


Frame B

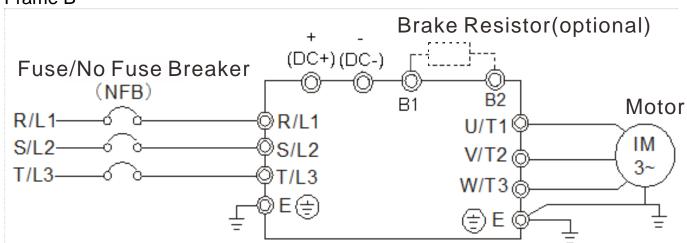

Frame C & D

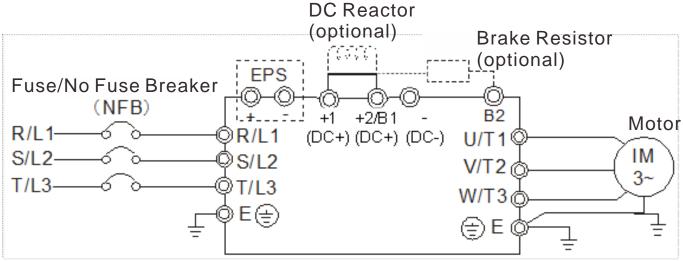

Frame E

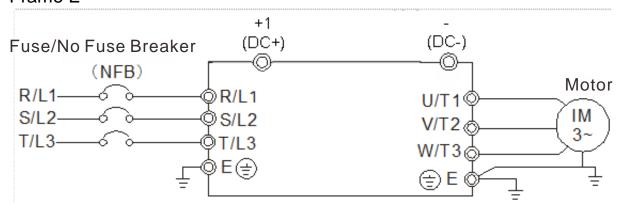

Terminal Symbol	Explanation of Terminal Function		
EPS (+, -)	Backup power/ Emergency power connection terminal.		
	*1:EPS (Emergency Power Supply) input terminal supports only frame C & D.		
R/L1, S/L2, T/L3	AC line input terminals 3-phase.		
U/T1, V/T2, W/T3 AC drive output terminals for connecting 3-phase induction motor.			
+1, +2/B1	Connections for DC reactor to improve the power factor. Remove the jumper before installing a DC reactor. (Frame E has a DC reactor built-in.).		
+2/B1, B2 Connections for brake resistor (optional).			
⊕ E	Earth connection, to comply with local regulations.		




Main input power terminals:

- ☑ Do not connect 3-phase model to one-phase power. R/L1, S/L2 and T/L3 has no phase-sequence requirement, it can be used upon random selection.
- ☑ A NFB must be installed between the 3-phase power input terminals and the main circuit terminals (R/L1, S/L2, T/L3). It is recommended to add a magnetic contactor (MC) to the power input wiring to cut off power quickly and reduce malfunction when activating the protection function of the AC motor drive. Both ends of the MC should have an R-C surge absorber.
- ☑ Fasten the screws in the main circuit terminal to prevent sparks condition made by the loose screws due to vibration.
- ✓ Use voltage and current within the specification in Chapter 8.
- ☑ When using a general ELB (Earth Leakage Breaker), select a current sensor with sensitivity of 200mA or above and not less than 0.1-second operation time to avoid nuisance tripping. When choosing an ELB designed for the AC motor drive, choose a current sensor with sensitivity of 30mA or above.
- ☑ Use the shield wire or tube for the power wiring and ground the two ends of the shield wire or tube.
- ☑ Do NOT run/stop AC motor drives by turning the power ON/OFF. Run/stop AC motor drives by sending RUN/STOP command via control terminals or keypad. If you still need to run/stop AC motor drives by turning power ON/OFF, it is recommended to do so only ONCE per hour

Output terminals of the main circuit:

When it is necessary to install a filter at the output side of terminals U/T1, V/T2, W/T3 on the AC motor drive. Use inductance filter. Do not use phase-compensation capacitors or L-C (Inductance-Capacitance) or R-C (Resistance-Capacitance).


- ☑ DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- ☑ Use well-insulated motors to prevent any electric leakage from motors.
 Terminals [+1, +2] for connecting DC reactor. Terminals [+1, +2/B1] for connecting brake resistor.
- ☑ These terminals are to connect to a DC reactor to improve the power factor and reduce harmonics. At the factory setting, a jumper is connected to these terminals. Remove that jumper before connecting to a DC reactor.

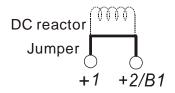

- ✓ Models above 22kW don't have a built-in brake resistor. To improve resistance ability, connect an external, optional brake resistor
- ☑ Short-circuiting [B2] or [—] to [+2/B1] will damage the motor drive. Do NOT do that.

4-2 Main Circuit Terminals Specifications

Frame B

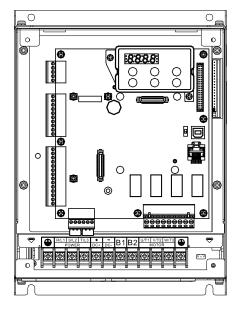


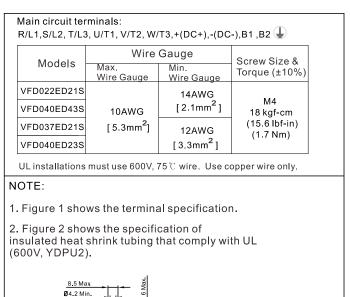



Figure 2

Ø8.5 Max


Figure 1


Frame C

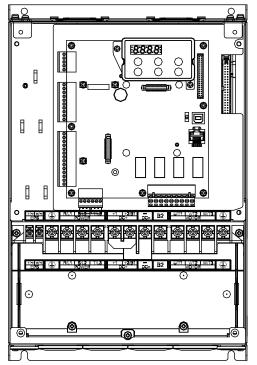

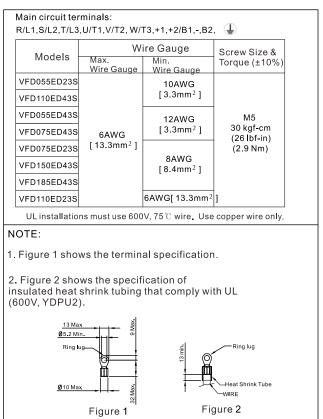



Frame D

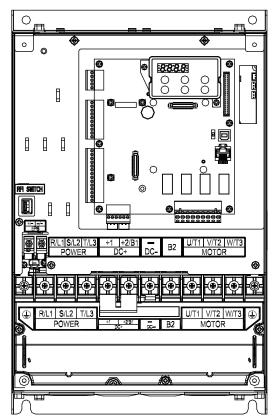

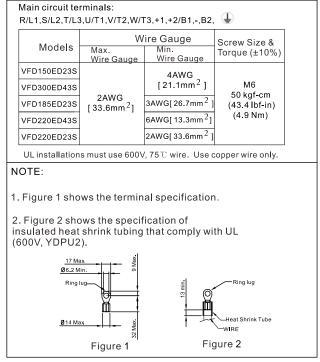

Frame E

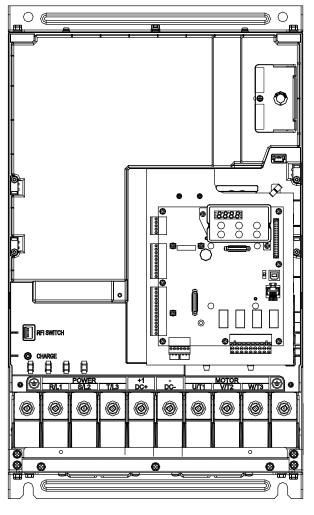

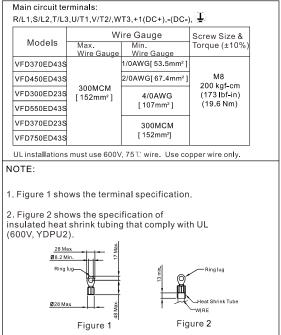


05 Control Terminals

Remove the top cover before wiring the multi-function input and output terminals


The motor drives' figures shown below are for reference only; the real motor drives may look different.

Remove the cover before wiring


Frame B, C & D:

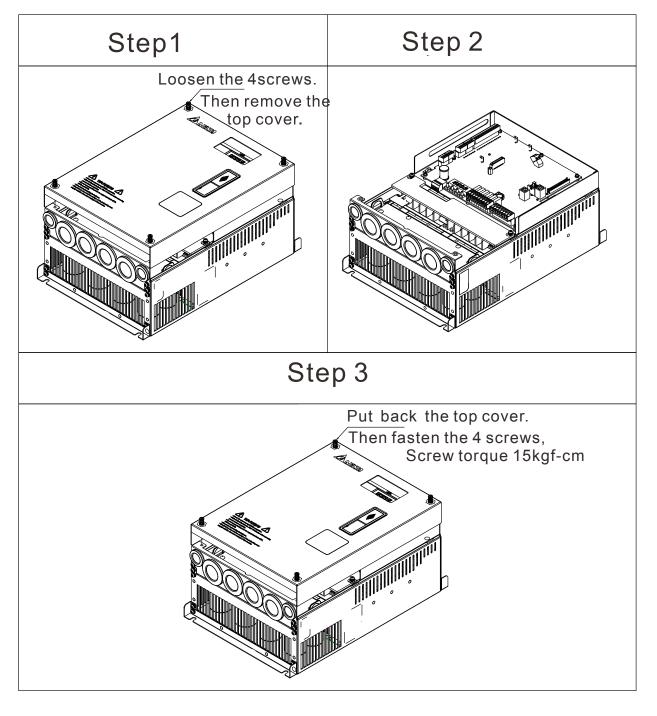

Frame E

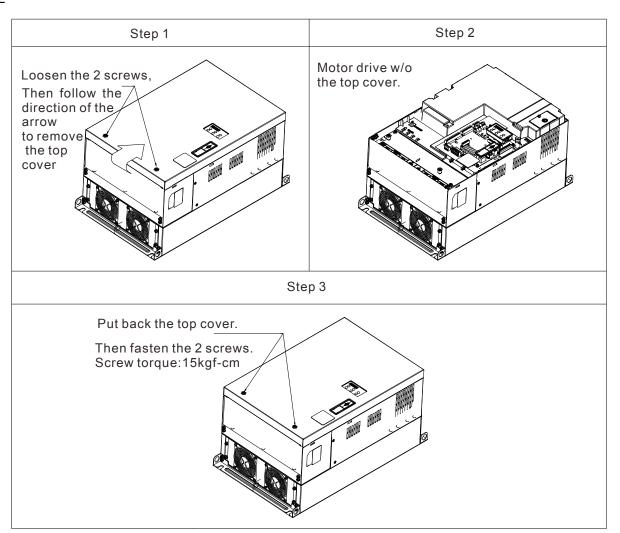

Specifications of the Control Terminal

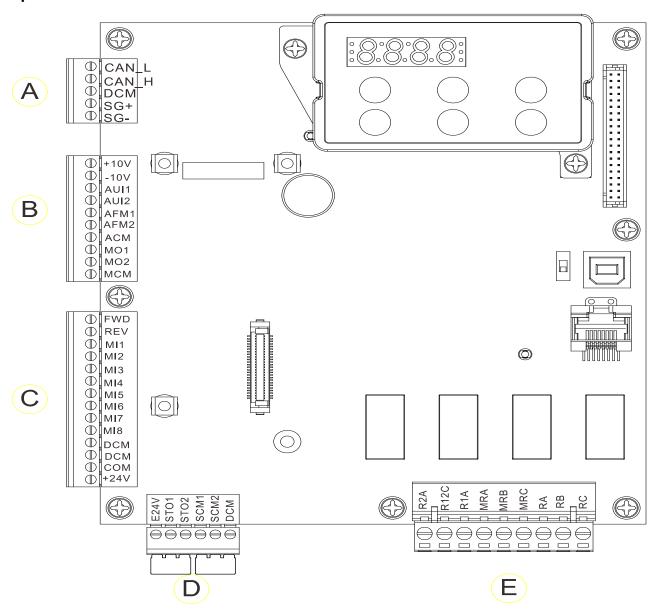

Control Circuit Terminal Sockets:

Terminal sockets A, B, C

Torque force: 2kg-cm [1.7lb-in.] (0.20Nm)

Wire gauge: 28~14AWG [0.08~2.07mm²]

Terminal socket D:

Torque force: 2kg-cm [1.7lb-in.] (0.20Nm)


Terminal socket E:

Torque force: 5.2kg-cm [4.5lb-in.] (0.51Nm)

Wire gauge: 28~12AWG [0.08~3.33mm²]

To comply with UL standards, copper wires which are able to sustain 600V, 75 ° C environments must be used in the installation.

Control Board Switch

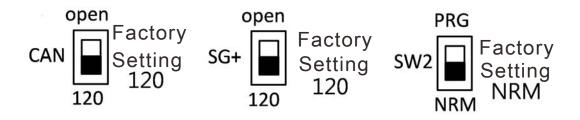

Terminals	Terminal Function	Factory Setting (NPN mode)
+24V/E24V	Digital control signal common terminal (Source)	+24V±5% 200mA
СОМ	Digital control signal common terminal (Sink)	Common terminal of multi-function input terminals
FWD	Forward-Stop command	FWD-DCM: ON= forward running OFF= deceleration to stop
REV	Reverse-Stop command	REV-DCM: ON= forward running OFF= deceleration to stop
MI1 ~ MI8	Multi-function input 1~8	Refer to parameters 02-01~02-08 to program the multi-function inputs MI1~MI8. Source mode: ON: the activation current is $6.5\text{mA} \ge 11\text{Vdc}$ OFF: cut-off voltage $10\mu\text{A} \le 11\text{Vdc}$
DCM	Digital frequency signal common terminal	
SCM1		
SCM2	The factory setting is short-circuiting The factory setting is short-circuiting	
STO1	Power removal safety function for El	
STO2		
+10V	Potentiometer power supply	Power supply of analog frequency setting: +10Vdc 20mA
-10V	Potentiometer power supply	Power supply of analog frequency setting
AUI1	Analog voltage frequency input +10V AUI circuit	
AUI2	ACM internal circuit	Impedance: 20kΩ Range: -10~+10VDC=0~ Max. Output Frequency(Pr.01-00)

ACM	Analog signal common terminal control	Analog signal terminal
RA	Multi-function relay output A (N.O.)	
RB	Multi-function relay output A (N.C.)	
RC	Multi-function relay output B (Error indication by factory setting)	
MRA	Multi-function output terminal (N.O.)	
MRB	Multi-function output terminal (N.C.)	User-defined function Resistive Load
MRC	Multi-function output terminal (Operating Indication by factory setting)	3A(N.O.)/3A(N.C.) 250VAC 5A(N.O.)/3A(N.C.) 30VDC (min. 5 VDC, 10 mA) To output different kinds of signal such as the motor drive
R1A	Multi-function output terminal A (N.O.)	is in operation, reaching the frequency, overload indication.
R2A	Multi-function output terminal A (N.O.)	
R12C	Multi-function output terminal (No function by factory setting)	
SG1+	Modbus RS-485	SG1+ switch: terminator 120 ohm (factory setting) / open
SG1-	Modbus RS-485	
CAN_L	CAN Bus	DIP Switch: terminator 120 ohm (factory setting)/ open
CAN_H	CAN Bus	
MO1	Multi-function output terminal 1 (photocoupler)	The AC motor drive releases various monitoring signals, such as drive in operation, reaching frequency and
MO2	Multi-function output terminal 2 (photocoupler)	overload indication via a transistor (open collector).
MCM	Multi-function output common terminal (photocoupler)	Max 48Vdc 50mA

AFM1	AFM1	$0\sim10$ V, Max. output current: 2mA, Max. load: 5 k Ω -10 \sim 10V, Max. output current: 2mA, Max. load: 5 k Ω Output current 2mA max Resolution $0\sim10$ V corresponds to the Max. operating frequency.			
AFM2	AFM2 ⊕EO	Range: 0~10V→-10~+10V 0~10V, Max. Output current: 2mA, Max. load: 5KΩ -10~10V, Max. output current: 2mA, Max. load: 5kΩ Output current:: 2mA max Resolution: 0~10V corresponds to the Max. operating frequency. Range: 0~10V→-10~+10V			
RJ-45	PIN 1,2,6,7 : Reserved PIN 3: PIN 4: SG- PIN 5: SG+	SGND PIN 8: EV			
SW2	Switching USB port	DIP Switch: NRM (factory setting) / PRG (this side of the switch is to update firmware and is intended for qualified motor drive service personnel only. Do NOT try to update by yourself.			

06 Optional Accessories

The optional accessories listed in this chapter are available upon request. Installing additional accessories to your drive would substantially improve the drive's performance. Please select an applicable accessory according to your need or contact the local distributor for suggestion.

6-1 Brake Resistors & Brake Units used in AC motor Drives

	Applicable Motor				125% Braking T	orque /30% ED *1								
	_	-				Braking Resi	stor serie	s for each		Max	κ. Brake Torque *΄	2		
Voltage	Model	Braking	Brake	e Unit	Resistor value	Br	ake Unit		Braking					
		Model		Torque * ³ (kg-m)	VFDB* ⁵	Quan-	spec. for each AC motor Drive	Part #* ⁴	Quanti -ty	Wring Method	Current (A)	Min. Resistor Value(Ω)	Max. Total Braking Current(A)	Peak Power (kW)
230V	VFD022ED21S	1.5			1000W 75Ω	0590600808	1		5.1	38.0	10	3.8		
	VFD037ED21S	2.5			2000W 37.5Ω	0590600808	2	2 parallel	10.1	19.0	20	7.6		
	VFD040ED23S	2.5			2000W 37.5Ω	0590600808	2	2 parallel	10.1	19.0	20	7.6		
	VFD055ED23S	3.7			3000W 25Ω	0590600808	3	3 parallel	15.2	15.6	24.4	9.3		
	VFD075ED23S	5.1			3000W 25Ω	0590600808	3	3 parallel	15.2	11.5	33	12.5		
	VFD110ED23S	7.5			5000W 15Ω	0590600808	5	5 parallel	25.3	9.5	40	15.2		
	VFD150ED23S	10.2			6000W 13Ω	0590800308	4	2 serial 2 parallel	29.2	8.3	46	17.5		
	VFD185ED23S	12.2			8000W 9.4Ω	0590600808	8	8 parallel	38.0	5.8	66	25.1		
	VFD220ED23S	14.9			8000W 9.4Ω	0590600808	8	8 parallel	40.5	5.8	66	25.1		
	VFD300ED23S	20.3	2015	2	9000W 6.5Ω	0590800308	8	2 serial 4 parallel	58.5	4.8	80	30.4		
	VFD370ED23S	25.1	2022	2	14000W 5.4Ω	0590600808	14	14 parallel	70.9	3.2	120	45.6		
460V	VFD040ED43S	2.7			1500W 280Ω	0594800008	2	2 serial	2.7	54.3	14	10.6		
	VFD055ED43S	3.7			2000W 150Ω	0590600808	2	2 serial	5.1	48.4	15.7	11.9		
	VFD075ED43S	5.1			4000W 75Ω	0590600808	4	2 serial 2 parallel	10.1	48.4	15.7	11.9		
	VFD110ED43S	7.5			4000W 75Ω	0590600808	4	2 serial 2 parallel	10.1	30.8	24.7	18.8		
	VFD150ED43S	10.1			6000W 50Ω	0590600808	6	2serial 3 parallel	15.2	25.0	30.4	23.1		
	VFD185ED43S	12.5			8000W 37.5Ω	0590600808	8	2 serial 4 parallel	20.3	20.8	36.5	27.7		
	VFD220ED43S	14.9			8000W 37.5Ω	0590600808	8	2 serial 4 parallel	20.3	19.0	40	30.4		
	VFD300ED43S	20.3			12000W 26Ω	0590800508	8	4 serial 2 parallel	29.2	14.1	54	41.0		
	VFD370ED43S	25.0	4045	1	14000W 21.4Ω	0594600008	14	2 serial 7 parallel	35.5	12.7	60	45.6		

VFD450ED43S	30.4	4045	1	16000W 18.8Ω	0590600408	16	2 serial 8 parallel	40.5	12.7	60	45.6
VFD550ED43S	37.2	4030	2	20000W 15Ω	0590600408	20	2 serial 10 parallel	50.7	9.5	80	60.8
VFD750ED43S	50.7	4045	2	28000W 10.7Ω	0590600408	28	2serial 14 parallel	70.9	6.3	120	91.2

^{*1} Calculation of 125% brake torque: (kW)*125%*0.8; where 0.8 is the motor efficiency.


Since there is a resistor limit of power consumption, the longest operation time for 30%ED is 30 sec (On: 30sec/ Off: 70sec).


- *2 Refer to the Brake Performance Curve for "Operation Duration & ED" vs. "Braking Current".
- *3 The calculation of the braking torque I s based on a 4-pole motor (1800 rpm).
- * To dissipate heat, a resistor of 400W or lower should be fixed to the frame and maintain the surface temperature below 250°C (482 °F); a resistor of 1000W and above should maintain the surface temperature below 600°C (1112
- °F). If the surface temperature is higher than the temperature limit, install more heat dissipating system or increase the size of the resistor.
- *5 Refer to VFDB series Braking Module Instruction for more detail on braking resistor.

NOTE

1. Select the recommended resistance value (Watt) and the duty-cycle value (ED %). Definition for Brake Usage ED%

Explanation: The definition of the brake usage ED (%) is for assurance of enough time for the brake unit and brake resistor to dissipate away heat generated by braking. When the brake resistor heats up, the resistance would increase with temperature, and brake torque would decrease accordingly. Recommended cycle time is one minute.

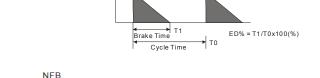

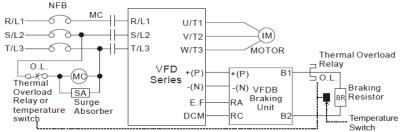


Note1: When using the AC drive with DC reactor, please refer to wiring diagram in the AC drive user manual for the wiring of terminal +(P) of Braking unit.

Note2: **Do NOT** wire terminal -(N) to the neutral point of power system.

For safety consideration, install an overload relay between the brake unit and the brake resistor. In conjunction with the magnetic contactor (MC) prior to the drive, it can perform complete protection against abnormality. The purpose of installing the thermal overload relay is to protect the brake resistor from damage due to frequent brake, or due to brake unit keeping operating resulted from unusual high input voltage. Under such circumstance, just turn off the power to prevent damaging the brake resistor.

- 2. If damage to the drive or other equipment is due to the fact that the brake resistors and the brake modules in use are not provided by Delta, the warranty will be void.
- 3. Take into consideration the safety of the environment when installing the brake resistors. If the minimum resistance value is to be utilized, consult local dealers for the calculation of the Watt figures.
- 4. When using more than 2 brake units, equivalent resistor value of parallel brake unit can't be less than the value in the column "Minimum Equivalent Resistor Value for Each AC Drive" (the right-most column in the table).
- 5. This chart is for normal usage; if the AC motor drive is applied for frequent braking, it is suggested to enlarge 2~3 times of the Watts.
- 6. Thermal relay selection:

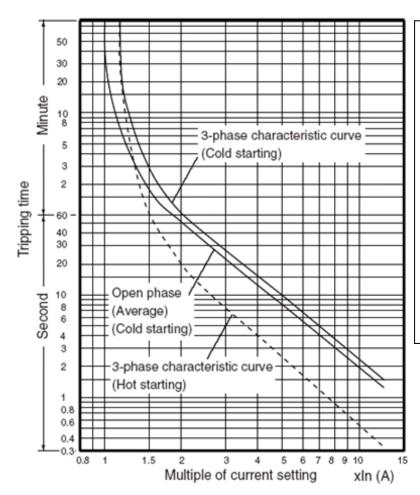

Thermal Relay:

Thermal relay selection is based on its overload capability. A standard braking capacity of ED is 10%ED (Tripping time=10s). The figure on the left is an example of 460V, 110kw AC motor drive. It requires the thermal relay to take 260% overload capacity for 10sec (hot starting) and the braking current is 126A. In this case, user should select a rated 50A thermal relay. The property of each thermal relay may vary among different manufacturers. Read carefully the user guide of a thermal relay before using it.

6-2 Non-fuse Circuit Breaker

Comply with UL standard: Per UL 508, paragraph 45.8.4, part a. The rated current of a breaker shall be 2~4 times of the maximum rated input current of AC motor drive.

3-phase							
Model	Recommended						
	non-fuse breaker(A)						
VFD022ED21S	50						
VFD037ED21S	75						
VFD040ED23S	40						
VFD055ED23S	50						
VFD075ED23S	60						
VFD110ED23S	100						
VFD150ED23S	125						
VFD185ED23S	150						
VFD220ED23S	175						
VFD300ED23S	250						
VFD370ED23S	300						

3-phase								
Model	Recommended							
	non-fuse breaker(A)							
VFD040ED43S	30							
VFD055ED43S	35							
VFD075ED43S	40							
VFD110ED43S	50							
VFD150ED43S	60							
VFD185ED43S	75							
VFD220ED43S	100							
VFD300ED43S	125							
VFD370ED43S	150							
VFD450ED43S	200							
VFD550ED43S	250							
VFD750ED43S	350							

6-3 Fuse Specification Chart

• Use only the fuses comply with UL certificated.

Use only the fuses comply with local regulations.

	Input Current (A)	Line Fuse			
Model	Input Current (A)	I (A)	Bussmann P/N		
VFD022ED21S	26	60	JJN-60		
VFD037ED21S	37	90	JJN-90		
VFD040ED23S	20	50	JJN-50		
VFD055ED23S	23	60	JJN-60		
VFD075ED23S	30	80	JJN-80		
VFD110ED23S	47	125	JJN-125		
VFD150ED23S	56	150	JJN-150		
VFD185ED23S	73	175	JJN-175		
VFD220ED23S	90	225	JJN-225		
VFD300ED23S	132	300	JJN-300		
VFD370ED23S	161	400	JJN-400		
VFD040ED43S	11.5	35	JJS-35		
VFD055ED43S	14	40	JJS-40		
VFD075ED43S	17	45	JJS-45		
VFD110ED43S	24	60	JJS-60		
VFD150ED43S	30	80	JJS-80		
VFD185ED43S	37	90	JJS-90		
VFD220ED43S	47	110	JJS-110		
VFD300ED43S	58	150	JJS-150		
VFD370ED43S	80	200	JJS-200		
VFD450ED43S	100	250	JJS-250		
VFD550ED43S	128	300	JJS-300		
VFD750ED43S	165	400	JJS-400		

6-4 AC/ DC Reactor

AC Input/ Output Reactor

200V~230V/ 50~60Hz (Single Phase Power)

Туре	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC Reactor	3% Input AC reactor Delta Part#
022	2.2	3	12	24	0.919	1.531	X	N/A
037	3.7	5	17	34	0.649	1.081	Х	N/A

200V~230V/ 50~60Hz (Three-phase power)

Туре	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC Reactor	3% Input AC reactor Delta Part#
040	4	5	20	40	0.551	0.919	Х	N/A
055	5.5	7.5	24	48	0.459	0.766	Х	N/A
075	7.5	10	30	60	0.320	0.534	Х	N/A
110	11	15	45	90	0.216	0.359	Х	N/A
150	15	20	58	116	0.163	0.271	Х	N/A
185	18.5	25	77	154	0.143	0.239	Х	N/A
220	22	30	87	174	0.127	0.211	Х	N/A
300	30	40	132	264	0.084	0.139	0	N/A
370	37	50	161	322	0.068	0.114	0	N/A

380V~460V/ 50~60Hz (Three-phase power)

Туре	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC Reactor	3% Input AC reactor Delta Part#
040	4	5	11.5	23	1.838	3.063	Х	N/A
055	5.5	7.5	13	26	1.626	2.710	Х	N/A
075	7.5	10	17	34	1.243	2.072	Х	N/A
110	11	15	23	46	0.919	1.531	Х	N/A
150	15	20	30	60	0.704	1.174	Х	N/A
185	18.5	25	38	76	0.556	0.927	Х	N/A
220	22	30	45	90	0.470	0.783	Х	N/A
300	30	40	58	116	0.364	0.607	Х	N/A
370	37	50	80	160	0.264	0.440	0	N/A
450	45	60	100	200	0.211	0.352	0	N/A
550	55	75	128	256	0.165	0.275	0	N/A
750	75	100	165	330	0.128	0.213	0	N/A

DC Input Reactor

200V~230V/ 50~60Hz (Three-phase power)

	KW	ШВ	Rated	Max. Continuous	DC	DC
Туре		HP	Amps	Amps	Reactor	Reactor
			(Arms)	(Arms)	(mH)	Delta Part#
040	4	5	20	40	1.273	N/A
055	5.5	7.5	24	48	1.061	N/A
075	7.5	10	30	60	0.740	N/A
110	11	15	45	90	0.498	N/A
150	15	20	58	116	0.375	N/A
185	18.5	25	77	154	0.331	N/A
220	22	30	87	174	0.293	N/A
300	30	40	132	264	0.193	N/A
370	37	50	161	322	0.158	N/A

380V~460V/ 50~60Hz (Three-phase power)


			Rated	Max. Continuous	DC	DC
Туре	KW	HP	Amps	Amps	Reactor	Reactor
			(Arms)	(Arms)	(mH)	Delta Part#
040	4	5	11.5	23	4.244	N/A
055	5.5	7.5	13	26	3.754	N/A
075	7.5	10	17	34	2.871	N/A
110	11	15	23	46	2.122	N/A
150	15	20	30	60	1.627	N/A
185	18.5	25	38	76	1.284	N/A
220	22	30	45	90	1.085	N/A
300	30	40	58	116	0.842	N/A
370	37	50	80	160	built-in	N/A
450	45	60	100	200	built-in	N/A
550	55	75	128	256	built-in	N/A
750	75	100	165	330	built-in	N/A


THD (Total Harmonic Distortion)


	Motor Drive Spec.		Without Built-In Reactor						
	Reactor Spec.	3% Input AC Reactor	DC Reactor	DC Reactor + 3% Input Reactor	DC + 5% Input Reactor	3% Input Reactor			
	THD	44%	46%	34%	30%	34%			
ĺ	Note:	THD may vary due to different installation conditions and environment (wires, moto							

According to IEC61000-3-12, DC Reactor is designed with 4% system impedance, and AC Reactor is designed with 3% system impedance.

6-5 Zero Phase Reactor

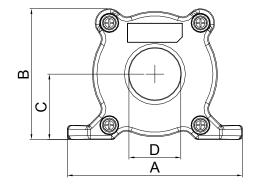


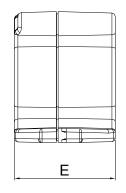


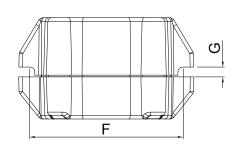


unit: mm (inch)

Model	Α	В	С	D	E	F	G(Ø)	Torque
RF008X00A	98 (3.858)	73 (2.874)	36.5 (1.437)	29 (1.142)	56.5 (2.224)	86 (3.386)	5.5 (0.217)	8~ 10kgf/cm
RF004X00A	110 (4.331)	87.5 (3.445)	43.5 (1.713)	36 (1.417)	53 (2.087)	96 (3.780)	5.5 (0.217)	8~ 10kgf/cm

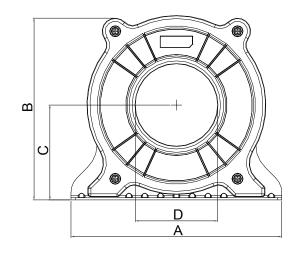


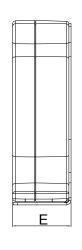


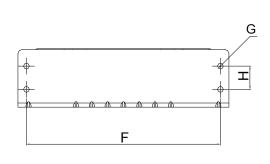

unit: mm (inch)

model	Α	В	С	D	E	F	G(Ø)	Н	Torque
RF002X00A	200 (7.874)	172.5 (6.791)	90 (3.543)	78 (3.071)	55.5 (2.185)	184 (7.244)	5.5 (0.217)	22 (0.866)	40~45kgf/cm

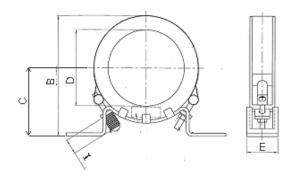

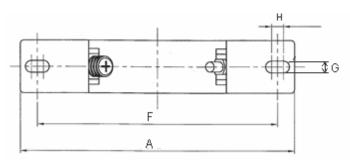

unit: mm (inch)

model	Α	В	С	D	E	F	G(Ø)	Н	I
RF300X00A	241(9.488)	217(8.543)	114(4.488)	155(6.102)	42(1.654)	220(8.661)	6.5(0.256)	7.0(0.276)	20(0.787)


Torque:40~45kgf/cm

Reactor model (Note)	Recommended Wire Size		Wiring Method	Qty	Applicable Motor Drive
RF008X00A	≦8 AWG	\leq 8.37 mm ²	Diagram A	1	VFD022ED21S
					VFD040ED23S VFD040ED43S
					VFD055ED23S VFD075ED23S
RF004X00A	≦4 AWG	\leq 21.15 mm ²	Diagram A	1	VFD110ED23S VFD055ED43S
KF004X00A	≅₹AVVO				VFD075ED43S VFD110ED43S
					VFD150ED43S VFD185ED43S
					VFD150ED23S VFD185ED23S
RF002X00A	\leqq 2 AWG	\leq 33.62 mm 2	Diagram A	1	VFD220ED23S VFD220ED43S
					VFD300ED43S
					VFD300ED23S VFD370ED23S
RF300X00A	≦300 MCM	\leq 152 mm 2	Diagram A	1	VFD370ED43S VFD450ED43S
					VFD550ED43S VFD750ED43S

Note: 600V insulated cable wire

Diagram A

Put all wires through at least one core without winding

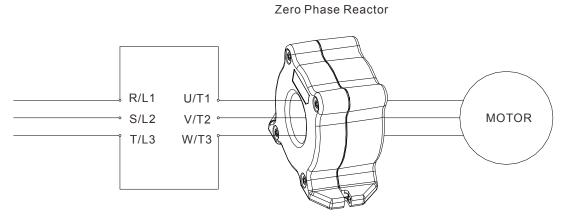

Note 1: The table above gives approximate wire size for the zero phase reactors but the selection is ultimately governed by the type and diameter of cable fitted i.e. the cable must fit through the center hole of zero phase reactors.

Note 2: Only the phase conductors should pass through, not the earth core or screen.

Note3: When long motor output cables are used an output zero phase reactor may be required to reduce radiated emissions from the cable.

6-6 EMI Filter

The following table shows external EMC filter models for each ED-S series motor drive.

Choose corresponding zero phase reactor and applicable shielding cable according to required noise emission and electromagnetic disturbance rating, to make the best assembly and restrain electromagnetic disturbance. If radiation emission (RE) is ignored, and only needs conducted emission (CE) to reach EN55011 Class A on site, zero phase reactor does not need to add at input side, and it can reach the standard of EMC.

220V models


	VFD-ED			Zero Phas	se Inverter		EN12015	
Fra me	Motor Drive model #	Rated Input Current (A)	EMI Filter Model #	Input side (R/S/T)	Output side (U/V/W)	Carrier Frequen cy	Conducted Emission Length of output shielded cable 50m	Radiation Emission
	VFD022ED21S	24	B84142A0042R122	RF008X00A	-		CLASS A	CLASS A
В	VFD037ED21S	34	B84142A0042R122	RF008X00A	-		CLASSA	CLASSA
	VFD040ED23S	20	EMF035A23A	RF008X00A	-		CLASS A	CLASS A
	VFD055ED23S	23	EMF056A23A	RF004X00A	-	Comica	CLASS A	CLASS A
С	VFD075ED23S	30	EMF056A23A	RF004X00A	-	Carrier frequency	CLASS A	CLASS A
	VFD110ED23S	47	EMF056A23A	RF004X00A	-	by factory	CLASS A	CLASS A
	VFD150ED23S	56	B84143D0150R127	RF002X00A	-	setting	CLASS A	CLASS A
D	VFD185ED23S	73	B84143D0150R127	RF002X00A	-		CLASS A	CLASS A
	VFD220ED23S	90	B84143D0150R127	RF002X00A	-		CLASS A	CLASS A
_	VFD300ED23S	132	B84143D0150R127	RF002X00A	-		CLASS A	CLASS A
E	VFD370ED23S	161	B84143D0200R127	RF300X00A	-		CLASS A	CLASS A

460V models


	VFD-ED			Zero Phas	e Reactor		EN12015	
Fra me	Motor Drive model #	Rated Input Current (A)	EMI Filter model #	Input Side (R/S/T)	Output Side (U/V/W)	Carrier Frequen cy	Conducted Emission Length of output Shielded Cable 50m	Radiation Emission
В	VFD040ED43S	11.5	EMF018A43A	RF008X00A	-		CLASS A	CLASS A
	VFD055ED43S	14	EMF033A43A	RF004X00A	-		CLASSA	CLASS A
	VFD075ED43S	17	EMF033A43A	RF004X00A	-		CLASS A	CLASS A
С	VFD110ED43S	24	EMF033A43A	RF004X00A	-		CLASS A	CLASS A
	VFD150ED43S	30	B84143D0075R127	RF004X00A	-		CLASS A	CLASS A
	VFD185ED43S	37	B84143D0075R127	RF004X00A	-	Carrier Frequency	CLASS A	CLASS A
	VFD220ED43S	47	B84143D0090R127	RF002X00A	-	by Factory Setting	CLASS A	CLASS A
D	VFD300ED43S	58	B84143D0090R127	RF002X00A	-		CLASS A	CLASS A
	VFD370ED43S	80	B84143D0200R127	RF300X00A	-		CLASS A	CLASS A
F	VFD450ED43S	100	B84143D0200R127	RF300X00A	-		CLASS A	CLASS A
E	VFD550ED43S	128	B84143D0200R127	RF300X00A	-		CLASS A	CLASS A
	VFD750ED43S	165	B84143D0200R127	RF300X00A	-		CLASS A	CLASS A

EMI Filter Schematic Diagrams


EMI Filter model #: EMF018A43A

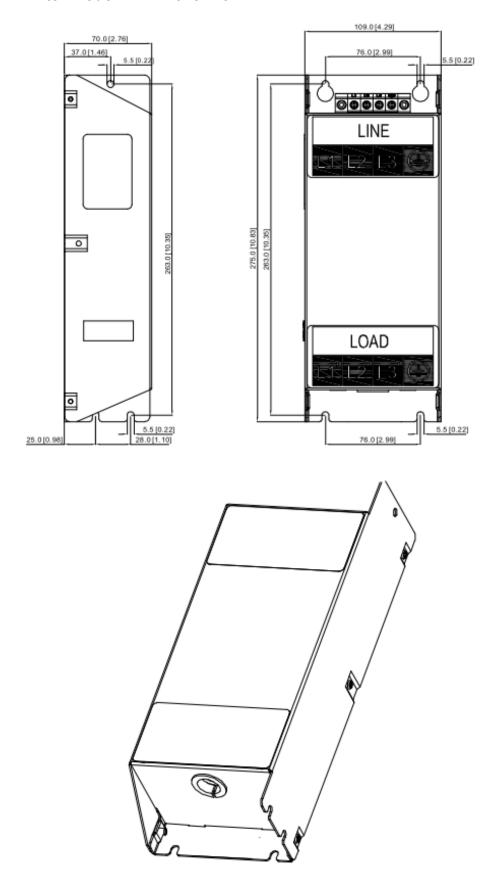


EMI Filter model #: EMF035A23A \ EMF033A43A

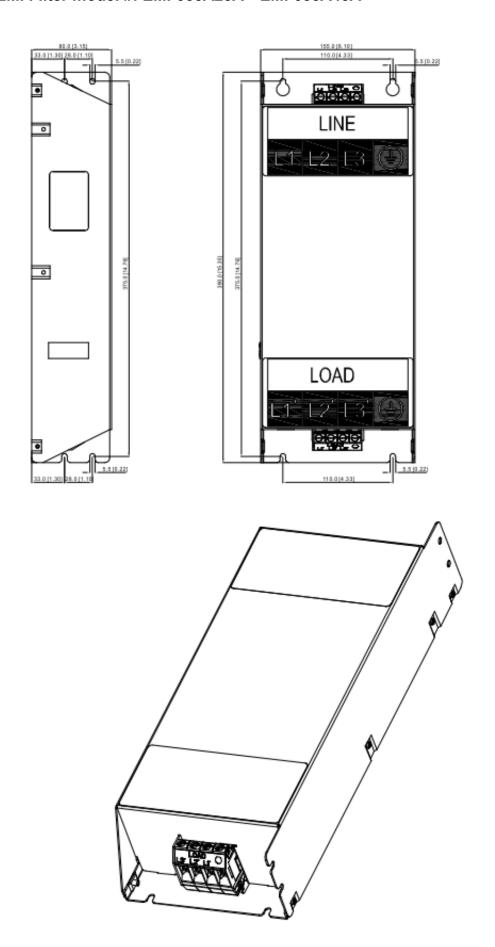


EMI Filter model #: EMF056A23A

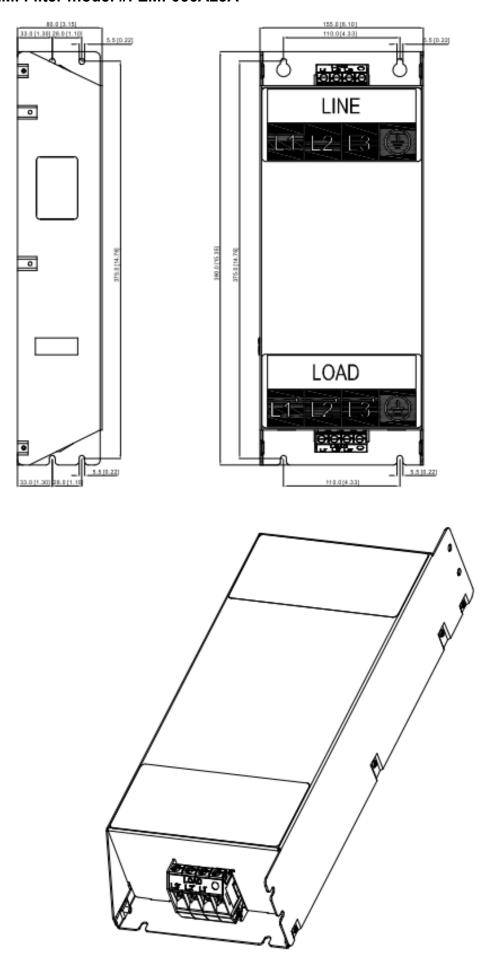


EMI Filter model #: B84143D0075R127; B84143D0090R127

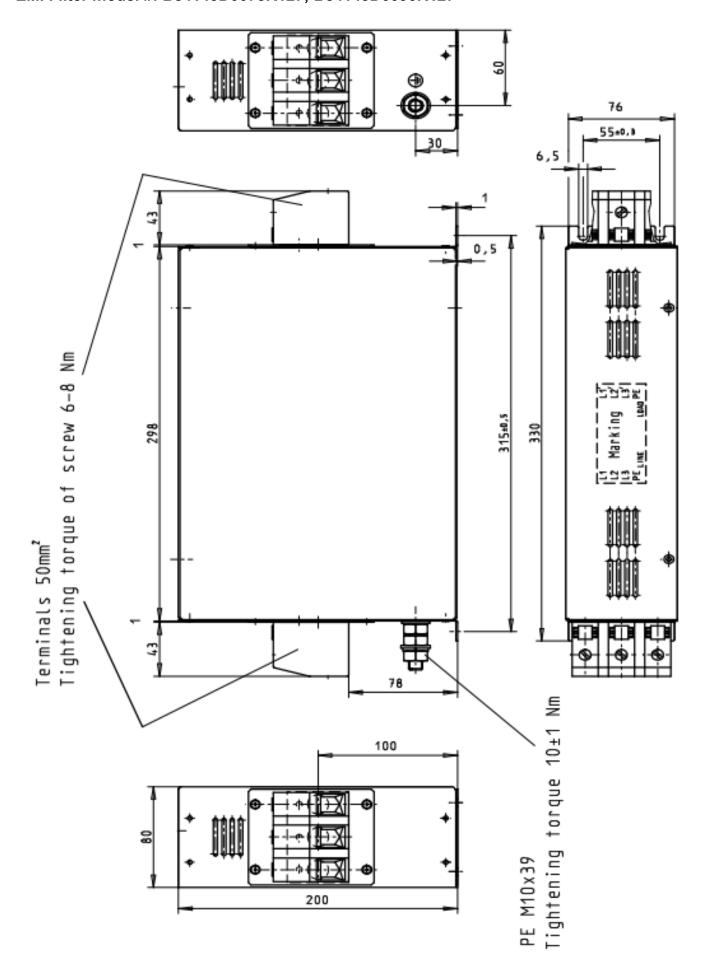


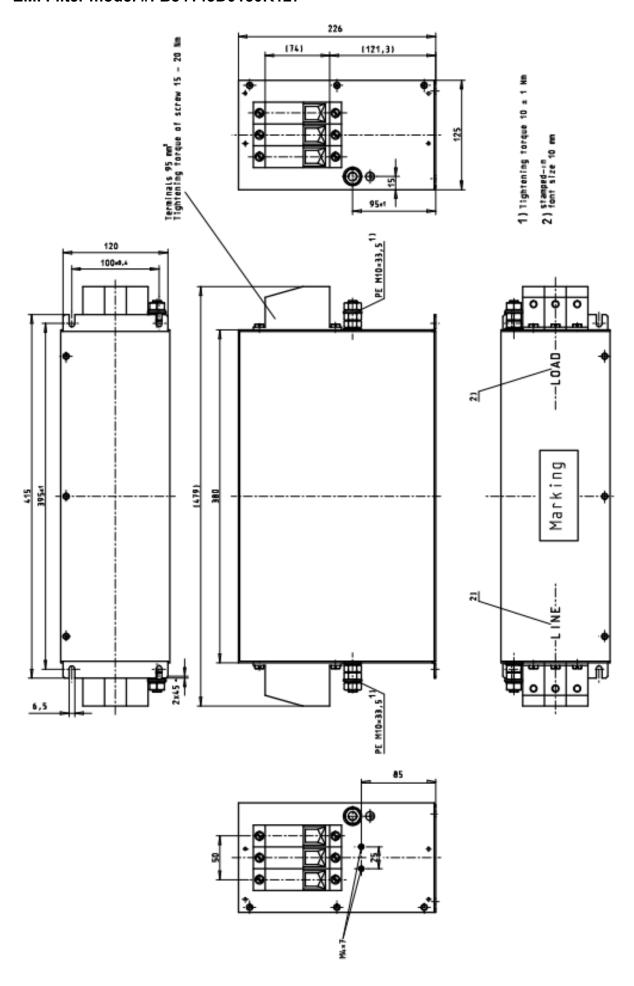

EMI Filter model #: B84143D0200R127

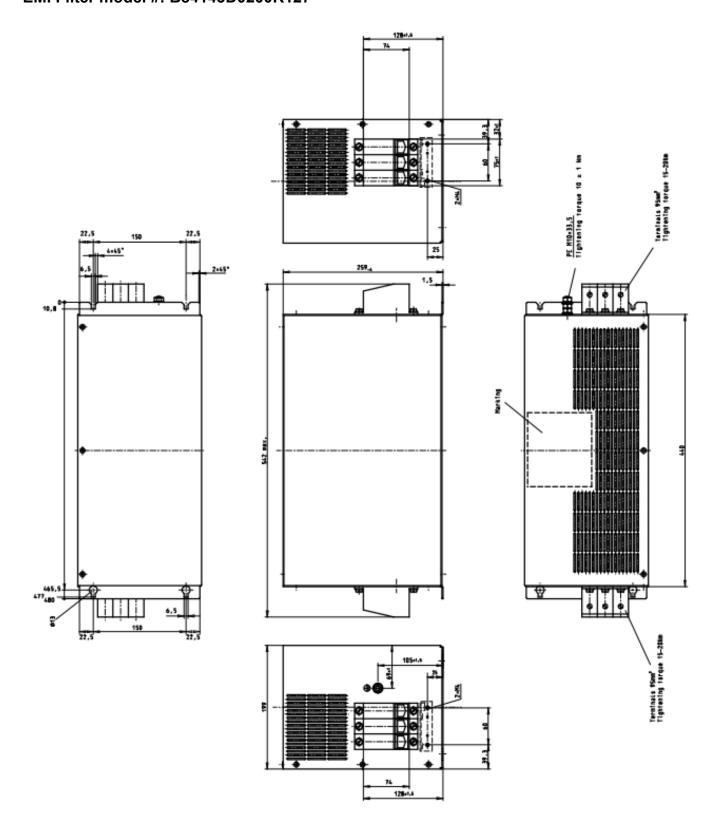

EMI Filter model #: B84142A0042R122

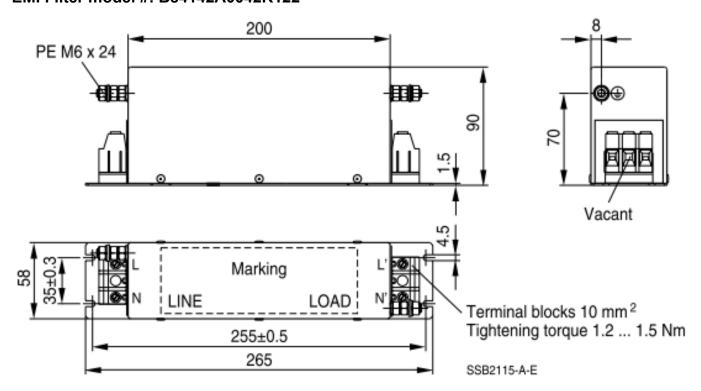

EMI Filter Installation

All electrical equipment, including AC motor drives, will generate high-frequency/low-frequency noise and will interfere with peripheral equipment by radiation or conduction when in operation. By using an EMI filter with correct installation, much interference can be eliminated. It is recommended to use DELTA EMI filter to have the best interference elimination performance.

We assure that it can comply with following rules when AC motor drive and EMI filter are installed and wired according to user manual:

- EN61000-6-4
- EN61800-3: 1996
- EN55011: (1991) Class A Group 1 (1st Environment, restricted distribution)
- European Standards: EN12015 & EN12016

General precaution

- 1. EMI filter and AC motor drive should be installed on the same metal plate.
- 2. Install AC motor drive on footprint EMI filter or install EMI filter as close as possible to the AC motor drive.
- 3. Wire as short as possible.
- 4. Metal plate should be grounded.
- 5. The cover of EMI filter and AC motor drive or grounding should be fixed on the metal plate and the contact area should be as large as possible.

Choose suitable motor cable and precautions

Improper installation and choice of motor cable will affect the performance of EMI filter. Be sure to observe the following precautions when selecting motor cable.

- 1. Use the cable with shielding (double shielding is the best).
- 2. The shielding on both ends of the motor cable should be grounded with the minimum length and maximum contact area.
- 3. Remove any paint on metal saddle for good ground contact with the plate and shielding.

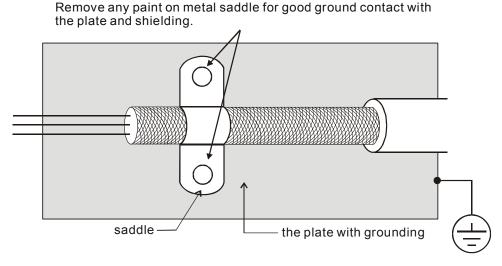


Figure 1

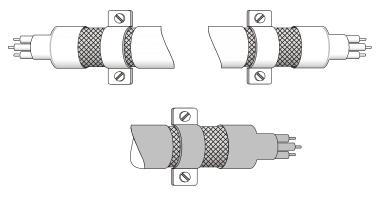


Figure 2

The length of motor cable

- 1. Required cable length when the motor drive is at full load.
- a. Non-shielded cable: For models of 5.5kW (7.5HP) and below, the maximum cable length is 100m (328ft). For 7.5kW(10HP) and above, the maximum cable length is 200m(656ft)
- b. Shielded cable: For models of 5.5kw (7.5HP) and below, the maximum cable length is 50m (165ft). For models of 7.5kW (10HP), the maximum cable length is 100m (328ft).
- c. In order to be compatible with the European Standards EN12015 & EN12016, it is required not to only follow the precautions mentioned on page6-10, but also required to satisfy one of the two conditions below:
 - Use shielded cables
 - The length of motor cable has to be shorter than 2m (6ft).

If the cable length is longer than the recommended lengths above, it will be necessary to install an output reactor.



- If the length is too long, the stray capacitance between cables will increase and may cause leakage current. It will activate the protection of over current, increase leakage current or not insure the correction of current display. The worst case is that AC motor drive may damage.
- If more than one motor is connected to the AC motor drive, the total wiring length is the sum of the wiring length from AC motor drive to each motor.
- For the 460V series AC motor drive, when an overload relay is installed between the drive and the motor to protect motor overheating, the connecting cable must be shorter than 50m. However, an overload relay malfunction may still occur. To prevent the malfunction, install an output reactor (optional) to the drive or lower the carrier frequency setting (Pr.00-12).

2. Consequence of the surge voltages on the motor

When a motor is driven by an AC motor drive of PWM type, the motor terminals will experience surge voltages easily due to components conversion of AC motor drive and cable capacitance. When the motor cable is very long (especially for the 460V series), surge voltages may reduce insulation quality. To prevent this situation, please follow the rules below:

- Use a motor with enhanced insulation.
- Connect an output reactor (optional) to the output terminals of the AC motor drive
- The length of the cable between AC motor drive and motor should be as short as possible (10 to 20 m or less)
- For models 7.5hp and above:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	20m(66ft)	100m(328ft)	400m(1312ft)
230VAC input voltage	400m(1312ft)	400m(1312ft)	400m(1312ft)

■ For models 5hp and less:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	20m(66ft)	50m(165ft)	50m(165ft)
230VAC input voltage	100m(328ft)	100m(328ft)	100m(328ft)



Never connect phase lead capacitors or surge absorbers to the output terminals of the AC motor drive.

6-7 Digital Keypad

KPC-CC01



A: LED Display

Display frequency, current, voltage and error etc.

B: Status Indicator

F: Frequency Command H: Output Frequency U: User Defined Units ERR: CAN Error Indicator RUN: CAN Run Indicator

C: Function


(Refer to the chart follows for detail description)

Key	Description
ESC	ESC Key
	Press ESC key to return to the previous page. It also functions as a return to last category key in the sub-menu.
MENU	Menu Key
	Press MENU key under any condition will return to the main MENU.
	Menu content:
	Parameter Detail Seypad locked
	Copy Parameter 4. PLC Function
ENTER	ENTER Key
	Press ENTER and go to the next level. If it is the last level then press ENTER to execute the command.
HAND	HAND ON Key
	1. HAND key will operates according to the parameter settings when the source of HAND master frequency
	command and the source of HAND operation command is properly set,. The factory setting of the source
	command for frequency and operation are from the digital keypad.
	2. Press HAND key in stop status, the drive setting switches to the parameter setting of HAND. Press HAND
	key in during operation, the drive will come to stop then switches to the parameter setting of HAND.
	3. When process complete: H/A LED ON.
AUTO	Auto Operation Key
	1. AUTO function executes according to the parameter settings of the source of AUTO frequency and AUTO
	operation. The factory setting is the external terminal (source of operation is 4-20mA).
	2. Press the ATUO key in stop status, the drivel switches to auto-setting. Press the auto key during operation
	status, the drivel will come to stop and switch to auto-setting.
EMD/DEV	3. When process complete: H/A LED is OFF
FWD/REV	Operation Direction Key
	1. FWD/REV key controls the operation direction but will NOT activate the drive. FWD: forward, REV: reverse.
DUN	2. The drive operates in the direction as shown by the LED light.
RUN	Start Key 1. This button is functional only when the keypad is the source of the command
	1. This button is functional only when the keypad is the source of the command.2. This button allows the motor drive to run by following its settings. See Description of LED functions for LED
	status
	3. Press repeatedly the "RUN" button is allowed while the motor drive is stopping.
STOP	Stop Key.
3105	1. STOP key has the highest priority in command.
	Press STOP key, the drive will come to stop under any condition.
	3. The RESET key can be used to reset the drive when faults occur. If the RESET key is not responding, check
	MENU → Fault Records and check the most recent fault.
	MENO 7 Functional and oncovers most recent fault.

Description of LED Functions

LED	ED FUNCTIONS	Description					
(RUN	start after fault and speed search. inking: drive is decelerating to stop opended to stop opended the state of the state o	AC motor drive, including DC brake, zero speed, standby, or in the status of base block.					
	Steady ON: stop indicator of the AC of the AC of the AC of the Action of the AC of the	s. TOP" command.					
FWD	Operation Direction LED 『Green light= Forward』;『Red light= Reversely』 Steady ON: the drive is running forward. Blinking: the drive is changing direction. Steady Off: the drive is running reversely.						
	JN (Green light):						
	LED status	Condition/State					
	OFF CANopen at initial	No LED					
	Blinking CANopen at pre-operation						
CANopen ~"RUN"	OFF 200 200						
	Single flash ON 200 20 ms m						
	ON CANopen at operation sta	tus No LED					
	RR (Red light):						
	LED status	Condition/ State					
	OFF Single	No Error					
	Single flash One message fail ON - 200 2	00 100					
	OFF -	ns ms					
CANopen ~"ERR"	Double flash ON 200 200 ms ms	100 ms ms					
		200 200 100 ms ms					
	ON	Bus off					

Dimension

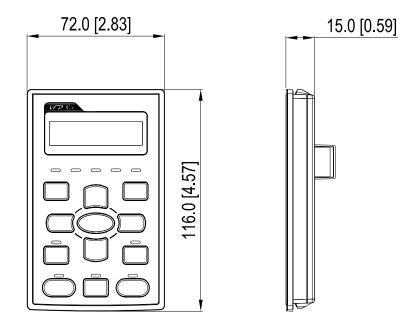

RJ45 Extension Lead for Digital Keypad

Part #	Description
CBC-K3FT	3 feet RJ45 extension lead (approximately 0.9m)
CBC-K5FT	5 feet RJ45 extension lead (approximately 1.5 m)
CBC-K7FT	7 feet RJ45 extension lead (approximately 2.1 m)
CBC-K10FT	10 feet RJ45 extension lead (approximately 3 m)
CBC-K16FT	16 feet RJ45 extension lead (approximately 4.9 m)

6-8 USB/RS-485 Communication Interface IFD6530

/ Warning


- ✓ Read thoroughly this section before installation and putting it into use.
- ✓ The content of this section and the driver file may be revised without prior notice. Consult our distributors or download the most updated instruction/driver version at <u>AC Motor Drive > Optional</u>

Introduction

IFD6530 is a convenient RS-485-to-USB converter, which does not require external power-supply and complex setting process. It supports baud rate from 75 to 115.2kbps and auto switching direction of data transmission. In addition, it adopts RJ-45 in RS-485 connector for users to wire conveniently. And its tiny dimension, handy use of plug-and-play and hot-swap provide more conveniences for connecting all DELTA IABU products to your PC.

Applicable Models: All DELTA IABU products.

■ Application & Dimension:

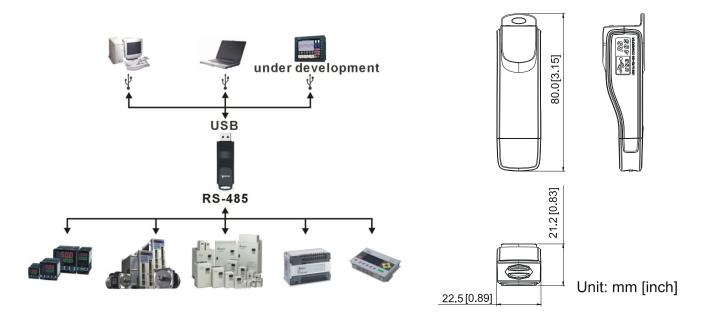

Specifications

Power supply	No external power is needed			
Power consumption	1.5W			
Isolated voltage	2,500VDC			
Baud rate	75, 150, 300, 600, 1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600, 115,200 bps			
RS-485 connector	RJ-45			
USB connector	A type (plug)			
Compatibility	Full compliance with USB V2.0 specification			
Max. cable length	RS-485 Communication Port: 100 m			
Support RS-485 half-duplex transmission				

RJ-45



PIN	Description
1	Reserved
2	Reserved
3	GND
4	SG-


PIN	Description
5	SG+
6	GND
7	Reserved
8	+9V


Preparation before Installing Driver

Extract the driver file (IFD6530_Drivers.exe) by following steps. You could find driver file (IFD6530_Drivers.exe) in the CD supplied with IFD6530.

Note: DO NOT connect IFD6530 to PC before extracting the driver file.

STEP 1 STEP 2

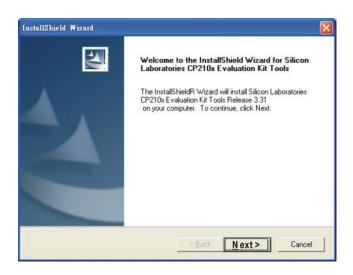

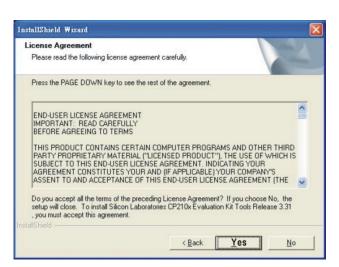

STEP 3 STEP 4





STEP 5

You should have a folder marked SiLabs under drive C. c:\ SiLabs

Installing the Driver


After connecting IFD6530 to PC, install driver by following steps below.


STEP 1



STEP 2



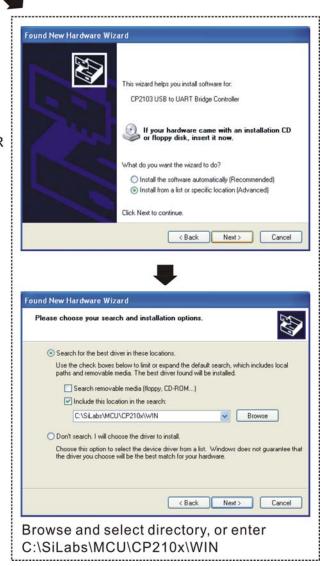

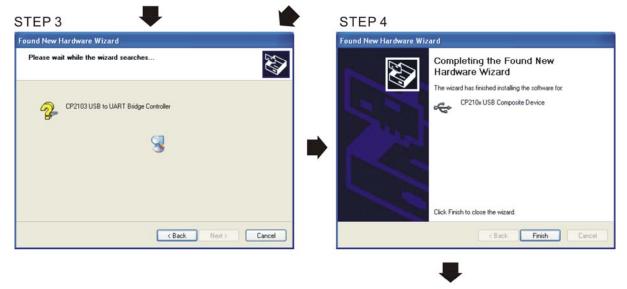

STEP 5
Repeat Step 1 to Step 4 to complete
COM PORT setting.


LED Display


- 1. Steady Green LED ON: power is ON.
- 2. Blinking orange LED: data is transmitting.

07 Option Cards


Select applicable option cards for your drive or contact local distributor for suggestion.

To prevent drive damage during installation, remove the digital keypad and the cover before wiring. Refer to the following instruction.

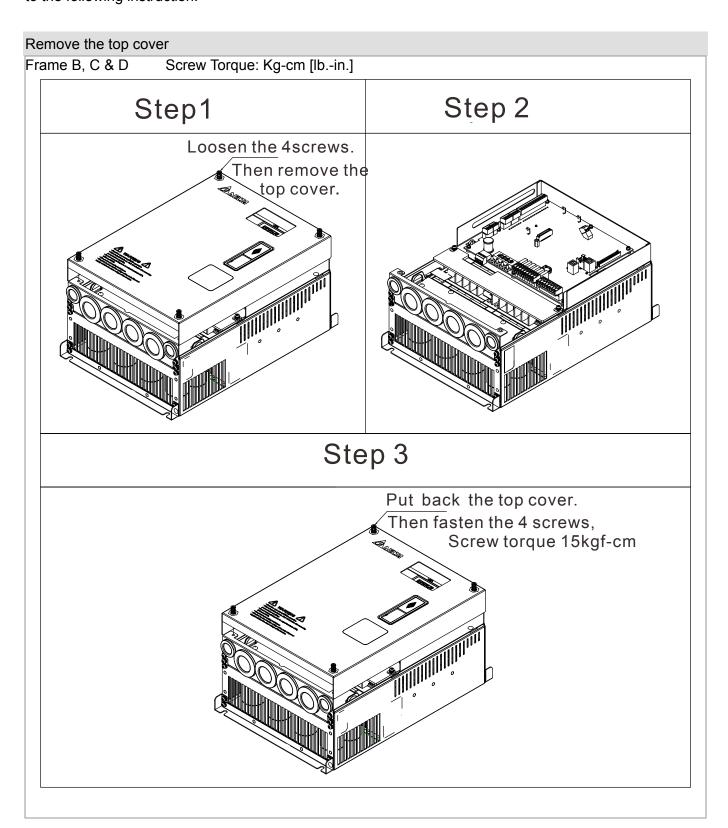

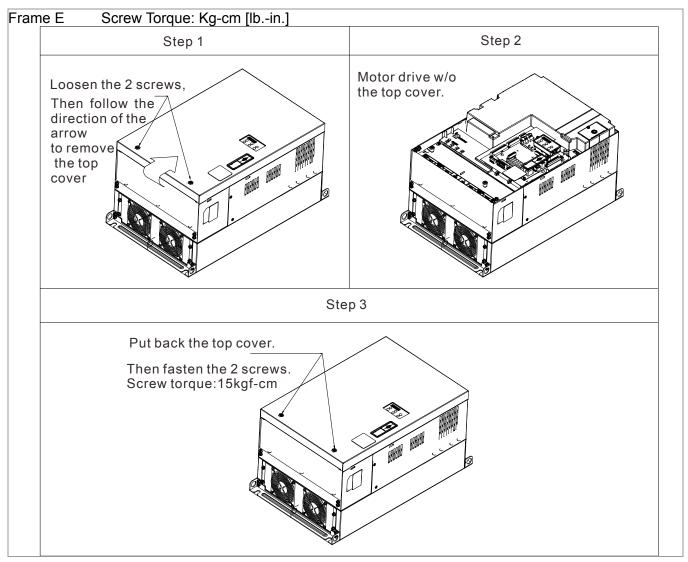

Vertical view of the motor drive & Screw's Specifications:

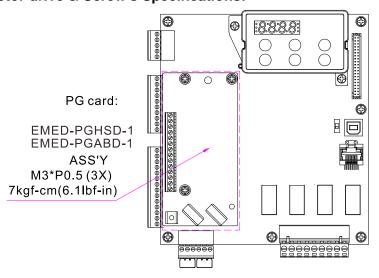


Screws' Specification for Option Card Terminal:

_	-	
PG Card	Wire Gauge	Torque
EMED-PGABD-1	30~16AWG (0.05~1.31mm ²)	1.6Kg-cm [1.4lb-in]
EMED-PGHSD-1	30~16AWG (0.05~1.31mm ²)	1.6Kg-cm [1.4lb-in]

7-1 EMED-PGABD-1

Applicable encoder: A/B/Z & U/V/W Absolute Encoders

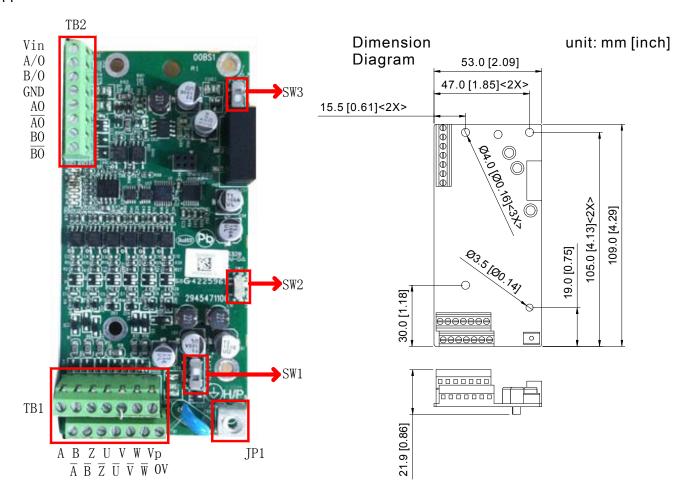


NOTE

- Verify if the SW1 is set to the correct output voltage before power on.
- Keep away from any high voltage line when wiring the motor drive to avoid interference.

Terminal Specification

Terminals		Descriptions
	TOTTIMICALO	Terminal for voltage input, to adjust the amplitude of output voltage at terminal
	Vin	A/O and terminal B/O. It also provides a 5V voltage to support line driver's
		signal.
		Vin voltage range: 8~24V, Max: 24V.
		Output signal of the push-pull frequency divider
		Factory setting: Output amplitude is about +24V. Use SW2 to cut off the internal
		default power. Input required power
TDO	A/O, B/O	(i.e. output voltage's amplitude)
TB2	AO, BIO	DVI voltage range Max: 24V
		(Push-Pull Voltage Output)
		Max. output frequency: 100kHz
		Support frequency dividing output, the frequency dividing range: 1~31Hz.
	GND	Common ground terminal connecting to the host controller and the motor drive.
		Line driver pulse output signal
	AO, /AO, BO, /BO	(Line Driver RS422)
	AU, /AU, BU, /BU	Max. output frequency: 150kHz
		Support frequency dividing output, the frequency dividing range: 1~31Hz.
	VP	Power output of encoder
		Note: Use SW1 to set up output voltage
		Voltage: +5V±0.5V or +12V±1V
		Current: 200mA max
	0V	Common power terminal of encoder
		Incremental encoder signal input terminal
TB1	Λ Λ Β	Types of input signal: line drive, voltage output, push-pull, open-collector)
	$\frac{A,\ A,B,}{\overline{B},Z,\ \overline{Z}}$	Note: Different input signal needs different wiring method. See user manual for
	D, Z, Z	wiring diagrams.
		Max. input frequency: 150kHz
		Absolute encoder signal input terminal
	U, $\overline{\overline{\mathrm{U}}}$, V,	Types of input signal: line drive, voltage, push-pull, open-collector)
	$\overline{\overline{\mathbf{V}}}$,w, $\overline{\overline{W}}$	Note: Different input signal needs different wiring method. See user manual for wiring diagrams
	•	Max.input frequency: 150kHz
JP1		Ground Terminal Connect the power supply of the motor drive to the ground. Support PG
Jr I		shielding
	SW1	Switch between encoder's 5V/12V power.
	SW2	Offline Detection Switch. Switch the SW2 to Line-D side to enable offline detection when Line-D input signal. Switch the SW2 to OPEN-C side to disable
		offline detection function when OPEN-C input signal.
	SW3	Switch of power supply for frequency division Switch SW3 to INP side to provide 24V power for internal use. Switch SW3 to EXP side to provide 24V power for
		external use (client).


Applicable encoders:

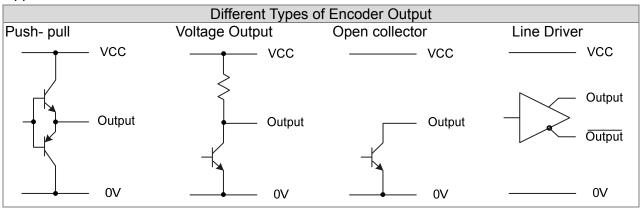

NOTE

- Verify if the SW1 is set to the correct output voltage before power on.
- Keep away from any high voltage line when wiring the motor drive to avoid interference

Wiring Diagram

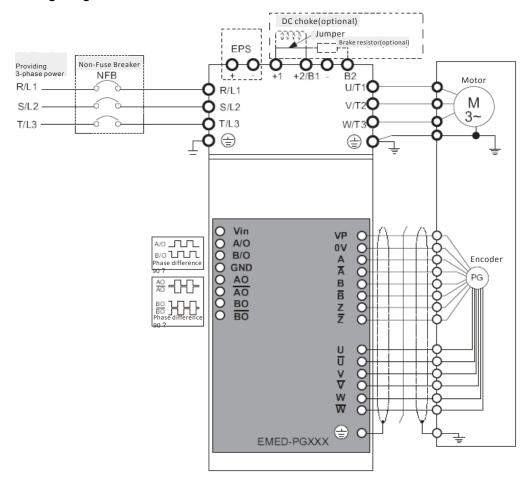

Set up the Signal of the Frequency Division

- ① After the encoder input a PULSE signal, there will be an output signal of the division factor "n." Use Pr10-29 <Output of PG card's frequency division> to set up.
- Setup of Pr10-29 <PG card's frequency division>: Output of decimal frequency division setting. Range of the division factor "n": 1~31.
- ③ Pr10-30 <Mode of output of PG card's frequency division>

Bit3	Bit2	Bit1	Bit0
Х	Х	OUT/M	IN/M

OUT/M: Mode of pulse output of frequency division;

IN/M: Mode of pulse input of frequency division;

"X" is for backup while "0" is a value to write.

Setting and Description of Input Mode (IN/M) & Output Mode (OUT/M):

OUT/M	IN/M	Divisio	n factor
301/101	II W/ IVI	A is ahead of B	B is ahead of A
0	0	A-/A B-/B AO-ĀŌ BO-BŌ	A-/A B-/B AO-ĀŌ BO-BŌ
1	0	A-/A B-/B AO-AO BO-BO	A-/A B-/B AO-AO BO-BO
X	1	A-/A B-/B AO-AO BO-BO	A-/A B-/B AO-ĀŌ BO-ĀŌ

NOTE

- In the waveform A-/A, B-/B are the PG card input signals; AO- AO, BO- BO are the differential output frequency division signals. (Use a differential probe to measure.)
- Division factor "n": Set 15 to have the input signal divided by 15.)
- When OUT/M, IN/M set as 0.0, the PG card input signal A-/A, B-/B are square waves while AO- AO, BO- BO are frequency division output.
- When OUT/M, IN/M are set as 1.0, the PG card input signal A-/A, B-/B are square waves while the BO-BO is the phase indicator of A and B
- When OUT/M, IN/M are set as X, B-/B phase has to be direction indication input signal (e.g. When B-/B is LOW, it means A is ahead of B. When B-/B is HIGH, it means B is ahead of A)
- Take Pr10-29 and Pr10-30 as examples. When frequency division value =1 5, OUT/M =1, IN/M = 0, set Pr10-29 = 15 and Pr10-30 = 0002h. Set Pr100-29 =15,

Set Pr10-30 =0002h

Bit3	Bit2	Bit1	Bit0
Χ	Χ	1	0


7-2 EMED-PGHSD-1

Applicable encoder:

Sine-wave: Heidenhain ERN1387

EnDat2.1: Heidenhain EQN425, EQN1325, ECN113, ECN413, ECN1113, ECN1313

SICK HIPERFACE: SRS50/60

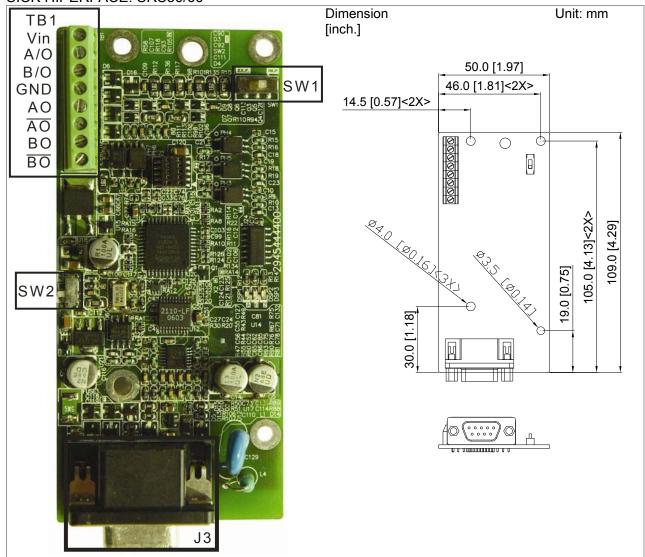

\•/ C.		I I a la la sala a la	CDN14007	E-D-10.4	LUDEDEACE
.×. Si	innort	Heidenhain	FRN1387	⊢ni)at2 1	HIPERFACE

	Terminals	Descriptions
	Vin	Voltage Input: (to adjust output voltage amplitude of the push-pull pulse) Max. input voltage: 24VDC Max. input current: 30mA
	GND	Common power input/ signal output terminal
TB1	A/O, B/O	Push-Pull Voltage Output Max. output frequency: 50kHz
	AO, /AO, BO, /BO	Line Driver RS422 Max. input frequency: 100kHz
J3 (D-SUB female connector)		Encoder signal input terminal
SW1		Frequency divider output power terminal selection INP: Power supplied by PG card EXP: Power from an external source
SW2		Frequency divider input power terminal selection 5V: 5Vdc 8V: 8Vdc

EMED-PGHSD-1(Terminal J3) pin definition correspond to each ENCODER type



Terminal#	Heidenhain ERN1387	Heidenhain ECN1313	HIPERFACE®
1	B-	B-	REFSIN
2	-	-	-
3	R+	DATA	DATA+
4	R-	/DATA	DATA-
5	A+	A+	+COS
6	A-	A-	REFCOS
7	0V	0V	GND
8	B+	B+	+SIN
9	UP	UP	+12V
10	C-	-	-
11	C+	-	-
12	D+	-	-
13	D-	-	-
14	-	/CLOCK	-
15	-	CLOCK	-

Terminal Function:

	Terminals	Descriptions	Specifications	
	UP(VP)	Encoder voltage input. Use SW2 to set +5V/+8V	Voltage: +5.1Vdc±0.3V; +8.4Vdc±1.5V Current: 200mA max.	
	0V	Encoder common power terminal	Reference level of encoder's power.	
	A+, A-, B+, B-, R+, R-	Encoder sine wave differential signal input (Incremental signal)	Input frequency: 40k Hz max. 360°el. A 0.81.2Vss (≈1Vss; Z₀=120 n) B 0.2V0.85V (≈0.5V; Z₀=120 n)	
			Input frequency: 20k Hz max.	
J3	+SIN, +COS, REFSIN, REFCOS	Encoder sine wave differential signal input	SIN 0.91.1V COS REFSIN/REFCOS	
	C+, C-, D+, D-	Encoder sine wave differential signal input (Absolute signal)	$0 \longrightarrow 0$ $0 \longrightarrow $	
	DATA+(DATA), DATA-(/DATA)	RS485 communication interface	Terminal resistance is about 130Ω	
	CLK+, CLK-	CLOCK differential output for ENDAT.	Line Driver RS422 Level output	

Set up the Signal of the Frequency Division

- ① After the encoder input a PULSE signal, there will be an output signal of the division factor "n." Use Pr10-29 <Output of PG card's frequency division> to set up.
- ② Pr10-29 <Mode of output of PG card's frequency division> :
 Output of decimal frequency division setting. Range of the division factor "n": 1~31.

Setting and Description of Input Mode (IN/M) & Output Mode (OUT/M):

OUT/M	INI/N/I	Division	n factor
OOT/W	IIN/IVI	A is ahead of B	B is ahead of A
0	0	A-/A B-/B AO-ĀŌ BO-BŌ	A-/A B-/B AO-ĀŌ BO-BŌ
1	0	A-/A B-/B AO-AO BO-BO	A-/A B-/B AO-AO BO-BO
X	1	A-/A B-/B AO-AO BO-BO	A-/A B-/B AO-ĀŌ BO-BŌ

NOTE

- In the waveform A-/A, B-/B are the PG card input signals; AO- AO, BO- BO are the differential output frequency division signals. (Use a differential probe to measure.)
- Division factor "n": Set 15 to have the input signal divided by 15.)
- When OUT/M, IN/M set as 0.0, the PG card input signal A-/A, B-/B are square waves while · AO- AO, BO-BO are frequency division output.
- When OUT/M, IN/M are set as 1.0, the PG card input signal A-/A ` B-/B are square waves while the BO- BO is the phase indicator of A and B.
- When OUT/M, IN/M are set as X, B-/B phase has to be direction indication input signal (e.g. When B-/B is LOW, it means A is ahead of When B-/B is HIGH, it means B is ahead of A)
- Take Pr10-29 and Pr10-30 as examples. When frequency division value =1 5, OUT/M =1, IN/M = 0, set Pr10-29 = 15 and Pr10-30 = 0002h. Set Pr100-29 =15.

Set Pr10-30 =0002h

Bit3	Bit2	Bit1	Bit0
Х	Х	1	0


7-3 EMED-PGHSD-2

Applicable encoder:


Sine-wave: Heidenhain ERN1387

EnDat2.1: Heidenhain EQN425, EQN1325, ECN113, ECN413, ECN1113, ECN1313

SICK HIPERFACE: SRS50/60

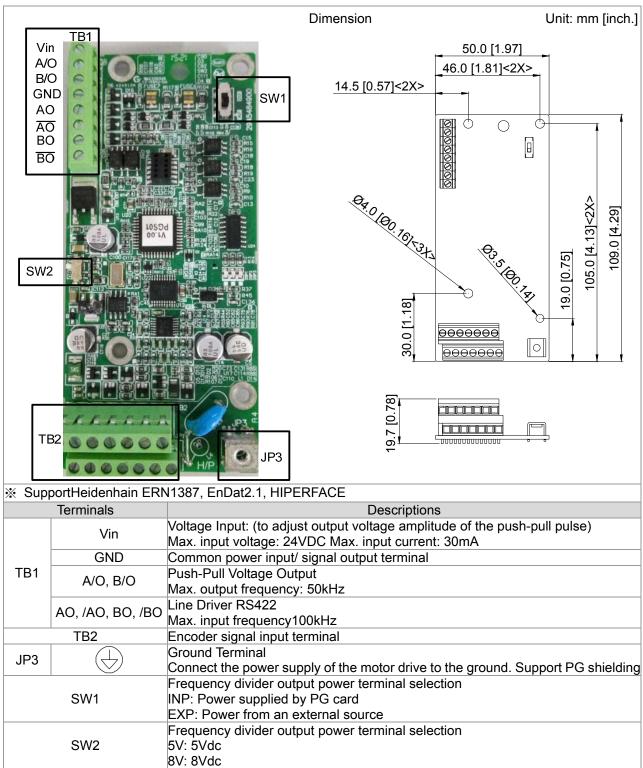


EMED-PGHSD-2(Terminal TB2) pin definition corresponds to each ENCODER type.

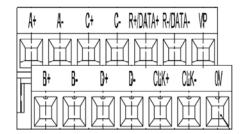

Terminals	Heidenhain ERN1387	Heidenhain ECN1313	HIPERFACE®
B-	B-	B-	REFSIN
	- '	-	-
R+/DATA+	R+	DATA	DATA+
R-/DATA-	R-	/DATA	DATA-
A+	A+	A+	+COS
A-	A-	A-	REFCOS
0V	0V	0V	GND
B+	B+	B+	+SIN
VP	UP	UP	+12V
C-	C-	-	-
C+	C+	-	-
D+	D+	-	-
D-	D-	-	-
CLK-	-	/CLOCK	-
CLK+	-	CLOCK	-

Terminal Function

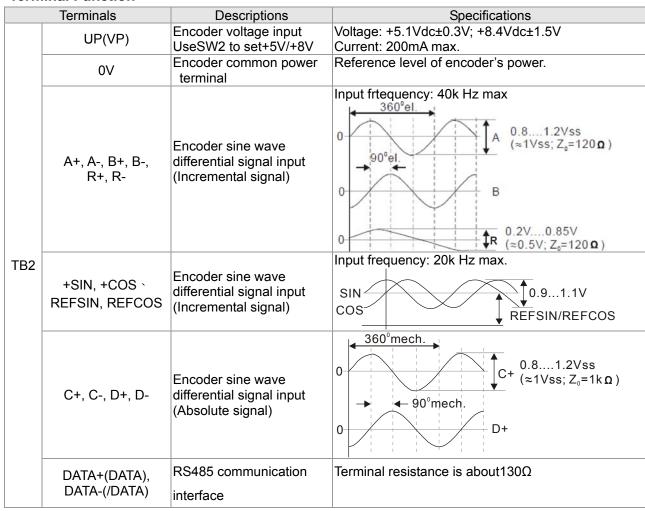


CLOCK, /CLOCK	CLOCK differential output	Line Driver RS422 Level output
	for ENDAT	



- .
- Verify if the SW1 is set to the correct output voltage before power on.
- Keep away from any high voltage line when wiring the motor drive to avoid interference.

Wiring Diagram

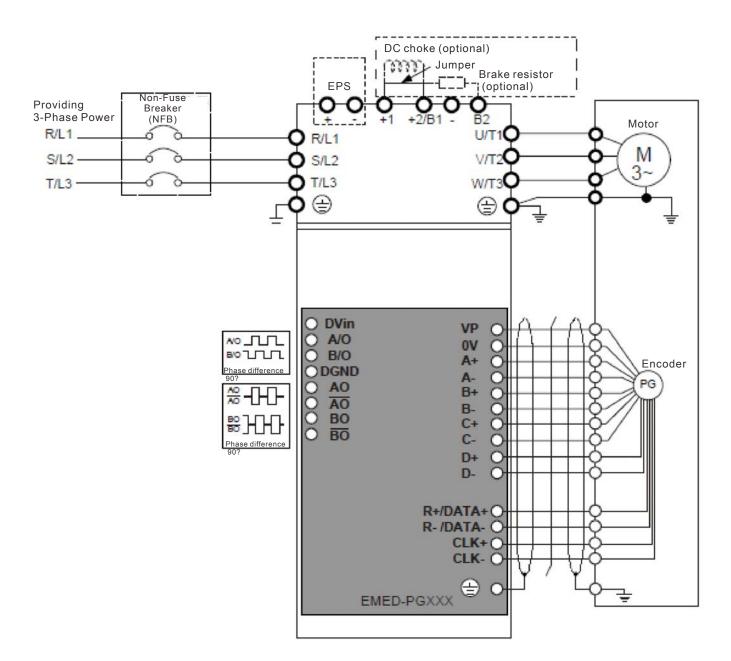

Set up the Signal of the Frequency Division

- ① After the encoder input a PULSE signal, there will be an output signal of the division factor "n." Use Pr10-29 <Output of PG card's frequency division> to set up.
- ② Setup of Pr10-29 <PG card's frequency division>: Output of decimal frequency division setting. Range of the division factor "n": 1~31.

08 Specifications

230V Series

Frame Size		В			С			D			E		
Mod	lel VFDED23/21S	022*	037*	040	055	075	110	150	185	220	300	370	
	licable Motor Output(KW)	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22	30	37	
App	licable Motor Output (HP)	3	5	5	7.5	10	15	20	25	30	40	50	
	Rated Output Capacity(KVA)	4.8	6.8	7.9	9.5	12.5	19	25	29	34	46	55	
Rating	Rated Output Current (A)	12.0	17	20.0	24.0	30.0	45.0	58.0	77.0	87.0	132.0	161.0	
Ra	Maximum Output Voltage (V)	3-phase Proportional to Input Voltage											
Ħ	Output Frequency	0.00~400Hz											
utput	Carrier Frequency				2~15kHz					2~9kHz			
ō	Rated Output Maximum Carrier Frequency	8kHz			10kHz				8kHz			6kHz	
	Input Current(A)	24	34	20	23	30	47	56	73	90	132	161	
1 5	Rated Voltage /Frequency	1-phase 3-phase											
atir	Nated voltage /Frequency	200~240V 50/60Hz											
Voltage Tolerance		±10% (180~264V)											
	Frequency Tolerance					±5%	% (47~€	3Hz)					
Coo	ling Method	Fan cooled											
Wei	ght (kg)	6	6	6	8	10	10	13	13	13	36	36	

^{*}VFD022ED21S & VFD037ED21Sare 1-phase input models.

460V Series

Fran	ne Size	В С					D E						
Mod	el VFD ED43S	040	055	075	110	150	185	220	300	370	450	550	750
Appl	icable Motor Power(KW)	4.0	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Appl	icable Motor power(HP)	5	7.5	10	15	20	25	30	40	50	60	75	100
	Rated Output Capacity (KVA)	9.2	10.4	13.5	18.3	24	30.3	36	46.2	63.7	80	96.4	116.3
	Rated Output Current (A)	11.5	13	17	23	30	38	45	58	80	100	128	165
ating	Maximum Output Voltage(V)	3-phase Proportional to Input Voltage											
L R	Output Frequency	0.00~400Hz											
Output Rating	Carrier Frequency			2	2~ 15k⊦	Ηz			2~ 9kHz			2~ 6kHz	
	Rated Output Maximum Carrier Frequency	8kHz 10kHz				8kHz			6kHz				
<u>β</u>	Rated Input Current(A)	11.5	14	17	24	30	37	47	58	80	100	128	165
Ratir	Rated voltage	3-phase 380~480V · 50/60Hz											
Rated input current(A) Rated voltage Voltage Tolerance Frequency Tolerance		±10% (342~528V)											
		±5% (47~63Hz)											
Cooling Method		Fan cooled											
Wei	ght (kg)	6	8	10	10	10	10	13	14.5	36	36	50	50

^{*}Assumes operation at the rated output. Input current rating varies depending on the power supply, input reactor, wiring connections and power supply impedance.

General Specifications

	ondiai opoon	1000110
	Control Method	1: V/F, 2: VF+PG, 3: SVC, 4: FOC+PG, 5: TQC+PG, 6:FOC+PM
	Starting Targets	Reach up to 150% or above at 0.5 Hz
	Starting Torque	Under FOC+PG or FOC+PM mode, starting torque can reach 150% at 0 Hz.
	Speed Control Range	1:100 (up to 1:1000 when using PG card)
	Speed Control Resolution	$\pm 0.5\%$ (up to $\pm 0.02\%$ when using PG card)
S	Speed Response Ability	5Hz (Up to 30Hz for vector control)
Control Characteristics	Max. Output Frequency	0.00 to 400Hz
acter	Output Frequency	Digital Command 0.005%, Analog Command 0.5%
hara	Accuracy	
<u>o</u>	Frequency Setting	Digital Command 0.01Hz, Analog Command: 1/4096(12 bit) of the max. output
ontr	Resolution	frequency.
	Torque limit	Max. is 200% torque current
	Torque Accuracy	±5%
	Accel. / Decel. Time	0.00~600.00 seconds
	V/F Curve	Adjustable V/f curve using 4 independent points and square curve.
	Frequency Setting Signal	±10V
	Brake Torque	About 20%
	Motor Protection	Electronic thermal relay protection.
	Over-current Protection	The current forces 190% of the over-current protection and 250% of the rated current.
stics	Ground Leakage Current	Higher than 50% rated current
cteri	Protection	
ection Characteristics	Overload Ability	Constant torque: 150% for 60 seconds, variable torque: 190% for 5 seconds
S	Over-voltage Protection	Over-voltage level: Vdc > 400/800V; low-voltage level: Vdc < 200/400V
ectio	Over-voltage Protection	Varistor (MOV)
Prote	for the Input Power	
_	Over-temperature	Built-in temperature sensor
	Protection	
Cert	ifications	(UL mark excludes VFD022ED21S and VFD037ED21S) EN81-1+A3, EN81-20

Environment for Operation, Storage and Transportation

DO NOT expose the AC motor drive in a bad environment, such as dust, direct sunlight, corrosive/inflammable gasses, humidity, liquid and vibration environment. The salt in the air must be less than 0.01mg/cm² every year.

	Installation location	IEC60364-1/IEC	060664-1 Poll	ution degree 2, Indoor use only				
			Between 10° reach50°C	Between 10°C ~40°C with Derating the operation temperature can reach50°C				
		Operation	Between 40°C ~50°C with	2.2-4kW: for every 1°C raise in temperature, decrease 2.2% of rated current				
	Surrounding Temperature		Derating	5.5-30kW: for every 1°C raise in temperature, decrease 2.5% of rated current 37-75kW: for every 1°C raise in temperature,				
				decrease 2.0% of rated current				
Environment		Storage and Transportation	-20 °C ~ +60	°C				
		Non-condensa	tion, non-froz	en				
	Rated Humidity	Operation	Max. 90%					
		Storage/ Transportation	Max. 90%					
		No condense water						
	Altitude	Operation	If AC motor drive is installed at altitude 0~1000m, follow normal operation restriction. If it is install at altitude 1000~3000m, decreas 1% of rated current or lower 0.5°C of temperature for every 100m increase in altitude. Maximum altitude for Corner Grounded is 3000 lf an installation at an altitude higher than 3000m is required, contain Delta for more information.					
	Power System	TN system*1*2						
Package	Storage	ISTA procedure 1A (according to weight) IEC60068-2-31						
Drop	Transportation	10 1A procedur	e TA (accordii	ig to weight) IECoooo-2-31				
Vibration	● 0.7G~	1.0mm, peak to peak value range from 2Hz to 13.2 Hz; 0.7G~1.0G range from 13.2Hz to 55Hz; 1.0G range from 55Hz to 512 Hz. Comply with IEC 60068-2-27						
Impact	IEC/EN 60068	-2-27						
Protection Level	NEMA 1/IP20							

^{*1:} TN system: The neutral point of the power system connects to the ground directly. The exposed metal components connect to the ground via the protective earth conductor.

^{*2:} Single phase models use single phase three wire power system.

09 Digital Keypad

9-1 Description of Digital Keypad

Digital Operation Panel KPED-LE01



Functio	Function of Buttons					
Butt	ons	Description				
	Horizontal movement button: To move the cursor position for value adjustment.					
RES	ET	Reset the the motor drive after fault occurred.				
МО	DE	Change between different diplay mode.				
ENT	ER	Parameter setting button: To read or modify various parameter settings.				
		 Two buttons available: Up and Down button Press Up or Down button to increase or decrease the value of a number. Press Up or Down button to choose between menus and languages. 				


LED Display

LLD Diopiay	
LED	Description
UP DN D1 D2	Status Display: UP: Moving up. DN: Moving down D1: MI1 status D2:MI2 status D3:MI3 status D4:MI4 status
8.8.8.8	Main Display Area: To display frequency, current, voltage, rotaion direction, user defined units, errors and warnings.

Description of the Displayed Functions

Displayed Function	Description
UP F 6 0.0 DN D2 D2 D4	Display the frequency setting of the VFD-ED
UP	Display the actual frequency delivered from VFD-ED to the motor.
UP	Display the user defind value at Pr00-04.
UP 5.0 DN D2 D2 D4	Display the current (ampere)
UP D1 DN D2 D4	Display the selected parameter
UP D1 DN D2 D4	Display the value set at a parameter
UP D1 D2 D4	Display the external fault
UP DN DN D2	Display "End" for approximately 1 second if input has
D3 D4	been accepted by pressing ENTER key. After a
	parameter value has been set, the new value is
	automatically stored in the register. To modify an entry,
	use the and keys.
UP DN DN	If the command given by the user is not accepted or the
D1 D2 D4	value of the command exceeds the allowed range, this
	error message will be displayed.

9-2 Operating the Built-in Digital Keypad

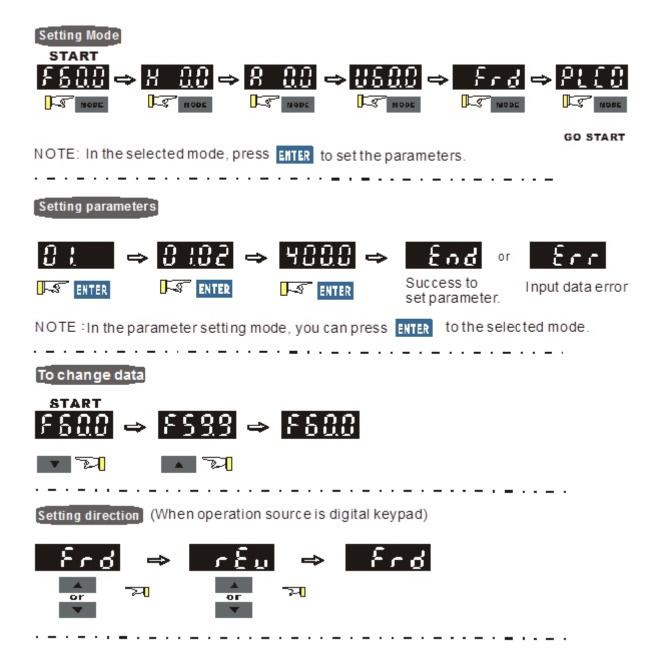

9-3 Description of the Digital Keypad KPC-CC01

KPC-CC01



Communication Interface RJ-45 (socket), -485 interface;

Installation Method


- Embedded type and can be put flat on the surface of the control box. The front cover is water proof.
- 2. Buy a MKC-KPPK model to do wall mounting or embedded mounting. Its protection level is IP66.
- 3. The maximum RJ45 extension lead is 5 m (16ft)
- 4. This keypad can also be used on Delta's motor drive C2000, CH2000 and CP2000.

Function of B	uttons
Button	Description
RUN	Start Operation Key 1. It is only valid when the source of operation command is from the keypad. 2. It can operate the AC motor drive by the function setting and the RUN LED will be ON. 3. It can be pressed repeatedly while the motor drive is shutting down
STOP	 Stop Command Key. This key has the highest processing priority in any situation. When it receives STOP command, no matter the AC motor drive is in operation or stop status, the AC motor drive needs to execute "STOP" command. The RESET key can be used to reset the drive after the fault occurs. For those faults that can't be reset by the RESET key, see the fault records after pressing MENU key for details.
FWD	Operation Direction Key 1. This key is only control the operation direction NOT for activate the drive. FWD: forward, REV: reverse. 2. Refer to the LED descriptions for more details.
ENTER	ENTER Key Press ENTER and go to the next level. If it is the last level then press ENTER to execute the command
ESC	ESCAPE Key ESC key function is to leave current menu and return to the last menu. It is also functioned as a return key in the sub-menu.
MENU	Press menu to return to main menu.
	Direction: Left/Right/Up/Down 1. In the numeric value setting mode, it is used to move the cursor and change the numeric value. 2. In the menu/text selection mode, it is used for item selection.

Description of LED Functions


LED	Description
RUN	Steady ON: operation indicator of the AC motor drive, including DC brake, zero speed, standby, restart after fault and speed search. Blinking: drive is decelerating to stop or in the status of base block.
STOP	Steady OFF: drive doesn't execute the operation command Steady ON: stop indicator of the AC motor drive. Blinking: drive is in the standby status. Steady OFF: drive doesn't execute "STOP" command.
FWD	Operation Direction LED 1. Green light is on, the drive is running forward. 2. Red light is on, the drive is running backward. 3. Twinkling light: the drive is changing direction.

9-4 Function of Digital Keypad KPC-CC01

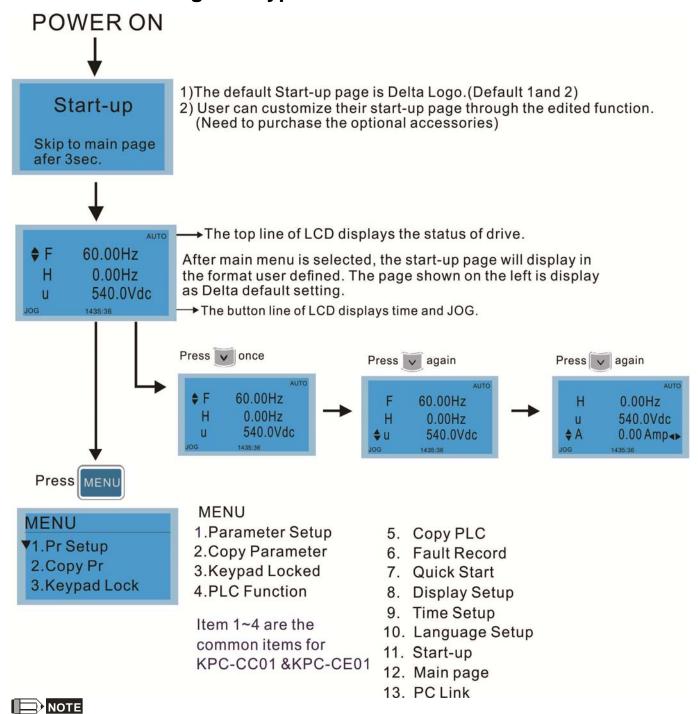


- 1. Startup page can only display pictures, no flash.
- 2. When Power ON, it will display startup page then the main page. The main page displays Delta's default setting F/H/A/U, the display order can be set by Pr.00.03 (Startup display). When the selected item is U page, use left key and right key to switch between the items, the display order of U page is set by Pr.00.04 (User display).
- 3. VFD-ED doesn't support Function 3, 4 and 5.


Display Icon

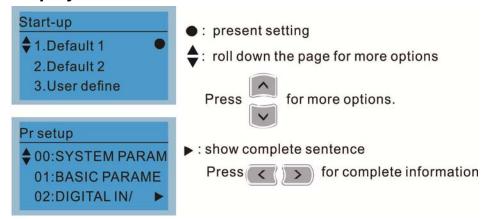


Display Item

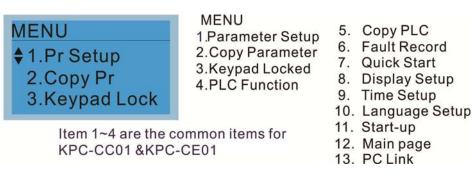

1. Parameter Setup

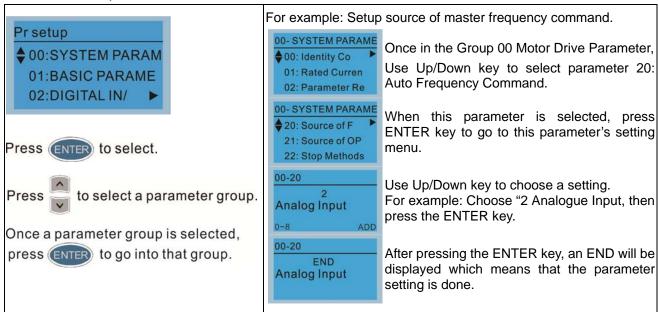

2. Copy Parameter

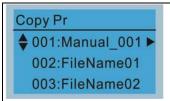

Press ENTER key to go to 001~004: content storage

4 duplicates are provided

The steps are shown in the example below.

Example: Saved in the motor drive.




- 1 Go to Copy Parameter
- 2 Select the parameter group which needs to be copied and press ENTER key.
- 1 Select 1: Save in the motor drive.
- 2. Press ENTER key to go to "Save in the motor drive" screen.


Begin to copy parameters until it is done.

Once copying parameters is done, keypad will automatically be back to this screen.

Example: Saved in the keypad.

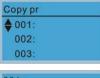

- 1. Once copying parameters is done, keypad will automatically be back to this screen.
- 2. Select the parameter group which needs to be copied and press ENTER key.

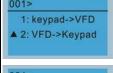


Press ENTER key to go to "Save in the motor drive" screen.




Use Up/Down key to select a symbol.
Use Left/Right key to move the cursor to select a file name.

String & Symbol Table:


!" #\$%&' () *+,-./0123456789:; <= >?@ABCDEFGHIJKLMNOPQRSTUVWXYZ [\] __ 'abcdfghijklmnopqrstuvwx yz{|} ~

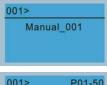

Once the file name is confirmed, press ENTER key.

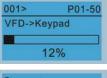

To begin copying parameters until it is done.

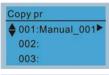

When copying parameters is completed, keypad will automatically be back to this screen.

Press Right key to see the date of copying parameters.



Press Right key to see the time of copying parameters.

3.



Keypad Locked

This function is used to lock the keypad. The main page would not display "keypad locked" when the keypad is locked, however it will display the message"please press ESC and then ENTER to unlock the keypad" when any kev is pressed.



When the keypad is locked, the main screen doesn't display any status to show that.

Press any key on the keypad; a screen as shown in image on the left will be displayed.


If ESC key is not pressed, the keypad will automatically be back to this screen.

The keypad is still locked at this moment. By pressing any key, a screen as shown in the image on the left will still be displayed.

Press ESC for 3 seconds to unlock the keypad and the keypad will be back to this screen. Then each key on the keypad is functional.

Turn off the power and turn on the power again will not lock keypad.

4. Fault Record

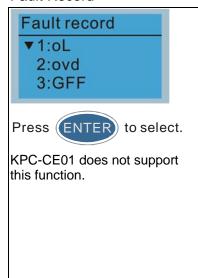

Able to store 6 error code (Keypad V1.02 and previous versions) Able to store 20 error code(Keypad V1.0e3 and previous version) The most recent error record is shown as the first record. Select an error record to see its detail such as date, tme, frequency, current, voltage, DCBUs voltage)

Fault record	۱
▼1:oL	1
2:ovd	ı
3:GFF	ı
4. al	i
1: oL	ļ
♦ Current: 79.57	ı
Voltage: 189.2	I
BUS Voltage:409.5	ŝ
200	i
1: oL	ı
♦Date: 01/20/2014	1
Time: 21:02:24	ı
Outfreq: 32.61	
Fault record	i
P. LEWIS CO. LEWIS CO. LANS.	ı
1:oL	ı
♦ 2:ovd	ı
3:GFF	
Or accel	i
2: ovd	
♦ Current: 79.57	
Voltage: 189.2	E

BUS Voltage: 409.5

Press Up/Down key to select an error record. After selecting an error code, press ENTER to see that error record's detail

Press Up/Down key to see an error record's detail such as date, time, frequency, current, voltage, DCBus voltage.


Press Up/Down key to select an error record. After selecting an error code, press ENTER to see that error record's detail

Press Up/Down key to see an error record's detail such as date, time, frequency, current, voltage, DCBus voltage.



Fault actions of AC motor drive are record and save to KPC-CC01. When KPC-CC01 is removed and apply to another AC motor drive, the previous fault records will not be deleted. The new fault records of the present AC motor drive will accumulate to KPC-CC01.


5. Display Setup

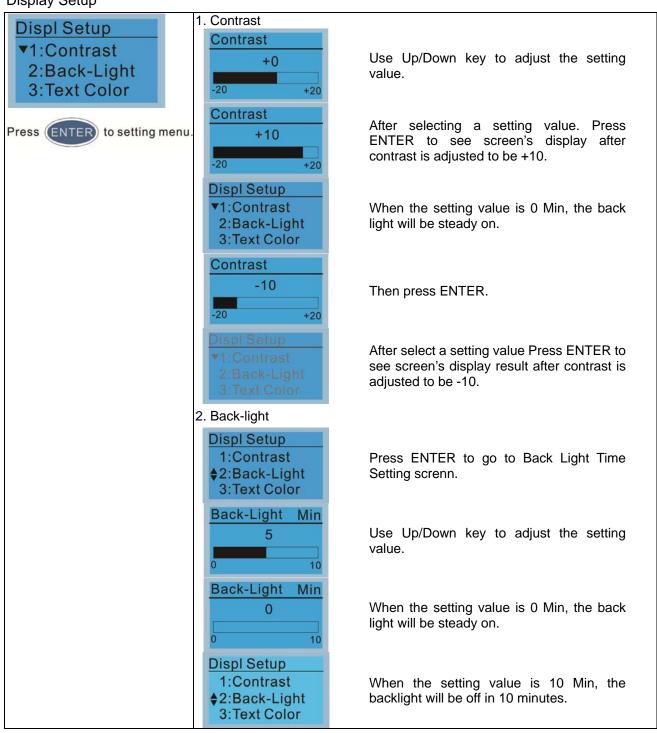

6. Time Setting



Use Left/Right key to select Year, Month, Day, Hour, Minute or Second to set up

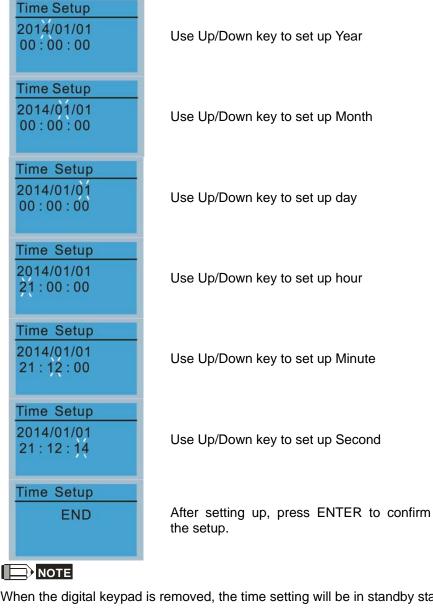

When the digital keypad is removed, the time setting will be in standby status for 7 days. After this period, the time needs to be reset.

7. Language setup



Use Up/Down key to select language, than press ENTER. Language setting option is displayed in the language of the user's choice. Language setting options:

1. English

5.

2. 繁體中文


6. Espanol

3. 简体中文

7. Portugues

4. Turkce

8. Startup

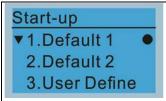

1. Default 1 DELTA LOGO



2. Default 2 DELTA Text



 User Defined: optional accessory is require (TPEditor & USB/RS-485 Communication Interface-IFD6530)

Install an editing accessory would allow users to design their own start-up page. If editor accessory is not installed, "user defined" option will dispay a blank page.




USB/RS-485 Communication Interface-IFD6530

Please refer to Chapter 07 Optional Acessories for more detail.


TPEditor


Go to Delta's website to download TPEditor V1.30.6 or later versions. http://www.delta.com.tw/ch/product/em/download/download_main.asp?act =3&pid=1&cid=1&tpid=3


9. Mian Pge

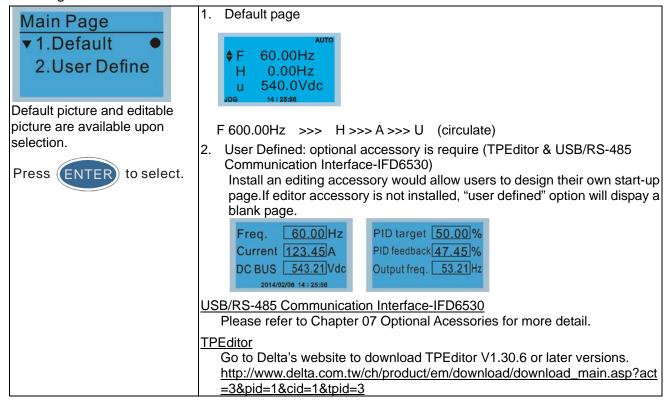


10. PC Link

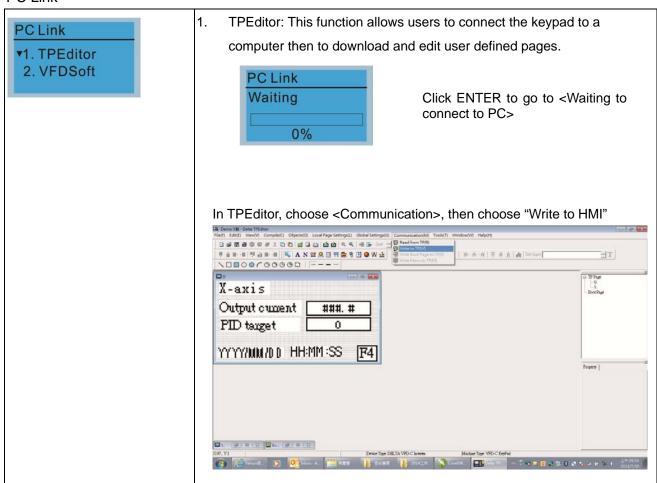

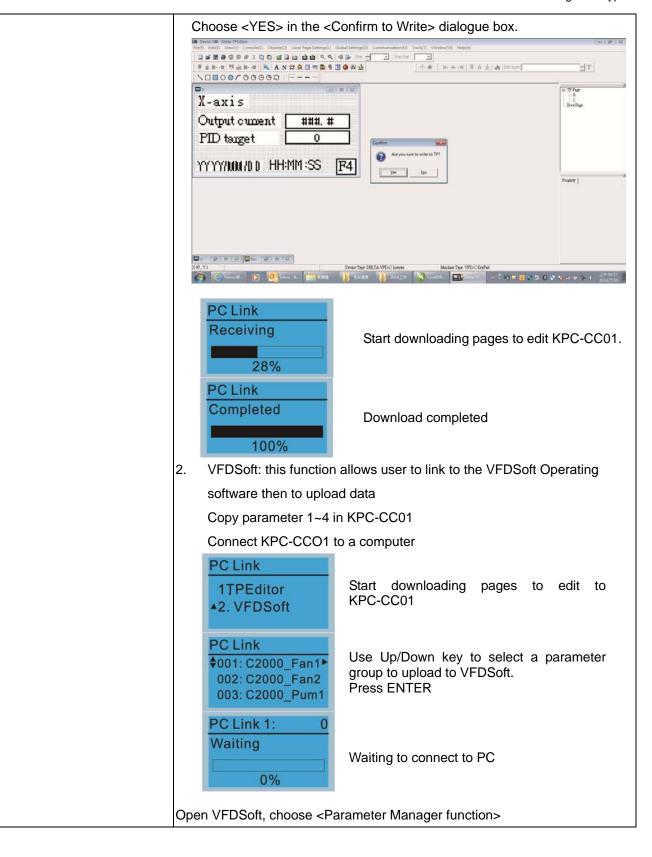

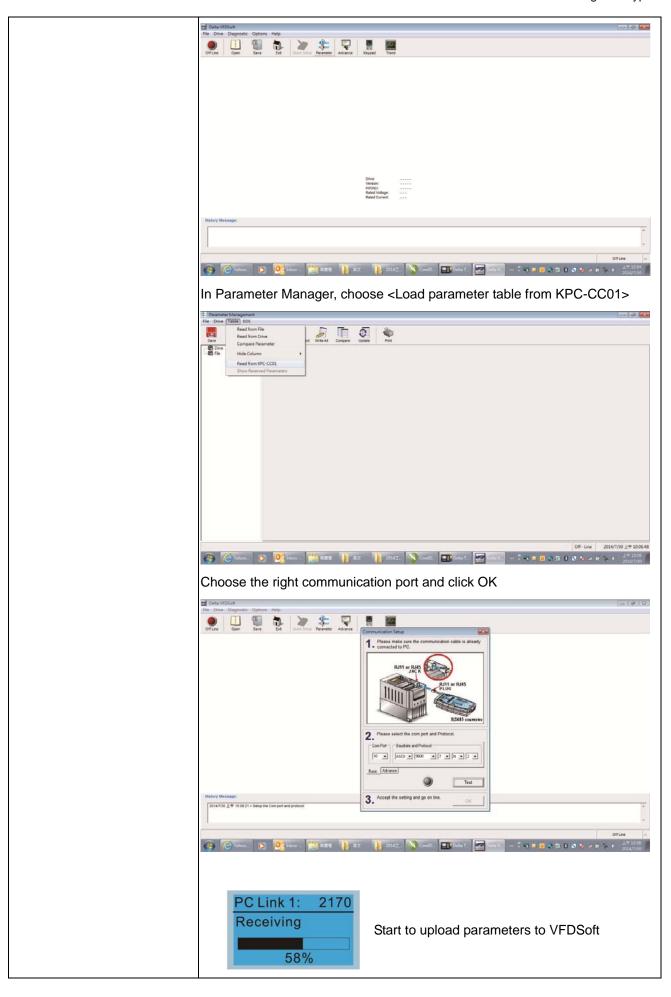

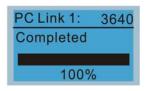


Uploading parameter is completed

Before using the user defined starting screen and user defined main screen, the starting screen setup and the main screen setup have to be preset as user defined.

If the user defined page are not downloaded to KPC-CC01, the starting screen and the main screen will be blank.

Other Display

When fault occur, the menu will display:

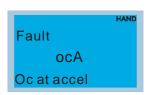



- 1. Press ENTER and start RESET. If still no response, please contact local distributor or return to the factory. To view the fault DC BUS voltage, output current and output voltage, press "MENU"→"Fault Record".
- 2. Press ENTER again, if the screen returns to main page, the fault is clear.
- 3. When fault or warning message appears, backlight LED will blinks until the fault or the warning is cleared.

Optional accessory: RJ45 Extension Lead for Digital Keypad

	<u> </u>
Part No.	Description
CBC-K3FT	RJ45 extension lead, 3 feet (approximately 0.9m)
CBC-K5FT	RJ45 extension lead, 5 feet (approximately 1.5 m)
CBC-K7FT	RJ45 extension lead, 7 feet (approximately 2.1 m)
CBC-K10FT	RJ45 extension lead, 10 feet (approximately 3 m)
CBC-K16FT	RJ45 extension lead, 16 feet (approximately 4.9 m)

Note: When you need to buy communication cables, buy non-shielded, 24 AWG, 4 twisted pair, 100 ohms communication cables.

9-5 Digital Keypad KPC-CC01 Fault Codes and Descriptions

Fualt Codes:

LCM Display *	Description	Corrective Actions
Fault FrEr kpdFlash Read Er	Keypad flash memory read error	 An error has occurred on keypad's flash memory. 1. Press RESET on the keypad to clear errors. 2. Verify what kind of error has occurred on keypad's flash memory. 3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your authorized local dealer.
Fault FSEr kpdFlash Save Er	Keypad flash memory save error	 An error has occurred on keypad's flash memory. 1. Press RESET on the keypad to clear errors. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your authorized local dealer.
Fault FPEr kpdFlash Pr Er	Keypad flash memory parameter error	Errors occurred on parameters of factory setting. It might be caused by firmware update. 1. Press RESET on the keypad to clear errors. 2. Verify if there's any problem on Flash IC. 3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
Fault VFDr Read VFD Info Er	Keypad flash memory when read AC drive data error	 Keypad can't read any data sent from VFD. 1. Verify if the keypad is properly connect to the motor drive by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
Fault CPUEr CPU Error	and then power on again the system.	 A Serious error has occurred on keypad's CPU. 1. Verify if there's any problems on CPU clock? 2. Verify if there's any problem on Flash IC? 3. Verify if there's any problem on RTC IC? 4. Verify if the communication quality of the RS485 is good? 5. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.

Warning Codes:

LCM Display *	Description	Corrective Actions
LOW Display	Doonphon	Motor drive doesn't accept the communication
Warning CE01 Comm Command Er	Modbus function code error	command sent from keypad. 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. If none of the solution above works, contact your local authorized dealer.
Warning CE02 Comm Address Er	Modbus data address error	 Motor rive doesn't accept keypad's communication address. 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. If none of the solution above works, contact your local authorized dealer.
Warning CE03 Comm Data Error	Modbus data value error	 Motor drive doesn't accept the communication data sent from keypad. 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. If none of the solution above works, contact your local authorized dealer.
Warning CE04 Comm Slave Error	Modbus slave drive error	 Motor drive cannot process the communication command sent from keypad. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. Press RESET on the keypad to clear errors. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
Warning CE10 KpdComm Time Out	Modbus transmission time-Out	 Motor drive doesn't respond to the communication command sent from keypad. 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
Warning TPNO TP No Object	Object not supported by TP Editor	Keypad's TP Editor uses unsupported object. 1. Verify how the TP editor should use that object. Pelete unsupported object and unsupported.

File Copy Setting Fault Description

LCM Display *	Description	Corrective Actions
File 1 Err 1 Read Only	Parameter and rile are read only	The property of the parameter/file is read-only and cannot be written to. 1. Verify the specification on the user manual. If the solution above doesn't work, contact your local authorized dealer.
File 1 Err Write Fail	Fail to write parameter and file	An error occurred while write to a parameter/file. 1. Verify if there's any problem on the Flash IC. 2. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above work, contact your local authorized dealer.
File 1 Err VFD Running	AC drive is in operating status	A setting cannot be made while motor drive is in operation. 1. Verify if the drive is not in operation. If the solution above doesn't work, contact your local authorized dealer.
File 1 Err Pr Lock	AC drive parameter is locked	A setting cannot be made because a parameter is locked. 1. Verify if the parameter is locked or not. If it is locked, unlock it and try to set up the parameter again. If the solution above doesn't work, contact your local authorized dealer.
File 1 Err Pr Changing	AC drive parameter changing	A setting cannot be made because a parameter is being modified. 1. Verify if the parameter is being modified. If it is not being modified, try to set up that parameter again. If the solution above doesn't work, contact your local authorized dealer.
File 1 Err Fault Code	Fault code	A setting cannot be made because an error has occurred on the motor drive. 1. Verify if there's any error occurred on the motor dive. If there isn't any error, try to make the setting again. If the solution above doesn't work, contact your local authorized dealer.
File 1 Err Warning Code	Warning code	A setting cannot be made because of a warning message given to the motor drive. 1. Verify if there's any warning message given to the motor drive. If the solution above doesn't work, contact your local authorized dealer.
File 1 Err Type Dismatch	File type dismatch	Data need to be copied are not same type, so the setting cannot be made. 1. Verify if the products' serial numbers need to be copied fall in the category. If they are in the same category, try to make the setting again. If the solution above doesn't work, contact your authorized dealer.
File 1 Err Password Lock	File is locked with password	A setting cannot be made, because some data are locked. 1. Verify if the data are unlocked or able to be unlocked. If the data are unlocked, try to make the setting again. 2. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.

LCM Display *	Description	Corrective Actions
File 1 Err 10 Password Fail	File version dismatch	A setting cannot be made because the password is incorrect. 1. Verify if the password is correct. If the password is correct, try to make the setting again. 2. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
File 1 Err Version Fail	AC drive copy function time-out	A setting cannot be made, because the version of the data is incorrect. 1. Verify if the version of the data matches the motor drive. If it matches, try to make the setting again. If none of the solution above works, contact your local authorized dealer.
File 1 Err VFD Time Out	Other keypad error	A setting cannot be made, because data copying timeout expired. 1. Redo data copying. 2. Verify if copying data is authorized. If it is authorized, try again to copy data. 3. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.
File 1 Err Keypad Issue	Other AC drive error	This setting cannot be made, due to other keypad issues. (Reserved functions) If such error occurred, contact your local authorized dealer.
File 1 Err VFD Issue	File is locked with password	This setting cannot be made, due to other motor drive issues. (Reserved functions). If such error occurred, conatct your local authorized dealer.

[※] The content in this chapter only applies on V1.01 and above of KPC-CC01 keypad.

9-6 TPEditor Installation

TPEditor can edit up to 256 HMI (Human-Machine Interface) pages with a total storage capacity of 256kb.

Each page can edit 50 normal objects and 10 communication objects.


- 1) TPEditor: Setup & Basic Functions
 - 1. Run TPEditor version 1.60 or later.



2. Go to File(F)→Click on New. The Window below will pop up. At the device type, click on the drop down menu and choose DELTA VFD-C Inverter. At the TP type, click on the drop down menu and choose VFD-C KeyPad. As for File Name, enter TPE0. Now click on OK.




3. You are now at the designing page. Go to Edit (E)→Click on Add a New Page (A) or go to the TP page on the upper right side, right click once on TP page and choose Add to increase one more page for editing. The current firmware of Keypad is version1.00 and can support up to 4 pages.

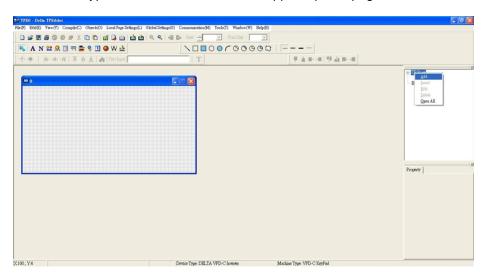


4. Edit Startup Page

5. Static Text A . Open a blank page, click once on this button A , and then double click on that blank page. The following windows will pop up.

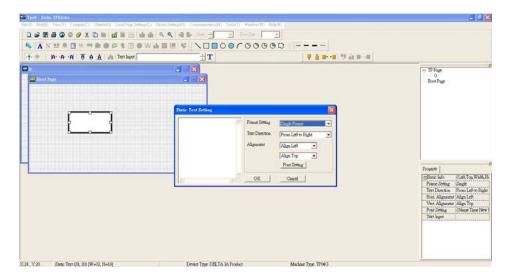

6. Static Bitmap → Open a blank page, then click once on this button and then double click on that blank page. The following window will pop up.

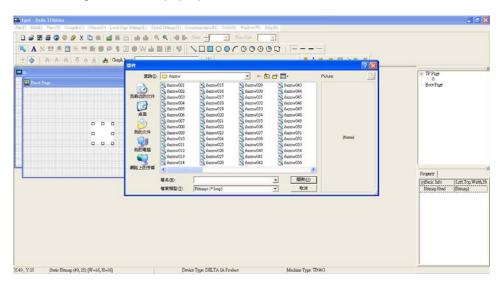


Please note that Static Bitmap setting support only images in BMP format. Now choose a image that you need and click open, then that image will appear in the Static Bitmap window.

7. Geometric Bitmap

As shown in the picture on the left side, there are 11 kinds of geometric bitmap to choose. Open a new blank page then click once on a geometric bitmap icon that you need. Then drag that icon and enlarge it to the size that you need on that blank page.


8. Finish editing the keypad starting screen and select **Communication>Input User Defined Keypad Starting Screen.**

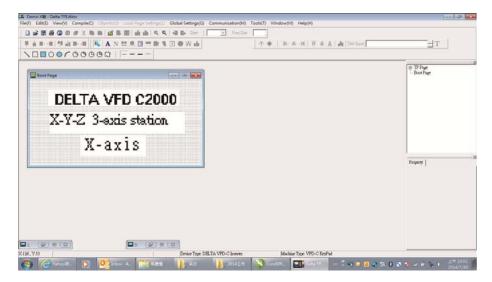


- 9. Downloading setting: Go to Tool > Communication. Set up communication port and speed of IFD6530.
- 10. Only three speed selections are available: 9600 bps, 19200 bps and 38400 bps.



11. When a dialogue box displayed on the screen asking to confirm writing or not, press buttons on the keypad to go to MENU, select PC LINK and then press ENTER and wait for few seconds. Then select YES on the screen to start downloading.

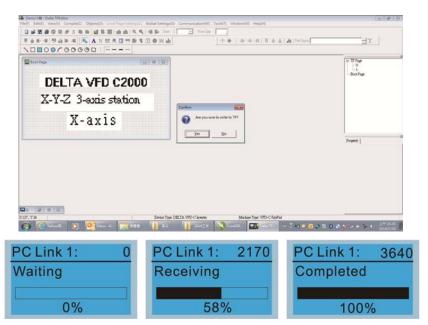


- 2) Edit Main Page & Example of Download
 - 1. Go to editing page, select EditàAdd one page or press the button ADD on the right hand side of the HMI page to increase number of pages to edit. This keypad currently support up to 256 pages.

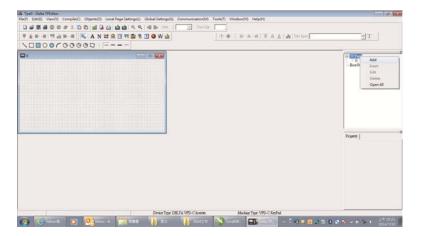

2. On the bottom right-hand corner of the HMI, click on a page number to edit or go to VIEW >HMI page to start editing main page. As shown in the image, the following objects are available. From left to right: Static Text, ASCII Display, Static Bitmap, Scale, Bar Graph, Button, Clock Display, Multi-state bit map, Units, Numeric Input and 11 geometric bitmaps and lines of different width. The application of Static Text, Static Bitmap, and geometric bitmap is the same as the editing startup page.




3. Numric/ASCII Display: To add a Numeric/ASCII Display object to a screen, double click on the object to set up Related Devices, Frame Setting, Fonts and Alignment.

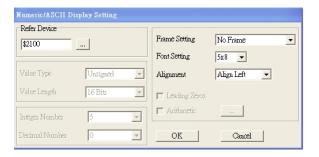

Related Device: Choose the VFD Communication Port that you need, if you want to read output frequency (H), set the VFD Communication Port to \$2202. For other values, please refer to ACMD ModBus Comm Address List.




4. Scale Setting : On the Tool Bar, click on this for Scale Setting. You can also edit Scale Setting in the Property Window on the right hand side of your computer screen.

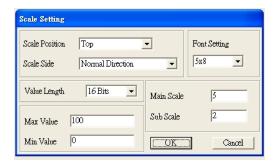

- a. Scale Position: Click on the drop down list to choose which position that you need to place a scale.
- b. Scale Side: Click on the drop down list to choose if you want to number your scale from smaller number to bigger number or from big to small. Click OK to accept this setting or click Cancel to abort.
- c. Font Setting: Click on the drop down list to choose the Font setting that you need then click OK to accept the setting or click Cancel to abort.
- d. Value Length: Click on the drop down to choose 16bits or 32 bits. Then click OK to accept the setting or click Cancel to abort.
- e. Main Scale & Sub Scale: In order to divide the whole scale into equal parts, key in the numbers of your choices for main scale and sub scale.
- f. Maximum value & Minimum Value are the numbers on the two ends of a scale. They can be negative numbers. But the values allowed to be input are limited by the length of value. For example, when the length of value is set to **be hexadecimal**, the maximum and the minimum value cannot be input as -4000.

Follow the Scale setting mentioned above; you will have a scale as shown below.

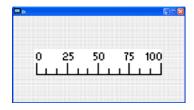


5. Bar Graph setting



- a. Related Device: Choose the VFD Communication Port that you need.
- b. Direction Setting: Click on the drop down menu to choose one of the following directions: From Bottom to Top, From Top to Bottom, From Left to Right or From Right to Left.
- c. Maximum Value & Minimum Value: They define the range covered by the maximum value and minimum value. If a value is smaller than or equal to the minimum value, then the bar graph will be blank. If a value is bigger or equal to the maximum value, then the bar graph will be full. If a value is between minimum and maximum value, then the bar graph will be filled proportionally.

6. Button : Currently this function only allows the Keypad to switch pages, other functions are not yet available. Text input function and Image inserted functions are not yet supported.


Double click on ¹ to open set up window.

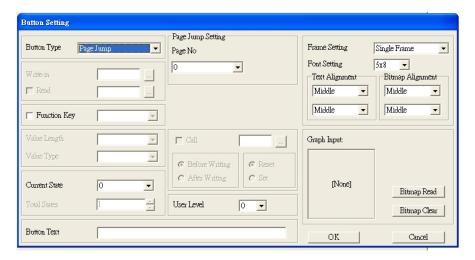

<Button Type> allows users set up buttons' functions. <Page Jump> and <Constant Setting> are the only two currently supported functions.

A [Page Jump] function setting


- Page Jump setting: After you choose the Page Jump function in the drop down list, you will see this Page Jump Setting Menu
- Function Key> allows you to assign functions to the following keys on the KPC-CC01 keypad: F1, F2, F3, F4, Up, Down, Left and Right. Please note that the Up and Down keys are locked by TPEditor. These two keys cannot be programmed. If you want to program Up and Down keys, go to Tool→Function Key Settings (F)→Re-Define Up/Down Key(R).

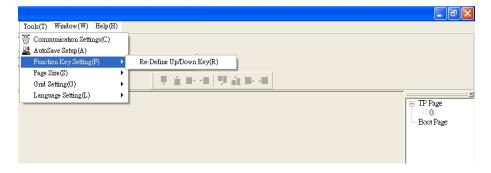

Button Text: This function allows user to name buttons. For example, key in <Next Page> in the
empty space, a button will have the wording <Next Page> displayed on it.


B [Constant setting] function

This function is to set up the memory address' value of the VFD or PLC. When pressing the <function button> set up in before, a value will be written to the memory address of the <Constant Setting>. This function can be used as initializing a variable.

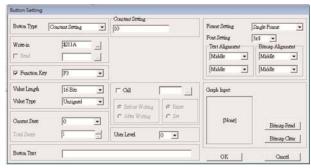


 Clock Display Setting : The setup window of the Clock Display is shown as the image below. Time, Day or Date can be displayed on the keypad.

Open a new file and click once in that window, you will see the following In the clock display setting, you can choose to display Time, Day or Date on the Keypad. To adjust time, go to #9 on the Keypad's menu. You can also adjust Frame Setting, Font Setting and Alignment.

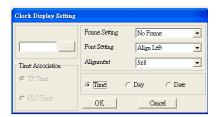

8. Multi-state bitmap : The setup window of the multi-state is shown as the image below. This object reads the bit's property value of the PLC. It defines what image or wording is when this bit is 0 or when this bit is 1. Set the initial status to be 0 or 1 to define the displayed image or wording.

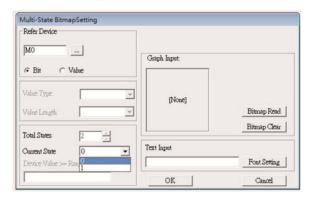

9. Unit Measurement : Click once on this Button:
Open a new file and double click on that window, you will see the following




Choose from the drop down list the Metrology and the Unity Name that you need. As for Metrology, you have the following choices Length, Square Measure, Volume/Solid Measure, Weight, Speed, Time and Temperature. The unit name changes automatically when you change metrology type.

10. Numeric Input Setting

This menu allows you to provide parameters or communication ports and to input numbers.

Click once on this button


Open a new file and double click on that window, you will see the following:

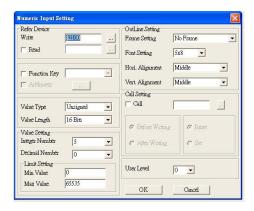

- a. Related Device: There are two blank spaces to fill in, one is <Write> and another one is <Read>. Input the numbers that you want to display and the corresponding numbers of a parameter and that of a communication port. For example, input 012C to Read and Write Parameter P01-44.
- b. OutLine Setting: The Frame setting, Font setting, Vertical Alignment and Horizontal Alignment are the same as mentioned before. Click on the drop down menu and choose the setting that you need.
- c. Function key: The setting here allows you to program keys on the keypad. Press the key on the menu then the corresponding key on the keypad will start to blink, then press Enter to confirm the setting.
- d. Value Type & Value Length: These two factors influence the range of the Minimum and Maximum Value of the Limit Setting. Please note that the corresponding supporting values for C2000 have to be 16bits. The 32bits values are not supported.
- e. Value Setting: This part is set automatically by the keypad itself.
- f. Limit Setting: Input the range the security setting here.
- g. For example, if you set Function Key as F1, Minimum Value as 0 and Maximum Value ias 4, then press F1 on Keypad Then you can press Up and Down key on the keypad to increase or decrease the value. Press Enter Key on the keypad to confirm your setting. You can also go to parameter table 01-44 to verify if your input correctly the value.
- 11. Download TP Page: Press Up or Down key on the keypad until you reach #13 PC Link.


Then press Enter on the keypad and you will see the word "Waiting" on keypad's screen. Now choose a page that you have created then go to Communication $(M) \rightarrow W$ rite to TP(W) to start downloading the page to the keypad

When you see the word Completed on the keypad's screen, that means the download is done. Then you can press ESC on the keypad to go back to the menu of the keypad.

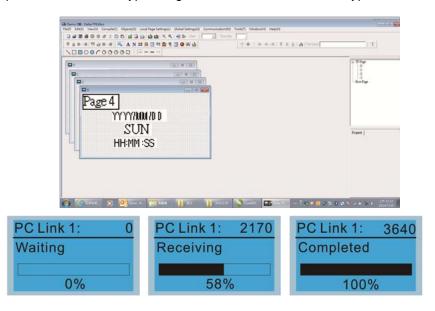


Edit Main Page


1. On the bottom right-hand corner of the HMI, click on a page number to edit or go to VIEW >HMI page to start editing main page. As shown in the image, the following objects are available. From left to right: Static Text, ASCII Display, Static Bitmap, Scale, Bar Graph, Button, Clock Display, Multi-state bit map, Units, Numeric Input and 11 geometric bitmaps and lines of different width. The application of Static Text, Static Bitmap, and geometric bitmap is the same as the editing startup page.

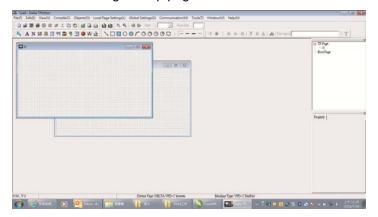


2. Numric/ASCII Display: To add a Numeric/ASCII Display object to a screen, double click on the object to set up Related Devices, Frame Setting, Fonts and Alignment.

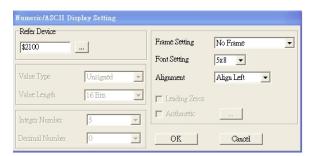

Related Device: Choose the VFD Communication Port that you need, if you want to read output frequency (H), set the VFD Communication Port to \$2202. For other values, please refer to ACMD ModBus Comm Address List.

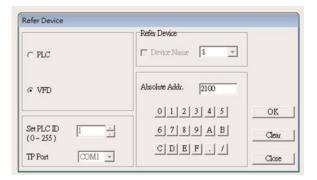


3. Scale Setting : On the Tool Bar, click on this Froperty Window on the right hand side of your computer screen.

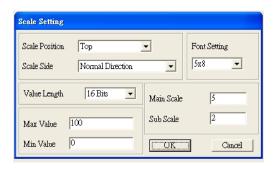


- i. Scale Position: Click on the drop down list to choose which position that you need to place a scale.
- ii. Scale Side: Click on the drop down list to choose if you want to number your scale from smaller number to bigger number or from big to small. Click OK to accept this setting or click Cancel to abort.
- iii. Font Setting: Click on the drop down list to choose the Font setting that you need then click OK to accept the setting or click Cancel to abort.
- iv. Value Length: Click on the drop down to choose 16bits or 32 bits. Then click OK to accept the setting or click Cancel to abort.
- v. Main Scale & Sub Scale: In order to divide the whole scale into equal parts, key in the numbers of your choices for main scale and sub scale.
- vi. Maximum value & Minimum Value are the numbers on the two ends of a scale. They can be negative numbers. But the values allowed to be input are limited by the length of value. For example, when the length of value is set to **be hexadecimal**, the maximum and the minimum value cannot be input as -4000.

Follow the Scale setting mentioned above; you will have a scale as shown below.

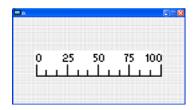


4. Bar Graph setting

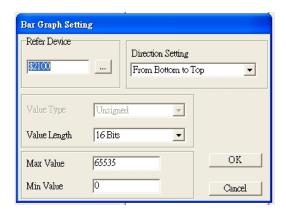

- i. Related Device: Choose the VFD Communication Port that you need.
- ii. Direction Setting: Click on the drop down menu to choose one of the following directions: From Bottom to Top, From Top to Bottom, From Left to Right or From Right to Left.
- iii. Maximum Value & Minimum Value: They define the range covered by the maximum value and minimum value. If a value is smaller than or equal to the minimum value, then the bar graph will be blank. If a value is bigger or equal to the maximum value, then the bar graph will be full. If a value is between minimum and maximum value, then the bar graph will be filled proportionally.
- 5. Button 3: Currently this function only allows the Keypad to switch pages, other functions are not yet available. Text input function and Image inserted functions are not yet supported.


Double click on ¹ to open set up window.

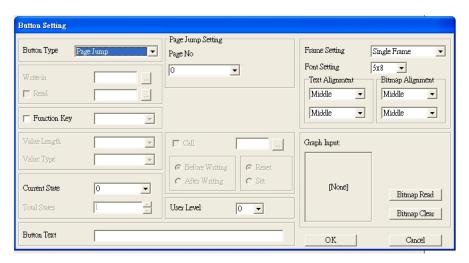

<Button Type> allows users set up buttons' functions. <Page Jump> and <Constant Setting> are the only two currently supported functions.

A [Page Jump] function setting


- Page Jump setting: After you choose the Page Jump function in the drop down list, you will see this Page Jump Setting Menu
- < Function Key> allows you to assign functions to the following keys on the KPC-CC01 keypad: F1, F2, F3, F4, Up, Down, Left and Right. Please note that the Up and Down keys are locked by TPEditor. These two keys cannot be programmed. If you want to program Up and Down keys, go to Tool→Function Key Settings (F)→Re-Define Up/Down Key(R).

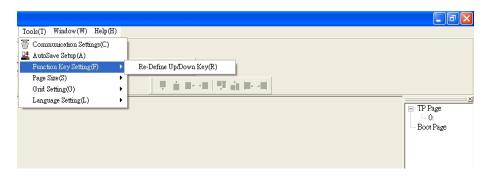

Button Text: This function allows user to name buttons. For example, key in <Next Page> in the
empty space, a button will have the wording <Next Page> displayed on it.

B [Constant setting] function

This function is to set up the memory address' value of the VFD or PLC. When pressing the <function button> set up in before, a value will be written to the memory address of the <Constant Setting>. This function can be used as initializing a variable.

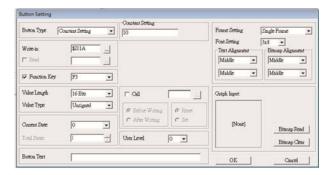


11. Clock Display Setting 1: The setup window of the Clock Display is shown as the image below. Time, Day or Date can be displayed on the keypad.

Open a new file and click once in that window, you will see the following

In the clock display setting, you can choose to display Time, Day or Date on the Keypad. To adjust time, go to #9 on the Keypad's menu. You can also adjust Frame Setting, Font Setting and Alignment.



12. Multi-state bitmap : The setup window of the multi-state is shown as the image below. This object reads the bit's property value of the PLC. It defines what image or wording is when this bit is 0 or when this bit is 1. Set the initial status to be 0 or 1 to define the displayed image or wording.

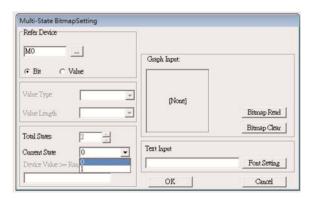

13. Unit Measurement : Click once on this Button:
Open a new file and double click on that window, you will see the following




Choose from the drop down list the Metrology and the Unity Name that you need. As for Metrology, you have the following choices Length, Square Measure, Volume/Solid Measure, Weight, Speed, Time and Temperature. The unit name changes automatically when you change metrology type.

14. Numeric Input Setting

This menu allows you to provide parameters or communication ports and to input numbers.

Click once on this button

Open a new file and double click on that window, you will see the following:

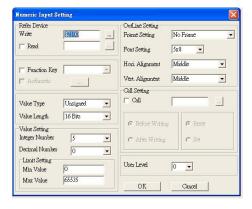


- h. Related Device: There are two blank spaces to fill in, one is <Write> and another one is <Read>. Input the numbers that you want to display and the corresponding numbers of a parameter and that of a communication port. For example, input 012C to Read and Write Parameter P01-44.
- i. OutLine Setting: The Frame setting, Font setting, Vertical Alignment and Horizontal Alignment are the same as mentioned before. Click on the drop down menu and choose the setting that you need.
- j. Function key: The setting here allows you to program keys on the keypad. Press the key on the menu then the corresponding key on the keypad will start to blink, then press Enter to confirm the setting.
- k. Value Type & Value Length: These two factors influence the range of the Minimum and Maximum Value of the Limit Setting. Please note that the corresponding supporting values for C2000 have to be 16bits. The 32bits values are not supported.
- I. Value Setting: This part is set automatically by the keypad itself.

- m. Limit Setting: Input the range the security setting here.
- n. For example, if you set Function Key as F1, Minimum Value as 0 and Maximum Value ias 4, then press F1 on Keypad Then you can press Up and Down key on the keypad to increase or decrease the value. Press Enter Key on the keypad to confirm your setting. You can also go to parameter table 01-44 to verify if your input correctly the value.
- 15. Download TP Page: Press Up or Down key on the keypad until you reach #13 PC Link.


Then press Enter on the keypad and you will see the word "Waiting" on keypad's screen. Now choose a page that you have created then go to Communication (M)—Write to TP(W) to start downloading the page to the keypad

When you see the word Completed on the keypad's screen, that means the download is done. Then you can press ESC on the keypad to go back to the menu of the keypad.

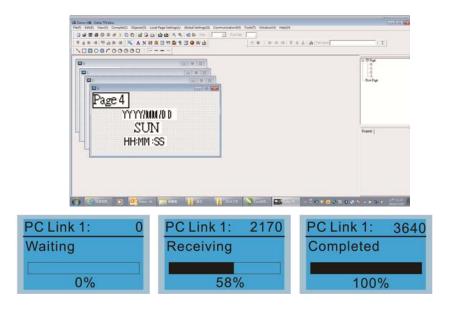

10 Auto-tuning Process

■ Flow Chart

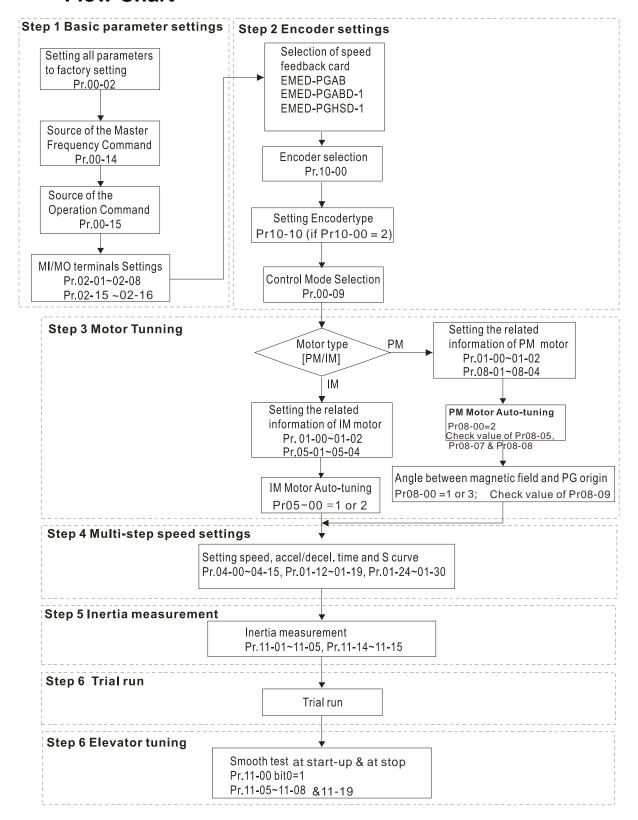

■ Explanations for the Auto-tuning Steps

Step1

Basic Parameters Settings

■ Make sure that Pr.00-00 (identity code of the AC motor drive) corresponds with the nameplate indicated on the AC motor drive.

■ Make sure that all parameters are reset to factory setting (Pr.00-02 is set to 9 or 10).

Pr00-02 0: No function
Parameter 1: Read only
Reset 8: Keypad lock

9: All parameters are reset to factory settings (base frequency = 50Hz) 10: All parameters are reset to factory settings (base frequency = 60Hz)

Source of the Master Frequency Command: It is user-defined. (Pr.00-14)

Pr00-14

1: RS-485 serial communication or digital keypad (KPC-CC01)

Source of 2: External analog input (Pr. 03-00)

the Master 3: Digital terminals input (Pr04-00 ~ Pr.04-15)

Frequency Command

Source of the Operation Command: It is user-defined. (Pr.00-15)

Pr00-15 Source of 1: External terminals

the operation 2: RS-485 serial communication or digital keypad (KPC-CC01)

frequency

MI/MO External Terminal Settings:

Refer to Pr.02-01~Pr02-08 for setting of the external input terminals MI1~MI8.

NOTE: The factory setting of Pr.02-08 is 40 (Enable drive function).

Disable this function, if you don't need to use it.

Settings of 0: No function

Pr02-01 to 1: multi-step speed command 1 Prp02-08 2: multi-step speed command 2

3: multi-step speed command 34: multi-step speed command 4

5: Reset

6: JOG command

7: Acceleration/ Deceleration Speed inhibit

8: the 1st, 2nd acceleration/deceleration time selection 9: the 3rd, 4th acceleration/deceleration time selection

10: EF input (07-28)

11: Reserved

12: Stop Output

13: Reserved

14: Reserved

15: Operation speed command form AUI1

16: Reserved

17: operation speed command form AUI2

18: Emergency stop (Pr07-28)

19~23: Reserved

24: FWD JOG command

- 25: REV JOG command
- 26: Reserved
- 27: ASR1/ASR2 selection
- 28: Emergency stop (EF1) (Motor coasts to stop)
- 29-30: Reserved
- 31: High torque bias (by Pr.07-21)
- 32: Middle torque bias (by Pr.07-22)
- 33: Low torque bias (by Pr.07-23)
- 34-37: Reserved
- 38: Disable write EEPROM function
- 39: Torque command direction
- 40: Enable drive function
- 41: Detection for magnetic contactor
- 42: Mechanical brake
- 43: EPS function

Refer to Pr02-15 and Pr02-16 for the settings of MO1~MO8

Pr02-15~ 0: No function Pr02-16 1: Operation indication 2: Operation speed attained 3: Desired frequency attained 1 (Pr.02-25) 4: Desired frequency attained 2 (Pr.02-27) 5: Zero speed (frequency command) Zero speed with stop (frequency command)

- 7: Over torque (OT1) (Pr.06-05~06-07)
- 8: Over torque (OT2) (Pr.06-08~06-10)
- Drive ready
- 10: User-defined Low-voltage Detection (LV)
- 11: Malfunction indication
- 12: Mechanical brake release (Pr.02-29, Pr.02-30)
- 13: Overheat (Pr.06-14)
- 14: Brake chopper signal
- 15: Motor-controlled magnetic contactor output
- 16: Slip error (oSL)
- 17: Malfunction indication
- 18: Reserved
- 19: Brake chopper output error
- 20: Warning output
- 21: Over voltage warning
- 22: Over-current stall prevention warning
- Over-voltage stall prevention warning
- 24: Operation mode indication (Pr.00-15 \neq 0)
- 25: Forward command
- 26: Reverse command
- 27: Output when current >= Pr.02-33
- 28: Output when current < Pr.02-33
- 29: Output when frequency >= Pr.02-34
- 30: Output when frequency < Pr.02-34
- 31-32: Reserved
- 33: Zero speed (actual output frequency)
- 34: Zero speed with Stop (actual output frequency)
- 35: Error output selection 1 (Pr.06-22)
- 36: Error output selection 2 (Pr.06-23)
- 37: Error output selection 3 (Pr.06-24)
- 38: Error output selection 4 (Pr.06-25)
- 39: Reserved
- 40: Speed attained (including zero speed)
- 41: Reserved
- 42: STO output error

Step2

Encoder Settings

- Selection of speed feedback cards
 - Refer to CH07 Speed Feedback Card Selection. Delta provides 3 kinds of PG card for user to choose, including EMED-PGABD-1, EMED-PGHSD-1, EMED-PGAB-0.

Pr10-00 0: No function

Type of PG 1: ABZ
signal 2: ABZ+Hall
3: SIN/COS + Sinusoidal
4: SIN/COS + Endat
5: SIN/COS
6: SIN/COS + Hiperface

■ Encoder settings: Pr.10-01~Pr.10-02

Detection for the magnetic pole position of motor

The detection method will be different by the setting of Pr.10-00 PG Signal Type.

The detection methods: (refer to Pr.10-00)

- Setting 1 or 5: The AC motor drive will output short circuit to detect the position of the magnetic pole. At this moment, the motor will generate a little noise.
- Setting 2: The AC motor drive will detect the position of the magnetic pole by the UVW signal of PG.
- Setting 3: The AC motor drive will detect the position of the magnetic pole by the sine signal of PG.
- Setting 4: The AC motor drive will detect the position of the magnetic pole by the communication signal of PG.

Pr10-01	1~25000		
Encoder			
Pulse			

Type of Encoder Input Setting. The setting of this parameter is normally 1. If the motor doesn't run at setting 1, change to setting 2.

Pr10-02	0: No function
Type of	1: Phase A leads in a forward run command and phase B leads in a reverse
Encoder	run command
Input Setting	2: Phase B leads in a forward run command and phase A leads in a reverse
	run command
	3: Phase A is a pulse input and phase B is a direction input. (low
	input=reverse direction, high input=forward direction)
	4: Phase A is a pulse input and phase B is a direction input. (low
	input=forward direction, high input=reverse direction)
	5: Single-phase input

Step 3

Motor tuning

- Setting the parameters according to the motor type (PM or IM)
- Motor Auto-tuning: When the Source of the Operation Command is set to digital keypad (Pr.00-15=2, refer to step 1)
- Control method: Please set Pr.00-09 to 8.

Pr00-09
Control
Method

1: V/f Control + Encoder (VFPG)
2: Sensorless vector control (SVC)
3: FOC vector control + Encoder (FOCPG)
4: Torque control + Encoder (TQCPG)
8: FOC PM control (FOCPM)

- NOTE: Setting parameter by the motor type (PM or IM).
- Inputting the nameplate information on the motor into Pr.01-00~01-02

Pr01-00	10.00~400.00Hz
Maximum Output Frequency	

Pr01-01	0.00~400.00Hz
1st Output Frequency Setting 1	
(base frequency/ motor rated	
frequency)	

Pr.01-02	230V models: 0.0V~255.0V
1st Output Voltage Setting 1	460V models: 0.0V~510.0V
(base voltage/ motor rated	
voltage)	

[IM (Induction Motor]

■ Motor Auto-tuning: When the Source of the Operation Command is set to digital keypad (Pr.00-15=2, refer to step 1) and setting Pr.05-00=2

Pr05-00	0: No function
Motor Auto Tuning	1: Rolling test (Rs, Rr, Lm, Lx, no-load current), (Motor runs)
motor / tate / a.m.g	2: Static Test (Motor doesn't run)
	2: Statio Test (Weter decorrerail)

NOTE 1: It doesn't need to release the brake in this auto tuning operation. Please make sure that the electromagnetic valve is ON when it is used between the AC motor drive and motor. When Pr.05-00 is set to 2, no-load current of motor must be entered into Pr.05-05. The warning message "Auto tuning" will be displayed on the digital keypad during tuning until it is finished. Then, the measure result will be saved into Pr.05-06~Pr.05-09.

NOTE 2: It needs to finish motor auto tuning before measuring the angle between magnetic pole and PG origin.

Pr05-01 Full-load Current of Motor	(40~120%) *00-01 Amps	
---------------------------------------	-----------------------	--

Pr05-02	0.00~655.35kW
Rated Power of Motor	

Pr05-03	0~65535
Rated Speed of Motor(rpm)	

Pr05-04	2~9	
Number of		
Motor Poles		

[Permanent Magnet Motor]

■ Motor Auto-tuning: When the Source of the Operation Command is set to digital keypad (Pr.00-15=2, refer to step 1) and setting Pr.08-00=2

Pr08-00	0: No function
Motor Auto Tuning	1: Only for the unloaded motor, auto measure the Angle
	between magnetic pole and PG origin (08-09)
	2: For PM parameters
	3: Auto measure the Angle between magnetic pole and PG origin (08-09)

NOTE 1: It doesn't need to release the brake in this auto tuning operation. Please make sure that the electromagnetic valve is ON when it is used between the AC motor drive and motor. The warning message "Auto tuning" will be displayed on the digital keypad during tuning until it is finished. Then, the measure result will be saved into Pr.08-05 and Pr.08-07. (Pr.08-05 is Rs of Motor and Pr.08-07 is Lq of Motor)

NOTE 2: It is recommended to set Pr.08-00 to 1 (unloaded motor) for the most accurate calculation. If it needs to execute this function with loaded motor, please balance the carriage before execution. When Pr.08-00=1, please note:

- When executing the function of auto measure the Angle between magnetic pole and PG origin, it is recommended to stop the carriage car at the middle level.
- Make sure that the electromagnetic valve and mechanical brake are OFF before executing this function.
- When Pr.08-00=1, please execute this function with unloaded motor to get the most accurate result. If it needs to execute this function with loaded motor, please balance the carriage before execution. Make sure the balance by releasing the brake manually before running. This balance will affect the accuracy and the accuracy will influence the power efficiency in driving the motor.

NOTE 3: If it doesn't allow balancing carriage in the measured environment, it can set Pr.08-00 to 3 for executing this function. It will have a difference of 15~30° by the different encoder type.

- When Pr.08-00 is set to 3, the driver will execute the function by the setting of Pr.10-00. The difference between Pr.08-00=3 and Pr.08-00=1 is it doesn't need to put the balanced carriage when Pr.08-00=3. Besides, the operation status of the motor will be as shown in the above table (Pr.10-00=1, 2, 3 and 5, the motor will run. Pr.10-00=4 and 6, the motor won't run)
- When Pr.08-00=3, please make sure if the setting of Pr.10-02 is correct. The incorrect setting will result in the wrong position of the magnetic pole and make the wrong angle between magnetic pole and PG origin.

NOTE 4: The warning message "Auto tuning" will be displayed on the digital keypad during tuning until it is finished. Then, the measure result will be saved into Pr.08-09.

NOTE 5: If the warning message "Auto Tuning Err" displayed on the digital keypad during tuning due to abnormal drive or human factor, please check if the wiring is correct. When the warning message "PG Fbk Error" displayed on the digital keypad, please change the setting of Pr.10-02 (for example: if it was set to 1, please change it to 2). When the warning message "PG Fbk Loss" is displayed on the digital keypad, please check the feedback of Z-phase pulse.

Pr.08-01	(40~120%)*00-01 Amps
Full-load Current of Motor	
Pr.08-02	0.00~655.35 kW
Rated power of Motor	
Pr.08-03	0~65535
Rated speed of Motor (rpm)	
Pr.08-04	2~96
Number of Motor Poles	

■ Measure the angle between magnetic pole and PG origin

To execute "RUN" by keypad or digital terminals:

- 1. Using digital keypad: setting Pr.08-00 to 1 and press "RUN" to execute "auto measure the angle between magnetic pole and PG origin". Please note that if the electromagnetic valve and brake are not controlled by the AC motor drive, please release it by manual.
- 2. Using external terminals: setting Pr.00-14=3 (frequency source) and Pr.00-15=1 (operation source). Please use "inspection" function to execute "auto measure the angle between magnetic pole and PG origin".

For the IM, it doesn't need to detect the position of the magnetic pole; this function (auto measure the Angle between magnetic pole and PG origin) doesn't have to be executed.

Measure the angle between magnetic pole and PG origin: Pr.08-00=1 or 3

Pr.08-00	0: No function
Motor Auto tuning	1: Only for the unloaded motor, auto measure the Angle between magnetic pole and PG origin (08-09)
	2: For PM parameters
	3: Auto measure the Angle between magnetic pole and PG origin (08-09)

NOTE: The function of "auto measure the angle between magnetic pole and Pg origin" only can be enabled after finishing motor auto-tuning.

Step 4

Multi-Step Speed setting or Analog setting

(Do not wire the two settings at the same time)

- A. Multi-step speed settings
- Confirm the total speed steps (high speed, middle speed, low speed, creep, inspection and level auto-learning)
- Make sure that the setting of step speeds and the action of the corresponding terminals of multi-function input commands are correct.
- Setting multi-step speeds in Pr.04-00 to Pr.04-15

	Zero Step Speed Frequency	0.00~400.00Hz
	1st Step Speed Frequency	0.00~400.00Hz
	2nd Step Speed Frequency	0.00~400.00Hz
	3rd Step Speed Frequency	0.00~400.00Hz
	4th Step Speed Frequency	0.00~400.00Hz
	5th Step Speed Frequency	0.00~400.00Hz
	6th Step Speed Frequency	0.00~400.00Hz
	7th Step Speed Frequency	0.00~400.00Hz
Settings of Pr.04-00 to Pr.04-15	8th Step Speed Frequency	0.00~400.00Hz
	9th Step Speed Frequency	0.00~400.00Hz
	10th Step Speed Frequency	0.00~400.00Hz
	11th Step Speed Frequency	0.00~400.00Hz
	12th Step Speed Frequency	0.00~400.00Hz
	13th Step Speed Frequency	0.00~400.00Hz
	14th Step Speed Frequency	0.00~400.00Hz
	15th Step Speed Frequency	0.00~400.00Hz

NOTE: It is recommended to set the max. operating frequency to the half of max. operating frequency before confirming the setting of each step speed and the action of the corresponding terminals of multi-function input commands.

- Setting the acceleration/deceleration with Pr.01-23 and the setting 08 (the 1st, 2nd acceleration/deceleration time selection) and 09 (the 3rd, 4th acceleration/deceleration time selection) of multi-function input command Pr.02-01~02-08.
- Settings of acceleration/deceleration time: Pr.01-12~Pr.01-19

	Accel Time 1	0.00~600.00 sec
	Decel Time 1	0.00~600.00 sec
	Accel Time 2	0.00~600.00 sec
	Decel Time 2	0.00~600.00 sec
	Accel Time 3	0.00~600.00 sec
	Decel Time 3	0.00~600.00 sec
	Accel Time 4	0.00~600.00 sec
	Decel Time 4	0.00~600.00 sec

NOTE: it is recommended to set the Pr.01-31 (deceleration time) to the small value in the trial run and execute smooth test after all the actions are correct.

■ Settings of S curve: Pr.01-24~Pr.01-30

Settings of Pr.01-24 to Pr.01-30	S-curve for Acceleration Departure Time S1	0.00~25.00 sec
	S-curve for Acceleration Arrival Time S2	0.00~25.00 sec
	S-curve for Deceleration Departure Time S3	0.00~25.00 sec
	S-curve for Deceleration Arrival Time S4	0.00~25.00 sec
	Mode Selection when Frequency < Fmin	0: Output waiting 1: Zero-speed operation 2: Fmin (4th output frequency setting)
	Switch Frequency for S3/S4 Changes to S5	0.00~400.00Hz
	S-curve for Deceleration Arrival Time S5	0.00~25.00 sec

NOTE: it is recommended to set the S curve time to 0 in trial run and execute smooth test after all the actions are correct.

B. Analog setting

- 1. Set Pr00-14=2, frequency command is assigned by the external analog signal.
- 2. Set Pr00-15 =1, operating command is assigned by the external terminals.
- 3. In order to work with the control terminal, set up Pr03-23 or Pr03-24 in accordance with the output mode of the controller
- 4. Set up Pr03-03, PR03-05 or Pr03-06 to work with the connecting port. Set F to display 0Hz when the motor drive is going to stop.

Step 5

Inertia: For synchronous motor, set Pr11-05 = 40%. For asynchronous motor, set Pr11-05 = 80%.

Pr.11-05	1~300%
Inertial Ratio	

Step 6

Trial run

This step is used to trial run after finishing the settings of Step 1 to Step 5 to check if it runs normally after executing the inspection with the loaded motor. At the same time, please also check if the operations of multi-function output terminals is normal, such as the action of the brake release and electromagnetic valve correspond to the host controller.

It needs to check the switch between each step speed, current value, the noise in the carriage and noise source during operation.

Step 7

Elevator tuning

Setting Pr. 11-00 to bit 0=1

Pr.11-00	Bit 0=0: disable
System control	Bit 0=1: ASR Auto tuning, PDFF enable
	Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02 (DC Brake Current Level)

Smooth test for general operation ■ Adjust the setting of Pr.11-05 2.

Pr.11-05	1~300%	
Inertial Ratio		

Adjust the settings of Pr.11-06 to Pr.11-08

Settings of Pr.11-06 to	Zero-speed Bandwidth	0~40Hz
Pr.11-08	Low-speed Bandwidth	0~40Hz
	High-speed Bandwidth	0~40Hz

3. Start-up adjustment (only for PM)

Control by the zero-speed position

Setting Pr.11-00, 10-19, 10-22, 10-23, 02-29 and 10-24

Pr.11-00	Bit 0=0: disable
System control	Bit 0=1: ASR Auto tuning, PDFF enable
	Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02
	(DC Brake Current Level)
	Bit 15=0: when power is applied, it will detect the position of magnetic
	pole again
	Bit 15=1: when power is applied, it will start from the magnetic pole
	position of previous power failure
Pr.10-19	0~655.00%
Zero Speed Gain (P)	

NOTE: refer to the explanations in Pr.02-32

Pr.10-22	0.000~65.535sec
Operation Time of Zero	
Speed	
Pr.10-23	0.000~65.535sec
Filter Time of Zero Speed	
Pr.10-24	0: after the brake release set in Pr.02-29
Time for Zero Speed	1: after the brake signal input (Pr.02-01~02-08 is set to 42)
Execution	
Pr.02-29	0.000~65.000 Sec
Brake Release Delay Time	
when Elevator Starts	

NOTE: When Pr.10-24=0, the zero speed control needs to be used with Pr.02-29. (Refer to the explanations in Pr.02-32)

■ Function of the preload input

Connect the signal of the preload signal to the external terminal of the AC motor drive (AUI1) and setting Pr.03-00=11, 07-19=1, 03-03, 03-06 and 03-09.

Pr.03-00	0: No function
Analog Input 1 (AUI1)	1: Frequency command (torque limit under TQR control mode)
	2: Torque command (torque limit under speed mode)
	3: Torque compensation command
	4-5: Reserved
	6: P.T.C. thermistor input value
	7: Positive torque limit
	8: Negative torque limit
	9: Regenerative torque limit
	10: Positive/negative torque limit

Pr.07-19	0: Disable
Source of Torque Offset	1: Analog input (Pr.03-00)
	2: Torque offset setting (Pr.07-20)
	3: Control by external terminal (by Pr.07-21 to Pr.07-23)

Pr.03-03	-100.0~100.0%
Analog Input Bias 1 (AUI1)	

Pr.03-06	0: Zero bias
Positive/negative Bias Mode	1: Lower than bias=bias
(AUI1)	2: Greater than bias=bias
	3: The absolute value of the bias voltage while serving as the center
	4: Serve bias as the center

Pr.03-09	-500.0~500.0%
Analog Input Gain 1 (AUI1)	


NOTE: Pr.03-03, 03-06 and 03-09 are used to adjust the analog input signal.

07-19: Source of torque offset

03-00~02: Analog input selections (AUI1/AUI2)

03-03~05: Analog input bias (AUI1/AUI2)

03-06~08: AUI1/AUI2 bias mode

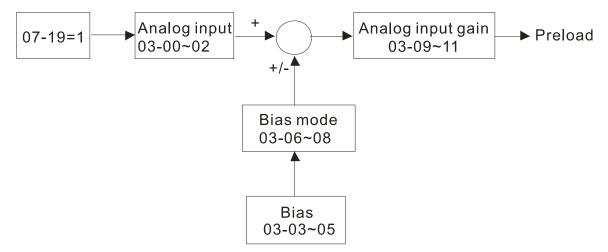

4. Setting of drive stop

Adjusting Pr.01-29, Pr.01-30, Pr.01-31 and Pr.11-19

Pr.01-29	0.00~400.00Hz
Switch Frequency for S3/S4	
Changes to S5	
Pr.01-30	0.00~25.00 sec
S-curve for Deceleration	
Arrival Time S5	
Pr.11-19	0~40Hz
Zero-speed Holding	
Bandwidth	
Pr.01-31	0.00~600.00 sec
Deceleration Time	

11 Summary of Parameter Settings

This chapter provides summary of parameter settings for user to gather the parameter setting ranges, factory settings and set parameters. The parameters can be set, changed and reset by the digital keypad.

NOTE

- 1) **/**: The parameter can be set during operation.
- 2) For more detail on parameters, please refer to Ch12 Description of Parameter Settings.
- 3) indicates that the parameters or the setting value only applies on the Direct Docking Mode. The actual functions of each elevator controller vary from one to another. For more information, contact Delta.
- 4) The parameters described in this user manual are designed for multi-speed mode. The factory setting of direct docking mode are different from the factory setting described in this user manual. If you need to use the direct docking mode, contact Delta for more information.

00 Drive Parameters

IM: Induction Motor; PM: Permanent Magnet Motor

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
00-00	Identity Code of AC Motor Drive	108: 220V, 3HP (single phase)	Read	0	0	0	0	0	
	AC MOIOI DIIVE	110: 220V, 5HP (Single phase)	Only						
		8: 230V, 3HP							
		10: 230V, 5HP							
		11: 460 V, 5HP (4.0kW)							
		12: 230V, 7.5HP							
		13: 460V, 7.5HP							
		14: 230V, 10HP							
		15: 460V, 10HP							
		16: 230V, 15HP							
		17: 460V, 15HP							
		18: 230V, 20HP							
		19: 460V, 20HP							
		20: 230V, 25HP							
		21: 460V, 25HP							
		22: 230V, 30HP							
		23: 460V, 30HP							
		24: 230V, 40HP							
		25: 460V, 40HP							
		26: 230V, 50HP							
		27: 460V, 50HP							
		29: 460V, 60HP							
		31: 460V, 75HP							
		33: 460V, 100HP							
00-01	Display AC Motor Drive Rated Current	Display by models	Read	0	0	0	0	0	0
00-02	Parameter Reset	0: No function 1: Read only	only 0	0	0	0	0	0	0

			5 : Direct docking mode only ◆ 8: No function 9: All parameters are reset to factory settings(base frequency is 50Hz) 10: All parameters are reset to factory settings (base frequency is 60Hz							
*	00-03	Start-up Display Selection	0: Frequency command 1: Output frequency 2: DC BUS voltage 3: Output current 4: Output voltage 5: User defined (00-04)	0						
×	00-04	Content of Multi-function	0: Display output current (A) (Unit: Amps)	0	0	0	0	0	0	
		Display	1: Reserved							
			2: Display actual output frequency (H.)							
			(Unit: Hz)							
			3: Display DC-BUS voltage (v) (Unit: Vdc)							
			4: Display output voltage (E) (Unit: Vac)							
			5: Display output power angle (n) (Unit: deg)							
			6: Display output power in kW (P) (Unit: kW)							
			7: Display actual motor speed rpm (r)							
			(Unit: rpm)							
			8: Display estimate output torque % (t)							
			(Unit: %)							
			9: Display PG feedback (G) (refer to							
			Pr.10-00,10-01) (Unit: PLS)							
			10: Display PID feedback (b) (Unit: %)							
			11: Display AUI1 in % (1.) (Unit: %)							
			12: Reserved							
			13: Display AUI2 in % (2.) (Unit: %)							
			14: Display the temperature of heat sink							
			In °C (c.) (Unit: °C).							
			15: Display the temperature of IGBT In °C (c.) (Unit: °C).							
			16: The status of digital input (ON/OFF) (i)							
			17: The status of digital output (ON/OFF) (o)							
			18: Multi-step speed (S)							
			19: The corresponding CPU pin status of							
			digital input (d)							

			20: The corresponding CPU pin status of digital output (0.)							
			21~23: Reserved							
			24: AC output voltage when error occurred							
			25: DC-side voltage when error occurred							
			26: Motor's frequency when error occurred							
			27: Output current when error occurred							
			28: Output frequency when error occurred							
			29: Frequency command when error occurred							
			30: Output power when error occurred							
			31: Output torque when error occurred							
			32: Input terminal status when error							
			occurred 33: Output terminal status when error							
			occurred							
			34: Status of motor drive when error							
			occurred 35: Display MI status & MO status on LED							
	00.05		keypad.							_
×	00-05	User-Defined Coefficient	Digit 4: decimal point number (0 to 3) Digit 3-0: 40 to 9999	0			\circ			
	00-06	Software Version	READ ONLY	#.#	0	0	0	0		$\overline{\bigcirc}$
×	00-07	Password Input	1 to 9998 and 10000 to 65535	0	0	0	0	0	0	$\overline{\bigcirc}$
N	00-08	Password Set	0 to 2: times of wrong password 1 to 9998 and 10000 to 65535	0			0			
,	00 00	T downerd cot	0: No password set or successful input in Pr.00-07	ŭ						
	00-09	Control Method	1: Password has been set 0: V/f Control	0						
	00-09	Control Method	1: V/f Control + Encoder (VFPG)	U						
			2: Sensorless vector control (SVC)							
			3: FOC vector control + Encoder (FOCPG) 4: Torque control + Encoder (TQCPG)							
			8: FOC PM control (FOCPM)							
×	00-10	Speed Unit	0: Hz 1: m/s	0		0	0	0		
			2: ft./s							
			3 : Direct docking mode only ◆							
	00-11	Output Direction Selection	0: FWD: counterclockwise, REV: clockwise 1: FWD: clockwise, REV: counterclockwise	0			0	0		
N	00-12	Carrier Frequency	2~15KHz	12	0	0	0			$\overline{\bigcirc}$
×	00-13	Auto Voltage Regulation	0: Enable AVR	0	0	0	0	0	0	0
		(AVR) Function	1: Disable AVR2: Disable AVR when deceleration stop							
N	00-14	Source of the Master	RS-485 serial communication or digital	1	0	0	0	0		$\overline{\bigcirc}$
		Frequency Command	keypad (KPc-CC01)							
			2: External analog input (Pr. 03-00) 3: Digital terminals input (Pr. 04-00~04-15)							
			4 : Direct docking mode only ◆							
×	00-15	Source of the Operation	1: External terminals	1	0	0	0	0	0	0
		Command	2: RS-485 serial communication or digital keypad (KPC-CC01)							

01 Basic Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
	01-00	Maximum Output Frequency	10.00~400.00Hz	60.00/ 50.00	0	0	0	0	0	0
	01-01	1st Output Frequency Setting 1 (base frequency / motor's rated frequency)	0.00~400.00Hz	60.00/ 50.00	0	0	0	0	0	
	01-02	1st Output Voltage Setting 1 (base voltage/ motor's rated voltage)	230V series: 0.0V~255.0V 460V series: 0.0V~510.0V	220.0 440.0	0	0	0	0	0	
		2 nd Output Frequency Setting 1	0.00~400.00Hz	0.50	0	0				
*	01-04	2 nd Output Voltage Setting 1	230V series: 0.0V~255.0V 460V series: 0.0V~510.0V	5.0 10.0						
	01-05	3 rd Output Frequency Setting 1	0.00~400.00Hz	0.50	0	0				
*		3 rd Output Voltage Setting 1	230V series: 0.0V~255.0V 460V series: 0.0V~510.0V	5.0 10.0	0	0				
		4 th Output Frequency Setting 1	0.00~400.00Hz	0.00	0	0	0	0	0	
*	01-08	4 th Output Voltage Setting 1	230V series: 0.0V~255.0V 460V series: 0.0V~510.0V	5.0 10.0	0					
	01-09	Starting Frequency	0.00~400.00Hz	0.50	0	0	\bigcirc	\bigcirc		
*	01-10	Output Frequency Upper Limit	0.00~400.00Hz	120.00	0	0	0	0		0
*	01-11	Output Frequency Lower Limit	0.00~400.00Hz	0.00	0	0	0	0		
N	01-12	Accel Time 1	0.00~600.00 sec.	3.00	0	0	0	0		0
N	01-13	Decel Time 1	0.00~600.00 sec	2.00	0	0	0	0		0
N	01-14	Accel Time 2	0.00~600.00 sec	3.00	0	0	\bigcirc	\bigcirc		0
×		Decel Time 2	0.00~600.00 sec	2.00	0	0	\bigcirc	\bigcirc		\bigcirc
$\boldsymbol{\varkappa}$		Accel Time 3	0.00~600.00 sec	3.00	0	\bigcirc	\bigcirc	\bigcirc		0
×		Decel Time 3	0.00~600.00 sec	2.00	0	0	0	0		
×		Accel Time 4	0.00~600.00 sec	3.00	0	0	0	0		
×		Decel Time 4	0.00~600.00 sec	2.00	0	0	0	0		
/		JOG Acceleration Time	0.00~600.00 sec	1.00	0	0	0	0		0
/		JOG Deceleration Time	0.00~600.00 sec	1.00	0	0	0	0		0
/		JOG Frequency	0.00~400.00Hz	6.00	0	0	0	0	0	0
*		Switch Frequency between 1st/4th Accel/ Decel	0.00~400.00Hz	0.00			0			
*	01-24	S-curve for Acceleration Departure Time S1	0.00~25.00 sec	1.00						
*		S-curve for Acceleration Arrival Time S2	0.00~25.00 sec	1.00			0	0		
*		S-curve for Deceleration Departure Time S3	0.00~25.00sec.	1.00	0	0	0	0		
*		S-curve for Deceleration Arrival Time S4	0.00~25.00sec.	1.00	0	0	0	0		
	01-28	Mode of Selection when Frequency < Fmin	O: Output waiting Zero-speed operation Fmin (4th output frequency setting)	1	0	0	0			
*	01-29	Switch Frequency for S3/S4 Changes to S5	0.00~400.00Hz	0.00	0	0	0	0		

Ch11 Summary of Parameter Settings

×		S-curve for Deceleration Arrival Time S5	0.00~25.00sec.	1.00	0	0	0	0	
×		Deceleration Time when Operating without RUN Command	0.00~600.00sec.	2.00	0	0	0	0	
	01-32		Direct docking mode only ◆						

02 Digital Input/ Output Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
02-00	2-wire/3-wire Operation Control	0: FWD/STOP, REV/STOP 1: FWD/STOP, REV/STOP (Line Start Lockout) 2: RUN/STOP, REV/FWD 3: RUN/STOP, REV/FWD (Line Start Lockout) 4: 3-wire 5: 3-wire (Line Start Lockout)	0	0	0	0	0	0	0
02-01	Multi-Function Input Command 1 (MI1)	0: no function	1	0	0	0	0	0	0
	(it is Stop terminal for 3-wire operation)	1: multi-step speed command 1		0	0	0	0		0
02-02	Multi-Function Input Command 2 (MI2)	2: multi-step speed command 2	2	0	0	0	0		
02-03	Multi-Function Input Command 3 (MI3)	3: multi-step speed command 3	3	0	0	0	0		0
02-04	Multi-Function Input Command 4 (MI4)	4: multi-step speed command 4	4	0	0	0	0		0
02-05	Multi-Function Input Command 5 (MI5)	5: Reset	0	0	0	0	0	0	0
02-06	Multi-Function Input Command 6 (MI6)	6: JOG command	0	0	0	0	0		0
02-07	Multi-Function Input Command 7 (MI7)	7: acceleration/ deceleration speed inhibit	0	0	0	0	0		0
02-08	Multi-Function Input Command 8 (MI8)	8: the 1st, 2nd acceleration/deceleration time selection	40	0	0	0	0		0
		9: the 3rd, 4th acceleration/deceleration time selection		0	0	0	0		0
		10: EF input (07-28) 11: Reserved	-	0	0	0	0	0	0
		12: Stop output 13~14: Reserved	-	0	0	0	0	0	0
		15: operation speed command form AUI1	-		0	0	0		
		16: Reserved							
		17: Operation speed command form AUI2		0	0	0	0		0
		18: Emergency Stop (07-28)		0	0	0	0	0	0
		19~23: Reserved	-						
		24: FWD JOG command 25: REV JOG command			0	0	0		0
		26: Reserved		\vdash					\vdash
		27: ASR1/ASR2 selection	-	0	0	0	0		0
		28: Emergency stop (EF1)		0	0	0	0	0	0
		(Motor coasts to stop)							
		29-30: Reserved							
		31: High torque bias (by Pr.07-21)			0	0	0	0	0
		32: Middle torque bias (by Pr.07-22) 33: Low torque bias (by Pr.07-23)	-		0	0	0	0	
		34-37: Reserved	-	Ť	Ť	Ť	Ť	Ť	H
		38: Disable write EEPROM function]	0	0	0	0	0	0
		39: Torque command direction						0	
		40: Enable drive function		0	0	0	0	0	0
		41: Detection of magnetic contactor			0	0	0	0	
		42: Mechanical brake 1 43: EPS function			0	0	0	0	0
		HO. EFO IUIICIION							

## 02-09 Digital Input Response 0.001~30.000sec. 0.001~30.000sec. 0.005 0.0				44: Mechanical brake 2				Τ			
March Digital Input Response D.001 - 30.000sec. D.005 D.0 D.	-										
	×	02-09		-	0.005	0	0	0	0	0	0
Multi-function Output 1: RA, RB, RC (Relay1) 1: Operation indication 1: Operation speed attained 1: Operation indication 1: Operation speed attained 1: Operation speed statined 1: Opera	×	02-10	Digital Input Operation	0~65535	0	0	0	0	0	0	0
Multi-function Output 2: 2: Operation speed attained	*	02-11	Multi-function Output 1:	0: No function	11	0	0	0	0	0	0
MRA, MRB, MRC (Relay2) 3: Desired frequency attained 1 (Pr.02-25) 0 0 0 0 0 0 0 0 0				1: Operation indication		0	0	0	0	0	0
Martifunction Output 3: 4: Desired frequency attained 2 (Pr.02-27) 0 0 0 0 0 0 0 0 0	*	02-12	MRA, MRB, MRC	2: Operation speed attained	1	0	0	0	0	0	0
R1A, R12C (Relay3) Multi-function Output 4: S: Zero speed (frequency command) 0 0 0 0 0 0 0 0 0				3: Desired frequency attained 1 (Pr.02-25)		0	0	0	0		0
R2A, R12C (Relay4)	*	02-13		4: Desired frequency attained 2 (Pr.02-27)	0	0	0	0	0		0
(MO1) (frequency command) 02-16 Multi-function Output 6: 7: Over torque (OT1) (Pr.06-05~06-07) 0 ○ <td< th=""><th>*</th><td></td><td>R2A, R12C (Relay4)</td><td>5: Zero speed (frequency command)</td><th>0</th><td></td><td>0</td><td></td><td>0</td><td></td><td>0</td></td<>	*		R2A, R12C (Relay4)	5: Zero speed (frequency command)	0		0		0		0
Mo2-16 Multi-function Output 6: 7: Over torque (OT1) (Pr.06-05~06-07) 0	×	02-15		6: Zero speed with stop	0	0	0	0	0		0
(MO2) 8: Over torque (OT2) (Pr.06-08-06-10) 0 0 0 0 0 0 0 0 0											
9: Drive ready	*	02-16		, , , ,							0
10: User-defined Low-voltage Detection (LV) 11: Malfunction indication 12: Mechanical brake release (Pr.02-29, Pr.02-30) 13: Overheat (Pr.06-14) 14: Brake chopper signal 15: Motor-controlled magnetic contactor output 16: Slip error (oSL) 17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 23: Over-current stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current >= Pr.02-34 30: Output when frequency >= Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 1 (Pr.06-23) 37: Fault output option 1 (Pr.06-24) 38: Fault output option 1 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error							_	-		_	0
11: Malfunction indication 12: Mechanical brake release							-				0
12: Mechanical brake release (Pr.02-29, Pr.02-30)							-	_	_		0
(Pr.02-29, Pr.02-30) 13: Overheat (Pr.06-14) 14: Brake chopper signal 15: Motor-controlled magnetic contactor output 16: Slip error (oSL) 17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15*f0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current < Pr.02-33 28: Output when current < Pr.02-33 29: Output when current < Pr.02-34 30: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction and status verify 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 1 (Pr.06-22) 37: Fault output option 1 (Pr.06-24) 38: Fault output option 1 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error					0		0			_	0
13: Overheat (Pr.06-14) 14: Brake chopper signal 15: Motor-controlled magnetic contactor output 16: Slip error (oSL) 17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15#0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current <= Pr.02-33 29: Output when requency >= Pr.02-34 30: Output when frequency >= Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 1 (Pr.06-22) 36: Fault output option 1 (Pr.06-23) 37: Fault output option 1 (Pr.06-24) 38: Fault output option 1 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error					0		0		0	0	0
14: Brake chopper signal 15: Motor-controlled magnetic contactor output 16: Slip error (oSL) 17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15#0 and PU LED on KPC-CC01 is off) 25: Forward command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency >= Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output option 1 (Pr.06-22) 36: Fault output option 1 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error											
15: Motor-controlled magnetic contactor output 16: Slip error (oSL) 17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current >= Pr.02-33 29: Output when requency >= Pr.02-34 30: Output when frequency >= Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 1 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 3 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error					0	_	-				0
output 16: Slip error (oSL) 17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication						0	_				0
17: Malfunction indication 1 18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency >= Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-24) 38: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error							0		0	0	0
18: Reserved 19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication						0	0	0	0		0
19: Brake chopper output error 20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current <= Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency >= Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				17: Malfunction indication 1	0	0	0	0	0	0	0
20: Warning output 21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				18: Reserved							
21: Over voltage warning 22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				19: Brake chopper output error		0	0	0	0	0	0
22: Over-current stall prevention warning 23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error						0	0	0	0	0	0
23: Over-voltage stall prevention warning 24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error						0			0	0	0
24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				22: Over-current stall prevention warning		0	0	0			
(Pr.00-15≠0 and PU LED on KPC-CC01 is off) 25: Forward command 26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				23: Over-voltage stall prevention warning		0	0	0	0	0	0
26: Reverse command 27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				(Pr.00-15≠0 and PU LED on KPC-CC01 is off)		0	0	0	0	0	0
27: Output when current >= Pr.02-33 28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				25: Forward command		0	0	0	_	0	0
28: Output when current < Pr.02-33 29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error						0	0	-	_	0	0
29: Output when frequency >= Pr.02-34 30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				-		-	0	-	_		0
30: Output when frequency < Pr.02-34 31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				·		_	-	_	_	_	0
31: Power generation direction and status verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error						_	0	_	_	_	0
verify 32: Power generation direction 33: Zero speed (actual output frequency) 34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error							0	_	_		0
33: Zero speed (actual output frequency) 34: Zero speed with Stop							0		0		0
34: Zero speed with Stop (actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				32: Power generation direction		0	0	0	0	0	0
(actual output frequency) 35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				33: Zero speed (actual output frequency)		0	0	0	0		0
35: Fault output option 1 (Pr.06-22) 36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				34: Zero speed with Stop			0	0	0		0
36: Fault output option 2 (Pr.06-23) 37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error											
37: Fault output option 3 (Pr.06-24) 38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error						0	O	_	_	0	0
38: Fault output option 4 (Pr.06-25) 39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error						0	O	-	_	0	0
39: Reserved 40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				37: Fault output option 3 (Pr.06-24)		0	0	0	0	0	0
40: Speed attained (including zero speed) 41: Reserved 42: STO Output Error				38: Fault output option 4 (Pr.06-25)		0	0	0	0	0	0
41: Reserved 42: STO Output Error											
42: STO Output Error				40: Speed attained (including zero speed)		0	0	0	0		0
·											
40. 44. Direct decline mode only.				-							
43~44: Direct docking mode only ◆				43~44: Direct docking mode only ◆							

			45: Reserved							
			46: Indicator of Retrying while a fault has							
			occurred 47: Direct docking mode only							
	02-17~	02.22	Reserved							
	02-17	-	0~65535	0	10	0	0		0	
7		Multi-output Direction	U~65555	0		0				
	02-24	Serial Start Signal Selection	0: by FWD/REV; 1: by Enable							
×	02-25	Desired Frequency Attained 1	0.00~400.00Hz	60.00/ 50.00	0		0	0		
×	02-26	The Width of the Desired Frequency Attained 1	0.00~400.00Hz	2.00	0	0	0	0		0
×	02-27	Desired Frequency Attained 2	0.00~400.00Hz	60.00/ 50.00	0	0	0	0		0
×	02-28	The Width of the Desired Frequency Attained 2	0.00~400.00Hz	2.00	0	0	0	0		0
	02-29	Brake Release Delay Time when Elevator Starts	0.000~65.000sec.	0.250	0	0	0	0	0	0
	02-30	Brake Engage Delay Time when Elevator Stops	0.000~65.000sec.	0.250	0	0	0	0	0	0
*	02-31	Turn On Delay of Magnetic Contactor between Drive and Motor	0.010~65.000 sec.	0.200	0	0	0	0	0	0
*	02-32	Turn Off Delay of Magnetic Contactor between Drive and Motor	0.010~65.000 sec.	0.200	0	0	0	0	0	0
*	02-33	Output Current Level Setting for External Terminals	0~100%	0	0	0	0	0	0	0
×	02-34	Output Boundary for External Terminals	0.00~+-400.00Hz (it is motor speed when using with PG)	0.00	0	0	0	0	0	0
×	02-35	Detection Time of Mechanical Brake	0.00~10.00sec.	0.00	0	0	0	0	0	0
×	02-36	Detection Time of Contactor	0.00~10.00sec.	0.00	0	0	0	0	0	0
	02-37	Check Torque Output Function	0: Enable 1: Disable	0	0	0	0	0	0	0

03 Analog Input/ Output Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
N	03-00	Analog Input 1 (AUI1)	0: No function	1	0	0			0	
*	03-01	Reserved	Frequency command (torque limit under TQR control mode)							
×	03-02	Analog Input 3 (AUI2)	2: Torque command (torque limit under speed mode)	0					0	
			3: Preload Input		0	0	0	0	0	0
			4-5: Reserved	-						
			6: P.T.C. thermistor input value	-		0	0	0	0	
			7: Positive torque limit 8: Negative torque limit	-	_			0		0
			9: Regenerative torque limit	-						
			10: Positive/negative torque limit	-						
N	03-03	Analog Input Bias 1	-	0.0	0	0			0	
,	03-04	(AUI1)	-100.0~100.0%							Ľ
N		Analog Input Bias 3		0.0					0	
	03-06	(AUI2)	-100.0~100.0%	0	0				0	
		Positive/negative Bias Mode (AUI1)	Zero bias Serve bias as the center,	0						
×	03-07	Reserved	lower than bias=bias	0						
	03-08	Positive/negative Bias Mode (AUI2)	2: Serve bias as the center, greater than bias=bias3: The absolute value of the bias voltage	0	0	0	0		0	
			while serving as the center (single polar) 4: Serve bias as the center (single polar)							
~	03-09	Analog Input Gain 1 (AUI1)	0.0~500.0%	100.0	0	0	0	0	0	0
~	03-10	Reserved								
*	03-11	Analog Input Gain 3 (AUI2)	0.0~500.0%	100.0	0	0	0	0	0	0
*	03-12	Analog Input Delay Time (AUI1)	0.00~2.00sec.	0.01	0	0	0	0	0	0
~		Reserved								
*		Analog Input Filter Time (AUI2)	0.00~2.00sec.	0.01		0	0	0	0	
~	03-15	Reserved								
	03-16	Reserved								
*	03-17	Analog Output Selection	0: Output frequency (Hz)	0	0	0	0	0	0	
			1: Frequency command (Hz)	-					\bigcirc	
			2: Motor speed (RPM)	-			0		\bigcirc	
			3: Output current (rms) 4: Output voltage	-	H	0	0	0	0	
			5: DC Bus Voltage	-	\mathbb{H}					
			6: Power factor angle	-			5	0		
			7: Power factor	-	0	Ō	Ō	Ō	Ō	Ō
			8: Output torque	1	0	Ō	Ō	Ō	0	0
			9: AUI1		0	0	0	0	0	0
			10: ACI							
			11: AUI2	_	0	0	0	0	0	0
			12: q-axis current	-	0	0	0	0	0	0
			13: q-axis feedback value	-				0	0	
			14: d-axis current	-	H		0		0	
			15: d-axis feedback value	-	\mathbb{H}	0	0	0	0	0
			16: q-axis voltage 17: d-axis voltage	-	\mathbb{H}			0	0	
I		I	ir. u-anis voltaye	_	\sqsubseteq	\sqsubseteq	\sqsubseteq			

			18: Torque command						\bigcirc	
			19-20: Reserved					_	-	
			21: Power Output		0	0	0	0	0	0
N	03-18	Analog Output Gain 1	0~200.0%	100.0	0	0	0	0	0	0
N		Analog Output Value in	0: Absolute value in REV direction	0	0	0	0	0	0	0
		REV Direction 1	1: Output 0V in REV direction							
			2: Enable output voltage in REV direction							
×	03-20	Analog Output Selection	0: Output frequency (Hz)	0	0	0	0	0	0	0
		2								
			1: Frequency command (Hz)		0	0	0	0	0	
			2: Motor speed (RPM)		0	0	0	0	0	0
			3: Output current (rms)		0	0	0	0	0	0
			4: Output voltage		0	0	0	0	0	
			5: DC Bus Voltage		0	0	0	0	0	
			6: Power factor		0	0	0	0	0	
			7: Power			0	0	0	0	0
			8: Output torque			0	0	0	0	
			9: AVI		0	0	0	0	0	0
			10: ACI							
			11: AUI			0	0	0	0	
			12: q-axis current		0	0	0	0	0	0
			13: q-axis feedback value		0	0	0	0	0	0
			14: d-axis current			0	0	0	0	0
			15: d-axis feedback value		0	0	0	0	0	0
			16: q-axis voltage		0	0	0	0	0	0
			17: d-axis voltage		0	0	0	0	0	0
			18: Torque command		0	0	0	0	0	0
			19-20: Reserved				_			
			21: Power Output		0	0	0	0	0	0
M		Analog Output Gain 2	0~200.0%	100.0	0	0	0	0	0	
*	03-22	Analog Output Value in	0: Absolute value in REV direction	0	0		0	0		
		REV Direction 2	1: Output 0V in REV direction							
-	02.22	Analog Innest Tune (ALUA)	2: Enable output voltage in REV direction	0		0	0		0	
	03-23	Analog Input Type (AUI1)		U				0		\cup
ŀ	02.24	Analog Innest Tune (ALUO)	1: Unipolar (0-10V)	0		0	0		0	
	03-24	Analog Input Type (AUI2)		U				0	\cup	\cup
			1: Unipolar (0-10V)							

04 Multi-Step Speed Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
N	04-00	Zero Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	0		0
N	04-01	1st Step Speed Frequency	0.00~400.00Hz	0.00		0	0	\bigcirc		0
×	04-02	2nd Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
×	04-03	3rd Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
×	04-04	4th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-05	5th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-06	6th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
×	04-07	7th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-08	8th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-09	9th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-10	10th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-11	11th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-12	12th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
N	04-13	13th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
×	04-14	14th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
×	04-15	15th Step Speed Frequency	0.00~400.00Hz	0.00		\bigcirc	\bigcirc	\bigcirc		0
	04-16 ~ 04-99	Direct docking mode only ◆								

05 IM Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
	05-00	Motor Auto Tuning	0: No function 1: Rolling test (Rs, Rr, Lm, Lx, no-load current) 2: Static test	0	0					
	05-01	Full-load Current of Motor	(40~120%) *00-01 Amps	#.##	0	0	0	0	0	
	05-02	Rated power of Motor	0.00~655.35kW	#.##			0	0	0	
	05-03	Rated speed of Motor (rpm)	0~65535	1710		0	0	0	0	
			2~48	4	0	0	0	0	0	
			0~ Pr05-01 <factory setting=""></factory>	#.##		0	0	0	0	
	05-06	Rs of Motor	0.000~65.535Ω	0.000			0	0	0	
	05-07	Rr of Motor	0.000~65.535Ω	0.000			0	0	0	
	05-08	Lm of Motor	0.0~6553.5mH	0.0			0	0	0	
	05-09	Lx of Motor	0.0~6553.5mH	0.0			0	0	0	
×	05-10	Torque Compensation Time Constant	0.001~10.000sec.	0.020			0			
*	05-11	Constant	0.001~10.000sec.	0.100			0			
*	05-12	Torque Compensation Gain	0~10	0	0	0				
×		-	0.00~10.00	0.00	0	0	0			Ш
×	05-14	Slip Deviation Level	0~1000% (0: disable)	0		0	0	0		Ш
*	05-15	Detection Time of Slip Deviation	0.0~10.0sec.	1.0		0	0	0		
*	05-16	Over Slip Treatment	Warn and keep operation Fault and ramp to stop Fault and coast to stop	0		0	0	0		
×		Hunting Gain	0~10000 (0: disable)	2000	0	0	0			
	05-18	Accumulative Motor Operation Time (Min.)	00~1439	00	0	0	0	0	0	
	05-19	Accumulative Motor Operation Time (day)	00~65535	00	0	0	0	0	0	
×	05-20	Core Loss Compensation	0~250%	10			0			
	05-21	Accumulative Drive Power-on Time (Min.)	00~1439	00	0	0	0	0	0	
	05-22	Accumulative Drive Power-on Time (day)	00~65535	00	0	0	0	0	0	
	05-23	Slip compensation gain % (electricity generating mode)		0.0	0		0			
	05-24	Slip compensation gain % (electric mode)	0.0~100.0 %	0.0	0		0			

06 Protection Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
*	06-00	Low Voltage Level	160.0~220.0Vdc 320.0~440.0Vdc	180.0 360.0	0	0	0	0	0	0
*	06-01	Phase-loss protection	Warm and keep operation Fault and ramp to stop Fault and coast to stop	2	0	0	0	0	0	0
*	06-02	Over-Current Stall Prevention during Acceleration	00: disable 00~250% (rated current of the motor drive)	00	0	0	0			
*	06-03	Over-current Stall Prevention during Operation	00: disable 00~250% (rated current of the motor drive)	00	0	0	0			
*	06-04	Accel. / Decel. Time Selection of Stall Prevention at constant speed	0: by current accel/decel time 1: by the 1st accel/decel time 2: by the 2nd accel/decel time 3: by the 3rd accel/decel time 4: by the 4th accel/decel time 5: by auto accel/decel time	0	0	0	0			
*	06-05	Over-torque Detection Selection (OT1)	disable ver-torque detection during constant speed operation, continue to operate after detection over-torque detection during constant speed operation, stop operation after detection over-torque detection during operation, continue to operate after detection over-torque detection during operation, stop operation after detection	0	0	0	0	0	0	0
*	06-06	Over-torque Detection Level (OT1)	10~250% (rated current of the motor drive)	150	0	0	0	0	0	0
*	06-07	Over-torque Detection Time (OT1)	0.1~60.0sec.	0.1	0	0	0	0	0	0
*	06-08	Over-torque Detection Selection (OT2)	0: disable 1: over-torque detection during constant speed operation, continue to operate after detection 2: over-torque detection during constant speed operation, stop operation after detection 3: over-torque detection during operation, continue to operate after detection 4: over-torque detection during operation, stop operation after detection	0	0	0	0	0	0	0
*	06-09	Over-torque Detection Level (OT2)	10~250% (rated current of the motor drive)		0	0	0	0	0	0
	06-10	Over-torque Detection Time (OT2)	0.1~60.0sec.	0.1	0	0	0	0	0	
×	06-11	Current Limit	$0{\sim}250\%$ (rated current of the motor drive)	200				0	0	0
	06-12	Electronic Thermal Relay Selection	0: Inverter motor1: Standard motor2: Disable	2	0	0	0	0	0	0
*	06-13	Electronic Thermal Characteristic	30.0~600.0sec.	60.0	0	0	0	0	0	0
*	06-14	Heat Sink Over-heat (OH) Warning	0.0~110.0°C	90.0	0	0	0	0	0	0
	06-15	Stall Prevention Limit Level	0~100% (Refer to Pr06-02, Pr06-03)	50	0	0	0			
	06-16	Present Fault Record	0: No fault	0	0	0	0	0	0	0

06-17	Second Most Recent Fault Record	1: Over-current during acceleration (ocA)	0		0	0	0	0	
06-18	Third Most Recent Fault	2: Over-current during deceleration (ocd)	0	0	0	0	0	0	0
06-19	Record Fourth Most Recent Fault Record	3: Over-current during constant speed (ocn)	0	0	0	0	0	0	0
06-20	Fifth Most Recent Fault Record	4: Ground fault (GFF)	0	0	0	0	0	0	0
06-21	Sixth Most Recent Fault Record	5: IGBT short-circuit (occ) 6: Over-current at stop (ocS) 7: Over-voltage during acceleration (ovA) 8: Over-voltage during deceleration (ovd) 9: Over-voltage during constant speed (ovn) 10: Over-voltage at stop (ovS) 11: Low-voltage during acceleration (LvA) 12: Low-voltage during deceleration (Lvd) 13: Low-voltage during constant speed (Lvn) 14: Low-voltage at stop (LvS) 15: Input Phase loss (PHL) 16: IGBT over-heat (oH1) 17: Bulk capacitors over-heat (oH2) 18: Abnormal IGBT temperature detected (tH1o) 19: Abnormal bulk capacitor temperature detected (tH2o) 20:Unusal cooling fan operation 21: oL (150%,1 minute, motor drive overloaded)	0		0	0	0	0	0
		22: Motor overloaded (EoL1) 23: Reserved 24: Motor PTC overheat (oH3) 25: Reserved 26: over-torque 1 (ot1) 27: over-torque 1 (ot2) 28: Reserved 29: Reserved 30: Memory write-in error (cF1) 31: Memory read-out error (cF2) 32: Isum current detection error (cd1) 34: V-phase current detection error (cd2) 35: W-phase current detection error (cd3) 36: cc current clamp hardware error (Hd0) 37: oc (overcurrent) hardware error (Hd1) 38: ov (overvoltage hardware error (Hd2) 39: GFF(ground fault)hardware error (Hd3) 40: Auto tuning error on motor's parameters (AuE) 41: Reserved 42: PG feedback error (PGF1) 43: PG feedback stall (PGF3) 45: PG slip error (PGF4) 46: Reserved 47: Reserved 48: Reserved 49: External fault input (EF) 50: Emergency stop by external terminals (EF1) 51: Reserved 52: Password error after three attempts (Pcod) 53: Reserved 54: Illegal communication command (CE01)							

			55: Illegal communication address (CE02) 56: Communication data length error (CE03) 57: Communication being written to a read-only address (CE04) 58: Modbus transmission time-out (CE10) 59: Keypad transmission time-out (CP10) 60: Brake chopper error (bF) 61-63: Reserved 64: Mechanical brake feedback error (MBF) 65: PGF5 hardware error 66: Magnetic contactor error 67: Output phase loss (MPHL) 68: CAN Bus disconnected 69 ~71: Reserved 72:Safety torque loss (STL1) 73: PGcd hardware error 74: PG absolute signal error (PGHL) 75: PG Z phase signal loss (PGAF) 76: Safety torque output stops							
			77: Safety torque loss 2 (STL2)							
			78: Safety torque loss 3 (STL3)							
			*The definition of codes #69~#71 have been modified in v1.04. See Ch14 for more information.							
N	06-22	Fault Output Option 1	0~65535 (refer to bit table for fault code)	0	0	0	0	0	0	0
×		Fault Output Option 2	0~65535 (refer to bit table for fault code)	0	0	0	0	0	0	0
×	06-24	Fault Output Option 3	0~65535 (refer to bit table for fault code)	0	0	0	0	0	0	0
×	06-25	Fault Output Option 4	0~65535 (refer to bit table for fault code)	0	0	0	0	0	0	0
*	06-26	PTC (Positive Temperature Coefficient) Detection Selection	Warn and keep operation Fault and ramp to stop	0	0	0	0	0	0	
~	06-27	PTC Level	0.0~100.0%	50.0	0	0	0	0	0	
	06-28	Filter Time for PTC Detection	0.00~10.00sec.	0.20		0	0	0	0	
	06-29	Voltage of Emergency Power	24.0~375.0Vdc 48.0~750.0Vdc	24.0 48.0		0				
*	06-30	Setting Method of Fault Output	0: By settings of Pr.06-22~06-25 1: By the binary setting	0	0	0	0	0	0	
	06-31	Phase Loss Detection of Drive Output at	0: Disable 1: Enable	0	0	0	0	0	0	
		Start up (MPHL)								
	06-32	Accumulative Drive Power-on Time at the First Fault (min.)	00~1439	00		0				
	06-33	Accumulative Drive Power-on Time at the First Fault (day)	00-65535	00	0	0	0	0	0	
	06-34	Accumulative Drive Power-on Time at the Second Fault (min.)	00~1439	00	0	0	0	0	0	
	06-35	Accumulative Drive Power-on Time at the	00-65535	00	0	0	0	0	0	
	06-36	Second Fault (day) Accumulative Drive Power-on Time at the Third Fault (min.)	00~1439	00	0	0	0	0	0	
-	06-37	Accumulative Drive Power-on Time at the Third Fault (day)	00-65535	00	0	0	0	0	0	
-	06-38	Accumulative Drive	00~1439	00				0	0	-
	00-00	Power-on Time at the Fourth Fault (min.)	00 1700	00						

	06-39	Accumulative Drive Power-on Time at the Fourth Fault (day)	00-65535	00	0	0	0	0	0	
	06-40	Accumulative Drive Power-on Time at the Fifth Fault (min.)	00~1439	00	0	0	0	0	0	
	06-41	Accumulative Drive Power-on Time at the Fifth Fault (day)	00-65535	00	0	0	0	0	0	
	06-42	Accumulative Drive Power-on Time at the Sixth Fault (min.)	00~1439	00	0	0	0	0	0	
	06-43	Accumulative Drive Power-on Time at the Sixth Fault (day)	00-65535	00	0	0	0	0	0	
×	06-44	Operation Speed of (EPS) Emergency Power Mode	0.00~400.00Hz	Read Only	0	0	0	0	0	0
*	06-45	Fault and Warning Handling Methods	Bit0 = 0: Display Lv fault and coast to stop Bit0 = 1: Display Lv warn and coast to stop Bit1 = 0: Fan lock, fault and coast to stop Bit1 = 1: Fan lock, warn and coast to stop Bit2 = 0: software GFF protection enabled Bit2 = 1: software GFF protection disabled	0	0	0	0	0	0	0
	06-46	Operation Direction for (EPS) Emergency Power ON	 Run by following the current command Run by following the direction of power generating mode. After determining the direction of power generating, the host computer sends the operating direction command. (When at STOP mode determine the direction of power generating mode (MO =32) but do 	0		0	0	0	0	0
×	06-47	Power Generation	0.0 ~ 5.0 sec.	1.0	0	0	0	0	0	0
	06-48	Direction Searching Time Power Capacity of (EPS) Emergency Power		0.0	0	0	0	0	0	0
	06-49	STO Latch Selection	0: STO Latch 1: STO No Latch 2: STO Latch (Warn and record running commands when stop) 3: STO No Latch (Warn and record running commands when stop)	0	0	0	0	0	0	0
	06-50	Selection of MO's action when retrying after fault	0: Output 1: No output	0	0	0	0	0	0	0
	06-51	Number of times of retrying after fault	0~10	0	0	0	0	0	0	0

06-52	Time interval between retrying	0.5~600.0 sec.	10.0	0	0	0	0	0	0
06-53	Frequency command when the most recent fault has occurred	0.00~655.35Hz	0.00	0	0	0	0	0	0
06-54	Output frequency when the most recent fault has occurred	0.00~655.35Hz	0.00	0	0	0	0	0	0
06-55	Output current when the most recent fault has occurred	0.00~655.35Amps	0.00	0	0	0	0	0	0
06-56	Most recent fault on motor's frequency	0.00~655.35Hz	0.00	0	0	0	0	0	0
06-57	Output voltage when the most recent fault has occurred	0.00~6553.5V	0.0	0	0	0	0	0	0
06-58	DC bus voltage when the most recent fault has occurred	0.00~6553.5V	0.0	0	0	0	0	0	0
06-59	Output power when the most recent fault has occurred	0.00~6553.5KW	0.0	0	0	0	0	0	0
06-60	Output torque when the most recent fault has occurred	0.00~655.35%	0.00	0	0	0	0	0	0
06-61	IGBT's temperature when the most recent fault has occurred	-3276.8~3276.7°C	0.0	0	0	0	0	0	0
06-62	Multi-input terminals' status when the most recent fault has occurred	0000h~FFFFh	0000h	0	0	0	0	0	0
06-63	Multi-output terminals' status when the most recent fault has occurred	0000h~FFFFh	0000h	0	0	0	0	0	0
06-64	Motor drive's status when the most recent fault has occurred	0000h~FFFFh	0000h	0	0	0	0	0	0

07 Special Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
×		Brake Chopper Level	230V series: 350.0~450.0Vdc 460V series: 700.0~900.0Vdc	380.0 760.0	0	0	0	0	0	0
~	07-01 07-02	Reserved	0~100% (rated current of the motor drive)	0						_
		DC Brake Current Level			0					
	07-03	DC Brake Activation Time	0.0~60.0sec.	0.7	0	0	0			
~	07-04	DC Brake Stopping Time	0.0~60.0sec.	0.7		0		0		
×	07-05	Start Point for DC Brake	0.00~400.00Hz	0.00	0	0	0	0		
×	07-06	DC Brake Proportional Gain	1~500	50	0	0	0			
×	07-07	Dwell Time at Accel.	0.00~600.00sec.	0.00	0	0	0	0		
×	07-08	Dwell Frequency at Accel.	0.00~400.00Hz	0.00				$\overline{\bigcirc}$		
×	07-09	Dwell Time at Decel.	0.00~600.00sec.	0.00						
~	07-10		0.00~400.00Hz	0.00	0		0	0		
ر بر	07-11	Dwell Frequency at Decel. Cooling Fan Control	0: Cooling fan always ON	2					$\overline{\bigcirc}$	
	07-11	Cooling Fair Control	Cooling fair always ON Cooling fair always ON Cooling fair always ON cooling fair always ON cooling fair always ON	۷						
			2: AC motor drive runs and cooling fan ON, AC motor drive stops and cooling fan OFF							
			3: Cooling fan ON to run when preliminary heat sink temperature attained 4: Cooling always OFF							
×		Torque command	-150.0~150.0% (Pr07-14 setting =100%)	0.0					0	
*	07-13	Source of Torque Command	0: Digital keypad (KPC-CC01) 1: RS485 serial communication (RJ-11) 2: Analog signal (Pr.03-00)	2						
×	07-14	Maximum Torque Command	$0{\sim}300\%$ (rated torque of the motor drive)	100	0	0	0	0	0	
×	07-15	Filter Time of Torque Command	0.000~1.000sec.	0.000					0	
	07-16	Speed Limit Selection	0: By Pr.07-17 and Pr.07-18 1: Frequency command source (Pr.00-14)	0					0	
×	07-17	Torque Mode +Speed Limit	0~120%	10					0	
×	07-18	Torque Mode-Speed Limit	0~120%	10					0	
*	07-19		0: Disable 1: Analog input (Pr.03-00) 2: Torque offset setting (Pr.07-20) 3: Control by external terminal (by Pr.07-21 to Pr.07-23)	0			0	0	0	0
×	07-20	Torque Offset Setting	0.0~100.0% (rated torque of the motor drive)				0	0	0	0
×	07-21	High Torque Offset	0.0~100.0% (rated torque of the motor drive)				0	0	0	0
M		Middle Torque Offset	0.0~100.0% (rated torque of the motor drive)				0	0	$\frac{\bigcirc}{\bigcirc}$	
<i>N</i>	07-23	Low Torque Offset	0.0~100.0% (rated torque of the motor drive)				0	\bigcirc	$\frac{\mathcal{Q}}{\mathcal{Q}}$	
, 74	07-24	Forward Motor Torque Limit	0~300% (rated torque of the motor drive)	200				0		
*	07-25	Forward Regenerative Torque Limit	$0\!\sim\!300\%$ (rated torque of the motor drive)	200				0		


×	07-26	Reverse Motor Torque Limit	$0{\sim}300\%$ (rated torque of the motor drive)	200				0	0	0
×	07-27	Reverse Regenerative Torque Limit	$0{\sim}300\%$ (rated torque of the motor drive)	200				0	0	
*	07-28	Emergency Stop (EF) & Forced Stop Selection	0: Coast to stop 1: By deceleration Time 1 2: By deceleration Time 2 3: By deceleration Time 3 4: By deceleration Time 4 5: By Pr.01-31	0	0	0	0	0	0	
×	07-29	Time for Decreasing Torque at Stop	0.000~1.000sec.	0.000				0	0	
×	07-30	DC Braking Current Level	0~100% (rated current of the motor drive)	0	0	0	0			

08 PM Parameters

Pr.	Explanation	Setting Range	Factory Setting	VFPG	SVC	FOCPG	TQCPG	FOCPM
08-00	Motor Auto Tuning	O: No function 1: Only for the unloaded motor, auto measure the angle between magnetic pole and PG origin (08-09) 2: For PM parameters 3: Auto measure the angle between magnetic pole and PG origin (08-09)	0					0
08-01	Full-load Current of Motor	(40~120%) *00-01 Amps	#.##					0
08-02	Rated power of Motor	0.00~655.35kW	#.##					0
08-03	Rated speed of Motor (rpm)	0~65535	1710					0
08-04	Number of Motor Poles	2~96	4					0
08-05	Rs of Motor	0.000~65.535Ω	0.000					0
08-06	Ld of Motor	0.0~6553.5mH	0.0					$\overline{\bigcirc}$
08-07	Lq of Motor	0.0~6553.5mH	0.0					$\overline{\bigcirc}$
08-08	Back Electromotive Force	0.0~6553.5Vrms	0.0					0
08-09	Angle between Magnetic Pole and PG Origin	0.0~360.0°	360.0					0
08-10	Magnetic Pole Re-orientation	0: Disable 1: Enable	0					

09 Communication Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
N	09-00	Communication Address	1~254	1						
N	09-01	Transmission Speed	4.8∼115.2Kbps	19.2	0	0	0	0	\bigcirc	
×	09-02	Transmission Fault Treatment	Warn and keep operation Warn and ramp to stop Reserved No action and no display	3	0	0	0	0	0	0
N	09-03	Time-out Detection	0.0~100.0sec.	0.0	0	0	0	0	0	
	09-04		0: 7N1 (ASCII) 1: 7N2 (ASCII) 2: 7E1 (ASCII) 3: 7O1 (ASCII) 4: 7E2 (ASCII) 5: 7O2 (ASCII) 6: 8N1 (ASCII) 7: 8N2 (ASCII) 8: 8E1 (ASCII) 9: 8O1 (ASCII) 10: 8E2 (ASCII) 11: 8O2 (ASCII) 12: 8N1 (RTU) 13: 8N2 (RTU) 14: 8E1 (RTU) 15: 8O1 (RTU) 16: 8E2 (RTU) 17: 8O2 (RTU)	13	0	0	0	0	0	0
×	09-05	Response Delay Time	0.0~200.0ms	2.0	0	0		0	0	
	09-06 ~09-13	Direct docking mode only ◆								

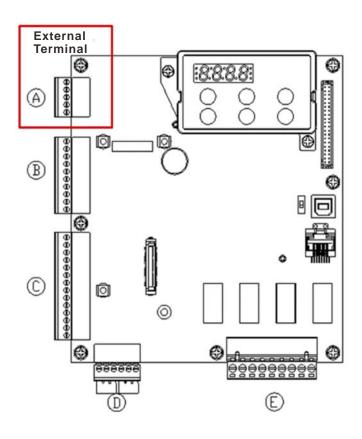

10 Speed Feedback Control Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
10-0	Selection of Encoder	0: Disable 1: ABZ 2: ABZ+Hall 3: SIN/COS + Sinusoidal 4: SIN/COS + Endat 5: SIN/COS 6: SIN/COS + Hiperface	0		0		0	0	0
10-0	1 Encoder Pulse	1~25000	2048		\bigcirc		0	\bigcirc	0
10-0	Encoder Input Type Setting	 Disable Phase A leads in a forward run command and phase B leads in a reverse run command Phase B leads in a forward run command and phase A leads in a reverse run command Phase A is a pulse input and phase B is a direction input. (low input=reverse direction, high input=forward direction) Phase A is a pulse input and phase B is a direction input. (low input=forward direction) 	0		\bigcirc		\bigcirc	\bigcirc	
10-0		5: Single-phase input 0: Warn and keep operation	2		0		0	0	0
10-0	4 Detection Time for	1: Fault and ramp to stop 2: Fault and stop operation 0.0~10.0sec.	1.0		0		0	0	
	Encoder Feedback Fault 5 Encoder Stall Level	0~120% (0: Disable)	115			0			
10-0	(PGF3) 6 Encoder Stall Detection	0.0~2.0sec.	0.1		0	0	0		0
10-0	, ,	0~50% (0: Disable)	50		0	0	0		0
10-0	(PGF4) 8 Encoder Slip Detection Time	0.0~10.0sec.	0.5		0	0	0		0
10-0		0: Warn and keep operation 1: Fault and ramp to stop 2: Fault and coast to stop	2		0	0	0		0
10-1	Input	0: Z signal is at the falling edge of U-phase1: Z signal is at the rising edge of U-phase	0		0		0	0	0
10-1	Regulation) Control (P) of Zero Speed	0.0~1000.0%	100.0		0				
10-1	2 ASR (Auto Speed Regulation) Control (I) of Zero Speed	0.000~10.000sec.	0.100	0	0	0	0		0
	ASR (Auto Speed Regulation) Control (P) 1	0.0~1000.0%	100.0	0	0	0	0		0
	4 ASR (Auto Speed Regulation) Control (I) 1	0.000~10.000sec.	0.100	0		0	0		0
′ 10-1	5 ASR (Auto Speed Regulation) Control (P) 2	0.0~1000.0%	100.0		0				

~	10-16	ASR (Auto Speed	0.000~10.000sec.	0.100				\bigcirc
		Regulation) Control (I) 2						
N	10-17	ASR 1/ ASR2 Switch	0.00~400.00Hz (0: Disable)	7.00				
		Frequency						
N	10-18	ASR Primary Low Pass	0.000~0.350sec.	0.008				
		Filter Gain						
~	10-19	Zero Speed Gain (P)	0~655.00%	80.00				\bigcirc
N	10-20	Zero Speed/ ASR1 Width	0.00~400.00Hz	5.00				
		Adjustment						
N	10-21	ASR1/ASR2 Width	0.00~400.00Hz	5.00				
		Adjustment						
N	10-22	Zero speed Position	0.000~65.535s	0.250				
		Holding Time						
×	10-23	Filter Time at Zero Speed	0.000~65.535s	0.004				0
~	10-24	Time for Executing Zero	0: after the brake release set in Pr.02-29	0				$\overline{\bigcirc}$
		Speed	1: after the brake signal input					
			(Pr.02-01~02-08 is set to 42)					
×	10-25	Elevator Leveling	0.0~1000.0%	100.0	0	0		$\overline{\bigcirc}$
		(Zero Speed Gain P)						
×	10-26	Elevator Leveling	0.000~10.000sec.	0.100	0	0		0
		(Zero Speed Integral I)						
×	10-27	Elevator Starts	0.0~1000.0%	100.0	0	0		0
		(Zero Speed Gain P)						
×	10-28	Elevator Starts	0.000~10.000sec.	0.100	0	0		0
		(Zero Speed Integral I)						
×	10-29	Setting of PG card	0~31	0	0	0	\bigcirc	0
		frequency division output						
×	10-30	Type of PG card	0000h~0008h	0000h			\bigcirc	\bigcirc
		frequency division output						
	10-31	PG card C+/C- Selection	0000h~0001h	0000h				

11 Advanced Parameters

	Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
	11-00	System Control	Bit 0=0: no function Bit 0=1: ASR Auto tuning, PDFF enable Bit 7=0: no function Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02 (DC Brake Current Level) Bit 9=0: Rolling PG Origin auto-tuning with load (support by PGHSD-1) Bit 9=1: Static PG Origin auto-tuning with load by enabling PGHSD-1 Bit 15=0: when power is applied, it will detect the position of magnetic pole again Bit 15=1: when power is applied, it will start from the magnetic pole position of previous power failure	0						
N	11-01	Elevator Speed	0.10~4.00 m/s	1.00				0		0
N	11-02	Sheave Diameter	100~2000mm	400				0		0
N	11-03	Mechanical Gear Ratio	1~100	1				0		
×	11-04	Suspension Ratio	0= 1:1 1= 2:1	1				0		
N	11-05	Inertial Ratio	1~300%	40				0		0
N	11-06	Zero-speed Bandwidth	1~40Hz	10				0		0
N	11-07	Low-speed Bandwidth	1~40Hz	10				0		0
N	11-08	High-speed Bandwidth	1~40Hz	10				0		0
N	11-09	PDFF Gain Value	0~200%	30				0		0
×	11-10	Gain for Speed Feed Forward	0~500	0				0		0
N	11-11	Notch Filter Depth	0~20db	0				0		0
N	11-12	Notch Filter Frequency	0.00~200.00Hz	0.00				0		0
M	11-13	Low-pass Filter Time of Keypad Display	0.001~65.535s	0.500	0	0	0	0	0	0
N	11-14	Motor Current at Accel.	50~200%	150						0
N	11-15	Elevator Acceleration	0.20~2.00m/s ²	0.75						0
	11-16	Reserved	0000h~FFFFh	0	0	0	0	0	0	0
	1117	Reserved	Read Only	#.##	0	0	0	0	0	0
	11-18	Reserved	0000h~FFFFh	#.##	0	0	0	0	0	0
×	11-19	Zero-speed Holding Speed	1~40Hz	10				0		0

12 User Defined Parameters

User-defined Parameters with range from Group 00 to Group 11

	Pr.	Explanation (Default Function)	Address	Factory setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
N	12-00	Present Fault Record	0616	Read Only	0	0	0	0	0	0
/	12-01	Present Fault Time of Motor Operation (min.)	0632	Read Only	0	0	0	0	0	
×	12-02	Present Fault Time of Motor Operation (day)	0633	Read Only	0	0	0	0	0	
*	12-03	Frequency Command at Present Fault	0653	Read Only	0	0	0	0	0	0
*	12-04	Output Frequency at Preset Fault	0654	Read Only	0	0	0	0	0	0
×	12-05	Output Current at Present Fault	0655	Read Only	0	0	0	0	\circ	0
×	12-06	Motor Frequency at Present Fault	0656	Read Only	0	0	0	0	\circ	0
*	12-07	Output Voltage at Present Fault	0657	Read Only	0	0	0	0	0	0
~	12-08	DC-Bus Voltage at Present Fault	0658	Read Only	0	0	0	0	0	0
~	12-09	Output Power at Present Fault	0659	Read Only	0	0	0	0	0	0
*	12-10	Output Torque at Present Fault	0660	Read Only	0	0	0	0	0	0
*	12-11	IGBT Temperature of Power Module at Present Fault	0661	Read Only	0	0	0	0	0	0
*	12-12	Multi-function Terminal Input Status at Present Fault	0662	Read Only	0	0	0	0	0	0
×	12-13	Multi-function Terminal Output Status at Present Fault	0663	Read Only	0	0	0	0	0	0
×	12-14	Drive Status at Present Fault	0664	Read Only	0	0	0	0	0	0
×	12-15	Second Most Recent Fault Record	0617	Read Only	0	0	0	0	0	0
*	12-16	Second Most Recent Fault Time of Motor Operation (min.)	0634	Read Only	0	0	0	0	0	0
*	12-17	Second Most Recent Fault Time of Motor Operation (day)	0635	Read Only	0	0	0	0	0	0
*	12-18	Third Most Recent Fault Record	0618	Read Only	0	0	0	0	0	0
*	12-19	Third Most Recent Fault Time of Motor Operation (min.)	0636	Read Only	0	0	0	0	0	0
×		Third Most Recent Fault Time of Motor Operation (day)	0637	Read Only	0	0	0	0	0	0
×	12-21	Fourth Most Recent Fault Record	0619	Read Only	0	0	0	0	0	0
×	12-22	Fourth Most Recent Fault Time of Motor Operation (min.)	0638	Read Only	0	0	0	0	0	0
*		Fourth Most Recent Fault Time of Motor Operation (day)	0639	Read Only	0	0	0	0	0	0
×	12-24	Fifth Most Recent Fault Record	0620	Read Only	0	0	0	0	0	
×	12-25	Fifth Most Recent Fault Time of Motor Operation (min.)	0640	Read Only	0	0	0	0	0	0
×	12-26	Fifth Most Recent Fault Time of Motor Operation (day)	0641	Read Only	0	0	0	0	0	0
*	12-27	Sixth Most Recent Fault Record	0621	Read Only	0	0	0	0	0	0
M	12-28	Sixth Most Recent Fault Time of Motor Operation (min.)	0642	Read Only	0	0	0	0	0	0
M	12-29	Sixth Most Recent Fault Time of Motor Operation (day)	0643	Read Only	0	0	0	0	0	0
N	12-30 12-31	No factory setting No factory setting								_
7	12-31	ino factory setting								

13 View User Defined Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
~	View User Defined Parameters	Pr00-00~ Pr11-19	-	0	0	0	0	0	0

12 Descriptions of Parameter Settings

NOTE

★: The parameter can be set during operation

00 Drive Parameters

Identity Code of the AC Motor Drive

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory setting: ##

Settings Read Only

Rated Current Display of the AC Motor Drive

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory setting: ##

Settings Read Only

Pr. 00-00 displays the identity code of the AC motor drive. The capacity, rated current, rated voltage and the max. carrier frequency relate to the identity code. Users can use the following table to check how the rated current, rated voltage and max. carrier frequency of the AC motor drive corresponds to the identity code.

Pr.00-01 displays the rated current of the AC motor drive. By reading this parameter the user can check if the AC motor drive is correct.

				230	V series	5					
Power (KW)	2.2*	3.7*	4.0	5.5	7.5	11	15	18.5	22	30	37
Horsepower (HP)	3	5	5	7.5	10	15	20	25	30	40	50
ID Code of the Motor Drive (Pr00-00)	108	110	10	12	14	16	18	20	22	24	26
Rated Output Current for General Purposes (A)	12.0	17.0	20	24	30	45	58	77	87	132	161
Range of the Carrier Frequency					2~15kHz	Z				2~9	kHz
Rated Max. Output Carrier Frequency		8kHz			10kHz			8kHz		6k	Hz

*VFD022ED21S and VFD037ED21S are single phase models.

VFD022ED213 and	VIDO	77 LDZ	o aic .	sirigic	priasc	mode	13.					
				46	0V se	ries						
Power (KW)	4.0	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Horsepower (HP)	5	7.5	10	15	20	25	30	40	50	60	75	100
ID Code of the Motor	11	42	15	17	10	21	23	25	27	20	24	22
Drive (Pr00-00)	''	13	15	17	19	21	23	25	21	29	31	33
Rated Output												
Current for	11.5	13	17	23	30	38	45	58	80	100	128	165
General	11.5	13	17	23	30		45	36	00	100	120	103
Purposes (A)												
Range of the Carrier			2~	15kH	7				2~ 9kH	7	2~ 6k	-⊔-
Frequency				IONI					2" SKI	<u>~</u>		.1 1∠
Rated Max. Output Carrier Frequency	8kHz		10kHz			8kHz				6kHz		

Parameter Reset **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: 0 Control Mode 0: No Function Settings 1: Read Only 5: Direct docking mode only, contact Delta for more information. • 8: Keypad Lock 9: All parameters are reset to factory settings (50Hz) 10: All parameters are reset to factory settings (60Hz) When it is set to 1, all parameters are read only except Pr00-00~Pr00-07 and it can be used with password setting for password protection. To go back to the factory setting, set Pr00-02 = 9 or 10. If it is locked by a password, enter the password to go back to the factory setting. The password will also be erased. When Pr.00-02=08, the keypad is locked and only Pr.00-02 and Pr00-07 can be set. To unlock the keypad, set Pr.00-02=00. Start-up Display Selection SVC FOCPG TQCPG FOCPM Control Mode **VFPG** Factory Setting: 0 VF Settings

0: Display the frequency command value. (LED F)

1: Display the actual output frequency (LED H)

2: DC BUS voltage (V)

3: Display the output current (A)

4: Output voltage (E)

5: User defined (see Pr.00-04)

This parameter determines the start-up display page after power is applied to the drive.

Content of Multi-Function Display

FOCPG TQCPG FOCPM ۷F Control Mode **VFPG** SVC Factory Setting: 0

Settings 0: Display the output current in A supplied to the motor

- 1: Reserved
- 2: Display actual output frequency (H)
- 3: Display the actual DC BUS voltage in VDC of the AC motor drive
- 4: Display the output voltage in VAC of terminals U, V, and W to the motor.
- 5: Display the power factor angle in of terminals U, V, W to the motor.
- 6: Display the output power in kW of terminals U, V and W to the motor.
- 7: Display the actual motor speed in rpm (enabled when using with PG card).
- 8: Display the estimated value of torque in % as it relates to current.
- 9: Display PG position
- 10: Display the electrical angle of drive output

- 11: Display the signal of AUI1 analog input terminal in %. Range -10V~10V corresponds to 0~100%. (1.)
- 12: Reserved
- 13: Display the signal of AUI2 analog input terminal in %. Range -10V~10V corresponds to 0~100%. (3.)
- 14: Display the temperature of heat sink (°C)
- 15P: Display the temperature of IGBT in °C.
- 16: Display digital input status ON/OFF (i)
- 17: Display digital output status ON/OFF (o)
- 18: Display multi-step speed
- 19: The corresponding CPU pin status of digital input (i.)
- 20: The corresponding CPU pin status of digital output (o.)
- 21~23: Reserved
- 24: Output AC voltage when malfunction (8)
- 25: Output DC voltage when malfunction (8.)
- 26: Motor frequency when malfunction (h)
- 27: Output current when malfunction (4)
- 28: Output frequency when malfunction (h.)
- 29: Frequency command when malfunction
- 30: Output power when malfunction
- 31: Output torque when malfunction
- 32: Input terminal status when malfunction
- 33: Output terminal status when malfunction
- 34: Drive status when malfunction
- This parameter is to display the content on the page U of digital keypad KPC-CC01. It is helpful for getting the AC motor drive's status by this parameter.

Example 01:

Terminal	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	REV	FWD
Status	0	0	1	0	0	0	0	1	1	0

0: OFF, 1: ON

MI1: Pr.02-01 is set to 1 (multi-step speed command 1)

MI8: Pr.02-08 is set to 8 (the 1st, 2nd acceleration/deceleration time selection)

If REV, MI1 and MI8 are ON, the value is 0000 0000 1000 01102 in binary and 0086H in HEX. Meanwhile, if Pr.00-04 is set to "16" or "19", it will display "0086" with LED U is ON on the keypad KPC-CC01. The setting 16 is the status of digital input and the setting 19 is the corresponding CPU pin status of digital input. User can set to 16 to monitor digital input status and then set to 19 to check if the wire is normal.

Example 02:

Terminal	MO8	MO7	MO6	MO5	MO4	МОЗ	MO2	MO1	R2A	R1A	MRA	RA
Status	0	0	0	0	1	0	0	0	0	1	1	0

RA: Pr.02-11 is set to 9 (Drive ready).

After applying the power to the AC motor drive, if there is no other abnormal status, the contact will be ON. At the meanwhile, if Pr.00-04 is set to 17 or 20, it will display 0001 with LED U is ON on the keypad. The setting 17 is the status of digital output and the setting 20 is the corresponding CPU pin status of digital output. User can set 17 to monitor the digital output status and then set to 20 to check if the wire if normal.

User Defined Coefficient K **VFPG** Control Mode SVC FOCPG TQCPG FOCPM Factory Setting: 0 Settings Digit 4: decimal point number (0 to 3) Digit 0-3: 40 to 9999 It is used digital setting method Digital 4: decimal point number (0: no decimal point, 1: 1 decimal point and so on.) Digit 0-3: 40 to 9999 (the corresponding value for the max. frequency). Meaning of numerical order 0<u>0000</u> Corresponding Value **Decimal Point Number** For example, if use uses rpm to display the motor speed and the corresponding value to the 4-pole motor 60Hz is 1800. This parameter can be set to 01800 to indicate that the corresponding value for 60Hz is 1800rpm. If the unit is rps, it can be set 10300 to indicate the corresponding value for 60Hz is 30.0 (a decimal point). Only frequency setting can be displayed by the corresponding value. After setting Pr.00-05, it won't display the unit of frequency "Hz" after returning to the main menu. Software Version Control Mode ۷F **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: #.## Settings Read Only Password Input ۷F Control Mode **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: 0 1~9998 , 10000~65535 Settings 0~2 (times of wrong password) Display The function of this parameter is to input the password that is set in Pr.00-08. Input the correct password here to enable changing parameters. You are limited to a maximum of 3 attempts. After 3 consecutive failed attempts, a fault code "Password Error" will show up to force the user to restart the AC motor drive in order to try again to input the correct password. When forgetting password, you can decode by setting 9999 and press button twice. Note that all the settings will be set to factory setting. Password Set Control Mode **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: 0 1~9998 , 10000~65535 Settings 0: No password set or successful input in Pr. 00-07 Display 1: Password has been set To set a password to protect your parameter settings. If the display shows 0, no password is set or password has been correctly entered in Pr.00-07. All parameters can then be changed, including Pr.00-08.


The first time you can set a password directly. After successful setting of password the display will show 1.


Be sure to record the password for later use.

To cancel the parameter lock, set the parameter to 0 after inputting correct password into Pr. 00-07. The password consists of min. 2 digits and max. 5 digits.

- How to make the password valid again after decoding by Pr.00-07:
 - Method 1: Re-input original password into Pr.00-08 (Or you can enter a new password if you want to use a changed or new one).
 - Method 2: After rebooting, password function will be recovered.

Password Decode Flow Chart

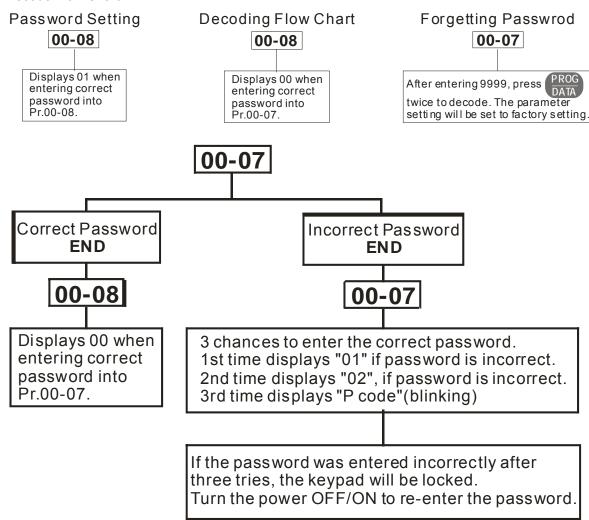

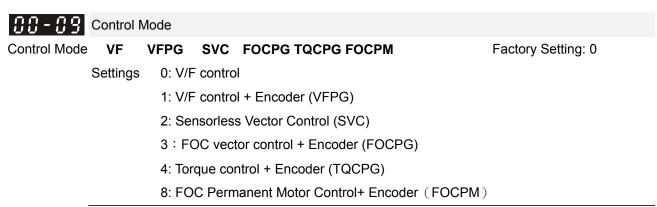

This parameter determines the control method of the AC motor drive:

Setting 0: user can design V/f ratio by requirement and control multiple motors simultaneously.

Setting 1: User can use PG card with Encoder to do close-loop speed control.

Setting 2: To have optimal control characteristic by auto-tuning.

Setting 3: To increase torque and control speed precisely. (1:1000)

Setting 4: To increase accuracy for torque control.

Setting 8: To increase torque and control speed precisely. (1:1000). This setting is only for using with

permanent magnet motor and others are for induction motor.

Speed Unit

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0:Hz

1:m/s

2:ft./s

3:: Direct docking mode only, contact Delta for more information. ◆

✓ ☐☐ - ☐☐ Output Direction Selection

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: FWD: counterclockwise, REV: clockwise

1: FWD: clockwise, REV: counterclockwise

★ III - IZ Carrier Frequency

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM

Factory Setting:12

Settings $2\sim15kHz$

This parameter determinates the PWM carrier frequency of the AC motor drive.

Models	3~ 5HP	7.5-15HP	20-30HP	40-60HP	75-100HP
Settings	2~ 15kHz	2~ 15kHz	2~15kHz	2~ 9kHz	2~ 6kHz
Factory	8 kHz	10kHz	8kHz	6kHz	6kHz
Setting					

	Carrier Frequency	Acoustic Noise	Electromagnetic Noise or Leakage Current	Heat Dissipation	Current Wave
	2kHz	Significant	Minimal	Minimal	- √√√ ↑
	8kHz	Ī	1 1	1	
•	15kHz		↓ ↓		-√√// ↓ ↓
		Minimal	Significant	Significant	

- From the table, we see that the PWM carrier frequency has a significant influence on the electromagnetic noise, AC motor drive heat dissipation, and motor acoustic noise.
- If the carrier frequency is set to be higher than the factory settings in the table above, the motor drive will derate its capacity. See Derating Capacity of Carrier Frequency (Fc) in CH02.

Auto Voltage Regulation (AVR) Function

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: Enable AVR

1: Disable AVR

2: Disable AVR when deceleration stop

	It is used to select the AVR mode. AVR is used to regulate the output voltage to the motor. For example, if V/f curve is set to AC200V/50Hz and the input voltage is from 200 to 264VAC, the output voltage won't excess AC200V/50Hz. If the input voltage is from 180 to 200V, the output voltage to the motor and the input voltage will be in direct proportion. When setting Pr.00-13 to 1 during ramp to stop and used with auto accel. / decel. function, the						
	When s	•	00-13 to	1 during	g ramp to st	op and used with auto	accel. / decel. function, the
88	- 14	Source	of the I	Master	Frequen	cy Command	
Con	trol Mode	VF	VFPG	svc	FOCPG	FOCPM	Factory Setting:1
		Settings	1: RS	-485 se	rial commu	nication or digital keyp	ad (KPC-CC01)
			2: Ext	ernal aı	nalog input	(Pr. 03-00)	
			3: Dig	ital tern	ninals input	(Pr.04-00~04-15)	
			4: Dire	ect docl	king mode	only, contact Delta for r	nore information. ♦
	This pa	rameter d	letermine	s the d	rive's mast	er frequency source.	
80	1- 15	Source of	of the Ope	eration	Command		
Con	trol Mode	VF	VFPG	SVC	FOCPG T	QCPG FOCPM	Factory Setting:1
		Settings	1: Ext	ernal te	rminals		
			2: RS	-485 se	rial commu	nication or digital keyp	ad (KPC-CC01)
	ED series	s is shippe	ed withou	ıt digita	l kevpad ar	nd users can use extern	nal terminals or RS-485 to control the

When the LED PU is light, the operation command can be controlled by the optional digital keypad

operation command.


(KPC-CC01).

01 Basic Parameters

Control Mode	e VF	VFPG	SVC	FOCPG TQCPG FOCPM	Factory
					Setting:60.00/50.00
	Settings	10.00	~400.	00Hz	
freque		and sour		AC motor drive's Maximum Output nalog inputs -10V to +10V) are sca	•
			ency Se	etting (base frequency/ motor's rate	ed frequency)
Control Mode		VFPG	-	FOCPG TQCPG FOCPM	Factory Setting:60.00/50.00
	Settings	0.00~	400.00	Hz	
namep	late. If the	motor is	60Hz,	ng to the rated frequency of the mo the setting should be 60Hz. If the n ng(base voltage/ motor's rated volta	notor is 50Hz, it should be set to 50H
Control Mode		VFPG	SVC	FOCPG TQCPG FOCPM	Factory
					Setting:220.0/440.0
	Settings	s 230V	series	s 0.1~255.0V	· ·
	J		series	s 0.1~510.0V	
economi	ic and con to use wit e motor.	venience h the diffe	metho erent v	d to solve this problem is to install oltage and frequency and also can	the AC motor drive. There is no
economi problem life of the	to use wite motor. 2nd Out	venience th the diffe out Frequ	metho erent v	d to solve this problem is to install oltage and frequency and also can	the AC motor drive. There is no amplify the original characteristic a
economi problem	to and con to use with motor. 2nd Outp	venience th the difference out Frequ VFPG	metho erent von	d to solve this problem is to install oltage and frequency and also can setting	the AC motor drive. There is no
economi problem life of the	to and con to use with e motor. 2nd Output VF Settings	venience th the difference but Frequ VFPG 0.00~	metho erent vinency S	d to solve this problem is to install oltage and frequency and also can etting	the AC motor drive. There is no amplify the original characteristic a
economi problem life of the I - I I Control Mode	to and conto use with the motor. 2nd Output WF Settings 2nd Output And Output Settings	venience th the difference but Frequ VFPG 0.00~	metho erent vinency S	d to solve this problem is to install oltage and frequency and also can etting	amplify the original characteristic and amplif
economi problem life of the G I - G 3 Control Mode	to and conto use with the motor. 2nd Output VF Settings 2nd Output VF VF	venience th the difference vFPG 0.00~ out Voltag VFPG	emetho erent von ency S -400.0 ge Setti	d to solve this problem is to install oltage and frequency and also can etting	the AC motor drive. There is no amplify the original characteristic a
economi problem life of the 1 - 0 3 Control Mode	to and conto use with the motor. 2nd Output WF Settings 2nd Output And Output Settings	venience th the difference vFPG 0.00~ out Voltag VFPG 230V	metho erent von ency S -400.00 ge Setti	d to solve this problem is to install oltage and frequency and also can setting OHz	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50
economi problem life of the 1 - 0 3 Control Mode	to and conto use with emotor. 2nd Outper VF Settings 2nd Outper VF Settings	venience th the difference vFPG 0.00~ out Voltag VFPG 230V 460V	metho erent von eency S -400.00 ge Setti series series	d to solve this problem is to install oltage and frequency and also can setting OHz ng 0.1~255.0V 0.1~510.0V	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50
economi problem life of the G 1 - G 3 Control Mode Control Mode	to and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output 3rd Output 3rd Output	venience th the difference vFPG 0.00~ out Voltag VFPG 230V 460V	metho erent von eency S -400.00 ge Setti series series	d to solve this problem is to install oltage and frequency and also can setting OHz ng 0.1~255.0V 0.1~510.0V	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50
economi problem life of the G ! - G 3 Control Mode	to and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output 3rd Output 3rd Output	venience th the difference th the difference the pout Freque to 0.00~ to 0.	metho erent von eency S -400.00 ge Setti series series	d to solve this problem is to install oltage and frequency and also can setting OHz ng 6 0.1~255.0V 6 0.1~510.0V etting	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0
economic problem life of the l	c and con to use with the motor. 2nd Output	venience th the difference th the difference the pout Freque to 0.00~ to 0.	emethorerent volumency Size Settion Series S	d to solve this problem is to install oltage and frequency and also can setting OHz ng S 0.1~255.0V S 0.1~510.0V etting	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0
economic problem life of the l	ic and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output VF Settings 3rd Output Settings	venience th the difference th the difference the pout Freque to 0.00~ to 0.	emethorerent volumency Size Settion Series S	d to solve this problem is to install oltage and frequency and also can setting OHz ng S 0.1~255.0V S 0.1~510.0V etting	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0
economic problem life of the l	ic and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output VF Settings 3rd Output Settings	venience th the difference th the difference the point Freque to 0.00~ to 0	ency S -400.0 ge Setti series ency S -400.0 e Settii	d to solve this problem is to install oltage and frequency and also can setting OHz ng S 0.1~255.0V S 0.1~510.0V etting	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0 Factory Setting:0.50
economic problem life of the l	ic and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output VF Settings Setti	venience th the difference th the difference th the difference th the difference the the di	metho erent von erent von ency S 400.00 ge Settin series ency So 400.00 e Settin	d to solve this problem is to install oltage and frequency and also can setting OHz ng S 0.1~255.0V S 0.1~510.0V etting OHz ng	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0 Factory Setting:0.50
economic problem life of the l	ic and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output VF Settings 3rd Output VF Settings 3rd Output VF Settings	venience th the difference th the difference th the difference th the difference the the di	erent von erent	d to solve this problem is to install oltage and frequency and also can setting OHz ng S 0.1~255.0V S 0.1~510.0V etting OHz ng OHz ng	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0 Factory Setting:0.50
economic problem life of the l	ic and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output VF Settings 3rd Output VF Settings 4th Output VF Settings	venience th the difference th the difference th the difference the the dif	erent von erent	d to solve this problem is to install oltage and frequency and also can setting OHz ng S 0.1~255.0V S 0.1~510.0V etting OHz ng OHz ng	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0 Factory Setting:0.50
economic problem life of the l	ic and conto use with the motor. 2nd Output Settings 2nd Output VF Settings 3rd Output VF Settings 3rd Output VF Settings 4th Output VF Settings	venience th the difference th the difference the difference the the difference the difference the the difference t	erent von erent er	d to solve this problem is to install oltage and frequency and also can setting OHz ng 0.1~255.0V 0.1~510.0V etting OHz ng FOCPG TQCPG	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0 Factory Setting:5.0/10.0
economic problem life of the l	ic and conto use with a motor. 2nd Output Settings 2nd Output Settings 3rd Output Settings 3rd Output Settings 4th Output Settings	venience th the difference th the difference the difference the the difference the difference the the difference t	series se	d to solve this problem is to install oltage and frequency and also can setting OHz ng 0.1~255.0V 0.1~510.0V etting OHz ng FOCPG TQCPG OHz	the AC motor drive. There is no amplify the original characteristic a Factory Setting:0.50 Factory Setting:5.0/10.0 Factory Setting:5.0/10.0

Settings 230V series 0.1~255.0V 460V series 0.1~510.0V

- V/F curve setting is usually set by the motor's allowable loading characteristics. Pay special attention to the motor's heat dissipation, dynamic balance, and bearing lubricity, if the loading characteristics exceed the loading limit of the motor.
- For the V/f curve setting, it should be Pr.01-01≥ Pr.01-03≥ Pr.01-05≥ Pr.01-07. There is no limit for the voltage setting, but a high voltage at the low frequency may cause motor damage, overheat, stall prevention or over-current protection. Therefore, please use the low voltage at the low frequency to prevent motor damage.

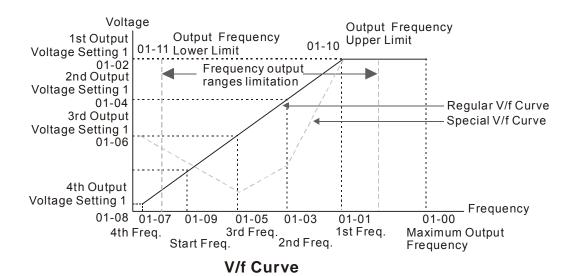

Starting Frequency

Control Mode VF VFPG SVC FOCPG


Factory Setting: 0.50

Settings 0.00~400.00Hz

When the starting frequency (Pr01-09) is larger than the output frequency (Pr01-11), the frequency output will start when the starting frequency (Pr01-09) reached the F command.

When min. output frequency > start frequency


When start frequency > min. output frequency

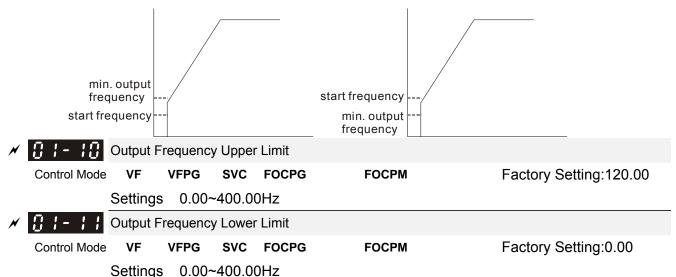

The upper/lower output frequency setting is used to limit the actual output frequency. If the frequency setting is lower than the start-up frequency, it will run with zero speed. If the frequency setting is higher than the upper limit, it will runs with the upper limit frequency. If output frequency lower limit > output frequency upper limit, this function is invalid.

× 8:-12	Accel. T	ïme 1				
Control Mode	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:3.00
	Settings	0.00	~600.00	sec		
₩ 8 !- !3	Decel. T	ime 1				
Control Mode	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:2.00
	Settings	0.00	-600.00	sec		
√ □ ! - ! Ч	Accel. T	ïme 2				
Control Mode	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:3.00
	Settings	0.00~	~600.00	sec		
₩ 8 1- 15	Decel. T	īme 2				
Control Mode	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:2.00
	Settings	0.00~	~600.00	sec		
₩ 8 1- 15	Accel. T	ime 3				
Control Mode	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:3.00
	Settings		~600.00	sec		
<i>₩</i> [] -]	Decel. T	īme 3				
Control Mode		VFPG		FOCPG	FOCPM	Factory Setting:2.00
	Settings	0.00~	~600.00	sec		
		-				
× 8 ! - !8	Accel. T	ime 4				
Control Mode		VFPG		FOCPG	FOCPM	Factory Setting:3.00
	Settings	VFPG 0.00~	SVC ~600.00		FOCPM	Factory Setting:3.00
× 01-13	Settings Decel. T	VFPG 0.00~ Time 4	~600.00	sec		
	Settings Decel. T	VFPG 0.00~ Time 4 VFPG	~600.00	sec FOCPG	FOCPM	Factory Setting:3.00 Factory Setting:2.00
Control Mode	Settings Decel. T VF Settings	VFPG 0.00~ Time 4 VFPG 0.00~	SVC ~600.00	FOCPG sec	FOCPM	Factory Setting:2.00
Control Mode	Settings Decel. T VF Settings celeration	VFPG 0.00^ Time 4 VFPG 0.00^ Time is	SVC ~600.000	FOCPG sec determine the	FOCPM	
Control Mode The Ac Maximu	Settings Decel. T VF Settings celeration um Outpu	VFPG 0.00~ Time 4 VFPG 0.00~ Time is at Frequent	SVC ~600.000 used to ncy (Pr.	FOCPG sec determine the	FOCPM e time required for the	Factory Setting:2.00 he AC motor drive to ramp from 0Hz to
Control Mode The Ac Maximu The De Maximu	Settings Decel. T VF Settings cceleration um Outpu cceleration um Outpu	VFPG 0.00~ Time 4 VFPG 0.00~ Time is at Frequent Time is at Frequent	SVC ~600.000 used to ncy (Pr. used to ncy (Pr.	FOCPG sec determine the 01-00). determine the 01-00) down to	FOCPM e time required for the time require for the to 0Hz.	Factory Setting:2.00 he AC motor drive to ramp from 0Hz to e AC motor drive to decelerate from the
Control Mode The Ac Maximu The De Maximu The Ac	Settings Decel. T e VF Settings celeration um Outpu eceleration um Outpu celeration	VFPG 0.00~ Time 4 VFPG 0.00~ Time is the Frequent Time is the Frequent Time is the Frequent Time is the Frequent Time is	SVC ~600.000 used to ncy (Pr. used to ncy (Pr. ration Ti	FOCPG sec determine the 01-00). determine the 01-00 down to the 01-00, and the 01	FOCPM e time required for the to 0Hz. are selected according	Factory Setting:2.00 he AC motor drive to ramp from 0Hz to e AC motor drive to decelerate from the ng to the Multi-function Input Terminals
Control Mode The Ac Maximu The De Maximu The Ac settings	Settings Decel. T Settings Celeration Um Output Celeration Um Output Celeration Union Uni	VFPG 0.00~ Time 4 VFPG 0.00~ Time is at Frequent Time Is at Fre	SVC ~600.000 used to ncy (Pr. used to ncy (Pr. ration Til	FOCPG sec determine the 01-00). determine the 01-00 down to the 1, 2, 3, 4 a acceleration to the second sec	FOCPM e time required for the time require for the to 0Hz. are selected accorditime 1 and decelera	Factory Setting:2.00 The AC motor drive to ramp from 0Hz to the AC motor drive to decelerate from the ang to the Multi-function Input Terminals tion time 1.
Control Mode The Ac Maximu The De Maximu The Ac settings	Settings Decel. T e VF Settings celeration um Outpu eceleration um Outpu eceleration s. The face	VFPG 0.00~ Time 4 VFPG 0.00~ Time is at Frequent Time is at Frequent Time is at Frequent Time is at the following settings to the following set	SVC ~600.000 used to ncy (Pr. used to ncy (Pr. ration Til ngs are	FOCPG sec determine the 01-00). determine the 01-00 down to me 1, 2, 3, 4 a acceleration ertia torque of	FOCPM e time required for the to 0Hz. are selected accorditime 1 and decelerathe load and the according to the load and the according to the load and the according to the load	Factory Setting:2.00 he AC motor drive to ramp from 0Hz to e AC motor drive to decelerate from the ng to the Multi-function Input Terminals

accel./decel. time will be longer than the action above.

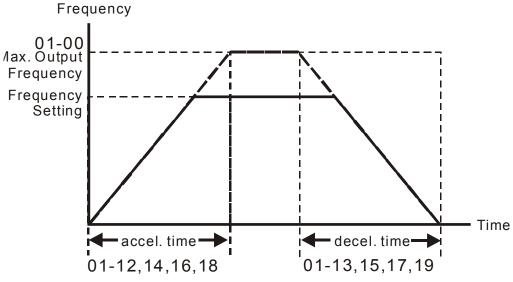

Accel./Decel. Time



- Both external terminal JOG and key "JOG" on the keypad can be used. When the jog command is ON, the AC motor drive will accelerate from 0Hz (Pr01-07) to jog frequency (Pr.01-22). When the jog command is OFF, the AC motor drive will decelerate from Jog Frequency to zero. The used Accel./ Decel. time is set by the Jog Accel./ Decel. time (Pr.01-20, Pr.01-21).
- The JOG command can't be executed when the AC motor drive is running. In the same way, when the JOG command is executing, other operation commands are invalid except forward/reverse commands and STOP key on the digital keypad.

O1-22
JOG frequency

01-07
4th output
frequency
setting
JOG acceleration time

Frequency

01-21


Time

JOG accel./decel.time


JOG Frequency

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:6.00

Settings 0.00~400.00Hz

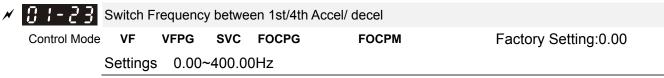


- This parameter selects the frequency point for transition from acceleration/deceleration time 1 to acceleration/deceleration time 4.
- The transition from acceleration/deceleration time 1 to acceleration/deceleration time 4, may also be enabled by the external terminals (Pr. 02-01 to 02-08). The external terminal has priority over Pr. 01-23.

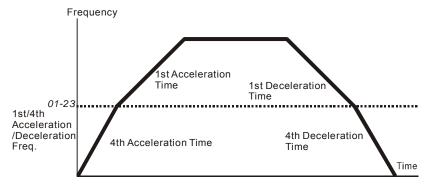

1st/4th Acceleration/Deceleration Switching

N	01-54	S-curve for Acceleration Departure Time S1						
×	01-25	S-curve for Acceleration Arrival Time S2						
×	S-curve for Deceleration Departure Time S3							
×	S-curve for Deceleration Arrival Time S4							
×	S-curve for Deceleration Arrival Time S5							
	Control Mode	VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:1.00	
		Settings	0.00~	25.00s	ec			
×	0:1-29	Switch F	requency	for S3	S/S4 Change	s to S5		
	Control Mode	VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:0.00	
	Settings 0.00~400.00Hz							

- It is used to give the smoothest transition between speed changes. The accel./ decel. curve can adjust the S-curve of the accel./decel. When it is enabled, the drive will have different accel./decel. curve by the accel./ decel. time.
- The Actual Accel. Time = selected accel. Time + (Pr.01-24 + Pr.01-25)/2
 The Actual Decel. Time = selected decel. Time + (Pr.01-26 + Pr.01-27 + Pr.01-30*2)/2
- Pr.01-29 is used to set the switch frequency between S4 and S5 for smooth stop.
- lt is recommended to set this parameter to the leveling speed of elevator.

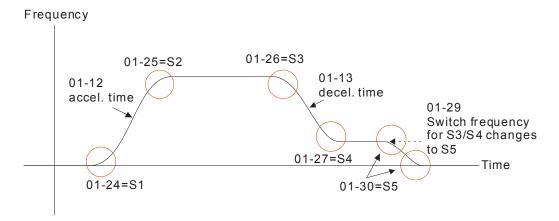

☐ ! - ☐ ☐ Mode Selection when Frequency< Fmin
</p>

Control Mode VF VFPG SVC Factory Setting:1

Settings 0: Output Waiting

1: Zero-speed operation

2: Fmin (4th output frequency setting)

- When the AC motor drive is at 0Hz, it will operate by this parameter.
- When it is set to 1 or 2, voltage will be output by Fmin corresponding output voltage (Pr.01-08).


Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting: 2.00 Settings 0.00~600.00sec

- The AC motor drive will stop by the setting of this parameter when canceling RUN command. Refer to the figure in Pr.01-29 for details.

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:

Settings Contact Delta for more information

02 Digital Input/ Output Parameters

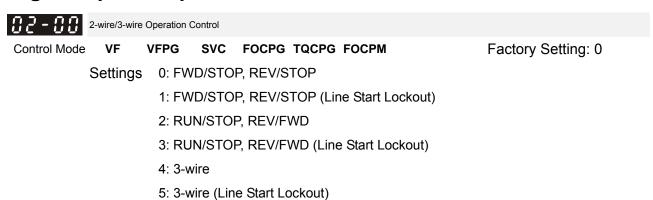

- Three of the six methods include a "Line Start Lockout" feature. When line start lockout is enabled, the drive will not run once applying the power. The Line Start Lockout feature doesn't guarantee the motor will never start under this condition. It is possible the motor may be set in motion by a malfunctioning switch.
- This parameter is used to control operation from external terminals. There are three different control modes.

02-00	Control Circuits of the External Terminal
0, 1 2-wire operation control (1) FWD/STOP REV/STOP	FWD/STOP FWD:("OPEN":STOP) ("CLOSE":FWD) REV:("OPEN": STOP) ("CLOSE": REV) DCM VFD-ED
2, 3 2-wire operation control (2) RUN/STOP REV/FWD	RUN/STOP FWD:("OPEN":STOP) ("CLOSE":RUN) REV:("OPEN": FWD) ("CLOSE": REV) DCM VFD-ED
4, 5 3-wire operation control	FWD "CLOSE":RUN STOP RUN MI1 "OPEN":STOP REV/FWD "OPEN": FWD "CLOSE": REV DCM VFD-ED

82-84	Multi-Function Input Command 1 (M	II1) (it is Stop ter	minal	for 3-w	ire op	eration)		
					Fac	ctory Set	ting:1	
88-88	Multi-Function Input Command 2 (M	II2)						
					Fac	ctory Set	ting:2	
02-03	Multi-Function Input Command 3 (M	II3)						
					Fac	ctory Set	ting:3	
02-04	Multi-Function Input Command 4 (M	114)						
					Fac	ctory Set	ting:4	
02-05	Multi-Function Input Command 5 (M	ll5)						
					Fac	ctory Set	ting: 0	
88-58	Multi-Function Input Command 6 (M	116)						
					Fac	tory Set	ting: 0	
02-07	Multi-Function Input Command 7 (M	117)						
					Fac	ctory Set	ting: 0	
02-08	Multi-Function Input Command 8 (M When JP1 on the control board is in When JP1 on the control board is re	serted, MI8 fund					nt of Pr0	2-08.
					Fac	ctory Set	ting:40	
	Settings	Control Mode	VF	VFPG	svc	FOCPG	TQCPG	FOCPM
	0:0: no function		0	0	\circ	0	0	0
	1: multi-step speed command 1		0	0	0	0		0

				rac	cory Set	ung:40	
Settings	Control Mode	VF	VFPG	svc	FOCPG	TQCPG	FOCPM
0:0: no function		0	0	\circ	0	0	0
1: multi-step speed command 1		0	0	0	0		0
2: multi-step speed command 2		0	0	0	0		0
3: multi-step speed command 3		0	0	0	0		0
4: multi-step speed command 4		0	0	0	0		0
5: Reset		0	0	0	0	0	0
6: JOG command		0	0	0	0		0
7: acceleration/deceleration speed in	nhibit	0	0	0	0		0
8: the 1st, 2nd acceleration/deceleration	ation time	0	0	0	0		0
selection							
9: the 3rd, 4th acceleration/decelera	tion time	0	0	0	0		0
selection							
10: EF input (07-28)		0	0	0	0	0	0
11: Reserved							
12: Stop output		0	0	0	0	0	0
13~14: Reserved							
15: AUI1 operation speed command	I form AUI1	0	0	0	0		0
16: Reserved		0	0	0	0		0
17: AUI2 operation speed command	I form AUI2	0	0	0	0		0
18: Emergency Stop (07-28)		0	0	0	0	0	0
19~23: Reserved							

24: FWD JOG Command	0	0	0	0		0
25: REV JOG Command	0	0	0	0		0
26: Reserved						
27: ASR1/ASR2 selection	0	0	0	0		0
28: Emergency stop (EF1) (Motor coasts to stop)	0	0	0	0	0	0
29~30: Reserved						
31: High torque bias (by Pr.07-21)	0	0	0	0	0	0
32: Middle torque bias (by Pr.07-22)	0	0	0	0	0	0
33: Low torque bias (by Pr.07-23)	0	0	0	0	0	0
34~37: Reserved						
38: Disable write EEPROM function	0	0	0	0	0	0
39: Torque command direction					0	
40: Enable drive function	0	0	0	0	0	0
41: Detection of magnetic contactor		\circ	\circ	\circ	\circ	\circ
42: Mechanical brake 1	0	0	0	0	0	0
43: EPS function (Emergency Power System)	0	0	0	0	0	0
44: Mechanical brake 2	0	0	0	0	0	0
45~51: Direct docking mode only ◆						

This parameter selects the functions for each multi-function terminal.

If Pr.02-00 is set to 3-wire operation control. Terminal MI1 is for STOP terminal. Therefore, MI1 is not allowed for any other operation.


Settings	Functions	Descriptions				
0	No Function					
1	Multi-step speed command					
2	Multi-step speed command 2	15 step speeds could be conducted through the digital statuses of the 4 terminals, and 17 in total if the master speed and JOG are included. (Refer to Pr. 04-00~04-14) When using communication to control the multi-step speed, setting 1 to 4 will be invalid.				
3	Multi-step speed command 3					
4	Multi-step speed command 4	1 to 4 will be litvalid.				
5	Reset	After the error of the drive is eliminated, use this terminal to reset the drive.				
6	JOG Command	JOG operation				
7	Acceleration/deceleration Speed Inhibit	When this function is enabled, acceleration and deceleration is stopped and the AC motor drive starts to accel./decel. from the inhibit point.				


		-						
8	The 1 st , 2 nd acceleration or deceleration time selection	The acceleration/deceleration time of the drive could be selected from this function or the digital statuses of the terminals; there are 4 acceleration/deceleration speeds in total for selection. Bit Bit Descriptions 0 1 0 0 First acceleration/deceleration time When output frequency						
9	The 3 rd , 4 th acceleration or deceleration time selection	is less than Pr.01-23 (Switch Frequency between 1st/4th Accel/decel), it will						
10	EF Input	External fault input terminal and decelerates by Pr.07-28. (EF fault will be recorded)						
11: Rese	rved							
12	Stop output	When this function is enabled, the drive output will stop immediately and the motor is free run. When this function is disabled, the drive will accelerate to the frequency setting.						
13~14: R	eserved							
15	Operation speed command form AUI1	When the source of operation speed command is set to AUI1, ACI and AUI2 at the same time and two or above terminals are ON, the priority is AUI1>ACI>AUI2. When this function is enabled, the source of the frequency will force to be AUI1.						
16: Rese	rved							
17	Operation speed command form AUI2	When this function is enabled, the source of the frequency will force to be AUI2.						
18	Emergency Stop	When this function is enabled, the drive will ramp to stop by Pr.07-28 setting.						
19~23: R	eserved							
24	FWD JOG command	When this function is enabled, the drive will execute forward Jog command.						
25	REV JOG command	When this function is enabled, the drive will execute reverse Jog command.						
26: Rese	rved							
27	ASR1/ASR2 selection	ON: speed will be adjusted by ASR 2 setting. OFF: speed will be adjusted by ASR 1 setting.						
28	Emergency stop (EF1) (Motor coasts to stop)	When it is ON, the drive will execute emergency stop. (it will have fault code record)						

29~30: F	Reserved								
		When Pr.07-19 is set to 3:							
31	High torque bias	The high torque bias is according to the Pr.07-21 setting.							
32	Middle torque bias	The middle torque bias is according to the Pr.07-22 setting. The low torque bias is according to the Pr.07-23 setting. 31 32 33 Torque Bias							
33	Low torque bias	OFF OFF OFF N/A OFF OFF ON 07-23 OFF ON OFF 07-22 OFF ON ON 07-23+07-22 ON OFF OFF 07-21 ON OFF ON 07-21+07-23 ON ON OFF 07-21+07-22 ON ON ON OFF 07-21+07-22							
34~37: F	Reserved								
38	Disable write EEPROM function	When this function is enabled, you can't write into EEPROM.							
39	Torque command direction	When this function is enabled, you can't write into EEPROM.							
40	Enable drive function	When Pr.07-13=2 and analog input is ACI or unipolar AUI, torque command direction is decided by this terminal.							
41	Detection of magnetic contactor	When this function is enabled, the drive function can be executed. This function can be used with multi-function output (setting Pr.02-11~Pr.02-14 to 15) and (Pr.02-31 and Pr.02-32).							
42	Mechanical brake 1	This terminal is used for the feedback signal of magnetic contacto ON/OFF. When drive receives RUN command, the corresponding output terminal (setting 15) will be enabled after Pr.02-31 time. It will check if this function is enabled within the detection time (Pr.02-36). If NOT, the fault of mechanical brake occurs and fault code "MCF" will be displayed.							
43	EPS function (Emergency Power System)	If power is cut during running, the drive will stop when DC bus voltage is less than low voltage level. After power is cut, drive will run by the frequency depend on EPS when EPS is applied and this function is ON.							
44	Mechanical brake 2	this function is ON. This terminal is used for the feedback signal of magnetic contactor ON/OFF. When drive receives RUN command, the corresponding output terminal (setting 15) will be enabled after Pr.02-31 time. It will check if this function is enabled within the detection time (Pr.02-36). If NOT, the fault of mechanical brake occurs and fault code "MCF" will be displayed.							

45~51 Direct docking mode only

Contact Delta for more information.

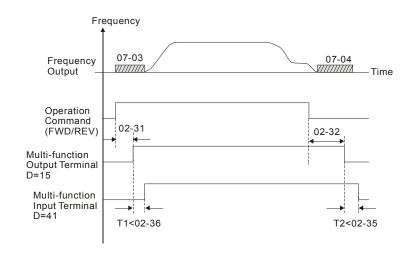

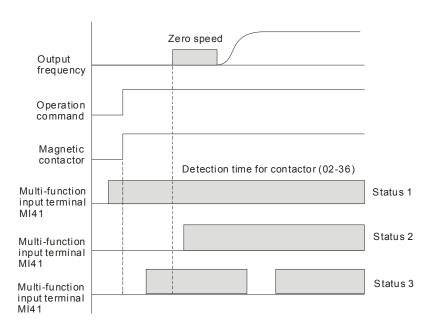

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0.005 Settings 0.001~30.000sec

This parameter is used for digital input terminal signal delay and confirmation. The delay time is confirmation time to prevent some uncertain interferences that would result in error (except for the counter input) in the input of the digital terminals (FWD, REV and MI1~8). Under this condition, confirmation for this parameter could be improved effectively, but the response time will be somewhat delayed.

Digital Input Operation Direction										
	Control Mode	VF	VFPG	SVC	FOCPG TQCPG FOCPM	Factory Setting: 0				
	_	Settings	s 0~65							

- This parameter is used to set the input signal level and it won't be affected by the SINK/SOURCE status.
- Bit0 is for FWD terminal, bit1 is for REV terminal and bit2 to bit9 is for MI1 to MI8.

User can change terminal status by communicating.

For example, MI1 is set to 1 (multi-step speed command 1), MI2 is set to 2 (multi-step speed command 2).

Then the forward + 2nd step speed command=1001(binary) =9 (Decimal). Only need to set Pr.02-10=9 by communication and it can forward with 2nd step speed. It doesn't need to wire any multi-function terminal.

bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	REV	FWD

/ HC-H	Multi-function Output 1: RA, RB, RC (Relay 1)	
		Factory Setting:11
× 82 - 13	Multi-function Output 2: MRA, MRB, MRC (Relay 2)	
		Factory Setting:1
× 82 - 13	Multi-function Output 3: R1A, R12C (Realy 3)	
× 82-14	Multi-function Output 4: R2A, R12C (Realy 4)	
× 82 - 15	Multi-function Output 5: MO1	
× 82 - 18	Multi-function Output 6: MO2	
× 82 - 13	Reserved	
× 82 - 18	Reserved	
× 82 - 19	Reserved	
× 82-28	Reserved	
× 82-21	Reserved	
× 82-22	Reserved	
		Factory Setting: 0

0: No function	0	0	_			
4.0		_	0	0	0	0
1: Operation indication	0	0	0	0	0	0
2: Operation speed attained	0	0	0	0	0	0
3: Desired frequency attained 1 (Pr.02-25, 02-26)	0	0	0	0		0
4: Desired frequency attained 2 (Pr.02-27, 02-28)	0	0	0	0		0
5: Zero Speed(frequency command	0	0	0	0		0
6: Zero speed with stop (frequency command)	0	0	0	0		0
7: Over torque (OT1) (Pr.06-05~06-07)	0	0	0	0	0	0
8: Over torque (OT2) (Pr.06-08~06-10)	0	0	0	0	0	0
9: Drive ready	0	0	0	0	0	0
10: User-defined Low-voltage Detection (LV)	0	0	0	0	0	0
11: Malfunction indication	0	0	0	0	0	0
12: Mechanical brake release (Pr.02-29, Pr.02-30)) (0	0	0	0	0
13: Overheat (Pr.06-14)	0	0	0	0	0	0
14: Brake chopper signal	0	0	0	0	0	0
15: Motor-controlled magnetic contactor output	0	0	0	0	0	0
16: Slip error (oSL)	0	0	0	0		0
17: Malfunction indication 1	0	0	0	0	0	0
18: Reserved						
19: Brake chopper output error	0	0	0	0	0	0
20: Warning output	0	0	0	0	0	0
21: Over voltage warning	0	0	0	0	0	0
22: Over-current stall prevention warning	0	0	0			
23: Over-voltage stall prevention warning	0	0	0	0	0	0
24: Operation mode indication (Pr.00-15≠0)	0	0	0	0	0	0

25: Forward command	0	0	0	0	0	0
26: Reverse command	0	0	0	0	0	0
27: Output when current >= Pr.02-33	0	0	0	0	0	0
28: Output when current < Pr.02-33	0	0	0	0	0	0
29: Output when frequency >= Pr.02-34	0	0	0	0	0	0
30: Output when frequency < Pr.02-34	0	0	0	0	0	0
31: Power generation direction and status verify	0	0	0	0	0	0
32: Power generation direction	0	0	0	0	0	0
33: Zero speed (actual output frequency)	0	0	0	0		0
34: Zero speed with Stop (actual output frequency)	0	0	0	0		0
35: Fault output option 1 (Pr.06-22)	0	0	0	0	0	0
36: Fault output option 2 (Pr.06-23)	0	0	0	0	0	0
37: Fault output option 3 (Pr.06-24)	0	0	0	0	0	0
38: Fault output option 4 (Pr.06-25)	0	0	0	0	0	0
39: Reserved						
40: Speed attained (including zero speed)	0	0	0	0		0

41: Reserved

42: STO Output Error

43~44: Direct Docking Mode only ◆

45: Reserved

46: Indicator of Retrying while a fault has occurred

47: Direct Docking Mode only ◆

Settings	Functions	Descriptions
0	No Function	No function
1	AC Drive Operational	Active when there is an output from the drive or RUN command is ON.
2	Operation speed attained	Active when the AC motor drive reaches the output frequency setting.
3	Desired Frequency Attained 1 (Pr.02-25, 02-26)	Active when the desired frequency (Pr.02-25, 02-26) is attained.
4	Desired Frequency Attained 2 (Pr.02-27, 02-28)	Active when the desired frequency (Pr.02-27, 02-28) is attained.
5	Zero Speed (frequency command)	Active when frequency command =0. (the drive should be at RUN mode)
6	Zero Speed with Stop (frequency command)	Active when frequency command =0 or stop.

	Over Torque (OT1)	Active when detecting over-torque. Refer to Pr.06-05 (over-torque				
7	Over Torque (OT1) (Pr.06-05~06-07)	detection selection-OT1), Pr.06-06 (over-torque detection				
	(F1.00-03/300-07)	level-OT1) and Pr.06-07 (over-torque detection time-OT1).				

8	Over Torque (OT2) (Pr.06-08~06-10)	Active when detecting over-torque. Refer to Pr.06-08 (over-torque detection selection-OT2), Pr.06-09 (over-torque detection level-OT2) and Pr.06-10 (over-torque detection time-OT2).				
9	Drive Ready	Active when the drive is ON and no abnormality detected.				
10	User-defined Low-voltage Detection	Active when the DC Bus voltage is too low. (refer to Pr.06-00 low voltage level)				
11	Malfunction Indication	Active when fault occurs (except Lv stop).				
	Mechanical Brake Release	When drive runs after Pr.02-29, it will be ON. This function should be				
12	(Pr.02-29, Pr.02-30)	used with DC brake and it is recommended to use contact "b" (N.C).				
13	Overheat (Pr.06-14)	Active when IGBT or heat sink overheats to prevent OH turn off the drive. (refer to Pr.06-14)				
14	Brake Chopper Signal	The output will be activated when the drive needs help braking the load. A smooth deceleration is achieved by using this function. (refer to Pr.07-00)				
15	Motor-controlled Magnetic Contactor Output	Active when the setting is set to 15.				
16	Slip Error (oSL)	Active when the slip error is detected (by Pr.05-14).				
17	Malfunction indication 1	Activate after 10ms when fault occurs (except Lv stop).				
18	Reserved					
19	Brake Chopper Output Error	Active when the brake chopper error is detected				
20	Warning Output	Active when the warning is detected.				
21	Over-voltage Warning	Active when the over-voltage is detected.				
22	Over-current Stall Prevention Warning	Active when the over-current stall prevention is detected.				
23	Over-voltage Stall prevention Warning	Active when the over-voltage stall prevention is detected.				
24	Operation Mode Indication	Active when the operation command is controlled by external terminal. (Pr.00-15=1) and PU LED on keypad KPVL-CC01 is OFF.				
25	Forward Command	Active when the operation direction is forward.				
26	Reverse Command	Active when the operation direction is reverse.				
27	Output when Current >= Pr.02-33	Active when current is >= Pr.02-33.				
28	Output when Current < Pr.02-33	Active when current is < Pr.02-33.				
29	Output when frequency >= Pr.02-34	Active when frequency is >= Pr.02-34.				
30	Output when Frequency < Pr.02-34	Active when frequency is < Pr.02-34.				
31	Power Generation Direction and Status Verify	Activate when power generation direction is verified.				

32	Power Generation Direction							
	Zero Speed (actual output	Active when the actual output frequency is 0. (the drive sho						
33	frequency)	RUN mode)						
0.4	Zero Speed with Stop (actual	Active when the actual output frequency is 0 or Stop. (the drive						
34	output frequency)	should be at RUN	N mode)					
35	Fault output option 1	Active when Pr.0	6-22 is ON.					
36	Fault output option 2	Active when Pr.0	6-23 is ON.					
37	Fault output option 3	Active when Pr.0	6-24 is ON.					
38	Fault output option 4	Active when Pr.0	6-25 is ON.					
39	Reserved							
40	Speed Attained (including zero speed)	Active when the output frequency reaches frequency setting.						
41	Reserved	<u> </u>						
		Otation of Daire	Status of Safety Output					
		Status of Drive	Status A (MO=42)					
42	STO Output Error	Normal	Broken Circuit(Open)					
		STO	Short Circuit(Close)	Setting of Logic Output				
		STL1~STL3	Short Circuit(Close)	B is on page 16-6				
43~44	Direct Docking Mode only ◆	Contact Delta for	more information					
45	Reserved							
46	Indicator of Retrying while a	Re-attempt to do	multiple output while an e	error has occurred. When				
40	fault has occurred	finish re-attempting, MO will stop.						
47	Direct Docking Mode only ◆`	Contact Delta for more information						

Multi-output Direction

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0~65535

This parameter is bit setting. If the bit is 1, the multi-function output terminal will be act with opposite direction. For example, if Pr.02-11 is set to 1 and forward bit is 0, Relay 1 will be ON when the drive is running and OFF when the drive is stop.

Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	-	-	-	-	-	MO2	MO1	R2A	R1A	MRA	RA


Serial Start Signal Selection

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting: 0


Settings 0: By FWD/REV signal


1: By Enable signal

- This parameter is used to select serial start method of electromagnetic valve.
- When choose 0: by FWD/REV signal, the motor will start to run after the signal of enabling MI=40 is ON.
- When choose 1: by Enable signal, the electromagnetic valve, mechanical brake and DC brake will follow parameters' setting to run after FWD/REV and Enable are ON.

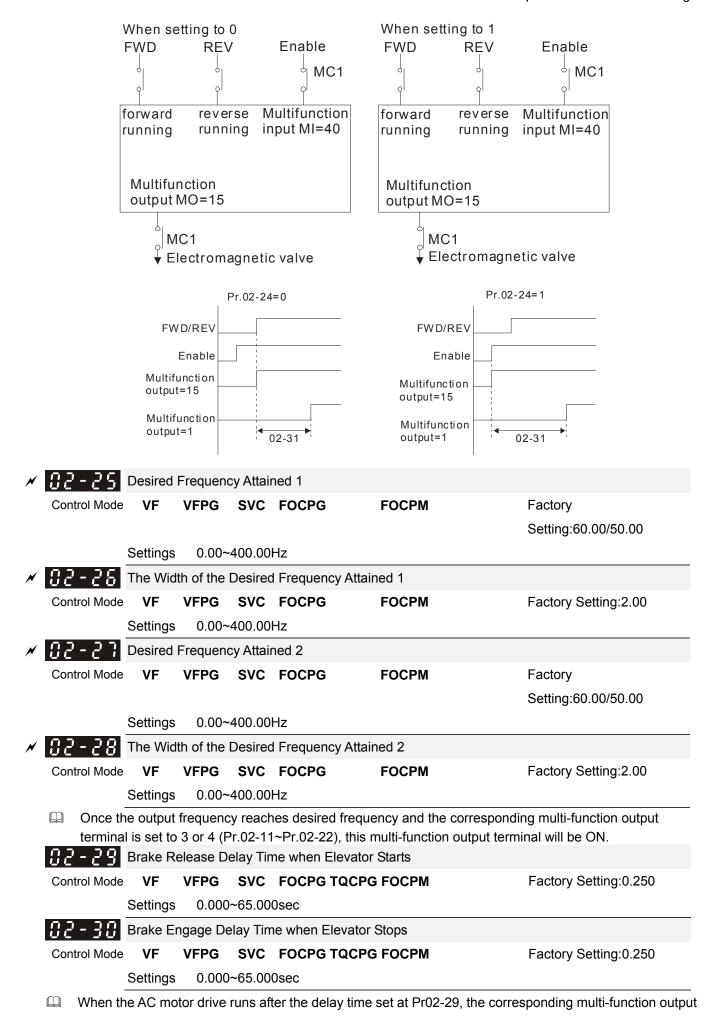


- terminal (12: mechanical brake release) will be ON.
- When the AC motor drive stops and after Pr.02-30 delay time, the corresponding multi-function output terminal (12: mechanical brake release) will be OFF.
- This function needs to co-work with DC brake function.

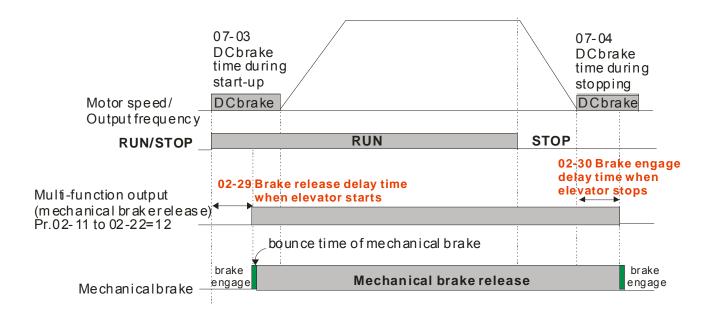


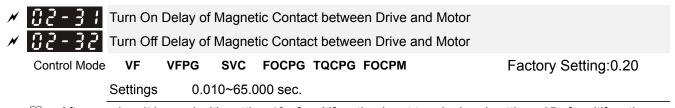

After running, it is used with setting 40 of multifunction input terminal and settings 15 of multifunction output terminals. When multifunction output terminals is ON, the drive starts output after Pr.02-31 delay time. When drive stops output, multifunction output terminals will release after Pr.02-32 delay time.

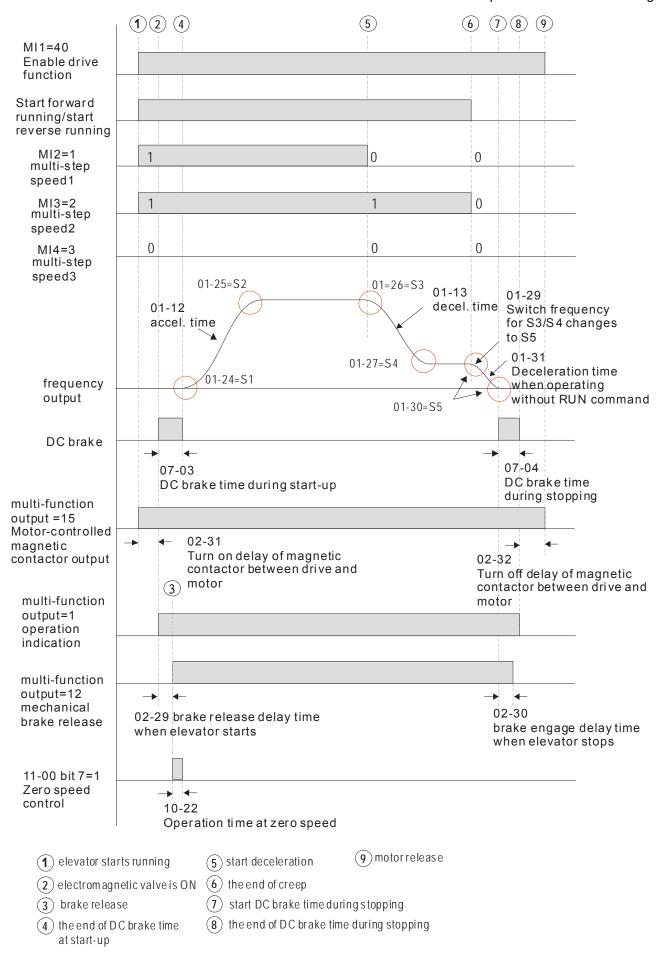

Output Current Level Setting for External Terminals Control Mode **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: 0 Settings 0~100% When output current is >= Pr.02-33, it will activate multi-function output terminal (Pr.02-11 to Pr.02-22 is set When output current is < Pr.02-33, it will activate multi-function output terminal (Pr.02-11 to Pr.02-22 is set to 28). 115-34 Output Boundary for External Terminals **VFPG** Control Mode **VF** SVC FOCPG TQCPG FOCPM Factory Setting: 0.00 Settings 0.00~±400.00Hz When output frequency is >=02-34, it will activate the multi-function terminal (Pr.02-11 to Pr.02-22 is set to When output frequency is <02-34, it will activate the multi-function terminal (Pr.02-11 to Pr.02-22 is set to 30). Detection Time of Mechanical Brake Control Mode ۷F **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: 0.00 0.00~10.00sec Settings When mechanical brake function (setting 42 of Pr.02-01~02-08) is not enabled within this setting time, it will display fault code 64 (MBF) mechanical brake error. Detection Time of Magnetic Contactor Factory Setting: 0.00 Control Mode **VFPG** SVC FOCPG TQCPG FOCPM 0.00~10.00sec Settings When mechanical brake function (setting 41 of Pr.02-01~02-08) is not enabled within this setting time, it will display fault code 66 (MCF) mechanical brake error. **Check Torque Output Function** Control Mode **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: 0 0: Enable Settings 1: Disable When the drive receives the operation signal, the drive will check if there is torque output. When this function is enabled, it will release mechanical brake after confirming that there is torque output.

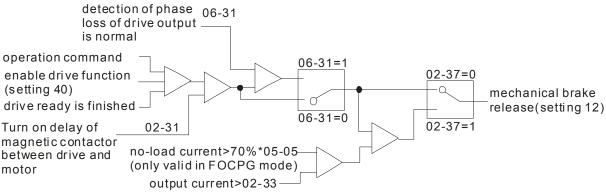

03 Analog Input/ Output Parameters

Analog Input 1 (AUI1)


Factory Setting:1

Reserved

✓ ☐ ☐ ☐ Analog Input 2 (AUI2)

				Fa	ctory Se	etting: 0	
Settings	Control Mode	VF	VFPG	svc	FOCPG	TQCPG	FOCPM
0: No function		0	0	0	0	0	0
1: Frequency command (torque lim	0	0	0	0	0	0	
control mode)							
2: Torque command (torque limit un	der speed					0	
mode)							
3: Preload input		0	0	0	0	0	0
4~5: Reserved							
6: P.T.C. thermistor input value		0	0	0	0	0	0
7: Positive torque limit					0		0
8: Negative torque limit					0		0
9: Regenerative torque limit					0		0
10: Positive/negative torque limit					0		0

- When it is frequency command or TQR speed limit, the corresponding value for 0~±10V/4~20mA is 0 max. output frequency(Pr.01-00)
- When it is torque command or torque limit, the corresponding value for $0\sim\pm10\text{V}/4\sim20\text{mA}$ is 0-max. output torque (Pr.07-14).
- \square When it is torque compensation, the corresponding value for $0\sim\pm10\text{V}/4\sim20\text{mA}$ is 0-rated torque.

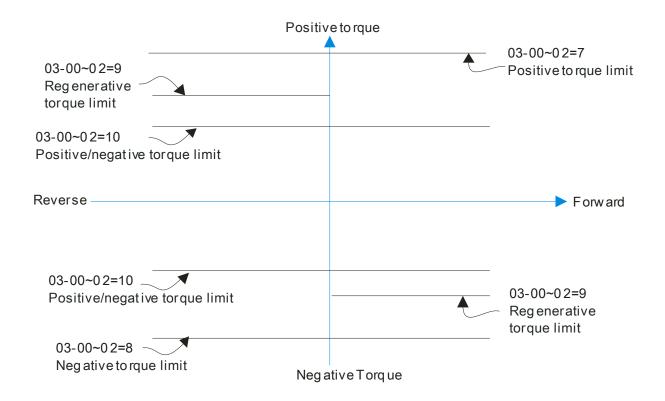


07-19: Source of torque offset

03-00~02: Analog input selections (AUI1/ACI/AUI2)

03-03~05: Analog input bias (AUI1/ACI/AUI2)

03-06~08: AUI1/A CI/AUI2 bias mode

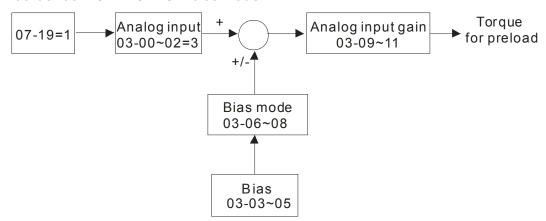

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0.0

Settings -100.0~100.0%

☐ It is used to set the corresponding AUI1 voltage of the external analog input 0.

Reserved

✓ ☐ 3 - ☐ 5 Analog Input Bias 1 (AUI2)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0.0

Settings -100.0~100.0%

- It is used to set the corresponding AUI2 voltage of the external analog input 0.
- The relation between external input voltage/current and setting frequency is equal to -10~+10V (4-20mA) corresponds to 0-60Hz.

★ BB - BB AUI1 Positive/negative Bias Mode (AUI1)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0


Reserved

Positive/negative Bias Mode (AUI2)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: Zero bias

- 1: Serve bias as the center, lower than bias=bias
- 2: Serve bias as the center, greater than bias=bias
- $\ensuremath{\mathbf{3}}\xspace$. The absolute value of the bias voltage while serving as the center (unipolar)
- 4: Serve bias as the center (unipolar)
- In a noisy environment, it is advantageous to use negative bias to provide a noise margin. It is recommended NOT to use less than 1V to set the operating frequency.

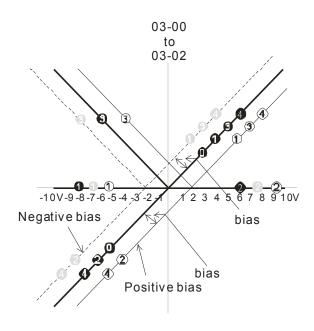

03-09~03-11 gain is positive

- 0 Zero bias
- 1 Serve bias as the center, lower than bias = bias
- 2 Serve bias as the center, greater than bias=bias
- The absolute value of the bias voltage while serving as the center (unipolar)
- 4 Serve bias as the center (unipolar)

✓ ☐ 3 - ☐ ☐ Analog Input Gain 1 (AUI1)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:100.0 Settings 0.0~500.0%

₽ Reserved

✓ ☐ 3 - ☐ Analog Input Gain 1 (AUI2)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:100.0

Settings 0.0~500.0%

Parameters 03-03 to 03-11 are used when the source of frequency command is the analog voltage/current signal.

Analog Input Delay Time (AUI1)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:0.01

Settings 0.00~2.00sec

#3- #3 Reserved

Analog Input Delay Time (AUI2)


Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:0.01

Settings 0.00~2.00sec

- Interferences commonly exist with analog signals, such as those entering AUI, ACI and AUI2. These interferences constantly affect the stability of analog control and using the Input Noise Filter will create a more stable system.
- If Pr03-14 is large, the control will be stable, yet the response to the input will be slow. If Pr. 03-14 is small, the control may be unstable, yet the response to the input will fast.

#3- 15 Reserved

#3- #5 Reserved

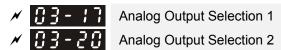

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM

Factory Setting: 0

Settings

0: Output frequency (Hz)

1: Frequency command (Hz)

2: Motor speed (RPM)

3: Output current (rms)

4: Output voltage

5: DC Bus Voltage

6: Power factor angle

7: Power factor

8: Output torque

9: AUI1

10: Reserved

11: AUI2

12: q-axis current

13: q-axis feedback value

14: d-axis voltage

15: d-axis feedback value

16: q-axis voltage

17: d-axis voltage

18: Torque command

19~20: Reserved

21: Power output

Analog Output Gain 1

Analog Output Gain 2

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM

Factory Setting: 100.0

Settings 0~200.0%

This parameter is set the corresponding voltage of the analog output 0.

Analog Output Value in REV Direction 1


Analog Output Value in REV Direction 2

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: Absolute value in REV direction

1: Output 0V in REV direction

2: Enable output voltage in REV direction

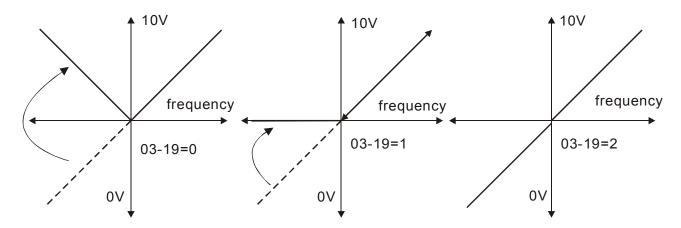

Selection for the analog output direction



- When setting to 0 and Pr.03-00=1 or 2, AUI can decide the operation direction.
- When setting to 1 and Pr.03-00=1, the operation direction can be set by FWD/REV terminal.
- When setting to 1 and Pr.03-00=2, the operation direction can be set by setting 39 of Pr.02-01 to Pr.02-08.

04 Multi-Step Speed Parameters

✓ ☐ ☐ ☐ Zero Step Speed Frequency ✓ ☐ ☐ ☐ Ist Step Speed Frequency 3rd Step Speed Frequency 4th Step Speed Frequency 5th Step Speed Frequency 7th Step Speed Frequency 8th Step Speed Frequency 9th Step Speed Frequency 10th Step Speed Frequency 11th Step Speed Frequency 12th Step Speed Frequency 13th Step Speed Frequency 14th Step Speed Frequency Control Mode ۷F **VFPG** SVC FOCPG **FOCPM** Factory Setting: 0.00 Settings 0.00~120.00Hz 15th Step Speed Frequency ۷F **VFPG** SVC FOCPG Factory Setting: 0.00 Control Mode **FOCPM** Settings 0.00~400.00Hz The Multi-Function Input Terminals (refer to Pr.02-01 to 02-08) are used to select one of the AC motor drive Multi-step speeds (including the main speed, in total 16 speeds). The speeds (frequencies) are determined by Pr.04-00 to 04-15 as shown above.

Direct docking mode only

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:

Settings Contact Delta for more information

05 IM Parameters

35 - 33 Motor Auto Tuning

Control Mode VF Factory Setting: 0


Settings 0: No function

1: Rolling test (Rs, Rr, Lm, Lx, no-load current)

2: Static Test

Starting auto tuning by pressing RUN key and it will write the measure value into Pr.05-05 to Pr.05-09 (Rs, Rr, Lm, Lx, no-load current).

- The steps to AUTO-Tuning are: (when setting to 1)
- 1. Make sure that all the parameters are set to factory settings and the motor wiring is correct.
- 2. Make sure the motor has no-load before executing auto-tuning and the shaft is not connected to any belt or gear motor. It is recommended to set to 2 if the motor can't separate from the load.
- 3. Fill in Pr.01-02, Pr.01-01, Pr.05-01, Pr.05-02, Pr.05-03 and Pr.05-04 with correct values. Refer to motor capacity to set accel./decel. time.
- 4. When Pr.05-00 is set to 1, the AC motor drive will execute auto-tuning immediately after receiving a "RUN" command. (NOTE: the motor will run!)
- 5. After executing, please check if all values are filled in Pr.05-05 to Pr.05-09.
- 6. Equivalent circuit

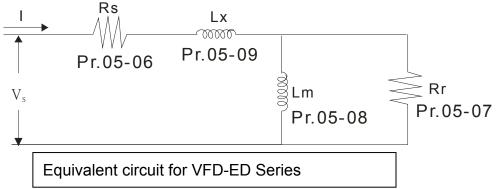

* If Pr05-00 is set to <2: Static Test>, the input of Pr05-05 is required.

NOTE

- 1. In torque/vector control mode, it is not recommended to have motors run in parallel.
- 2. It is not recommended to use torque/vector control mode if motor rated power exceeds the rated power of the AC motor drive.
- 3. The no-load current is usually 20~50% X rated current.
- 4. The rated speed can't be larger or equal to 120f/p. (f: output frequency Pr.01-01, p: Number of Motor Poles Pr.05-04)
- 5. After the tuning, user needs to activate the drive again to make it operate if the source command of Auto-tuning comes from external terminal,

#5 - # Full-load Current of Motor

motor drives.

Control Mode VF VFPG SVC FOCPG TQCPG Unit: Amp

Factory Setting:#.##

Settings (40~120%) *00-01 Amps

This value should be set according to the rated frequency of the motor as indicated on the motor nameplate. The factory setting is 90% X rated current.

Example: if the rated current for 7.5hp (5.5kW) models is 25A and the factory setting is 22.5A. In this way, the current range will be from 10A (25*40%) to 30A (25*120%).

As shown in the table below, the factory settings vary according to the different output in HP and in KW of motor drives.

	Motor drive's output (HP)	5	7.5	10	15	20	25	30	40	50	60	75	100
	Motor drive'soutput (KW)	4	5.5	7.5	11	15	18.5	22	30	37	45	55	75
230V	Full Load Current of Motor (A) Factory Setting	1636	19.64	24.54	36.82	47.46	63	71.18	108	131.72			
460V	Full Load Current of Motor(A) Factory Setting	9.41	10.64	13.91	18.82	24.54	31.1	36.82	47.46	65.46	81.82	104.72	135

85 - 82 Rated	Power of I	Motor		
Control Mode		svc	FOCPG TQCPG	Factory Setting: #.##
Settir	gs 0.00~	655.35	kW	
It is used to set	rated power	r of the	motor. The factory setting is the	ne power of the drive.
85-83 Rated	Speed of N	Motor (r	pm)	
Control Mode	VFPG	SVC	FOCPG TQCPG	Factory Setting:1710
Settir	gs 0~65	535		
It is used to set nameplate.	the rated s	peed of	the motor and need to set acc	cording to the value indicated on the moto
# 5 - # Numb	er of Motor	Poles		
Control Mode VF	VFPG	SVC	FOCPG TQCPG	Factory Setting:4
Settir	gs 2~48			
It is used to set	the numbe	r of mot	or poles (must be an even nur	nber).
35-35 No-lo	ad Current	of Moto	r	
Control Mode	VFPG	SVC	FOCPG TQCPG	Unit: Amp
				Factory Setting:#.##
Settir	igs 0~10	0%		
The factory set	ing is 40%	X rated	current.	

As shown in the table below, the factory settings vary according to the different output in HP and in KW of

	Motor drive's	E	7.5	10	15	20	25	20	40	5 0	60	75	100
	output (HP)	5	7.5	10	15	20	25	30	40	50	60	75	100
	Motor drive's	4	5.5	7.5	11	15	18.5	22	30	37	45	55	75
	output (KW)	4	5.5	7.5	11	15	16.5	22	30	31	45	55	75
	Current of Motor												
230V	w/o load (A)	5.73	6.85	8.5	12.56	15.97	20.78	23.22	33.51	39.52			
	Factory Setting												
	Current of Motor												
460V	w/o load (A)	3.29	3.71	4.81	6.43	8.26	10.28	11.99	15	19.64	24.55	31.42	40.5
	Factory Setting												

Rs of Motor

Control Mode SVC FOCPG TQCPG Factory Setting:0.000

Settings $0.000\sim65.535\Omega$

CS-CS Lm of Motor

Control Mode SVC FOCPG TQCPG Factory Setting:0.0

Settings 0.0~6553.5mH

✓ ☐ ☐ ☐ Torque Compensation Time Constant

Control Mode **SVC** Factory Setting:0.020

Settings 0.001~10.000sec

★ Slip Compensation Time Constant

Control Mode SVC Factory Setting:0.100

Settings 0.001~10.000sec

- Setting Pr.05-10 and Pr.05-11 change the response time for the compensation.
- When Pr.05-10 and Pr.05-11 are set to 10 seconds, its response time for the compensation will be the longest. But if the settings are too short, unstable system may occur.
- ★ # G = # Torque Compensation Gain

Control Mode VF VFPG Factory Setting: 0

Settings 0~10

This parameter may be set so that the AC motor drive will increase its voltage output to obtain a higher torque.

Control Mode VF VFPG SVC Factory Setting:0.00

Settings 0.00~10.00

	can be us under rat compens	sed to corred current the the setting	rect frequ t. When t equency b g and vice	ency a he out _l by Pr.0 e versa	driven by the drive, the load and and lower the slip to make the mout current is larger than the mout setting. If the actual speed a.	notor can rur otor no-load	n near the synchronous spe current, the drive will	
N	85-14	Slip Devi	ation Lev	el				
	Control Mode		VFPG	svc	FOCPG		Factory Setting: 0	
		Settings	0~100					
,	06 (6		0: Disa					_
M	05- 15	Detection		-			5 1 0 W 10	
	Control Mode		VFPG		FOCPG		Factory Setting:1.0	
/	00 10	Settings	0.0~10					
*	Control Mode	Over Slip			FOCDO		Footon, Cotting: 0	
	Control Mode		VFPG		FOCPG keep operation		Factory Setting: 0	
		Settings			ramp to stop			
					coast to stop			
	Pr.05-14 running.	to Pr.05-			set allowable slip level/time a	nd over slip	treatment when the drive	is
N	85-17	Hunting (Gain					
	Control Mode		VFPG	SVC			Factory Setting:2000	
		Settings	0~100					
	○ → •		0: Disa					.
	paramete	er. (When	it is high	freque	motion in some specific area. It ncy or run with PG, Pr.05-17 cacy, please increase Pr.05-17.)			IS
	85-18	Accumula	ative Mot	or Ope	ration Time (Min.)			
	Control Mode				FOCPG TQCPG FOCPM		Factory Setting:00	
		Settings	00~14	39 mir	utes			
								_
	85-19	Accumula	ative Mot	or Ope	ration Time (Day)			
	Control Mode	VF	VFPG	svc	FOCPG TQCPG FOCPM		Factory Setting:00	
		Settings	00~65	535 da	nys			
					o record the motor operation tin onds will not be recorded.	ne. They ca	n be cleared by setting to 0	0
N	05-20	Core Los	s Compe	nsatio	n			
	Control Mode			svc			Factory Setting:10	
		Settings	0~250	%				_

					Ch12 Description of Parameter Setting
05-21	Accumul	ative Dri	ve Pow	er-on Time (Min.)	
Control Mode	VF	VFPG	SVC	FOCPG TQCPG FOCPM	Factory Setting:00
-	Settings	00~1	439 mir	nutes	
<i>U5-22</i>	Accumul	ative Dri	ve Pow	er-on Time (day)	
Control Mode	VF	VFPG	SVC	FOCPG TQCPG FOCPM	Factory Setting:00
	Settings	00~6	5535 da	ays	
_					
05-23	Slip c	ompensa	ition ga	in % (electricity generating	mode)
Control Mo	de VF		SV	C	Factory Setting: 0.0
	Settin	gs 0.0	~100.0	%	
05-24	Slip c	ompensa	ition ga	in % (electric mode)	
Control Mo	de VF		SV	C	Factory Setting: 0.0
	Settin	gs 0.0	~100.0	%	
When in \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \\ \	/F mode	, it is NO	T requir	ed to set Pr05-13. To satisf	y the end user's demand on different
compensa	ation gair	n of elect	ricity ge	enerating mode and electric	mode, simply set up Pr05-23 and Pr05-24.
When in S	SVC mod	le, it is re	quired	to set Pr05-13. Then to sati	sfy the end user's demand on different

compensation gain of electricity generating mode and electric mode, simply set up Pr05-23 and Pr05-24.

06 Protection Parameters


✓ ☐ ☐ ☐ Low Voltage Level

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:180.0/360.0

Settings 230V series: 160.0~220.0V

460V series: 320.0~440.0V

It is used to set the Lv level.

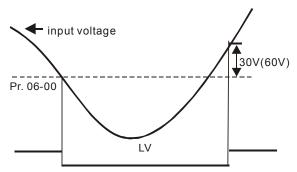

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:2

Settings 0: Warn and keep operation

1: Fault and ramp to stop

2: Fault and coast to stop


It is used to set the phase-loss treatment. The phase-loss will effect driver's control characteristic and life

Control Mode VF VFPG SVC Factory Setting:00

Settings 00: Disable

00~250% (rated current of the motor drive)


During acceleration, the AC drive output current may increase abruptly and exceed the value specified by Pr.06-02 due to rapid acceleration or excessive load on the motor. When this function is enabled, the AC drive will stop accelerating and keep the output frequency constant until the current drops below the maximum value.

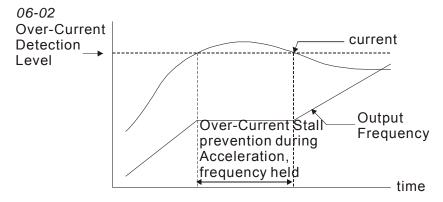

actual acceleration time when over-current stall prevention is enabled

Over-current Stall Prevention during Operation Control Mode VF VFPG SVC Factory Setting:00 Settings 00: Disable 00~250% (rated current of the motor drive)

If the output current exceeds the setting specified in Pr.06-03 when the drive is operating, the drive will decrease its output frequency by Pr.06-04 setting to prevent the motor stall. If the output current is lower than the setting specified in Pr.06-03, the drive will accelerate (by Pr.06-04) again to catch up with the set frequency command value.

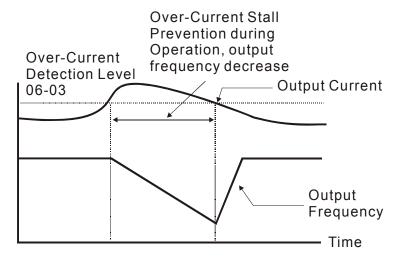

over-current stall prevention during operation



Control Mode VF VFPG SVC Factory Setting: 0

Settings 0: current accel/decel time

1: the 1st accel/decel time

2: the 2nd accel/decel time

3: the 3rd accel/decel time

4: the 4th accel/decel time

5: auto accel/decel time

It is used to set the accel. /decel. time selection when stall prevention occurs at constant speed.

✓ ☐ ☐ ☐ ☐ ☐ ☐ Over-torque Detection Selection (OT1)


Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0


Settings 0: Over-Torque detection disabled.

- 1: Over-torque detection during constant speed operation, continue to operate after detection
- 2: Over-torque detection during constant speed operation, stop operation after detection
- 3: Over-torque detection during operation, continue to operate after detection
- 4: Over-torque detection during operation, stop operation after detection

✓ \$\frac{1}{2}\frac{1}{2} = \frac{1}{2}\frac{1}{2}\$ Over	-torque Dete	ection Level	(OT1)	
Control Mode VI	VFPG	SVC FO	CPG TQCPG FOCPM	Factory Setting:150
Setti	ngs 10~2	50% (rated o	current of the motor drive)	
✓ \$\frac{1}{3} \frac{1}{5} - \frac{1}{3} \frac{1}{3}\$ Over	-torque Dete	ection Time (OT1)	
Control Mode VI	VFPG	SVC FO	CPG TQCPG FOCPM	Factory Setting:0.1
Setti	ngs 0.1~6	60.0sec		
✓ <a>G <a>G <a>C <a>C<!--</td--><td>-torque Dete</td><td>ection Select</td><td>ion (OT2)</td><td></td>	-torque Dete	ection Select	ion (OT2)	
Control Mode VI	VFPG	SVC FO	CPG TQCPG FOCPM	Factory Setting: 0
Setti	ngs 0: Ov	er-Torque de	etection disabled.	
	1: O\	er-torque de	tection during constant sp	eed operation, continue to operate after
	detec	ction		
	2: O\	er-torque de	tection during constant sp	eed operation, stop operation after
	detec	ction		
	3: O\	er-torque de	tection during operation,	continue to operate after detection
	4: O\	er-torque de	tection during operation,	stop operation after detection
	torque Dete	ection Level	(OT2)	
Control Mode VI	VFPG	SVC FO	CPG TQCPG FOCPM	Factory Setting:150
Setti	ngs 10~2	50% (rated c	current of the motor drive)	
✓ \$\frac{1}{2} \frac{1}{2} \frac{1}{2} \text{Over}\$	-torque Dete	ection Time (OT2)	
Control Mode VI	VFPG	SVC FO	CPG TQCPG FOCPM	Factory Setting:0.1
Setti	ngs 0.1~6	60.0sec		

Pr.06-05 and Pr.06-08 determine the operation mode of the drive after the over-torque is detected via the following method: if the output current exceeds the over-torque detection level (Pr.06-06) and also exceeds the Pr.06-07 Over-Torque Detection Time, the fault code "OT1/OT2" is displayed. If a Multi-Functional Output Terminal is to over-torque detection, the output is on. Please refer to Pr.02-11~02-22 for details.

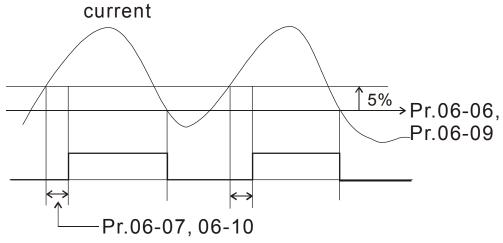

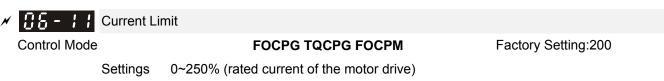

It is used to set the current limit.

Electronic Thermal Relay Selection

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:2

Settings 0: Inverter motor

1: Standard motor

2: Disabled

It is used to prevent self-cooled motor overheats under low speed. User can use electrical thermal relay to limit driver's output power.


★ ☐ 5 - ★ 3 Electronic Thermal Characteristic

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM

Factory Setting:60.0

Settings 30.0~600.0sec

The parameter is set by the output frequency, current and operation time of the drive for activating the I²t electronic thermal protection function. The function will be activated for the 150% * setting current for the setting of Pr.06-13.

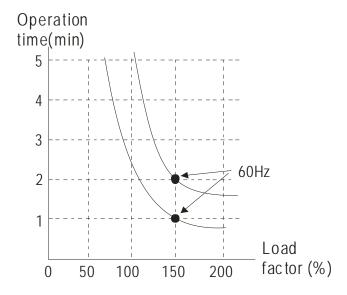

M 日音 - ドイ Heat Sink Over-heat (OH) Warning

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:90.0

Settings 0.0~110.0°C

Stall Prevention Limit Level

Control Mode VF VFPG SVC Factory Setting:50


Settings 0~100% (Refer to Pr06-02, Pr06-03)

When the operating frequency is larger than Pr.01-01, Pr06-02=150%, Pr. 06-03=100% and Pr. 06-15=80%:

Stall Prevention Level during acceleration = 06-02x06-15=150x80%=120%.

Stall Prevention Level at constant speed= 06-03x06-15=100x80%=80%.

Stall Prevention Level

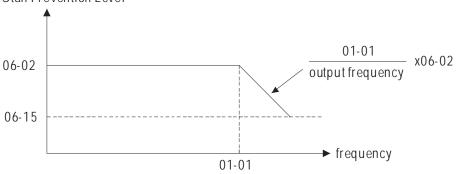

88 - 18	Present Fault Record
88-17	Second Most Recent Fault Record
81 - 38	Third Most Recent Fault Record
88 - 18	Fourth Recent Fault Record
88-28	Fifth Most Recent Fault Record
88-21	Sixth Most Recent Fault Record

Control mode	VF	VFPG	SVC FOCPG TQCPG FOCPM	Factory setting:	
	Readings	0	No fault		
		1	Over-current during acceleration (ocA)		
		2	Over-current during deceleration (ocd)		
		3	Over-current during constant speed (ocn)		
		4	Ground fault (GFF)		
		5	IGBT short-circuit (occ)		
		6	Over-current at stop (ocS)		
		7	Over-voltage during acceleration (ovA)		
		8	Over-voltage during deceleration (ovd)		
		9	Over-voltage during constant speed (ovn)		
		10	Over-voltage at stop (ovS)		
		11	Low-voltage during acceleration (LvA)		
		12	Low-voltage during deceleration (Lvd)		
		13	Low-voltage during constant speed (Lvn)		
		14	Low-voltage at stop (LvS)		
		15	Input phase loss (PHL)		
		16	IGBT over-heat (oH1)		
		17	Bulk capacitor over-heat (oH2)		
		18	Abnormal IGBT temperature detected (tH1o)		
		19	Abnormal bulk capacitor temperature detected (tH2o)		
		20	Unusual cooling fan operation		
		21	Over-load (oL) (150%; 1 minute, motor drive overloaded)		
		22	Motor over-loaded (EoL1)		
		23	Reserved		
		24	Motor PTC overheat (oH3)		
		25	Reserved		
		26	Over-torque 1 (ot1)		
		27	Over-torque 1 (ot2)		
		28	Reserved		
		29	Reserved		
		30	Memory write-in error (cF1)		
		31	Memory read-out error (cF2)		
		32	Isum current detection error (cd0)		
		33	U-phase current detection error (cd1)		
		34	V-phase current detection error (cd2)		
		35	W-phase current detection error (cd3)		
		36	cc current clamp hardware error (Hd0)		

37 oc (over-current) hardware error (Hd1) 38 ov (over-voltage) hardware error (Hd2) 39 GFF (ground fault) hardware error (Hd3) 40 Auto tuning error on motor's parameter (AuE) 41 Reserved 42 PG feedback error (PGF1) 43 PG feedback loss (PGF2) 44 PG feedback stall (PGF3) 45 PG slip error (PGF4) 46 Reserved 47 Reserved 48 Reserved 49 External fault input (EF) 50 Emergency stop by external terminals (EF1) Reserved 51 52 Password error after three attempts (Pcod) 53 Reserved 54 Illegal communication command (CE01) 55 Illegal communication address (CE02) 56 Communication data length error (CE03) 57 Communication being written to a read-only address (CE04) 58 Modbus transmission time-out (cE10) 59 Keypad transmission time-out (CP10) 60 Brake chopper error (bF) 61-63 Reserved 64 Mechanical brake feedback error (MBF) 65 PGF5 hardware error 66 Magnetic contactor error (MCF) 67 Output phase loss (MPHL) 68 CAN Bus disconnected 69 Reserved 70 Reserved 71 Reserved 72 Safety torque loss (STL1) 73 PGCD hardware error 74 PG absolute signal error (PGHL) 75 PG Z phase signal loss (PGAF) 76 Safety torque output stops 77 Safety torque loss 2 (STL2) 78 Safety torque loss 3 (STL3)

It will record when the fault occurs and force stopping. For the Lv, it will record when it is operation, or it will warn without record.

The definition of codes #69~#71 have been modified in v1.04. See Ch14 for more information

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: By settings of Pr.06-22~06-25

1: By the binary setting

It is used with the settings 35~38 of Pr.02-11~02-22 (Multi-function Output). The fault output selection 1~4 corresponds to Bit 0~3.

This parameter provides two setting methods for the fault output. Setting 0: it is set by the settings of Pr.06-22~Pr.06-25. Setting 1: it is set by the binary setting. Refer to the following example for details. Example:

Assume that

Pr.02-13 (Multi-function Output 3 R1A (Relay3)) is set to 35 Fault output option 1 (Pr.06-22).

Pr.02-14 (Multi-function Output 4 R2A (Realy4)) is set to 36 Fault output option 2 (Pr.06-23).

Pr.02-15 (Multi-function Output 5 (MO1)) is set to 37 Fault output option 3 (Pr.06-24).

Pr.02-16 (Multi-function Output 6 (MO2)) is set to 38 Fault output option 4 (Pr.06-25).

Assume that external faults output with the following signal: R1A=1, R2A=1, MO1=0 and MO2=1. The corresponding Bit 3~0 is 1011.

Bit 3	Bit 2	Bit 1	Bit 0	Fault code
-	-	-	-	0: No fault
				1: Over-current during acceleration (ocA)
				2: Over-current during deceleration (ocd)
0	0	0	1	3: Over-current during constant speed (ocn)
U	U	0	'	4: Ground fault (GFF)
				5: IGBT short-circuit (occ)
				6: Over-curent at stop (ocS)
				7: Over-voltage during acceleration (ovA)
0	0	1	0	8: Over-voltage during deceleration (ovd)
U	U	'	0	9: Over-voltage during constant speed (ovn)
				10: Over-voltage at stop (ovS)
				11: Low-voltage during acceleration (LvA)
		1	1	12: Low-voltage during deceleration (Lvd)
0	0			13: Low-voltage during constant speed (Lvn)
				14: Low-voltage at stop (LvS)
				15: Phase loss (PHL)
				16: IGBT heat sink over-heat (oH1)
0	1	0	0	17: Heat sink over-heat (oH2)(for 40HP above)
Ū				18: TH1 open loop error (tH1o)
				19: TH2 open loop error (tH2o)
1	0	0	0	20: Fan error signal output
0	1	0	1	21: over-load (oL) (150% 1Min)
0	1	1	0	22: Motor 1 over-load (EoL1)
	•			24: Motor PTC overheat (oH3)
0	1	1	1	26: over-torque 1 (ot1)
	•	•	•	27: over-torque 1 (ot2)
				30: Memory write-in error (cF1)
				31: Memory read-out error (cF2)
				32: Isum current detection error (cd0)
				33: U-phase current detection error (cd1)
1	0	0	0	34: V-phase current detection error (cd2)
•				35: W-phase current detection error (cd3)
				36: Clamp current detection error (Hd0)
				37: Over-current detection error (Hd1)
				38: Over-voltage detection error (Hd2)
				39: Ground current detection error (Hd3)
1	0	0	1	40: Auto tuning error (AuE)

Bit 3	Bit 2	Bit 1	Bit 0	Fault code
				41: PID feedback loss (AFE)
1	0	1	0	42: PG feedback error (PGF1)
				43: PG feedback loss (PGF2)
0	1	1	1	44: PG feedback stall (PGF3)
				45: PG slip error (PGF4)
1	0	1		46: PG ref input error (PGr1)
ı	0	ı	0	47: PG ref loss (PGr2)
				48: Analog current input error (ACE)
1	0	1	4	49: External fault input (EF)
ı	U	·	1	50: Emergency stop (EF1)
1	0	0	1	52: Password error (PcodE)
				54: Communication error (cE1)
				55: Communication error (cE2)
1	1	0	0	56: Communication error (cE3)
ı	ı	U	U	57: Communication error (cE4)
				58: Communication Time-out (cE10)
				59: PU time-out (cP10)
1	0	0	0	60: Brake chopper error (bF)
1	0	1	1	63: Safety loop error (Sry)
ı	U	'	· '	64: Mechanical brake error (MBF)
1	0	0	0	65: PGF5 hardware error
1	0	1	1	66: Magnetic contactor error (MCF)
1	0	1	1	67: Phase loss of drive output (MPHL)
1	1	0	1	68: CAN Bus disconnected
1	1	1	0	69: Safety Torque Off (STO)
	4	4	_	70: Channel 1(STO1~SCM1) abnormal safety
1	1	1	0	circuit
				71: Channel 2(STO2~SCM2) abnormal safety
1	1	1	0	circuit
-				
1	1	1	0	72: Abnormal internal circuit

		Fault Output Option 1
×	06-23	Fault Output Option 2
×	86-54	Fault Output Option 3
×	88-25	Fault Output Option 4

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0~6553 sec (refer to bit table for fault code)

These parameters can be used with multi-function output (set Pr.02-11 to Pr.02-22 to 35-38) for the specific requirement. When a fault occurs, the corresponding terminals will be activated (It needs to convert binary value to decimal value to fill in Pr.06-22 to Pr.06-25).

Foult and	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6
Fault code	current	Volt.	OL	SYS	FBK	EXI	CE
0: No fault							
1: Over-current during acceleration (ocA)	•						
2: Over-current during deceleration (ocd)	•						
3: Over-current during constant speed (ocn)							
4: Ground fault (GFF)						•	
5: IGBT short-circuit (occ)							
6: Over-current at stop (ocS)	•						
7: Over-voltage during acceleration (ovA)							
8: Over-voltage during deceleration (ovd)		•					
9: Over-voltage during constant speed (ovn)		•					
10: Over-voltage at stop (ovS)		•					
11: Low-voltage during acceleration (LvA)		•					
12: Low-voltage during deceleration (Lvd)		•					
13: Low-voltage during constant speed (Lvn)		•					
14: Low-voltage at stop (LvS)		•					_
15: Phase loss (PHL)						•	
16: IGBT heat sink over-heat (oH1)			•				
17: Heat sink over-heat (oH2)(for 40HP			•				
above)							_
18: TH1 open loop error (tH1o)			•				
19: TH2 open loop error (tH2o)			•				
20: Fan error signal output						•	_
21: over-load (oL) (150% 1Min)			•				
22: Motor 1 over-load (EoL1)			•				
23: Reserved							
24: Motor PTC overheat (oH3)			•				
25: Reserved							
26: over-torque 1 (ot1)			•				
27: over-torque 1 (ot2)			•				

	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6
Fault code	current	Volt.	OL	SYS	FBK	EXI	CE
28: Reserved							
29: Reserved							
30: Memory write-in error (cF1)				•			
31: Memory read-out error (cF2)				•			
32: Isum current detection error (cd0)				•			
33: U-phase current detection error (cd1)				•			
34: V-phase current detection error (cd2)				•			
				_			
35: W-phase current detection error (cd3)							
36: Clamp current detection error (Hd0)							
37: Over-current detection error (Hd1)				•			
38: Over-voltage detection error (Hd2)				•			
39: Ground current detection error (Hd3)				•			
40: Auto tuning error (AuE)				•			
41: PID feedback loss (AFE)					•		
42: PG feedback error (PGF1)					•		
43: PG feedback loss (PGF2)					•		
44: PG feedback stall (PGF3)					•		
45: PG slip error (PGF4)					•		
46: PG ref input error (PGr1)					•		
47: PG ref loss (PGr2)						•	
48: Analog current input error (ACE)						•	
49: External fault input (EF)						•	
50: Emergency stop (EF1)						•	
51: Reserved							
52: Password error (PcodE)				•			
53: Reserved							
54: Communication error (cE1)							•
55: Communication error (cE2)							•
56: Communication error (cE3)							•
57: Communication error (cE4)							
58: Communication Time-out (cE10)							•
59: PU time-out (cP10)							•
60: Brake chopper error (bF)						•	
61-62: Reserved							
63: Safety loop error (Sry) 64: Mechanical brake error (MBF)				•			
65: PGF5 hardware error				•			
66: Magnetic contactor error (MCF)							
67: Phase loss of drive output (MPHL)						•	
68: CAN Bus disconnected							•
69: Safety Torque Off (STO)				•			

Fault and	Bit0	Bit1	Bit2	Bit3	Bit4	Bit5	Bit6
Fault code	current	Volt.	OL	SYS	FBK	EXI	CE
70: Channel 1(STO1~SCM1) abnormal safety circuit				•			
71: Channel 2(STO2~SCM2) abnormal safety circuit				•			
72: Abnormal internal circuit				•			

PTC (Positive Temperature Coefficient) Detection Selection Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0 Settings 0: Warn and keep operating 1: Fault and ramp to stop This parameter is to set the treatment after detecting PTC. PTC Level VF **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting:50.0 Control Mode Settings 0.0~100.0% This parameter is to set the PTC level. The corresponding value of 100% PTC level is the max. analog input value. PTC Filter Time for PTC Detection ۷F Control Mode **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting:0.20 Settings 0.00~10.00sec Voltage of Emergency Power ۷F VFPG SVC FOCPG TQCPG FOCPM Control Mode Factory Setting:24.0/48.0 Settings 24.0~375.0Vdc 48.0~750.0Vdc This parameter needs to work with setting #43 <EPS function> of Pr02-01 ~ Pr02-08<Multi-function input command>. Phase Loss Detection of Drive Output at Start-Up(MPHL) **VFPG** SVC FOCPG TQCPG FOCPM Control Mode Factory Setting: 0 Settings 0: Disable 1: Enable When it is set to 1, it will auto detect if the connection between the drive and motor is normal whenever the drive runs. If errors occur to the connection between the drive and the motor, the drive will display fault code "67" to indicate motor output phase loss. Accumulative Drive Power-on Time at the First Fault (min.) Accumulative Drive Power-on Time at the Second Fault (min.) Accumulative Drive Power-on Time at the Third Fault (min.) Accumulative Drive Power-on Time at the Fourth Fault (min.) Accumulative Drive Power-on Time at the Fifth Fault (min.) Accumulative Drive Power-on Time at the Sixth Fault (min.) Control Mode **VFPG** SVC FOCPG TQCPG Factory Setting:00 Settings 00~1439 min

Accumulative Drive Power-on Time at the Second Fault (day) Accumulative Drive Power-on Time at the Third Fault (day) Accumulative Drive Power-on Time at the Fourth Fault (day) Accumulative Drive Power-on Time at the Fifth Fault (day) Accumulative Drive Power-on Time at the Sixth Fault (day) Control Mode ۷F **VFPG** SVC FOCPG TQCPG Factory Setting:00 Settings 00~65535 day Operation Speed of Emergency Power (EPS) Mode Control Mode ۷F **VFPG** SVC FOCPG TQCPG FOCPM Factory Setting: Read Only 0.00~400.00Hz Settings Fault and Warning handling methods VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0 Control Mode ۷F Settings Bit0 = 0: Display Lv fault and coast to stop Nit0 = 1: Display Lv warn and coast to stop Bit1= 0: Fan lock, fault and coast to stop

✓ ☐ 5 - 4 5 Operation Direction for Emergency Power (EPS) ON


Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0


Bit1 = 1: Fan lock, warn and coast to stop Bit2 = 0: software GFF protection enabled Bit2 = 1: software GFF protection disabled

Settings

- 0 Operate by current command
- Operate by the direction of power generating mode
- After determining the direction of power generating, the host computer sends the operating direction command. (When at STOP mode determine the direction of power generating mode (MO =32) but do not retain the direction of the power generating.)
- After determining the direction of power generating, the host computer send the operating direction command. (When at STOP mode, determine the direction of power generating mode (MO =32) and retain the direction of the power generating.)
- Pr.06-46 is enabled when the external terminal is detecting for the emergency power (EPS).
- When Pr.06-46 is set to 1 and a forward/reverse run command is given, the drive will begin to detect for the elevator loading and operates in the power regeneration direction (the motor is in power generating status). The drive will use and operate in the direction that was detected as its power regeneration

- direction. The drive will not operate in user command direction for safety purpose, to prevent voltage drop of emergency power (EPS).
- VF and SVC control mode: within the time setting of Pr.06-47, the drive detects the elevator loading status by performing forward/reverse run. Then the elevator operates in power regeneration direction (the motor id in power generating status). Refer to the diagram below for the Auto-Detection Time Graph.

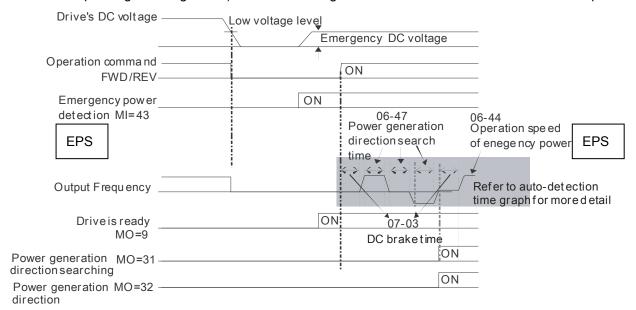


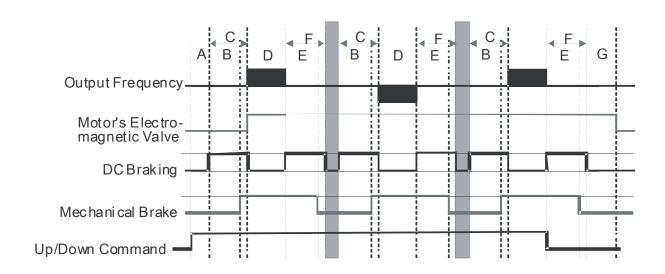

- A 02-31: Turn On Delay of Magnetic Contactor between Drive and Motor
- B 02-29: Brake Release Delay Time when Elevator Starts
- C 07-03: DC Brake Activation Time
- D 06-47: Power Generation Direction Searching Time
- E 02-30: Brake Engage Delay Time when Elevator Stops
- F 07-04: Require DC Brake Time to Stop
- G 02-32: Turn Off Delay of Magnetic Contactor between Drive and Motor

Auto-detection Time Graph

FOCPG/PM Control Mode: within the time setting of Pr.06-47, the drive maintains at zero-speed and it is able to determine the elevator loading without performing forward/reverse run. Then the elevator operates in power regeneration direction (the motor is in power generating status). Refer to the diagram below for the Auto-Detection Time Graph.

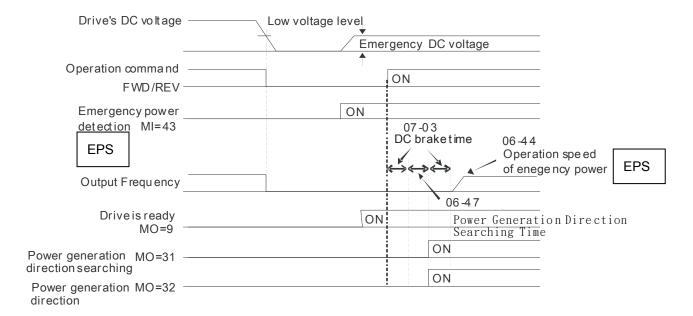

× 88-47

Power Generation Direction Searching Time

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Settings 0.0 ~ 5.0sec

Factory Setting: 1.0

87 - 3C

Power Capacity of Emergency Power (EPS)

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Settings 0.0 ~ 100.0 kVA

Factory Setting:0.0

When using emergency power (EPS), user must input the required power capacity for the emergency power and then the AC drive will calculate the acceptable elevator speed (Pr.06-44) by following equation.

 $V_{eps_max} = \frac{06 - 48 \times 0.5}{\sqrt{3} \times I_{motor_rated}}$

$$f_{eps_limit} = \frac{V_{eps_max}}{01 - 02} \times 01 - 01 \times 0.5$$

 $I_{motor_rated} = 05 - 01$ (Induction Motor)/ 08 - 01 (PM Motor)

- When Frequency Command f_{EPS}, the operation speed of emergency power (EPS) is f_{EPS}.
- When Frequency Command \leq f_{EPS}, the operation speed of emergency power (EPS) is set by current frequency command.

88-49

STO Latch Selection

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM


Factory Setting: 0

Settings 0: STO alarm Latch

- 1: STO alarm no Latch
- 2: STO Latch (Warn and record running commands when stop)
- 3: STO No Latch (Warn and record running commands when stop)
- When Pr06-49=0, STO alarm is latched which means once the cause of the alarm is cleared, a Reset command is required to clear the STO alarm.
- When Pr06-49=1, STO alarm is NOT latched which means once the cause of the alarm is cleared, the STO alarm will stop automatically.
- When in STL1~STL3 mode, STO alarm is latched and Pr06-49 cannot be set.

Selection of MO's action when retrying after fault SVC FOCPG TQCPG FOCPM Control Mode **VFPG** Factory Setting: 0 0: Output Settings 1: NO output To determine if to display fault indication when the following faults have occurred: 7: Over-voltage during acceleration (ovA) 8: Over-voltage during deceleration (ovd) 9: Over-voltage during constant speed (ovn) 10: Over-voltage at stop (ovS) 11: Low-voltage during acceleration (LvA) 12: Low-voltage during deceleration (Lvd) 13: Low-voltage during constant speed (Lvn) 14: Low-voltage at stop (LvS) 15: Input Phase loss (PHL) Two MO terminals are affected by this parameters and should be set up as MO= 10: Low voltage waning (LV) MO= 11: Fault Indication Number of times of retrying after fault Control Mode **VF** VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0 Settings 0~10 times To determine number of times to retry when the following faults have occurred: 7: Over-voltage during acceleration (ovA) 8: Over-voltage during deceleration (ovd) 9: Over-voltage during constant speed (ovn) 10: Over-voltage at stop (ovS) 11: Low-voltage during acceleration (LvA) 12: Low-voltage during deceleration (Lvd) 13: Low-voltage during constant speed (Lvn) 14: Low-voltage at stop (LvS) 15: Input Phase loss (PHL) After every reattempt, the available number of times to retry will automatically be deducted as displayed on the keypad About number of time to reset 1. Reset the fault manually 2. After running normally for 10 minutes, the motor drive will be back to the prior setting. 3. The motor drive will be powered-down and powered-up again. Time interval between retrying 88-52 Control Mode **VF** VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0 Settings 0.5~600.0 sec. To determine time interval between retrying when the following faults have occurred: 7: Over-voltage during acceleration (ovA) 8: Over-voltage during deceleration (ovd) 9: Over-voltage during constant speed (ovn) 10: Over-voltage at stop (ovS) 11: Low-voltage during acceleration (LvA) 12: Low-voltage during deceleration (Lvd) 13: Low-voltage during constant speed (Lvn)

14: Low-voltage at stop (LvS)15: Input Phase loss (PHL)

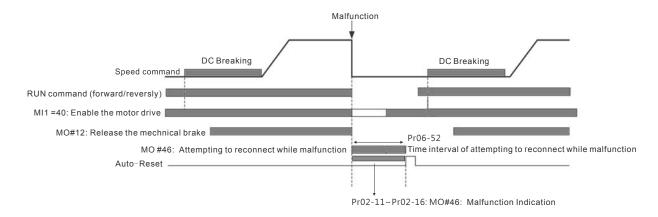

ı					
×	88-53	Frequency command who	en the most recent fault h	nas occurred	
	Control Mode	VF VFPG S	C FOCPG TQCPG	FOCPM	Factory Setting: 0.00
		Settings 0.00~65	5.35Hz		
×	08-54	Output frequency when th	e most recent fault has o	occurred	
	Control Mode	VF VFPG SVC F	FOCPG TQCPG FO	СРМ	Factory Setting: 0.00
		Settings 0.00~655.35H	Z		
×	08-55	Output current when the r	nost recent fault has occu	urred	
	Control Mode	VF VFPG SVC F	FOCPG TQCPG FO	СРМ	Factory Setting: 0.00
		Settings 0.00~655.35A	mps		
×	08-58	Output current when the r	nost recent fault has occ	urred	
	Control Mode	VF VFPG S	VC FOCPG TQCPG	FOCPM	Factory Setting: 0.00
		Settings 0.00~65	55.35Hz		
×	88-57	Output voltage when the r	nost recent fault has occ	urred	
	Control Mode	VF VFPG SVC F	FOCPG TQCPG FO	СРМ	Factory Setting: 0.0
		Settings 0.00~6553.5V			
N	82-98	DC bus voltage when the			
	Control Mode		FOCPG TQCPG FO	СРМ	Factory Setting : 0.0
		Settings 0.00~6553.5V			
	00.00				
M		Output power when the m			
	Control Mode	VF VFPG SVC F		CPM	Factory Setting : 0.0
	00.00	Settings 0.00~6553.5k\			
N	06-60	Output torque when the m			
	Control Mode	VF VFPG SVC F		СРМ	Factory Setting:0.00
		Settings 0.00~655.35%			

× 88 - 8	✓ ☐ 6 - 6 IGBT's temperature when the most recent fault has occurred					
Control M	ode VF VFPG	SVC FOCPG TQCPG	FOCPM	Factory Setting: 0.0		
	Settings -32	76.8~3276.7°C				
~ 88 - 8	Multi-input tern	ninals' status when the mos	st recent fault has occurre	ed		
Control M	ode VF VFPG	SVC FOCPG TQCPG	FOCPM	Factory Setting: 0000h		
	Settings 000	0h~FFFFh				
~ 88 - 8	Multi-output term	inals' status when the most re	ecent fault has occurred			
Control M	ode VF VFPG	SVC FOCPG TQCPG	FOCPM	Factory Setting: 0000h		
	Settings 000	0h~FFFFh				
86-8	Motor drive's sta	tus when the most recent faul	It has occurred			
Control M	lode VF Settings	VFPG SVC FOCPG TO 0000h~FFFFh	QCPG FOCPM	Factory Setting: 0000h		

07Special Parameters

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory S

Factory Setting:380.0/760.0

Settings 230V series: 350.0~450.0Vdc 460Vseries: 700.0~900.0Vdc

This parameter sets the DC-bus voltage at which the brake chopper is activated.

Reserved

DC Brake Current Level

Control Mode VF VFPG SVC Factory Setting: 0

Settings 0~100% (rated current of the motor drive)

- This parameter sets the level of DC Brake Current output to the motor during start-up and stopping. When setting DC Brake Current, the Rated Current (Pr.00-01) is regarded as 100%. It is recommended to start with a low DC Brake Current Level and then increase until proper holding torque has been attained.
- When it is in FOCPG/TQCPG/FOCPM mode, it can enable DC brake function by setting to any value.

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.7

Settings 0.0~60.0sec

This parameter sets the duration of DC Brake current is supplied to motor when activating the drive.

✓ ☐ ☐ ☐ ☐ ☐ ☐ DC Brake Stopping Time

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.7


Settings 0.0~60.0sec

This parameter sets the duration of DC Brake current is supplied to motor when stopping the drive.

Control Mode VF VFPG SVC FOCPG Factory Setting: 0.00

Settings 0.00~400.00Hz

This parameter determines the frequency when DC Brake will begin during deceleration. When the setting is less than start frequency (Pr.01-09), start-point for DC brake will begin from the min. frequency.

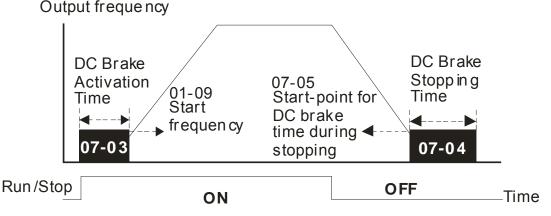

DC Brake Time

N	$\Omega \supset -\Omega S$	DC Brake Proportional Gain
/	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Do Diake i Toportional Gain

Control Mode VF VFPG SVC Factory Setting:50

Settings 1~500

It is used to set the output voltage gain when DC brakes.

✓ ☐ ☐ ☐ ☐ ☐ ☐ Dwell Time at Accel.

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.00

Settings 0.00~600.00sec

✓ ☐ ☐ ☐ ☐ ☐ Dwell Time at Decel.

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.00

Settings 0.00~600.00sec

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.00

Settings 0.00~400.00Hz

Dwell Frequency at Decel.


Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.00

Settings 0.00~400.00 Hz

In the heavy load situation, Dwell can make stable output frequency temporarily.

Pr.07-07 to Pr.07-10 are for heavy load to prevent OV or OC occurs.

Frequency

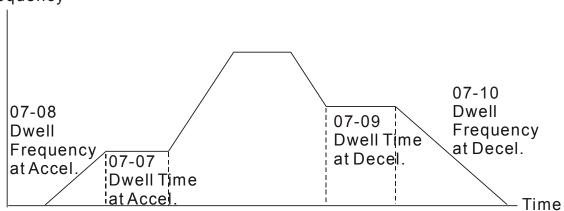

Dwell at accel./decel.

Fan Control

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:2

Settings 0: Fan always ON

1: 1 minute after AC motor drive stops, fan will be OFF

2: AC motor drive runs and fan ON, AC motor drive stops and fan OFF

3: Fan ON to run when preliminary heat sink temperature attained

4: Fan always OFF

This parameter is used for the fan control.

When setting to 3, fan will start to run until temperature is less than 40°C if temperature exceeds 40°C.

★ ☐ ☐ ☐ Torque Command

Control Mode TQCPG Factory Setting: 0.0

Settings -150.0 to 150.0% (Pr. 07-14 setting=100%)

This parameter is torque command. When Pr.07-14 is 250% and Pr.07-12 is 100%, the actual torque command = 250X100% X motor rated torque.

★ [] - [] Torque Command Source

Control Mode TQCPG Factory Setting:2

Settings 0: KPC-CC01 Digital keypad

1: RS485 serial communication

2: Analog signal (Pr.03-00)

This parameter is torque command source and the torque command is in Pr.07-12

Maximum Torque Command

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:100

Settings 0~300% (rated torque of the motor drive)

This parameter is for the max. torque command (motor rated torque is 100%).

Filter Time of Torque Command

Control Mode TQCPG Factory Setting:0.000

Settings 0.000~1.000sec


When the setting is too long, the control will be stable but the control response will be delay. When the setting is too short, the response will be quickly but the control maybe unstable. User can adjust the setting by the control and response situation.

\$\frac{1}{3} - \frac{1}{5} \quad \text{Speed Limit Selection}


Control Mode TQCPG Factory Setting: 0

Settings 0: By Pr.07-17 and Pr.07-18

1: Frequency command source (Pr.00-14)

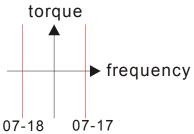


Pr.07-16=0 Running/opposite running direction are limited by Pr.07-17 and Pr.07-18.

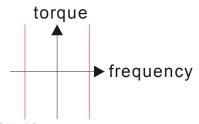

07-18 00-14 07-16=1 When it is forward running, running direction is limited by Pr.00-14 opposite running direction

is limited by Pr.07-18.

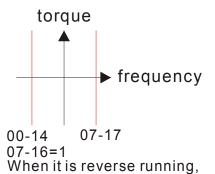

running direction is limited by Pr.07-17 opposite running direction is limited by Pr.00-14. Torque Mode + Speed Limit

Control Mode TQCPG Factory Setting:10

Settings 0~120%

✓ ☐ ☐ ☐ Torque Mode - Speed Limit

Control Mode TQCPG Factory Setting:10

Settings 0~120%

These parameters are used in the torque mode to limit the running direction and opposite direction. (Pr.01-00 max. output frequency=100%)

★ ☐ ☐ ☐ ☐ ☐ Source of Torque Offset

Control Mode SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: Disable

1: Analog input (Pr.03-00)

2: Torque offset setting (Pr.07-20)

3: Control by external terminal (by Pr.07-21 to Pr.07-23)

This parameter is the source of torque offset.

When it is set to 3, the source of torque offset will decide to Pr.07-21, Pr.07-22 and Pr.07-23 by the multi-function input terminals setting (31, 32 or 33).

02-01~02-08 is set to31	02-01~02-08 is set to32	02-01~02-08 is set to 33	Torque offset		
OFF	OFF	OFF	N/A		
OFF	OFF	ON	07-23		
OFF	ON	OFF	07-22		
OFF	ON	ON	07-23+07-22		
ON	OFF	OFF	07-21		
ON	OFF	ON	07-21+07-23		
ON	ON	OFF	07-21+07-22		
ON	ON	ON	07-21+07-22+07-23		

Torque Offset Setting

Control Mode SVC FOCPG TQCPG FOCPM Factory Setting:0.0

Settings 0.0~100.0% (rated torque of the motor drive)

This parameter is torque offset. The motor rated torque is 100%.

★ ☐ 7 - 2 | High Torque Offset

Control Mode SVC FOCPG TQCPG FOCPM Factory Setting:30.0

Settings 0.0~100.0% (rated torque of the motor drive)

Middle Torque Offset

Control Mode SVC FOCPG TQCPG FOCPM Factory Setting: 20.0

Settings 0.0~100.0% (rated torque of the motor drive)

Low Torque Offset

Control Mode SVC FOCPG TQCPG FOCPM Factory Setting:10.0

Settings 0.0~100.0% (rated torque of the motor drive)

When it is set to 3, the source of torque offset will decide to Pr.07-21, Pr.07-22 and Pr.07-23 by the multi-function input terminals setting (19, 20 or 21). The motor rated torque is 100%.

Forward Motor Torque Limit

Forward Regenerative Torque Limit


★ 日子-25 Reverse Motor Torque Limit

Reverse Regenerative Torque Limit

Control Mode FOCPG TQCPG FOCPM Factory Setting:200

Settings 0~300% (rated torque of the motor drive)

- The motor rated torque is 100%. The settings for Pr.07-24 to Pr.07-27 will compare with Pr.03-00=5, 6, 7, 8. The minimum of the comparison result will be torque limit.
- The motor rated torque is 100%. The settings for Pr.07-24 to Pr.07-27 will compare with Pr.03-00=5, 6, 7, 8. The minimum of the comparison result will be torque limit.

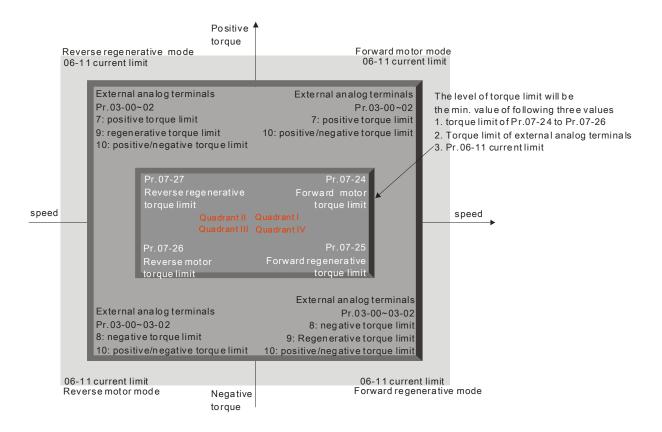



Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: Coast to stop

1: By deceleration Time 1

2: By deceleration Time 2

3: By deceleration Time 3

4: By deceleration Time 4

5: By Pr.01-31

When the multi-function input terminal is set to 10 or 14 and it is ON, the AC motor drive will be operated by Pr.07-28.





Control Mode FOCPG TQCP FOCP Factory Setting:0.000

G M

Settings 0.000~1.000sec

- When the elevator is stop and the mechanical brake is engaged, the drive will stop output. At the same time, it will produce the noise from the reacting force between the motor and the mechanical brake. This parameter can be used to decrease this reacting force and lower the noise.
- lt is used to set the time for decreasing torque to 0%.

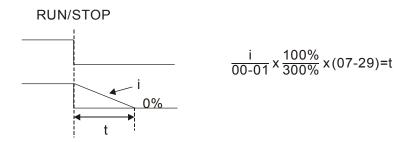

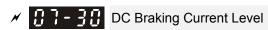

Control Mode VF VFPG SVC Factory Setting: 0

Settings; 0~100% (rated current of the motor drive)

- This parameter determines the amount of DC Braking Current applied to the motor during starting and stopping. When setting the DC Braking Current, note that 100% corresponds to the rated current of the AC drive. It is recommended to start with a low DC Braking Current level and then increase it slowly until proper holding torque has been attained. The amount of DC Braking Current cannot be higher than the rated current to avoid burning out the motor. So do not use DC brake of the motor drive as the mechanical latching to prevent accidents.
- When in FOCPG/TQCPG/FOCPM control mode, DC brake can be enabled without setting up Pr07-30.

08 PM Parameters

88-88	Motor Aut	o Tuning		
Control Mode	;		FOCPM	Factory Setting: 0
	Settings	0: No function		
		1:Only for the unloaded mo	otor, auto measure t	the angle between magnetic pole and
		PG origin (08-09)		
		2: For PM parameters (bra	ke locked)	
		3: Auto measure the angle	between magnetic	pole and PG origin (08-09)

- For setting 1: It can auto measure the angle between magnetic pole and PG origin. Follow the steps below when measuring:
 - 1. Unload before tuning
 - If brake is controlled by drive, the drive will act by the normal operation to finish tuning after wiring and setting brake control parameter
 - 3. brake is controlled by drive, the drive will act by the normal operation to finish tuning after wiring and setting brake control parameter
- For setting 3: It can auto measure the angle between magnetic pole and PG origin. Follow the steps below when measuring:
 - It can be loaded motor or unloaded motor before tuning
 - 2. If brake is controlled by drive, the drive will act by the normal operation to finish tuning after wiring and setting brake control parameters
 - 3. If brake is controlled by the host controller, it needs to make sure that brake is in release state before tuning
 - 4. Make sure the setting of Pr.10-02 is correct. Because the wrong setting of Pr.10-02 will cause wrong position of magnetic pole and also the wrong angle between magnetic pole and PG origin
- For setting 2: Starting auto tuning by pressing RUN key and it will write the measure value into Pr.08-05, Pr.08-07 (Rs, Lq) and Pr.08-08 (back EMF).

The steps to AUTO-Tuning are: (Static measure)

- 1. Make sure that all the parameters are set to factory settings and the motor wiring is correct
- 2. Motor: Fill in Pr.08-01, Pr.08-02, Pr.08-03 and Pr.08-04 with correct values. Refer to motor capacity to set accel. /decel. time
- 3. When Pr.08-00 is set to 2, the AC motor drive will execute auto-tuning immediately after receiving a "RUN" command. (NOTE: the motor will run! The shaft needs to be locked with external force
- 4. After executing, Check if all values are filled in Pr.08-05 and Pr.08-07

NOTE

• The rated speed can't be larger or equal to 120f/p.

Full-load Current of Motor

nameplate.

- Note that if the electromagnetic valve and brake is not controlled by the AC motor drive, release it
 manually
- It is recommended to set Pr.08-00 to 1 (unloaded motor) for the accurate calculation. If it needs to execute this function with loaded motor, balance the carriage before execution.
- If it doesn't allow balancing the carriage in the measured environment, it can set Pr.08-00=3 for executing this function. It can execute this function with loaded motor by setting Pr.08-00=3. It will have a difference of 15~30° by the different encoder type. Also refer to the reference table for tuning in Pr10-00 <PG Signal Type>.
- It will display the warning message "Auto tuning" on the digital keypad during measuring until the measure is finished. Then, the result will be saved into Pr.08-09.
- It will display "Auto Tuning Err" on the keypad when stopping by the fault of the AC motor drive or human factor to show the failed detection. At this moment, please check the connections of the wirings of the AC motor drives. If it displays "PG Fbk Error" on the digital keypad, please change the setting of Pr.10-02 (if it is set to 1, please change it to 2). If it displays "PG Fbk Loss" on the digital keypad, please check the feedback of Z-phase pulse.

00 0 '				
Control Mode	е		FOCPM	Unit: Amp
				Factory Setting: #.##
	Settings	(40~120%) *00-01 A	mps	
The fact	ory setting i	s 90% X rated current.		as indicated on the motor nameplat
•		ill be from 10A (25*40%)	•	factory setting is 22.5A. In this way
08-02	Rated Pov	wer of Motor		
Control Mode	е		FOCPM	Factory Setting: #.##
	Settings	0.00~655.35 kW		
☐ It is used	d to set rate	d power of the motor. Th	e factory setting is the po	ower of the drive.
08-03	Rated Spe	eed of Motor (rpm)		
Control Mode	е		FOCPM	Factory Setting:1710
	Settings	0~65535 rpm		


It is used to set the rated speed of the motor and need to set according to the value indicated on the motor

88-84	Number o	f Motor Poles		
Control Mode	9		FOCPM	Factory Setting:4
	Settings	2~96		
It is used	to set the	number of motor poles (mu	st be an even number	.).
08-05	Rs of Mot	or		
Control Mode)		FOCPM	Factory Setting:0.000
	Settings	0.000~65.535Ω		
08-08	Ld of Moto	or		
08-07	Lq of Moto	or		
Control Mode	•		FOCPM	Factory Setting:0.0
	Settings	0.0~6553.5mH		
00-00	Back Fled	tromotive Force		
Control Mode		a omotivo i orog	FOCPM	Factory Setting:0.0
	Settings	0.0~6553.5Vrms		. detery detunigions
	arameter is ed in the ra		tive force (phase-phase	se RMS value) when the motor is
		llue by Pr.08-00=2 (Motor A	uto Tuning).	
08-09	Angle bet	ween Magnetic Pole and P0	3 Origin	
Control Mode	9		FOCPM	Factory Setting:360.0
	Settings	0.0~360.0°		
		ed to measure the angle bet	ween magnetic pole a	ind PG origin.
	_	Pole Re-orientation		
Control Mode)		FOCPM	Factory Setting: 0
	Settings	0: Disable		
		1: Enable		
	Pr.11-00 k			
				or permanent magnet motor.
			•	0.0), it can only ensure that the me
operatio	n efficiency	\prime can be up to 86% of the be	est efficiency. In this s	ituation, when the operation efficie

needs to be improved, user can re-power on or set Pr.08-10 to 1 to get the magnetic pole orientation

09 Communication Parameters

When using communication devices, connects AC drive with PC by using Delta IFD6530 or IFD6500.

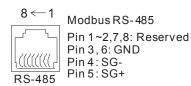

Factory Setting:1

Settings 1~254

If the AC motor drive is controlled by RS-485 serial communication, the communication address for this drive must be set via this parameter. And the communication address for each AC motor drive must be different and unique.

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:19.2

Settings 4.8~115.2kbits/s

This parameter is used to set the transmission speed between the RS485 master (PLC, PC, etc.) and AC motor drive.

★ ## Transmission Fault Treatment

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:3

Settings 0: Warn and keep operating

1: Warn and RAMP to stop

2: Reserved

3: No action and no display

This parameter is set to how to react if transmission errors occur.

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:0.0

Settings 0.0~100.0sec

0.0: disable

lt is used to set the communication time-out time.

Communication Protocol

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:13

Settings 0:7, N, 1 for ASCII

1:7, N, 2 for ASCII

2:7,E,1 for ASCII

3:7,0,1 for ASCII

4:7,E,2 for ASCII

5:7,0,2 for ASCII

6:8,N,1 for ASCII

7:8, N, 2 for ASCII

8:8,E,1 for ASCII

9:8,O,1 for ASCII

10:8, E, 2 for ASCII

11:8, O, 2 for ASCII

12:8, N, 1 for RTU

13:8, N, 2 for RTU

14:8, E, 1 for RTU

15:8,0,1 for RTU

16: 8, E, 2 for RTU

17:8,0,2 for RTU

Control by PC or PLC (Computer Link)

Users can select the desired mode along with the RS-485 serial port communication protocol in Pr.09-00.

MODBUS ASCII (American Standard Code for Information Interchange): Each byte data is the combination of two ASCII characters. For example, a 1-byte data: 64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex).

1. Code Description:


Communication protocol is in hexadecimal, ASCII: "0", "9", "A", "F", every 16 hexadecimal represents ASCII code. For example:

Character	'0'	'1'	'2'	'3'	'4'	'5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H
Character	'8'	'9'	'A'	'B'	'C'	'D'	'E'	'F'
ASCII code	38H	39H	41H	42H	43H	44H	45H	46H

2. Data Format

10-bit character frame (For ASCII):


(Format: 7, N, 2)

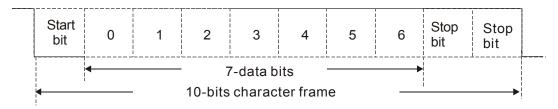

(Format: 7, E, 1)




(Format: 7, O, 1)

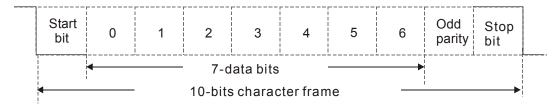


11-bit character frame (For RTU)


(Format: 8, N, 2)

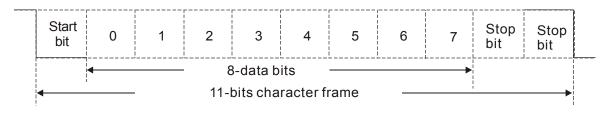

(Format: 8, E, 1)

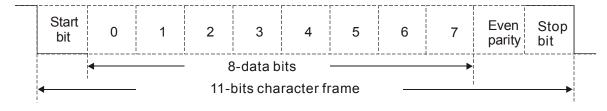

(Format 8, 0, 1)

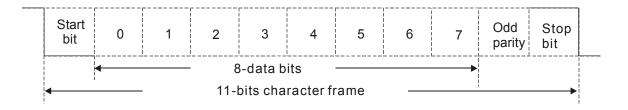

3. Communication Protocol

3.1 Communication Data Frame

ASCII mode

STX	Start character ':' (3AH)
Address Hi	Communication address:
Address Lo	8-bit address consists of 2 ASCII codes
Function Hi	Command code:
Function Lo	8-bit command consists of 2 ASCII codes
DATA (n-1)	Contents of data:
to	Nx8-bit data consist of 2n ASCII codes
DATA 0	n<=16, maximum of 32 ASCII codes
LRC CHK Hi	LRC check sum:
LRC CHK Lo	8-bit check sum consists of 2 ASCII codes
END Hi	End characters:
END Lo	END1= CR (0DH), END0= LF(0AH)

RTU mode:

START	A silent interval of more than 10 ms
Address	Communication address: 8-bit address
Function	Command code: 8-bit command
DATA (n-1)	Contents of data:
to DATA 0	n×8-bit data, n<=16
CRC CHK Low	CRC check sum:
CRC CHK High	16-bit check sum consists of 2 8-bit characters
END	A silent interval of more than 10 ms

3.2 Address (Communication Address)

Valid communication addresses are in the range of 0 to 254. A communication address equal to 0 means broadcast to all AC drives (AMD). In this case, the AMD will not reply any message to the master device.

00H: broadcast to all AC drives

01H: AC drive of address 01

0FH: AC drive of address 15

10H: AC drive of address 16

:

FEH: AC drive of address 254

3.3 Function (Function code) and DATA (data characters)

The format of data characters depends on the function code.

(1) 03H: read data from register

Example: reading continuous 2 data from register address 2102H, AMD address is 01H.

ASCII mode:

Command Message:

Command Message:				
STX	,			
Address	'0'			
Address	'1'			
Function	'0'			
1 diletion	'3'			
	'2'			
Starting address	'1'			
Starting address	'0'			
	'2'			
	'0'			
Number of data	'0'			
(count by word)	'0'			
	'2'			
LRC Check	'D'			
LIVE CHECK	'7'			
END	CR			
LIND	LF			

STX	· · ·
	'0'
Address	'1'
Function	'0'
Function	'3'
Number of data	'0'
(count by byte)	'4'
	'1'
Content of starting	'7'
address 2102H	'7'
	'0'
	'0'
Content of address 2103H	'0'
Content of address 2 10311	'0'
	'0'
LRC Check	'7'
LIVO OTIECK	'1'
END	CR
LIND	LF

RTU mode:

Command & Message:

Response Message:	Res	ponse	Message:	
-------------------	-----	-------	----------	--

Address	01H
Function	03H
Starting data address	21H
Starting data address	02H
Number of data	00H
(count by world)	02H
CRC CHK Low	6FH
CRC CHK High	F7H

Address	01H
Function	03H
Number of data (count by byte)	04H
Content of data	17H
address 2102H	70H
Content of data	00H
address 2103H	00H
CRC CHK Low	FEH
CRC CHK High	5CH

(2) 06H: single write, write single data to register.

Example: writing data 6000(1770H) to register 0100H. AMD address is 01H.

ASCII mode:

Command & Message:

Response Message:

STX	4.7
Address	'0'
	'1'
Function	'0'
	'6'
	'0'
Data address	'1'
Data address	'0'
	'0'
	'1'
Data content	'7'
Data content	'7'
	'0'
LDC Chook	'7'
LRC Check	'1'
END	CR
	LF
<u> </u>	

STX	·.'
Address	'0'
	'1'
Function	'0'
	' 6'
	'0'
Data address	'1'
Data address	'0'
	'0'
	'1'
Data content	'7 '
Data content	'7 '
	'0'
LDC Chook	'7 '
LRC Check	'1'
END	CR
	LF

RTU mode:

Command & Message:

Command & Message.	
Address	01H
Function	06H
Data address	01H
	00H
Data content	17H
	70H
CRC CHK Low	86H
CRC CHK High	22H

Response Message:

Address	01H
Function	06H
Data address	01H
	00H
Data content	17H
	70H
CRC CHK Low	86H
CRC CHK High	22H

(3) 10H: write multiple registers (write multiple data to registers) (at most 20 sets of data can be written simultaneously)

Example: Set the multi-step speed,

Pr.04-00=50.00 (1388H), Pr.04-01=40.00 (0FA0H). AC drive address is 01H.

ASCII mode

Command Message:

Command Message.	
STX	4.7
ADR 1	'0'
ADR 0	'1'
CMD 1	'1'
CMD 0	'0'
Target Register	'0'
	' 5'
	'0'
	' 0'

Response M	Message:
------------	----------

STX	.,,	
ADR 1	'0'	
ADR 0	'1'	
CMD 1	'1'	
CMD 0	'0'	
Target Register	'0'	
	' 5'	
	'0'	
	'0'	

Number of Register (Count by word)	'0'
	'0'
	'0'
	'2'
Number of Register	'0'
(Count by byte)	'4'
	'1'
The first data content	'3'
The first data content	'8'
	'8'
	'0'
	'F'
The second data content	'A'
	'0'
LRC Check	'9'
	'A'
END	CR
	LF

Number of Register (Count by word)	.0,
	' 0'
	' 0'
	'2'
LRC Check	'E'
	'8'
END	CR
	LF

RTU mode

Command Message:

Oommand Moc	ougo.
ADR	01H
CMD	10H
Target	05H
Register	00H
Number of Register	00H
(Count by word)	02H
Number of Register(Byte)	04
The first	13H
Data content	88H
The second	0FH
Data content	A0H
CRC Check Low	·9'
CRC Check High	'A'

Response:

ADR	01H
CMD 1	10H
Target	05H
Register	00H
Number of Register	00H
(Count by word)	02H
CRC Check Low	41H
CRC Check High	04H

3.4 Check Sum

ASCII mode (LRC Check)

LRC (Longitudinal Redundancy Check) is calculated by summing up the values of the bytes from ADR1 to the last data character then calculating the hexadecimal representation of the 2's-complement negation of the sum.

For example,

01H+03H+21H+02H+00H+02H=29H, the 2's-complement negation of 29H is **D7**H.

RTU mode (CRC check)

- CRC (Cyclical Redundancy Check) is calculated by the following steps:
- Step 1: Load a 16-bit register (called CRC register) with FFFFH.
- **Step 2:** Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.
- Step 3: Examine the LSB of CRC register.
- **Step 4:** If the LSB of CRC register is 0, shift the CRC register one bit to the right with MSB zero filling, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right with MSB zero filling, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.
- **Step 5:** Repeat step 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.
- **Step 6:** Repeat step 2 to 5 for the next 8-bit byte of the command message. Continue doing this until all bytes have been processed. The final contents of the CRC register are the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, i.e. the lower order byte will be transmitted first.

The following is an example of CRC generation using C language. The function takes two arguments:

```
unsigned char* data ← // a pointer to the message buffer
unsigned char length \leftarrow // the quantity of bytes in the message buffer
unsigned int crc_chk(unsigned char* data, unsigned char length)
   {
   int j;
   unsigned int reg_crc=0Xffff;
   while(length--){
      reg_crc ^= *data++;
      for(j=0;j<8;j++){
      if(reg_crc & 0x01){ /* LSB(b0)=1 */
         reg_crc=(reg_crc>>1) ^ 0Xa001;
      }else{
        reg_crc=reg_crc >>1;
     }
   }
}
                                       // return register to CRC
return reg_crc;
```

3.5 Address List

The contents of available addresses are shown as below:

Content	Address		Function				
		GG means pa	GG means parameter group, nn means parameter number, for example, the				
AC drive		address of Pr 4-01 is 0401H. Referencing to chapter 5 for the function of each					
Parameters	GGnnH	parameter. When reading parameter by command code 03H, only one parameter					
		can be read a					
			0: No function				
Command			1: Stop				
Write only	2000H	Bit 0-3	2: Run				
vviito omy			3: Jog + Run				
			00B: No function				
			01B: FWD				
		Bit 4-5	10B: REV				
			11B: Change direction				
			00B: 1st accel/decel				
			01B: 2nd accel/decel				
		Bit 6-7	10B: 3rd accel/decel				
			11B: 4th accel/decel				
		Bit 8-11	Represented 16 step speeds.				
		Dit 0-11	Represented to step speeds.				
		Bit 12	4 11 11 12 22 44				
			1: disable bit 06-11				
		Bit 13~14	00B: No function				
			01B: operated by digital keypad				
			02B: operated by Pr.00-15 setting				
			03B: change operation source				
		Bit 15	Reserved				
	2001H	Frequency co	mmand				
	2002H	Bit 0	1: EF (external fault) on				
		Bit 1	1: Reset				
		Bit 2	1: B.B. ON				
		Bit 3-15	Reserved				
	2100H	Fault code: refer to Pr.06-16 to Pr.06-21					
		Bit 0-Bit 1 00: Stop					
			01: deceleration				
			10: Ready for operation				
			11: operation				
		Bit 2	1:JOG command				
			00: FWD command, FWD output				
			01: FWD command, REV output				
Status monitor		Bit 3-Bit 4	10: REV command, FWD output				
Read only			11: Reserved				
	2119H	Bit 5	Reserved				
		Bit 6	Reserved				
		Bit 7	Reserved				
		Bit 8	1: Master frequency Controlled by communication interface				
		Bit 9	Master frequency controlled by analog/external terminals signal				
		Bit 10	Operation command controlled by communication interface				
		Bit 11	1: Parameters have been locked				
		Bit 12	1: enable to copy parameter from keypad				
		Bit 13-15	Reserved				
	24021						
	2102H	Frequency co					
	2103H	Output freque					
	2104H	Output curren					
	2105H						
	2106H						
	2107H		number of Multi-Step Speed Operation				
	2116H		display (Pr.00-04)				
	2120H		mmand when malfunction				
		Output frequency when malfunction Output current when malfunction					
	2121H 2122H						

Content	Address	Function
	2123H	Motor frequency when malfunction
	2124H	Output voltage when malfunction
	2125H	DC-bus voltage when malfunction
	2126H	Output power when malfunction
	2127H	Output torque when malfunction
	2128H	IGBT Temperature of Power Module at Present Fault
	2129H	Input status of multi-function terminal when malfunction (format is the same as
		Pr.00-04=16)
	212AH	Output status of multi-function terminal when malfunction (format is the same as
		Pr.00-04=17)
	212BH	Drive status when malfunction (format is the same as 2119H)
	2201H	Pr.00-05 user-defined setting
	2203H	AUI1 analog input (XXX.XX %)
	2204H	ACI analog input (XXX.XX %)
	2205H	AUI2 analog input (XXX.XX %)
	2206H	Display temperature of IGBT (°C)
	2207H	Display temperature of heatsink (°C) (only for model 40HP and above)
	2208H	Digital input state
	2209H	Digital output state

3.6 Exception Response

The AC motor drive is expected to return a normal response after receiving command messages from the master device. The following depicts the conditions when no normal response is replied to the master device.

The AC motor drive does not receive the messages due to a communication error; thus, the AC motor drive has no response. The master device will eventually process a timeout condition.

The AC motor drive receives the messages without a communication error, but cannot handle them. An exception response will be returned to the master device and an error message "CExx" will be displayed on the keypad of AC motor drive. The xx of "CExx" is a decimal code equal to the exception code that is described below.

In the exception response, the most significant bit (bit7) of the original command code is set to 1 (function code and 80H), and an exception code which explains the condition that caused the exception is returned.

Example:

ASCII	mode:
,	

STX	، ، · ·
Address	'0'
Address	'1'
Function	'8'
FullClion	'6 '
Exception code	'0'
Exception code	'2'
LRC CHK	'7'
LKC CHK	'7'
END	CR
END	LF

RTU mode

Address	01H
Function	86H
Exception code	02H
CRC CHK Low	C3H
CRC CHK High	A1H

Description of Exception Codes:


Exception Code	Description
1	Illegal function code:
	The function code received in the command message is not available for the AC
	motor drive.
2	Illegal data address:
	The data address received in the command message is not available for the AC
	motor drive.
3	Illegal data value:
	The data value received in the command message is not available for the AC
	drive.
4	Slave device failure:
	The AC motor drive is unable to perform the requested action.
10	Communication time-out:
	If Pr.09-03 is not equal to 0.0, Pr.09-02=0~1, and there is no communication on
	the bus during the Time Out detection period (set by Pr.09-03), "cE10" will be
	shown on the keypad.

★ \$\frac{1}{3} \frac{1}{3} \frac{1}{3} \frac{1}{3}\$ Response Delay Time

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Factory Setting:2.0

Settings 0.0~200.0ms

In case if the host computer didn't finish the transmitting/receiving process, this parameter is the response delay time after AC drive receives communication command as shown in the following.

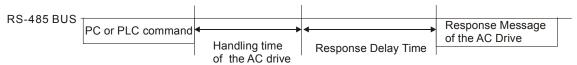

Settings Contact Delta for more information

10 Speed Feedback Control Parameters

In this parameter group, ASR is the abbreviation for Adjust Speed Regulator and PG is the abbreviation for Pulse Generator.



Selection of Encoder

Control Mode VFPG FOCPG TQCPG FOCPM Factory Setting: 0

Settings 0: Disable

1: ABZ

2: ABZ+Hall

3: SIN/COS + Sinusoidal

4: SIN/COS + Endat

5: SIN/COS

6: SIN/COS + Hiperface

When Pr.10-00 is set to 3, encoder will have one sine and one cosine signal for each revolution. The signal must be: 0.75 to 1.2Vpp for the amplitude with phase angle 90°±5 elec. (EX: ERN 1185 ERN 1387)

When setting is 4 or 6, it needs to wait for 2 seconds after applying the power to execute RUN command.

Detection of the magnetic pole:

Setting 1 or 5: The AC motor drive will output short circuit to detect the position of the magnetic pole. At this moment, the motor will generate a little noise.

Setting 2: The AC motor drive will detect the position of the magnetic pole by the UVW signal of encoder.

Setting 3: The AC motor drive will detect the position of the magnetic pole by the sine signal of encoder.

Setting 4 or 6: The AC motor drive will detect the position of the magnetic pole by the communication signal of encoder.


Reference table for tuning

Setting of PG signal type	PG signal type	Applicable PG card	Pr.08-00=1	Pr.08-00=3
10-00=1	A, B, Z	EMED-PGAB/ABD-1	N/A	N/A
10-00=2	A, B, Z+U, V, W	EMED-PGABD-1	Rolling test*1	Rolling test*1
10-00=3	SIN/COS+ Sinusoidal	EMED-PGHSD-1	Rolling test*1	Rolling test*1
10-00=4	SIN/COS+Endat	EMED-PGSD-1	Dynamic test*1	Static test*1
10-00=5	SIN/COS	EMED-PGHSD-1	N/A	N/A
10-00=6	SIN/COS + Hiperface	EMED-PGHSD-1	Dynamic test*1	Static test*1

^{*1} Static: Brake engaged, no motor running/ Dynamic: Brake released, motor rotates less than one round/ Rolling: Brake released, motor rotates more than one round.

## - # Enco	der Pulse		
Control Mode	VFPG	FOCPG TQCPG FOCPM	Factory Setting:2048
Settin	ngs 1~25000		

A Pulse Generator (PG) or encoder is used as a sensor that provides a feedback signal of the motor speed. This parameter defines the number of pulses for each cycle of the PG control.

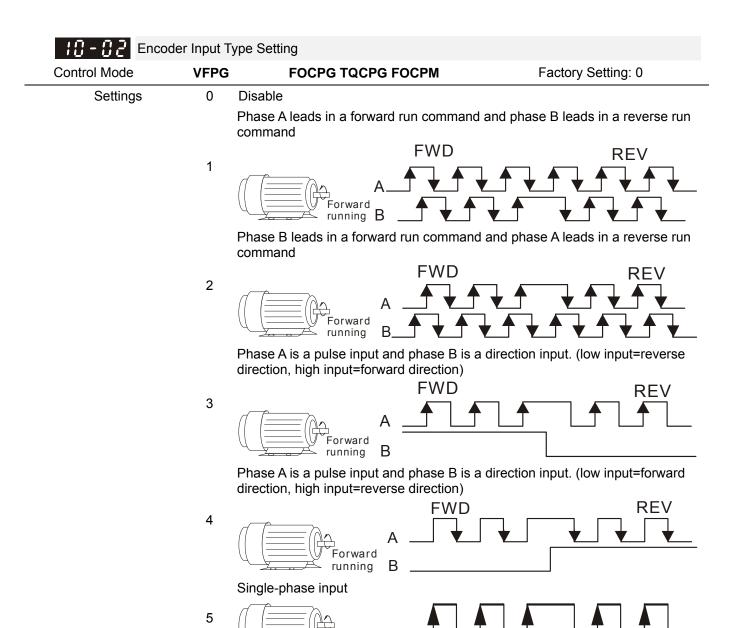


- It is helpful for the stable control by inputting correct pulse type.
- When Pr10-00 is set as 3, 4, 5 or 6, Pr10-02 can only be set as 0, 1 or 2, while 3, 4 and 5 cannot be chosen.

Forward running

Encoder Feedback Fault Treatment (PGF1, PGF2) **VFPG** Control Mode **FOCPG TQCPG FOCPM** Factory Setting:2 Settings 0: Warn and keep operation 1: Fault and RAMP to stop 2: Fault and stop operation **Detection Time for Encoder Feedback Fault** Control Mode **VFPG FOCPG TQCPG FOCPM** Factory Setting: 1.0 0.0~10.0sec Settings


When PG loss, encoder signal error, pulse signal setting error or signal error, if time exceeds the detection time for encoder feedback fault (Pr.10-04), the PG signal error will occur. Refer to the Pr.10-03 for encoder feedback fault treatment.

√ 18-85	Encoder	Stall Lev	rel (PG	6F3)		
Control Mode		VFPG	SVC	FOCPG	FOCPM	Factory Setting:115
	Settings	0~120	0%			
		0: Dis	able			
•	meter de equency F			ximum encode	er feedback signal	allowed before a fault occurs. (max.
10-08	Encoder	Stall Det	ection ⁻	Time (maximur	n output frequenc	y 01-00=100%)
Control Mode		VFPG	svc	FOCPG	FOCPM	Factory Setting:0.1
	Settings	0.0~2	.0sec			
√ { () - () }	Encoder	Slip Ran	ge (F	PGF4) (maxim	um output freque	ncy 01-00=100%)
Control Mode		VFPG	SVC	FOCPG	FOCPM	Factory Setting:50
	Settings	0~50	%			
		0: Dis	able			
10-08	Encoder	Slip Dete	ection 7	īme (maximun	n output frequency	<i>(</i> 01-00=100%)
Control Mode		VFPG	SVC	FOCPG	FOCPM	Factory Setting:0.5
	Settings	0.0~1	0.0sec			
18-89	Encoder	Stall and	I Slip E	rror Treatment	(maximum output	frequency 01-00=100%)
Control Mode		VFPG	SVC	FOCPG	FOCPM	Factory Setting:2
	Settings	0: Wa	rn and	keep operating	9	
		1: Fa	ult and	RAMP to stop		
				d COAST to st	<u>'</u>	
Pr.10-08	or motor f Pr.10-06,	frequenc	y excee	eds Pr.10-05 se	etting, it will start to	10-07 setting, detection time exceeds accumulate time. If detection time fer to Pr.10-09 encoder stall and slip
10 - 10	Mode Se	election fo	or UVW	' Input		
Control Mode		VFPG		FOCPG TQC	PG FOCPM	Factory Setting: 0
	Settings	0: Z s	ignal is	at the falling e	dge of U-phase	
		1: Z s	ignal is	at the rising e	dge of U-phase	
_		•		_		g edge of U-phase. edge of U-phase.

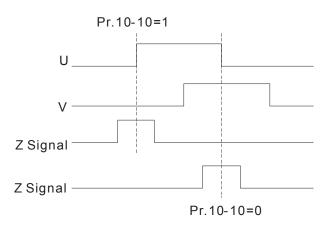


₩	ASR (Au	uto Speed	d Regul	ation) Conti	rol (P) of Zero Speed	
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:100.0
	Settings	0.0~1	000.0%	, 0		
× 10 - 18	ASR (Au	uto Speed	d Regul	ation) Conti	rol (I) of Zero Speed	
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:0.100
	Settings	0.000	~10.00	0sec		
× 18-13	ASR (Au	uto Speed	d Regul	ation) contr	ol (P) 1	
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:100.0
	Settings	0.0~1	000.0%	, D		
× -	ASR (A	Auto Spee	ed Regu	ılation) conf	trol (I) 1	
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:0.100
	Settings	0.000	~10.00	0sec		
~ 18 - 15	ASR (Au	uto Speed	d Regul	ation) contr	ol (P) 2	
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:100.0
	Settings	0.0~1	000.0%	Ď		
× 18 - 18	ASR (Au	uto Speed	d Regul	ation) contr	ol (I) 2	
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:0.100
	Settings	0.000	~10.00	0sec		
✓ - -	ASR 1/A	ASR2 Swi	tch Fre	quency		
Control Mod	e VF	VFPG	SVC	FOCPG	FOCPM	Factory Setting:7.00
	Settings	0.00~	400.00	Hz		
		0: Dis	able			

- ASR P determines Proportional control and associated gain (P). ASR I determines integral control and associated gain (I).
- When integral time is set to 0, it is disabled. Pr.10-17 defines the switch frequency for the ASR1 (Pr.10-13, Pr.10-14) and ASR2 (Pr.10-15, Pr.10-16).

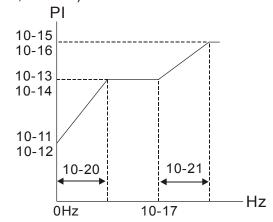

When using multi-function input terminals to switch ASR1/ASR2, the diagram will be shown as follows.

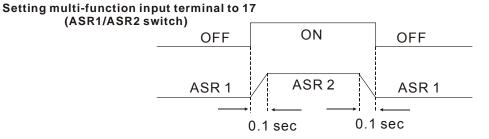

ASR Primary Low Pass Filter Gain

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.008

Settings 0.000~0.350sec

lt defines the filter time of the ASR command.

When setting to 1, this function is disabled.

✓ ☐ Zero Speed Gain (P)

Control Mode FOCPM Factory Setting:80.00

Settings 0~655.00%

When Pr.11-00 is set to Bit 7=1, Pr.10-19 is valid

✓ III - ZIII Zero Speed/ASR1 Width Adjustment

Control Mode VFPG FOCPG FOCPM Factory Setting: 5.00


Settings 0.00~400.00Hz

ASR1/ASR2 Width Adjustment

Control Mode VFPG FOCPG FOCPM Factory Setting: 5.00

Settings 0.00~400.00Hz

These two parameters are used to decide width of slope of ASR command during zero speed to low speed or Pr.10-17 to high speed.

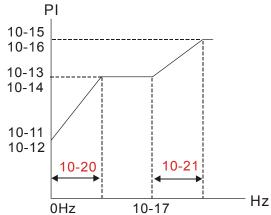



Control Mode FOCPM Factory Setting: 0.250

Settings 0.001~65.535 sec

Filter Time at Zero Speed

Control Mode FOCPM Factory Setting:0.004

Settings 0.001~65.535 sec

Control Mode FOCPM Factory Setting: 0

Settings 0:After the brake release set in Pr.02-29

1: After the brake signal input (Pr.02-01~02-08 is set to 42)

When Pr.10-24=0, the zero speed control needs to be used with Pr.02-29. (refer to the explanations in Pr.02-32)

Elevator Leveling (Zero Speed Gain P)

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:100.0

Settings 0~1000.0%

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting: 0.100

Settings 0.000~10.000sec.


Elevator Starting (Zero Speed Gain P)

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:100.0

Settings 0.0~1000.0%

Elevator Starting (Zero Speed Integral I)

Control Mode VF VFPG SVC FOCPG FOCPM Factory Setting:0.100

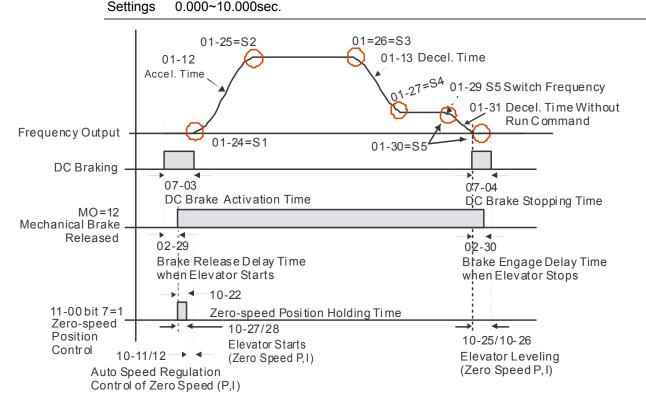

Setting of PG card frequency division output Factory Setting: 0 **FOCPG** Control Mode **VFPG FOCPM** 0~31 Settings ¦U - 3U Type of PG card frequency division output Factory Setting: 0000h Control Mode **VFPG FOCPG FOCPM** Settings 0000h~0008h

See CH07 for more information about PG card.

Type of PG card frequency division output

Control Mode

VFPG

FOCPG

FOCPM

Factory Setting: 0000h

Settings 0000h~0008h

When using Heidenhain ERN1387 encoder, adjust the definition of Delta PG card EMED-PGHSD-1's terminal 10 and terminal 11 by through Pr10-31.

Delta PG card: EMED-PGHSD-1 (D-sub Terminal #)



	Heidenhain ERN1387					
Terminal #	10-31=0000h	10-31=0001				
10	C-	C+				
11	C+	C-				

11 Advanced Parameters

Control Mode FOCPG FOCPM Factory Setting: 0

Settings Bit 0=0: No function

Bit 0=1: ASR Auto tuning, PDFF enable

Bit 7=0: No function

Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02 (DC Brake

Current Level)


Bit 9=0: Rolling PG Origin auto-tuning with load (support by PGHSD-1) Bit 9=1: Static PG Origin auto-tuning with load by enabling PGHSD-1


Bit 15=0: When power is applied, it will detect the position of magnetic pole again

Bit 15=1: when power is applied, it will start from the magnetic pole position of

previous power failure

Bit 0=1: PDFF function is enabled and system will generate an ASR setting, Pr. 10-11~10-16 will be invalid and Pr.11-09 to 11-10 will be valid.

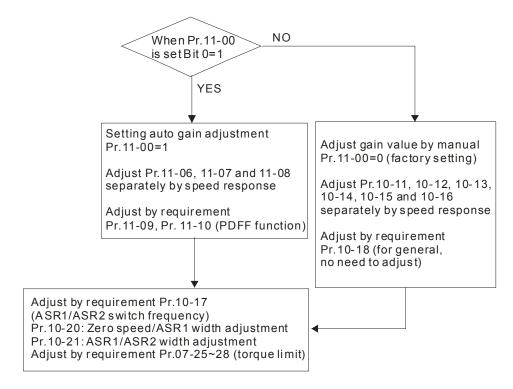

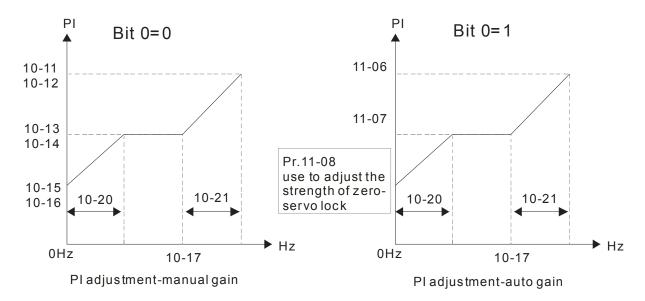

Elevator Speed

Control Mode FOCPG FOCPM Factory Setting:1.00

Settings 0.10~4.00 m/s

Control Mode FOCPG FOCPM Factory Setting:400

Settings 100~2000 mm

Mechanical Gear Ratio

Control Mode FOCPG FOCPM Factory Setting:1


Settings 1~100

Suspension Ratio

Control Mode FOCPG FOCPM Factory Setting:1

Settings 0= 1 : 1

1= 2 : 1

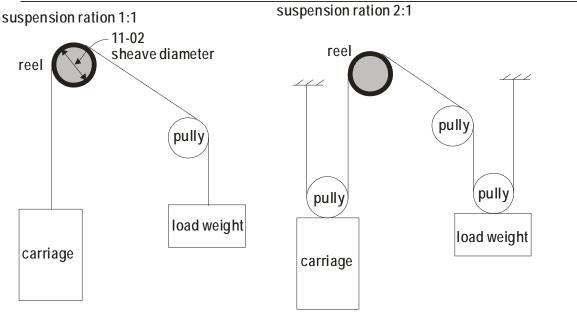

M	11-05	Inertial Ratio

Control Mode FOCPG FOCPM Factory Setting:40

Settings 1~300%

The load inertia can be calculated by the settings of motor parameter, Pr.11-02 Sheave Diameter, Pr.11-14 Motor Current at Accel. and Pr.11-15 Elevator Acceleration. This parameter can be used to adjust inertia ratio of load.

Control Mode FOCPG FOCPM Factory Setting:10

Settings 1~40Hz

Low-speed Bandwidth

Control Mode FOCPG FOCPM Factory Setting:10

Settings 1~40Hz

Control Mode FOCPG FOCPM Factory Setting:10

Settings 1~40Hz


After estimating inertia and set Pr.11-00=1 (auto tuning), user can adjust parameters Pr.11-06, 11-07 and 11-08 separately by speed response. The larger number you set, the faster response you will get. Pr.10-08 is the switch frequency for low-speed/high-speed bandwidth.

PDFF Gain Value

Control Mode FOCPG FOCPM Factory Setting:30

Settings 0~200%

- After finishing estimating and set Pr.11-00=1 (auto tuning), using Pr.11-09/11-10 to reduce overshoot. Please adjust PDFF gain value by actual situation.
- Besides traditional PI control, it also provides PDFF function to reduce overshoot for speed control.
 - 1. Get system inertia
 - 2. Set Pr.11-00 to 1
 - 3. Adjust Pr.11-09/11-10 (the larger number is set and the suppressed overshoot function will be better. But it needs to be used by the actual condition)

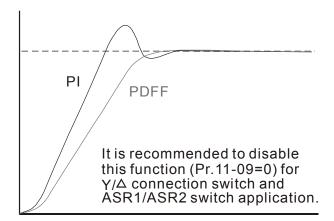

M | | - | Gain for Speed Feed Forward

Control Mode FOCPG FOCPM Factory Setting: 0

Settings 0~500

Pr.11-09 and Pr.11-10 will be enabled when Pr.11-00 is set to Bit0=1.

×	-	Notch Filte	r Depth			
	Control Mode			FOCPG	FOCPM	Factory Setting: 0
		Settings	0~20db			
N	11-12	Notch Filte	r Frequency			
	Control Mode			FOCPG	FOCPM	Factory Setting:0.00
		Settings	0.00~200.001	Hz		
	This para	meter is us	ed to set resor	nance frequency	of mechanical system. It	can be used to suppress the
	resonanc	e of mecha	nical system.			
	The large	r number y	ou set Pr.11-1	1, the better supp	pression resonance functi	ion you will get.
	The notch filter frequency is the resonance of mechanical frequency.					

N - - Low-pass F	ilter Time of Keypad Display	
_	FPG SVC FOCPG TQCPG FOC	PM Factory Setting:0.500
Settings	0.001~65.535 sec	
It is used to lower the	blinking frequency of LCD display.	
Motor Curre	ent at Accel.	
Control Mode	FOC	PM Factory Setting:150
Settings	50~200%	
; ; - ; 5 Elevator Ac	celeration	
Control Mode	FOC	PM Factory Setting:0.75
Settings	0.20~2.00m/s ²	
Reserved		
	FPG SVC FOCPG TQCPG FOC	PM Factory Setting: 0
Settings	0000h~FFFFh	
Reserved		
Control Mode VF VI	FPG SVC FOCPG TQCPG FOC	PM Factory Setting: #.##
Settings	Read Only	
Reserved		
	FPG SVC FOCPG TQCPG FOC	PM Factory Setting: #.##
Settings	0000h~FFFFh	
₩ - Q Zero-speed	Holding Bandwidth	
Control Mode	FOCPG FOC	PM Factory Setting:10
	1~40Hz	

12 User-defined Parameters

		ai aiiiot	010		
× 12-00	Present Fault Rec	ord			
Control Mode	e VF VFPG	SVC FO	CPG TQCPG FO	СРМ	Factory Setting: #.##
	Settings 0616				
× 12-0:	Present Fault Time	e of Motor (Operation (min.)		
Control Mode	e VF VFPG	SVC FO	CPG TQCPG FO	СРМ	Factory Setting: #. ##
	Settings 0632				
× 12-02	Present Fault Time	e of Motor (Operation (<i>day</i>)		
Control Mode	VF VFPG	SVC FOO	CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0633				
× 12-03	Frequency Comma	and at Pres	sent Fault		
Control Mode	VF VFPG	SVC FOO	CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0653				
× 12-84	Output Frequency	at Preset F	-ault		
Control Mode			CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0654				
× 12-85	Output Current at I	Present Fa	ult		
Control Mode	e VF VFPG	SVC FOO	CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0655				
× 12-08	Motor Frequency a	at Present F	Fault		
Control Mode	VF VFPG	SVC FOO	CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0656				
× 12-87	Output Voltage at I	Present Fa	ult		
Control Mode	-		CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0657				
× 12-88	DC-Bus Voltage at	Present F	ault		
Control Mode	VF VFPG	SVC FOO	CPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0658				
× 12-89	Output Power at P	resent Fau	lt		
Control Mode	VF VFPG	SVC FOC	PG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0659				
	-				

Output Torque at Present Fault	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Settings 0660	Factory Setting:#.##
✓ ; ¿ - ; ; IGBT Temperature of Power Module at Present Fault	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0661	
Multi-function Terminal Input Status at Present Fault	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0662	
Multi-function Terminal Output Status at Present Fault Control Mode VF VFPG SVC FOCPG TOCPG FOCPM	Footony Cotting # ##
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Settings 0663	Factory Setting:#.##
Drive Status at Present Fault	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0664	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0617	
Second Most Recent Fault Time of Motor Operation (min	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM Settings 0634	Factory Setting:#.##
Settings 0034	
Second Most Recent Fault Time of Motor Operation (day	')
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0635	
/ 13 - 10 Third Most December Foult December	
Third Most Recent Fault Record Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0618	. dotory country.ii.iii
Third Most Recent Fault Time of Motor Operation (min.)	
Control Mode VF VFPG SVC FOCPG TQCPG FOCPM	Factory Setting:#.##
Settings 0636	

				OITIZ D	escription of Farameter Settings
× 12-28	Third Most Rece	nt Fault	Time of Motor Oper	ration (day)	
Control Mod	e VF VFPG	svc	FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0637				
× 12-21	Fourth Most Rec	ent Fau	ılt Record		
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0619				
w 12-22	Fourth Most Rec	ent Fau	ılt Time of Motor Ope	eration (min.)	
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0638				
× 12-23	Fourth Most Rec	ent Fau	ılt Time of Motor Ope	eration (min.)	
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0639				
w 12-24	Fifth Most Recen	t Fault	Record		
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0620				, 0
× 12-25	Fifth Most Recen	t Fault	Time of Motor Opera	ation (min.)	
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0640				, ,
× 12-28	Fifth Most Recen	t Fault	Time of Motor Opera	ation (day)	
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0641				, ,
× :2-23	Sixth Most Recei	nt Fault	Record		
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0621				, 0
× 12-28	Sixth Most Recei	nt Fault	Time of Motor Oper	ration (min.)	
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0642	-		-	, 3
/ 10_0Q	Sixth Most Rece	nt Fault	Time of Motor Oper	ration (dav)	
Control Mod			FOCPG TQCPG	FOCPM	Factory Setting:#.##
	Settings 0643	-		-	, 3

12-00

User-defined Parameters

12-31

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM

Factory Setting:-

Settings -

- Users can enter the parameters from group 0 to group 11 into group 12 (it can save 32 parameters). The saved value can also be the parameter addresses (but the hexadecimal value needs to be converted to decimal value).
- Example 2: If it needs to enter parameter address 2102H and 211BH by the digital keypad, 211BH needs to be converted to binary value before entering.

 The setting method of 2102H

Examples of User-defined parameters

Example 1: If you want to enter Pr.08-03 into Pr.12-00, you only need to enter 0803 into Pr.12-00. Then it will display the setting of Pr.08-03 in Pr.13-00.

Example 2: If it needs to enter parameter address 2102H and 211BH by the digital keypad, 211BH needs to be converted to binary value before entering.

The setting method of 211BH

Convert 211BH (hexadecimal) to decimal value:

2 1 1 B 1x16¹+11x16⁰=16+11=27 input 2127

13 View User Defined Parameters

View User Defined Parameters

Control Mode VF VFPG SVC FOCPG TQCPG FOCPM

Factory Setting:-

Settings -Pr00-00 to Pr11-19

13 Warning Codes

- ① Warning
 ② CE01
 ③ Comm. Error 1
- ① Display error signal
- 2 Abbreviated error code The code is displayed as shown on KPC-CE01.
- 3 Display error description

ID No.	Display on	Display on LCM Keypad	Descriptions	
ID No.	KPE-LE01			
1	C & O I	CE01 Warning CE01 Comm. Cmd. Err	Communication command defected Cause Communication error	
2	5603	CE02 Warning CE02 Data Adrr. Err	Address of data defected Cause Communication error	
3	0803	CE03 Warning CE03 Data Length Err	Length of communication data defected Cause Communication error Communication error	
4	C E O Y	CE04 Warning CE04 Wrong Writing	Communications being written in a read only address. Cause Communication error	
5	C E 10	CE10 Warning CE10 Comm. Time Out	Modbus transmission time-out Cause Communication error	
6	CP 10	CP10 Warning CP10 Keypad time out	Keypad KPC-CC01 transmission time-out Cause Communication error	
7	58 :	Warning SE1 Keypad Copy Err	Keypad copying parameter error 1 Cause Keypad simulation error, including communication delays, communication error (keypad received error FF86) and parameter value error.	
8	582	SE2 Warning SE2 Keypad Copy Fail	Keypad copying parameter fail error 2 Cause keypad simulation done but parameter write error	

ID No.	Display on KPE-LE01	Display on LCM Keypad	Descriptions
9	o# !	OH1 Warning OH1 IGBT Over Heat	IGBT over-heating warning Cause The temperature of the IGBT are over the factory setting 90°C (Pr06-14).
10	o#2	oH2 Warning oH2 Capacitance oH	Capacitor over-heating warning Cause The temperature of the capacitor is over 65°C
15	P9F 1	PGF1 Warning PGF1 PGFBK warn	PG card feedback error Cause When Pr10-03 = 0 (factory setting = 2), a warning message will be displayed instead of a fault message while an error occurs.
16	P9F2	PGF2 Warning PGF2 PGFBK Loss	PG feedback loss warning Cause Pr10-03 = 0 (factory setting = 2), a warning message will be displayed instead of a fault message while an error occurs.
17	P9F3	PGF3 Warning PGF3 PGFBK Stall	PG feedback stall warning Cause Pr10-09 = 0 (factory setting = 2), a warning message will be displayed instead of a fault message while an error occurs.
18	P9F4	PGF4 Warning PGF4 PG Slip Err	PG slip warning Cause Pr10-09 = 0 (factory setting = 2), a warning message will be displayed instead of a fault message while an error occurs.
19	PHL	PHL Warning PHL Phase Loss	Phase loss Cause When Pr06-01 =0 (factory setting = 2), a warning message will be given instead of a fault message while a phase loss occurs.
20	ot 1	Ot1 Warning ot1 Over Torque 1	Over torque 1 Cause When Pr06-05 =1 or 3 (factory setting = 2), a warning message will be given instead of a fault message while there is an over torque detection.
21	ot2	Ot2 Warning ot2 Over Torque 2	Over torque 2 Cause When Pr06-05 =1 or 3 (factory setting = 2), a warning message will be given instead of a fault message while there is an over torque detection.
22	o X 3	OH3 Warning OH3 Motor Over Heat (PTC)	Motor over-heating (PTC) Cause When Pr06-26 =1 (factory setting = 0), a warning message will be given when there is a PTC detection.

ID No.	Display on	Display on LCM Keypad	Descriptions
ID NO.	KPE-LE01		
24	oSL	oSL Warning oSL Over Slip Warn	Over slip Cause When Pr05-16 =0 (factory setting = 0), a warning message will be given while the sip deviation level is over the setting at Pr05-14 and the detection time is longer than the setting at Pr05-15.
25	ხსი	tUn Warning tUn Auto tuning	Auto tuning in process
26	FAn	FAn Warning Fan Fan Off	Cause When Pr06-45 bit 1 =1, a warning message will be given when the cooling fan is locked (when bit1=1, there is an output error).
27	dEAn	Warning CAN OFF CAN bus Off	CANbus off Cause Error(s) occurred on CANbus
28	SEOA	STOA Warning STOA STO Warning	Safety Torque Off Alarm Cause Safety torque output is off and Pr06-49 =1 or 3.

14 Fault Codes

- 1 Fault
 2 CE01
 3 Comm. Error 1
 - ① Display fault (error) signal.
 - Abbreviated fault (error) code
 The code is displayed as shown on KPC-CC01.
 - 3 Display fault (error) description.

*In accordance with the settings of Pr06-16 ~ Pr06-21

accord	accordance with the settings of Pr06-16 ~ Pr06-21.					
ID*	Display on KPE-LE01	LCM Panel Display	Descriptions			
1	oc A	Fault ocA oc at Accel	Over-current during acceleration (Output current exceeds triple rated current during acceleration.) corrective action 1. Short-circuit at motor output: Check for possible poor insulation at the output. 2. Acceleration Time is too short: Increase the Acceleration Time. 3. AC motor drive output power is too small: Replace the AC motor drive with a higher power model.			
2	೦೦ರ	Fault ocd oc at Decel	Over-current during deceleration (Output current exceeds triple rated current during deceleration.) corrective action 1. Short-circuit at motor output: Check for possible poor insulation at the output. 2. Deceleration Time is too short: Increase the Deceleration Time. 3. AC motor drive output power is too small: Replace the AC motor drive with a higher power model.			
3	0000	Fault ocn oc at Normal SPD	Over-current during steady state operation (Output current exceeds triple rated current during constant speed.) corrective action 1. Short-circuit at motor output: Check for possible poor insulation at the output. 2. Sudden increase in motor loading: Check for possible motor stall. 3. AC motor drive output power is too small: Replace the AC motor drive with a higher power model.			
4	GFF	Fault GFF Ground Fault	Ground fault corrective action When (one of) the output terminal(s) is grounded, short circuit current is more than 50% of AC motor drive rated current, the AC motor drive power module may be damaged. NOTE: The short circuit protection is to protect the AC motor drive, not to protect the user. 1. Check the wiring connections between the AC motor drive and motor for possible short circuits, also to ground. 2. Check whether the IGBT power module is damaged. 3. Check for possible poor insulation at the output.			
5	occ	Fault OCC Short Circuit	Short-circuit is detected between upper bridge and lower bridge of the IGBT module corrective action Return to the factory.			

			T
		HAND	Hardware failure in over current detection
6	065	Fault	corrective action
	000	ovS ov at Stop	Return to the factory.
			DC BUS over-voltage during acceleration
			230V: DC 405V; 460V: DC 810V
		Fault	corrective action
7	ouß	ovA ov at Accel	 Check if the input voltage falls within the rated AC motor drive input voltage range. Check for possible voltage transients.
			If DC BUS over-voltage due to regenerative voltage, increase the acceleration time or add an optional brake resistor.
			DC BUS over-voltage during deceleration
			230V: DC 405V; 460V: DC 810V
		Fault	corrective action
8	ဝပဝံ	ovd	Check if the input voltage falls within the rated AC motor drive input voltage range.
		ov at Decel	Check for possible voltage transients.
			3. If DC BUS over-voltage due to regenerative voltage, increase the Deceleration Time or add
			an optional brake resistor.
			DC BUS over-voltage at constant speed
			230V: DC 405V; 460V: DC 810V
		Fault	corrective action
9	000	ovn	Check if the input voltage falls within the rated AC motor drive input voltage range.
		ov at Normal SPD	2. Check for possible voltage transients.
			3. If DC BUS over-voltage due to regenerative voltage, increase the Deceleration Time or add
			an optional brake resistor.
		HAND	Hardware failure in voltage detection
10	ouS	Fault ovS	corrective action 1. Check if the input voltage falls within the rated
	~ ~ ~	ov at Stop	AC motor drive input voltage range.
			Check for possible voltage transients.
		HAND	DC BUS voltage is less than the setting at Pr.06-00
11	۸۵.	Fault	during acceleration
'	LUN	LvA Lv at Accel	corrective action
		LV at Accer	 Check if the input voltage is normal. Check for possible sudden load.
		HAND	DC BUS voltage is less than Pr.06-00 during
		Fault	deceleration.
12	Lud	Lvd	corrective action
		Lv at Decel	 Check if the input voltage is normal. Check for possible sudden load.
			2. Check for possible sudden load.

		T	DO DUO 1/2 1/2 (b (b
13	Lun	Fault Lvn Lv at Normal SPD	DC BUS voltage is less than the setting at Pr.06-00 at constant speed corrective action Check if the input voltage is normal. Check for possible sudden load.
14	٤٥5	Fault LvS Lv at Stop	DC BUS voltage is less than the setting at Pr.06-00 at stop corrective action 1. Check if the input voltage is normal. 2. Check for possible sudden load.
15	PHL	Fault PHL Phase Loss	Phase Loss corrective action Check Power Source Input if all 3 input phases are connected without loose contacts.
16	o X :	Fault oH1 IGBT Over Heat	IGBT overheating IGBT temperature exceeds protection level 3~5HP, 50~60HP: 105°C 7.5~30HP: 95 °C 40~100HP: 110 °C corrective action 1. Ensure that the ambient temperature falls within the specified temperature range. 2. Make sure that the ventilation holes are not obstructed. 3. Remove any foreign objects from the heatsinks and check for possible dirty heatsink fins. 4. Check the fan and clean it. 5. Provide enough spacing for adequate ventilation.
17	o#2	Fault OH2 Capacitance oH	Capacitor overheating. Capacitor's temperature exceeds the protection level. 3~100HP: 65°C. corrective action 1. Ensure that the ambient temperature falls within the specified temperature range. 2. Make sure heat sink is not obstructed. Check if the fan is operating 3. Check if there is enough ventilation clearance for AC motor drive.
18	6 X 10	Fault tH10 Thermo 1 Open	IGBT overheating protection fault corrective action Return to the factory.
19	6 X S o	Fault tH2o Thermo 2 Open	Capacitor module overheating fault corrective action Return to the factory.

20	FAn	Fault FAn Fan Locked	Cooing fan doesn't turn properly corrective action Verify if the cooling fan is covered by dust and needs to be cleaned. Return to the factory if necessary.
21	٥٤	Fault oL Over Load	The AC motor drive detects excessive drive output current. The output current causes the motor drive to be overload. If the output current is 150% higher than the rated current, the motor drive can last for 60 seconds.
			 Check if the motor is overload. Increase the output capacity of the motor drive.
22	EoL 1	Fault EoL1 Thermal Relay 1	The output current causes the motor to be overload. If the output current is 150% higher than the rated current, the motor can last for 60 seconds. corrective action 1. Check the setting of full-load current of motor (Pr.05-01). 2. Check if motor 1 is overload, change to a higher power motor.
24	o X 3	Fault oH3 Motor Over Heat	Motor overheating The AC motor drive detecting internal temperature exceeds the setting of Pr.06-27 (PTC level). corrective action 1. Make sure that the motor is not obstructed. 2. Ensure that the ambient temperature falls within the specified temperature range. 3. Change to a higher power motor.
26	ot !	Fault ot1 Over Torque 1	
27	o t 2	Fault ot2 Over Torque 2	The ot1 and ot2 fault codes will pop up when: the output current exceeds the setting at Pr06-06 <over-torque (ot1)="" detection="" level=""> and Pr06-09 <over-torque (ot2),="" 2="" 4.="" <full-load="" action="" and="" at="" check="" corrective="" current="" if="" im="" is="" lasts="" level="" longer="" motor="" of="" or="" output="" overload.="" pr05-01="" pr06-05="" pr06-07="" pr06-08="" pr06-10.="" protection="" set="" setting="" than="" the="" time="" to=""> and Pr08-01 PM <full-load current="" motor="" of="" the=""> are appropriate. If necessary, increase the output capacity of the motor.</full-load></over-torque></over-torque>
30	cF !	Fault cF1 EEPROM Write Err	Internal EEPROM cannot be programmed. corrective action 1. Press "RESET" key to the factory setting. 2. Return to the factory.

31	c F 2	Fault cF2 EEPROM Read Err	Internal EEPROM cannot be read. corrective action 1. Press "RESET" key to the factory setting. 2. Return to the factory.
32	c d 0	Fault cd0 Isum Sensor Err	Hardware failure in current detection corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
33	cd l	Fault cd1 las Sensor Err	U-phase current detection error corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
34	cd2	Fault cd2 Ibs Sensor Err	V-phase current detection error corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
35	c d 3	Fault cd3	W-phase current detection error corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
36	888	Fault Hd0 cc HW Error	CC (current clamp) corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
37	X6:	Fault Hd1 oc HW Error	OC hardware error corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
38	Hd2	Fault Hd2 ov HW Error	OV hardware error corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
39	X63	Fault Hd3 GFF HW Error	GFF hardware error corrective action Reboot the power. If fault code is still displayed on the keypad, return to the factory.
40	808	Fault AUE Auto Tuning Err	Auto-tuning error corrective action 1. Check cabling between drive and motor 2. Check if the motor capacity and the parameter setting are appropriate. Then try again.

		<u></u>				
42	P6F :	Fault PGF1 PG Fbk Error	PG feedback error corrective action .When PG feedback control is enabled; check if Pr10-01 <encoder pulse=""> is set to 0.</encoder>			
43	PGF2	Fault PGF2 PG Fbk Loss	PG feedback loss corrective action Check the wiring of the PG feedback.			
44	PGF3	Fault PGF3 PG Fbk Over SPD	PG feedback over speed corrective action 1. Check the wiring of the PG feedback. 2. Check if the settings of PI gain and deceleration are correct (Pr10-05, Pr10-06). 3. Return to the factory.			
45	PGF4	Fault PGF4 PG Fbk Deviate	PG slip error corrective action 1. Check the wiring of the PG feedback. 2. Check if the settings of PI gain and deceleration are appropriate (Pr10-07, Pr10-08). 3. Return to the factory.			
49	E F	Fault EF External Fault	When Multi-Function Input Command (MI1 to MI8) is set to #10 EF input (Pr07-28) and when multi-function input terminals are triggered to close, the motor drive stop running. corrective action 1. Input EF (N.O.) on external terminal is closed to GND. Output U, V, W will be turned off. 2. Press the RESET button on the keypad to clear the fault signal.			
50	EF :	Fault EF1 Emergency Stop	Emergency Stop corrective action 1. When the multi-function input terminals MI1 to MI6 are set to emergency stop, the AC motor drive stops outputting U, V, W and the motor coasts to stop. 2. Press RESET after fault has been cleared.			
52	Pcod	Fault Pcod Password Error	Password error. After inputting three consecutive times the wrong password, the keypad will be locked. corrective action Power down and power back up again the motor drive to clear the lock and re-enter the correct password See Pr.00-07 and 00-08 for more information.			
54	CEO I	Fault CE01 Comm Cmd Err	Illegal function code corrective action Check if the function code is correct (function code must be 03, 06, 10, 63).			

			Illegal data address (00H to 254H)			
	CE02	HAND	The data address of 0X2XX is between			
55		Fault	0X2000~0X2005. Any address not within this range is a			
		CE02	fault			
		Data Addr Err	corrective action			
			Check if the communication address is correct.			
			Illegal data length			
		HAND	The data length must be between 1 to 20 digits. Any			
F.C.	ccon	Fault	length out of this range is a fault.			
56	CE03	CE03	corrective action			
		Data length Err	Check if the data length is smaller than the minimum			
			value or over the maximum value.			
			Write value to read only communication address			
		HAND	Communication addresses such as 0X21XX, 0X22XX			
		Fault	are read only. If any command is sent to these			
57	CE04	CE04	addresses, there will be a fault.			
		Wrong Writing	corrective action			
			Check if the communication address is correct.			
		HAND	Modbus communication time-out(Pr09-02~09-03)			
	66.10	Fault	corrective action			
58	CE 10	CE10	Check if the wiring for the communication is correct.			
		Comm Time Out				
		HAND	Keypad transmission time-out			
-0	CP 10	Fault	corrective action			
59		CP10	Check if the wiring for the communication is			
		Keypad Time Out	correct 2. Check if there is any wrong with the keypad			
		HAND	Brake resistor fault			
	6F	Fault	corrective action			
60		bF	If the fault code is still displayed on the keypad after			
		Braking Fault	pressing "RESET" key, return to the factory.			
			Mechanical brake fail, the feedback signal and the			
		HAND	released signal are not consistent.			
64	bF	Fault MBF	corrective action			
	, (<u> </u>)	Mech. Brake Fail	Check if the mechanical brake signal is correct.			
		modification and	 Check if the detection time setting of mechanical brake (Pr.02-35) is correct. 			
\vdash			PG card hardware error			
	PGFS	HAND	corrective action			
65		Fault	Check if the wiring of PG feedback is correct.			
		PGF5 PG HW Error	2. If fault code is still displayed on the keypad with			
		I OTTIVE LITOR	correct PG feedback, please return to the factory.			
-		1	· · · · · ·			

and the released signal are not consistent. corrective action 1. Check if the signal of electromagnetic valve is correct. 2. Check if the setting of Pr.02-36 is correct. Motor phase loss. 67 TPHL Fault MPHL Motor Phase Loss 3. Return to the factory. CAN Bus off CANF CANF CANF CAN Bus off COPECUTE AND BUS is wired correctly 2. Check CAN Bus is wired correctly 2. Check PDO communication no time out Safety Torque Off Fault STO Safety Torque Off TO SEL I STU STO Safety Torque Off STO1-SCM1 internal hardware error detected. STO2-SCM2 internal hardware error detected. Fault STL2 STOLOSS 1 STO1-SCM1 and STO2-SCM2 internal hardware error detected. Fault STL3 STOLOSS 3 PGC d wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action Incorrect wiring. PG absolute signal error corrective action		1		
2 Check if the setting of Pr.02-36 is correct. Motor phase loss. corrective action 1. Check cabling between drive and motor 2. Check if any output from the motor drive. 3. Return to the factory. CAN Bus off STO Safety Torque Off function is enabled while parameter 06-49 is set to 0 or 2. STO Safety Torque Off unction is enabled while parameter 06-49 is set to 0 or 2. STO1-SCM1 internal hardware error detected. STO2-SCM2 internal hardware error detected. STO2-SCM2 internal hardware error detected. Fault STL2 STOLoss 2 STO1-SCM1 and STO2-SCM2 internal hardware error detected. Fault STL3 STO1-SCM1 and STO2-SCM2 internal hardware error detected. PG cd wrong wiring corrective action incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	66	TEF	Fault MCF	corrective action 1. Check if the signal of electromagnetic valve is
Motor phase loss. corrective action 1. Check cabling between drive and motor 2. Check if any output from the motor drive. 3. Return to the factory. CAN Bus off CAN Bus off 1. Check CAN Bus is wired correctly 2. Check PDO communication no time out Safety Torque Off function is enabled while parameter 06-49 is set to 0 or 2. STO1-SCM1 internal hardware error detected. Fault STL1 STO2SS1 STO2-SCM2 internal hardware error detected. Fault STL2 STO3SS2 STO1-SCM1 and STO2-SCM2 internal hardware error detected. Fault STL3 STO4SS3 PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for corrective incorrect corrective action PG absolute signal error corrective action 1. Check CAN Bus is wired correctly 2. Check PDO communication no time out STO1-SCM1 internal hardware error detected. STO1-SCM1 internal hardware error detected. STO1-SCM1 and STO2-SCM2 internal hardware error detected. PG cd wrong wiring corrective action Incorrect wiring. PG absolute signal error corrective action PG absolute signal error corrective action				
1. Check cabling between drive and motor 2. Check if any output from the motor drive. 3. Return to the factory.			HAND	
CAN Bus off corrective action 1. Check CAN Bus is wired correctly 2. Check PDC communication no time out Safety Torque Off function is enabled while parameter 06-49 is set to 0 or 2. STO Safety Torque Off function is enabled while parameter 06-49 is set to 0 or 2. STO1~SCM1 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	67	ī.PHL	MPHL	 Check cabling between drive and motor Check if any output from the motor drive.
CANF CAN Bus Off CAN Bus is wired correctly 2. Check PDO communication no time out Safety Torque Off function is enabled while parameter 06-49 is set to 0 or 2. STO1~SCM1 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. PG cd wrong wiring corrective action incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action				<u>'</u>
1. Check CAN Bus is wired correctly 2. Check PDO communication no time out Safety Torque Off function is enabled while parameter 06-49 is set to 0 or 2. Safety Torque Off STO Safety Torque Off STO1~SCM1 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. PG cd wrong wiring corrective action incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action PG absolute signal error corrective action				corrective action
Fault STL1 STOLoss 1 STO2~SCM1 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO3—SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	68	[AnF		
STO Safety Torque Off SEL I Fault STL1 STOLoss 1 STO2~SCM1 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. STO1~SCM1 and STO2~SCM2 internal hardware error detected. PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action			HAND	Safety Torque Off function is enabled while parameter
Fault STL2 STOLoss 1 STO2-SCM2 internal hardware error detected. STO2-SCM2 internal hardware error detected. STO2-SCM2 internal hardware error detected. STO1-SCM1 and STO2-SCM2 internal hardware error detected. STO1-SCM1 and STO2-SCM2 internal hardware error detected. PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	69	5±0	STO	06-49 is set to 0 or 2.
STO Loss 1 STO2~SCM2 internal hardware error detected. STO2~SCM2 internal hardware error detected. STL2 STO Loss 2 STO1~SCM1 and STO2~SCM2 internal hardware error detected. STL3 STO Loss 3 PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	70	5+! !	Fault	STO1~SCM1 internal hardware error detected.
Fault STL2 STO Loss 2 STO1~SCM1 and STO2~SCM2 internal hardware error detected. STL3 STO Loss 3 PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action				
72 5613 Fault STL3 STO Loss 3 PG cd wrong wiring corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	71	SEL2	Fault STL2	STO2~SCM2 internal hardware error detected.
73 PG cd wrong wiring Corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error Corrective action			HAND	STO1~SCM1 and STO2~SCM2 internal hardware error
Fault PGcd PG cd Wrong Wire Corrective action Incorrect wiring for pin C+, C-, D+, D Refer to chapter 7-2 for correct wiring. PG absolute signal error corrective action	72	5EL3	STL3	detected.
PG cd Wrong Wire PG absolute signal error corrective action			HAND	PG cd wrong wiring
PG cd Wrong Wire 7-2 for correct wiring. PG absolute signal error corrective action	73	00_4		corrective action
PG absolute signal error corrective action		'		
corrective action				
11 (Thack if the ancoders sheallife nositions II ± I'= and			HAND	Corrective action Check if the encoders absolute positions (C+ C- and
Fault D. /D	74	PQH!		·
PGHL Absolute Signal Err 2. If the cables are properly wired but the fault code still		' _'' _		
displays on the keypad, return the motor drive to the			Abositto Oigilai Eli	
				factory.

75	P9AF	Fault PGAF Z Phase Signal Loss	PG Z phase signal loss corrective action 1. Check if the encoder's Z phase signal and PG card are properly wired. 2. If the cables are properly wired but the fault code still displays on the keypad, return the motor drive to the
			factory.

15 Suggestions & Error Corrections for Standard AC Motor Drives

15-1 Maintenance and Inspections

15-2 Greasy Dirt Problem

15-3 Fiber Dust Problem

15-4 Erosion Problem

15-5 Industrial Dust Problem

15-6 Wiring and Installation Problem

15-7 Multi-function Input/Output Terminals Problem

The AC motor drive has a comprehensive fault diagnostic system that includes several different alarms and fault messages. Once a fault is detected, the corresponding protective functions will be activated. The following faults are displayed as shown on the AC motor drive digital keypad display. The six most recent faults can be read from the digital keypad or communication.

The AC motor drive is made up by numerous components, such as electronic components, including IC, resistor, capacity, transistor, and cooling fan, relay, etc. These components can't be used permanently. They have limited-life even under normal operation. Preventive maintenance is required to operate this AC motor drive in its optimal condition, and to ensure a long life.

Check your AC motor drive regularly to ensure there are no abnormalities during operation and follows the precautions:



- ☑ Wait 5 seconds after a fault has been cleared before performing reset via keypad of input terminal.
- oxdots When the power is off after 5 minutes for \leq 22kW models and 10 minutes for \geq 30kW models, please confirm that the capacitors have fully discharged by measuring the voltage between + and -. The voltage between + and should be less than 25VDC.
- Only qualified personnel can install, wire and maintain drives. Please take off any metal objects, such as watches and rings, before operation. And only insulated tools are allowed.
- ☑ Never reassemble internal components or wiring.
- ☑ Make sure that installation environment comply with regulations without abnormal noise, vibration and smell.

15-1 Maintenance and Inspections

Before the check-up, always turn off the AC input power and remove the cover. Wait at least 10 minutes after all display lamps have gone out, and then confirm that the capacitors have fully discharged by measuring the voltage between DC+ and DC-. The voltage between DC+ and DC-should be less than 25VDC.

Ambient environment

		Maintenance			
Check Items	Methods and Criterion	Period			
		Daily	Half Year	One Year	
Check the ambient temperature, humidity,	Visual inspection and				
vibration and see if there are any dust, gas,	measurement with equipment	\bigcirc			
oil or water drops	with standard specification				
If there are any dangerous objects	Visual inspection	0			

Voltage

		Methods and Criterion	Maintenance			
	Check Items		Period			
			Daily	Half	One	
ļ			Daily	Year	Year	
	Check if the voltage of main circuit and	Measure with multimeter with	0			
	control circuit is correct	standard specification				

Digital Keypad Display

Check Items	Methods and Criterion	Maintenand Period		
		Daily	Half Year	One Year
Is the display clear for reading	Visual inspection	0		
Any missing characters	Visual inspection	0		

Mechanical parts

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any abnormal sound or vibration	Visual and aural inspection		0	
If there are any loose screws	Tighten the screws		0	
If any part is deformed or damaged	Visual inspection		0	
If there is any color change by overheating	Visual inspection		0	
If there is any dust or dirt	Visual inspection		0	

Main circuit

		Maintenance			
Check Items	Methods and Criterion		Period		
		Daily	Half Year	One Year	
If there are any loose or missing screws	Tighten or replace the screw	0			
If machine or insulator is deformed, cracked,	Visual inspection				
damaged or with color change due to	NOTE: Please ignore the		\bigcirc		
overheating or ageing	color change of copper				
overneating or ageing	plate				
If there is any dust or dirt	Visual inspection		0		

Terminals and wiring of main circuit

Chaol, Itama	Mathada and Critorian	Maintenance Period			
Check Items	Methods and Criterion	Daily	Half Year	One Year	
If the terminal or the plate is color change or deformation due to overheat	Visual inspection		0		
If the insulator of wiring is damaged or color change	Visual inspection		0		
If there is any damage	Visual inspection	0			

DC capacity of main circuit

		Maintenance			
Check Items	Methods and Criterion	Period			
		Daily	Half Year	One Year	
If there is any leak of liquid, color change, crack or deformation	Visual inspection	\circ			
If the safety valve is not removed? If valve is inflated?	Visual inspection	\bigcirc			
Measure static capacity when required		0			

Resistor of main circuit

		Maintenance			
Check Items	Methods and Criterion	Period			
		Daily	Half Year	One Year	
If there is any peculiar smell or insulator	Visual inspection, smell				
cracks due to overheat	visuai irispectiori, sirieli				
If there is any disconnection	Visual inspection	\circ			
If connection is demaged?	Measure with multimeter with	0			
If connection is damaged?	standard specification				

Transformer and reactor of main circuit

		Maintenance			
Check Items	Methods and Criterion	Period			
		Daily	Half	One	
			Year	Year	
If there is any abnormal vibration or peculiar	Visual, aural inspection and				
smell	smell				

Magnetic contactor and relay of main circuit

Check Items	Methods and Criterion	Maintenance Period			
		Daily	Half Year	One Year	
If there are any loose screws	Visual and aural inspection	0			
If the contact works correctly	Visual inspection	0			

Printed circuit board and connector of main circuit

		Maintenance			
Check Items	Methods and Criterion	Period			
		Daily	Half Year	One Year	
	Tighten the screws and		0		
If there are any loose screws and connectors	press the connectors firmly				
	in place.				
If there is any peculiar smell and color change	Visual and smell inspection		\circ		
If there is any crack, damage, deformation or corrosion	Visual inspection		\circ		
If there is any liquid is leaked or deformation in capacity	Visual inspection		0		

Cooling fan of cooling system

		Maintenance			
Check Items	Methods and Criterion		Period		
		Daily	Half Year	One Year	
	Visual, aural inspection and				
	turn the fan with hand (turn				
If there is any abnormal sound or vibration	off the power before		\circ		
	operation) to see if it rotates				
	smoothly				
If there is any loose screw	Tighten the screw		0		
If there is any color change due to overheat	Change fan		0		

Ventilation channel of cooling system

Check Items	Methods and Criterion	Maintenance Period			
		Daily	Half Year	One Year	
If there is any obstruction in the heat sink, air intake or air outlet	Visual inspection		0		



Please use the neutral cloth for clean and use dust cleaner to remove dust when necessary.

15-2 Greasy Dirt Problem

Serious greasy dirt problems generally occur in processing industries such as machine tools, punching machines and so on. Please be aware of the possible damages that greasy oil may cause to your drive:

- 1. Electronic components that silt up with greasy oil may cause the drive to burn out or even explode.
- 2. Most greasy dirt contains corrosive substances that may damage the drive.

Solution:

Install the AC motor drive in a standard cabinet to keep it away from dirt. Clean and remove greasy dirt regularly to prevent damage of the drive.





15-3 Fiber Dust Problem

Serious fiber dust problems generally occur in the textile industry. Please be aware of the possible damages that fiber may cause to your drives:

- Fiber that accumulates or adheres to the fans will lead to poor ventilation and cause overheating problems.
- 2. Plant environments in the textile industry have higher degrees of humidity that may cause the drive to burn out, become damaged or explode due to wet fiber dust adhering to the devices.

Solution:

Install the AC motor drive in a standard cabinet to keep it away from fiber dust. Clean and remove fiber dust regularly to prevent damage to the drive.








15-4 Erosion Problem

Erosion problems may occur if any fluids flow into the drives. Please be aware of the damages that erosion may cause to your drive.


1. Erosion of internal components may cause the drive to malfunction and possibility to explode.

Solution:

Install the AC motor drive in a standard cabinet to keep it away from fluids. Clean the drive regularly to prevent erosion.

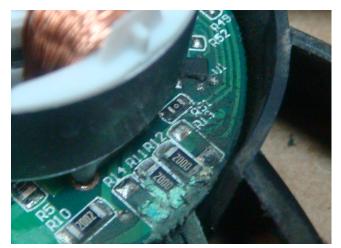



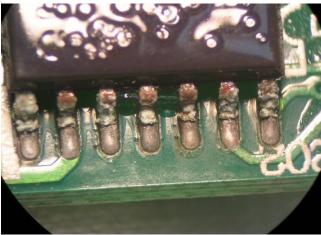

15-5 Industrial Dust Problem


Serious industrial dust pollution frequently occurs in stone processing plants, flour mills, cement plants, and so on. Please be aware of the possible damage that industrial dust may cause to your drives:

- 1. Dust accumulating on electronic components may cause overheating problem and shorten the service life of the drive.
- 2. Conductive dust may damage the circuit board and may even cause the drive to explode.

Solution:

Install the AC motor drive in a standard cabinet and cover the drive with a dust cover. Clean the cabinet and ventilation hole regularly for good ventilation.



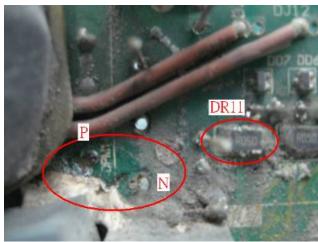


15-6 Wiring and Installation Problem

When wiring the drive, the most common problem is wrong wire installation or poor wiring. Please be aware of the possible damages that poor wiring may cause to your drives:

- 1. Screws are not fully fastened. Occurrence of sparks as impedance increases.
- 2. If a customer has opened the drive and modified the internal circuit board, the internal components may have been damaged.

Solution:

Ensure all screws are fastened when installing the AC motor drive. If the AC motor drive functions abnormally, send it back to the repair station. DO NOT try to reassemble the internal components or wire.

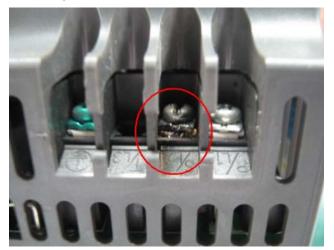






15-7 Multi-function Input/Output Terminals Problem


Multi-function input/output terminal errors are generally caused by over usage of terminals and not following specifications. Please be aware of the possible damages that errors on multi-function input/output terminals may cause to your drives:


1. Input/output circuit may burns out when the terminal usage exceeds its limit.

Solution:

Refer to the user manual for multi-function input output terminals usage and follow the specified voltage and current. DO NOT exceed the specification limits.

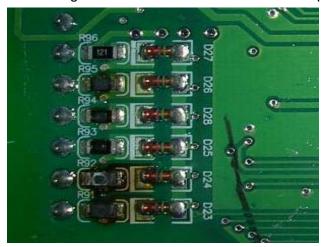

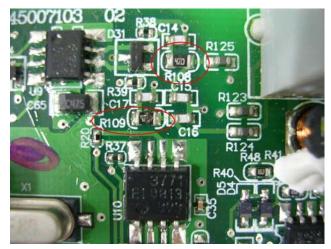

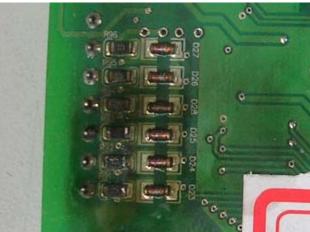

16 Functions of Safety Torque Off*

(*Safety Torque Off = STO)

- 16-1 Failure Rate of the drive's safety function
- **16-2 Description of STO's Functions**
- 16-3 Wiring diagrams
- **16-4 Related Parameters**
- **16-5 Description of Operating Sequence Diagrams**
- 16-6 Error codes related to STO

16-1 Failure Rate of the drive's safety function

Item	Definition	Standard	Performance	
SFF	Sofo Follura Frantian	IEC61508	Channel 1: 80.08%	
SFF	Safe Failure Fraction	15001506	Channel 2: 68.91%	
HFT (Type A	Hardware Fault Tolerance	IEC61508	1	
subsystem)		15001506	1	
SIL	Safety Integrity Level		SIL 2	
SIL		IEC62061	SILCL 2	
PFH	Average frequency of dangerous failure	IEC61508	9.56×10 ⁻¹⁰	
PFN	[h-1]	12001308	9.56×10	
DED	Probability of Dangerous Failure on	IEC61508	4.18×10 ⁻⁶	
PFD _{av}	Demand	12001308	4.10×10	
Category	Category	ISO13849-1	Category 3	
PL	Performance level	ISO13849-1	d	
MTTF _d	Mean time to dangerous failure	ISO13849-1	High	
DC	Diagnostic coverage	ISO13849-1	Low	

16-2 Description of STO's Functions

The purpose of the STO function is to cut off the power supply of the motor to prevent the production of torque force. The STO function is run by two independent hardware to control the drive signals emitted by the motor's current then to cut off motor drive's power module output in order to stop safely the motor drive.

The terminal functions is described in the table below,


Table 1: Description of Terminal Functions

Signal	Channel	Status of Photocupler				
STO signal	STO signal		ON(High)	OFF(Low)	OFF(Low)	
STO signal STO2~SCM2		ON(High)	OFF(Low)	ON(Low)	OFF(Low)	
Driver Output	Driver Output Status		STL2 mode (Torque output off)	STL1 mode (Torque output off)	STO mode (Torque Output Off)	


- STO is Safe Torque Off
- STL1~STL3 means STO hardware abnormal
- STO1~SCM1 ON (High): means STO1~SCM1has connect to a +24VDC power supply.
- STO2~SCM2 ON (High): means STO2~SCM2 has connect to a +24V power supply.
- STO1~SCM1 OFF (Low): means STO1~SCM1hasn't connect to a +24VDC power supply.
- STO2~SCM2 OFF (Low): means STO2~SCM2hasn't connect to a +24VDC power supply.

16-3 Wiring diagrams

16-3-1 Internal Safety Circuit diagram as shown below:

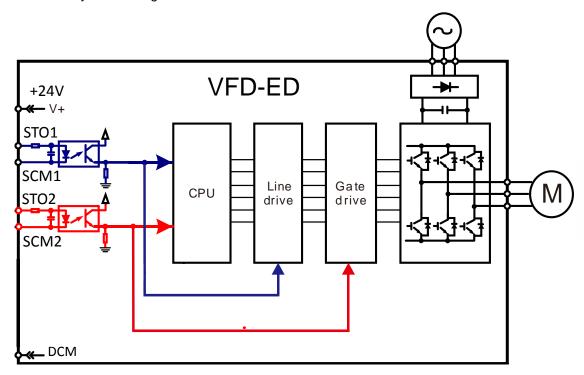


16-3-2 As shown in the diagram D below, the factory setting of terminals +24V-STO1-STO2 and terminals SCM1-SCM2-DCM is short-circuiting.

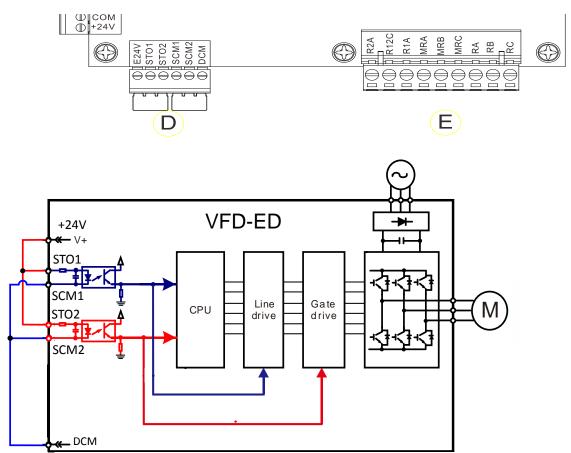

16-3-3 Control Circuit Wiring Diagram

- 1. Remove the short-circuit between E24V-STO1-STO2 and DCM-SCM1-SCM2.
- 2. The wiring diagram is as shown below. The ESTOP must be closed during the normal situation so that the motor drive will be able to run.
- 3. At the STO mode, switch on ESTOP, the motor drive will stop outputting and the keypad panel will display STO.

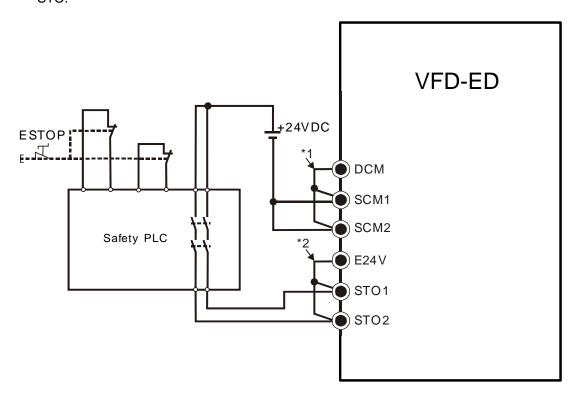

16-4 Related Parameters

×	88-49	STO La	Latch Selection						
								Factory Setting: 0	
		Setting	0: ST	D: STO alarm Latch					
			1: ST	1: STO alarm no Latch					
			2: ST	2: STO Latch (Warn and record running commands when stop)					
			3: ST	8: STO No Latch (Warn and record running commands when stop)					

- When Pr06-49=0, STO alarm is latched which means once the cause of the alarm is cleared, a Reset command is required to clear the STO alarm.
- When Pr06-49=1, STO alarm is NOT latched which means once the cause of the alarm is cleared, the STO alarm will stop automatically.
- When in STL1~STL3 mode, STO alarm is latched and Pr06-49 cannot be set.

~	02-11	Multi-function Output 1 RA, RB, RC (Relay1)					
			Factory Setting: 11				
×	02 - 12	Multi-function Output 2 MRA, MRC (Relay2)					
			Factory Setting: 1				
*	02-13	Multi-function Output 3 R1A(Relay 3)					
×	02-14	Multi-function Output 4 R2A(Relay 4)					
×	02-15	Multi-function Output 5 MO1					
×	02-18	Multi-function Output 6 MO2					
			Factory Setting: 0				
		Settings					
		0: No function					
		1: Operation indication					
		11: Malfunction indication					
		42: STO Output Error					
*	05-53	Multi-output direction					
		Factory Setting: 0					
		This parameter is bit setting. If the bit is 1, the multi-function					
		output terminal will be act with opposite direction.					

Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	-	-	-	-	-	MO2	MO1	R2A	R1A	MRA	RA

STO Output Error factory setting: Pr02-15(MO1 =42 SO Logic Output A). Set up Pr02-23 < Multi-output direction > to choose Logic Output B.

	Output status of Safety						
Status of the Motor Drive	Logic Output A (02-15=42)	Logic Output B (02-15=42) (02-23=16)					
Normal	Broken circuit (Open)	Short circuit (Close)					
STO	Short circuit (Close)	Broken circuit (Open)					
STL1~STL3	Short circuit Close)	Broken circuit(Open)					

16-5 Description of Operating Sequence Diagrams

16-5-1 Normal Operation Status

As shown in Figure 01: When the STO1~SCM1 and STO2~SCM2= ON (safety function is not required), the motor drive will execute "Operating" or "Output Stop" according to the RUN/STOP command.

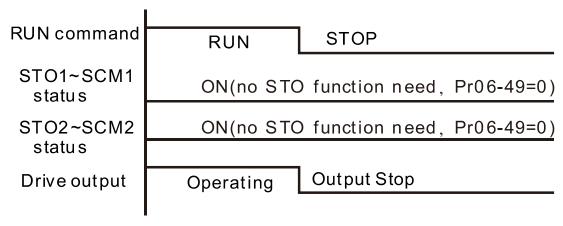


Figure 01

16-5-2 Pr06-49=0, STO alarm Latch

As shown in Figure 02, when both STO1~SCM1 and STO2~SCM2 channels are turned OFF (safety function is required) during operation, the STO function will be enabled and the motor drive will stop output regardless what kind of command is.

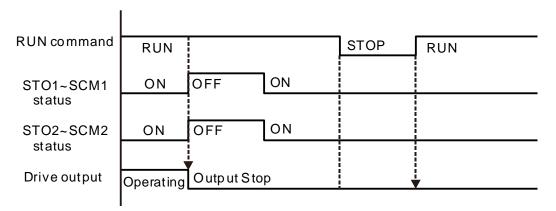


Figure 02

16-5-3 Pr06-49=1, STO alarm no Latch

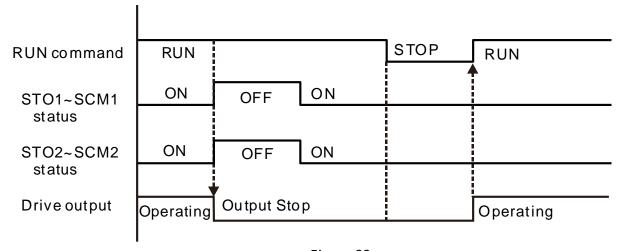


Figure 03

16-5-4 STL1

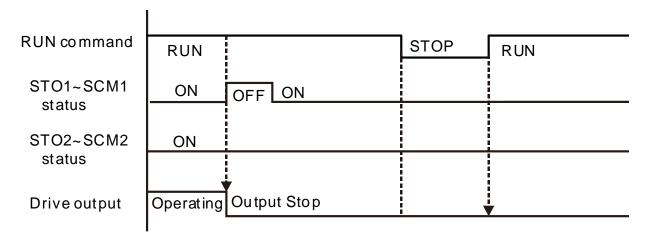


Figure 04

16-5-4 STL2

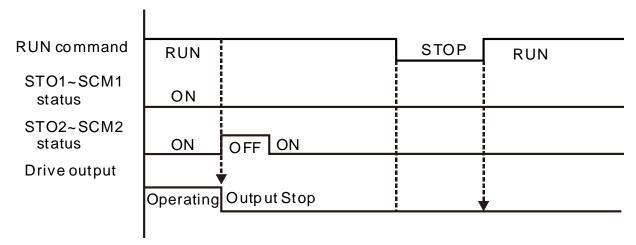


Figure 05

16-6 Error codes related to STO

08 - 18	Present Fault Record							
88-17	Second Most Recent Fault Record							
08 - 18	Third Most Recent Fault Record	Third Most Recent Fault Record						
08 - 19	Fourth Recent Fault Record							
08-20	Fifth Most Recent Fault Record							
08-21	Sixth Most Recent Fault Record							
	Setting							
	69: Safety Torque Off(STO)							
	70: Channel 1 (STo1~SCM1), abnormal safety circuit							
	71: Channel 2 (STO2~SCM2) abnormal safety circuit							
	72: Abnormal internal circuit							

Error Code	Reading	Description
69	Safety Torque Off	STO function is activated
(STO)	(STO)	STO function is activated
	Channel 1	
70	(STo1~SCM1),	Frank detected in the CTO4 CCN44 internal circuit
(STL1)	abnormal safety	Error detected in the STO1~SCM1 internal circuit.
	circuit	
	Channel 2	
71	(STO2~SCM2)	Error detected in the STO2~SCM2 internal circuit
(STL2)	abnormal safety	Error detected in the \$102~\$Civiz internal circuit
	circuit	
72	Abnormal internal	Error detected in STO1~SCM1 and STO2~SCM2 internal
(STL3)	circuit	circuit

Appendix A:

AC Motor Drives EMC Standard Installation Guide

EMC Compliance Practice

Preface

When an AC motor drive is installed in a noisy environment, radiated and/or conducted noise via signal and power cables can interfere with the correct functioning, cause errors or even damage to the drive. To prevent this, some AC motor drives have an enhanced noise resistance but the results are limited and it is not economical. Therefore, an effective method would be finding the cause of the noise and use the right solution to achieve "no emission, no transmission and no reception of noise". All three solutions should be applied.

Finding the Noise

- Ascertain whether the error is caused by noise.
- Find the source of the noise and its transmission path.
- Confirm the signal and the source of noise

Solutions

- Grounding
- Shielding
- Filtering

Table of Contents

Preface	i
Table of Contents	
Chapter 1 Introduction	1
1.1 What is EMC	
1.2 EMC for AC Motor Drive	
Chapter 2 How to prevent EMI	2
2.1 Types of EMI: common-mode and differential mode noise	
2.2 How does EMI transmit? (Noise transmission)	
Chapter 3 Solution to EMI: Grounding	
3.1 Protective Grounding & Functional Grounding	
3.2 Ground Loops	
3.3 Earthing Systems	
Chapter 4 Solution to EMI: Shielding	
4.1 What is Shielding?	9
4.2 How to Reduce EMI by Shielding?	
Chapter 5 Solution to EMI: Filter	
5.1 Filter	
5.2 Harmonic Interference	14

Chapter 1 Introduction

1.1 What is EMC?

Electromagnetic Compatibility (EMC) is the ability of an electrical device to function properly in electromagnetic environments. It does not emit electromagnetic noise to surrounding equipment and is immune to interference from surrounding equipment. The goal is to achieve high immunity and low emission; these two properties define the quality of EMC. In general, electrical devices react to high and low frequency phenomena. High frequency phenomena are electrostatic discharge (ESD); pulse interference; radiated electromagnetic field; and conducted high frequency electrical surge. Low frequency phenomena refer to mains power harmonics and imbalance.

The standard emission and immunity levels for compliance depend on the installation location of the drive. A Power Drive System (PDS) is installed in an industrial or domestic environment. A PDS in a domestic environment must have lower emission levels and is allowed to have lower immunity levels. A PDS in an industrial environment is allowed to have higher emission levels but must have more severe immunity levels.

1.2 EMC for AC Motor Drive

When an AC motor drive is put into operation, harmonic signal will occur at the AC drive's power input and output side. It creates a certain level of electromagnetic interference to the surrounding electrical devices and the mains power network. An AC motor dive is usually applied in industrial environments with a strong electromagnetic interference. Under such conditions, an AC drive could disturb or be disturbed.

Delta's AC motor drives are designed for EMC and comply with EMC standard EN61800-3 2004. Installing the AC motor drive accurately will decrease EMI influences and ensure long term stability of the electricity system. It is strongly suggested to follow Delta's user manual for wiring and grounding. If any difficulties or problems arise, please follow the instructions and measures as indicated in this EMC Standard Installation Guide.

Chapter 2 How to prevent EMI

2.1 Types of EMI: Common-mode and differential-mode noise

The electromagnetic noise of an AC motor drive can be distinguished into common-mode and differential-mode noise. Differential-mode noise is caused by the stray capacitance between the conducting wires and common-mode noise is caused by the common-mode coupling current path created by the stray capacitance between the conducting wires and ground.

Basically, differential-mode noise has a greater impact to the AC motor drive and common-mode noise has a greater impact to high-sensitivity electronic devices. An excessive amount of differential-mode noise may trigger the circuit protection system of the AC motor drive. Common-mode noise affects peripheral electronic devices via the common ground connection.


EMC problems can be more serious when the following conditions apply:

- When a large horsepower AC motor drive is connected to a large horsepower motor.
- The AC motor drive's operation voltage increases.
- Fast switching of the IGBTs.
- When a long cable is used to connect the motor to the AC motor drive.


2.2 How does EMI transmit? (Noise transmission path)

Noise disturbs peripheral high-sensitivity electrical devices/systems via conduction and radiation, their transmission paths are shown hereafter:


1. Noise current in the unshielded power cable is conducted to ground via stray capacitances into a common-mode voltage. Whether or not other modules are capable to resist this common-mode noise depends on their Common-Mode Rejection Ratio (CMRR), as shown in the following figure.

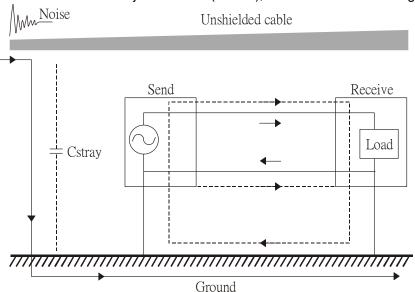


2. Common-mode noise in the power cable is transmitted through the stray capacitance and coupled into the adjacent signal cable, as shown in Figure 2. Several methods can be applied to reduce the effect of this common-mode noise; for example, shield the power cable and/or the signal cables, separate the power and signal cables, take the input and output side of the signal cable and twist them together to balance out the stray capacitance, let power cables and signal cables cross at 90°, etc.

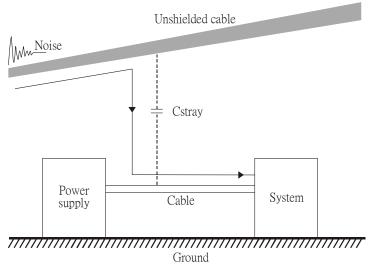

3. Common-mode noise is coupled via the power cable to other power systems then the cable of such a power system is coupled to the transmission system, as shown in Figure 3.

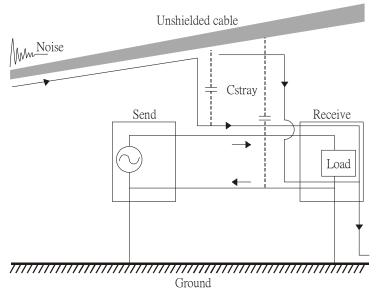

4. The common-mode noise of an unshielded power cable is transmitted to the ground via the stray capacitance. Since both shielded wire and unshielded wire are connected to a common ground, other systems can be interfered with by the common-mode noise that is transmitted from the ground back to the system via the shield. See Figure 4.

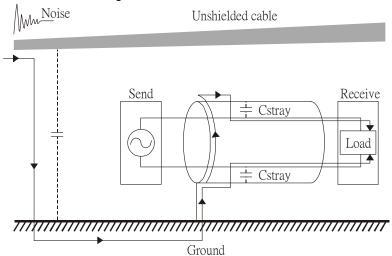

5. When excessive pulse modulated currents pass through an un-grounded AC drive cable, it acts as an antenna and creates radiated interference.

Chapter 3 Solution to EMI: Grounding

The leakage current of an electronic equipment is conducted to ground via the grounding wire and the ground electrode. According to Ohm's law, potential differences may arise when the electrode's ground and the ground's ground resistance are different.

According to Ohm's law, the earth resistance for electrode and the ground are different, in this case potential differences may arise.

3.1 Protective Grounding & Functional Grounding


Please carefully read the following instruction if two types of grounding are applied at the same time.

Protective grounding is applied outside buildings and must have low resistance. On the other hand, functional grounding can be applied inside buildings and must have low impedance.

The goal of EMC is to avoid any interference effects. Grounding for EMC can be distinguished by frequency. For frequencies lower than 10 kHz, a *single-point ground* system should be used and for frequencies higher than 10 kHz, a *multiple point ground* system should be used.


- Single Point Grounding: all signal grounds of all IT equipment are connected in series to form a single reference point. This point can be grounded directly to earth; to the designated grounding point or to the safety point that is already grounded.
- Multiple Point Grounding: all signals of all IT equipment are grounded independently.
- Hybrid Grounding: this type of grounding behaves differently for low and high frequencies. When two
 pieces of IT equipment (A and B) are connected via a shielded cable, one end is connected directly to
 ground while the other end is connected to ground via a capacitor. This type of grounding system
 fulfils the criteria for high and low frequency grounding.
- Floating grounding: the signals of all IT equipment are isolated from each other and are not grounded.

DC current flows evenly throughout the conductor section. But AC current flows towards the conductor's surface as frequency increases; this is called the "skin effect". It causes the effective cross-section area to be reduced with increasing frequency. Therefore it is suggested to increase the effective ground cross-section area for high frequencies by replacing pigtail grounding by braided conductors or strip conductors. Refer to the following figure.

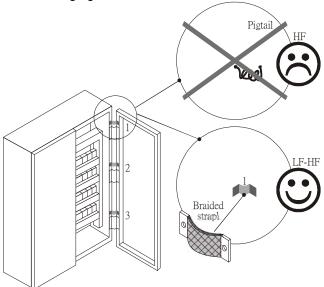

This is why a thick short ground wire must be implemented for connecting to the common grounding path or the ground busbar. Especially when a controller (e.g. PLC) is connected to an AC motor drive, it must be grounded by a short and thick conducting wire. It is suggested to use a flat braided conductor (ex: metal mesh) with a lower impedance at high frequencies.


If the grounding wire is too long, its inductance may interfere structure of the building or the control cabinet and form mutual inductance and stray capacitance. As shown in the following figure, a long grounding wire could become a vertical antenna and turn into a source of noise.

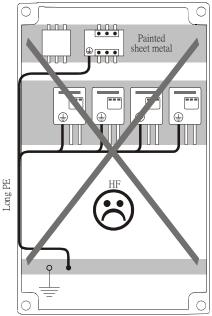

3.2 Ground Loops

A *ground loop* occurs when the pieces of equipment are connected to more than one grounding path. In this case, the ground current may return to the grounding electrode via more than one path. There are three methods to prevent ground loops

- 1. Use a common power circuit
- 2. Single point grounding
- 3. Isolate signals, e.g. by photocouplers

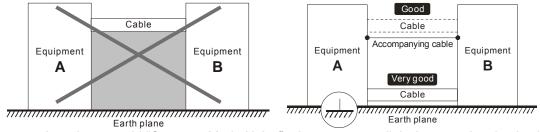

In order to avoid "Common Mode Noise", please use parallel wires or twisted pair wiring. Follow this rule and also avoid long wires, it is suggested to place the two wires as close to each other as possible.

3.3 Earthing Systems


The international standard IEC60364 distinguishes three different earthing system categories, using the two-letter codes TN, TT, IT.

- The first letter indicates the type of earthing for the power supply equipment (generator or transformer).
 - **T**: One or more points of the power supply equipment are connected directly to the same earthing point.
 - I: Either no point is connected to earth (isolated) or it is connected to earth via high impedance.
- The **second letter** indicates the connection between earth and the power supply equipment.
 - T: Connected directly to earth (This earthing point is separate from other earthing points in the power supply system.)
 - N: Connected to earth via the conductor that is provided by the power supply system
- The *third and forth letter* indicate the location of the earth conductor.
 - S: Neutral and earth conductors are separate
 - C: Neutral and earth are combined into a single conductor

TN system


TN: The neutral point of the low voltage transformer or generator is earthed, usually the star point in a three-phase system. The body of the electrical device is connected to earth via this earth connection at the transformer.

protective earth (PE): The conductor that connects the exposed metallic parts of the consumer. neutral (N): The conductor that connects to the start point in a 3-phase system or that carries the return current in a single phase system.

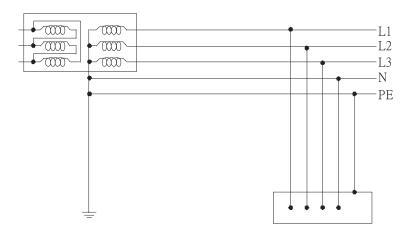


TN-S system

TN-S: PE and N are two separate conductors that are combined together only near the power source (transformer or generator). It is the same as a three-phase 5-wire system.

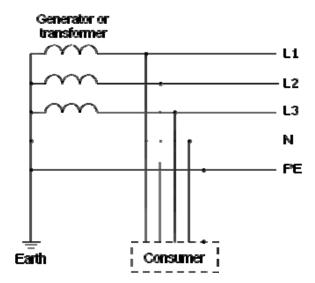


TN-C system

TN-C: PE and N are two separate conductors in an electrical installation similar to a three-phase 5wire system, but near the power side, PE and N are combined into a PEN conductor similar to a three-phase 4 wire system.

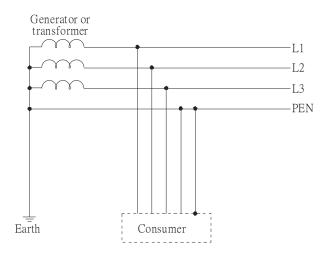


TN-C-S system

TN-C-S: A combined earth and neutral system (PEN conductor) is used in certain systems but eventually split up into two separate conductors PE and N. A typical application of combined PEN conductor is from the substation to the building but within the building PEN is separated into the PE and N conductors. Direct connection of PE and N conductors to many earthing points at different locations in the field will reduce the risk of broken neutrals. Therefore this application is also known as *protective multiple earthing (PME)* in the UK or as *multiple earthed neutral (MEN) in* Australia

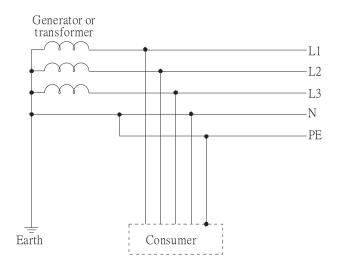

TT system


TT: The neutral point (N) of the low voltage transformer and the equipment frames (PE) are connected to a separate earthing point. The Neutral (N) of the transformer and electrical equipment are connected.

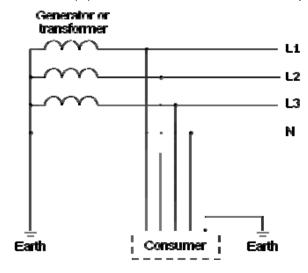

IT system

IT: The neutral point of the transformer and electrical equipment are not earthed, only the equipment frames PE are earthed.

In the IT network, the power distribution system Neutral is either not connected to earth or is earthed via high impedance. In such a system, an insulated monitoring device is used for impedance monitoring. A built-in filter should be disconnected by the RFI-jumper and an external filter should not be installed

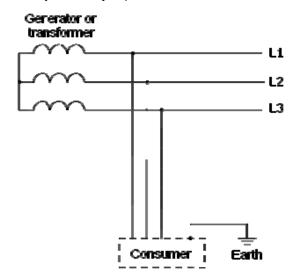

when the AC motor drive or the AC servo motor drive is connected to an IT system.

Criteria for earthing system and EMC

	TN-S	TN-C	TT	IT
Safety of	Good	Good	Good	Good
Personnel				
	Continuity of the	Continuity of the	RCD is mandatory	Continuity of the
	PE conductor must	PE conductor must	-	PE conductor must
	be ensured	be ensured		be ensured
	throughout the	throughout the		throughout the
	installation	installation		installation

Safety of property	Poor	Poor	Good	Good
	High fault current (around 1kA)	High fault current (around 1kA)	Medium fault current (< a few dozen amperes)	Low current at the first fault (< a few dozen mA) but high current at the second fault
Availability of energy	Good	Good	Good	Excellent
EMC behavior	Excellent	Poor (prohibited)	Good	Poor (should be avoided)
	Few equipotential Problems: - Need to handle the high leaking	Neutral and PE are the same Circulation of disturbance	- Over-voltage risk - Equipotential Problems: - Need to handle	- Over-voltage risk - Common-mode filters and surge
	currents problem of the device - High fault current	currents in exposed conductive parts (high magnetic-	the high leaking currents problem of the device	arrestors must handle the phase to phase voltage.
	(transient disturbances)	field radiation) - High fault currents (transient disturbances)	- RCD (Residual- current device)	- RCDs subject to nuisance tripping when common- mode capacitors are present
		distarbances)		- Equivalent to TN system for second fault

Chapter 4 Solution to EMI: Shielding

4.1 What is Shielding?


Electrostatic shielding is used to isolate equipment so that it will not create electromagnetic field interference or be influenced by an external electromagnetic field. A conductive material is used for electrostatic shielding to achieve this isolation.

A Faraday cage can be made from a mesh of metal or a conductive material. One characteristic of metal is that it is highly conductive and not electrostatic, which offers shielding and prevents interference by external electrical fields. Metal with its high conductivity protects the internal devices from high voltages—no voltage will enter the cage even when the cage is experiencing a high current. In addition, electromagnetic fields can also pass through the Faraday cage without causing any disturbance.


Electromagnetic shielding is applied to some electrical devices and measurement equipment for the purpose of blocking interference. Examples of shielding include:

- earth high-voltage indoor equipment using a metal frame or a high-density metal mesh
- shielding a power transformer is achieved by wrapping a metal sheet between the primary and secondary windings or by adding an enamel wire to the winding wire which is then earthed.
- a shielding coating, which is made of metal mesh or conductive fibers to provide effective protection for the workers who work in a high-voltage environment.

In the picture below, the radio appears to be not fully covered by metal but if the conductivity of the metal is high, radio waves are completely blocked and the radio will not receive any signal.

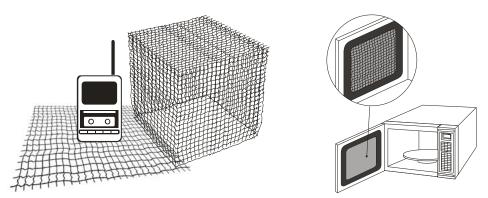

Mobile phone connections are also established through the transmission of radio waves. This is why the mobile phone reception is often cut off when we walk into an elevator. The metal walls of the elevator create the same shielding effect just as if we had entered a metal cage. Another example is a microwave oven. The microwave door may seem transparent in visible light, but the density of the metal mesh in the microwave door blocks the electromagnetic waves. A higher density of the metal mesh offers better shielding.

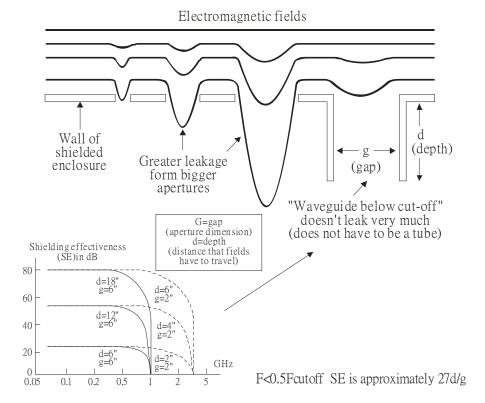

4.2 How to reduce EMI by Shielding?

Iron and other metals are high conductivity materials that provide effective shielding at extremely low frequencies. But conductivity will decrease as:

- 1. High frequency signals are applied to the conductor.
- 2. Equipment is located in a strong magnetic field
- 3. The shielding frame is forced into a specific form by machines.

It is difficult to select a suitable high-conductivity material for shielding without the help from a shielding material supplier or a related EMI institution.

Metallic Shielding Effectiveness

Shielding Effectiveness (SE) is used to assess the applicability of the shielding shell. The formula is:

SEdB=A+R+B (Measures in dB) where A= Absorption loss (dB)

R= Reflection loss (dB)

B= Correction factor (dB) (for multiple reflections in thin

shields)

The absorption loss refers to the amount of energy loss as the electromagnetic wave travels through the shield. The formula is:

AdB=1.314($f\sigma\mu$) 1/2t where f= frequency (MHz)

μ= permeability relative to copper σ= conductivity relative to copper t= thickness of the shield in centimeters

The reflection loss depends on the source of the electromagnetic wave and the distance from that source. For a rod or straight wire antenna, the wave impedance increases as it moves closer to the source and decreases as it moves away from the source until it reaches the plane wave impedance (377) and shows no change. If the wave source is a small wire loop, the magnetic field is dominant and the wave impedance decreases as it moves closer to the source and increases as it moves away from the source; but it levels out at 377 when the distance exceeds one-sixth of the wavelength.

Electrical Cabinet Design

In a high frequency electric field, shielding can be achieved by painting a thin layer of conductive metal on the enclosure or on the internal lining material. However, the coating must be thorough and all parts should be properly covered without any seams or gaps (just like a Faraday cage). That is only the ideal. Making a seamless shielding shell is practically impossible since the cage is composed of metal parts. In some conditions, it is necessary to drill holes in the shielding enclosure for installation of accessories (like optional cards and other devices).

- 1. If the metallic components are properly welded using sophisticated welding technology to form an electrical cabinet, deformation during usage is unlikely to occur. But if the electrical cabinet is assembled with screws, the protective insulating layer under the screw must be properly removed before assembly to achieve the greatest conductivity and best shielding.
- 2. Drilling holes for the installation of wires in the electrical cabinet lowers the shielding effectiveness and increases the chance of electric waves leaking through the openings and emitting interference. We recommend that the drilled holes are as narrow as possible. When the wiring holes are not used, properly cover the holes with metal plates or metal covers. The paint or the coating of the metal plate and metal cover should be thoroughly removed to ensure a metal-to-metal contact or a conductive gasket should be installed.
- 3. Install industrial conductive gaskets to completely seal the electrical cabinet and the cabinet door without gaps. If conductive gaskets are too costly, please screw the cabinet door to the electrical cabinet with a short distance between the screws.
- 4. Reserve a grounding terminal on the electrical cabinet door. This grounding terminal shall not be painted. If the paint already exists, please remove the paint before grounding.

Electrical wires and cables


Shielded Twisted Pair (STP) is a type of cable where two insulated copper wires are twisted together with a metal mesh surrounding the twisted pair that forms the electromagnetic shielding and can also be used for grounding.

The individual electrical wires and complete cable are surrounded by (synthetic) rubber that provides insulation and also protects against damage.

There are two types of electrical cables: high voltage and low voltage. The high voltage cable differs from the low voltage cable in that it has an additional insulation layer called the dielectric insulator within the plastic sleeve. The dielectric insulator is the most important component in insulation. The low voltage cable is usually only filled with a soft polymer material for keeping the internal copper wire in place.

The shield has two functions.

- 1. To shield the electrical wire and cable.
 - A. Electric currents increase as power flows through the power cable and generate an electrical field. Such interference can be suppressed inside the cable by shielding the power cables or the electrical wires.
 - B. To form a protective earthing. When the cable core is damaged, the leakage current will flow via the shield to ground
- 2. To protect the cable. A power cable used for the computer control purpose generates only relatively low amount of current inside the cable. Such power cable will not become the source of interferences but has great possibility to be interfered by the surrounding electrical devices.

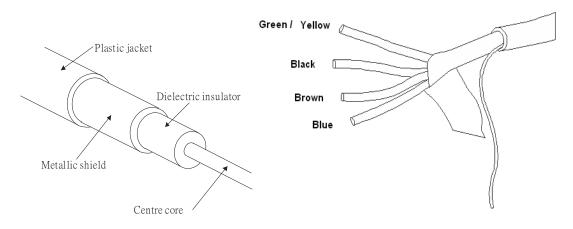


Chapter 5 Solution to EMI: Filter

5.1 Filter

Electromagnetic interference is transmitted in two ways, by radiation and by conduction. The most effective and economical method of reducing radiated interference is to use shielding and of reducing conducted interference is to use an electromagnetic filter.

Noise interference can be divided into two categories: high frequency (150kHz~300MHz) and low frequency (100Hz~3000Hz). High-frequency noise fades more over distance and has a shorter wavelength, while low-frequency noise fades less over distance and has a longer wave-length. Both types of interference are transmitted through power cables and power leads, affecting the power supply side.


High-frequency interference at the power side can be eliminated or attenuated by mounting a filter. The filter consists of coils and capacitors. Some drives do not have a built-in filter, in which case the installation of an external option filter is required. The drawing below shows a standard filter diagram:

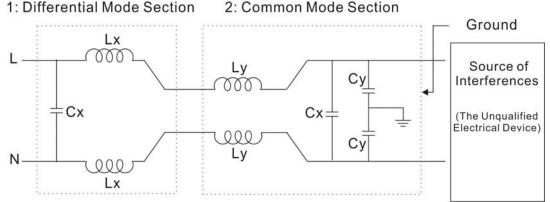

A filter is composed of a Differential Mode section (to eliminate noise below 150 kHz) and a Common Mode section (to eliminate noise above 150 kHz). For high-frequency noise, the inductor acts as a high impedance to form an open circuit and the capacitor acts as a low impedance to form a short circuit. Proper design and dimensioning of inductors and capacitors give a resonant circuit to absorb harmonic currents. Capacitor Cy is earthed to lead the harmonic currents to the ground.

External Filter


The filter and the AC drive should be installed in the control cabinet or on the mounting plate that is earthed to ground. The motor cable must be shielded and as short as possible. Please use the filters recommended by Delta to ensure compliance with EMC standards.

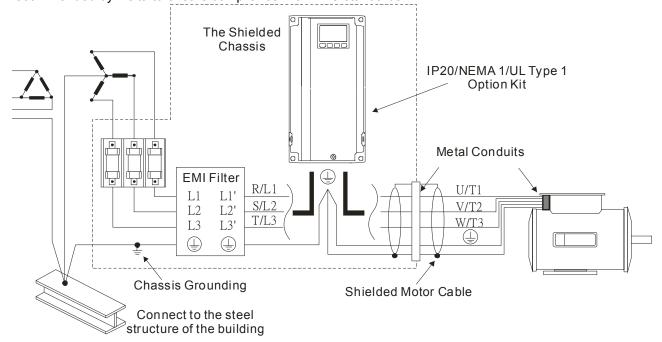

AC Motor Drives with Built-in Filter

- 1. Since interferences are suppressed by installing an earthed capacitor in the filter, the amount of current to ground (leakage current) could result in electric shocks to personnel or the power system. Please be aware of this problem.
- 2. Since the leakage current to ground can be high, it is crucial to implement protective earthing to prevent electrical shocks.

Filter Installation (With and Without)

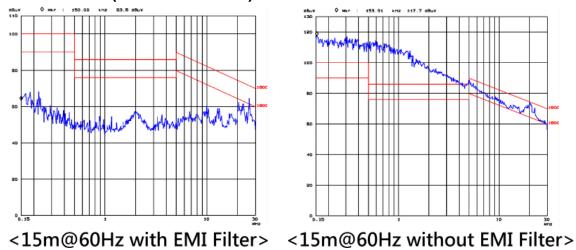


Zero Phase Reactor (Choke)

Interferences can also be suppressed by installing a zero phase reactor at the power supply side and/or the AC Motor Drive's output, depending on where the interference is. Since currents are large at the power input and the AC Motor Drive's output, please carefully select the magnetic core with suitable current handling capability. An ideal magnetic material for large currents is compound magnetic powder. It has a higher current handling capability and higher impedance compared to pure metallic magnetic cores. It is therefore suitable to implement in a high frequency environment. The impedance can also be enhanced by increasing the turn ratio.


Zero Phase Reactor Installation

There are two installation methods, depending on the size of the zero phase reactor and the motor cable length.

1. Wind the motor cable through the middle of a zero-phase reactor 4 times. Place the reactor and the AC Motor Drive as close to each other as possible.

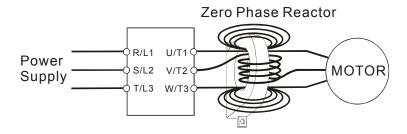


2. Place all wires through the middle of four zero-phase reactors without winding.

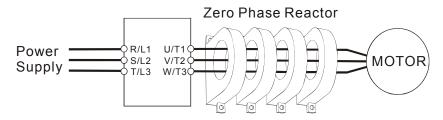

Analog Input Signals

If the analog input signals are affected by noise from the AC motor drive, please connect a capacitor and a ferrite core as indicated in the following diagram.


Wind the wires around the core in same direction for 3 times or more.

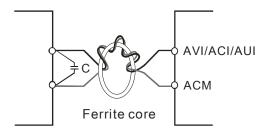

5.2 Harmonic Interference


The AC motor drive's input current is non-linear, the input rectifier generates harmonics. Harmonics must be limited to within a certain range to avoid impact the mains power and to avoid current distortion to ensure surrounding devices are not influenced. An AC Motor Drive with built-in DC reactor suppresses harmonic currents (Total Harmonic Current Distortion THID) effectively and therefore reduces the harmonic voltage peaks (Total Harmonic Voltage Distortion).

Harmonic Current at the Power Supply Side

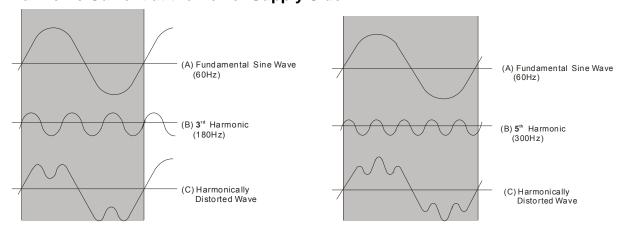

Suppression of Harmonic Currents

When a large portion of lower order harmonic currents (5th, 7th, 11th etc) occur at the power input, surrounding devices will be disturbed and the power factor will be low as a result of reactive power. Installing a reactor at the AC Motor Drive's input effectively suppresses lower order harmonic currents.

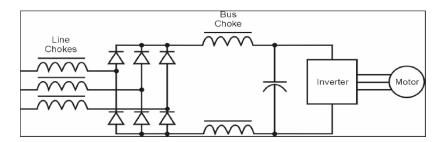

AC Reactor

Installed in series with the power supply and is effective in reducing low order current harmonics. Features of an AC reactor include:

- Reduces the harmonic currents to the AC Motor Drive and increases the impedance of the power supply.
- 2. Absorbs interferences generated by surrounding devices (such as surge voltages, currents, and mains surge voltages) and reduce their effect on the AC Motor Drive.
- 3. Increases the power factor.

DC Reactor

A DC-Reactor is installed between the rectifier and the DC-bus capacitor to suppress harmonic currents and to achieve a higher power factor.

Current Wave Diagrams

