


Mounting Template for Mitsubishi FR-PU07-01 Keypad

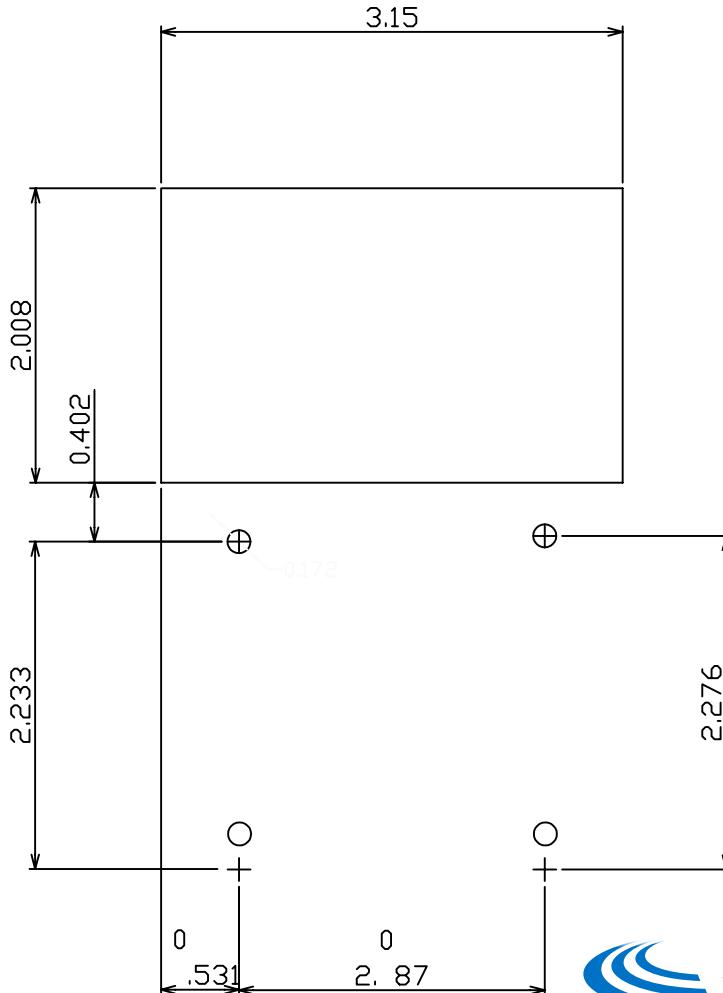

Quick Instructions

- Determine where to mount the parameter unit
- Cut a 2.020" X 3.120" rectangular hole
- Tap 4 size 3 metric holes
- Slide the back of the parameter unit into the rectangular hole
- Attach the parameter unit with the screws provided
- The male end of an Ethernet cable plugs directly into the parameter unit