
MITSUBISHI TRANSISTORIZED INVERTER



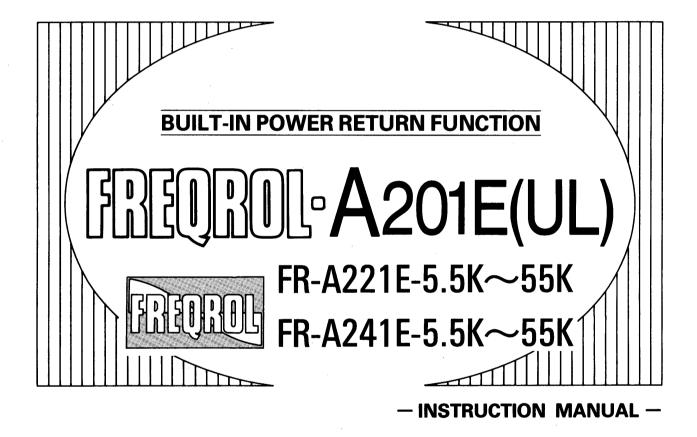

Thank you for choosing this Mitsubishi Inverter. This manual gives handling, safety and operating instructions.

This section is specifically about safety matters Read this manual carefully and become familiar with the inverter before operation, pay special attention to the safety information marked Warning. This warning symbol indicates the presence of dangerous voltage. It informs you of high voltage conditions, situations and locations that 🔊 WARNING may cause death or serious injury if you do not follow precautions. This symbol indicates a general warning. Serious injury may occur if precautions are not followed. Where these Warnings are written, pay special attention to the precautions detailed. and the second N. A. 月月期 网络纳兰卡拉 微学网络说:"这些爱信和认为我最好的,你能能是个好好。" tij - Ligting (Eller <mark>1994), en seneralen en seneralen en seneralen en seneralen en seneralen en seneralen en s</mark> Seneralen الرائع والدرقيج معاورتها والم · "你们,你们,你们,你们就是不能的。"他不能 이 물을 위해 같이 아직 물이 많다. 같은 것이 가지 않는 것이 없는 것이 없는 것이 없다. 化素力 化合物化化 化过去分词 化成过滤剂 结果是种产的制度的复数形式 网络加拿大的 计数据 医现象性结束 化试验 化分析 化合理 医闭口 化化合理 化化合理 - date des date parte de la composición e ne provinsi kana na katalah na dising pangan sa vience of the second two states is in its states at 第1. 使用的人,就是我们的人们的问题,你们的一个人们不能是我们的人,你们不能不能。" population and the second and provide the second second underen under Anzeit und einen die zu der Lander weisen Die anderen Aussend 化生物化学 化合理性 含化 经外销管理 美国北方书生的 合词 a na mara shi a share talamin na salarin al

A – 1

Operator Safety

1. Electric shock prevention

 WARNING
Do not remove the front cover while there is power supplied to the inverter, there are high voltage terminals which can be accessed. Please check the wiring when the inverter is not powered.
There are high voltage capacitors in the main circuit which remain charged after the inverter has been turned off, wait 10 minutes after the Power Lamp has gone out.
Use good earthing. Earth the inverter before wiring the Power circuits and control circuits.
Do not operate with wet hands.
Do not damage, cut, trap, or degrade the cables.
Do not insert or remove the parameter unit from the inverter or the extension cable without first removing the power from the inverter.

化水晶石 医外骨关节 化化物化化化物 化苯

그 말을 하고 말을 즐었는다. 그 그

2. Fire Prevention

🛆 Do not mount on or near combustible material (such as wood).

Use a circuit breaker on the supply side of the inverter to prevent high current flow in the case of a fault.

3. Injury Prevention

Only supply the inverter with the voltage on the nameplate and in the Manual Specification section.


 Δ Other voltages may cause the inverter to fail.

🛆 Care should be taken when wiring to ensure correct terminals are used. Check polarity etc..

 \bigstar Do not touch the inverter while it is powered as certain parts become hot.

4. Other points

To prevent injury, damage, or product failure please note the following points. (1) Transportation and mounting

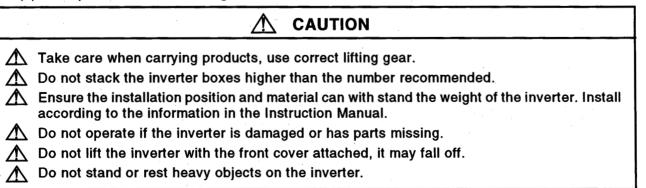

▲ CAUTION ▲ Check the inverter mounting orientation is correct. ▲ Prevent any dust, wire fragments or other foreign bodies from dropping into the inverter during wiring up and commissioning. ▲ Do not drop the inverter, or subject it to impacts. ▲ Environmental limitations, Check the ambient temperature, humidity, storage temperature, atmosphere, altitude, vibration. -10°C to +50°C (without freezing) -10°C to +40°C for enclosed specification. Less than 90% Relative Humidity without condensation. Ensure the environment is -20°C to 65°C (short time storage temperature), no corrosive or flammable gasses, altitude less than 1000m above sea level, vibration is less than 5.9m/s² (0.6G) (based on JIS C 0911). (2) Wiring

⚠ Do not fit power factor correction capacitor, or RFI filter to the output of the inverter.

- The connection orientation of the output cables U, V, W to the motor will effect the direction of rotation of the motor.
- All electrical connections should be carried out by a qualified electrician and must comply with the requirements of all relevant local and national wiring regulations for installation wiring.

(3) Trial run

:1

⚠ Check all parameters, and ensure that the machine will not be damaged by sudden start-up.

20.00

(4) Operation

	When retry function is selected the inverter will try to restart the machine up to 10 times over a 1 hour period. Ensure operator safety with other devices.
	The stop key can only be used at all times to stop the inverter when a parameter has been set, therefore use an external emergency stop button. Switch off start signal when resetting the inverter, failure to do so may start the motor immediately after reset.
$\mathbf{\Lambda}$	The Electronic motor thermal protection does not guarantee to prevent motor burn out.
⚠	Do not use a contactor in the inverter input for frequent start/stopping of the inverter, use control signals.
$\mathbf{\Lambda}$	To reduce the effect of mains conducted electromagnetic interference use a RFI noise filter.
⚠	Take care to ensure electromagnetic radiation from the inverter does not damage or effect the operation of nearby electrical equipment.
⚠	Use an input line reactor when the power supply capacity is large, or where harmonics from the inverter will cause problems.
⚠	Take countermeasures to prevent motor insulation damage from micro surge voltages in the supply cable.
Δ	Reset the inverter before starting set-up, initialises the parameters to factory set values.

	Λ	CAUTION			
 Do not use the inverter and motor at high speed until the machine has been checked. The inverter does not have a holding stop facility. For emergency stop another circuit must be used. 					
(5) Emergency stop	್ರಿಕ್ಷೆ ಮಾಡಿದೆ ಮತ್ತು ಮತ್ತು ಮತ್ತು ಮತ್ತು ಗ್ರೇಷ್ಠ ಮತ್ತು ಮತ್ತ ಮತ್ತು ಹೊಡಲಾಗಿದ್ದ ಮತ್ತು ಮಾಡಿದೆ ಬಿಹ್ಕಾ ಮೇಲ್ರಾಮ್ ಮತ್ತು				
	Λ	CAUTION			
▲ Use a circuit and mechanical brake the inverter fail.					
(6) Maintenance and inspection	·				
	$\overline{\mathbf{\Lambda}}$	CAUTION			
\Lambda Do not carry out a megga (insulat	ion	resistance) test on t	he control circuit of the inverter.		
(7) Disposing of the inverter			n an an an an an Arthraige an tao an an an An ann an Arthraige an Arthraige an Arthraige		
	Λ	CAUTION	n an the second seco Second second		
▲ Treat as industrial waste.			in de la transferie de la forma de la f Anti-transferie de la forma		
(8) General					
Many of the diagrams and drawings in or partially open, never run the inverter	r lik		ce the cover and ensure adequate		

ایا از دار وموس اد میشد دارد. ا elonitas, stasse of the start definition sources from seme hell group recompany. Superior ne na 1850 an estado en frederica e subileirar an argente estador e a la seconda a la seconda e a seconda e a Estador estador e a alexanda a alexanda e entre a cara a la caracteria a cara cara indexe estadas estadas entre Estador estador estador e estador e a caracteria e caracteria e a estador e a caracteria estador e a caracteria an - El and Brazaly a call more factors anti-mare paramétrica a sub-, adaptive and the president states of the product of the factor of a states of a states of the states of the s ÷. \$ _ * ē 31 u stall minimum a setti marene se indepensation data di mana minimum tata di setti setti setti setti setti set Presidente de la presidente de la composition de la composition de la composition de la composition de la compo unita di angestitation i serenje en israige e 一致你的神力,你们们们们就能能了。""我们的人。" man ter sagget states and a charapta jero ceretrali sa neh a ber sont ane convarios enclara 지수는 지수 말을 가지 않는 것을 ਼ ਹੋ-ਦੇ ਤਿੰਗੇਸ਼ਤ 4°

A CONTRACTOR OF A CONTRACTOR O	
1. OVE	RVIEW 1.1 to 1.4
1.1 PR	ECAUTIONS FOR OPERATION
1.1.2	Pre-operation Procedure1 – 1
1.1.3	Handling Information 1 – 2
1.2 ST	RUCTURE
1.2.1	Appearance and Part Names
1.2.2	Removal of the Front Cover
1.2.3	Removal and Reinstallation of the Parameter Unit
1.2.4	Removal and Reinstallation of the Accessory Cover
1.3 INS	STALLATION AND WIRING 3 – 1
1.3.1	Installation Instructions
1.3.2	Wiring Instructions
1.3.3	Design Information to Be Checked
1.3.4	Wiring of the Main Circuit
1.3.5	Wiring of the Control Circuit
1.4 PA	RAMETER UNIT
1.4.1	Structure of the Parameter Unit
1.4.2	Precautions for Using the Parameter Unit
1.4.3	Using the FR-ARW Parameter Copy Unit 4 – 4
. 1.4.4	Using the FR-PU01 Parameter Unit
1.4.5	Using the FR-ZRW Parameter Copy Unit 4 – 6
·	
2 OPE	RATION 21
2. OPE	RATION 2.1
· · · · · · · · · · · · · · · · · · ·	ERATION
2.1.1	Instruments and Parts to be Prepared before Operation
2.1.1 2.1.2	Instruments and Parts to be Prepared before Operation
2.1.1 2.1.2 2.1.3	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5
2.1.1 2.1.2 2.1.3 2.1.4	Instruments and Parts to be Prepared before Operation $5 - 1$ Pre-operation Settings $5 - 2$ Operation Mode $5 - 5$ Selection of the Operation Mode $5 - 6$
2.1.1 2.1.2 2.1.3	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 6
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 Operation Status Indication 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 Operation Status Indication 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the PU) 5 - 10
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 Operation Status Indication 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 Operation Status Indication 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the PU) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR	Instruments and Parts to be Prepared before Operation $5 - 1$ Pre-operation Settings $5 - 2$ Operation Mode $5 - 5$ Selection of the Operation Mode $5 - 6$ Operation Mode Indication, Operation Command Indication and $5 - 7$ External Operation Mode (Operation using the external input signals) $5 - 8$ PU Operation Mode (Operation using the PU) $5 - 10$ Combined Operation Mode (Operation using the external input signals and PU) $5 - 12$
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the PU) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12 AMETERS 3.1 to 3.5
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR 3.1 MC 3.1.1	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 Operation Status Indication 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the PU) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12 AMETERS 3.1 to 3.5 DNITORING FUNCTION 6 - 1
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR 3.1 MC 3.1.1 3.1.2	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the PU) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12 AMETERS 3.1 to 3.5 DNITORING FUNCTION 6 - 1 SHIFT Operation Sequence on the PU Main Monitor 6 - 1 Selecting Another Monitor Item in the Selective Monitoring Mode 6 - 2 LP FUNCTION 7 - 1
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR 3.1 MC 3.1.1 3.1.2	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the external input signals) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12 AMETERS 3.1 to 3.5 DNITORING FUNCTION 6 - 1 Selecting Another Monitor Item in the Selective Monitoring Mode 6 - 2 LP FUNCTION 7 - 1 Definitions of the Help Function Displays 7 - 2
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR 3.1 MC 3.1.1 3.1.2 3.2 HE	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the external input signals) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12 AMETERS 3.1 to 3.5 NITORING FUNCTION 6 - 1 SHIFT Operation Sequence on the PU Main Monitor 6 - 1 Selecting Another Monitor Item in the Selective Monitoring Mode 6 - 2 LP FUNCTION 7 - 1 Definitions of the Help Function Displays 7 - 2 Help Function Menu 7 - 4
2.1.1 2.1.2 2.1.3 2.1.4 2.1.5 2.1.6 2.1.7 2.1.8 3. PAR 3.1 MC 3.1.1 3.1.2 3.2 HE 3.2.1	Instruments and Parts to be Prepared before Operation 5 - 1 Pre-operation Settings 5 - 2 Operation Mode 5 - 5 Selection of the Operation Mode 5 - 6 Operation Mode Indication, Operation Command Indication and 5 - 7 External Operation Mode (Operation using the external input signals) 5 - 8 PU Operation Mode (Operation using the external input signals) 5 - 10 Combined Operation Mode (Operation using the external input signals and PU) 5 - 12 AMETERS 3.1 to 3.5 DNITORING FUNCTION 6 - 1 Selecting Another Monitor Item in the Selective Monitoring Mode 6 - 2 LP FUNCTION 7 - 1 Definitions of the Help Function Displays 7 - 2

i

3.3 SETTING	AND CHANGING THE VALUES IN THE PARAMETERS
3.3.1 Overvi	ew of the Parameter Unit Functions8 – 2
3.4 PARAMET	ERS
	eter List
3.4.2 Setting	of Parameters to Improve the Corresponding Operational Functions \ldots 9 – 4
[0], [1]	(Torque boost and maximum frequency)
[2], [3]	(Minimum frequency and base frequency)
[4] to [6]	(3-speed setting)
[7]	(Acceleration time)
[8], [9]	(Deceleration time and electronic overcurrent protection)
[10] to [13]	(DC dynamic brake operation and starting frequency) $\dots 9 - 9$
[14]	(Deceleration time and electronic overcurrent protection)
[15], [16]	(Jog frequency and jog acceleration/deceleration time)
[17]	
[18], [19]	(High-speed maximum frequency and base frequency voltage) $\dots \dots 9 - 13$
[22] to [27]	(Stall prevention operation level and multi-speed setting) $\dots 9 - 14$
[28], [29]	(Multi-speed input compensation and acceleration/deceleration pattern) $9 - 16$
[31] to [36]	(Frequency jump)
[37]	(Speed display)
[38] to [40]	(Automatic torque boost and output terminal assignment)
[41]	(Up-to frequency sensitivity)
[42], [43]	(Output frequency detection) $\dots 9 - 21$
[44] to [49]	(Second acceleration time, second torque boost, second V/F and second stall prevention operation)
[50] to [54]	(Second output frequency detection, display data and FM/AM terminal function selection)
[55], [56]	(Frequency monitoring reference and current monitoring reference) $\dots 9 - 24$
[57], [58]	(Coasting time for automatic restart after instantaneous power failure and rise time for automatic restart after instantaneous power failure) \dots 9 – 26
[59]	(Remote setting function selection)
[60]	(Intelligent mode selection)
[61] to [64]	(Reference current, reference current for acceleration, reference current for deceleration and statring frequency for elevator mode)
[65], [66]	(Retry selection and stall prevention operation level reduction
i esta concelerationale a	starting frequency)
[67] to [69]	retry count display erasure)
[] e [. [71] [] e e	(Applied motor)
[72]	(PWM frequency selection)
[73]	(0 to 5V, 0 to 10V selection)
[74], [75]	(Input filter time constant and reset selection/PU disconnection detection)
[76] to [78]	(Alarm code output selection, parameter write disable selection and reverse rotation selection)
[79]	(Operation mode selection)
[80] to [145]	(Motor capacity, number of motor poles and parameter unit language switching)
[152], [153]	(Open motor circuit detection level and open motor circuit detection time)

[155]	(Terminal RT activated condition selection)
[156]	(Stall prevention operation selection)
[157], [159]	(OL signal output waiting time and PWM frequency decrease
an ĝe	at low speed)
[900], [901]	(FM terminal calibration and AM terminal calibration)
[902] to [905]	(Frequency setting voltage/current, bias/gain)
3.5 INVERTE	R RESET

4 FUNCTIONS

4.1 to 4.12

4.1 C	ALIBRATION OF THE METER (FREQUENCY METER)
4.1.1	Calibration of the FM-SD Output $\ldots \ldots \ldots$
4.1.2	Calibration of the AM-5 Output
4.2 Pl	J DISCONNECTION DETECTION FUNCTION 12 – 1
· · · · · · · · · · · · · · · · · · ·	DJUSTMENT OF THE FREQUENCY SETTING SIGNALS "BIAS" AND "GAIN" . 13 – 1
4.4 SI	ELECTION OF MAGNETIC FLUX VECTOR CONTROL
4.5 A	JTO TUNING
4.6 PI	ROGRAMMED OPERATION FUNCTION
4.6.1	Preparation
4.6.2	Program Setting (Pr. 201 to 230) 16 – 3
4.6.3	
4.6.4	Operation
	Programmed Operation Battery Backup (FR-EPD option)
	POINT FLEXIBLE V/F CHARACTERISTIC
	J OPERATION INTERLOCK FUNCTION AND EXTERNAL
	GNAL-BASED OPERATION MODE SWITCHING FUNCTION
4.8.1	PU Operation Interlock Function
4.8.2	External Signal-Based Operation Mode Switching Function
	TOP-ON-CONTACT CONTROL 19 – 1
4.9.1	Wiring Example
4.9.2	Operation Example (external mode, multiple speeds (3 speeds))
4.9.3	Setting
	DAD BASED FREQUENCY CONTROL FUNCTION
	1 Wiring Example
4.10.	2 Operation Example
4.10.	3 Setting
	ETECTED SPEED CORRECTION FOR PLG FEEDBACK CONTROL
4.11.	1 Wiring Example
4.11.	2 Operation
4.11.	3 Specifications
	1 Wiring Example
4.12.	2 Operation Example
4.12.	3 [.] Setting
	4 Terminals Used
4.12.	5 Protective Function

5. PROTECTIVE FUNCTIONS 5.1	to 5.3
5.1 ALARMS	. 23 – 1
5.1.1 Alarms	. 23 – 1
5.1.2 Digital and Actual Characters	. 23 – 3
5.1.3 Alarm History (History of Alarm Definitions)	. 23 – 3
5.1.4 Erasing the Alarm History (History of Alarm Definitions)	. 23 – 3
5.1.5 Alarm Code Output	
5.2 TROUBLESHOOTING	. 24 – 1
5.2.1 Checking the Parameter Unit Display	. 24 – 1
5.2.2 Faults and Check Points	
5.2.3 Protective Functions	. 24 – 3
5.2.3 Protective Functions 5.3 MAINTENANCE AND INSPECTION	. 25 – 1
5.3.1 Precautions for Maintenance and Inspection	. 25 – 1
5.3.2 Check Items	. 25 – 1
5.3.3 Replacement of Parts	. 25 – 3
5.3.4 Measurement of Main Circuit Voltages, Currents and Powers	. 25 – 4
6. SELECTION INSTRUCTIONS	6.1
6.1 INSTRUCTIONS FOR SELECTING PERIPHERALS	
6.1.1 Electrical Noise	
6.1.2 Power Harmonics	26 – 4
6.1.3 Leakage Current	. 26 – 5
6.1.4 Selecting the Rated Sensitivity Current for the Earth Leakage Circuit Breaker	
6.1.5Peripheral Device List6.1.6Driving a 400V Class Motor with the Inverter	. 26 – 9
7. SPECIFICATIONS 7.1	to 7.2
7.1 SPECIFICATIONS	~27 - 1
7.1.1 Standard Specifications	$\frac{27}{100}$
7.1.2 Block Diagram	
7.1.3 Terminal Connection Diagram	
7.1.4 Terminals	
7.1.5 Terminal Block Arrangement	
7.1.6 Field Wiring Reference Table	
7.1.7 Outline Drawings	27 - 11
7.1.8 Panel Cutting Dimensions (for heat sink outside mounting)	
7.1.9 FR-PU02 Parameter Unit Dimension Diagram	
7.1.10 FR-CU01 Serial Communication Unit Outline Drawing	-
7.2 OPTIONS	. 28 – 1
7.2.1 Option List	. 28 – 1
7.2.2 Inboard Dedicated Options	
7.2.3 External Dedicated Options	., 28 – 6

1. OVERVIEW

2. OPERATION

3. PARAMETERS

4. FUNCTIONS

5. PROTECTIVE FUNCTIONS

6. SELECTION INSTRUCTIONS

7. SPECIFICATIONS

1. OVERVIEW

This chapter provides an "overview" of the FR-A201E

"inverter with built-in power return function". Always read the precautions and instructions in this chapter before using the equipment.

1.1 PRECAUTIONS FOR OPERATION	1 - 1
1.2 STRUCTURE	
1.3 INSTALLATION AND WIRING	
1.4 PARAMETER UNIT	
· · · · · · · · · · · · · · · · · · ·	


1.1 PRECAUTIONS FOR OPERATION

1.1.2 Pre-operation Procedure

4. Wiring

1. Unpacking and product check

Unpack the inverter and check the capacity plate on the front cover and the rating plate on the inverter side face to ensure that the type and output rating agree with your order and the inverter is intact.

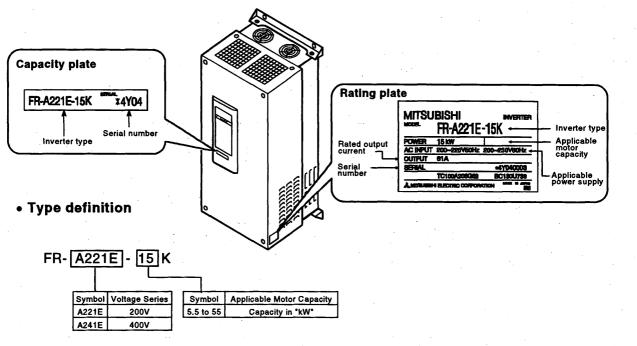

• Accessory.....Instruction manual, hangers (supplied to 11kW or more) If you have found any discrepancy, damage, etc. please contact your sales representative.



2. Preparations of instruments and parts required for operation

Instruments and parts to be prepared depend on how the inverter is operated. For required parts, etc. see Section 5 "INSTRUMENTS AND PARTS TO BE PREPARED FOR OPERATION".




3. Installation

To operate the inverter with high performance for a long time, install the inverter in a suitable place, with correct orientation, and with proper clearances. (See page 3-1.)



Connect the power supply, motor and operation signals (control signals) to the terminal block. If they are connected improperly, the inverter itself may be damaged. (See page 3-3.)

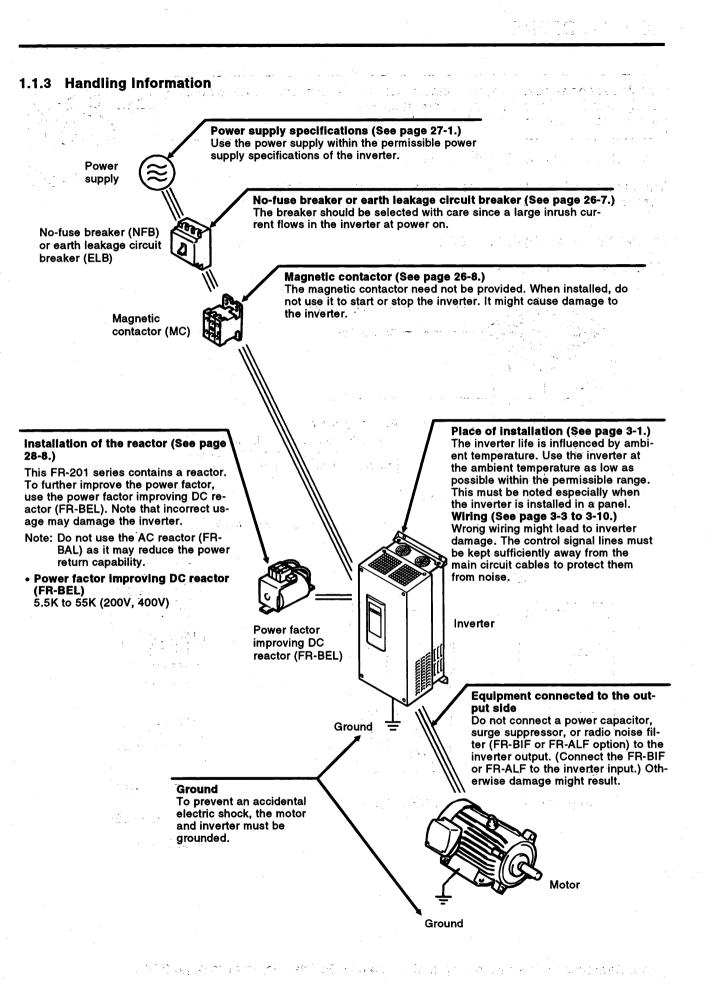

1-2


In this section appearance, part names, component removal and reinstallation, lequipment installation and wiring are explained. In this manual, parts will be described with the following names.


1.2.1 Appearance and Part Names

The names and locations of the inverter parts are given below. For the position of the charge lamp, refer to page 27-8.

FR-A221E (A241E)-5.5K to 55K


(The chassis and covers are made of steel plates.)

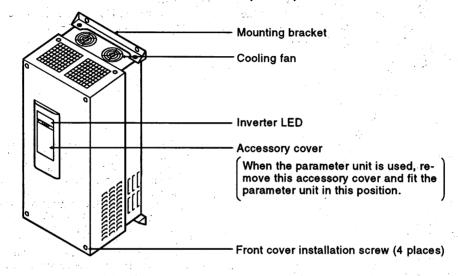

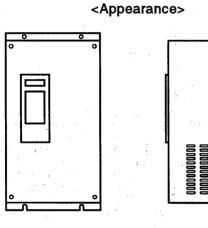


<Front view>

<Side view>

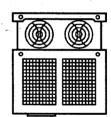

<Top view>

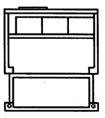

<Bottom view>

Note: Dimensions differ according to the capacity. For details, refer to page 27-11.

1.2.2 Removal of the Front Cover

Removal	1) Remove the front cover installation screws (4 places)
er i i i i i i i i i i i i i i i i i i i	
600-	
Reinstallation	
	1) Fix the front cover with the installation screws (4 plac
	a de la companya de La companya de la comp
er	
lote: 1. Check carefully that the front cover ha	as been reinstalled securely.
 The same serial number is printed on plate on the inverter side face. Before re Example: Capacity plate A46150 Rating plate A46150 	as been reinstalled securely. the capacity plate on the front cover and the rati einstalling the front cover, check the serial numbe digit serial number
plate on the inverter side face. Before r Example: Capacity plate A46150 Rating plate A46150 <u>001</u>	the capacity plate on the front cover and the rati einstalling the front cover, check the serial numbe digit serial number arks, oil, etc.
 2. The same serial number is printed on plate on the inverter side face. Before received by the inverter surface is stained with fingermative plate of the inverter surface is stained with surface state of the inverter surface state	the capacity plate on the front cover and the rati einstalling the front cover, check the serial numbe digit serial number arks, oil, etc.
 2. The same serial number is printed on plate on the inverter side face. Before received by the inverter surface is stained with fingermating removal or reinstallation work, gently cloth soaked with a neutral detergent or ethanol Note: 1. Do not use any solvent, such as ac zene, toluene or alcohol. These wil inverter surface to dissolve and the particular solvent is a solvent or the particular solvent is a solvent or the particular solve and the par	the capacity plate on the front cover and the ratie einstalling the front cover, check the serial number digit serial number arks, oil, etc. ean it with a tetone, ben- I cause the aint to peel.
 2. The same serial number is printed on plate on the inverter side face. Before restangle: Capacity plate A46150 Rating plate A46150 001 3-c the inverter surface is stained with fingermating removal or reinstallation work, gently cloth soaked with a neutral detergent or ethanol Note: 1. Do not use any solvent, such as ac zene, toluene or alcohol. These will inverter surface to dissolve and the particular surface to dissolve a	the capacity plate on the front cover and the ratie einstalling the front cover, check the serial number digit serial number arks, oil, etc. ean it with a setone, ben- I cause the aint to peel. er LED with
 2. The same serial number is printed on plate on the inverter side face. Before reaction in the inverter side face. Before reaction in the inverter surface is stained with fingermatic staining removal or reinstallation work, gently cloth soaked with a neutral detergent or ethanol Note: 1. Do not use any solvent, such as ac zene, toluene or alcohol. These will inverter surface to dissolve and the part of the part o	the capacity plate on the front cover and the ratie einstalling the front cover, check the serial number digit serial number arks, oil, etc. ean it with a lean it with a lean it with a lean to peel. er LED with


FR-A221E-5.5K to 55K. FR-A241E-5.5K to 55K

1.2.3 Removal and Reinstallation of the Parameter Unit

To ensure safety, remove and reinstall the parameter unit after switching the power off.

 Hold down the top button of the parameter unit and pull the parameter unit toward you, using the catch as a support.


Removal

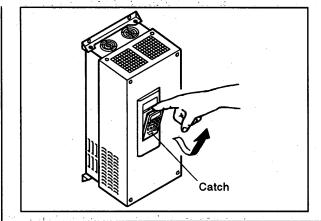

Reinstallation

• Direct installation onto the inverter

- 1) After fitting the fixing hole of the parameter unit (PU) on the catch of the cover, push the parameter unit into the inverter, using the catch as a support. Fixing hole Catch Installation using the cable (option) 1) Securely insert one end of the cable into the connector of the inverter and the other into the PU connector. Insert the cable connector along the guides of the inverter or PU connector. (If the orientation is incorrect, the inverter may be damaged.) 2) After plugging the cable connector into the inverter con-Installation nector, fix it securely with the installation screws. screws Guides
- Note: 1. The parameter unit must only be installed on the inverter with the front cover fitted. 2. During installation, do not apply force to the display (liquid crystal).
 - 3. The parameter unit can be used with any of the FR-A100, 100E, 200 and 200E series inverters.

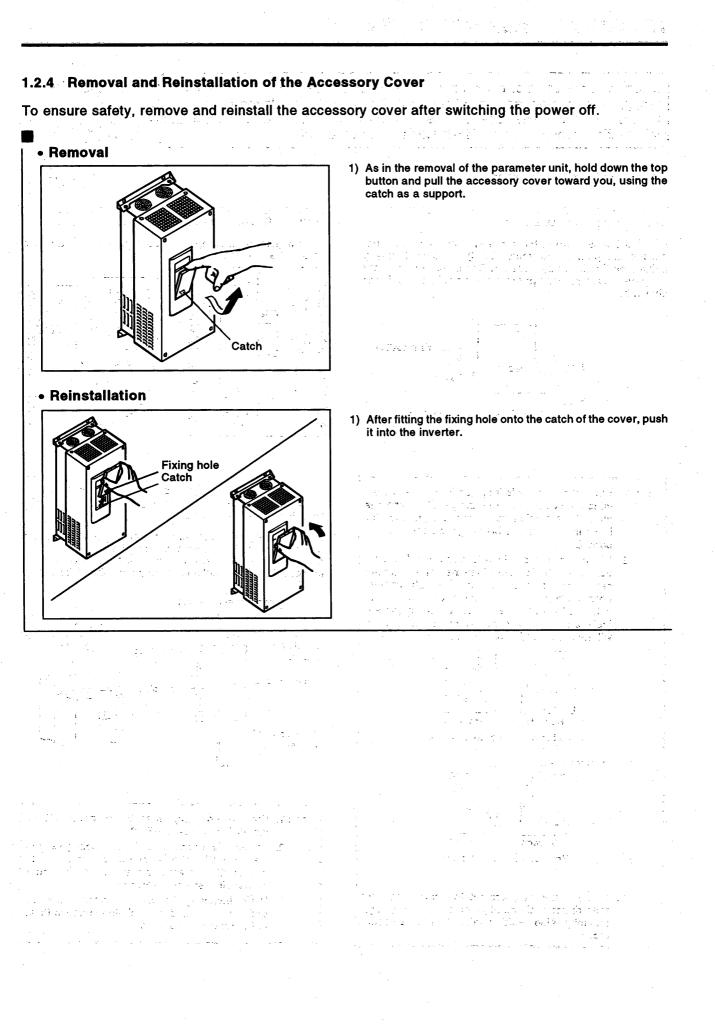


1.3 INSTALLATION AND WIRING

Incorrect installation or connection might cause the inverter to operate incorrectly, and in some cases, might reduce its life considerably. In the worst case, the inverter may be damaged. Please use the inverter in accordance with the information, precautions and instructions in this manual.


1.3.1 Installation Instructions

Note on ambient temperature.

Ambient temperature in the place of installation must not exceed the permissible value (50°C) because it greatly influences the life of the inverter. Check that the ambient temperature is within the permissible range in the positions shown below.

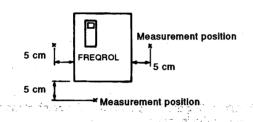


- Note: 1. When the inverter is installed in a panel, determine the cooling method and panel dimensions so that the ambient temperature of the inverter is within the permissible range (as specified on page 27-2).
 - 2. When two or more inverters are installed or a ventilation fan is mounted in the panel, extreme care must be taken to keep the ambient temperature of the inverter below the permissible value. If the inverters and/or ventilation fan are installed incorrectly, the ambient temperature will rise and ventilation effect will reduce.

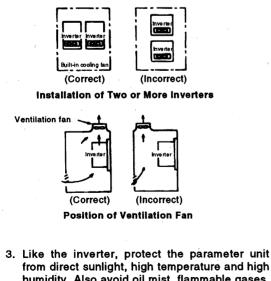

from direct sunlight, high temperature and high humidity. Also avoid oil mist, flammable gases, etc


Leave sufficient clearances around the inverter.

For adequate heat dissipation, leave sufficient clearances around the inverter.

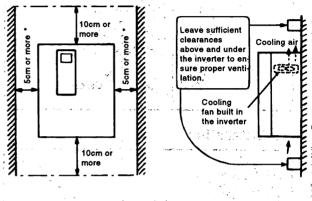

The amount of heat generated in the panel can be reduced considerably by placing the heat sink of the inverter outside the panel.

In long-lasting regenerative applications such as winding or a lifting operation where a regenarative torque is applied for a long time, it is recommended to install the inverter with its heat sink placed outside the panel as shown below.

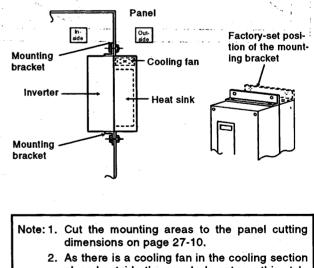


- placed outside the panel, do not use this style of mounting in an environment where waterdrops, oil mist, dust, etc. exist. 3. When installing the inverter, remove the top
- and bottom mounting brackets and move them to the required positions.

Install the inverter securely with bolts.

12

Install the inverter on an installation surface securely and vertically (so that the letters FR-A201E are located at the front) with screws or bolts.

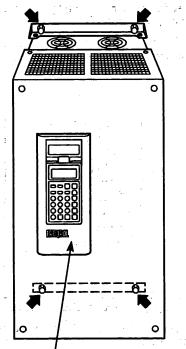


Set this side at front.

Note: The inverter must be installed vertically. Horizontal or side installation may cause the inverter to fail.

Never connect any inboard option designed for exclusive use with the FR-A200 (FR-APA, APB, APC, APD, APE).

The inboard option designed for exclusive use with the FR-A200 (FR-APA to APE) must not be connected to the FR-A201E. Such connection will damage both the inverter and option.


Use the FR-EPA, EPB, EPC, EPD, EPE, EPG or EPH option.

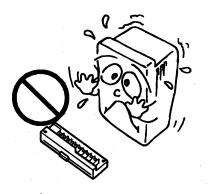

FR-APA to APE


Install the inverter where it is not subjected to vibration.

Also take the vibration of a conveyor, press, etc. into consideration.

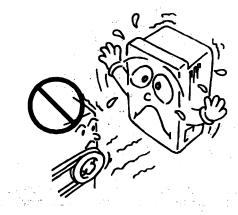

Do not install the inverter where it is subjected to oil mist, flammable gases, fluff, dust, dirt, etc.

Install the inverter in a clean place or inside a totally enclosed panel which does not accept any suspended matter.

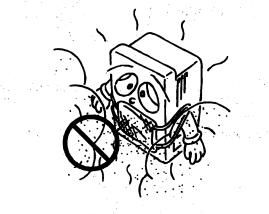

Install the inverter on a non-combustible surface.


Install the inverter to a non-combustible. A fire may start if the inverter is installed directly to or near a combustible.




3-2

1.3.2 Wiring Instructions

The power must not be applied to the output terminals (U, V, W), otherwise the Inverter will be damaged.

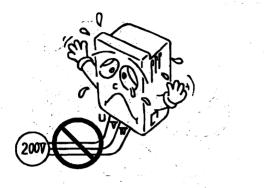

Use sleeved solderless terminals for the power supply and motor cables.

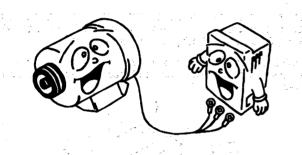


The following terminals are isolated from each other. These terminals must not be connected to each other or grounded.

Common terminals SD, 5 and SE of the control circuit.

Use shielded or twisted cables for connection to the control circuit terminals.


Run them away from the main and power circuits (such as 200V relay sequence circuit).

Run the connection cable using the space on the lefthand side of the main circuit terminal block.

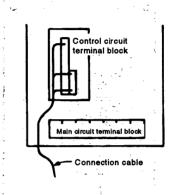

During wiring, do not leave wire offcuts in the inverter.


Wire offcuts may cause a fault, failure or malfunction. Keep the inverter clean.

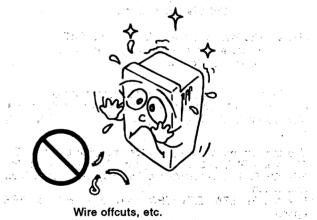

246400

When rewiring after operation, make sure that the inverter LED has gone off and that the charge lamp on the printed circuit board or beside the terminal block has gone off.

Soon after the power is shut off, there is a dangerous voltage in the capacitor. Before starting work, ensure that the charge lamp is off.

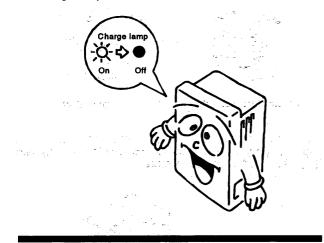


The cable size for connection to the control circult terminals should be 0.75 mm^2 .

If the cable size used is 1.25mm² or more, the front cover may expand, resulting in a contact fault of the parameter unit. This fault is indicated by the following message displayed on the parameter unit and disables operation from the parameter unit. Run the cables so that they do not occupy too much of the control box terminal block space.

Parameter unit display PU to Inverter comms. Error Inv. Reset ON

When the power supply voltage is special (380 to 460V), change the connection of the jumper in the internal transformer. (400V class)

If the connection is not changed, the inverter will be damaged. (See page 3-7)

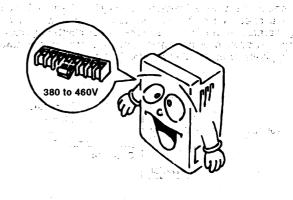


When the wiring distance between the inverter and motor is long especially at the time of low frequency output, a voltage drop over the main circuit cables will reduce the motor torque. Use a large gauge for the main circuit cables to keep the voltage drop within 2%.

Especially for long-distance wiring, the maximum wiring length should be not more than 500m. Otherwise, the overcurrent protection may be activated accidentally as a result of a charging current generated by the stray capacity of the wiring. For operation under magnetic flux vector control, the inverter-to-motor wiring length should be within 30m. (A selection example at the wiring distance of 20m is given on page 26-7.)

1.3.3 Design Information to Be Checked


Provide electrical and mechanical interlocks for MC1 and MC2 which are used for commercial power supplyinverter switch-over.

The inverter will be damaged not only by miswiring but also by a sneak current from the power supply due to arcs generated at the time of switch-over or chattering caused by a sequence error, when there is a commercial power supply-inverter switch-over circuit shown below.

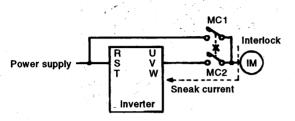


When a machine restart is to be prevented at power restoration after a power failure, provide a magnetic contactor MC in the primary circuit of the inverter and also make up a sequence which will not switch on the start signal.


If the start signal (start switch) remains on after a power failure, the inverter will automatically restart as soon as the power is restored.

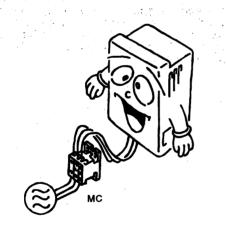

When connecting the control circuit to a power supply separately from the main circuit, make up a circuit so that when the power supply terminals R1, S1 for the control circuit are switched off, the main circuit power supply terminals R, S, T are also switched off. Refer to 3-6 for connection. Since input signals to the control circuit are at a low level, use two parallel micro signal contacts or twin contact for contact inputs to prevent a contact fault.

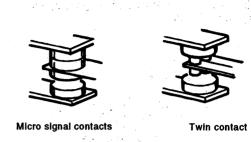



Do not apply a voltage to the contact input terminals (e.g. STF) of the control circuit.

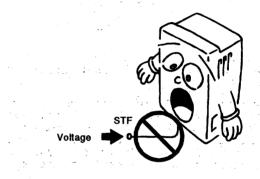

Do not apply a voltage directly to the alarm output signal terminals (A, B, C).

Apply a voltage via a relay coil, lamp, etc. to these terminals.

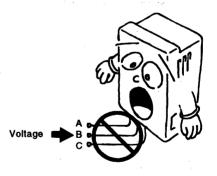

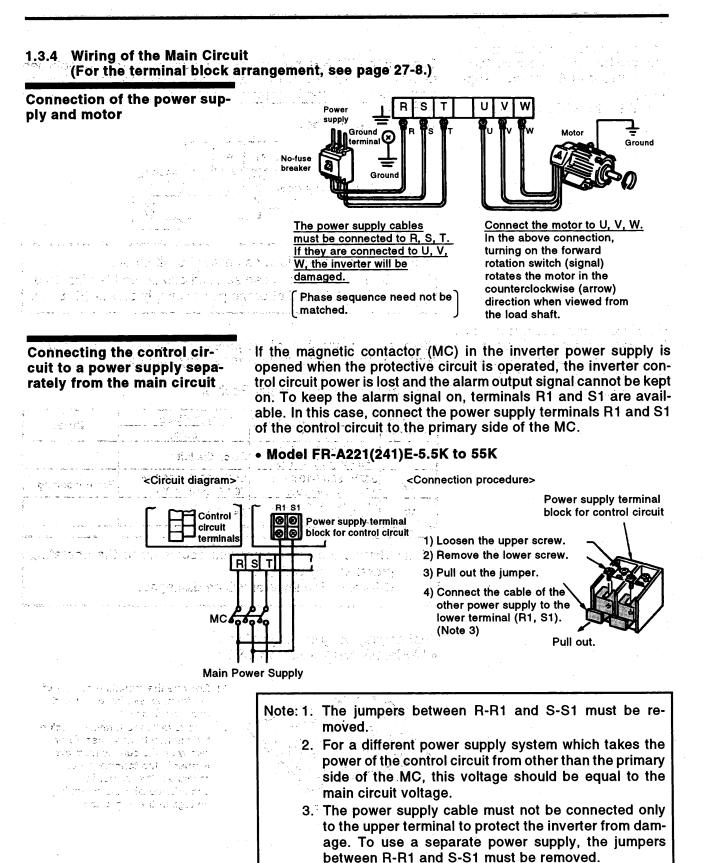


3-6

Connection of the power factor improving DC reactor (option)

(for 5.5K to 55K inverters)

Connect the FR-BEL power factor improving DC reactor between terminals P1 and P. In this case, the jumper connected across terminals P1-P must be removed. Otherwise, the reactor will not operate.

<Connection method>

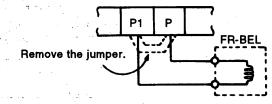

Note: 1. The wiring distance should be within 5m. 2. The size of the cables used should be identical to or larger than that of the power supply cables (R, S, T).

Where the power supply is special (342V or below, 484V or above) for the 400V series inverters

> uerus qui columbia State - Age and

al el estable de la c

. 3

 $\mathbb{E}_{S_{2}} < \mathbb{E}_{1} \subset \mathbb{E}_{1}$ 经利润 算具工作输行的 机结合式运行的

. <u>.</u> 8.2

Sec. 12

1711 - Y - A

Change the connection of the jumper to the internal transformer according to the operating power supply voltage.

Voltage Range vs. Jumper Position


Jumper	Operating Pow	Note	
Position	50Hz	60Hz	NOLE
V1	323V (380V-15%) to 456.5V (415V+10%)	As on the left	
V2	342V (380V-10%) to 484V (440V+10%)	342V (380V-10%) to 506V (460V+10%)	Factory setting
V3	391V (460V-15%) to 506V (460V+10%)	As on the left	

Note: Change the jumper position according to the operating power supply voltage.

1.1

Otherwise the inverter will be damaged.

Changing the jumper position Model FR-A241E-5.5K to 15K

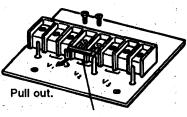


Jumper @

· . :5 *

- 1) Remove the mounting screws of the terminal symbol cover and remove the cover.
- 2) This reveals the terminal block of the internal transformer. After removing the screws from the jumper in the terminal block, reconnect the jumper in accordance with the operating voltage in the above table.

Model FR-A241E-18.5K to 55K

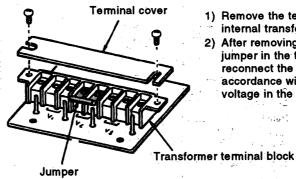

- 1) Remove the terminal cover of the internal transformer.
- 2) After removing the screws from the jumper in the terminal block, reconnect the jumper in accordance with the operating voltage in the above table.

144

Notes on Grounding

- The leakage current of the A201 series is larger than that of the other series (Z200, F400). To prevent an accidental electric shock, the motor and inverter must be grounded (200V class...class 3 grounding, grounding resistance must be 100 Ω or less, 400V class...special class 3 grounding, grounding resistance must be 10Ω or less).
- Ground the inverter by connecting it to the dedicated ground terminal. (Do not use the screws in the case, chassis, etc.)

(Unit: mm²)

Ground

• Use the largest possible gauge for the ground cable. The gauge should be equal to or larger than those indicated in the following table. The grounding point should be as near as possible to the inverter to minimize the ground cable length.

Motor	Ground Ca	ble Gauge	
Capacity	200V class	400V class	
5.5, 7.5kW	5.5	3.5	
11 to 15kW	14	8	
18.5 to 37kW	22	14	
45, 55kW	- 38	22	

Ground the motor on the inverter side using one cable of the 4-core cable.

ale san sen sense	an a' a' ann an 2000 an 1940 an 1940. Anns an 1940 anns an 2010 an 1940 anns Anns an 1941 an 1940 an 1940 an		territe a state of the second seco Second second
		s	a 1995 - Santar Alexandro, santar ara ang kanalar sa
			na ang ang ang ang ang ang ang ang ang a
		rie en an angel	
			et e la la facteur et a part d'a c
			and the second second second
		na an a	
			n de la serie entre espera
	n in an an Anna Anna an Anna Anna Anna Chuirtean Anna Anna Anna Anna An Anna Anna Anna		an a
		• . •	den stand Reise Reisenden stand Reisen Reisenden stand Reisenden
			·····································
na shekara na shi Markar			ue go starger for all recorder officient - roch ut Starger i Directuur etter
	en e	د المعروف المراجع المعرف المراجع المراجع المراجع المراجع المراجع المراجع المراجع المراجع المراجع الم	e de la construction de

Output signals Α ALC: 1 Alarm output * .j.: в (Change-over contact output) (Note) С Power Open collector outputs supply SE 24VDC Common 12VDC Running RUN Open collector out-(*6) Up to frequency Inverter puts (*4) SU (See the figure on Instantaneous power failure IPF the right.) Note: A voltage applied in an incorrect direction will damage the inverter. Overload OL Beware of miswiring such as the Meter Frequency detection FU (1mA full scale) direction of connecting the diode. ¥ 7 FM 5. B 65353 1053 24 Calibration potentiometer (*1) SD · . . • 物理学 (1/3W 10kΩ) Sec. 5. --e. . 5 5.14 RL ÷. **Multi-speed selection** RM RH 7 11.5 111 is estados en Second accel./decel. time selection RT 0 0 지 않으시 이 이 이 위험 AU **Current input selection** 0 (+) Analog signal output (*5) (-) (0 to 10VDC) Start self-holding selection STOF Output stop MŔS 0 AM Power supply for frequency The inverter will be Reset 0 RES aged if terminals 10E setting potentiometer 10/10E and 5 are (Contact input common) SD eware of mist 10 Forward rotation STF Ó Frequency setting potentiometer 2 STR 1/2W 1KQ (*3) **Reverse rotation** 5 Jog mode/external thermal Current input (4 to 20mADC) òa/n relay input select ٢ 4 (Common is terminal 5) Automatic restart after instantane-ous power failure select cs Auxiliary input (switched between 0 to ±5VDC 1 PS and 0 to ±10VDC) (*2) External transistor common (Common is terminal 5)

1.3.5 Wiring of the Control Circuit (For the terminal description, see page 27-6.)

Control input signals

(Do not apply voltage to any terminals.)

- *1. This calibration potentiometer is not required when calibration is from the parameter unit.
- *2. Input signal switching can be done from the parameter unit.
- *3. 2W 1K Ω is recommended when the frequency setting is changed frequently.
- *4. The output terminals other than the running (RUN) terminal allow alarm definition to be output in alarm codes and 10 different functions to be assigned individually. (See Pr. 40 and Pr. 76.)
- *5. FM-SD and AM-5 functions can be used simultaneously. (See Pr. 54 and Pr. 158.)
- *6. The function of the RUN terminal is changed from the standard feature by setting 7 "brake sequence for lift" in Pr. 60. (Refer to page 9-28.)
 - Note: 1. Terminals SD, SE and 5 are the common terminals of the I/O signals and are isolated from each other. These common terminals must not be connected to each other or grounded.
 - 2. Use shielded or twisted cables for connection to the control circuit terminals and run them away from the main and power circuits (including the 200V relay sequence circuit).
 - 3. Since the frequency setting signals are micro currents, use two parallel micro signal contacts or a twin contact to prevent a contact fault.

Using the STOP terminal

Using the CS terminal

· · · · · · · · ·

Connect as shown below to self-hold the start signal (forward **اس**ی بیکی (۱۹۹۵) بیکی (۱۹۹۵) بیکی (۱۹۹۵) rotation, reverse rotation).

. د د اید در اید د ودید مرده در

Alternation of the

Forward SD rotation STF rotation STF		, 	STO	
rotation STF Reverse rotation STR			Stop	
	 , , , , , , , , , , , , , , , , , , ,	rotation		
		rotation		n a saka at na ana ang tanat na tang tang tang

This terminal is used to perform automatic restart after instantaneous power failure and switch-over between commercial power supply and inverter.

<Eample: Automatic restart after instantaneous power failure> Connect CS-SD and set 0 in parameter 57. na la sera sera

CS SD	
(Connect))

Using the PC terminal


- . . <u>.</u> . .

가 있는 것은 가 있는 것이다. 이번 것은 것은 것이다. 이번 것은 것을 것을 것이다.

B. M. M. B. B. B. B. B. B. B. B. B.

atte di esti atte di esti i este di

This terminal is used to connect transistor output (open collector output) such as a programmable logic controller (PC). Connecting the external power supply common for transistor output to the PC terminal prevents a faulty operation caused by a sneak current.

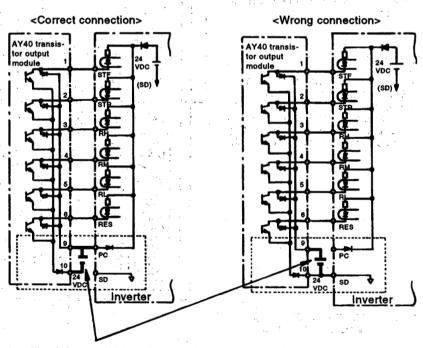

ាងស្រុងស្រ័សស្រី ដែលស្រុងស្រី លោក សេរ សុំស្អាស សារ សេរស្រុងសំរាប់ សេរស្រ័ ដែល សេរស សេរសារ សារស សំរាប់ សេរសាស សំរី សេរសាស សារសេរ សំរី សេរស សំរាប់ សំរាប់ សំរាប់ សំរាប់ សំរាប់ សេរសាស


The AY40 module requires a 24VDC power supply.

508 1

3 - 10

1.4 PARAMETER UNIT

The FR-PU02 parameter unit is installed directly to the FR-A series inverter or connected to it by a cable (option) and allows operation to be performed, functions to be selected (set values to be read/written), the operating status to be monitored, and alarm definition to be displayed. In addition, the FR-PU02E has a troubleshooting function, help function and parameter graphic display function. The FR-PU02E parameter unit is hereinafter referred to as the PU.

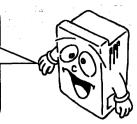

Structure of the Parameter Unit 1.4.1 Help key (See page 7-1.) Display • 13 character x 4 line liquid crystal Used to call the help menu screen display screen for showing parafor selection of any help item. meter graphic display and trouble-Acts as a monitoring list or parameter list display key in the monishooting as well as monitoring 20 types of data such as frequency, toring or setting mode. 12 6.3 Press this key on any parameter setting screen to call the corremotor current and I/O terminal states. sponding parameter graphic display screen. \mathbf{y}_{i} **Clear key** Used to clear set data or a wrong FR-PU02E value in the setting mode. PARAMETE UNI Acts as a graphic display stop key. Press this key only to return from the help mode to the previous mode. 3 3 3 Mode select keys • Used to select the PU operation t. . i+.. and external operation (operation Shift key using switches, frequency setting ÉCT OP PU Used to shift to the next item in the SET potentiometer, etc.), setting mode setting or monitoring mode. and monitoring mode. • Press this key and either of the $[\blacktriangle]$ and $[\Psi]$ keys together on the SHIFT CLEAR HELP menu screen to shift the display screen one page forward or back. 9 THM Frequency change keys V · Used to keep increasing or decreasing the running frequency. 6 FWD -liG MD LOW Hold down to change the frequen-CV. Press either of these keys on the REV VF setting mode screen to change the parameter set value sequentially. 0 On the monitoring, parameter or WHIT STOP BOOS READ help menu screen, these keys are used to move the cursor. Hold down the SHIFT key and press either of these keys to advance or return the display screen one Function and numeral keys page. Used to select the basic functions and enter the frequency, parame-**Operation command keys** ter number and set value. Used to give forward rotation, reverse rotation and stop com-**Read key** mands in the parameter unit operation mode. • Used also as a decimal point key. Acts as a parameter number read key in the Write kev setting mode. Serves as an item select key on the menu screen Used to write a set value in the such as parameter list or monitoring list. setting mode. Acts as an alarm definition display key in the · Serves as a clear key in the all alarm history display mode. parameter clear or alarm history Serves as a command voltage read key in the clear mode. calibration mode.

Acts as a reset key in the inverter reset mode.

4-1

1.4.2 Precautions for Using the Parameter Unit


When using the PU, note the following points to make proper settings and enter correct values.

Instructions for operation performed from the PU

• Operation from the PU is only valid when the [PU-OP] key is pressed with "0" (factory setting) set in parameter 79 or when PU operation or combined operation is selected in Pr. 79.



· In the monitoring mode, the running frequency cannot be set by direct setting (by entering the frequency directly from the key pad). To set the running frequency, perform step setting (change the frequency sequentially by pressing the $[\Delta]/[\nabla]$ key) and press the [WRITE] key, or press the [PU OP] key after exiting from the monitoring mode.

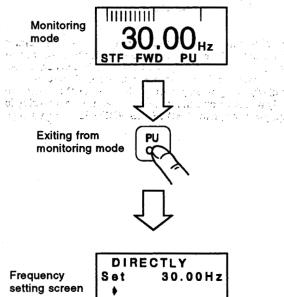

Jog operation cannot be performed when:

(1) The motor is running; or

0 ~400

(2) The jog frequency (Pr. 15) is less than the starting frequency (Pr. 13).

Instructions for monitoring

ردمدهن بجاجراني

 When the motor is to be run in the PU operation mode, setting the running frequency and then pressing the start key [FWD] or [REV] automatically switches the inverter to the monitoring mode.

يبردان والمناجين العأا والارا المناز

1. S. * ***? 7.

Instructions for the operation modes

- If the [PU OP] (or [EXT OP]) key is pressed, the mode cannot be switched when:
 - (1) The motor is running;
 - (2) The external operation start signal (across terminals STF or STR-SD) is on; or
- (3) The set value of the operation mode select parameter (Pr. 79) is any of 1 to 5 and 7.
- When "0" is in the operation mode select parameter (Pr. 79), switching the inverter power off, then on or resetting the inverter switches it to the external operation mode.

Instructions for the number of digits and decimal point of an input value

· An input value of up to five digits may be entered. If the value entered is in more than five digits, the most significant digit is ignored.

กระวัดสารามี 255 มีเมาะกับขณะเวลา เป็นเร

and the second second products of the

n sain shini Marin sain

-30

- 11 (R)

12345.6 ⇒ [] 23456

Lignored (Entered) 2 : e.,

Instructions for writing set values

 Write the set values when the inverter is at a stop in the PU operation mode or combined operation mode. They cannot be written in the external operation mode. (They may be read in any mode.) Note that some parameters may be written in the external operation mode or during operation. See the following table:

Operation Mode	Write Enabled during Operation	Write Enabled during Stop
External operation mode	Pr. 4 to 6 "three-speed setting" Pr. 24 to 27 "multi-speed setting" Pr. 51 to 56 "display function" Pr. 158 "AM terminal function selection"	Pr. 4 to 6 "three-speed setting" Pr. 24 to 27 "multi-speed setting" Pr. 51 to 56 "display, function" Pr. 79 "operation mode selection" Pr. 158 "AM terminal function selection"
PU operation mode and combined operation mode	Pr. 4 to 6 "three-speed setting" Pr. 24 to 27 "multi-speed setting" Pr. 51 to 56 "display function" Pr. 72 "PWM frequency selection" Pr. 77 "parameter write disable selection" Pr. 158 "AM terminal function selection" Pr. 900 "FM terminal calibration"	All parameters

- In addition to the above, set values cannot be written when:
- (1) Parameter write disable (Pr. 77) has been selected; (2) Any parameter number that does not exist in the
- parameter list (see page 9-1) has been selected;
- (3) The value entered is outside the setting range; or
- If write is disabled and error "
 [™] is displayed, press the [SET] (or [CLEAR]) key and restart operation from the beginning.

(Example: Pr. 7 "acceleration time")




Instructions for setting the running frequency

• When using the, [▲][▼]key to set the frequency (step setting), the frequency may only be set within the range of the maximum and minimum frequencies.

Other instructions

• When the input power is switched on (or the inverter is reset), the following message is given on the display of the PU for about 1 second. This message indicate that the inverter and FR-PU02 parameter unit are performing communication checks with each other and does not indicate an alarm. Note that if this message does not disappear in about 1 second, see "TROUBLESHOOT-ING" (page 24-1).

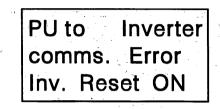

The above message is also displayed when the control circuit power is switched on later than the main circuit power in a system where the control circuit is connected to a power supply separately from the main circuit. Similarly, Frence is displayed on the unit LED instantaneously at power on but it is not an alarm. If this display is kept provided, see "TROUBLESHOOTING" (page 24-1).

1.4.3 Using the FR-ARW Parameter Copy Unit

Like the FR-PU02E, the FR-ARW parameter copy unit can be installed on the inverter or connected to the inverter by a cable, and allows operation to be performed, functions to be set, and operating status to be monitored. (The [▲] and [♥] keys are different in function from those of the FR-PU02E.) The FR-ARW also allows the parameters of one inverter to be read in batches and easily copied to other inverters.

Note that the parameters may only be copied between the inverters of the same series. They cannot be copied between different models.

> 1 1

2.1.1.12

- Altarian


and a second second

17 / 31 / A - A ²

. : 2

1.4.4 Using the FR-PU01 Parameter Unit

للاحد أعصاب المتاجات ومصما المهمدة بالربية

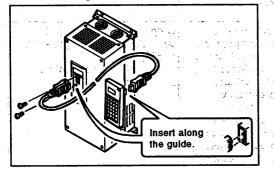

The FR-PU01E parameter unit can be used by connection to the inverter by a cable (option). It cannot be installed directly to the inverter.

For the use of the FR-PU01E parameter unit, note the following points.

i se

With the power on, you cannot use the the FR-PU01E and FR-PU02E parameter units by changing them alternately.

lan et kanne en

e la contra de mar

11.2 A. 18 8 8 8 4 1

A second sec second sec

化学系统 化试验试验试试剂 机动物性试验 计分子分子分裂 建成分子 计

When the FR-PU01E parameter unit is being used, reset the inverter once in either of the following methods, with the parameter unit connected by the cable.

- •Switch the power off once, and in more than 0.1 seconds, switch it on again.
- •After connecting the reset terminal RES-SD for more than 0.1 seconds, disconnect them.

Note: The inverter recognizes the type of the parameter unit at the time of reset or power-on and does not communicate with any parameter unit other than the one recognized.

25¹ 1. 11 1. 11 1. 17 1. 17 1. 17 1. 17

n son en en en en en en 19 de la companya en en 20 de de la companya en en en en entre 10 de de la companya de transmissione en Ender

		· · · · ·	<u>an an a</u>				
The functions of the inverter are limited by the FR-PU01E. See the function comparison on the right.	Function	FR-PU02E COCO Parameter Unit		FR-PU01E Parameter Unit			
ೆ ನಿರ್ದಾಶಗಳು ಬಗ್ಗಳಿಗೆ ನಿರ್ದಾಶಗಳು ತಿಳಿಗಳು ಕ	Operation setting function	Frequency setting 0 to 400Hz Forward rotation, reverse rotation, stop		As on the left			
	Operation mode setting	PU operation, external operation, jog operation, PU/external combined operation		As on the left			
		Output frequency, output current, output voltage, alarm display, frequency set value, running speed, motor torque, converter output voltage, regenerative brake duty,	current, display	requency, output output voltage, alarm er items cannot be ed.			
	Monitoring function	electronic overcurrent protector load factor, output current peak value, converter output voltage peak value, input power, output power, input terminal state, output					
and an Sub- Marine and a court of faith and an Sub-Angla and and an an an an		terminal state, load meter, motor exciting current, position pulse, cumulative operation time, actual operation time					
ي در المراجع ا محمد المراجع ال المراجع المراجع	Parameter settting function	Enabled for all of Pr.0 to Pr. 159 and Pr. 200 to Pr. 231.	Disablec compens	to Pr. 0 to Pr. 79. I for the gear backlash sation and 5-point V/F characteristic ers.			
	Auto tuning	Pr. 90 to 96 can be set.		ngs disabled.			
	Calibration function	Pr. 900 to Pr. 905	when an terminal (AM terr cannot t	at C1 cannot be used by of 101 to 121 (AM) is in Pr. 54. Pr. 901 ninal calibration) be set.			
	Alarm display clear	Batch clear is performed using "ALARM HISTORY CLEAR" in the help mode.	pressing	ear is performed by the CLEAR key wher pring error is displayed			
	Parameter initialization	Parameter clear (calibration function not cleared) or all parameter clear (calibration function cleared) can be set.	All para (calibrat	meter clear tion function not can only be set.			
	Alarm display	OV1 to OV3	→ OVT → PE	The alarms indicated on the left are dis- played in this way.			

In addition, the following functions are not available for the FR-PU01:

- Parameter initial value list
 Parameter change list
 Troubleshooting
 Inverter reset from the parameter unit
 Graphic display of parameter functions


1.4.5 Using the FR-ZRW Parameter Copy Unit

The FR-ZRW parameter copy unit can be used by connection to the inverter by a cable (option). Like the FR-PU01E, the FR-ZRW limits the inverter functions. In addition, the function of reading and copying a batch of parameters to another inverter cannot be used.

4 – 6

MEMO


_	· .		· · ·								
							• •			. ^	÷ · · · .
- 								2012 ¹ 1 1 2 4 3 1 1 4			•
`. -		<u> </u>	<u> </u>								
-											
-			<u>.</u>			·			· · · · ·		
-	·								· · · · · · · · · · · · · · · · · · ·		
						<u> </u>					
											-
_											
-											
-			<u> </u>	<u> </u>							
-											
-	· · · · · · · · · · · · · · · · · · ·										
-						<u> </u>					·
_											
								· .			
-								·			
-	· · · · · · · · · · · · · · · · · · ·										
-			····· · ·								
-				· · · · · · · · · · · · · · · · · · ·							
-				-							
_											
-					<u></u>		······	. <u> </u>			
-					······································			· · · · · · · · · · · · · · · · · · ·			
-									<u> </u>		
-											
-	·	······································		<u></u>							
_											
-				-							
	· .										
-					<u> </u>						
	· · · · · · · · · · · · · · · · · · ·		· · · ·								
-					,	· · ·					
_							<u>.</u>	<u> </u>			
				ş	•						

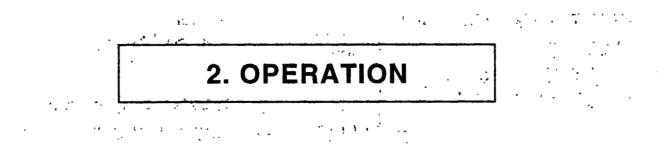

This chapter offers detailed information on the "operation" of the FR-A201E "inverter with built-in power ٤), م به در م به فی شر م م م م م م م م م م م return function". Always read the precautions and instructions in this chapter before using the inverter.

; .

٠,

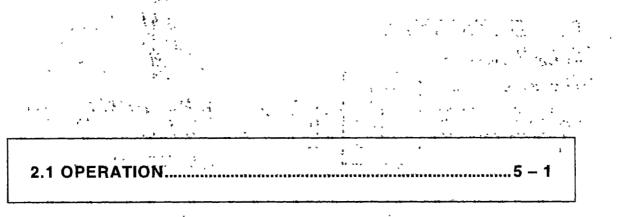




. .


2.1 OPERATION

Three modes are available for the operation of the FR-A201E inverter. Select the appropriate mode for the application and operating conditions and prepare necessary instruments and parts. For operation modes, refer to page

2.1.1 Instruments and Parts to be Prepared before Operation

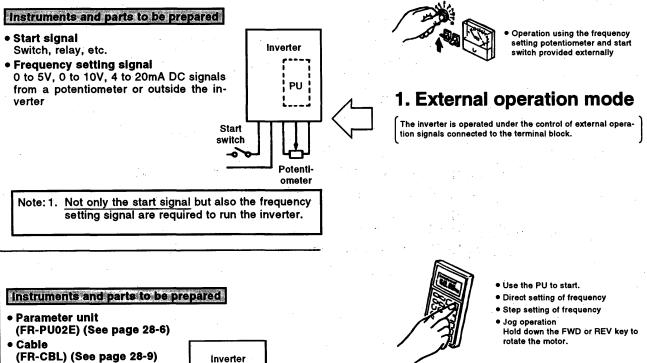


(Use this cable when the parameter unit is held in hand to perform operation, for example.

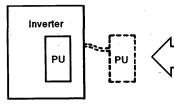

2. PU operation mode

The inverter is operated from the keypad of the parameter unit.

This mode does not require the operation signals and is useful for an immediate start of operation.

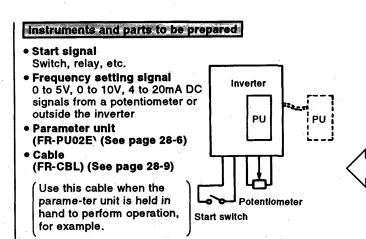

*: "PU" stands for the parameter unit.



- Use the external signal to start.
- Use the PU to set the frequency.
- Use the operation command keys of the PU to start.
 - Use the external frequency setting potentiometer to set the frequency.

3. External/PU combined operation mode

The inverter is operated with the external operation and PU operation modes combined in either of the following two methods.

- 1) The external signal is used as the start signal and the PU is used to set the frequency.
- The operation command key of the PU is used to start and the external frequency setting potentiometer is used to set the frequency.

5 – 1

2.1.2 Pre-operation Settings		u tindi setti sen di ¹ 11.55 Li je Kolovenstveti setti te gođene
items according to the load and able-speed operation or the like,	e operation are as follows. Set the d operational specifications. For sin , use the inverter with the factory se nation of the other parameters, see p ferred to as "Pr.".	nple vari-
The start signal (STF or STR)	the parameter unit for setting. (See must be off to switch from the exte inverter cannot be put in the PU ope	rnal operation mode to the PU
Operation using the voltage input signal • Pr. 73 "0 to 5V, 0 to 10V se- lection"	When the voltage input signal is specifications of the frequency sacross terminals 2-5.	
	• 0 to 5VDC Set "1" (factory setting) in Pr. 73.	0 to 10VDC Set "0" in Pr. 73.
a a a second a second a second a second a second a second a second a second a second a second a second second second a second a second a second a second second second a second a second a second a second a second a second second a second a se	0 to 5 VDC \rightarrow 2 0V \rightarrow 5	0 to 10 VDC → 2 0V → 5
Operation using the current input signal	When the current input signal is us to enter the signal across termi AU-SD.	
Setting of frequency setting voltage (current) gain (maxi- mum output frequency) • Voltage signal Pr. 903 "frequency setting voltage gain"	When the frequency used for oper the factory setting given below, c sponding parameter. When the frequency used for oper setting of Pr. 18 "high-speed n changed.	hange the setting of the corre- ration is higher than 120Hz, the
Current signal Pr 905 "frequency setting	Parameter	Factory Setting
Pr. 905 "frequency setting current gain"	Pr. 903 "frequency setting voltage gain"	60Hz at 5V (or 10V) DC
• Pr. 1 "maximum frequency"	Pr. 905 "frequency setting current gain"	0Hz at 4mADC, 60Hz at 20mADC
	Pr. 1 "maximum frequency"	Up to 120Hz
	terminal FM is saturated if t reaches or exceeds 100H	mum frequency (factory setting of Pr. 903, Pr. 905, see page
	monitoring reference" mus output frequency. (See pag	st be changed to the maximum ge 9-25.)

Setting of maximum frequency • Pr. 1 "maximum frequency"

Set this parameter to define the upper limit of the output frequency or to perform operation at a frequency above 120Hz. Change the setting of this parameter only when the frequency must be limited in addition to the setting of the above-mentioned "frequency setting voltage (current) gain" which allows the frequency to be restricted to below the set value. Factory setting: 120Hz

Setting of minimum frequency • Pr. 2 "minimum frequency" Use this parameter to specify the lower limit of the output frequency. When the minimum frequency has been set, merely turning on the start signal starts the motor running at the set frequency (if the frequency setting is 0Hz, no rotation will happen).

Factory setting: 0Hz

and the second second

Setting of electronic overcurrent protector • Pr. 9 "electronic overcur-

rent protector"

The factory setting is the rated current value of the inverter. When changing the set value, set the 50Hz current value given on the motor rating plate.

Note: The operation characteristics, which are based on the Mitsubishi standard squirrel-cage motor, do not apply to a special motor. For a special motor, provide a thermal relay to protect the motor. (A constant-torque motor can be selected by the setting of Pr. 71.)

Selection of applied loady

na indian phase stars

• Pr. 14 "applied load selection"

Allows the optimum output characteristic (V/F characteristic) to be selected for application and load characteristic.

Application	Set Value	Remarks
For constant-torque loads (e.g. conveyor, carrier)	0 (factory setting)	
For variable-torque loads (e.g. fan, pump)		
For lift	2	Boost for forward rotationPr. 0 set value Boost for reverse rotation0%
	3	Boost for forward rotation0% Boost for reverse rotationPr. 0 set value
Applied load selection	4	 Terminal RT ON (Note) As in constant-torque loads. Terminal RT OFF As in no boost at reverse rotation for lift. No boost for reverse rotation
switching function	5	 Terminal RT ON (Note) As in constant-torque loads. Terminal RT OFF As in no boost at forward rotation for lift. No boost for forward rotation

Note: When terminal RT is ON, the second control functions (second acceleration/deceleration time, second torque boost and second base frequency) are selected. Selection of external thermal relay input • Pr. 17 "external thermal

relay input"

When a thermal relay is installed outside the inverter or the motor contains a temperature sensor, this parameter switches the function of the JOG/OH input terminal to OH (external thermal relay input).

-	JOG/OH Tern	ninal Function	MRS Termin	nal Function		
Pr. 17.Set Value	Jog Mode	OH (external thermal relay input)	N/O Input	N/C Input		
0 (factory setting)	•		•	<u></u> 4		
1	,	•				
2	•	_		• • • •		
3			<u> </u>	•		

Setting of acceleration and deceleration times

- Pr. 7 "acceleration time"
- Pr. 8 "deceleration time"
- Pr. 44 "second acceleration /deceleration time"
- Pr. 45 "second deceleration time"

Calibration of frequency meter

When an inverter once used is to be used again

5 - 1 2 1 4

÷. . . .

4.35

When an acceleration/deceleration time other than the factory setting is used, change the values of these parameters.

Parameter	Factory Setting		
Pr. 7 "acceleration time"	7.5K and down5 seconds, 11K and up15 seconds		
Pr. 8 "deceleration time"	7.5K and down5 seconds, 11K and up15 seconds		
Pr. 44 "second acceleration /deceleration time"	5 seconds		
Pr. 45 "second deceleration time"	9999 (same as the value set in Pr. 44)		

To monitor the output status correctly, calibrate the frequency meter before operation.

Use the parameter unit for calibration to make adjustment with higher accuracy.


(See page 11-1 for the adjustment procedure.)

It is assumed that the set values of the parameters may have been changed according to the operational specifications. Before starting operation, initialize the parameters (return the parameter values to the factory setting). Initialization can be made by performing parameter clear operation using the parameter unit. (For the operation procedure, see page 7-11.) Note that the following parameters are not initialized by the parameter clear operation. For these parameters, read their set values and change them to the required values, or perform parameter all clear operation to return to the factory setting.

- Pr. 900 "FM terminal calibration"
- Pr. 901 "AM terminal calibration"
- Pr. 902 "frequency setting voltage bias"
- Pr. 903 "frequency setting voltage gain"
- Pr. 904 "frequency setting current bias"
- Pr. 905 "frequency setting current gain"

2.1.3 Operation Mode


The inverter has three operation modes: "operation using the external input signals" (external operation mode), "operation using the PU" (PU operation mode), and "combined operation using the external input signals and PU" (combined operation mode).

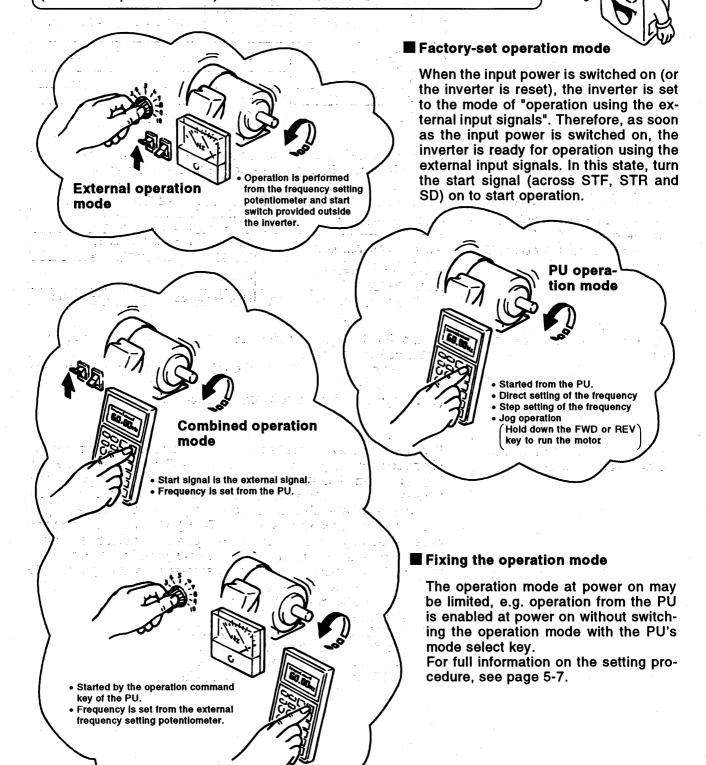

2.1.4 Selection of the Operation Mode

The inverter is factory-set to allow the operation mode to be switched between "external operation" and "PU operation". At power-on, the inverter is placed in the "external operation" mode. Use the PU to switch to the other operation mode.

• Switching from the external check that the external input signal is off (across operation mode to the PU operation mode

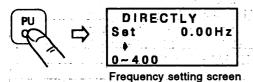


--- --

STF or STR and SD).

Then, press the [PU OP] key to switch to the PU operation mode, the frequency setting screen is displayed.

• Switching from the PU operation mode to the external operation mode

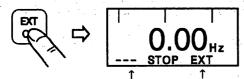

Check that the external input signal is off (across STF or STR and SD) and that the operation command indication is "---".

Then, press the [EXT OP] key to switch to the external operation mode, "EXT" is displayed as the operation mode indication.

م دوان کرد. از کار کار کار در کار میکن و مکور ک

Operation mode indication **Operation command indication**


A CARLER L operation mode

> 1 . e . j e. .

selection" as indicated below. (For more information on changing the set value, see page 8-1.)

"PU+E" is displayed at the operation mode indication.

1.1	Description			
Set Value	Running Frequency Setting	Start Signal		
3	Parameter unit • Direct setting and [▲] [▼] key setting	Terminal signal • STF • STR		
4	Terminal signal • 0 to 5VDC across 2-5 • 0 to 10VDC across 2-5 • 4 to 20mADC across 4-5 • Multi-speed selection (Pr. 4 to 6, 24 to 27) • Jog frequency (Pr. 15)	Parameter unit • FWD key • REV key		

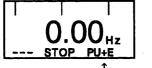



Operation mode indication


1. External input signal (across STF or STR and SD) 2. Parameter setting	 Properly, check the following: Check that the signal is off. If it is on, the operation mode cannot be switched properly. Look for STF or STR on the PU display. Check the set value of Pr. 79 "operation mode selection". 				
	Set Value	Description			
an an an an an Arran Arran an Anna an Arran Arrainn An Arrainn an Arran Arran Arran Arran an Arran	0	Operation can be performed with the mode switched between PU operation and external operation. (Factory setting)			
	1	PU operation can only be performed. (Cannot be switched to the other mode.)			
	2	External operation can only be performed. (Cannot be switched to the other mode.)			
	3, 4	Combined operation mode			
	5	Programmed operation mode			
	7	PU operation interlock			
ان این این این این در برای که مرجعه استان کیس ایس مرکز این این این ا	8	External signal-based operation mode switching			
3. Limitation of the operation mode	setting), ti power-on.	set value of Pr. 79 "operation mode selection" is "0" (facto he inverter is put in the external operation mode at inp Press the [PU OP] key to switch to the PU operation mod her set values (1 to 5, 7, 8), the operation mode is limite y.			


2.1.5 Operation Mode Indication, Operation Command Indication and Operation Status Indication


The currently selected operation mode, operation status, etc. are displayed at the bottom of the display screen of the parameter unit.

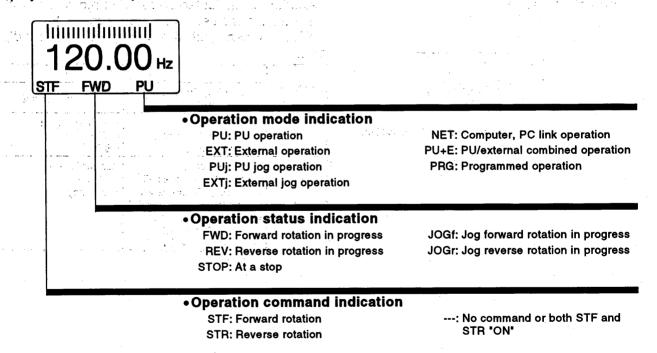

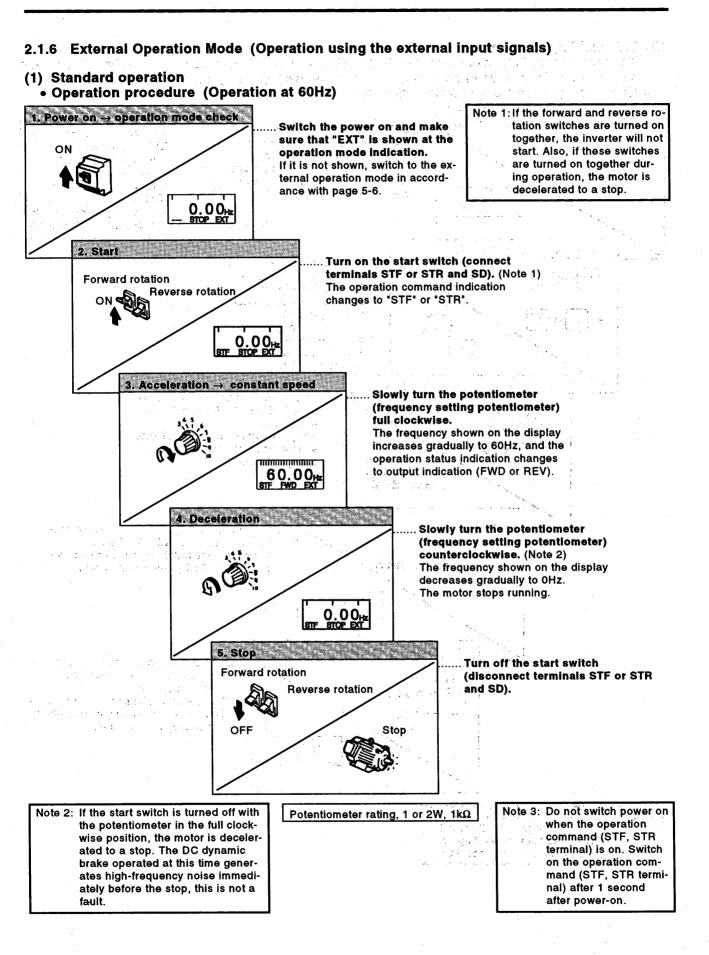

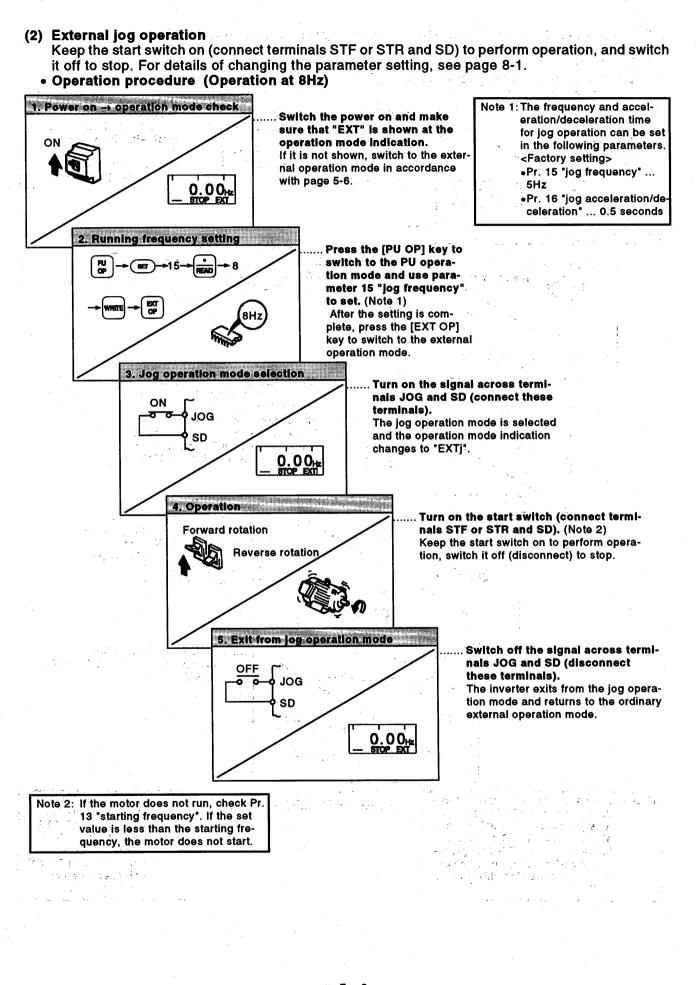

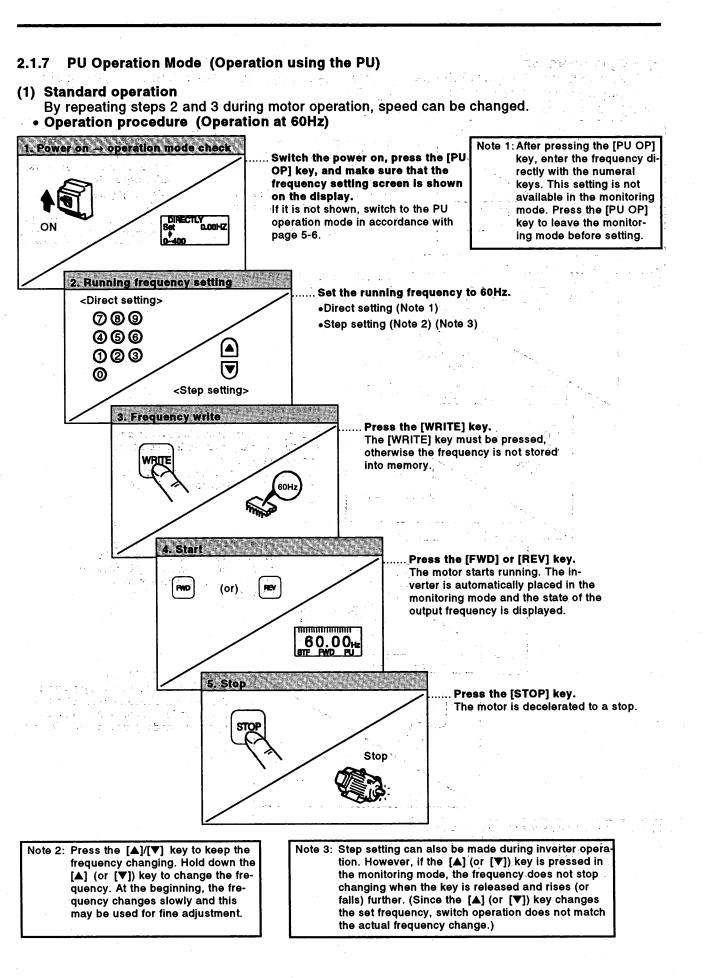

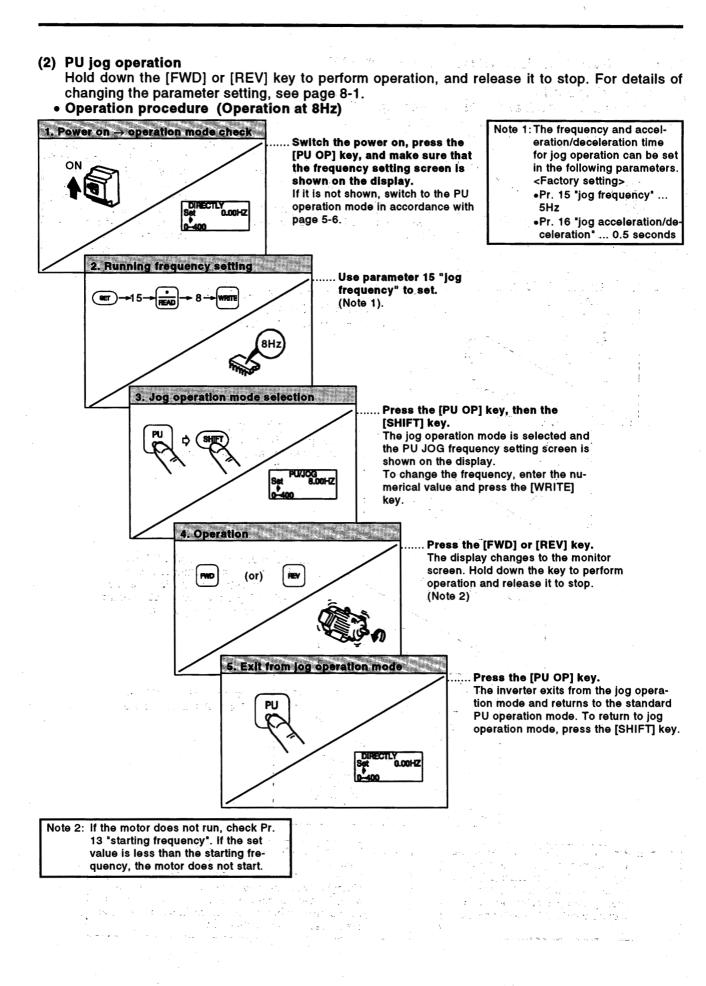



2.1.8 Combined Operation Mode (Operation using the external input signals and PU)

(1) Entering the start signal externally and setting the running frequency from the PU (Pr. 79=3)


The external frequency setting signals and the PU's FWD, REV and STOP keys are not accepted. For details of changing the parameter setting, see page 8-1.



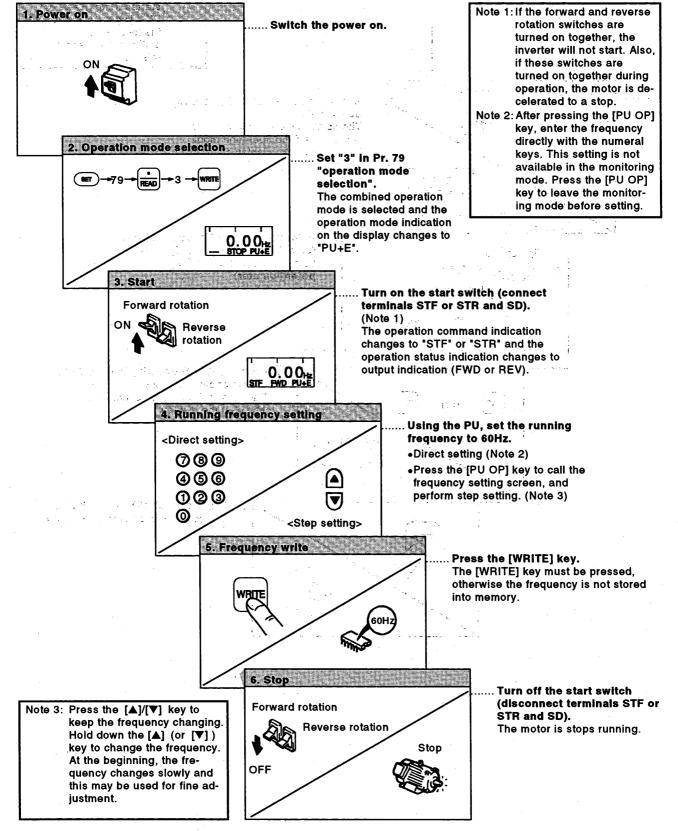

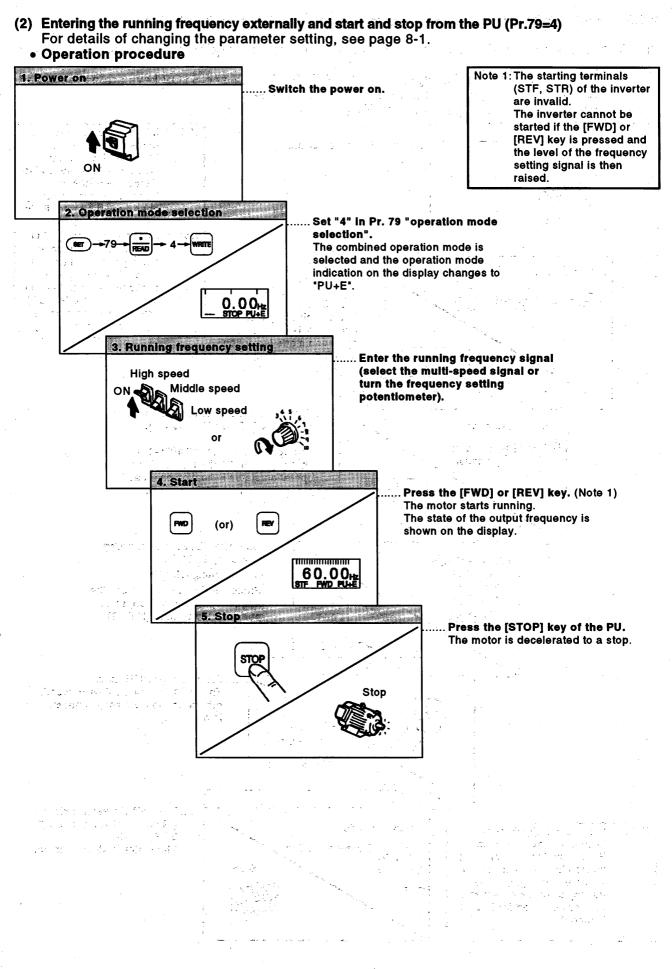

: 5 – 13

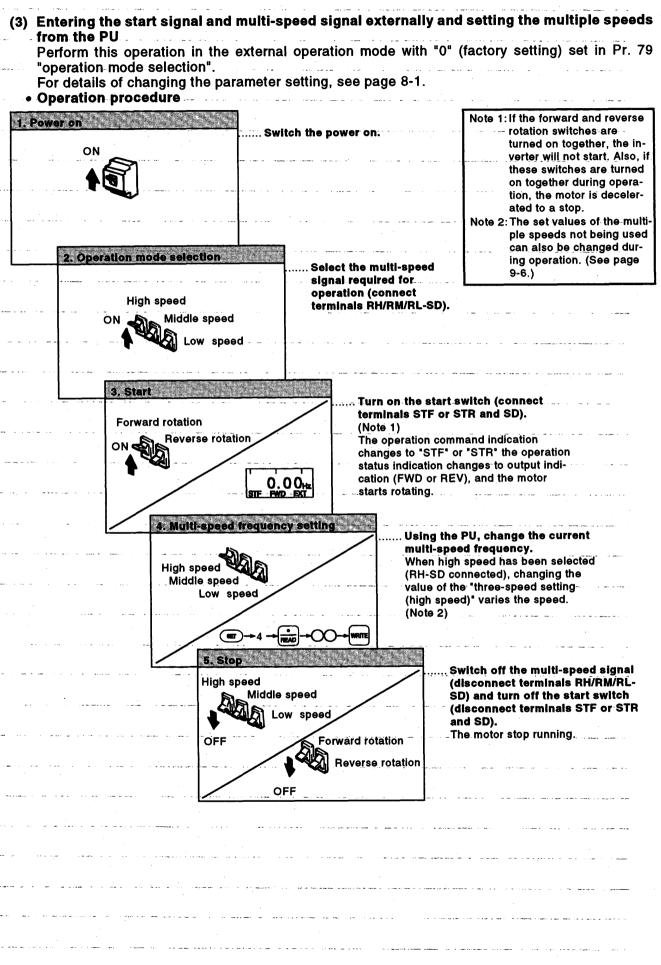

MEMO

· · ·		
	e a character de la construction d La construction	
· · ·	soor die enterstaar is maar ondersting op al al wordte een 10. Koedoor en Brito, 12 op aakterijkere en een inde	· · ·
_		an di a
	n Anna an Anna An Anna an Anna	
2 <u>01</u> 1910-1910 1910-1910		
ali ng and the The state		
· . ·	<u>a stan tea d'interna.</u> Na	u
· •		1
		· ·
		-
		*
	Could the fatter of the second s	
	الا الم به الأرث المالية المحمد ومنتشر المحمد المعاد المحمد المعاد المحمد المعاد . المحمد محمد المحمد ا	
	an de la companya de La companya de la comp	-
: . 		
	n an an anna an Anna Anna an An Anna an Anna an	
- <u>-</u>		
	A sector for the sector of the first of the sector of the	<u> </u>
	· ·	

• • • • • • • • • •


3. PARAMETERS

This chapter provides detailed information on the "parameters" of the FR-A201E "inverter with built-in power return function". Always read the precautions and instructions in this chapter before using the inverter.

na di sala s Sala sala s Sala s


3.1 MONITORING FUNCTION

The inverter can be monitored by either the LED (red light emitting diode) display on the inverter, the 5-digit liquid crystal display on the PU (PU main monitor) or the PU level meter. These displays are selected by the following method:

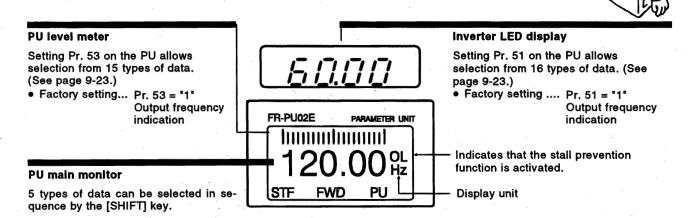

3.1.1 SHIFT Operation Sequence on the PU Main Monitor

When "0" (factory setting) is set in Pr. 52 "PU main display data selection", merely pressing the [SHIFT] key calls five types of data in sequence. Within the five monitor screens, the fifth monitor screen (selective monitoring) allows selection from 20 types of data such as the frequency set value and running speed.

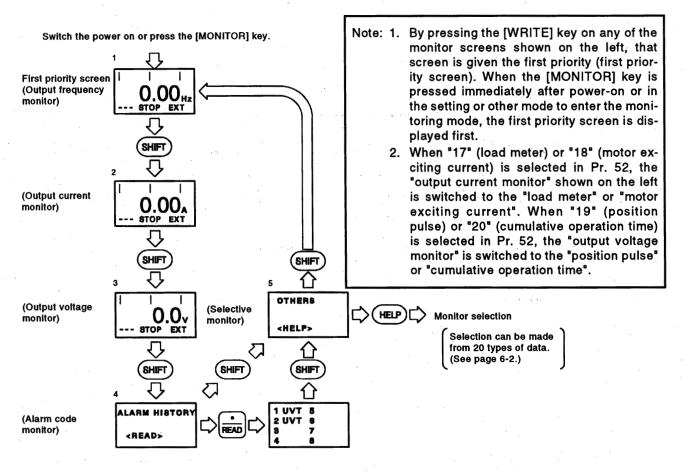

3.1.2 Selecting the Another Monitor Item in the Selective Monitoring Mode

• Selection procedure (Example: Select the input terminal state monitor screen.)

1) Press the [MONITOR key.]Parameter unit is placed in the monitoring mode.			FR-PU02E		
2) Press the [HELP] key	The monitoring list is displayed.	1) Frequency 2 Current 3 Voltage 4 Alarm His U	1) 3) 2)			
			4 4 2 2			
			7 4 4		.) 5)) .
3) Hold down the [SHIF times, and without pr key twice. (Move the	T] key and press the [▼] key three essing the [SHIFT] key, press the [▼] cursor to signal In.)	Hold down [▲] key to a			press the [e screen one	
4) Press the [READ] key (Note 1)	y The screen shown on the right i displayed.	S DSTFORL DMRS DSTRORM DSTP DAU DRH DRES DRT DVO				
			∎, stationalistatio Altationalistati			
5) Press the [WRITE] ke (Note 2)	eyThe screen in step 5) is set as the first priority screen.	Subsequen other monit		e [SHIFT] key to call	the

Note: 1. Since the selective monitor screen is not the first priority screen in the above step 5) where the [READ] key has been pressed, the selected data is erased from the memory as soon as the power is shut off or the other operation mode (such as external operation) is selected.


In this case, the selective monitoring mode must be selected again in the above procedure.

When the first monitor screen has been set by pressing the [WRITE] key, the selected data remains intact in the memory.

2. In step 6) where the [WRITE] key has been pressed in the above setting example, the "I/O terminal states" selected here are first displayed with priority when the other operation mode is switched to the monitoring mode. To give first priority to other data, press the [WRITE] key with the monitor screen being displayed. The first priority screen then switches to that monitor screen.

• Selecting any of the monitoring items "load meter", "motor exciting current", "position pulse" and "cumulative energization time"

When the "load meter" or "motor exciting current" has been selected, the output current monitor screen is switched to a corresponding screen. When the "position pulse" or "cumulative energization time" has been selected, the output voltage monitor screen is switched to a corresponding screen. When any of these four items has been selected, the output current or output voltage monitor screen cannot be used.

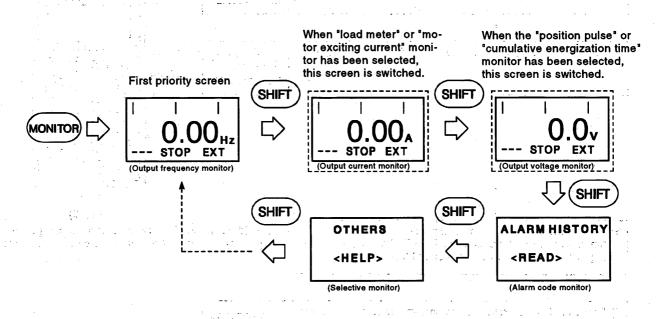


• Selecting "current monitoring" or "power monitoring" Note that a current less than 5% of the rated current of the inverter cannot be detected and displayed. Also note that the electronic thermal relay does not operate at that current. For motor protection, examine the use of an external temperature detector or the like.

Example: When a small motor (0.4kW motor) is run by a large-capacity inverter (5.5kW), power monitoring is inactive.


2. 3

3.2 HELP FUNCTION

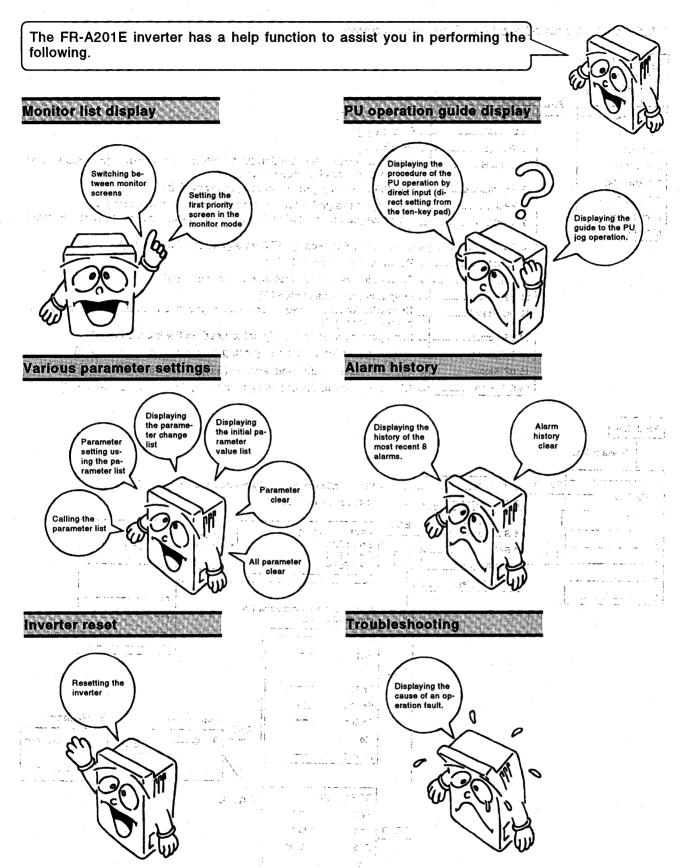


In addition, press the [HELP] key in any of the PU operation modes to call a guide to the operation procedure. Press the [HELP] key for help when you do not know what to do.

. . .

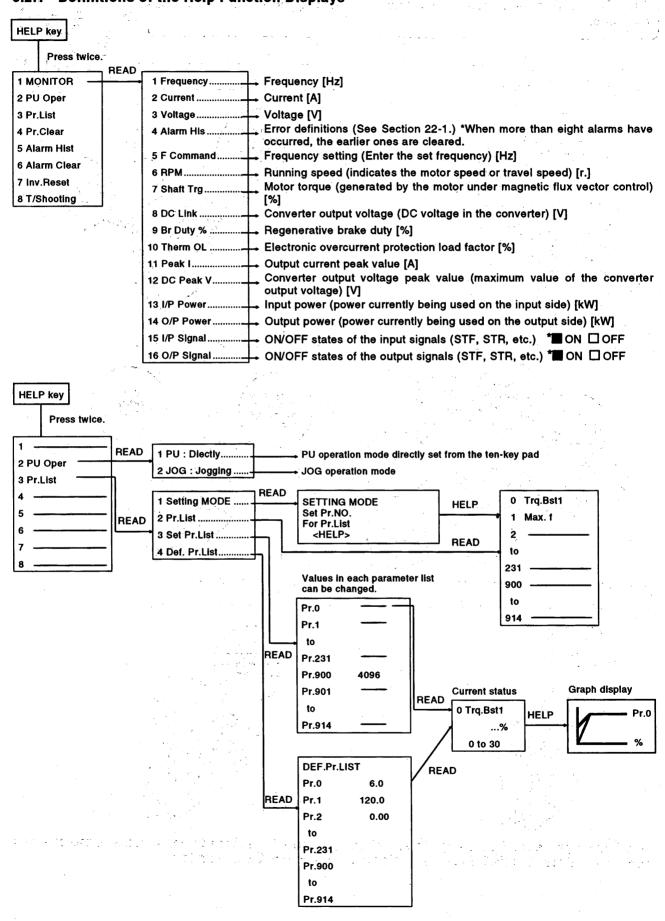

3.2.1 Definitions of the Help Function Displays

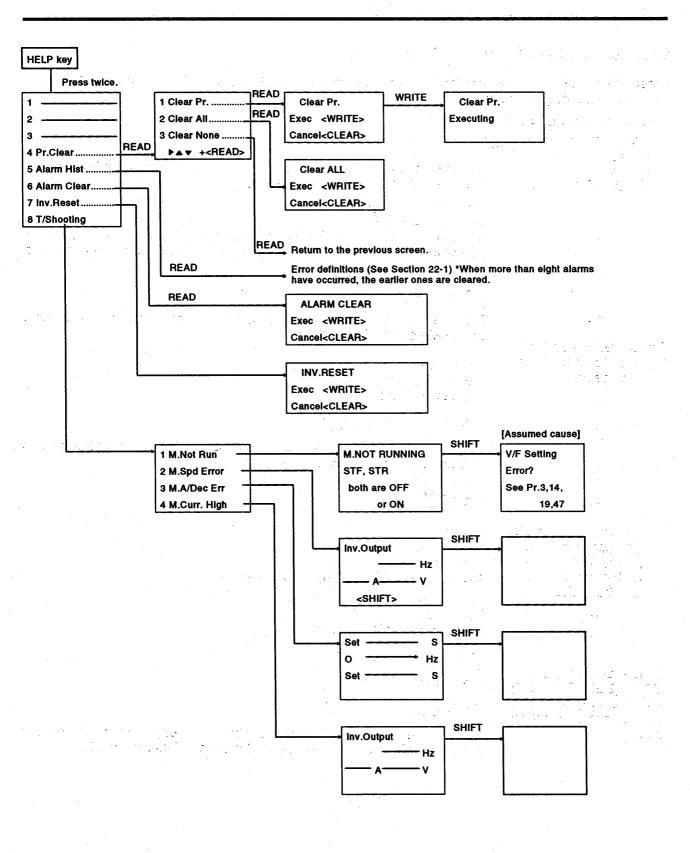


7-3

3.2.2 Help Function Menu

Press the [HELP] key twice in any operation mode to call the help menu, with which various functions can be executed. (See page 7-2)

Menu screen page 1

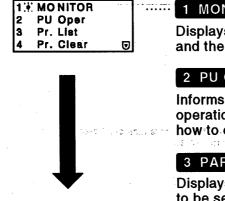

Press [SHIFT] and [▼] together to proceed to the next page.



.....

Menu screen page 2





Press any of [MONI-TOR], [SET], [EXT OP] and [PU OP] to switch to the corresponding mode.

1 MONITOR

g tauteu a [

Displays the monitoring list and allows the monitor screen to be changed and the first priority screen to be set.

Mana ana ang Kabupatén A

2 PU OPERATION

Informs how to select the PU operation mode and PU-assisted jog operation mode via direct input (direct setting from the ten-key pad) and how to operate the keys.

3 PARAMETER

Displays the parameter menu and allows any of the following four items to be selected and executed:

1 pr -

- 1 Setting
- 2 Pr. List
- 3 Set Pr. List
- 4 Def. Pr. List

4 PARAMETER CLEAR

Displays the parameter menu and allows any of the following three items to be selected and executed: 1 3 44 2 59 5

1 Clear Pr. 2 Clear All en in the second s 3 Clear None

The case :

et alta parte e let

5 ALARM HISTORY

Displays the history of eight past alarms.

6 ALARM HISTORY CLEAR

Clears all the alarm history.

7 INVERTER RESET

Resets the inverter.

8 TROUBLESHOOTING

وبالمعرار الأنصدين

Lower and the man contains

The inverter displays the most likely cause of mismatch in inverter operation with operation/setting or the cause of inverter fault.

3.2.3 Operation Procedure for Help Function

1 MONITOR

Displays the monitoring list and allows the monitor screen to be changed and the first priority screen to be set.

Operation procedure 1 (To call the monitoring list from the help function menu) Display 1) Press the [HELP] key The help function menu is called. twice in the monitor mode. FR-PU02E If not, move the cursor with the 2) Make sure that the [▲] [▼] key. cursor (⇔) is located at "1 MONITOR". 1) 3) Press the [READ] key. The monitoring list is called. 5) l. 8 **(2**) ٢ - Press the [▲] or [▼] key to move the cursor (⇒) to the **ด**ั required item 5) If the required item is not found, press the [SHIFT] key and 3) $[\mathbf{\nabla}]$ key together to shift to the next page. **(6)** ... After pressing the [READ] key, 6) Press the [READ] key. The monitor screen specified by press the [WRITE] key to set that the cursor is displayed. monitor screen as the first priority screen. Press any of the [SET], [EXT OP] and [PU OP] keys to switch to the corresponding a) - 2 mode. • Operation procedure 2 (To call the monitoring list directly in the monitoring mode) Display 1) Press the [MONITOR] The inverter is put in the key. (Note) monitoring mode. 0:00H FR-PU02E STOP 2) Press the [HELP] key. The monitoring list is called. 21 (م) ا ا ا ا ا ا ا ا 4) 3) 3) Press the [▲] or [▼] key to move the cursor (⇒) to the 4) required item. 499 . (L) (L) (J) @ 📄 4) If the required item is not found, press the [SHIFT] key and $[\mathbf{V}]$ key together to shift to the next page. 12 5) After pressing the [READ] key, 5) Press the [READ] key. The monitor screen specified by the cursor is displayed. press the [WRITE] key to set that monitor screen as the first priority screen. Press any of the [SET], [EXT OP] and [PU This key need not be pressed if the Note: inverter is already in the monitoring OP] keys to switch to the corresponding mode. mode.

° 7÷5

2 PU OPERATION

Informs how to select the PU operation mode and PU-assisted jog operation mode via direct input (direct setting from the ten-key pad) and how to operate the keys.

Selection of the PU operation mode (direct input) Display Operation procedure 1 (To call from the help function menu) 1) Press the [HELP] key The help function menu is called. PU Ope twice in the monitor FR-PU02E mode. 2) Using the [▼] key, move the cursor (⇒) to "2 PU **OPERATION**[®]. 1) $\Theta \Theta (\mathbf{A})$ 1 6) 2) Č 3) Press the [READ] key. The menu on the right is 1 PU: Directly 2 JOG: Jogo displayed. ٩ ٦ Press the [HELP] key to return to the help function menu. 3) 5) 4) Make sure that the If not, move the cursor with the cursor (⇒) is located [▲] [▼] key. at "1 PU: DIRECT IN". 5) Press the [READ] key. The PU operation mode is DIRECTLY selected and the frequency 0.00HZ Set 0-400 setting screen is displayed. 6) Press the [HELP] key. The key operation guide is OPERATION displayed. i 0-9 WRITE PWD.RE Press any of the [MONITOR], [SET], [EXT OP] and [PU OP] keys to switch Display to the corresponding mode. • Operation procedure 2 (To call the key operation guide directly) FR-PLin2F 1) Press the [PU OP] key. ... The frequency setting screen is DIRECTLY 0.00HZ displayed. 1) 2) (▲) 2) Press the [HELP] key. The key operation guide is -Varie N displayed. -----2 3 Press any of the [MONITOR], [SET], [EXT OP] and [PU OP] keys to switch . . . to the corresponding mode. ÷., ´ r

) Press the IHELP	1 kev Th	e help function menu is calle	d.	ni − lifatijut St		in a N
twice in the mon	itor	n an an an san san san san san san Tim Timp e ngasarangan gangan Timp ngangan gangan	15 MONITOR 2 PU Oper 3 Pr. List 4 Pr. Clear		FR-PU02E TWOMETER LINET	
end de la companya de la		Charles of the second second				
OPERATION".	n with the second		1 MONITOR 2) PU Oper 3 Pr. List	1)		
	≉ nogramæi			6)		
				· -		
) Press the [READ		e menu on the right is splayed.	1 PU : Directy 2 JOG : Jogging	and the second		
		e e ana ana ana ao seo a				
	- 3. 		<u> </u>). ·
		Press the [HELP] key to help function menu.	return to the	•• • ••• • •• •	3) 5)	
) Using the [▼] ke	y, move the o	cursor (⇔) to "2 JOG".			· · · · · · · · · · · · · · · · · · ·	-
				e i su	n na ana ang ang ang ang ang ang ang ang	
) Press the [READ		e PU jog operation mode is	FU/JOG		د المنظمة محمد ما معالم. معالم المطلح المحمد الم	
		lected and the frequency tting screen is displayed.	Set 5.00HZ 0-400	y sta 		•
) Press the [HELF		e key operation guide is splayed.	REY OPERATION Fast 10-9 Then: WRITE Then: FWD.REY		ing said teach an ann an Anna Anna Anna Anna Anna Anna Anna	
		· · · · · · · · · · · · · · · · · · ·				
Press any of th	↓ e [MONITOR], [SET],				s?
[EXT OP] and [to the correspo	PU OP] keys	to switch		: جانب ماند	en in Green (1949) en de Angeler en service en en en	
to the correspo	nung mode.	and the second	n an an tha an	.	Display	
peration proc	edure 2 (T	o call the key operation	on guide directi	y)	· · · · · · · · · · · · · · · · · · ·	
) Press the [PU O		ne frequency setting screen is splayed.	S DIRECTLY Set 0.00HZ		FR-PU02E INVINETER LINET	•
		й	0.400			
		and the second				•.
				0		
2) Press the [SHIF		ne PU jog operation mode is				
2) Press the [SHIF	Se	lected and the frequency	Set 5.00HZ	23		
2) Press the [SHIF	Se		Set 5.00HZ D-400	3)		
	se se	elected and the frequency etting screen is displayed.	Set 5.00HZ	3)		•
	se se 2] key Th	lected and the frequency	Set 5.00HZ	3		

[EXT OP] and [PU OP] keys to switch to the corresponding mode.

3 PARAMETER

2 Pr. List	Displays the parameter list in numerical order and allows the values
	of individual parameters to be read and written.
3 Set Pr. List	Displays a list of Pr. numbers and set values of only the parameters
	that have been changed from the factory setting. (For the parameters that have not been changed, their Pr. numbers are only displayed.)
4 Def. Pr. List	Displays a list of the initial values (default factory setting) of parameters.

Display

1

3)

Display of the parameter menu

1) Press the [HELP] key twice in the operation mode.	The help function menu is called.	11 MONITOR 22 PU Oper 3 PJ List 4 Pr. Ceer U		FR-PU02E INVINETER UNT	- · .
2) Using the [▼] key, mo	ove the cursor (⇔) to "3 PARAMETER".	1 MONITOR 2 PU Oper 34 Pr. List 4 Pr. Clear C	1)		
3) Press the [READ] key	 The parameter menu is displayed. 	1 • SettreMODE 2 Pr.List 3 Set Pr.List 4 Def. Pr.List			
					••
the corresponding m Selection and exec	ode.			3) Display	
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedu	eution of "1 Setting"	la daga sa tana sa tang La da La da La da La da La da		Display	
[EXT OP] and [PÙ C the corresponding m Selection and exec Operation procedu	ode.				
[EXT OP] and [PU C the corresponding m Selection and exec operation procedur 1) Call the parameter m	eution of "1 Setting"	د بر در معادل معادل می از معادل می از معادل می از معادل م معادل معادل معا معادل معادل معا		Display	
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur 1) Call the parameter m procedure.	enu in accordance with the above If not, move the cursor with the [▲] [▼] key.	11 Setting MODE 2 Pr. List 3 Setting MODE 2 Pr. List 3 Setting MODE 4 Setting Mod			
 [EXT OP] and [PU O the corresponding m Selection and exection procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 	enu in accordance with the above	11 Setting MODE 2 Pr. List 3 Setting MODE 2 Pr. List 3 Setting MODE 4 Setting Mod		Display	


Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corresponding mode.

		2 45 9 9	Display
	19 Setting MODE 2 Pr . List 3 Set Pr . List 4 Det. Pr . List		
Using the [▼] key, move the cursor (⇔) to "2 Pr. List":	1 Setting MODE		
	2) Pr. Det 3 Set Pr. Het 4 Det Pr. Het		
		acparent a c	
Press the [READ] key The parameter list is displayed.		5)	
Press the [READ] key the parameter has to displayed.	0) Trq. Bat1 1 Max.F1 2 Mn.F1 3 VFbassaP1⊡	•	
	· · · · · · · · · · · · · · · · · · ·	· - · - · · ·	
Press the [▲] or [▼] key to move the cursor (⇔) to the re- quired item.	1 1 23.0 12 23 04	i Station Solidation S	
) If the required item is not found, press the [SHIFT] key and		e na serie a Serie de la serie Serie de la serie de la ser	3) (1997–6), south for the
[▼] key together to shift to the next page.		,	
) Press the [READ] key The parameter specified by the			
cursor is read and the inverter is put in the parameter setting mode.	0 Trg .Bat1 6.0% 0-30		
Press the [SHIFT] key to to the next parameter. ss any of the [MONITOR], [EXT OP] I [PU OP] keys to switch to the corre-	move		
Here we want at a second se			
onding mode.			Display
isplay of "3 Set Pr. List"	ction menu)		
isplay of "3 Set Pr. List" peration procedure 1 (To call from the help fun	ction menu)	1	
isplay of "3 Set Pr. List"	Ction menu)	,	FR.PU02E PWWWIEER UNT
isplay of "3 Set Pr. List" peration procedure 1 (To call from the help fun],	
isplay of "3 Set Pr. List" peration procedure 1 (To call from the help fun			
isplay of "3 Set Pr. List" peration procedure 1 (To call from the help fun) Call the parameter menu in accordance with page.	1 Setting MODE 2 Pr. List 3 Set Pr. List 4 Dest Pr. List		
isplay of "3 Set Pr. List" peration procedure 1 (To call from the help fun) Call the parameter menu in accordance with page.	1 Setting MODE 2 Pr., Let 3 Setting MODE 2 Pr. Let 3 Set Pr. Let 3 Set Pr. Let 4 Det Pr. Let 4 Det Pr. Let		

2) Using the [♥] key, move the cursor (○) to *4 Def. Pr. List. 2) Jaing the [♥] key, move the cursor (○) to *4 Def. Pr. List. 3) Press the [READ] key The initial value list is displayed. (Note) Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corresponding mode. Note: Press the [SHIFT] key and [♥] key together to move to the next page.	2) Using the (♥) key, move the cursor (<) to '4 Def. Pr. List'- 3) Preas the [READ] key The initial value list is displayed. (Note) Preas any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode. Iote: Preas the [SHIFT] key and [♥] key together to move to the next page.	1) Call the parameter menu in	accordance with page 7-8.		
 a) Press the [READ] key The initial value list is displayed (Note) a) Press any of the (MONITOR), [EXT OP] and [PU OP] keys to switch to the corresponding mode. Note: Press the [SHIFT] key and [♥] key together to move to the next page. 	3) Press the [READ] key The initial value list is displayed. (Note) Press any of the [MONITOR], [EXT OP] and [PUOP] keys to switch to the corre- sponding mode. Iote: Press the [SHIFT] key and [♥] key together to move to the next page.			2 Pr. List 3 Set Pr. List 4 Det Pr. List	
 a) Press the [READ] key The initial value list is displayed (Note) a) Press any of the (MONITOR), [EXT OP] and [PU OP] keys to switch to the corresponding mode. Note: Press the [SHIFT] key and [♥] key together to move to the next page. 	3) Press the [READ] key The initial value list is displayed. (Note) Press any of the [MONITOR], [EXT OP] and [PUOP] keys to switch to the corre- sponding mode. Iote: Press the [SHIFT] key and [♥] key together to move to the next page.				
(a) Press the [READ] key. Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corresponding mode. Note: Press the [SHIFT] key and [V] key together to move to the next page.	3) Press the [READ] key The initial value list is displayed. (Note) Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode. Note: Press the [SHIFT] key and [♥] key together to move to the next page.	2) Using the [♥] key, move th	e cursor (➾) to "4 Def. Pr. List"	· I Setting MODE	
3) Press the [READ] key The initial value list is displayed. (Note) Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode. Note: Press the [SHIFT] key and [♥] key together to move to the next page.	a) Press the [READ] key The initial value list is displayed. (Note) Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode. tote: Press the [SHIFT] key and [▼] key together to move to the next page.			3 Set Pr. Lat 40 Dat Pr. Lat	
(Note) Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode. Note: Press the [SHIFT] key and [▼] key together to move to the next page.	(Note) Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode. Jote: Press the [SHIFT] key and [♥] key together to move to the next page.				
Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode.	Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode.				
Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode.	Press any of the [MONITOR], [EXT OP] and [PU OP] keys to switch to the corre- sponding mode.		(NO(O)		
and [PU OP] keys to switch to the corre- sponding mode. Note: Press the [SHIFT] key and [♥] key together to move to the next page.	and [PU OP] keys to switch to the corresponding mode.			·	
		and [PU OP] keys to swite sponding mode.	h to the corre-	i a l'Agrica la colo de la destructione agricología de la coloridade de la coloridad	а З)
		Note: Press the [SHIFT] k	ey and [▼] key together t	o move to the next pa	ge.
			· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	
			میں اور		
				ατο τη του του ^{πο} ιτου του του του του του του του του του	•••
			en e	š., 3	
				경제는 사람들을 알았다. 	с. С. С. С
		· · · · · · · · · · · · · · · · · · ·			and the second second
					the stand of the s
		a second a s	1	۳۰ - ۲۰ (۲۰۰۰) سهای ۲۰ سرو ۲۰۰۰ ۲۰۰۱ این ۲۰۰۱ ۲۰۰۰ - ۲۰۰۰ ۲۰۰۱ (۲۰۰۰ ۲۰۰۰ ۲۰۰۰	
		and the second sec			ngen of the second s
			antina antina antina antina antina antina. Antina antina	بالمراجعة والمعادية والمعادية	ا معنی از معام العام العام العام العام الع
		**************************************			an a
		e geni Se still generation († 1964)			
				- 1999 - Harris I. James - La Barris	
					n to a first for a single second s
			1.4135 1.4135	da data en raje data. Trans	
ریک کار بودید این کیوند دی کار برگرافته از والدیک کار بریک این والدیک بودید به مرکز باری این این این این این میکند. این کاری این کار این این این این این این این والدیک بودید به مرکز باری این این این این این این این این این ای			سیانی در این این میدورسیسی د		-
الا من او مراجع مراجع مراجع مراجع الروم اور الراح المن المحاصل من المحمد المن المحمد المراجع المحمد محمد محمد ا المراجع المراجع مراجع مراجع مراجع الروم اور الراح المراجع المحمد المحمد المحمد المحمد المحمد المحمد المحمد محمد	ار این اور اور اور اور میرد اور در ایر این ایر این				
				4	atus dat în tur di 1990 de . L
n na seneral de la construcción de La construcción de la construcción d La construcción de la construcción d		n da manum la como de l Esta de la como de la co	n ann an Anna a Anna an Anna an	an an an an taon an an taon an Taon amin'	n an
			na in the second s	and an	en en anterna de la composición de la c Referencia de la composición de la compo
7 – 10			I = I	-	

		-)) i sa sana sa
	ice in any operation mode to c	all the help menu, with	which various function
be executed.			· · · · · · · · · · · · · · · · · · ·
1 Clear Pr	Returns (initializes) the		
	the exception of the cal		
	Initializes all parameter		
3 Clear None	Does not initialize.	n an 1890 - Angel an anns a' stàitean anns an 1890 anns an Tha anns an 1890 anns	
isplay of the parar	neter clear menu	м с	Display
I) Press the [HELP] key	The help function menu is called		
twice in the operation mode.		1 HONITOR 2 PU Oper 3 Pr List 4 Pr List	
mode.		4 Pr. Clear 🖸	FR-PU02E PARAMETER UNIT
	مور میں ایک ایک میں میں ایک	· ····································	
2) Using the [▼] key, mo	we the cursor (⇔) to "4 Clear Pr.".	1 MONITOR	
тарана на селото на Селото на селото на с Селото на селото на с		2 PU Oper 3 Pr. List	
×	and the second s		
3) Press the [READ] key	The parameter clear menu is	ILCOAR Pr.	
	displayed.	2" Clear All 3 Clear None	
an a	a and a second	en e a a a a ser e	
•			
Press any of the [MC		the states of the	
[EXT OP] and [PU O	P] keys to switch to		
	P] keys to switch to		3)
[EXT OP] and [PU O the corresponding m	P] keys to switch to	1997 - Andreas Angeles, 1997 - Angeles	3)
[EXT OP] and [PU O the corresponding m	P] keys to switch to ode. ution of "1 Clear Pr."	tan ing pangang sa	3)
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur	P] keys to switch to ode. ution of "1 Clear Pr."		ng san sin kanalar Jahr Bartana ang
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur	P] keys to switch to ode. ution of "1 Clear Pr." e		3) Display
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur	P] keys to switch to ode. ution of "1 Clear Pr." e		ng san sin kanalar Jahr Bartana ang
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur	P] keys to switch to ode. ution of "1 Clear Pr." e	IF Cear Prints Seer All Scear All Automatical	ng san sin kanalar Jahr Bartana ang
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur 1) Call the parameter m procedure. 2) Make sure that the	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above 		Display
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above 		Display
[EXT OP] and [PU O the corresponding m Selection and exec Operation procedur 1) Call the parameter m procedure. 2) Make sure that the	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above 	TI Clear Pr. 2 Clear All 3 Clear All 5 Clear All 6 Clear All 7 Fau+ - All 2 Clear All	
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above 		Display
 [EXT OP] and [PÜ O the corresponding m Selection and exec Operation procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is		
 [EXT OP] and [PÜ O the corresponding m Selection and exec Operation procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key.	Cherry Processor	
 [EXT OP] and [PÜ O the corresponding m Selection and exec Operation procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is		Display
 [EXT OP] and [PÜ O the corresponding m Selection and exec Operation procedure 1) Call the parameter m procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is		
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter maprocedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 4) Press the [WRITE] key 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is displayed. eyThe data on the right is		
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter maprocedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. y The data on the right is displayed. eyThe data on the right is displayed and the parameters	IFCear Print S Cear All S // AU+ ALL YAU+ CEAD>	
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter maprocedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 4) Press the [WRITE] key 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is displayed. eyThe data on the right is	Ciesr Pr.	
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter monotonic procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 4) Press the [WRITE] key (Note) 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. y The data on the right is displayed. eyThe data on the right is displayed and the parameters are initialized.	Ciesr Pr.	
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter monotonic procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 4) Press the [WRITE] key Press any of the [Mage Press any of the Press and Press a	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. y The data on the right is displayed. eyThe data on the right is displayed and the parameters are initialized. ONITOR], [SET],	Ciesr Pr.	
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter monotonic procedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 4) Press the [WRITE] key Press any of the [Mage Press any of the Press and Press a	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is displayed. eyThe data on the right is displayed and the parameters are initialized. ONITOR], [SET], P] keys to switch to	Ciesr Pr.	
 [EXT OP] and [PÜ O the corresponding m Selection and exection procedure 1) Call the parameter maprocedure. 2) Make sure that the cursor (⇔) is located at "1 Setting". 3) Press the [READ] key 4) Press the [WRITE] key Press any of the [Max (Note) 	P] keys to switch to ode. ution of "1 Clear Pr." e enu in accordance with the above If not, move the cursor with the [▲] [♥] key. / The data on the right is displayed. eyThe data on the right is displayed and the parameters are initialized. ONITOR], [SET], P] keys to switch to	Ciesr Pr.	


Selection and execution of "2 Clear All" **Operating procedure** Display 1) Call the parameter clear menu in accordance with page 7-11. FR-PU02E 2) Using the [▼] key, move the cursor (⇒) to "2 Clear All". 3) Press the [READ] key. The data on the right is LEAR ALL Pr. X60 «WRITE» >ncel<CLEAR» **(2)** 2) displayed. 23 Õ 4) Press the [WRITE] key. .. The data on the right is CLEAR ALL Pr. displayed and the parameters (Note) Executing are initialized. 3) 4) τ. Press any of the [MONITOR], [SET], [EXT OP] and [PU OP] keys to switch to the corresponding mode. Note: Press the [CLEAR] key to disable clear All. "3 Clear None" When "3 Clear None" is selected, the parameters are not initialized.

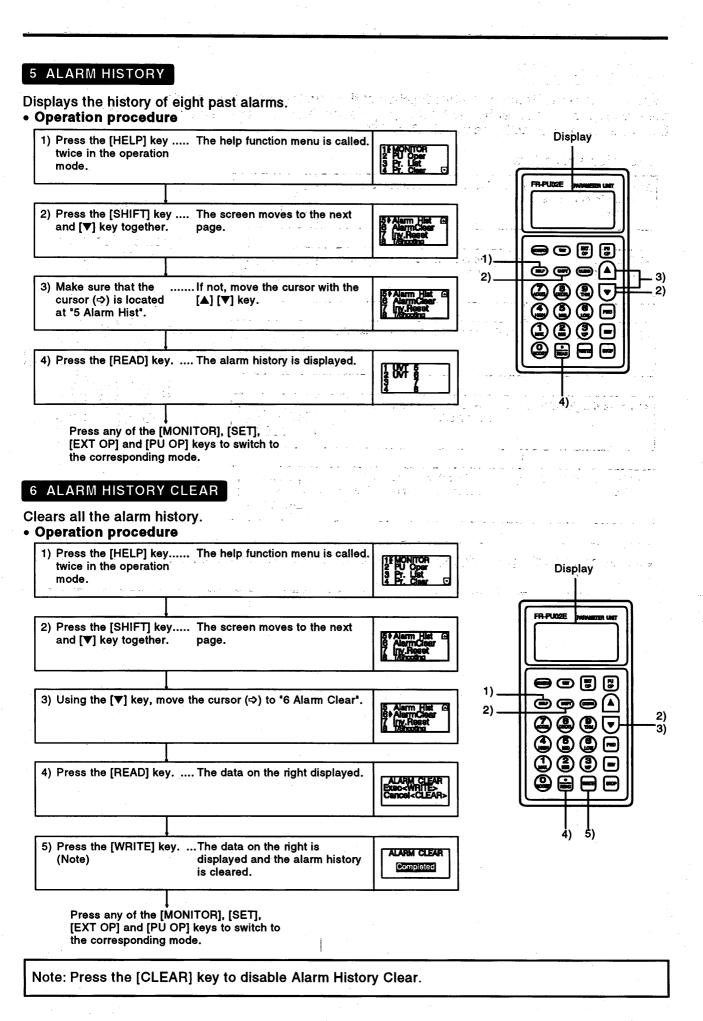

7 INVERTER RESET

Resets the inverter. If the protective function of the inverter is activated to trip (protect) the inverter, the trip state can be reset by the following operation. The trip state can also be reset by switching the power off or connecting terminals RES-SD.

Operation procedure

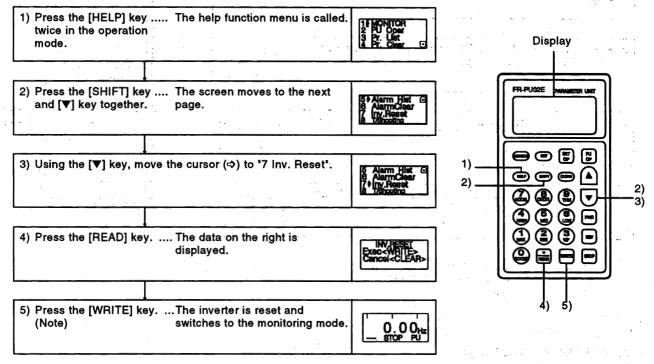


Note: By pressing the [CLEAR] key, the inverter is not reset and is switched to the monitoring mode.

8 TROUBLESHOOTING

If the inverter appears to operate incorrectly, perform the following operation to display the most likely cause of the fault. This operation may also be performed during inverter operation (PU operation, external operation) or during alarm trip (protection activated).

Operation procedure

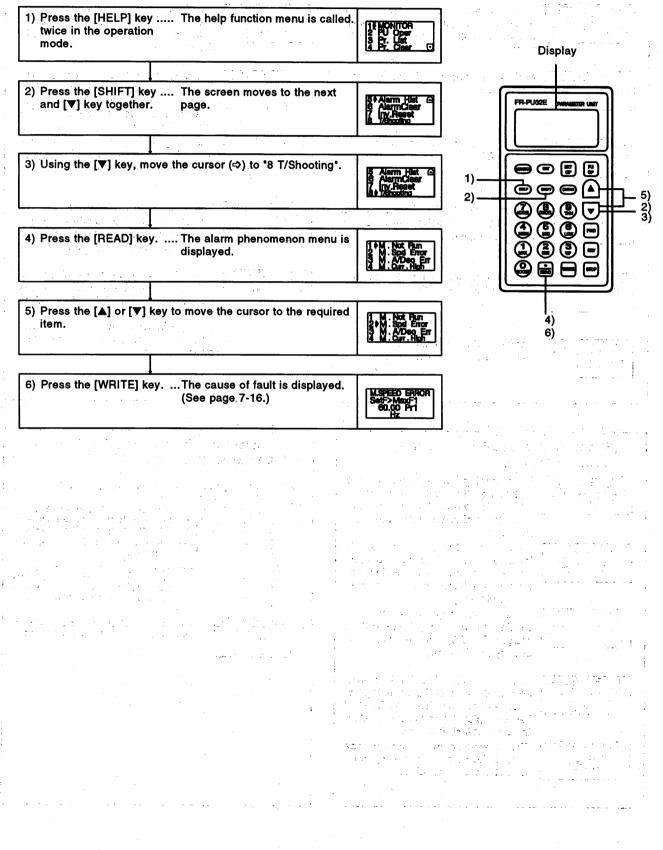


7 - 15


Faults

M.NOT RUNNING		·	
ALARM Indicated <shift></shift>	The inverter has alarm-tripped (pro- tection activated), resulting in output shut-off. Press the [SHIFT] key to dis- play the cause of the trip.	M.NOT RUNNING MaX.F1 <start Pr.1 Pr.13</start 	The inverter cannot be started be cause the inverter starting frequence (Pr. 13) value is higher than the maxi mum frequency (Pr. 1).
M.NOT RUNNING NO I/P Power or Phase Loss	The main circuit power of the inverter is lost, or open phase has occurred in the power supply. Check the power supply.	M.NOT RUNNING EnableFR Set See Pr.78	The inverter cannot be started be cause the forward or reverse rotation has been inhibited by the value set in Pr. 78.
M.NOT RUNNING STF,STR both are OFF or ON	Both start signals STF and STR are ON or OFF.	M.NOT RUNNING Current Limit Activated <shift></shift>	The inverter cannot be started since the current limit function is operating Press the [SHIFT] key to display the assumed cause of activating the current limit function.
M.NOT RUNNING MRS is ON	The output shut-off input terminal MRS is ON.	M.NOT RUNNING TS Control Standby Mode	The inverter cannot be started be cause it is the stop period in the pro grammed operation mode.
M.NOT RUNNING SetF <startf Pr.13</startf 	The inverter starting frequency (Pr. 13) set value is higher than the cur- rent set frequency.	M.NOT RUNNING Under PI Control	The inverter is not started becaus the operation of PI control has re- sulted in a condition under which th inverter need not be started.
M.NOT RUNNING AU IS OFF	The current input select terminal AU remains OFF. (Not ON) Neither of the FWD and REV keys are	M.NOT RUNNING CS Is OFF See Pr.57	Restart cannot be made since th automatic restart after instantaneou power failure select terminal CS i OFF. Currently it is assumed to b after an instantaneous power failur or in the commercial power suppl
NO Command	ON in the PU operation mode.	an a	switch-over operation mode.
From PU		e de la composition de la composition La composition de la c	n biblion ann an Suair Suairtean Agus Suairtean
– 2 M.SPEED		3 M.A/Dec	<u>a parta su ante a construction de la construction </u>

quency set value)

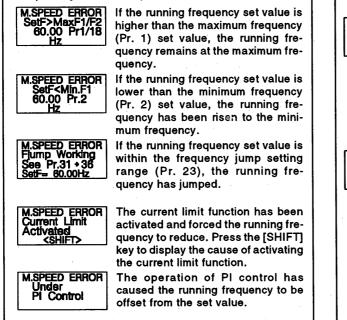

than the value set in Pr. 7/Pr. 8)

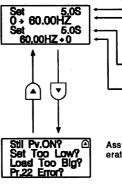

Acceleration time set value (Pr. 7) is displayed.

Frequency reached in the above set time (acceleration/deceleration refer-ence frequency, Pr. 20) is displayed. Deceleration time set value (Pr. 8) is displayed.

Frequency from which deceleration is made in the above set time (acceleration/deceleration reference frequency, Pr. 20) is displayed.

Assumed cause of longer acceleration/deceleration time than the set value is displayed.

4 M.Curr.High-(Inverter output current value is larger Note: If the fault could not be identified by than normal) the above operation Inv.Output 60.00HZ 0A 230V First, the running frequency, out-If the cause of the fault could not be 10Ã 2: <S<u>HIF</u> put current and output voltage of found in the inverter, the current runnthe inverter are displayed. Press ing frequency, output current and outthe [SHIFT] key to display the assumed cause of large output curput voltage are displayed on the screen. rent. ow impedance Is the motor a special motor other Motor? Reduce TrgBat than the general-purpose 3-phase induction motor? If so, reduce the 38,46 torque boost set value. Related parameters: Pr. 0, 38, 46 Press the [SHIFT] key to display the • relevant assumed cause. Is the motor a constant-torque motor (motor for inverter)? If so, re-TrqBa duce the torque boost set value. Related parameters: Pr. 0, 38, 46 Since the torque boost set value 1993 L. C. may be inappropriate, check the following relevant parameters: Related parameters: Pr. 0, 38, 46 9 - - -Since the V/F pattern setting may Епо be inappropriate, check the following relevant parameters: Related parameters: Pr. 3, 14, 19, 47 The load may be too heavy. An Load Too Big? open phase may have occurred OutPut between the inverter and motor. 71888

3.2.4 Other Help Function

Graphic function

Press the [HELP] key on the parameter setting screen to display the data of the corresponding parameter graphically.

•	Operation procedure (Example: Pr. 3 "starting frequency")		Display
	1) Read the required parameter in accordance with page 8-1 or page 7-8.	اند. محمد = محمد مریز (مریک ۲۵	FR-PU02E WWWWIDE UNT
	2) Press the [HELP] key The data of the parameter is displayed graphically.	2)	
ý			
	3) Press the [CLEAR] key The display returns to the previous screen.	n an teann An teann an An teann an teann	
÷	اليساني المنابع المراجع المن المن المن المن المن المن المن المن		

3.3 SETTING AND CHANGING THE VALUES IN THE PARAMETERS

The inverter has many parameters. Using the PU, the required parameters can be selected and their values set and/or changed as appropriate according to the load and running conditions. For more information, see the "Parameter List" (page 9-1). To stop parameters being changed, set "1" in Pr. 77 "parameter write disable". (See page 9-37.)


• Operation procedure (Reading and writing the value of Pr. 8 "deceleration time")

DIRECTLY Set 0.00HZ 0-400 Display	•
SETTING MODE Sat Pr.NO. FOR PR.List <help></help>	5
	- 1)
€ Dec.T1 ↓ 15.05 1505 0-3800 1805 0-3800 4) 6)	
8 Dec.T1 If an error is displayed by bitlines pressing the [WRITE] key, see connected page 4-3.	• · · ·
ind call the the next	
ry of a set value, press the [CLEAR] key entered.	to
PU operation mode. When the PU operation mode. When the PU operation mode in accordance with page 5-6. Is may be set and/or changed in the extern Display functionPr. 51 to 56 Calibration functionPr. 900 to 909	nal 5
	Display Dis

For more information, see page 7-8.

3.3.1 Overview of the Parameter Unit Functions

By using the PU, the following operations can be performed.

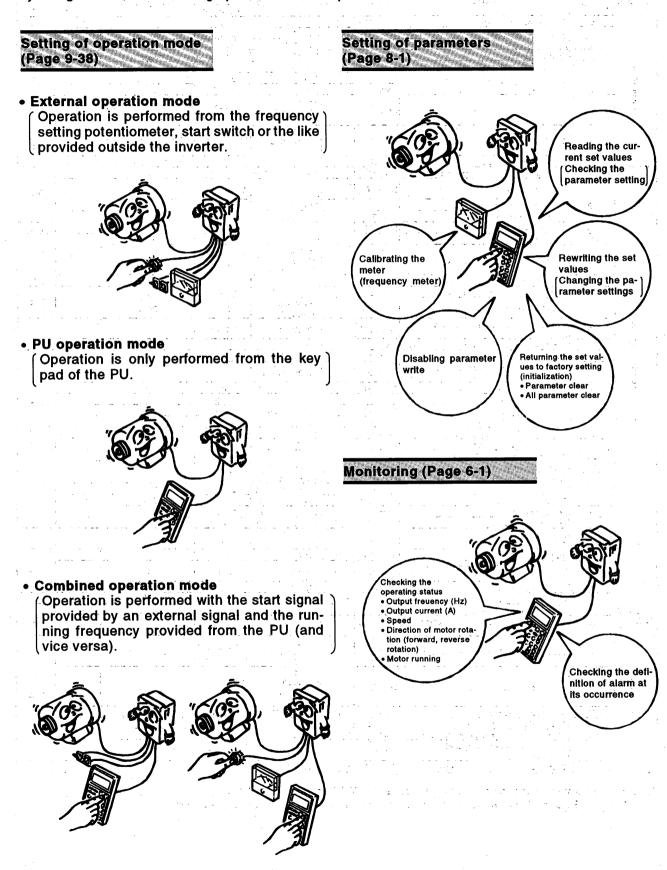

PARAMETERS 3.4

3.4.1 **Parameter List**

unction	Parameter Number	Name	Screen Display	Note 3	Setting Range	Minimum Setting Increment	Factory Setting	Customer Set Value	Refer To:
	0	Torque boost(manual)	Trg.Bst1	0	0 to 30%	0.1%	6%/3% (Note 1)		
	1	Maximum frequency	Max.F1		0 to 120Hz	0.01Hz	120Hz		9-4
	2	Minimum frequency	Min.F1		0 to 120Hz	0.01Hz	0Hz		9-5
<i>a</i>	3	Base frequency	VFbaseF1		0 to 400Hz	0.01Hz	60Hz		3-5
ous	4	Multi-speed setting (high speed)	PresetF1		0 to 400Hz	0.01Hz	60Hz		
ncti	5	Multi-speed setting (middle speed)	PresetF2		0 to 400Hz	0.01Hz	30Hz	├ ───┤	9-6
fui	6	Multi-speed setting (low speed)	PresetF3		0 to 400Hz	0.01Hz	10Hz		_
Basic functions	ан то _{Ала} на Ал	Acceleration time	Acc.T1		0 to 3600 seconds/0 to 360 seconds	0.1 seconds/ 0.01 seconds	5 seconds/15 seconds (Note 1)	» •	9-7
	8	Deceleration time	Dec.T1		0 to 3600 seconds/0 to 360 seconds	0.1 seconds/ 0.01 seconds	5 seconds/15 seconds (Note 1)		9-8
·	9	Electronic thermal O/L relay	Set THM		0 to 500A	0.01A	Rated output current		
1.1	10	DC injection brake operation frequency	DC Br.F		0 to 120Hz, 9999	0.01Hz	3Hz		
	11	DC injection brake operation time	DC Br.T		0 to 10 seconds, 8888	0.1 seconds	0.5 seconds		9-9
	12	DC injection brake voltage	DC Br.V		0 to 30%	0.1%	6%/3% (Note 1)		
	13	Starting frequency	Start F		0 to 60Hz	0.01Hz	0.5Hz		
. *	14	Applied load selection	Load VF	0	0 to 5	1	0		9-10
	15	Jog frequency	JOG F 🕤		0 to 400Hz	0.01Hz	5Hz		
	16	Jog acceleration/deceleration time	JOG T	4.	0 to 3600 seconds/0 to 360 seconds	0.1 seconds/ 0.01 seconds	0.5 seconds		9-11
· 2 · ·	17	External thermal O/L relay input	JOG/OH		0 to 7	1	0		9-12
2.11	18	High-speed maximum frequency	Max.F2	1	120 to 400Hz	0.01Hz	120Hz		
	19	Base frequency voltage	VFbase V		0 to 1000V, 8888, 9999	0.1V	9999		9-13
ctions	20	Acceleration/deceleration reference frequency	Acc/DecF	-	1 to 400Hz	0.01Hz	60Hz		9-7
ŭ	21	Acceleration/deceleration time increments	Incr.T		0, 1	1	0		
ç	22	Stall prevention operation level	Still Pv1		0 to 200%, 9999	0.1%	150%		0.44
Standard operation functions	23	Stall prevention operation level at double speed	Stll Pv2		0 to 200%, 9999	0.1%	9999		9-14
9		Multi-speed setting (speed 4)	PresetF4		0 to 400Hz, 9999	0.01Hz	9999		
ard		Multi-speed setting (speed 5)	PresetF5	ļ	0 to 400Hz, 9999	0.01Hz	9999		9-6
pu		Multi-speed setting (speed 6)	PresetF6		0 to 400Hz, 9999	0.01Hz	9999		
Sta		Multi-speed setting (speed 7)	PresetF7		0 to 400Hz, 9999	0.01Hz	9999		
	28	Multi-speed input compensation	Pre.Comp		0, 1	1	0		9-17
	29	Acceleration/deceleration pattern	Acc/DecP		0, 1, 2, 3	1	0		9-16
	30	Brake sequence error display erasure			0		0		
	31	Frequency jump 1A	Fjump 1A	*	0 to 400Hz, 9999	0.01Hz	9999		
	32	Frequency jump 1B	Fjump 1B		0 to 400Hz, 9999	0.01Hz	9999		9-17
	33	Frequency jump 2A	Fjump 2A		0 to 400Hz, 9999	0.01Hz	9999		ł
	34	Frequency jump 2B	Fjump 2B	<u> </u>	0 to 400Hz, 9999	0.01Hz	9999		1 ·
	<u>35</u> 36	Frequency jump 3A	Fjump 3A Fjump 3B		0 to 400Hz, 9999 0 to 400Hz, 9999	0.01Hz	9999		
	37	Frequency jump 3B Speed display	Dispunit		2 to 10, 11 to	0.01Hz 1	9999		9-18
	38	Automatic torque boost	A.TrgBst	0	0 to 200%	0.1%	0		1
	39	Automatic torque boost operation starting current	NoLoad I	0	0 to 500A	0.01A	0		9-19
. =	40	Output terminal assignment	Selectop		0 to 9999	1	1234		
ntpu nal	41	Up-to-frequency sensitivity	SU Range	l· í	0 to 100%	0.1%	10%		9-20
망분형	42	Output frequency detection	SetFU FW	,	0 to 400Hz	0.01Hz	6Hz		
tion output terminal functions	43	Output frequency detection at reverse rotation	SetFU RV	1	0 to 400Hz, 9999	0.01Hz	9999		9-2
· ·	44	Second acceleration/deceleration time	Ac/DecT2		0 to 3600 seconds/0 to 360 seconds	0.1 seconds/ 0.01 seconds	5 seconds	2 2 T	
Second functions	45	Second deceleration time	Dec.T2	i	0 to 3600 seconds/0 to 360 seconds, 9999	0.1 seconds/ 0.01 seconds	· · · · · · · · · · · · · · · · · · ·		9-22
pu	46 🧷	Second torque boost	Trg.Bst2	0	0 to 30%, 9999	0.1%	9999		:
800	47	Second V/F (base frequency)	VFbaseF2	ļ	0 to 400Hz, 9999	0.01Hz	9999	1 · · · ·	1 22
Ň	48	Second stall prevention operation current	Stall2	 	0 to 200%	0.1%	150%		1 · ·
	49	Second stall prevention operation frequency	Stall2 F		0 to 400Hz	0.01Hz	• 0		

Note 1: The set value depends on the inverter capacity: (7.5K and down)/(11K and up). 2: In the Screen Display section, f indicates a frequency, V voltage, I current, and t time.

unction	Parameter Number	Name	Screen Display	Note 3	Setting Range	Minimum Setting Increment	Factory Setting	Customer Set Value	Refe To:
	51	Inverter LED display data selection	Set LED		1 to 14, 17, 18	1	1		
	52	PU main display data selection	Set Mäin	· '.	0, 17 to 20, 22,	1		21.2	
5				<u> </u>	23, 24 0 to 3, 5 to 14,				
Display function	53	PU level display data selection	Set Lvl.		17, 18	1	1		9-23
2	1				1 to 3, 5 to 14,		and the second	11. j. i k	
ya i	1000			•	17, 18, 21, 101 to			1 A A	· • ·
da i	54	FM terminal function selection	Set FM		103, 105 to 108, 110 to 114, 117,	1	1	1	f.s
				•	118, 121				e Se
	55	Frequency monitoring reference	CalbFM F		0 to 400Hz	0.01Hz	60Hz		
	56	Current monitoring reference	CalbFM I		0 to 500A	0.01A	Rated output current		9-2
Automat- ic restart functions	57	Restart coasting time	RestrtT1		0 to 5 seconds, 9999	0.1 seconds	9999		0.00
Auto ic re funci	58	Restart cushion time	RestrtT2		0, 1 to 5 seconds	0.1 seconds	1.0 second		9-26
tional func- tion	59	Remote setting function selection	Rmt Set		0, 1, 2	1 1	Ô,		9-27
	60	Intelligent mode selection	Int.Mode		0 to 8	1	0		9-28
· · · · •	61	Reference I for intelligent mode	Refl		0 to 500A, 9999	0.01A	9999		
	62	Ref. I for intelligent mode accel.	Acc t/l		0 to 200%, 9999	0.1%	9999		9-30
t en l	63	Ref. I for intelligent mode decel.	Dec t/l	· · · ·	0 to 200%, 9999	0.1%	9999		. 0-00
[64	Starting I for elevator mode	Elev. st		0 to 10Hz, 9999	0.01Hz	9999		
$z \ge 1$	65	Retry selection	Retry		0 to 5	. 1	0	1.5	9-3
suo	66	Stall prevention operation reduction starting frequency	Stll coF		0 to 400Hz	0.01Hz	60Hz		9-14
lati	67	Number of retries at alarm occurrence	Retry No		0 to 10	1	00		
Ę,	68	Retry waiting time	Retry t	·	0 to 10 seconds	0.1 seconds	1.0 second		9-32
. no	69	Retry count display erasure	Retry N	· ·	0	· · · · · ·	<u> </u>		
Ğ	71	Applied motor	SetMotor		0 to 6, 13 to 16	1	• 0		9-3
e e	72	PWM frequency selection	PWM F		0.7 to 14.5kHz	0.1kHz	14.5kHz	N 77 P	9-3
ц,	73	0 to 5V, 0 to 10V selection	Extf/10V		0 to 5, 10 to 15	1			9-3
ati	74	Response time for analog signal	IPfilter		0 to 8	11	1		0.0
Operation selection functions	75	Reset selection/PU disconnection detection	RES Mode		0, 1, 2, 3	1	0		9-3
	76	Alarm code output selection	Alarm OP		0, 1, 2, 3	1	0		9-3
1.1.1	77	Parameter write disable selection	EnableWr	-	0, 1, 2	1	0		
	78	Reverse rotation prevention selection Operation mode selection	EnableFR ContMode	· ·	0, 1, 2	1	0		
	* 80	Motor capacity	Motor KW		0 to 5, 7, 8 0.4 to 55kW, 9999	0.01kW	9999		9-31
			MOIOLKW		2, 4, 6, 12, 14,	0.01844	8888		9-39
	*-81 🙀	Number of motor poles (Note 7)	Mpole No	÷	16, 9999	1 .	9999		
· ·	* 82 🖈	Parameter set by manufacturer. Do not se	t.						. —
4	t 83 ☆	Rated motor voltage	Moter V		0 to 1000V	0.1V	200 (Note 6)	· · · · ·	15-
		Rated motor frequency	Motor f		50 to 120.00Hz	0.01Hz	60Hz		10-
	* 85 to	Parameters set by manufacturer. Do not set. (Note 8)							_
1.0	* 95 ☆ * 96	Auto tuning setting/state	AutoTune		0, 1, 101	· · · ·	0		15-
	* 97	n rare ranning earning etale	India I dila			<u></u>	· · · ·		19*
	to • 99	Parameters set by manufacturer. Do not s	et.		· · · · · · · · · · · · · · · · · · ·	· · · ·		ur den fru Suc	• <u>-</u>
- 02	* 145	Parameter unit language switching (Note 9)	PU Lang		0, 1, 2, 3	1	0		9-3
tion	* 100	Parameters for inboard options. For detail	s, see the o	option ma	nual:		i		
Auxiliary functions	to •	Pr. 100 to 109 for V/F 5-points setting.	-,	P		. '			-
۲ ۲	154 152	Open motor circuit detection level		T	0 to 50%	0.1 seconds	5.0%		
liar	152	Open motor circuit detection level	<u> </u>	1	0.05 to 1 seconds	0.01 seconds	0.5 seconds	<u>†</u>	9-4
nxi	* 155	RT activated condition	RT set	<u> </u>	0, 1, 10, 11		0.5 seconds		9-4
Υ.	156	Stall prevent, select, at regeneration	Still Prv		0 to 31, 100	1	0		9-4
	• 157	OL signal waiting time	OL delay		0 to 25 seconds, 9999	0.1 seconds	0		9-4:
	• 158	AM terminal function selection	AM set	2.1	1 to 3, 5 to 14, 17, 18, 21, 9999		9999		9-2
N	* 159	PWM f decrease at low speed	PWM3 f		0, 1, 2, 3	1	0	and a second	9-4
	* 160 to	Parameters for inboard options.		· · ·			t ng transfir (c. 17) n		
	* 199				· · · ·			- 10 - 10 - 10 - 10 - 10 - 10 - 10 - 10	

 $\cdots : : : : :$

9 - 2

Function	Parameter Number	Name	Screen Display	Note 3	Setting Range	Minimum Setting increment	Factory Setting	Customer Set Value	Refer To:
	900	FM terminal calibration	FM Tune			_	— (Note 5)		9-44
. on	901	AM terminal calibration	AM Tune				— (Note 5)		8-44
ratio	902	Frequency setting voltage bias	ExtVbias		0 to 10V 0 to 60Hz	0.01Hz	(0V) 0Hz		
nct	903	Frequency setting voltage gain	ExtVgain	· ·	0 to 10V 1 to 400Hz	0.01Hz	(5V) 60Hz		9-45
S⊒	904	Frequency setting current bias	ExtIbias		0 to 20mA 0 to 60Hz	0.01Hz	(4mA) 0Hz		3-43
	905	Frequency setting current gain	Extigain		0 to 20mA 1 to 400Hz	0.01Hz	(20mA) 60Hz		

Note 3: Indicates the parameters which are ignored when the magnetic flux vector control mode is selected.

- *: When the FR-PU01E is used, read and write of these parameters cannot be performed. (IF performed, Err is displayed.) (Set the calibration function numbers 900 to 905 using C-1 to C-6.)
- The parameters marked & have special functions. For more information, refer to the following list.
- 4: The parameters hatched allow their set values to be changed during operation if 0 (factory setting) has been set in Pr. 77 (parameter write disable). Note that the Pr. 72 setting cannot be changed in the external operation mode.
- 5: The functions of the FM and AM terminals change according to the set values of Pr. 54 (FM terminal function selection) and Pr. 158 (AM terminal function selection).
- 6: The factory setting for the FR-A241 (400V) series is 400V.
- 7: When any of 12, 14 and 16 is selected, the input of the RT signal causes the inverter to shift to V/F control. (During a stop only.)
- 8: These parameters may only be set under the following conditions: Pr. 77 = 801 or 901, Pr. 80 ≠ 9999, Pr. 81 ≠ 9999 (The settings can be changed during operation.)
- 9: This parameter may also be set when 801 or 901 is set in Pr. 77. (The setting may also be changed during operation.) (Cannot be cleared from the FR-PU02E.)

The parameters listed below are valid only when the corresponding parameters in Remarks are set.


Function	Parameter Number	Name	Screen Display	Setting Range	Factory Setting	Remarks
Load torque high-	24	High-speed setting maximum current value		0 to 200%	50%	
speed frequency control	25	Middle-speed setting minimum current value		0 to 200%	100%	Pr. 96 = 6, 7 (Note 13)
Control	- 26	Current averaging range	·	0 to 400Hz, 9999	9999	
	27	Current averaging filter constant		1 to 4000	16	
Stop-on-contact	82	Exciting current low-speed multiplying factor for a stop on contact		0 to 1000%, 9999	9999	Pr. 96 = 5, 7, (Note 10) Pr. 80, Pr. 81 ≠ 9999
control	83	PWM carrier frequency for a stop on contact	·	0.7 to 14.5kHz, 9999	9999	Pr. 96 = 5, 7 (Note 15)
PLG feedback supplement	84	PLG detection speed correction factor		0 to 10	0	Pr. 105 ≠ 9999 (Note 11)
Torque control	96	Torque control selection		0, 5, 6, 7	0	Pr. 77 = 701 (Note 12)
	85	Brake release frequency		0 to 30Hz	3Hz	· · · · · ·
	86	Brake release current		0 to 200%	130%	-
	87	Brake release current detection time		0 to 2 seconds	0.3 seconds	Pr. 80, 81 ≠ 9999
	88	Brake operation time at start		0 to 5 seconds	0.3 seconds	Pr. 60 = 7, 8
Brake sequence	89	Brake engagement frequency		0 to 30Hz	6Hz	
circuit function	90	Brake operation time at stop		0 to 5 seconds	0.3 seconds	
	91	Deceleration detection function selection		0.1	0	
	92	Brake release completion signal selection		0.1	0	Pr. 80, 81 ≠ 9999 Pr. 60 = 7
· · · ·	93	Overspeed detection frequency		0 to 30Hz, 9999	9999	Pr. 80, 81 ≠ 9999 Pr. 60 = 7, Pr. 105 ≠ 9999 (Note 14)

10: With 701 set in Pr. 77, this parameter can be set under the following conditions: Pr. 96 = 5, 7, Pr. 80 ≠ 9999, Pr. 81 ≠ 9999 (The setting may also be changed during operation.)

- 11: This parameter can be set and is valid when the inboard option FR-EPA, EPB or EPC is fitted and Pr. 105 \neq 9999.
- 12: This parameter can be set when Pr. 77 = 701. (0: standard feature, 5: with stop-on-contact control, without load torque high-speed frequency control, 6: without stop-on-contact control, with load torque high-speed frequency control, 7: with stop-on-contact control, with load torque high-speed frequency control, 7: with stop-on-contact control, with load torque high-speed frequency control, 0:
- 13: With 701 set in Pr. 77, these parameters can be set when Pr. 96 = 6 or 7. (The settings may also be changed during operation.) At this time, multi-speeds f (speeds 4 to 7) are valid. (Multi-speed operation can be performed.)
- 14: This parameter can be set and is valid when Pr. 60 = 7, the FR-EPA, EPB or EPC inboard option is fitted, and Pr. 105 ≠ 9999.
- 15: With 701 set in Pr. 77, this parameter can be set when Pr. 96 = 5 or 7.

3.4.2 Setting of Parameters to Improve the Corresponding Operational Functions




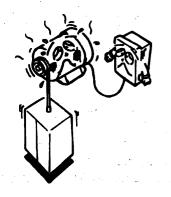

⇒ Pr. 0 "torque boost (manual)"

• Used to adjust the motor voltage during low-frequency operation, thereby increasing the motor torque at the time of start.

Model	Factory Setting	Setting Range
7.5K and below	6 %	0 to 30 %
11K and above	3 %	0 10 30 %
been se netic flu 2. When t motor (is used this par	rameter is ig r. 80 and Pr. et to select th ux vector cor he inverter-d constant-toro , change the ameter as fo nd down4	81 have ne mag- ntrol mode. edicated que motor) setting of bllows:

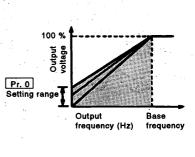

Pr. 1 "maximum frequency" or Pr. 18 "high-speed maximum frequency"

Allows the upper limit of the output frequency to be clamped.

• The maximum setting is within 120 Hz.

11 K and up...2 %


Use parameter Pr. 1 "maximum frequency" to set the upper limit of the output frequency.

Factory Setting	Setting Range
120 Hz	0 to 120 Hz


The maximum setting is higher than 120 Hz.


Use parameter Pr. 18 "highspeed maximum frequency" to set the upper limit of the output frequency. Setting this parameter automatically changes Pr. 1 "maximum frequency" to this setting.

Factory Setting	Setting Range
120 Hz	120 to 400 Hz

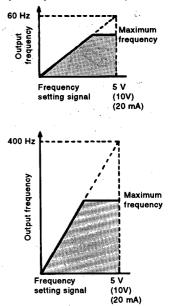


To keep the speed less than the set frequency of the machine

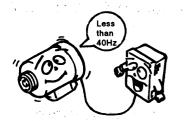

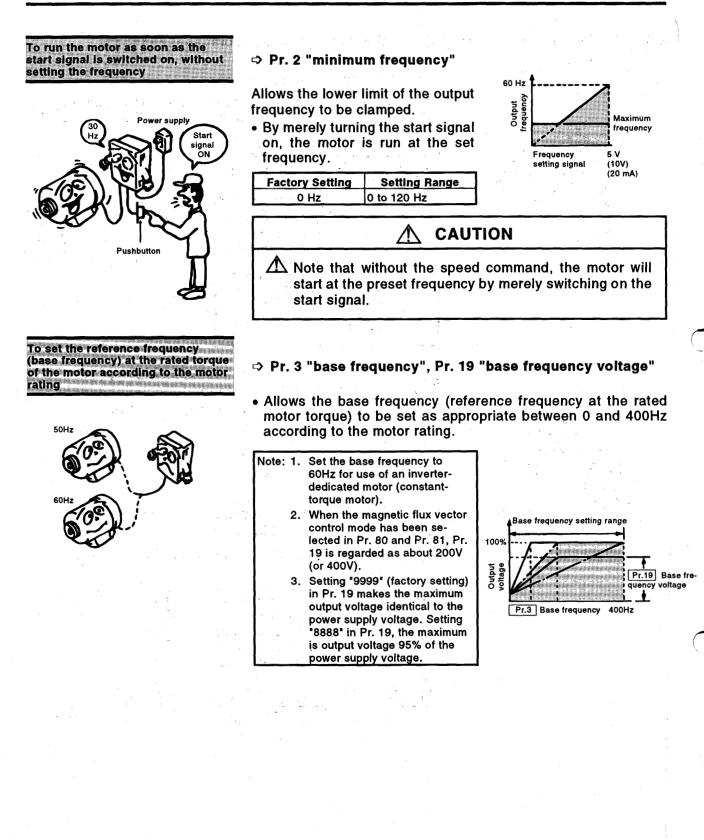


To set multiple speeds

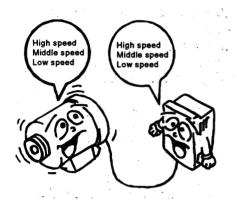


⇒ Pr. 4 "3-speed setting (high speed)", Pr. 5 "3-speed setting (middle speed)", Pr. 6 "3-speed setting (low speed)", Pr. 24 "multi-speed setting (speed 4)", Pr. 25 "multi-speed setting (speed 5)", Pr. 26 "multi-speed setting (speed 7)"


- Allows any speed to be selected by switching the external contact signal (across terminals RH/RM/RL and SD).
- Each speed (frequency) may be specified as appropriate between 0 and 400Hz during inverter operation. The speed may also be set using the [▲] and [▼] keys. (On releasing the [▲] and [▼] keys, the set frequency is stored, that is the [WRITE] key need not be pressed.)
- By using these functions with jog frequency (Pr. 15), maximum frequency (Pr. 1) and minimum frequency (Pr. 2), up to 10 speeds can be set.

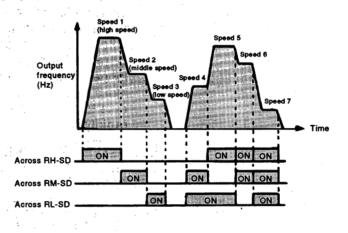

- Note: 1. Speeds 4 to 7 are not selected if the setting is "9999" (factory setting).
 - 2. These speeds have priority over the main speed (across terminals 2 and 5, 4 and 5).
 - 3. This setting may be made during PU operation or external operation.
 - 4. With 3-speed setting, if two or three speeds are simultaneously selected, priority is given to the frequency of lower signal.

To accelerate slowly or rapidly

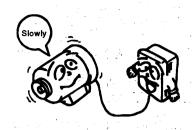

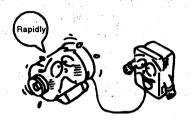

- ▷ Pr. 7 "acceleration time", Pr. 20 "acceleration/deceleration reference frequency", Pr. 21 "acceleration/deceleration time increments"
- (1) Confirmation of acceleration time setting range and minimum setting increments


Use Pr. 21 "acceleration/deceleration time increments" to set the acceleration time setting range and minimum setting increments. Before setting the acceleration time, the set value must be checked.

Set value "0"..... 0 to 3600 seconds (factory setting) (minimum setting

Set value "1"..... 0 to 360 seconds

0 to 3600 seconds (minimum setting increments: 0.1 seconds) 0 to 360 seconds (minimum setting increments: 0.01 seconds)

(2) Setting of acceleration time In acceleration time (Pr. 7), set a period of time required to reach the acceleration/deceleration reference frequency (Pr. 20) from 0Hz. Set a longer time to accelerate more slowly, and a shorter time to accelerate more rapidly. (Note)

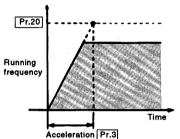


Model	Factory Setting	Setting Range
7.5K and below	5 seconds	0 to 3600 seconds / 0 to 360 seconds
11K and above	15 seconds	0 to 3600 seconds / 0 to 360 seconds

- Note: 1. In only S-pattern acceleration/deceleration A (see page 9-16), the set time is a period of time required to reach the base frequency (Pr. 3).
 - 2. If Pr. 20 (acceleration/deceleration reference frequency) setting is changed, the set values of calibration Pr. 903 and Pr. 905 (frequency setting signal gain) remain unchanged. To adjust the gains, adjust calibration Pr. 903 and Pr. 905.
 - 3. When the set value of Pr. 7 is "0", the acceleration time is set to 0.04 seconds.

At this time, set 120Hz or less in Pr. 20 "acceleration/deceleration reference frequency".

9-7

Time

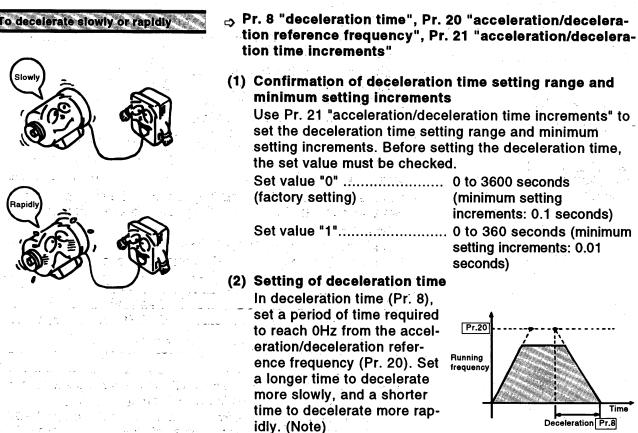

1	Model	Factory Setting	Setting Range
đ	7.5K and below	5 seconds	0 to 3600 seconds / 0 to 360 seconds
	11K and above	15 seconds	0 to 3600 seconds / 0 to 360 seconds

Note: When the set value of Pr. 8 is "0", the deceleration time is set to 0.04 seconds.

Pr. 9 "electronic overcurrent protection"

- The set value for motor overheat protection may be set as a current value (A). Normally set the rated current value of the motor at 50Hz. This function provides an optimum protective characteristic including a reduction in motor cooling capability in low-speed operation.
- Setting of "0" makes the motor protective function invalid. (The inverter output transistor protective function is valid.)
- When Mitsubishi's constant-torque motor is used, set "1" or any of "13" to "16" in Pr. 71 "applied motor" to select the 100% continuous torque characteristic during low speed operation, and set the rated motor current in Pr. 9 "electronic overcurrent protection".

Factory setting of Pr. 9 [rated output current of the inverter]

Note: When two or more motors are run simultaneously, provide a thermal relay for each motor.



Motor overheat protection

9-8

Time


Frequency setting

ON

signal (V)

Forward

rotation

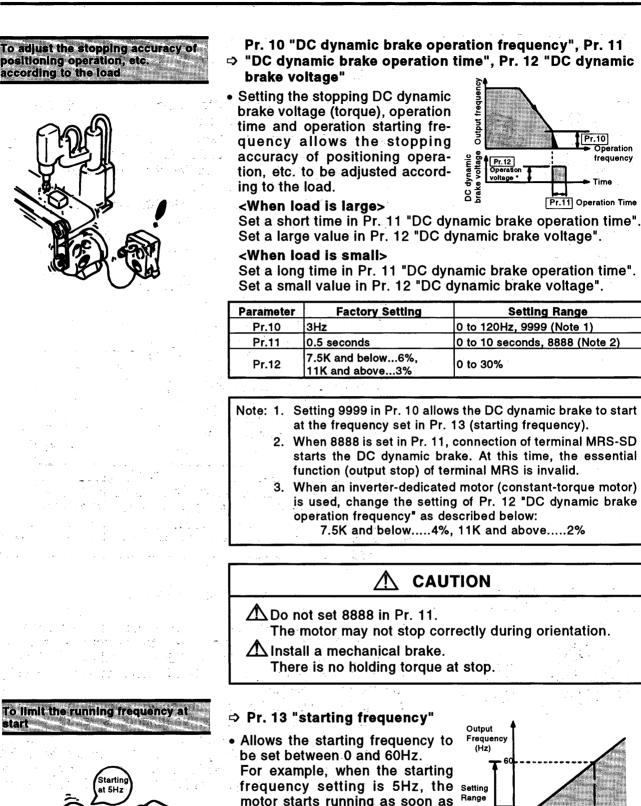

the frequency setting signal


Also, when the setting is higher


than 5Hz, entering the start sig-

nal causes the frequency output

reaches 5Hz.

to start from 5Hz.

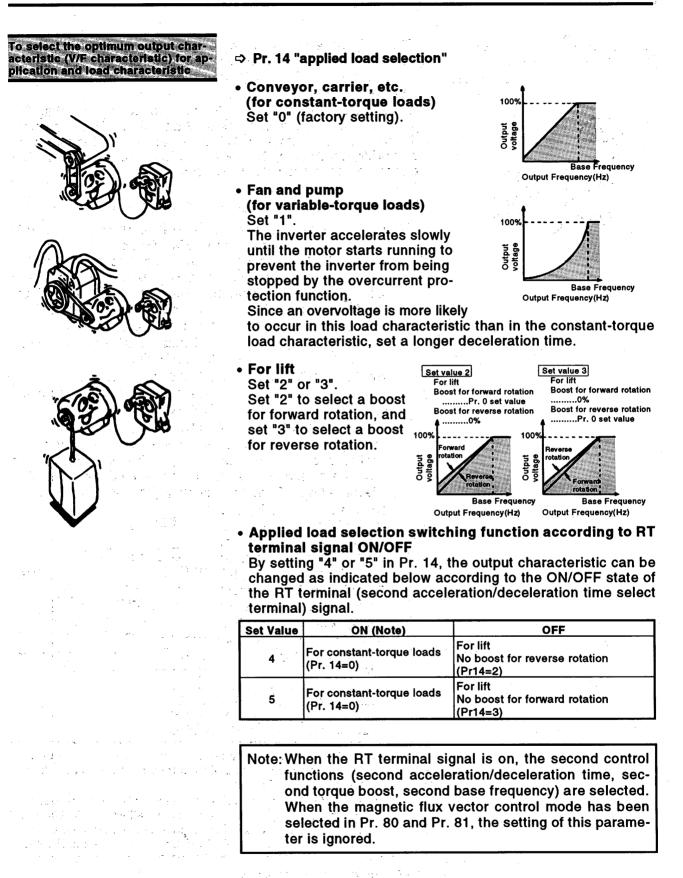

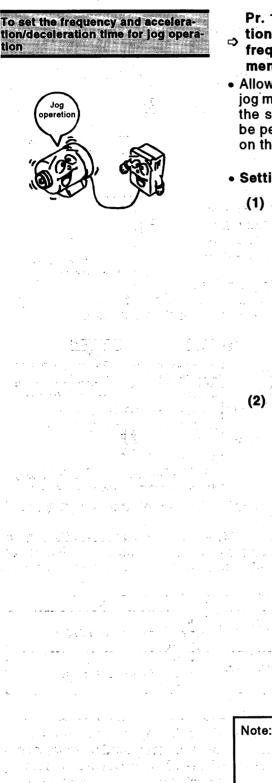

- Pr. 15 "jog frequency", Pr. 16 "jog acceleration/deceleration time". Pr. 20 "acceleration/deceleration reference
- frequency", Pr. 21 "acceleration/deceleration time increments"
- Allows jog operation to be started and stopped by selecting the jog mode (connecting terminals JOG and SD) and turning on/off the start signal (terminals STF,STR). Jog operation may also be performed by using the parameter unit. For full information on the operation procedure, see page 5-11.
- Setting of frequency and acceleration/deceleration time
 - (1) Confirmation of acceleration/deceleration time setting range and minimum setting increments


Use Pr. 21 "acceleration/deceleration time increments" to set the acceleration/deceleration time setting range and minimum setting increments. Before setting the acceleration/deceleration time, the set value must be checked.

Set value "0"	0 to 3600 seconds
(factory setting)	(minimum setting increments:
() ()	0.1 seconds)
Set value "1"	0 to 360 seconds
	(metal tare since a state of the supervise many
and a standard from the standard standard standard standard standard standard standard standard standard stand And standard	() () () () () () () () () () () () () (

(2) Setting of acceleration/deceleration time

In Pr. 16 "jog acceleration/deceleration time", set acceleration/deceleration time for jog operation. Acceleration time is a period of time required to reach the acceleration /deceleration reference frequency (Pr. 20) from 0Hz.

Deceleration time is a period of time required to reach 0Hz from the acceleration/deceleration reference frequency (Pr. 20). Set a longer time to accelerate or decelerate more slowly, and a shorter time to accelerate or decelerate more rapidly. (Note 1, 2)

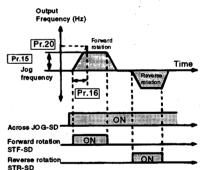

 Factory Setting	Setting Range
1 0 5 coronde	0 to 3600 seconds/ 0 to 360 seconds


Note: 1. In S-pattern acceleration/deceleration A (see page 9-16), the set time is a period of time required to reach the base frequency (Pr. 3).

 If Pr. 20 (acceleration/deceleration reference frequency) setting is changed, the set values of calibration Pr. 903 and Pr. 905 (frequency setting signal gain) remain unchanged. To adjust the gains, adjust calibration Pr. 903 and Pr. 905.

(3) Setting of frequency


In Pr. 15 (jog frequency), set the running frequency for jog operation.

Factory Setting	Setting Range
5Hz	0 to 400Hz

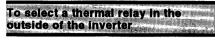




External thermal relay

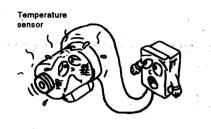

⇒ Pr. 17 "external thermal relay input"


Change the set value to "1" or "3" to switch the function of the input terminal JOG/OH from the factory setting of the jog mode to OH (external thermal relay input). OH is used to input the signal contact of a thermal relay installed outside the inverter or that of a temperature sensor built in the motor. Change the set value to "2" or "3" to switch the function of the MRS terminal to N/C contact input specification (normally closed input). Also, when any of 4 to 7 is set in this parameter, the output terminal to which "9" was set in Pr. 40 (output terminal assign-

Pr. 17	JOG/OF	I Terminal Function		erminal ction	Output Terminal Signal to Which	
Set Value	Jog mode	OH (external thermal relay input)	N/O input	N/C input	"9" Was Set in Pr. 40	
0 (factory setting)			٠	_	During PU	
1	·	t = ¹ . ●	•	-	operation	
2	•	—	_			
3	—		—	٠		
4	•		٠	_	Open motor circuit	
5	- <u>-</u> .	•	•	_	detection	
6			_	•	For details, refer	
7			_	•	to page 9-40.	

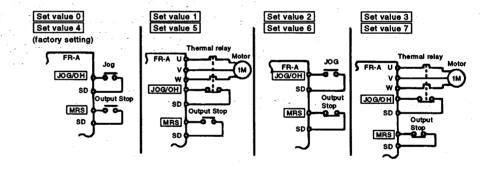


With the external thermal relay connected, do not switch to jog operation. The motor will start with the start signal only.



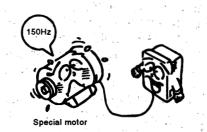

To use the motor of 200V rating with a 230V power supply

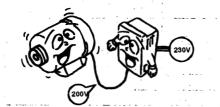

Pr. 18 "high-speed maximum frequency"

• This inverter is factory-set to the maximum running frequency of 120Hz. To run at the frequency over 120Hz, set a value of grater than 120Hz in Pr. 18 "high-speed maximum frequency". Pr. 1 "maximum frequency" is automatically changed to this set value.

Factory Setting	Setting Range
120Hz	120 to 400Hz

⇒ Pr. 19 "base frequency voltage"

• By setting 200V in Pr. 19 "base frequency voltage", a motor of rated voltage lower than the power supply voltage to the inverter can be used.

Factory Setting	Setting Range	
	0 to 1000V, 8888,9999	

- Note: 1. Setting "9999" (factory setting) in Pr. 19 makes the maximum output voltage identical to the power supply voltage.
 - 2. When the magnetic flux vector control mode has been selected in Pr. 80 and Pr. 81, Pr. 19 is regarded as about 200V (or 400V).
 - 3. By setting "8888" in Pr. 19, the maximum output voltage is 95% of the power supply voltage. (Set "8888" in Pr. 19 when using a special motor of other than a Japanese manufacturer, for example.)

I <Pr. 20, Pr. 21 ⇒ See the section of Pr. 7>

er beder i den en bereit der bereit



To set the stall prevention (current limit) operation level




¢


d e lata tra suc

9.01 (**9.9**1)

- Pr. 22 "stall prevention operation level"
 Pr. 23 "stall prevention operation level at double speed"
 Pr. 66 "stall prevention operation level reduction starting frequency"
 In Pr. 22 "stall prevention opera- [Pr.22]
- In Pr. 22 "stall prevention operation level", set the stall prevention (current limit) operation level. Normally set to 150% (factory setting).
- Note: The set value (%) indicates a ratio of the current value to the rated output current of the inverter.
- When operation is performed at high speed at or over 60Hz, acceleration may not be possible because the motor current does not increase. To improve the operation characteristic of the motor in such a case, the current limit level in the high-frequency range can be reduced. When operation is performed in the high-frequency range, the current in the locked motor state is smaller than the rated output current of the inverter and the inverter does not result in an alarm (protective function not activated).

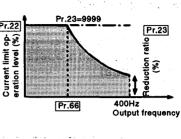

Setting example (Pr.22=150%, Pr.23=100%, Pr.66=60Hz)

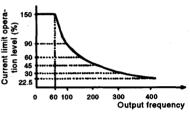


Pr. 66 is the reduction starting frequency, and Pr. 23 the reduction ratio correction coefficient.

- By setting "9999" (factory setting) in Pr. 23, the stall prevention (current limit) level is kept constant at the Pr. 22 set value up to 400Hz.
- Calculation expression for current limit operation level Current limit operation

level (%)= A + B x $\left(\frac{Pr.22 - A}{Pr.22 - B}\right) x \left(\frac{Pr.23 - 100}{100}\right)$

where, $A = \left(\frac{Pr.66(Hz) \times Pr.22 (\%)}{output frequency (Hz)}\right)$, $B = \left(\frac{Pr.66(Hz) \times Pr22(\%)}{400 (Hz)}\right)$

- When "0" is set in Pr. 22, the stall prevention operation is not performed.
- When "9999" is set in Pr. 22, the stall prevention level can be changed by terminal No. 1. A specific method is given below.

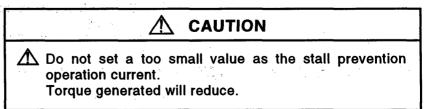

• Set "9999" in Pr. 22 to change the stall prevention operation level according to the voltage applied to terminal 1. (The fast-response current limit level remains unchanged.)

Setting method

Functions


Set "9999" in Pr. 22 "stall prevention operation level".

Stall prevention operation level signal

Enter 0 to 5V (or 0 to 10V) into terminal 1.

(Setting "9999" in Pr. 22 automatically switches the function of the auxiliary input terminal to a stall prevention operation level signal input.)


Parameter Number	Description	Setting Range	Minimum Increment	Factory Setting	Remarks	
. 22	Stall prevention level	0 to 200%, 9999	0.1%	150%	9999: Analog input	
22 (Note 1) Fast-response current limit level		0,1,2,3	0,1,2,3	2	0: No limit 1:150% 2:170% 3:190%	
	Current limit level at the input voltage of QV	0 to 200%	0.1%	150%	(Bias)	
	Current limit level at the input voltage of 10V/5V	0 to 200%	0.1%	200%	(Gain)	

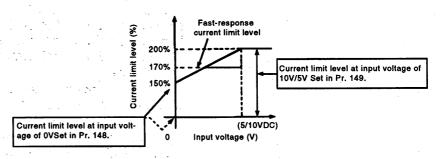

Note: 1. Set 701 in Pr. 77 to enable read and write. (When Pr. 77 = 701, Pr. 22 acts as a parameter for fast-response current limit level.)


- 2. Use Pr. 73 to switch the terminal 1 input voltage between 0 to 5V and 0 to 10V.
- 3. When 9999 is set in Pr. 22, the terminal 1 input is dedicated to stall prevention level setting. Therefore, the auxiliary input and override functions of terminal 1 are made invalid.
- 4. The setting of this parameter is ignored when the magnetic flux vector control mode has been selected using Pr. 80 and Pr. 81.
- 5. The fast-response current limit level is factory-set to 170%.


I <Pr. 24, Pr. 25, Pr. 26, Pr. 27 ⇒ See the section of Pr. 4>

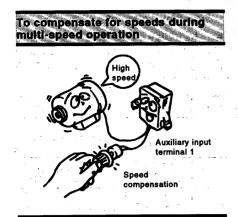

To select the optimum acceleration/ deceleration pattern for application



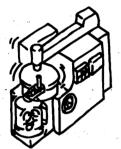

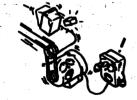



⇒ Pr. 28 "multi-speed input compensation"

 By entering a compensation signal into the auxiliary input terminal 1 (Note), the speeds (frequencies) of multi-speed settings selected by the RH, RM and RL terminals can be compensated for.

Set value	Compensation by Auxiliary Input	(Note) When any of 4, 5, 14 and 15 is set in Pr. 73, the
0	No compensation (factory setting)	compensation signal is entered into terminal 2.
1. ¹	Compensation available	

⇒ Pr. 29 "acceleration/deceleration pattern"


General application


Set "0" (factory setting). A general acceleration/deceleration pattern (linear acceleration/deceleration) is achieved. Generally this setting is used for

operation.

For machine tool spindles

Set "1". This setting is used when it is necessary to make acceleration/deceleration in a short time up to the 60Hz or higher speed range (S-pattern acceleration/deceleration A). In this acceleration/deceleration pattern, fb (base frequency) is always the inflection point of an S shape, allowing acceleration/deceleration time to be set according to the reduction in motor torque in the 60Hz or higher constant-output operation range (Pr. 7, Pr. 8).

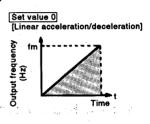

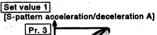




Note: For the acceleration/deceleration time, set the time required to reach the base frequency (Pr. 3), not the acceleration/deceleration reference frequency (Pr. 20).

• Prevention of cargo collapse on conveyor, etc.

Set "2" to provide an S-pattern acceleration/deceleration from f2 (current frequency) to f1 (target frequency), easing acceleration/ deceleration shock. This pattern has an effect on the prevention of cargo collapse, etc.

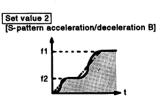

Factory Setting 1Hz (9999)

0.5 seconds (9999)

1Hz (9999)

0.5 seconds (9999)

Backlash compensation for reduction gear, etc.

Set "3". This function stops the output frequency change temporarily during acceleration/deceleration, reducing shock (backlash) generated when a reduction gear backlash is eliminated suddenly. Use Pr. 33 to 36 for the setting.


and a second	Pr. Number	Function Name	Setting Range
Set value 3	33	Backlash acceleration stopping frequency	0 to 400Hz
touenon Dt2Pr.35	34	Backlash acceleration stopping time	0 to 360 seconds
	35	Backlash deceleration stopping frequency	0 to 400Hz
Dt1[Pr.34] Dt2[Pr.36]	36	Backlash deceleration stopping time	0 to 360 seconds

1. 24


Note: Pr. 31 and 32 only are implemented as frequency jump function.

I <Pr. 30 ⇔ See page 22-2>

To avoid the resonant points of a machine

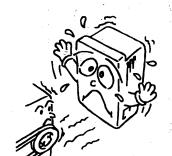



- Pr. 31 "frequency jump 1A", Pr. 32 "frequency jump 1B"
 ⇒ Pr. 33 "frequency jump 2A", Pr. 34 "frequency jump 2B"
 - Pr. 35 "frequency jump 3A", Pr. 36 "frequency jump 3B"
- Allows a mechanical resonant point to be jumped. Up to three areas may be set, with the jump frequency top and bottom point set for each area.
- The value set to 1A, 2A or 3A is a jump point and operation is performed at this frequency.

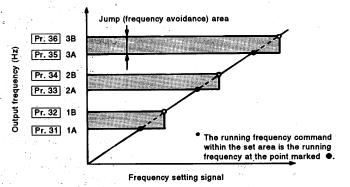

Note: 1. Frequency jump is not made when the set value is "9999" (factory setting).

- 2. Setting "3" in Pr. 29 switches Pr. 33 to 36 into the backlash compensation setting functions. But Pr. 33 to 36 setting ranges are not displayed on the PU screen. And the set values of the frequency jump parameters are displayed in the parameter change list and initial value list, that is, when Pr. 29 is set to 3, the set values of Pr. 33 to 36 are not displayed in the lists.
- (Pr. 31 and 32 are valid as frequency jump functions.)3. During acceleration/deceleration, the running frequency within the set area is valid.

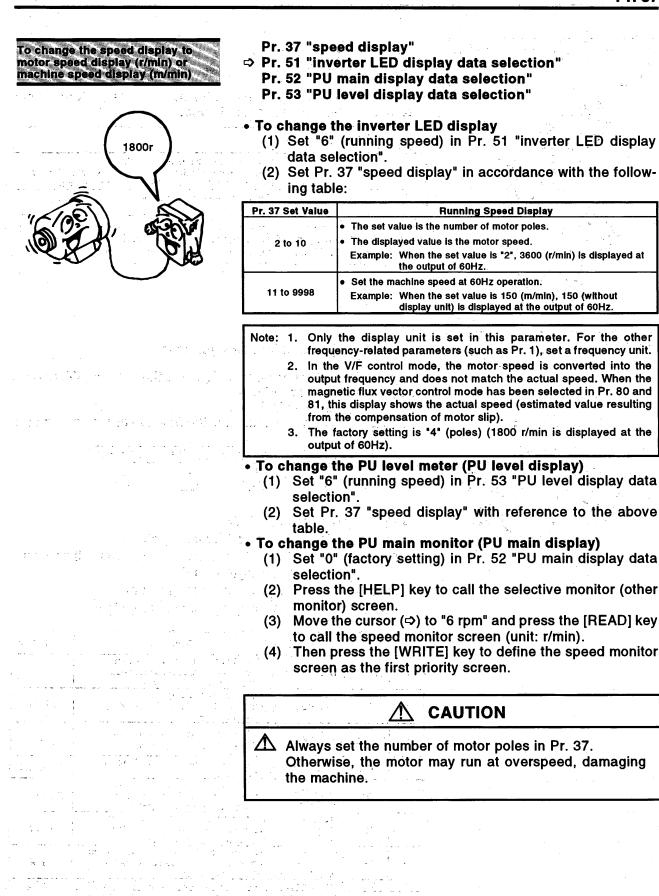

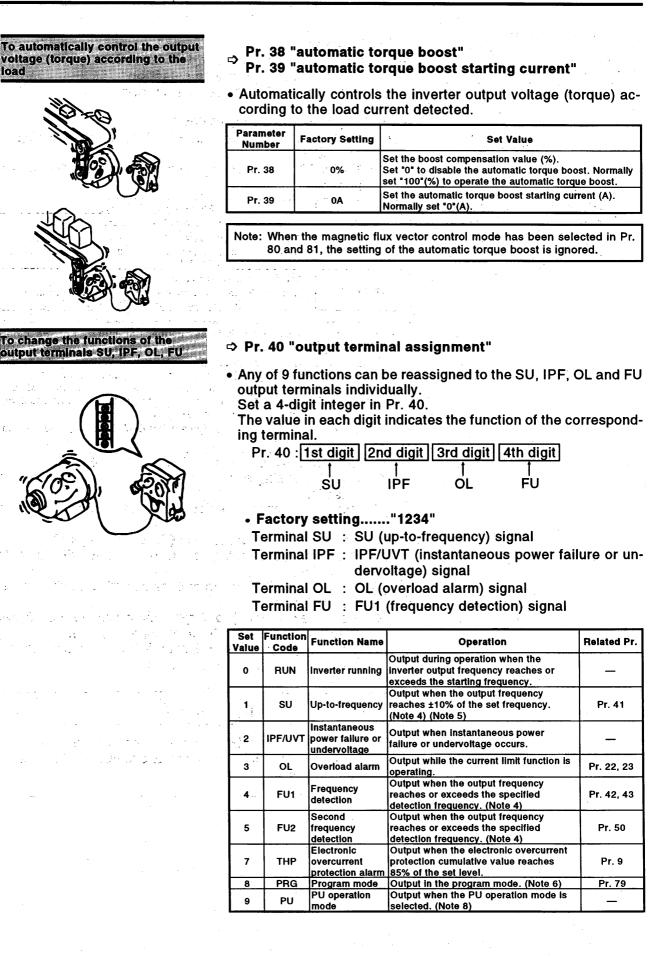

To adjust the ON range of the up-to-

54 to 66Hz

su d


frequency signal

171


- Note: 1. "0" set in the first digit of the four digits is not displayed. However, "0" set only in one digit is displayed.
 - 2. The function of terminal RUN (output during inverter running)
 - is fixed. This function cannot be changed by using Pr. 40. 3. "Output" indicates that the built-in transistor for open collec-
 - tor output is turned on (conducts).
 - 4. In the PLG feedback control mode, the operations of up-tofrequency (SU) and frequency detection (FU1, FU2) are as described below:
 - SU, FU1 : Output when the actual speed (frequency) under the control of the PLG feedback signal reaches or exceeds the specified detection frequency.
 - FU2 : Output when the inverter output frequency reaches or exceeds the specified detection frequency.
 - 5. When the frequency setting is changed by the analog signal or the [▲]/[▼] key of the PU, the output of the SU (up to frequency) signal may alternate between ON and OFF depending on the speed of that change and the timing of the changing speed determined by the setting of the acceleration/deceleration time. (Such alternation does not take place when the acceleration/deceleration time setting is "0 seconds".)
 - 6. Output when the inverter is switched to the external operation mode (goes into the programmed mode), with "5" set in Pr. 79 "operation mode".
 - 7. 6 cannot be set.
 - 8. By setting "9" in this parameter, the function of the output terminal changes to a zero current detection signal when any of 4 to 7 has been set in Pr. 17 (external thermal relay input).

⇒ Pr. 41 "up-to-frequency sensitivity"

• Allows the output signal ON range to be adjusted between 0 and ± 100% of the running frequency when the output frequency reaches the running frequency.

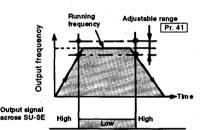


Low: Output transistor ON, High: Output transistor OFF

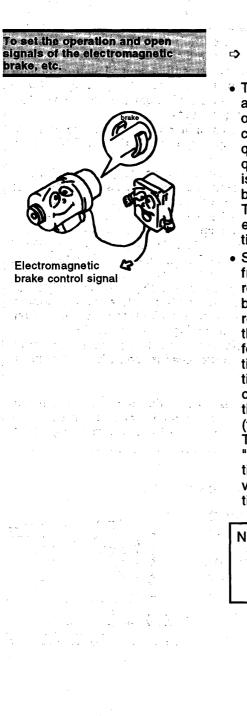

Pr. 42 "output frequency detection", Pr. 43 "output frequency detection at reverse rotation"


- The signal across terminals FU and SE is switched low when the output frequency reaches or exceeds the selected detection frequency (value set in "output frequency detection", Pr. 42), and is switched high when it drops below the detection frequency. This function can be used for electromagnetic brake operation, open and other signals.
- Setting a value in Pr. 43 "output frequency detection at reverse rotation" allows the frequency to be detected exclusively for the reverse rotation. (In this case, the set value in Pr. 42 is for the forward rotation only.) This function is effective for switching the timing of electromagnetic brake operation between forward rotation (rise) and reverse rotation (fall) during elevating operation. This parameter is factory-set to "9999". In this state, the detection frequency is the Pr. 42 set value for both the forward rotation and reverse rotation.

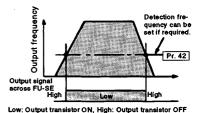

Forward rotation Pr. 42 Detection frequency Pr. 42 Time Detection frequency Pr. 43 Reverse rotation

Note: When the inboard option unit is used to exercise PLG feedback control, use the RUN (running) signal for brake release. (If the FU (output frequency detection) signal is used, the brake may not be released.)

Output frequency

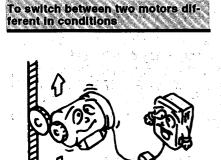

To stop a trolley or the like on con

tact with an end stop

Pr. 44 "second acceleration/deceleration time", Pr. 45 "second deceleration time"

Pr. 46 "second torque boost", Pr. 47 "second V/F (base frequency)"


The external contact signal (across terminals RT-SD) allows the acceleration and deceleration times, boost setting, etc. to be changed together.

Effective for switching between two motors with different parameter setting, e.g. elevating and traversing.

Set Function		Signal across Termin RT-SD		
	Parameter number	OFF	ON	
Acceleration time	Pr. 7	•		
Acceleration time	Pr. 44			
Deceleration time	Pr. 8			
	Pr. 45			
Tarmus hash (manual)	Pr. 0			
Torque boost (manual)	Pr. 46		•	
	Pr. 3	•		
Base frequency	Pr. 47		· •	

Note: 1. Setting "9999" (factory setting) in Pr. 45 causes both the second acceleration time and deceleration time to be the value set in Pr. 44.


- 2. When the magnetic flux vector control mode has been selected in Pr. 80 and Pr. 81, the setting of Pr. 46 is ianored.
- 3. The second acceleration/deceleration time is the time taken for acceleration to the frequency set in Pr. 20 "acceleration/deceleration reference frequency", as in Pr. 7 "acceleration time" and Pr. 8 "deceleration time".
- Pr. 48 "second stall prevention operation current" Pr. 49 "second stall prevention operation frequency"
- Allows the stall prevention (current limit) operation level to be changed within the range from 0Hz to the frequency set in Pr. 49. The setting of a low value is effective for a stop on contact, which requires low torque at low speed.
- vention o current Pr. 48 Stall Running Pr. 49
- This function is not valid during acceleration and is only valid during deceleration or at constant speed.

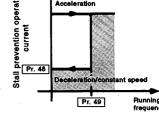

- This function is invalid when "0" is set in Pr. 49 (factory setting).
- Note: 1. The set value (%) indicates a ratio of the current value to the rated output current of the inverter. 2. To make a stop upon contact on a higher level, refer to page 19-1.

CAUTION

 Δ Do not set a too small value to the second stall prevention operation current. The torgue generated will reduce.

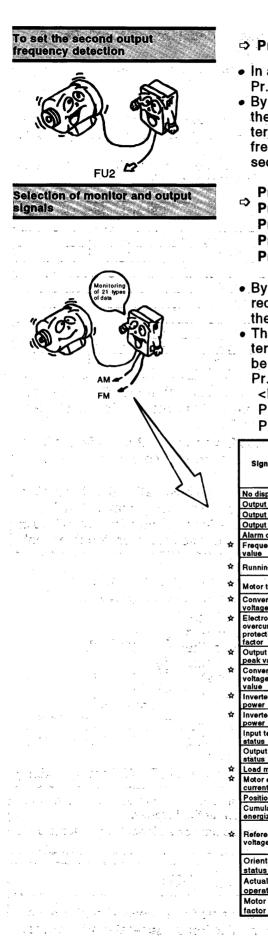

- ⇒ Pr. 50 "second output frequency detection"
- In addition to the detected output frequencies set in Pr. 42 and Pr. 43, another detected output frequency can be set.
- By setting "5" (FU2) in any of the first to fourth digits of Pr. 40. the signal can be output from any of the SU, IPF, OL and FU terminals. The terminal signal is turned on at or above the set frequency (the built-in transistor is switched on). (See the section of Pr. 42 and Pr. 43.)
 - Pr. 51 "inverter LED display data selection"
 - Pr. 52 "PU main display data selection"
 - Pr. 53 "PU level display data selection"
 - Pr. 54 "FM terminal function selection"
 - Pr. 158 "AM terminal function selection"
- By setting any of the numbers in the following table, the required signal can be selected from among the 21 signals for the monitor and output signals.
- There are two types of signal outputs: FM pulse train output terminal and AM analog output terminal. Different signals can be output at the same time. Select the signals using Pr. 54 and Pr. 158.

<Factory setting>

Pr. 51..."1", Pr. 52..."0", Pr. 53..."1", Pr. 54..."1",

Pr. 158..."9999"

Parameter Set Value								
a la seconda de la seconda				Pr. 158	4			
Signal Type	Display Unit	inverter LED	PU PU main monitor	PU Ievel meter	FM terminal	AM terminal	AM terminal	Full-Scale Value of FM, AM, Level Meter
No display	· _ ·	×	×	0	×	×	×	
Output frequency	Hz	1	0	1	1	101	1	Pr. 55
Output current	A	2	0	2	2	102	2	Pr. 56
Output voltage	V	3	0	3	3	103	3	400V or 800V
Alarm display		4	0	×	×	×	×	
Frequency set	Hz	5		5	5	105	5	Pr. 55
Running speed	(r/min)	6	•	6	6	106	6	Value converted from Pr. 55 by Pr. 37 value
Motor torque**	%	7	•	7	· • 7	107	7	Rated torque of applied motor x2
Converter output voltage	v	8	*	8	8	108	8	400V or 800V
Electronic overcurrent protection load factor	%	10		10	10	110	10	Protection operation level
Output current peak value	1. A	11	•	11	11	111	11	Pr. 56
Converter output voltage peak value	V	12		12	12	112	12	400V or 800V
Inverter input power	kW	13	•	13	13	113	13	Rated power of applied motor x2
Inverter output power	kW	14	•	14	14	114	14	Rated power of applied motor x2
Input terminal status	_	×	•	×	×	×	×	—
Output terminal status		. X :	•	×	×	×	×	-
Load meter	. %	17	. 17	17	17	117	17	Pr. 56
Motor exciting current	A	18	18	18	18	118	18	Pr. 56
Position pulse		×	19 -	×	×	×	×	_
Cumulative energization time	, hr	×	20	×	×	. x	×	-
Reference voltage output	-	×	×	×	21	121	21	1440Hz is output to FM terminal. Full- scale voltage is output to AM terminal.
Orientation status	<u> </u>	×	22	×	×	×	×	
Actual operation time	hr	×	23	×	×	×	×	_
Motor load factor	%	×	24	×	×	×	×	Rated load of applied motor ×2

1 1 5 to 1 5 to

9 - 23

Note:	1.Monitor cannot be selected for items marked ×.
	2.Setting "0" in Pr. 52 "PU main monitor" allows the monitoring of "output frequency to alarm display" to be selected in sequence by the SHIFT key. (Factory setting)
••••	3. The load meter is displayed in %, with the current set in Pr. 56 regarded as 100%.
	4.* "Frequency set value to output terminal status" on the PU main monitor are selected by "other monitor selection" of PU operation.
م په چې د د	5.** "Motor torque" display is valid only in the magnetic flux vector control mode.
	6.When any of the signals marked ☆ has been selected in Pr. 54 "FM terminal function selection", the outputs of the FM and AM terminals are zero while the inverter is at stop or alarm.
· ·	7.Setting "1, 2, 5, 6, 11, 17 or 18" in Pr. 53 or Pr. 54 allows the full-scale value to be set in Pr. 55 or Pr. 56.
	8. The cumulative energization time is calculated from 0 to 65535 hr, is then cleared, and is recalculated from 0.
n 1 maria setare a 15 f	9.By setting "0" in Pr. 53, the level meter display of the PU can be switched off.
	10.For the actual operation time, the length of time when the inverter is running is calculated. (The time when the inverter is at a stop is not calculated.)
	11.When the fast-response current limit function is activated, the outputs of terminals FM and AM are zeroed. (To prevent this, make the fast-response current limit function invalid or use the extension analog output of the FR-EPA or EPE option.)
	12. The orientation status functions properly when the FR-EPA option is used. If the option is not used, "22" may be set in Pr. 52 but the orientation status does not function and "0" is displayed.

• Use Pr. 54 and Pr. 158 to select the function of the AM terminal in accordance with the following table:

Pr. 158 Set Value	Pr. 54 Set Value	FM, AM Terminal Output Status	Remarks
9999	1 to 21	Both the FM and AM terminals output the	The calibration Pr. 900 value may only be read and written.
(factory setting)	101 to 121	signal set in Pr. 54.	The calibration Pr. 901 value may only be read and written.
	1 to 21*	The FM terminal	
1 to 21		outputs the signal set in Pr. 54. The AM terminal outputs the signal set in Pr. 158.	Both the calibration Pr. 900 and Pr. 901 values can be read and written.

*: When any of "1 to 21" has been set in Pr. 158, setting either any of "1 to 21" or any of "101 to 121" in Pr. 54 causes the same signal to be output from the FM terminal.

<Setting example>

• • •

To output the output frequency from the FM terminal and the output current from the AM terminal

- Set 1 in Pr. 54 (adjust the full-scale value in Pr. 55).
- Set 2 in Pr. 158 (adjust the full-scale value in Pr. 56).
- For adjustment, see pages 11-1 to 11-3.

Pr. 55


Pr. 56

Output frequency f setting Running speed

Output or display Output current Peak I

Load meter

Motor ex. I

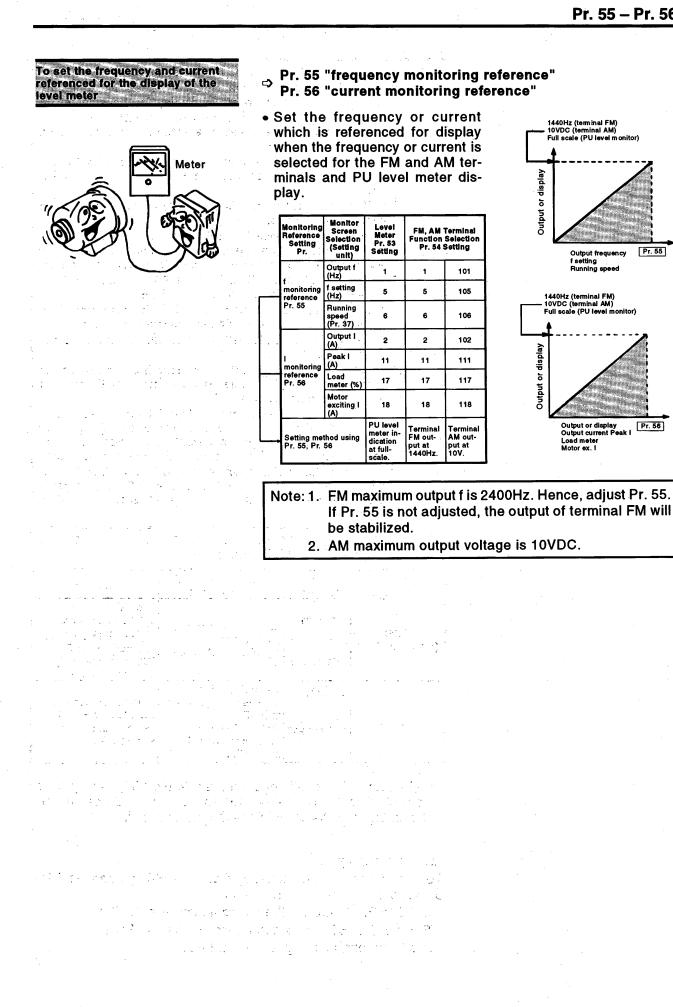

.9 - 25

To automatically restart operation after instantaneous power failure/commercial power supplyinverter switch-over

. .

te ty

11 **1**20

Pr. 57 "coasting time for automatic restart after instantaneous power failure/commercial power supply-⇒ inverter switch-over"

Pr. 58 "rise time for automatic restart after instantaneous power failure/commercial power supplyinverter switch-over"

- Allows the inverter to be restarted without stopping the motor (with the motor coasting) when the commercial power supply is switched to the inverter operation or when the power is restored after an instantaneous power failure. (When automatic restart operation is set, the alarm output signal will not be switched on at the occurrence of an instantaneous power failure.)
- Pr. 57 "coasting time for automatic restart after instantaneous power failure/commercial power supply-inverter switch-over"

•	Set Value	Automatic Restart Operation Enable/Disable				
	9999 (factory setting)	Disable				
	0, 1 to 5 seconds *	Enable				


Coasting time indicates a waiting time for automatic restart after power restoration.

* Setting "0" in Pr. 57 sets the coasting time to the following standard time. Most applications can be satisfied with this setting. This time may be adjusted between 1 and 5 seconds according to the magnitude of load inertia (GD) and torque.

5.5K / 7.5K 1.0 second 11K and up 3.0 seconds

 Pr. 58 setting of "rise time for auto matic restart after instantaneous powerfaiure/commercial power supply-inverter switchover"


Normally, operation is satisfactory with this parameter remaining at the factory setting of 1.0 second. The output voltage rise time for restart control may also be adjusted between 0.1 and 5 seconds according to the magnitude of load specifications (inertia, torque).

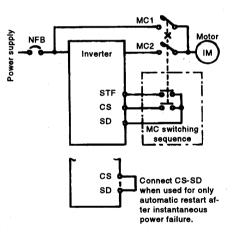

. .

Note: When any value other than 9999 is set in Pr. 57, disconnection of terminals CS and SD will make the inverter inoperative.



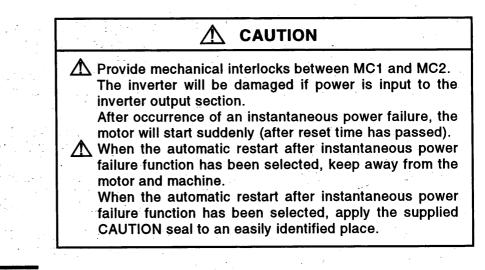


⇒ Pr. 59 "remote setting function selection"


- By setting "1" or "2" in Pr. 59, the functions of the RH, RM and RL terminals can be changed to the remote setting input functions.
- Merely setting this parameter provides the acceleration, deceleration and setting clear setting functions of the FR series FR-FK motorized speed setter (option).
- RH (acceleration) and RM (deceleration) allow the frequency to be varied in the range 0 to the maximum frequency (set value in Pr. 1 or Pr. 18)
- When the remote function is used, the frequency output by the inverter can be corrected as indicated below:
 - In the external operation mode: Frequency set by RH/RM operation + external operation frequency except multi-speeds
 - In the PU operation mode: Frequency set by RH/RM operation + PU operation frequency

•	Opera	Operation			
Pr. 59 Set Value	Remote setting function	Frequency set value storage function (*)			
0	×				
1	. 0	0			
2	0	×			

x:no, O:yes

* As soon as RH-SD and RM-SD are kept open for more than about one minute or <u>the STF (or STR) signal is switched off</u>, the remote setting frequency (frequency set by RH/RM operation) is stored into memory. If power is switched off once and then switched on again, operation is resumed with this set value.

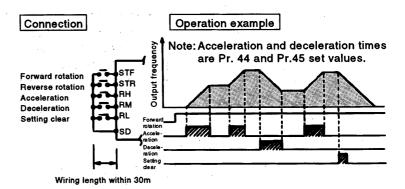

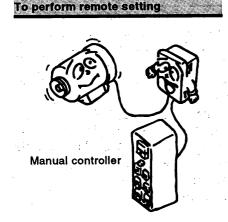

9 – 27

Note: The frequency set value up/down times are set in Pr. 44 and Pr. 45, but the output f acceleration/deceleration times set in Pr. 7 and Pr. 8. Therefore, the actual acceleration/deceleration times become the longer set values respectively.

When selecting this function, re-set the maximum frequency according to the machine.

⇒ Pr. 60 "intelligent mode selection"

To perform intelligent mode

operation

• By selecting this parameter, the inverter is automatically adjusted as if the appropriate value had been set in each parameter, without needing to set the acceleration and deceleration times and V/F pattern. This operation mode is useful to perform operation immediately without making fine parameter settings. (Note 1)

Pr. 60 Set Value	Set Function	Operation	Automat- ically Set Parame- ters
0 (factory setting)	Ordinary operation mode	-	_
1, 2	Shortest accelera- tion/de- celeration mode	Set when it is desired to ac- celerate/decelerate the mo- tor in the shortest time. The inverter makes acceleration/ deceleration in the shortest time using its full capabili- ties. During deceleration, an insufficient brake capability may cause the overvoltage alarm (E.OV3). • Set value "1": current limit value 150% • Set value "2": current limit value 180%	Pr. 8 (Shortest)
3	Optimum accelera- tion/de- celeration mode	The self-learning system automatically sets the boost value, acceleration and de- celeration times so that the current during acceleration /deceleration is lower than the rated current of the in- verter. Optimum operation can be carried out by fully utilizing the inverter capa- bilities in the rated continu- ous range. Appropriate for applications where the load will not vary largely. (Note 2)	Pr. 0 Pr. 7 Pr. 8

The inverter automatically selects appropriate parameters.

				. • .	st :	(
÷		~	••••	• - •	· · ·		
•	· • •			•			

Pr. 60 Set Value	Set Function	Operation	Automat- ically Set Parame- ters
4	Energy- saving mode	Tunes the inverter output voltage online so that the in- verter output voltage is mini- mized during constant -speed operation. (Note 6) Appropriate for energy- saving applications such as fan and pump.	Output voltage
5,6	Elevator mode	Automatically controls the inverter output voltage so that the maximum torque can be delivered in the driv- ing and regenerative modes. Appropriate for a counter- balanced elevator. • Set value "5": current limit value 150% • Set value "6": current limit value 180%	-
 7.8	Brake sequence mode	 The function of the output terminal changes to brake release. 	

Note: 1. When more accurate control is required for application, set parameters manually.

- 2. Because of the learning system, this control is not valid the first time.
- 3. When the magnetic flux vector control has been selected using Pr. 80 and Pr. 81, the settings of the energy-saving mode and elevator mode are ignored. (Magnetic flux vector control has priority.)
 - 4. If an overvoltage (OV3) trip has occurred during operation in the optimum acceleration/deceleration mode, reset Pr. 8 "deceleration time" to a slightly larger value and restart operation in this mode.
- 5. When any of "1 to 8" has been set in Pr. 60, the parameters dedicated to intelligent mode Pr. 61 to 64 are valid.

Pr. 61 to 64, which need not be set unless required, may be set to improve performance. Set "0" in Pr. 60 to automatically set "9999" (factory setting) in Pr. 61 to 64.


6. When the motor is decelerated to a stop in the energy-saving mode, the deceleration time may become longer than the setting.

Also, since an overvoltage is more likely to occur in this mode than in the constant-torque load characteristic, set a longer deceleration time.

7. The optimum acceleration/deceleration mode is only valid for the frequency setting of 30.01Hz or higher.

Pr. 60

To perform the intelligent mode operation with higher performance

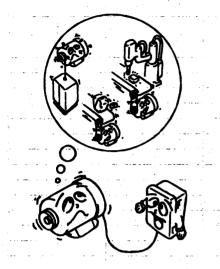

Pr. 61 "reference current"

- Pr. 62 "reference current for acceleration"
- ⇒ Pr. 62 reference current for acceleration"
 Pr. 63 "reference current for deceleration"
 Dr. 64 "reference current for deceleration"
 - Pr. 64 "starting frequency for elevator mode"
- Set these parameters to improve performance in the intelligent mode.

Note: These parameters are valid only when any of "1 to 6" has been selected in Pr. 60.

Pr. 61 Reference current (A)

Set Value	Reference Current
9999 (factory setting)	Rated inverter current
0 to 500A	Set value (rated motor current)

Pr. 62 Reference current for acceleration (%)

The reference value setting can be changed.

(The reference value differs between the shortest acceleration/ deceleration mode and optimum acceleration/deceleration mode.)

Set Value	Reference Value	Remarks		
9999	150% (180%) is the limit value.	Shortest acceleration/decel- eration mode		
(factory setting)	100% is the optimum value.	Optimum acceleration/decel- eration mode		
0 to 200%	The set value of 0 to 200% is the limit value.	Shortest acceleration/decel- eration mode		
	The set value of 0 to 200% is the optimum value.	Optimum acceleration/decel- eration mode		


Pr. 63 Reference current for deceleration (%)

(The reference value differs between the shortest acceleration/deceleration mode and optimum acceleration/deceleration mode.)

Set Value	Reference Value	Remarks
9999 (factory setting)	150% (180%) is the limit value.	Shortest acceleration/deceleration mode
	100% is the optimum value.	Optimum acceleration/deceleration mode
0 to 200%	The set value of 0 to 200% is the limit value.	Shortest acceleration/deceleration mode
	The set value of 0 to 200% is the optimum value.	Optimum acceleration/deceleration mode

Pr. 64 Starting frequency for elevator mode

Set Value	Set Frequency		
9999 (factory setting)	2Hz is the starting frequency.		
0 to 10Hz	The set value of 0 to 10Hz is the starting frequency.		

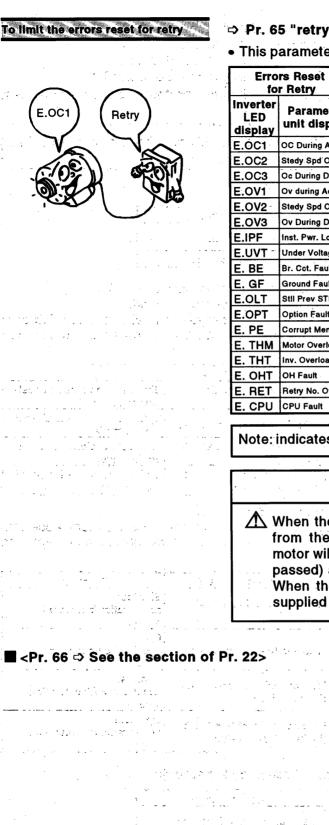

⇒ Pr. 65 "retry selection"

Т

• This parameter allows the selection of the errors reset for retry.


rs Reset r Retry	Set Values						
Parameter unit display	0 (factory setting)	1	2	3	4 . '·	5	
OC During Acc	1 🌒 🕼				•	· •	
Stedy Spd Oc		•			•		
Oc During Dec		•			•	•	
Ov during Acc			•				
Stedy Spd Ov		4		•	•		
Ov During Dec	i. 🌒			•			
Inst. Pwr. Loss					• •		
Under Voltage					• •		
Br. Cct. Fault	•						
Ground Fault	• •			1			
Stil Prev STP	•				٠		
Option Fault	•				• •		
Corrupt Memry	•				٠		
Motor Overload							
Inv. Overload	•						
OH Fault	1 1 0 1						
Retry No. Over		1 . F					
CPU Fault							
	r Retry Parameter unit display OC During Acc Stedy Spd Oc Oc During Dec Ov during Acc Stedy Spd Ov Ov During Dec Inst. Pwr. Loss Under Voltage Br. Cct. Fault Ground Fault Still Prev STP Option Fault Corrupt Memry Motor Overload Inv. Overload OH Fault Retry No. Over	r Retry Parameter Unit display OC During Acc Stedy Spd OC Oc During Dec Ov during Acc Stedy Spd OV Ov During Dec Inst. Pwr. Loss Under Voltage Br. Cct. Fault Ground Fault Stil Prev STP Option Fault Corrupt Memry Motor Overload OH Fault Retry No. Over	r Retry 0 Parameter 0 unit display (factory setting) OC During Acc • Stedy Spd Oc • Oc During Dec • Ov during Acc • Stedy Spd Oc • Ov during Acc • Stedy Spd Ov • Ov during Dec • Inst. Pwr. Loss • Under Voltage • Br. Cct. Fault • Ground Fault • Still Prev STP • Option Fault • Motor Overload • Inv. Overload • Prater • Retry No. Over •	r Retry 0 2 Parameter 0 1 2 Unit display 0 1 2 OC During Acc • • 2 Oc During Acc • • 2 Oc During Dec • • - Ov during Acc • • - Ov during Dec • • - Ov During Dec • • - Inst. Pwr. Loss • - - Under Voltage • - - Br. Cct. Fault • - - Ground Fault • - - Option Fault • - - Motor Overload • - - OH Fault • - - </td <td>Retry Set Values Parameter unit display 0 (factory setting) 1 2 3 OC During Acc • • • Stedy Spd Oc • • • Oc During Dec • • • Ov during Acc • • • Stedy Spd Ov • • • Ov during Dec • • • Ov During Dec • • • Ov During Dec • • • Inst. Pwr. Loss • • • Under Voltage • • • Br. Cct. Fault • • • Ground Fault • • • Still Prev STP • • • Option Fault • • • Motor Overload • • • OH Fault • • • Retry No. Over • • •</td> <td>Retry Set Values Parameter unit display 0 (factory setting) 1 2 2 3 4 OC During Acc • • • • • Oc During Acc • • • • • Oc During Dec • • • • • Ov during Acc • • • • • Ov during Acc • • • • • • Ov during Acc • • • • • • • Ov during Dec •</td>	Retry Set Values Parameter unit display 0 (factory setting) 1 2 3 OC During Acc • • • Stedy Spd Oc • • • Oc During Dec • • • Ov during Acc • • • Stedy Spd Ov • • • Ov during Dec • • • Ov During Dec • • • Ov During Dec • • • Inst. Pwr. Loss • • • Under Voltage • • • Br. Cct. Fault • • • Ground Fault • • • Still Prev STP • • • Option Fault • • • Motor Overload • • • OH Fault • • • Retry No. Over • • •	Retry Set Values Parameter unit display 0 (factory setting) 1 2 2 3 4 OC During Acc • • • • • Oc During Acc • • • • • Oc During Dec • • • • • Ov during Acc • • • • • Ov during Acc • • • • • • Ov during Acc • • • • • • • Ov during Dec •	

Note: indicates the errors selected for retry.

CAUTION

 Δ When the retry function has been selected, keep away from the motor and machine unless necessary. The motor will start suddenly (after a predetermined time has passed) after occurrence of an alarm.

When the retry function has been selected, apply the supplied CAUTION seal to an easily identified place.

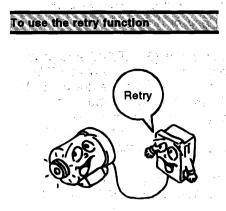

- Pr. 67 "number of retries at trip occurrence"
- ⇒ Pr. 68 "retry waiting time"
 - Pr. 69 "retry count display erasure"


• Retry is a function which causes the inverter to automatically reset a trip at its occurrence, make a restart, and continue operation.

• In Pr. 67, set the number of retries at trip occurrence.

Pr. 67 Set Value	Number of Retries	Alarm Signal	
0 (factory setting)	Retry is not made.		
1 to 10	1 to 10 times	Not output.	
101 to 110	1 to 10 times	Output.	

Note: The setting range of 0 to 10, 9999 is displayed on the setting display screen of the PU. 101 to 110 is not displayed.

- Using Pr. 68, a waiting time between alarm occurrence and restart can be set in the range 0 to 10 seconds.
- By reading the value of Pr. 69, the cumulative number of restart times made by retry is provided. The set value of "0" erases the cumulative number of times.
 - Note: 1. Since the inverter automatically starts operation after the retry waiting time set in Pr. 68 has elapsed, this function must be used with care so as not to jeopardize the operator.
 - 2. The cumulative number in Pr. 69 is incremented by "1" when retry operation is regarded as successful, i.e. when normal operation is continued without any alarm occurring during a period four time longer than the time set in Pr. 68 "retry waiting time" after the start of the retry.
 - 3. If alarms have occurred successively during the above period for a time longer than the waiting time setting, different displays may be provided on the inverter LED and PU; the most recent display on the inverter LED and the first retry display on the PU.
 - For errors occurring at retries, the definition of only the alarm that occurred at the first retry is stored.
 - 4. When the inverter trip is reset at the restart time, the data of the electronic overcurrent protection, regenerative brake duty, etc. is not reset. (Different from the power-on reset.)

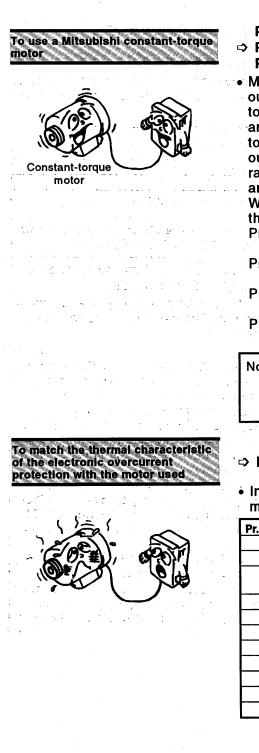

- Pr. 0 "torque boost (manual), Pr. 3 "base frequency"
- Pr. 9 "electronic overcurrent protection"

Pr. 71 "applied motor"

Mitsubishi's new constant-torque motor (SF-JRCA) and previous constant-torque motor can be run continuously at 100% torque down to low speed under magnetic flux vector control and V/F control, respectively. Without requiring the load torque to be reduced at low speed, they can be run continuously at constant torque (100% torque) over a 10:1 speed ratio (6 to 60Hz). The settings for magnetic flux vector control are given on page 14-1.

When Mitsubishi's previous constant-torque motor is used, the settings of the following parameters must be changed: Pr. 0 "torque boost (manual)"

-7.5K and below-4%, 11K and above-2% Pr. 3 "base frequency"
- Pr. 9 "electronic overcurrent protection"

.....rated current of motor

Pr. 71 "applied motor"


.....set value "1"

Note: When the old type 200V series 4-pole constant-torque motor (SF- JRC) is to be used, the special parameters must also be set in addition to the above parameters. For full information on the setting method, see page

⇒ Pr. 71 "applied motor"

• In accordance with the following table, set this parameter for the motor used:

Pr. 71 Set Value	Characteristic of Electronic Overcurrent Protection					
0	For a general-purpose motor	(factory settin	ig)			
1	For Mitsubishi constant-torqu	e motor				
2 (Note 1)	For a general-purpose motor 5-point flexible v/f characteristic					
3	Standard motor	"Auto tuning setting" is				
13	Constant-torque motor selected					
4	Standard motor	Auto tuning data read/change				
14	Constant-torque motor	setting is ena	abled			
5	Standard motor	Star	Direct input of motor constants			
15	Constant-torque motor	connection				
6	Standard motor	Delta	is enabled			
16	Constant-torque motor	connection				

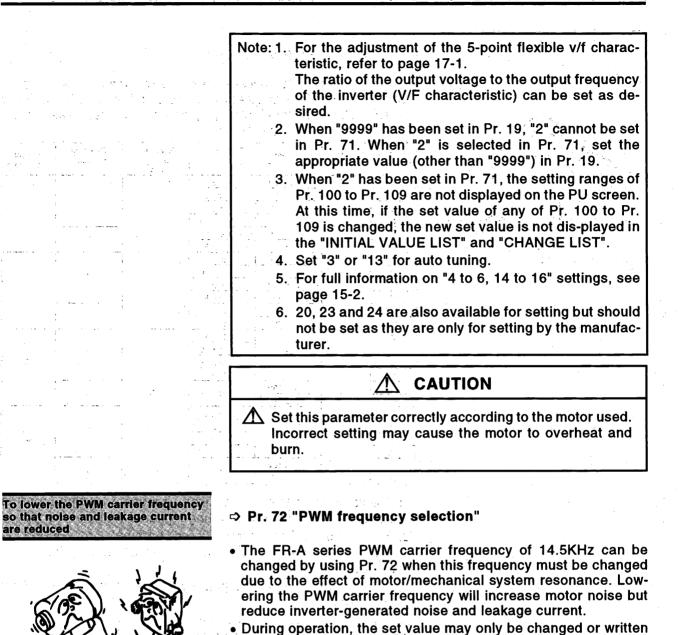

in either of the following ranges:

Note: Any value outside the ranges (1) and (2) cannot be written during operation and should be written during a stop.

(1) 0.7kHz to 2.0kHz (2) 2.1kHz to 14.5kHz To perform main speed setting using the auxiliary frequency setting terminal 1

60Hz 4 5 Auxiliary input terminal 1

⇒ Pr. 73 "0 to 5V, 0 to 10V selection"

• Select the override function to make the main speed setting using the auxiliary frequency setting terminal 1. Set the input specifications of terminals 1, 2, and 4 and the presence/absence of the override function.

Pr. 73 Set Value	Terminal AU Signal	Terminal 2 Input Voltage	Terminal 1 Input Voltage * 1	Terminal 4 Input, 4 to 20mA	Override Function * 2	Polarity Reversible
0		# 0 to 10V	0 to ± 10V			
and the second	12.00	0 to 5V	0 to ± 10V		×	
2	4	# 0 to 10V	0 to ± 5V	· · · ·		*3
3		# 0 to 5V	0 to ± 5V			
4	No	0 to 10V	# 0 to ± 10V	×	0	
5		0 to 5V	✤ 0 to ± 5V	^	0	
10	· · ·	# 0 to 10V	0 to ± 10V			
11		# 0 to 5V	0 to ± 10V		×	
12		# 0 to 10V	0 to ± 5V		[^]	0
13		# 0 to 5V	0 to ± 5V			
14	1	0 to 10V	# 0 to ± 10V		0	
	, i	0 to 5V	# 0 to ± 5V		0	
0			0 to ± 10V			
1		· · · · ×	0 to ± 10V		×	
2			0 to ± 5V		n n	•3
3			0 to ± 5V			
4	Yes	0 to 10V	· · · ·	* 0		
5	, res	0 to 5V	×	* 0	0	
10		* ** t	0 to ± 10V	ŀ		
11		×	0 to ± 10V		× .	×.
12		1 -	0 to ± 5V			0
13			0 to ± 5V			
14		0 to 10V		1.		
15	A	0 to 5V	×		O,	


*1: The value of terminal 1 (auxiliary frequency setting input) is added to the main speed setting signal of terminal 2 or 4.

- *2: When override has been selected, terminal 1 or 4 is for the main speed setting and 2 is for the override signal (50 to 150% at 0 to 5V or 0 to 10V).
- *3: Indicates that a negative-polarity frequency command signal is not accepted.

Note: 1. × indicates that a signal is not accepted.
2. To change the maximum output frequency when the maximum frequency command voltage (current) has been input, use the frequency setting voltage (current) gain, Pr. 903 (Pr. 905).
At this time, the command voltage (current) need not be

input. Also, the acceleration/deceleration time, is not affected by


- the change of Pr. 73 setting.3. The set value hatched is the factory setting. The * indicates the main speed setting.
- 4. When the set value of Pr. 22 is "9999", the value of terminal 1 is for the stall prevention level setting.

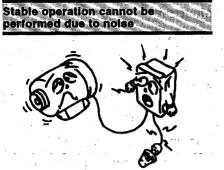

Potentiometer

To select PU disconnection detection



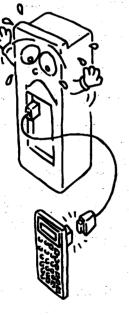

- ⇒ Pr. 74 "input filter time constant"
- Allows the setting of the built-in filter time constant in the external voltage or current frequency setting signal input section. Effective for eliminating noise in the frequency setting circuit.
- Increases the filter time constant if stable operation cannot be performed due to noise. A larger set value results in lower response.

⇒ Pr. 75 "reset selection/PU disconnection detection

• Detecting that the PU (parameter unit) has been disconnected from the inverter, this function brings the inverter to an alarm stop. Also, this function allows the reset (terminal RES) function to be selected.

Operation


When this parameter has been set to detect the disconnection of the PU, and the PU is disconnected, the inverter comes to an alarm stop.

Pr. 75 Set Value	Description				
0 (factory setting)	Reset input normally enabled. •	Operation will be continued with			
1	Reset input enabled only when the protective function is activated.	the PU disconnected.			
2	Reset input normally enabled.	When the PU is disconnected,			
3	Reset input enabled only when the protective function is activated.	an error is displayed and the inverter output is shut off. (Note)			

* By short-circuiting across terminals RES and SD during operation, the inverter shuts off output while the signal is on, the data of electronic overcurrent protection and regenerative brake duty is reset, and the motor is coasted to a stop.

- Note: 1. If the PU had been disconnected from initial start, this is not defined as an alarm.
 - 2. This disconnection detection judges that the PU is disconnected when the PU is removed for more than 1 second.
 - 3. When the FR-PU01E is used, this function can also be used. Note that the alarm display of the FR-PU01E is "E.PE" and that of the inverter LED is "E.PUE".
 - 4. To resume operation, reset the inverter after checking that the PU is connected securely.
 - 5. The motor is decelerated to a stop when the PU is disconnected during PU jog operation with "2" or "3" set in Pr. 75. The motor is not brought to a stop at occurrence of the PU disconnection alarm.

Do not reset the inverter with a start signal on. When reset is actioned, the motor will start instantaneously, creating a hazardous condition.

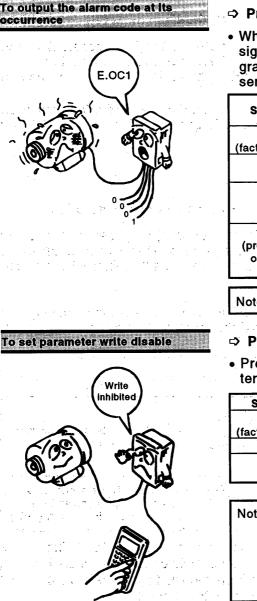

⇒ Pr. 76 "alarm code output selection"

• When alarm occurs, its code can be output as a 4-bit digital signal from the open collector output terminals. When programmed operation has been selected, this parameter also serves as a group operation signal output.

Set Value	Output Terminals					
Set value	SU	IPF	OL	FU		
0 (factory setting)	Depends on t	he output termi	inal assignment	(Pr. 40).		
1	Alarm code bit 3	Alarm code bit 2	Alarm code bit 1	Alarm code bit 0		
	Normal operation Operation status signal (same as set value "0") Alarm occurrenceAlarm code signal					
2 , 2 , 1	-	(same	as set value "0			

Note: For alarm codes, see page 23-4.

⇒ Pr. 77 "parameter write disable selection"

• Prevents parameter values from being written from the parameter unit.

Set Value	Write Disable Function
0 (factory setting)	Parameter write enable (only at stop in PU operation mode) (Note 1)
1	Parameter write disable (Note 2)
2	Parameter write also enabled during operation in PU operation or external operation mode (Note 3)

- Note: 1. Monitor-related parameters Pr. 51 to Pr. 56 can be set at any time.
 - 2. Write is allowed for Pr. 77 and Pr. 79 "operation mode selection".
 - 3. Write is disallowed during operation for Pr. 22, 23, 48, 49, 60, 66, 71 and 79 to 81.

CAUTION

During operation, do not change the parameter settings unnecessarily, the new settings may cause an alarm may occur in the inverter, causing the motor to coast.

⇒ Pr. 78 "reverse rotation selection"

• Set Pr. 78 to prevent any reverse rotation fault resulting from the mis-input of the start signal.

Set Value	Direction of Rotation
0	Both forward and reverse rotations allowed (factory setting)
1	Reverse rotation disallowed
2	Forward rotation disallowed


Note: This function is valid for both the parameter unit and external operations.

1.5



To select the operation mode

External operation mode

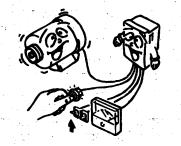


PU operation mode



Combined operation mode



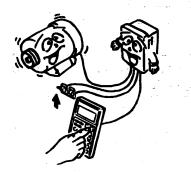

⇒ Pr. 79 "operation mode selection"

• Allows operation to be performed in either or both of the external signal and parameter unit operation modes of the inverter.

Set Value	Description
0 (factory setting)	Operation can be switched between the parameter unit and external operation modes.
1	Operation is only allowed in the parameter unit operation mode.
2	Operation is only allowed in the external operation mode.
3 (Note 1)	Running frequencySet from the parameter unit Start signalExternal signal input
4 (Note 1)	Running frequencyExternal signal input Start signalInput from the parameter unit
5 (Note 2)	Programmed operation Operation startSTF, timer resetSTR, group selectionRH, RM, RL
7 (Note 4)	PU operation interlock
8 (Note 4)	External signal-based operation mode switching

Note: 1. In the parameter unit/external signal combined operation mode, the following signals are made valid:

Set Value	Operation Frequency	Start Signal		
3	Parameter unit ● Direct setting and [▲]/[▼] key setting	Terminal symbol • STF • STR		
4	Terminal signal • Across 2-5 0 to 5VDC • Across 2-5 0 to 10VDC • Across 4-5 4 to 20mADC Across 1-5 0 to ± 5VDC 0 to ± 10VDC • Jog frequency (Pr. 15) (JOG/OH) • Multi-speed selection (Pr. 4 to 6, 24 to 27)	Parameter unit • Forward rotation key • Reverse rotation key		

- 2. For the adjustment of the programmed operation function, see page 16-1.
- 3. This function number can also be rewritten in the external operation mode.
 - The settings of the other parameters cannot be changed. To change any of the other settings, set "0" or "1" in Pr. 79 to switch to the PU operation mode.
- 4. For full information on the PU operation interlock function available with the set value of "7" and the external signal-based operation mode switching function available with the set value of "8", see page 18-1.

- The programmed operation function allows 10 types of operation starting time of day, direction of rotation and running frequency to be set individually for each of the selected three groups. This function allows the inverter to be automatically run in the preset operation schedule and operation pattern. If a power failure occurs, operation can be continued without corrupting the set schedule by installing the FR-EPD automatic control compatible unit. This unit contains a backup battery.
- When the PU operation interlock signal is switched off, the PU operation interlock function forcibly switches the operation mode to the external operation mode. This function prevents the inverter from not starting operation under the external command if the mode is left unswitched from the PU operation mode.

⇒ Pr. 80 "motor capacity", Pr. 81 "number of motor poles"

• Set these parameters to perform operation in the magnetic flux vector control mode. To select the magnetic flux vector control mode, set the applied motor capacity in Pr. 80 and the number of motor poles (2, 4, 6) in Pr. 81.

When a constant-torque motor is used, set "1" (constant-torque motor) in Pr. 71 "applied motor".

- For more information, see page 14-1.
- When any of "12", "14" and "16" is set in Pr. 81, the input of the RT signal shifts the inverter to V/F control. The RT terminal can be used for stop-on-contact control (during a stop only).
- <Pr. 83, Pr. 84, Pr. 96 ⇒ For the setting method, see page 15-1>

To change the language displayed on the parameter unit


. - 5 .

⇒ Pr. 145 "parameter unit language switching"

• Allows selection of the language displayed on the FR-PU02ER/FR-ARWER four-language parameter (copy) unit (option).

Set Value	Language Displayed
0	English (factory setting)
1	German
2	French
3	Spanish

Note: This function is not valid for the FR-PU02, FR-PU02E or FR-ARW parameter (copy) units.

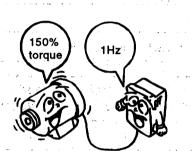

To achieve 150% torque for

operation at 1Hz

Pr. 152 "open motor circuit detection level" To output a signal when output cur-Pr. 153 "open motor circuit detection time"

rent = 0

Lands and

12 ^<u>↓</u> =

7.2

- As torque is not generated when the inverter output current of "0", a load drop may take place when the inverter is used in a vertical lift application. To prevent this, the output current [0] signal can be output from the inverter so that the mechanical brake is engaged when the output current becomes [0].
- If the output current detected during motor operation remains lower than the value set in Pr. 152 "open motor circuit detection level" for longer than the time set in Pr. 153 "open motor circuit detection time", the open motor circuit detection signal is output as an open collector signal from the output terminal PU of the inverter (Pr. 40 "output terminal assignment" = 7).

Parameter Number	Name	Setting Range	Factory Setting	Remarks
152	Open motor circuit detection level	0 to 50%	5%	100%: rated current value
153	Open motor circuit detection time	0.05 to 1 second	0.5 seconds	
17	External thermal relay input	0 to 7	0	

(1) Setting of the open motor circuit detection level

In Pr. 152 "open motor circuit detection level", set the ratio (%) of the output current to the rated current relative to 0[A], at which the open motor circuit is detected.


Setting of the open motor circuit detection time **(2)**1

Set a period of time from when the "open motor circuit detection level" set in Pr. 152 is reached to when the open motor circuit detection signal is output to the terminal PU.

Pr. 17 Setting	JOG/OH		MRS T	erminal	Pr. 40 : 9		
			Normally Normally open input		PU signal	Zero current detection	
0		-	٠				
1	-	•	•	·			
2	•	_	_	•]	н. С. С. С	
3			· · · · ·	•			
4	•	_	۲				
5	_	•	•]		
6	٠	. —	— .	•]	•	
• 7	_		· · · ·	•	1		

To output the open motor circuit detection signal, set 9 (PU operation mode) in Pr. 40 "output terminal assignment" and further set any of 4 to 7 in Pr. 17 "external thermal relay input".

Timing chart

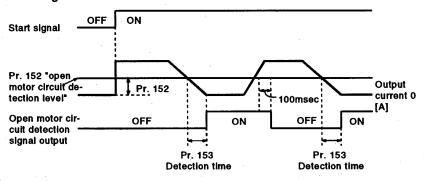

9-40

Note: When the current rises above the preset detection level, the open motor circuit detection signal remains on for about 100ms.

▲ Do not set a too large value to the open motor circuit detection level or open motor circuit detection time. When the output current is low and torque is not generated, the detection signal may not be output.

If the open motor circuit detection signal is used, provide a safety backup, such as an emergency brake, to prevent the machine and equipment from resulting in hazardous conditions.


⇒ Pr. 155 "terminal RT activated condition selection"

• The condition activated by the second control function selection (terminal RT) can be selected.

Pr. 155 Set Value	Second Control Function Condition
	Immediately activated and deactivated according to the sig- nal ON/OFF of terminal RT.
10	Activated only when the signal of terminal RT is ON at con- stant speed. (The function is not activated during accelera- tion/deceleration if the signal of terminal RT is ON.)

Note: "1" or "11" is for exclusive use by the manufacturer and must not be set.

To change the condition activated by the second control function selection (terminal RT)

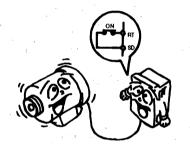






- ⇒ Pr. 156 "stall prevention operation selection"
- By setting Pr. 156, stall prevention (overcurrent stall prevention) and fast response current limit can be disabled for different situations.

Pr. 156 Set Value	Fast- Response Current Limit Function Selection O Activated • Not activated	Stall Prevention Selection O Activated ● Not activated			OL Signal Output O Operation continued ● Operation not continued ●	Factory Setting
		During acceleration	During constant speed	During deceleration		
0	<u> </u>	0	· 0	0	0	
1	•	0	0	. 0	0	
2		•	0	0	0	
3	•	•	0	0	0	
4	0	0 1	- •	0	0	
5	•	0	•	<u> </u>	0	
6	0	•	•	<u> </u>	0	1. A
7	•	•	•	· O	0	
.8	0	0	0	•	<u> </u>	
9	•	<u> </u>	<u> </u>	•	0	
10	0	•	0	•	0	
11	•	•	0	•	0	ł
12	0	0	•	•	0	4
13	•	0	•	. •	0	0
14	0	•	• • •	•	×	
15	•	•	•	•	0	
16	0	0	0	0	•	1
17	•	0	0	0	•	
18	<u> </u>	•	0	<u> </u>		
19	•	•	0	0	•	ľ
20	0	<u> </u>	•	0	•	-
21	• • •	0	•	0	•	4
22	0	•	•	0	•	1 .
23		•	0	•		- ·
24	0	0	0		•	1
25 26	0 · · · · · · · · · · · · · · · · · · ·	• •	0		•	•
26	•		0. 1		•	1
27	0	0	•	•	•	1
28	•	0			•	1
30	0		· •		•	1
30	•			•	•	1
	0	0	0	0	0	1
100 B		•	•	l ě	0	1
			L			1

D: Driving R: Regenerative

 Note: 1. When "Operation not continued at the time of OL signal output" has been selected, the "E.OLT" alarm code (stop by stall prevention) is displayed and operation stopped.
 2. The output voltage reduces during stall prevention operation. When high torque is required (e.g. for an elevator), set the parameter in the following procedure:

 Record the Pr. 77 value in advance.
 Set "701" in Pr. 77.
 Set "1" in Pr. 156.
 Return Pr. 77 to the previous value. This completes the setting.

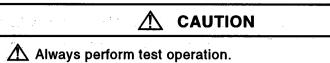

Stall prevention operation performed during acceleration may cause acceleration time to be longer.

Stall prevention operation performed during constant speed may cause speed to be vary suddenly.

Stall prevention operation performed during deceleration may cause deceleration time (and deceleration distance) to be longer.

⇒ Pr. 157 "OL signal output waiting time"

• The overload alarm (OL) signal can be output when the time set in Pr. 157 is exceeded.

Pr. 157 Set Value	Output Signal
0 (factory setting)	Output according to overload (OL).
0.1 to 25 seconds	Output after the set time has elapsed.
9999	Overload (OL) alarm signal is not output.

I <Pr. 158 ⇒ See the section of Pr. 51>

You care about speed fluctuation

To output the overload alarm (OL) signal only when the signal has persisted for more than a given time



- 6. s. . .


⇒ Pr. 159 "PWM frequency decrease at low speed"

• Slow speed operation (10Hz or less) can be smoothed to correct speed fluctuation. (To be set only when you care about speed fluctuation.)

	Description				
Pr. 159 Set Value	Improvement of speed fluctuation	Correction at high speed			
0 (factory setting)	No	No			
1	Yes	No			
2	No	Yes			
3	Yes	Yes			

Note: Since the carrier frequency reduces at the set value of "1" or "3", motor noise increases in the low range.

<Example: Pr. 72 = 5kHz > carrier frequency

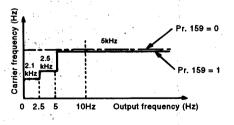




⇒ Pr. 900 "FM terminal calibration"

- Allows a meter connected to terminal FM to be calibrated from the parameter unit. Common to all monitored data selected in Pr. 54.
- Terminal FM provides the pulse output as shown below. The setting of Pr. 900 allows the meter connected to the inverter to be calibrated from the parameter unit without providing a calibration resistor.

(For information on the adjusting method, see page 11-1.)

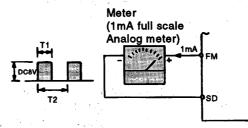


Pulse width T1 : Adjusted with Pr. 900

Pulse period T2 : Set in Pr. 55 (valid for frequency monitoring only)

Monitoring using a digital meter

Allows a digital value to be displayed on a digital counter using the pulse train signal from the FM terminal. 1440Hz output is provided at the full scale value explained in the section of Pr. 54. When the running frequency has been selected for monitoring, the ratio of this FM output frequency can be set in Pr. 55.

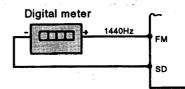


Note: At 60Hz, the parameter is factory-set to 1mA full-scale and 1440Hz FM output frequency. The maximum output frequency of FM is 2400Hz.

⇒ Pr. 901 "AM terminal calibration"


• Used when any of "101 to 118" has been set in Pr. 54 to select analog output to terminal AM and when any of "1 to 21" has been set in Pr. 158 to use the outputs of terminals FM and AM separately.

As explained in the section of Pr. 54, the analog output is factory-set to 10VDC in the full-scale of each monitored data. This parameter allows the output voltage ratio (gain) to be adjusted according to the meter reading. Note that the maximum output voltage is 10VDC.

(For details of the adjustment, see page 11-2.)

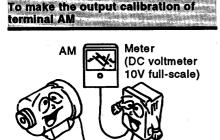

Pr. 902 – Pr. 905

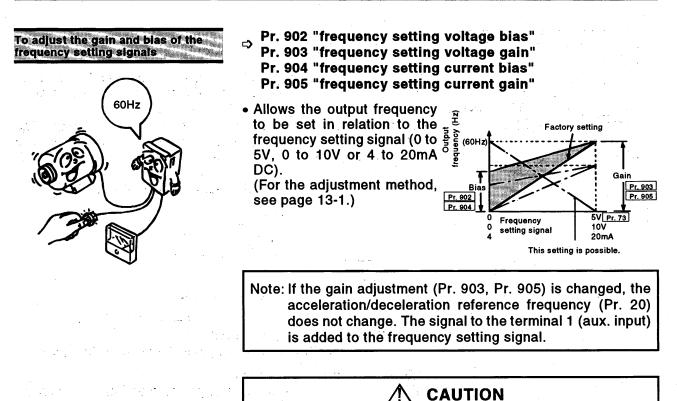


when setting any value other than

Take care when setting any value other than "0". Without the speed command, the motor will start at the preset frequency by switching on the start signal.

3.5 INVERTER RESET

The inverter can be reset by any of the following four operations. Note that resetting clears (erases) the cumulative internal heat value of the electronic overcurrent protector and the number of retries. **Operation 1 Operation 2** Using the help function, re-Switch the power off once. set the inverter. For details, After more than 0.1 seconds, see "7 INVERTER RESET" switch it on again. on page 7-14. Note: When the Pr. 57 (coasting time for automatic restart after instantaneous power failure/commercial power supply-inverter switch-over) setting is other than "9999", this operation is mistaken for an automatic restart after instantaneous power failure and the inverter cannot be reset. Hence, the power should be switched on again about 5 seconds after the control power has been lost. **Operation 3 Operation 4** – Connect the reset terminal When an alarm has oc-**RES-SD** for more than 0.1 curred while the PU operation interlock function is being seconds, then disconnect. used, press the STOP key Note: Do not remove the jumper from across the terminal _ in the PU operation mode. RES and RES1 on the internal printed circuit board. 10 - 1

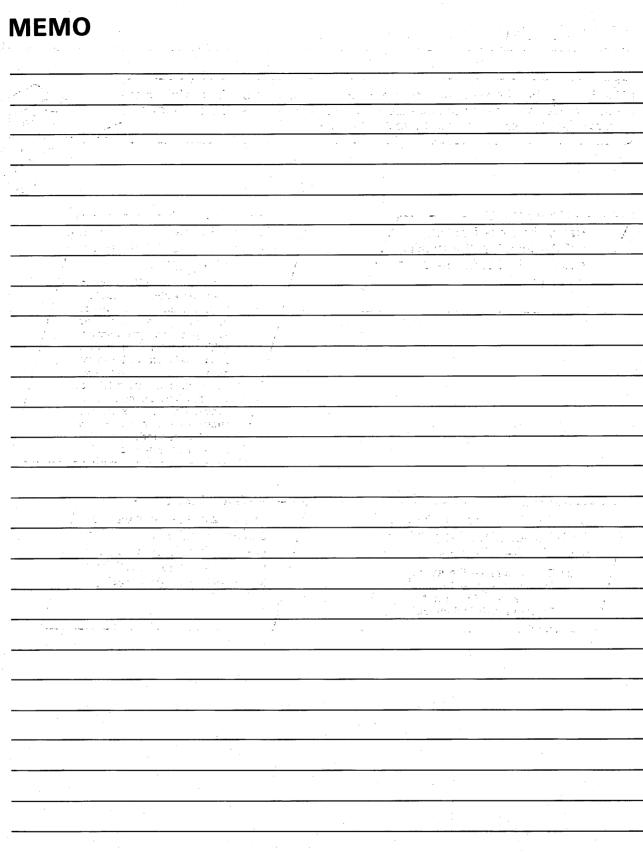

4. FUNCTIONS

This chapter offers detailed information on the "functions" of the FR-A201E "inverter with built-in power return function".

Always read the precautions and instructions in this chapter before using the equipment.

	•
4.1	CALIBRATION OF THE METER
	(FREQUENCY METER)11 – 1
4.2	PU DISCONNECTION DETECTION FUNCTION
4.3	ADJUSTMENT OF THE FREQUENCY SETTING
	SIGNALS "BIAS" AND "GAIN"
4.4	SELECTION OF MAGNETIC FLUX
	VECTOR CONTROL14 – 1
4.5	AUTO TUNING15 – 1
4.6	PROGRAMMED OPERATION FUNCTION
4.7	5-POINT FLEXIBLE V/F CHARACTERISTIC
4.8	PU OPERATION INTERLOCK FUNCTION
	AND EXTERNAL SIGNAL-BASED OPERATION
	MODE SWITCHING FUNCTION
4.9	STOP-ON-CONTACT CONTROL19 – 1
4.10	LOAD TORQUE-BASED HIGH-SPEED
	FREQUENCY CONTROL FUNCTION
4.11	DETECTED SPEED CORRECTION
	FOR PLG FEEDBACK CONTROL
4.12	BRAKE SEQUENCE


4.1 CALIBRATION OF THE METER (FREQUENCY METER)

The PU allows the calibration (adjustment) of a meter connected across the meter connection terminal FM-SD or AM-5 of the inverter. When a digital meter is used, the PU allows the frequency of the pulse train output signal to be adjusted. The motor need not be connected for calibration.


4.1.1 Calibration of the FM-SD Output

Preparation


- (1) Connect a meter (frequency meter) across inverter terminals FM and SD. (Note the polarity. FM is the positive terminal.)
- (2) When a calibration resistor has already been connected, adjust the resistance value to zero or remove the resistor.
- (3) Set any of 1 to 3, 5 to 14, 17, 18 and 21 in Pr. 54 (FM terminal function selection". When the running frequency or inverter output current has been selected as the output signal, preset in Pr. 55 or Pr. 56 the running frequency or current value at which the output signal is 1440Hz. This 1440Hz normally makes a full-scale deflection.

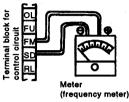

• Calibration procedure (Example: To calibrate the meter to the running frequency of 60Hz)

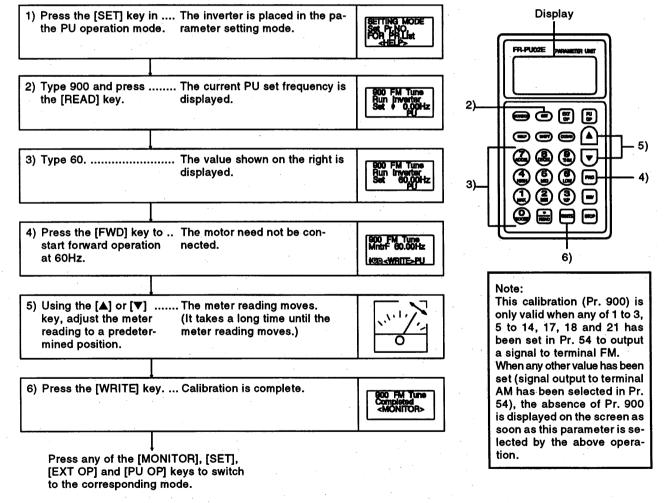

Note : When the frequency meter is connected across terminals FM and SD to monitor the running frequency, the output of terminal FM is saturated if the maximum output frequency reaches or exceeds 100Hz, with the factory-set value unchanged. Hence, the setting of Pr.55 "frequency monitoring reference" must be changed to the maximum output frequency. (See page 9-25.)

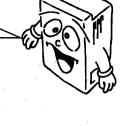

4.1.2 Calibration of the AM-5 Output

Preparation

- (1) Connect a meter of 0-10VDC across inverter terminals AM and 5. (Note the polarity. AM is the positive terminal.)
- (2) Set any of 101 to 103, 105, 106, 108, 110 to 114, 117 and 121 in Pr. 54. When the running frequency or inverter output current has been selected as the output signal, preset in Pr. 55 or Pr. 56 the running frequency or current value at which the output signal is 10V.
- (3) As in the setting of Pr. 54, set any of 1 to 3, 5, 6, 8, 10 to 14, 17 and 21 in Pr. 158 (AM terminal function selection) to use both of the FM and SD output and AM-5 output simultaneously.

Meter (frequency meter)

A٨ ģ


10E 10

5

Terminal block f control circuit

control o

• Calibration procedure 1 (Example: To calibrate the meter to the running frequency of 60Hz)

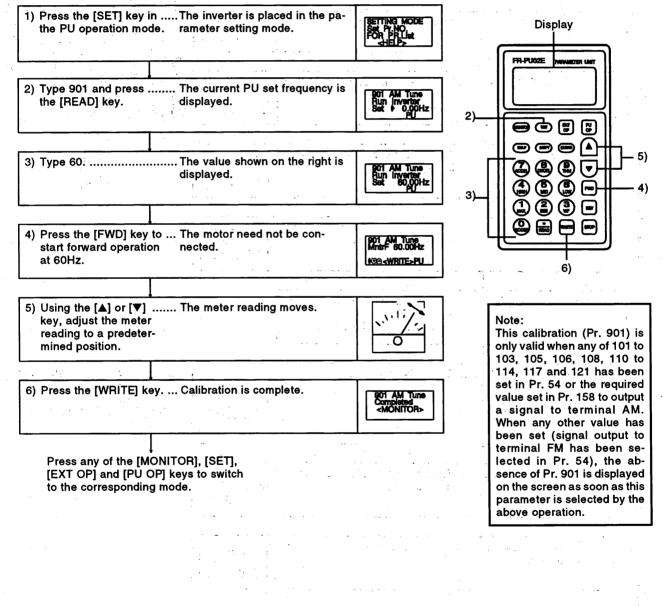

11-2


Calibration procedure 2 (Example: Output current)

To output the output current or other item which is not easily allowed to reach 100% if operation is performed, adjust the reference voltage output (when the set value of Pr. 54 "FM and AM terminal function selection" is "121"), then select any of the choices displayed.

1) Press the [SET] key in The inverter is placed in the pathe PU operation mode. rameter setting mode. Display 2) Type 54 and press the The current set value in Pr. 54 is FR-PU02E 54 Set FN [READ] key. displayed. 1-21.101-121 1) 4) .1) 3) Type 121 and press The setting of reference voltage **9**) 54 Set FM the [WRITE] key. output is complete. 1-21.101-121 8) ٩ ٩ 2) з) Č 7) 5) 4) Press the [SET] key. The inverter is put in the parame 6) Setting of reference voltage output IG MODE ter setting mode. 10) i Yint 11) 5) Type 901 and press The current set value in Pr. 901 **2**) 3) the [READ] key. is displayed. 5) 6) 9) 11) 10) 6) Type 60 and press the The setting of maximum running [WRITE] key. frequency is complete. 7) Press the [FWD] key.Forward operation is performed at 60Hz. The motor need not be connected for adjustment. 8) Using the [▲] or [▼] Setting is complete. When the output is 100%, the output voltage is 10V. The key, adjust the voltage voltage is not stored unless across terminals AM-5 Run invert the [WRITE] key is pressed. to 10V and press the [WRITE] key. 9) Press the [SET] key. The inverter is put in the parame ter setting mode. Setting of output current 10) Type 54 and press the The current set value in Pr. 54 is 54 Set FM 121 displayed. [READ] key. 1-21.101-121 11) Type 102 and press the... The setting of output current is The current value set in Pr. 54 Set FM 102 56 "current monitoring complete. [WRITE] key. reference" is 100% and the 1-21.101-121 output at this point is 10V.

4.2 PU DISCONNECTION DETECTION FUNCTION

This function detects that the parameter unit (PU) has been disconnected from the inverter and brings the inverter to an alarm stop.

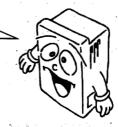

Operation

When Pr. 75 "reset selection/PU disconnection detection" has been set to detect the disconnection of the PU, this function detects that the PU has been disconnected from the inverter, switches the PU display (when re-connected) and inverter LED to the indication of the corresponding error, and brings the inverter to an alarm stop.

Set Value	Reset Condition	PU Disconnection Detection
0	Reset input normally enabled. (Factory setting)	
1	Reset input enabled only when the protective function is activated.	
2	Reset input normally enabled.	0
3	Reset input enabled only when the protective function is activated.	0

Note: When the inverter comes to an alarm stop, the error messages displayed are as follows: • PU display...... PU DISCONNECTED Inverter (when re-connected)


• LED..... E.PUE

Setting instructions

- (1) If the PU had been disconnected from initial start, this is not defined as an alarm.
- (2) This disconnection detection judges that the PU is disconnected when the PU is removed for more than 1 second.
- (3) When the FR-PU01E is used, this function can also be used but its alarm display is "E.PE".
- (4) To resume operation, reset the inverter (see page 10-1) after checking that the PU is connected securely.

4.3 ADJUSTMENT OF THE FREQUENCY SETTING SIGNALS "BIAS" AND "GAIN"

The bias and gain functions are used to adjust the relationship between the input signal entered externally and the output frequency, e.g. 0 to 5VDC, 0 to 10VDC or 4 to 20mADC.

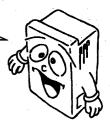

Gain Pr.903

Pr.73

Pr.905

The following parameters are used for this adjustment:

- voltage bias"
- Pr. 902 "frequency setting Pr. 904 "frequency setting current bias"
- Pr. 903 "frequency setting voltage gain"
- Pr. 905 "frequency setting current gain"

frequency

Output

(60Hz)

(Hz)

Bias Pr.902


Pr.904

0

Any of three procedures may be used for the adjustment: adjustment is made without a voltage applied across terminals 2-5 (adjustment procedure 1); any point is adjusted with a voltage applied (adjustment procedure 2); or any point is adjusted without a voltage applied (adjustment procedure 3).



Example		Set the output frequency to 10Hz at the set voltage of 0V.
	Pr. 903 "frequency setting voltage gain"	Set the output frequency to 50Hz at the set voltage of 5V.

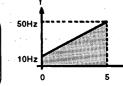

5V

10V

20mA


Factory setting

Frequency setting

signal

Before making adjustment, make sure that the set value of Pr. 73 "0 to 5V, 0 to 10V selection" is "0" (factory setting: 0 to 5V).

• Adjustment procedure 1 (without a voltage applied across terminals 2 and 5) (1) Setting of the frequency setting voltage bias

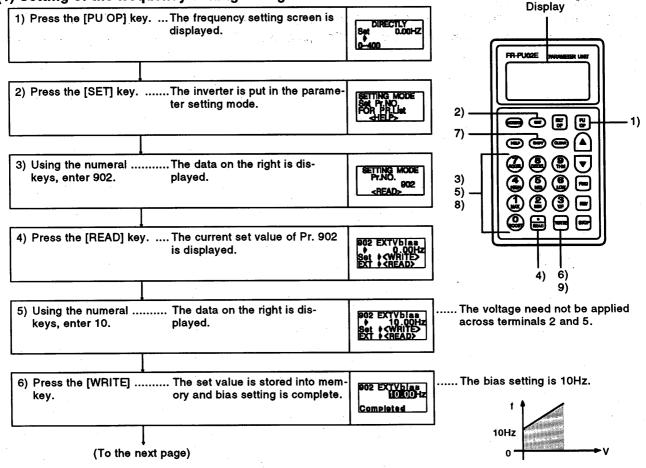

If the voltage is being applied across terminals 2 and 5 at this time, the bias setting as shown above.

) Setting of the frequency setting voltage gain			e en esta esta en la companya de la Companya de la companya de la company Record de la companya
7) Press the [SHIFT] k	ey The current set value of Pr. 9 is displayed.	03	
8) Using the numeral keys, enter 50.	L	603 ECTVash 50.001Hz Set ◆≪REED>	The voltage need not be applied across terminals 2 and 5. At this time, the 5V (10V) in the inverter is used as the set voltag
9) Press the [WRITE] . key.			50Hz
The adjustment of ting voltage bias a	the frequency set- nd gain is complete.		

manual.

÷.,

. .

Adjustment procedure 2 (any point is adjusted with a voltage applied across terminals 2 and 5) (1) Setting of the frequency setting voltage bias

1) Press the [PU OP] key	 The frequency setting screen is displayed. 	Set 0.00HZ	Display
	uispiayeu.	Set 0.00HZ 0-400	FR-PUOZE PHONETER UNIT
			
2) Press the [SET] key	The inverter is put in the para- meter setting mode.	SETTING MODE Set Pr.NO FOR PR.List diELP>	
		••••••••••••••••••••••••••••••••••••••	
3) Using the numeral keys, enter 902.	The data on the right is dis- played.	SETTING MODE PT.NO. 902 <read></read>	
		• <u> </u>	4) 6) 11)
4) Press the [READ] key <u>twice</u> .	The current set value of Pr. 902 is displayed.	802 EXTVblas ↓ 10,00Hz EXT 20.0%	8) 13) The preceding set value is displayed. The current set voltage across terminals 2-5 is displayed in %.
		•	The displayed value is changed according as the set voltage. (In this example, the voltage of 1V is applied.) (The value *0* selected in Pr. 73 (5V in this)
5) Using the numeral keys, enter 10.	The data on the right is dis- played.	902 EXTVblas 10,00Hz - 0.5% EXT - 20.0%	example) is 100%.
		••••••••••••••••••••••••••••••••••••••	(a) An and the second s
6) Press the [WRITE] key.	The cursor (⇔) moves to the set voltage.	902 EXTVblaa 10.00Hz - 0.5% EXT 20.0%	Adjust the set voltage. When the voltage set is 1 V, the bias setting is as follows:
		••••••••••••••••••••••••••••••••••••••	
7) Apply the voltage of 0	ν.	902 EXTVblas 10.00Hz - 0.5% EXT - 0.2%	Since 10Hz is set against 0V in this example, 0V is applied. (The % value for EXT changes.)
		· · · ·	
8) Press the [WRITE] key.	The set value is stored into mem- ory and bias setting is complete.	902 EXTVblas 10.00Hz 0.2% Completed	—— The bias setting is complete as shown below:
		<u> </u>	10Hz
(To the ne	kt page)		0

frequency setting voltage			n 1 - Angeler and the South States of the South States of the South States of the South States of the South State 1 - Angeler and States of the South States of the South States of the South States of the South States of the S
gain	n de la companya de l La companya de la comp	An an an anna tar	and a second second
	The current set value of	Pr. 903 (1903 EXTY	
then the [READ] key.	is displayed.	F1. 903 EXTVg ♦ 60.0 97. EXT 99	The preceding set value is displayed.
	· · · · · · · · · · · · · · · · · · ·		5 is displayed in %. The displayed value is changed accord
			the set voltage.
Using the numeral keys, enter 50.	The data on the right is o played.	dis- 1903 ExtVg 50.0	
	الم مرد شور میشود (۲۰۰۱) این از این از ای این از این	903 EXTVg 50.0 ₽ 97 EXT 99	
	بې بې		
1) Press the [WRITE] key	The cursor (➾) moves to	the set	en e
I) Fless the [White] key.	voltage.		
	5-3 - 2 2 2 2 3.	97 ECT 89	increase the voltage across
		مر ومعب م من ^{رو} موجعه .	nals 2 and 5 until 100% is achieved.
2) Apply the voltage of 5 V	I.		Since 50Hz is set against 5\
	te serve a le serve a la serve a s Internet de la serve a s Internet de la serve a s	903 EXTV 50.0 ∳ .97	this example, 5V is applied.
an il an an a' chèire des fae getter la	en e	EXT 99	1081 - Carlos Angelaria - Maria Barra - Maria - Maria Angelaria - Maria Angelaria - Maria - M
aten - son onedaripe a			
3) Press the [WRITE] key.	The set value is stored in	nto mem-	
a fizzi e constante compositore. A fizzi e constante constante constante constante e constante e constante e constante e constante e constante e	ory and gain setting is co	omplete. 500	001+z .6x ←
			The setting is complete as s
$(x_{i}, y_{i}) \in \mathcal{F}_{i}(x_{i})$		· · · · · · · · · · · · · · · · · · ·	below:
The adjustment of the	frequency set-		an a
ting voltage bias and g	ain is complete.	أيوار والرحم ومادهم	50Hz
		•	
د. المهالة جمعة الألب المنافر م	یستان از استاده م به اثار از استاده	an an search an ann an	10Hz
a dina di secondo a secondo de la companya de la c Persona de la companya		en enterni. S	Claring a state of the sono state of the sono state of sono sono sono sono sono sono sono s
			· · · · · · · · · · · · · · · · · · ·
ote: 1. The current in	put (Pr. 904, Pr. 905)	can also be set i	n a similar manner.
2. Pr. 903 remai	ns unchanged if the va	alue set in Pr. 20	0 "acc./dec. reference frequenc
			د المراجعة ا
changed.	a ser en		
changed.		••••••••••••••••••••••••••••••••••••••	
changed.			
changed.			
changed.			
changed.			
changed.			

13-4

 Adjustment procedure 3 (any point is adjusted without a voltage applied across terminals 2 and 5)

(1) Setting of the frequency setting voltage bias Display 1) Press the [PU OP] key. ... The frequency setting screen is DIRECTLY 0.00HZ Set displayed. FR-PU02E THE PARTY .8.2 2) 2) Press the [SET] key. The inverter is put in the paramee • 5 5 1) CODE ter setting mode. 7) 8) RLint ñ 3) 5) 2 (3) 9) 3) Using the numeral The data on the right is dis-ETTING MODE Pr.NO. ര keys, enter 902. played. [= ano READ 6) 10) 4) 7) 11) 4) Press the [READ] key The current set value of Pr. 902 bias .00H is displayed. twice. The preceding set value is displayed. The current set voltage across terminals 2-5 is EYT displayed in %. The displayed value is changed according as the set voltage. The value selected in Pr. 73 (5V in this example) is 100%. 5) Using the numeral The data on the right is dis-blas keys, enter 10. played. 20:09 6) Press the [WRITE] The cursor (⇒) moves to the set The voltage need not be applied 902 EXTVblas 10.00Hz ♦ - 0.5% EXT 20.0% across terminals 2-5. voltage. key. Since 10Hz is set against 0V (0%) 7) Using the numeral key, enter 0. 902 EXTVbias 10.00H in this example, 0% is entered. 0. 8) Press the [WRITE] The set value is stored into mem-902 EXTVbias 10.00Hz 0.0% Completed ory and bias setting is complete. key. The bias setting is as follows: (To the next page)

(From the preceding page)	and the second	اری این ایم در در در این سخت این است. این این در میرون این میرون این در این این در این این در
(2) Setting of the frequency setting voltage gain		
9) Press the [SHIFT] key, The current set value of Pr. 903 then the [READ] key. is displayed.	803 EXTVgaln ♦ 60.00Hz 97.15 EXT 99.05	The preceding set value is displayed. The current set voltage across terminals 2 and 5 is displayed in %. The displayed value is changed according as
10) Using the numeral The data on the right is dis- keys, enter 50. played.	603 EXTVgaln 50.00Hz €7.1% EXT 89.0%	the set voltage. (The value selected in Pr. 73 (5V in this example) is 100%.
11) Press the [WRITE] key The cursor (➾) moves to the set voltage.	803 EXTVgalm 50.00Hz EXT 80.02	The voltage need not be applied across terminals 2 and 5.
12) Using the numeral keys, enter 100.	803 EXTVgaln 50,00Hz € 100% EXT 99.0%	Since 50Hz is set against 5V (100%) in this example, 100% is entered.
13) Press the [WRITE] key The set value is stored into mem- ory and gain setting is complete.	803 EXTVgaln 50.00Hz 100% Completed	The setting is complete as shown below:
The adjustment of the frequency set- ting voltage bias and gain is complete.		10Hz 0%) 5V (100%)

Note: 1. The current input (Pr. 904, Pr. 905) can also be set in a similar manner.
2. Pr. 903 remains unchanged if the value set in Pr. 20 "acc./dec. reference frequency" is changed.

Ę

 $[\cdot]$

. .

,

•.}′÷

1.52

4.4 SELECTION OF MAGNETIC FLUX VECTOR CONTROL

of poles, and type of the motor u	effective when large starting and low-speed 📉 🔏 🕅
Conditions for selecting mag- netic flux vector control	When the following conditions are met, magnetic flux vecto control can be utilized efficiently. When any of the following conditions cannot be satisfied, faults such as torque shortage and speed fluctuation may occur. In this case, select V/F control.
	<pre></pre>
	• The motor capacity is equal to or one rank lower than the of 2, 4, or 6. (4 poles only for
	 inverter capacity. The type of the motor is the Mitsubishi standard motor (3.7kW or more) or Mitsubishi the constant-torque motor) Single-motor operation (one motor for one inverter) is per- formed.
	constant-torque motor (200V • The wiring length between class 4-pole motor is used with 3.7kW to 55kW). When another motor is used, use
میں اور ایر روز معرفی کی میں میں مربوعی	the auto tuning function on [If the length is over 30m,] page 14-2.
Magnetic flux vector control selection method	Set motor rated kW (a value other than 9999) in Pr. 80 (moto capacity) and number of poles in Pr. 81 (number of poles) to select the magnetic flux vector control. (When 9999 has been set to either of Pr. 80 and Pr. 81, V/F control is selected.) When a Mitsubishi constant-torque motor (SF-JRCA, SF-JRC) is used, set "1" in Pr. 71 "applied motor". When the previous Mitsubishi constant-torque motor (SF-JRC) is used, special parameters or auto tuning must be set in addition to the above parameters. For more information, see page 15-1. By switching on/off the signal across terminals RT and SD durin a stop, operation can be switched between the V/F control an magnetic flux vector control. Switch the signal off to select the magnetic flux vector control (Pr. 71 = 12, 14, 16).
	 The degree of speed fluctuation correction is slightly lower than in V/F control. There is a delay of 0.1 to 0.2 sec at start.
	 Applications appropriate for magnetic flux vector control> Machines which require independent of the load fluctuates widely Machines which require low speed torque Magnetic flux vector control is not appropriate for machines where speed fluctuation at low speed is not allowed, e.g. grinder, wrapping machine.

∋_<u>14</u> – 1

Parameters related to magnetic flux vector control

	Parameter Name	Setting Range	Set Value	Desc	ription		Factory Setting
	Motor	9999, ··	9999	V/F control is selected		4	0
80	capacity	5.5 to 55kW	5.5 to 55	Motor capacity (kW) is	set.		-
·-			9999	V/F control is selected	• 5 (F)		0
			2, 4, 6	Number of motor poles is selected.			_
81	Number of motor poles	9999, 2, 4, 6, 12, 14, 16	12, 14, 16	Switch on the signal ar to select V/F control if poles has been set. (Control is switched at • 12: 2-pole motor • 14: 4-pole motor • 16: 6-pole motor	the number o		
			Ó	Standard motor			0
		1	Constant-torque motor				
		2	Standard motor (5-point flexible V/F ch	aracteristic)			
4,3			3	Standard motor	"Auto tuning	cottina" in	
	i Provide Provide	0 to 6.	13	Constant-torque	selected	setting is	
71	Applied	13 to 16,	4	Standard motor	Auto tuning		
an ta s t t a Constantia da se	motor •	20 ** 23, 24	14	Constant-torque motor	read/change enabled	setting is	-
			5	Standard motor	Star	•	
. to see the	n 1998 - Alisan	•	15	Constant-torque motor	connection	Direct input of	an de la companya de La companya de la comp
1 2 2 2			6	Standard motor	Delta	motor constants	
		d ef	16	Constant-torque motor	connection	is enabled	· · ·

The electronic overcurrent protection characteristic is also set simultaneously.

20, 23 and 24 are also available for setting but must not be set as they are used for setting by the manufacturer.

Note: The output torque may reduce when the optional noise reduction reactor (FR-BOL) or surge voltage suppressing filter (FR-ASF-H) is connected between the inverter and the motor. (See page 28-10)

. .

a a transformation

o Mexica con la construcción factario de adar

ು ಕಾರ್ಟ್ ಬೇಟ್ ಕಾರಿಕಾಳಿ ನಿರ್ದಾಶಕ್ರಿ ಬಂದಿ ಬೇಕಾಕಾಳಕ ಕಾರ್ಯವರ್ಷ ಮುಂದಾಗಿ ಕಾರ್ಯಕಾಳಿ ಕಾರ್ಣಿ

. .

14 – 2

.

. .

e grome and the second energy of the the address of the second second second second second second second second Alternation and the the second sec

김 고양 한 신화학

......

and a second second

**

 $f_{\rm Lev} \gtrsim 22$

. . .

£.

<u>.</u>

аланан аралар аралар

1141250

به * مدرد المراجع مسلح الما ما

Compatibility with the Mitsubishi constant-torque motor

When a Mitsubishi constant-torque motor is used, the setting depends on the motor type (there are two types). Check the type of the motor used.

Rating plate	(SF-JRC)			
	R LINE SE INDUCTION MOTOR			
5.5 kw 4 POLE	TYPE SF-JRC			
HERTZ 60 60 VOLT 200 220	FRAME 1328			
AMP 23 22	RATING CONT			
PPM 1730 1740	INS CLASS F			
60-120 Hz 5.5 kW	AMB TEMP 40°C			
6- 60Hz 3.0 kg-m	BEARING			
JIS C 4004	6208ZZ			
JP 44 JC 4	6207ZZ			
SERIAL C91300001				
MITSUBISHI ELECTRIC CORPORATION. JAPAN				

Rating plate (SF-JRCA)			
♦ SUPE	R LINE		
THREE PHA	SE INDUCTION MOTOR		
5.5 kw 4 POLE	TYPE SF-JRCA		
INV-INPUT HZ 50/60 60 INV-INPUT VOLT 200 220	FRAME 132S		
KW 0.28- 5.5 -4.9 5.5	RATING CONT		
HERTZ 3- 60- 120 120	INS CLASS F		
AMP 21.8- 23.4- 22.6 22.0	AMB TEMP 40°C		
r/min 90 - 1800 - 3520 3530	BEARING		
kg-m 3.0- 3.0 - 1.35 1.5	6208ZZ		
JIS C 4004 JP44 JC4	6207ZZ		
SERIAL C91300001			
	CORPORATION. JAPAN 896071-01		

(1) Selection method

Mitsubishi Constant-		Parameter Set	Value	
Torque Motor Type		Pr. 80 (motor capacity)	Pr. 81 (number of motor poles)	Special Setting
SF-JRC	1 (constant-torque motor)	Set the capacity of the motor used.	4	Required (see below)
SF-JRCA	1 (constant-torque motor)	Set the capacity of the motor used.	4	· _

(2) Special parameter set values for use of the SF-JRC constant-torque motor

Set the parameters to the values indicated below according to the capacity of the constant-torque motor. Note that if the values set are not as indicated below, torque shortage or overcurrent alarm may occur.

		\$10 _ 6	Paramete	er Set Values		
SF-JRC Capacity (kW)	Pr. 71 (applied motor)	Pr. 80 (motor capacity)	Pr. 81 (number of motor poles)	Pr. 89	Pr. 90	Pr. 90 (Wiring length 30 to 100m)
3.7	1	3.7	4	82.6	0.305	0.305+0.004926x
5.5	1	5.5	4	122.8	0.181	0.181+0.003248x
7.5	1	7.5	4	126.5	0.105	0.105+0.002144x
11	1	11	4	99.0	0.059	0.059+0.001231x
15	1	15	4	80.9	0.036	0.036+0.0007836x
18.5	1	18.5	4	130.3	0.031	0.031+0.0005747x
22	1	22	4	130.0	0.026	0.026+0.0005747x
30	1	30	4	142.7	0.024	0.024+0.000343x
37	1	37	4	188.1	0.015	0.015+0.0002193x
45	1	45	4	164.7	0.016	0.016+0.0002193x

Note: 1. Applied motor: Mitsubishi's previous type 200V series 4-pole constant-torque motor (SF-JRC) only

2. Wiring length of over 30m: Calculate the value (Ω) of Pr. 90 with reference to the above table, assuming that x = 30 to 100m.

3. If the parameters are set as listed above, torque shortage or over current alarm may occur according to the motor used. In such a case, make fine adjustment of the Pr. 89 and Pr. 90 settings.

(3) Setting method of the special parameters

The special parameters must be set in the following procedure, otherwise the values of Pr. 86 to Pr. 90 cannot be read.

1) Set 801 in Pr. 77. (Note)

6.,

. .

2) Change the setting of the special parameters in (2).

3) Set 0 or 1 in Pr. 77 (return to the previous set value).

Note: When 801 is set in Pr. 77, the values of Pr. 82 to 99 are also displayed together, but these parameters must not be changed. Otherwise, the inverter may be damaged.

Precaution:

Note that a sufficient motor torque may not be provide depending on the inverter control method.

Constant-Torque Motor	Magnetic Flux Vector Control (FR-A201)	V/F Control (All inverter models)
SF-JRC (old type)	Operable by special setting ((2) on preceding page)	Operable by torque boost adjustment (Torque shortage or overcurrent occurs in the standard setting)
SF-JRCA (new type)	Operable by standard setting (Pr. 80, Pr. 81, Pr. 71)	Operable by standard setting (Pr. 71)

(Pr. 80: motor capacity, Pr. 81: number of motor poles, Pr. 71: constant-torque motor selection)

1.

If the motor used is not Mitsubishi's standard motor (5.5kW or more) or Mitsubishi's constant-torque motor (4-pole, 5.5kW to 55kW), the auto tuning function allows the motor to be run with optimum operation characteristics under magnetic flux vector control. Also, tuning data (motor constants) can be copied to another inverter with the FR-ARWE parameter copy unit. Note that a special motor, e.g. a high-slip motor or a high-speed motor, cannot be tuned. Also, the maximum speed is 120Hz. i ya shi ƙasar <Operation procedure> Before performing auto tuning, check the following: 1. Checking the wiring and (1) The motor is connected. The motor must be at a stop at the load start of tuning. (2) Auto tuning can be performed if the motor is connected with a load (e.g. friction, steady load). Note that if the load is smaller, tuning accuracy is higher. Also note that if inertia is ·----large, tuning accuracy remains unchanged. (3) When "101" (auto tuning is performed with the motor rotated) has been set in Pr. 96 (auto tuning setting/state), note the following: 1) The motor is free to rotate. 2) The motor is run at about the rated motor frequency (set value of Pr. 84). 3) The brake must be released, if fitted. 4) No force is applied to rotate the motor. (4) If "1" (tuning without motor rotating) is set in Pr. 96, the motor may run slightly. Therefore, fix the motor securely with a mechanical brake and ensure that motor rotation will not compromise safety. The motor should be fixed securely especially for an elevator. Note that slight rotation of the motor will not affect the tuning performance. (5) Auto tuning is not performed properly when the optional noise reduction reactor (FR-BOL) or surge voltage suppressing filter (FR-ASF- H) is connected between the inverter and the motor. Disconnect before starting auto tuning. Select the magnetic flux vector control in accordance with page 2. Selection of magnetic flux 14-1. vector control Set the following parameters in accordance with the parameter 3. Setting of parameters settings on this page. (1) Pr. 96 "auto tuning setting/state" Set "1" or "101". •Set value "1" Tuned without the motor rotated. •Set value "101" Tuned with the motor rotated. (2) Pr. 83 "rated motor voltage" (Note) Set the rated motor voltage (V). (3) Pr. 84 "rated motor frequency" (Note)... Set the rated motor frequency (Hz). (4) Pr. 71 "applied motor" Select the set value in accordance with the following table: •Standard motor Set "3". •Constant-torque motor...Set "13".

Note: Pr. 83 and Pr. 84 are displayed only when magnetic flux vector control has been selected (Pr. 80, Pr. 81). Set these parameters according to the rating plate of the motor. When there are two or more rated values for a standard motor, etc., set 200V/60Hz or 400V/60Hz.

Parameter settings

Parameter Number	Name	Setting Range	Set Value	a lateral	Description		Factory Setting
			0	Standard motor (n			0
5. ⁶			1	Constant-torque n	notor		
			2	Standard motor (5-point flexible V	/F characteris	tic)	
			3	Standard motor			
		1	13	Constant- torque motor	"Auto tuning setting" is selected		
71.	Applied	0 to 6, 13	4	Standard motor	Auto tuning o	lata read/	
1	motor *1	to 16, 20	14	Constant- torque motor		ng is enabled	
· .			5	Standard motor	Star		
	· · · ·		15	Constant- torque motor	connection	Direct input of motor con-	100 A
1		Ave. St.	6	Standard motor	Delta	stants is en- abled	
	¥	na je svel Leta	16	Constant- torque motor	connection		
83	Rated motor voltage	0 to 1000V	0 to 1000V	"No auto tuning" is selected. Rated motor volt- age (V) is set.		*4 200	
84	Rated motor frequency	50 to 120Hz	50 to 120Hz	Rated motor frequency (Hz) is set.		60	
	Motor	9999, 0	9999				0
90	constant R1	to 10.000Ω	0 to 10.000Ω	÷.			_
	Motor	9999, 0	9999				0
91	constant R2	to 10.000Ω	0 to 10.000Ω				_
	Motor -	9999, 0	9999				0
92	constant L1	to 1000.0mH	0 to 1000.0mH	I. T	uning data *2		
·	Motor	9999, 0	9999	* • •			0
93	constant L2	to 1000.0mH	0 to 1000.0mH				
	Motor	9999, 0	9999	4			
94	constant X	to 100%	0 to 1000% -				. —
	Auto		0	"No auto tuning" i	is selected.		0
96	tuning setting/	0, 1, 101 *3	- 1 -	Áuto tuning is per rotated.	rformed withou	ut the motor	_
	state		101*3	Auto tuning is per rotated.	rformed with t	he motor	

*1: The electronic overcurrent protection characteristic is

selected at the same time.

*2: The values measured by auto tuning are set automatically.

*3: Select "101" to increase tuning accuracy.

*4: The factory setting for the FR-A241 (400V) series is 400V.

4. Switching the auto tuning command ON

5. Tuning state monitoring

In the PU operation mode, press the [FWD] or [REV] key. In the external operation mode, turn on the start switch (connect terminals across STF or STR and SD).

- Note: 1. When "101" is set in Pr. 96, be careful to avoid hazard because the motor rotates.
 - 2. During auto tuning, the input/output terminals are made valid/invalid as indicated below:

	Valid Terminals	Invalid Terminals	8	Valid Terminals	Invalid Terminals
Input termina	STOP OH MRS RT, JOG, CS RES STF/STR	RH/RM/RL 2, 1, 4 AU	Output termine	RUN OL IPF FM, AM A, B, C	SU FU

- To force the motor to stop during tuning Terminate tuning use the MRS terminal, RES terminal, or [STOP] key.
- 3. Be careful especially when the RUN signal has been used to create a mechanical brake releasing sequence.

During tuning, the value of Pr. 96 is displayed on the main monitor and level meter of the PU as indicated below. As on the PU, 1, 2, 3, 9, 91, 92, 93, 102 or 103 is shown on the inverter LED. (When Pr. 51 = "1" (factory setting))

•PU m	ain monitor	t i . i . (In case of in	nverter trip)
	1. Setting	2. Tuning in Progress	3. Completion	Error-acti- vated End
Display	1 stop pu	TUNE 2. STF PWD PU TUNE 102 STF PWD PU		TUME 9 ERROR STF STOP PU

•PU level meter

Indicates tuning progress with 0% (start) to full-scale 100% (end). •Inverter LED (In case of inverter trip)

		• • · · ·	(11 0000 01	
	1. Setting	2. Tuning in Progress	3. Completion	Error-acti- vated End
Displayed	1 —	→ 2 -	→ 3	
value	101 —	→ 102 —	→ 103	9

Reference: Auto tuning time (factory setting)

Auto Tuning Setting	Time
1: Mode in which the motor does not rotate	Approx. 10 seconds
101: Mode in which the motor rotates	Approx. 25 seconds *1

*1: The auto tuning time changes as indicated below according to the variation of the acceleration/ deceleration time:

Auto tuning time = acceleration time + deceleration time + approx. 15 seconds

6. Auto tuning end an assessment	Check the value of Pr. 96. •Normal end "3" or "103" is displayed. •Error-activated end Any of "9", "91", "92" and "93" is displayed.
	When tuning came to a normal end in the PU operation mode, press the [STOP] key. When in the external operation mode, turn off the start switch (disconnect terminals STF or STR and SD). This operation resets auto tuning and returns the PU monitor to an ordinary display. Note that if this operation is not performed, next operation cannot
	be stared.

Definition of Display at Error-Activated End

Error Display	Cause	Corrective Action
9	Inverter trip	Set again.
91	The current limit (stall prevention) function has been activated.	Increase the acceleration/deceleration time.
92	The converter output voltage has dropped to 75% of the rated value.	Check the variation of the power supply voltage.
93	Calculation error	Set again.

Note: If OL (stall prevention) occurs during auto tuning, auto tuning cannot be performed.

[Optional Setting of Motor Constants]

The motor constants (Pr. 82, Pr. 90 to 94) may either be set as appropriate by reading and changing the data measured by auto tuning, or without using the auto tuning data:

Setting the motor constants by reading and changing the auto tuning data

<Operation procedure>

1. Change the set value of Pr. 77 "parameter write disable selection" to "801". Only when the settings of Pr. 80 and Pr. 81 are other than "9999", the parameters of the motor constants (Pr. 82, Pr. 90 to 94) can be displayed.

Though the parameters (Pr. 83 to 99) other than the motor constants (Pr. 82, Pr. 90 to 94) may also be displayed, they are to be set by the manufacturer and must therefore be set carefully without mistake.

2. Set Pr. 71 "applied motor" as indicated below:

Standard motor: Set "4". Constant-torque motor: Set "14".

3. In the parameter setting mode, read the following parameters and set the required values (Note 1):

Parameter Number	Name	Setting Range (Note 4)	Minimum Setting Increment	Factory Setting
Pr. 90	Motor constant R1	0 to ****, 9999	1.	9999
Pr. 91	Motor constant R2	0 to * * * * , 9999	1	9999
Pr. 92	Motor constant L1	0 to * * * * , 9999	1	9999
Pr. 93	Motor constant L2	0 to * * * * , 9999	1	9999
Pr. 94	Motor constant X	0 to * * * * , 9999	1	9999
Pr. 82	Motor constant exciting current	0 to * * * * ; 9999	1	9999

4

the state applies of

4. Return the setting of Pr. 77 to the original value.

	Only when the settings of Pr. 80 and Pr. 81 are other than "9999" (magnetic flux vector control is selected), Pr. 82, Pr. 90 to 94 can be read.
2.	Set "9999" in Pr. 82, Pr. 90 to 94 to use the standard motor constants (including the constant- torque motor).
e^{-2} (e^{-2}	Set "3" (standard motor) or "13" (constant-forque motor) in Pr. 71 to use the motor constants measured by auto tuning. If "4" or "14" has been set in Pr. 71 and the motor constants changed the original data measured by auto tuning remain changed.
	The motor constants measured by auto tuning have been <u>converted into internal data (****)</u> . When setting the motor constants, see the following setting example: Setting example:
	When the Pr. 90 "motor constant R1" value displayed is 2516 and it is desired to increase the Pr. 90 value slightly (5%), set 2642 (i.e. $2516 \times 1.05 = 2641.8$) in Pr. 90. (The value displayed has been converted into internal data for internal use. Hence, there is no significance if an optiona value is simply added to the displayed value.)

The motor constants of Pr. 92 and 93 may either be entered in [Ω] or [mH]. Check the unit of the motor constants before starting the setting operation.

• Entering the motor constants of Pr. 92 and 93 in [Ω]

<Operation procedure>

1. Change the set value of Pr. 77 "parameter write disable selection" to "801". Only when the settings of Pr. 80 and Pr. 81 are other than "9999", the parameters of the motor constants (Pr. 90 to 94) can be displayed. Though the parameters (Pr. 82 to 99) other than the motor constants (Pr. 90 to 94) may also be displayed, they are to be set by the manufacturer and must therefore be set carefully without mistake.

an an the second

2. Set Pr. 71 "applied motor" as indicated below:

		Star Connection Motor	Delta Connection Motor	n de la companya de Norma de la companya d
	Standard motor	5	6	
Set value	Constant-torque motor	15	16	la de la la la contra de la constance de la con La constance de la constance de

3. In the parameter setting mode, read the following parameters and set the required values:

 Pr: No.	Name	Setting Range	Minimum Setting	Factory Setting
Pr. 90	Motor constant r1	0 to 10Ω, 9999	0.001Ω	9999
Pr. 91	Motor constant r2	0 to 10Ω, 9999	0.001Ω	9999
Pr. 92	Motor constant x1	0 to 10Ω, 9999	0.001Ω	9999
Pr. 93	Motor constant x2	0 to 10Ω, 9999	0.001Ω	9999
Pr. 94	Motor constant xm	0 to 500Ω, 9999	0.01Ω	9999

4. Set Pr. 84 "rated motor frequency" with reference to the following table:

Pr. No.	Name	Range	Increment	Factory Setting
Pr. 84	Rated motor frequency	50 to 120Hz, 9999	0.01Hz	9999

5. Return the setting of Pr. 77 to the original value.

- Note: 1. Only when the settings of Pr. 80 and Pr. 81 are other than "9999" (magnetic flux vector control is selected), Pr. 90 to 94 can be read.
 - 2. Set "9999" in Pr. 90 to 94 to use the standard motor constants (including the constanttorque motor).
 - 3. If the "star connection" or "delta connection" selected in Pr. 71 does not match the actual motor, proper magnetic flux vector control will not be carried out.

- Entering the motor constants of Pr. 92 and 93 in [mH] <Operation procedure>
- 1. Change the set value of Pr. 77 "parameter write disable selection" to "801". Only when the settings of Pr. 80 and Pr. 81 are other than "9999", the parameters of the motor constants (Pr. 90 to 94) can be displayed. Though the parameters (Pr. 82 to 99) other than the motor constants (Pr. 90 to 94) may also be displayed, they are to be set by the manufacturer and must therefore be set carefully without mistake.
- 2. Set Pr. 71 "applied motor" as indicated below:
 - Standard motor: Set "0".
 - Constant-torque motor: Set "1".
- 3. In the parameter setting mode, read the following parameters and set the required values:

Pr. No.	Näme	Setting Range	Minimum Setting Increment	Factory Setting
Pr. 90	Motor constant r1	0 to 10Ω, 9999	0.001Ω	9999
Pr. 91	Motor constant r2	0 to 10Ω, 9999	0.001Ω	9999
Pr. 92	Motor constant x1	0 to 1000mH, 9999	0.1mH	9999
Pr. 93	Motor constant x2	0 to 1000mH, 9999	0.1mH	9999
Pr. 94	Motor constant x	0 to 100%, 9999	0.1%	9999

4. Set Pr. 84 "rated motor frequency" with reference to the following table:

Pr. No.	Name	Range	Increment	Factory Setting
Pr. 84	Rated motor frequency	50 to 120Hz, 9999	0.01Hz	9999
	the strength of the first			

5. Return the setting of Pr. 77 to the original value.

Note: 1. Only when the settings of Pr. 80 and Pr. 81 are other than "9999" (magnetic flux vector control is selected), Pr. 90 to 94 can be read.

2. Set "9999" in Pr. 90 to 94 to use the standard motor constants or constant-torque motor constants.

Be careful as the motor may run suddenly.

1997 - 1995 -

and the second sec

De Porte al the state

المراجع بالمراجع بال 1999 - المراجع بالمراجع بالمرا 1999 - مراجع بالمراجع بالمراجع

3. A

an an an an an an Argana. An Arganaiste an Arganaiste Campel (1997) Car

ित्तुका क्षेत्र करने केल्

1.6

s .

When auto tuning is used in vertical lift applications, there is a possibility that a load may drop due to torque shortage.

4.6 **PROGRAMMED OPERATION FUNCTION**

In programmed operation, automatic operation is performed under the control of the internal timer in accordance with the desired time of day, running frequency and direction of rotation set in advance.


4.6.1 Preparation

Wiring

Setting of operation mode and output terminals (Pr. 79, Pr. 76)

지 편이 가는 공유

To perform programmed operation, set "5" (programmed operation) in Pr. 79 "operation mode selection" and "3" (programmed operation output) in Pr. 76 "alarm code output selection".

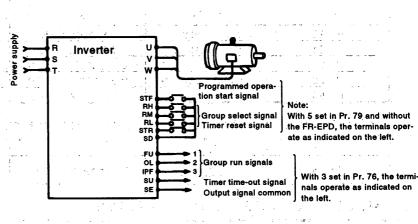

When "5" (programmed operation) is set in Pr. 79, the following terminals are made valid and invalid and are used for programmed operation:

Valid Terminals	Invalid Terminals	Terminals Used
RES	AU	STF
MRS	STOP	STR
RT	No. 2	RH
ОН	No. 4	RM
······································	No. 1	RL
	JOG	

Note: When the battery pack for programmed operation (FR-EPD) is fitted, note that the terminals used for programmed operation are not as indicated above. (For details, see the option instruction manual.)

During programmed operation, the inverter cannot be operated in any other operation mode. When the programmed operation start signal (STF) and timer reset signal (STR) are ON, the operation mode cannot be switched between PU operation and external operation. When "5" is set in Pr. 79, the following functions are unavailable if the corresponding inboard option is fitted:

- (1) Orientation control
- (2) 12-bit digital input
- (3) PI control

Programmed operation time unit selection (Pr. 200)

Set the time unit for programmed operation. Select either of "minute/second" and "o'clock/minute" in Pr. 200.

Set Value	Description
0 (factory setting)	Minute/second unit (voltage monitor)
1	O'clock/minute unit (voltage monitor)
2	Minute/second unit (reference time of day monitor)
3	O'clock/minute unit (reference time of day monitor)

Note: When 2 or 3 is set in Pr. 200, the reference time-of-day monitor screen is displayed instead of the voltage monitor screen.

Setting of reference time of day (Pr. 231)

The FR-A201E has an internal timer (RAM). When the reference time of day is set in Pr. 231, programmed operation is started at this time of day.

(1) Setting range

The time unit depends on the set value of Pr. 200.

Pr. 200 Set Value	Pr. 231 Setting Range	Pr. 200 Set Value	Pr. 231 Setting Range
0 (factory setting)	Max. 99 minutes 59 seconds	2	Max. 99 minutes 59 seconds
1	Max. 99 o'clock 59 minutes	3	Max. 99 o'clock 59 minutes

Note: The reference time-of-day timer starts the timing of the reference time of day when both the start signal and group select signal are entered. Set the reference time of day in Pr. 231 when both signals are on.

(2) Resetting the reference time of day

The reference time of day is cleared (returns to "0") by switching on the timer reset signal (STR) or resetting the inverter (see page 10-1). Note that the reference time-of-day value set in Pr. 231 is also reset to "0".

(3) Timer accuracy


Instantaneous error: ±0.16s

•Cumulative error: ±50ppm (according to the accuracy of the crystal oscillator)

FR-A201E independent error: Max. 4.5s per day (24Hr×60×60×50ppm=4.32s)

4.6.2 **Program Setting (Pr. 201 to 230)**

The rotation direction, running frequency and start time of day are defined as one point and every 10 points are grouped into three. Pr. 201 to Pr. 230 are used for this setting. Note that when the setting of Pr. 200 has been changed independently, the units of Pr. 201 to 230 change (the numerals do not change).

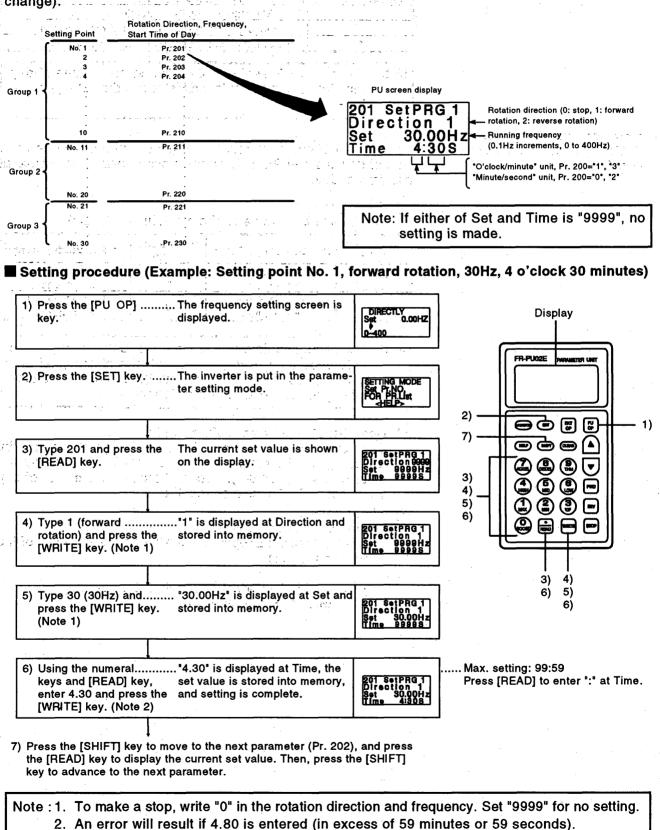


Operation pattern	renting and a second
and a second and a s	na provinsia Provinsia
	an a

Assuming that operation has been programmed as indicated in the following table, the operation pattern is as shown in the figure below:

No.	Operation	Parameter Setting
1	Forward rotation, 20Hz, 1 o'clock 0 minutes	Pr. 201=1, 20, 1:00
2	Stop, 3 o'clock 0 minutes	Pr. 202=0, 0, 3:00
. 3 .	Reverse rotation, 30Hz, 4 o'clock 0 minutes	Pr. 203=2, 30, 4:00
. 4	Forward rotation, 10Hz, 6 o'clock 0 minutes	Pr. 204=1, 10, 6:00
5	Forward rotation, 35Hz, 7 o'clock 30 minutes	Pr. 205=1, 35, 7:30
6	Stop, 9 o'clock 0 minutes	Pr. 206=0, 0, 9:00

<Operation pattern>

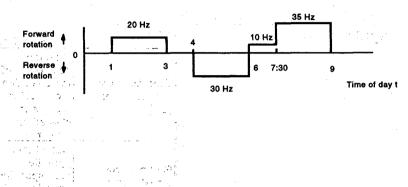

Pr. No.	Name	Range	Increments/ Unit	Factory Setting	Remarks
200	Programmed operation minute/second selection	0 to 3	1	0	0-minute/second unit/ voltage monitor 1-o'clock/minute unit/ voltage monitor 2-minute/second unit/ reference time of day monitor 3-o'clock/minute unit/ reference time of day monitor
201 to 230	Programmed operation	0 to 2	1	9999	Rotation direction setting 0-stop, 1-forward rotation, 2-reverse rotation
230	³⁰ program setting	0 to 400Hz	0.1Hz		Frequency setting
		0 to 99:59	Minutes or seconds		Time of day setting
231	Timer setting	0 to 99:59	_	0	Reference time-of-day timer (RAM) (Note1)

Note: 1.2 When both the start signal and group select signal are entered, the set value of Pr. 231 "timer setting" returns to "0". Set the optional time of day with both signals on. Note that if the start signal and group₹ select signals are entered after setting the optional time of day, the Pr. 231 set value returns to "0" again.

2. Note that when the setting of Pr. 200 has been changed independently, the units of Pr. 231 and Pr. 201 to 230 change.

3. When 2 or 3 is set in Pr. 200, the reference time-ofday monitor screen is displayed instead of the voltage monitor screen.

4.6.3 Details of the Functions

	Para	am	ete	rs เ	isec	ł			5.55	
			;	54	2 4 1 ¹ 1		1.5	$\mathcal{N}_{i}^{(i)}$	÷,	
			i	•						!
		۰.			in se	. • • •				*
		2.2								1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1
•	•	." • 1	•			۰.			- 1-1	1900) 74 1929 - 7
·		2		•			: •			
			·		'	· - ·	;		- 1	
							•	6	н. На стра	an a

۰.,

Input signals	Name	Description	Signal Level	Remarks
un in der Steungereichten eine Geb	Group select signal	Used to select the		May also be driven by
	(RH (group 1) RM (group 2) RL (group 3)	group for programmed operation.	Photocoupler isolated	transistor. When ic=10mA, Vec<0.5V should be satisfied.
	Terminal reset signal (STR)	Input to zero the reference time of day.	Photocoupler isolated	
	Programmed operation start signal (STF)	Input to start programmed operation.	Photocoupler isolated	

Name	Description	Signal Level	Rema	rks
Time-out signal Inverter terminal (SU)	Output on completion of the operation of the selected group and cleared on timer reset.	Open collector output (isolated)	Permissible load 24VDC, 0.1A	Only when Pr
Group select signal Inverter terminal (FU, OL, IPF)	Output during operation of corresponding group's program and cleared on timer reset.	Open collector output (isolated)	Permissible load 24VDC, 0.1A	when Pr 76=3

1.51

4.6.4 Operation

Output signals

Ordinary operation

i enti

an area to call

and an oral of the

Na e

. .

1

ō.,

After completion of all preparations and settings, turn on the desired group select signal (any of RH (group 1), RM (group 2) and RL (group 3)), then turn on the start signal (STF). This causes the internal timer (reference time of day) to be reset automatically and the operation of that group to be performed in sequence in accordance with the settings. When the operation

of the group ends, a signal

collector signal of SU is

is output from the time-out

output terminal. (The open

turned on.)

يوبغت المحافي م

land the second

Start signal	
Group 1 RH -	
Inverter output frequency	11 12 13 14 15 16
Time-out	Setting of group 1
sional (SU)	

Note that the operation is not started if the timer reset (STR) is on.

Note: Use the programmed operation function with "5" set in Pr. 79. Programmed operation will not be performed if any of the group select signals is switched on during PU operation or data link operation.

Multi-group select operation

When two or more groups


are selected at the same start signal time, the operations of the Group 1 RH selected groups are exe- Group 2 RM cuted in sequence of inverter output group 1, group 2 and group 3.

For example, if group 1 Group 1 select signal (FU) and group 2 have been Group 2 select signal selected, the operation of group 1 is first carried out, and after that operation ends, the reference time of day is reset, the operation of group 2 is started, and the time-out signal (SU) is output after the operation of group 2 ends.

1. T

化二丁基苯基丁基代 法




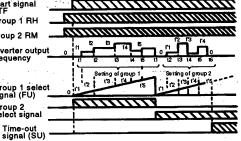

en poeta esper

R	epe	ate	d	ope	ra	tio	n	1. A.A.		· •
								11		
		+			•		e" -	Ϊ.	;	٠.

To repeat the operation of the same group, reset the timer using the time-out signal as shown below.

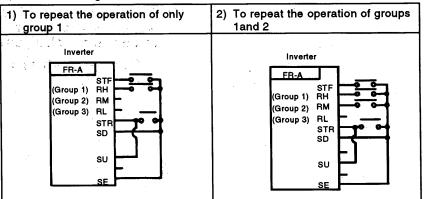

Note: If the inverter is powered down, then up (including a power failure or an instantaneous power failure) during the execution of the programmed operation, the internal timer is reset and the inverter does not restart if the power is restored. To resume the operation, turn the programmed operation start signal (terminal STF) off, then on again. (At this time, the reference time of day is zeroed. When it is required to set the reference time of day, switch the start signal on before setting.)

4.6.5 Programmed Operation Battery Backup (FR-EPD option)

To continue programmed operation at the occurrence of an instantaneous power failure, install this unit (FR-EPD) and start programmed operation.

Operation at occurrence of instantaneous power failure


- Power failure period (1) When a power failure has occurred, operation is contin- Power supply ued as shown on f3 <u>f</u>4 the right with the f5 f2 operation during Inverter output the power failure frequency period eliminated. The internal timer Setting of this period for programmed is eliminated. operation continues timing.
- (2) If the group selected has been changed during the power failure, the operation of the group selected is started from the beginning after the power is restored.
- (3) The battery is guaranteed for 10 years. If the BAT.E lamp is lit, change the battery.
- (4) The operation is not performed if the power is restored when or after the time-out signal is output.
- (5) If the power is restored after a long power failure period, programmed operation is not resumed. Perform group selection and time setting again.

failure period

"0" or "2" (minute/second selection).

30 days when Pr. 200 = "1" or "3" (o'clock/minute selection)

4.7 5-POINT FLEXIBLE V/F CHARACTERISTIC

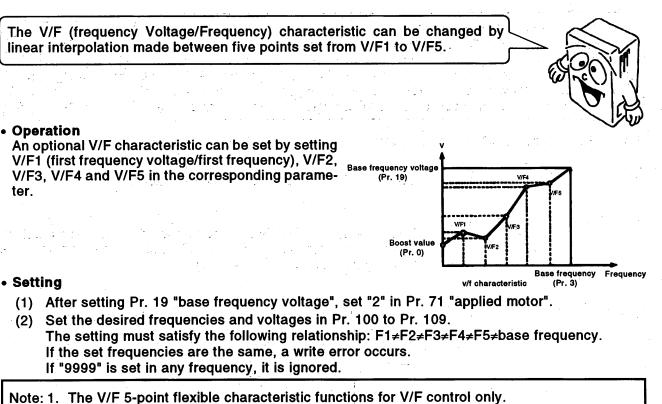

- 2. The V/F 5-point flexible characteristic does not function when Pr. 60 (intelligent mode selection) is selected.
- 3. The frequency voltage may be set optionally between 0 and 1000V, but output voltage is clamped at the base frequency voltage if output frequency is beyond the base frequency.
- 4. Pr. 19 (base frequency voltage) must be set. (When Pr. 19 = 9999, Pr. 71 cannot be set to 2 (5-point flexible V/F characteristic).)
- 5. If "2" is set in Pr. 71, Pr. 47 (second V/F (base frequency)) does not function.
- 6. When "2" is set in Pr. 71, the electronic overcurrent protection is calculated for a general-purpose motor.


A CONTRACTOR OF	Applied Motor Selection (Pr. 7	i) = other than 2	Applied Motor Selection (Pr. 71) = 2						
Parameter Number	Function Name	Setting Range	Function Name	Setting Range	Minimum Increments	Factory Setting			
Pr. 100	BCD input (offset)	0 to 400Hz	V/F1 (first frequency)	0 to 400Hz, 9999	0.01	9999			
Pr. 101	BCD input (gain)	0 to 400Hz, 9999	V/F1 (first frequency voltage)	0 to 1000V	0.1	0			
Pr. 102	Binary input (offset)	0 to 400Hz	V/F2 (second frequency)	0 to 400Hz, 9999	0.01	9999			
Pr. 103	Binary input (gain)	0 to 400Hz, 9999	V/F2 (second frequency voltage)	0 to 1000V	0.1	0			
Pr. 104	BCD/binary selection	0, 1, 2, 3, 9999	V/F3 (third frequency)	0 to 400Hz, 9999	0.01	9999			
Pr. 105	Speed feedback range	0 to 400Hz, 9999	V/F3 (third frequency voltage)	0 to 1000V	0.1	0			
Pr. 106	Feedback gain	0 to 100	V/F4 (fourth frequency)	0 to 400Hz, 9999	0.01	9999			
Pr. 107	Stop position command selection	0, 1, 9999	V/F4 (fourth frequency voltage)	0 to 1000V	0.1	0			
Pr. 108	Orientation speed	0 to 30Hz	V/F5 (fifth frequency)	0 to 400Hz, 9999	0.01	9999			
Pr. 109	Creep speed	0 to 10Hz	V/F5 (fifth frequency voltage)	0 to 1000V	0.1	0			

V/F1 to 5 setting range

Note: The set values of Pr. 100 to Pr. 109 set when Pr. 71 is other than "2" are stored internally and remain unchanged if the set values are written with "2" set in Pr. 71. When the inboard option is added with "2" set in Pr. 71, the parameters set when Pr. 71 is other than "2" are made valid and the option operates with these parameters.

4.8 PU OPERATION INTERLOCK FUNCTION AND EXTERNAL SIGNAL-BASED OPERATION MODE SWITCHING FUNCTION

The PU operation interlock function allows PU operation to be interlocked depending on the ON-OFF of the terminal MRS signal. The external signal-based operation mode switching function allows the operation mode to be fixed depending on the ON-OFF of the terminal RH signal. These functions prevent the inverter from not starting operation under external command if the operation mode is left unswitched from the PU operation mode.

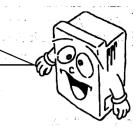

4.8.1 PU Operation Interlock Function

Setting method

Set "7" in Pr. 79 "operation mode selection".

PU operation interlock signal

The input signal MRS is assigned as the PU operation interlock signal. (When "7" is set in Pr. 79, MRS automatically operates as the PU operation interlock signal.)

Functions

n de contrata. Se contrata de la

• In the PU operation interlock mode, the following functions are made valid:

, program press

Set Value	Terminals MRS-SD	Function, Operation
	ار به مرد د. منابع	 Output stopped during external operation.
	Connected	• Switchable to the PU mode.
	· · · · · · · · ·	 Parameter setting can be changed in the PU mode.
7		PU operation allowed.
	Disconnected	 Forces the operation mode to be switched to the external operation mode.
	Disconnected	 External operation allowed.
		 Switching to the PU operation mode disabled.

The following table lists the functions and operations performed by switching on (connecting)/off (disconnecting) the external signal (across terminals MRS):

Ope	ration	Terminals	Mode	Status	Parameter	Remarks
Mode	Status	MRS-SD	Switching		Write	
	Stop	Connected ↓ Disconnected	Forcibly switched to the external operation mode. (Note 1)	Remains stoppēd.	Enable ↓ Disable	 Unswitchable to the PU operation mode. Note 1: Switched independently of the external start signal.
PU	Running	Connected. ↓ Disconnected	Forcibly switched to the external operation mode. (Note-1)	If the frequency setting and start signals of exter- nal operation are on, opera- tion is performed accordingly.	Enable ↓ Disable (Note 2)	Unswitchable to the PU operation mode. Note 2: Limited to parameters that may be rewritten during operation.
	Stop	Disconnected ↓ Connected	Remains in the external operation mode. (Note 3)	Remains stopped.	Disable ↓ Disable	 Switchable to the PU operation mode. Note 3: Output stopped.
	Stop	Connected ↓ Disconnected	Remains in the external operation mode.	Remains stopped.	Disable ↓ Disable	• Unswitchable to the PU operation mode.
Exter- nal		Disconnected ↓ Connected	Remains in the external operation mode. (Note 3)	Running ↓ Output stop	Disable -↓ Disable	• Unswitchable to the PU operation_mode.
	Running	Connected ↓ Disconnected	Remains in the external operation mode.	Output stop ↓ Run (Note 4)	Disable ↓ Disable	 switchable to the PU operation mode. Note 4: If the fre- quency setting signal is on, operation is per- formed accordingly.

•	
	 Note: 1. When the signal across terminals MRS and SD is switched on and the value of Pr. 79 is then changed to other than 7 in the PU operation mode, that signal functions as the ordinary signal (output stop), not as the edit enable signal. Also, as soon as the value of Pr. 79 is changed, the ordinary mode switching is carried out. 2. When Pr. 79 = 7, the link operation (computer link, PC link) function cannot be used. Also, the inverter is put in the external operation mode if Pr. 125 = 1 (link mode at power on).
	3. If the signal across STF or STR and SD is on, the external operation mode cannot be switched to the PU operation mode when the signal across MRS and SD is on.
	 When 7 is set in Pr. 79 and the signal across terminals MRS and SD is switched on and is then switched off during PU operation, the inverter is switched to the external operation mode independently of the external terminal (STF, STR) signal state. Therefore, when the signal across terminals MRS and SD is switched off with either of the STF and STR signals on, the motor is run in the external operation mode. The ordinary MRS function is invalid for the PU opera- tion mode.
	 6. The above description all applies to a case where Pr. 17 = 0 or 1 (MRS terminal normally disconnected). When Pr. 17 = 2 or 3, ON changes to OFF and OFF changes to ON in the above table and description. 7. When the PU operation mode is forcibly switched to the external operation mode, the PU is internally reset once to secure the monitor screen.
	 8. The above function is not available for the FR-PU01E and "7" cannot be written to Pr. 79. 9. At the occurrence of any alarm, press the STOP key
	in the PU operation mode to reset the inverter. The inverter cannot be reset in the external operation mode and must be reset in the PU operation mode.

4.8.2 External Signal-Based Operation Mode Switching Function

1.01

43

1.15

,		
	method	
Setting	metnoa	

Set "8" in Pr. 79 "operation mode selection".

External signal-based operation mode switching signal The input signal RH is assigned as the external signal-based operation mode switching signal. (When "8" is set in Pr. 79, RH automatically operates as the external signal-based operation mode switching signal.)

Functions

1. .

. .

Children Distance State

Charles (Construction)
 State (Construction)
 State (Construction)
 State (Construction)

i e el segundad. Secolomento el

and a set of the state of the set of the set

na an taona an taon Ang kaona an taona an

a da anti-

1,34,611 - 2612

12.776


 In the external signal-based operation mode switching mode, the following functions are made valid:

Set Value	Terminals RH-SD	Fixed Mode	Remarks	
	Connected	External operation mode	Cannot be switched to the PU operation mode.	
8	Disconnected	PU operation mode	Cannot be switched to the external operation mode.	

Connection of RH-SD in the PU operation mode forces the inverter to switch to the external operation mode. Disconnection of RH-SD switches the inverter to the PU operation mode. Note that this switching can be done only during an inverter stop and <u>cannot</u> be done during operation.


- Note: 1. Setting "8" in Pr. 79 changes the function of terminal RH (three-speed setting (high speed)) to the operation mode switching function. At this time, the function of terminal RH (three-speed setting (high speed)) is invalid.
 2. This function is not available for the EP-PI I01E paragement.
 - 2. This function is not available for the FR-PU01E parameter unit.

4.9 STOP-ON-CONTACT CONTROL

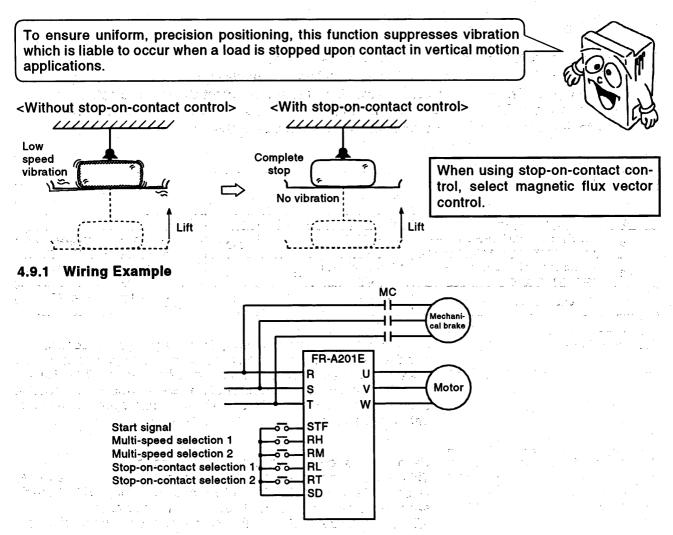

4.9.2 Operation Example (external mode, multiple speeds (3 speeds))

To ensure accurate positioning at the upper limit of a lift, stop-on-contact control causes a mechanical brake to engage while a motor is developing a holding torque to keep a load in contact with a mechanical stopper or the like.

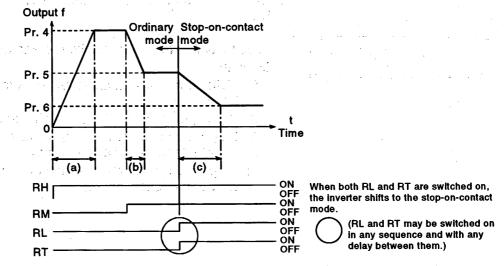

• The inverter enters the stop-on-contact mode when both the RT and RL terminals are switched on with 5 or 7 set in Pr. 96 "torque control selection". In this mode, operation is performed at the frequency set in Pr. 6 "multi-speed setting (low speed)" independently of the preceding speed. Pr. 96 = 5: Stop-on-contact control

Pr. 96 = 7: Stop-on-contact control + load torque high-speed frequency control

4.9.3 Settina

- (1) Select magnetic flux vector control. (Refer to page 14-1.)
- (2) Set 701 in Pr. 77 "parameter write disable selection". Pr. 96 can be accessed.
- (3) Set "5" or "7" in Pr. 96 "torque control selection". (Stop-on-contact control is selected.)
- When the RL and RT signals are switched on, the inverter shifts to stop-on-contact control میں ہے۔ محکمہ ایک ایک میں ایک م
- (4) Refer to the following function explanations and set the parameters:

Parameter setting

Parameter Number	Description	Setting Range	Minimum Setting Increment	Factory Setting	Remarks
6	Multi-speed setting (low speed)	0 to 400Hz	0.01Hz	10Hz	
82	Exciting current low-speed multi- plying factor for a stop on contact	0 to 1000%, 9999	_ 1%	9999	9999: Current is not compensated for by multiplying factor.
83	PWM carrier frequency for a stop on contact	0.7 to 14.5kHz, 9999	0.1kHz	9999	9999: Carrier frequency is as set in Pr. 72.
96	Torque control selection	0, 5, 6, 7	1.	0	Set 5 or 7 to select a stop on contact.

Pr. 6 Multi-speed setting (low speed)

Used to set the output frequency for stop-on-contact control. The frequency set should be as low as possible (about 2Hz). If it is set to more than 30Hz, the operating frequency will be 30Hz. When stop-on-contact control is to be used during PLG feedback control, PLG feedback control is made invalid when the inverter enters the stop-on-contact control mode.

2.1.1

Pr. 82 "exciting current lowspeed multiplying factor for a stop on contact"

Pr. 83 "PWM carrier fre-

د. وراقت داریکه اموان کاری موال کارک راید محرال دهم مانده

ta anti-tang anti-tang at 1997 - Santa Santa 1997 - Santa Santa

and the state of the second state of the secon

quency for a stop on contact"

This parameter may be set (may also be set during operation) when Pr. 80 ≠ 9999, Pr. 81 ≠ 9999, and Pr. 96 = 5 or 7. Usually set a value between 130 and 180% in this parameter. When 9999 is set in Pr. 82, the current is not compensated for. * * *

Used to set a PWM carrier frequency for a stop on contact. This parameter may be set when Pr. 96 = 5 or 7 and only applies when the output frequency is 3Hz or less. When 9999 is set in Pr. 83, the carrier frequency is as set in Pr. 72.

Used to switch from one function to another. Set value

Used to set a force for stop-on-contact control.

- 0: Multi-speeds + automatic restart after instantaneous power failure
- 6: Multi-speeds + load torque high-speed frequency control
- 5: Stop-on-contact control + multi-speeds + automatic restart after instantaneous power failure
- 7: Stop-on-contact control + multi-speeds + load torque highspeed frequency control

رافح وماأتها التحاليا الا

A substitution to the interval of the substitution of

Pr. 96 "torque control selection"

1. S. J. K

19-2

는 것 없는 것은 것 같은 것 같이 다. 이라는 것 것 같은 것 것은 고관 것은 이것은 것 고관 같은 것 같은 것 같은 것 같은 것 같은 것

يدعدها الأديا

Operation Mode (External)	Ordinary Operation		Stop-on-Cor	ntact Control	Remarks
RL, RT terminals	RL RT Either is OFF		RL	RT	Remarks
Main function			ON	ON	
Output frequency for a stop on contact	Multi-sp 0 to 5V, 4 to 20m	0 to 10V	Pr. 6 "low-speed free	quency"	
Exciting current low- speed multiplying factor			The current is compo multiplying factor (0 82 before RL and R	to 1000%) set in Pr.	When RL and RT are switched on, Pr. 49 (second stall prevention operation frequency) is invalid.
Carrier frequency	Pr. 72 (0.7 to 1	4.5kHz)	Pr. 83 (0.7 to 14.5kHz, 999	9)	

• Frequencies set in the stop-on-contact control mode (Pr. 96 = 5 or 7) (In the external operation mode)

The frequencies set by multiple selection of the input terminals (RH, RM, RL, RT, JOG/OH) are listed below:

	Selec	ted	Tern	ninals			Stop-on-Contact	
RH	RM	RL	RT	JOG/OH	Set Frequency	° ₽.	Control Function	Remarks
0					Speed 1 (high speed)	Pr. 4		
	0	·			Speed 2 (middle speed)	Pr. 5		
		0			Speed 3 (low speed)	Pr. 6		and a second second Second second
			0		According to 0-5V, 0-10V, 4-20mA			
				0	Jog frequency	Pr. 15		
0	0				Speed 6	Pr. 26		Middle speed when Pr. 26 = 9999
0		0			Speed 5	Pr. 25		Low speed when Pr. 25 = 9999
0			0		Speed 1 (high speed)	Pr. 4		
0		:		0	Jog frequency	Pr. 15		
	0	0			Speed 4	Pr. 24		Low speed when Pr. 24 = 9999
	0		0		Speed 2 (middle speed)	Pr. 5		
	0			0	Jog frequency	Pr. 15		
		0	0		Speed 3 (low speed, stop- on-contact frequency)	Pr. 6	0	
		0		0	Jog frequency	Pr. 15		
			0	0	Jog frequency	Pr. 15		
		0	0	0	Jog frequency	Pr. 15		·
	0		0	0	Jog frequency	Pr. 15		
	0	0		0	Jog frequency	Pr. 15		
	0	0	0		Speed 3 (low speed, stop- on-contact frequency)	Pr. 6	O	
0			0	0	Jog frequency	Pr. 15		
0		0		0	Jog frequency	Pr. 15		
0		0	0		Speed 3 (low speed, stop- on-contact frequency)	Pr. 6	O	
0	0			0	Jog frequency	Pr. 15		· · · · · · · · · · · · · · · · · · ·
0	0		0		Speed 6	Pr. 26		Middle speed when Pr. 26 = 9999
0	0	0	· .		Speed 7	Pr. 27		Low speed when Pr. 27 = 9999
	0	0	0	0	Jog frequency	Pr. 15		
0		0	0	0	Jog frequency	Pr. 15		· .
0	0		0	0	Jog frequency	Pr. 15		
0	0	0		0	Jog frequency	Pr. 15		
0	0	0	0		Speed 3 (low speed, stop- on-contact frequency)	Pr. 6	O	
0	0	0	0	0	Jog frequency	Pr. 15		
					According to 0-5V, 0-10V, 4-20mA			

 ${}^{\bullet}$ ${}^{\bigodot}$ indicates that the function is selected.

Note: 1. O indicates that the terminal is on.

- 2. Indicates that the remote setting function is not selected. (The remote setting function disables stop-on-contact control.)
- 3. The selection of the 12-bit digital speed (inverter with FR-EPA or EPE) makes the above list invalid.

Note that when both RL and RT are on, the frequency is as set in Pr. 6 and stop-on-contact control is exercised.

- 4. JOG/OH in the above list indicates the jog function (Pr. 17 = 0, 2).
- (When Pr. 17 = 1 or 3, JOG/OH in the list is regarded as off.)
- 5. The jog frequency has the highest priority.

Precautions

.

.

арана. Парала

1. Pr. 96 should be accessed after 701 is set in Pr. 77.

· · · · · · · · · · · · ·

•••••

n en en ar An an an


.

- 2. If the setting of the exciting current low-speed multiplying factor for stop on contact is too large, the overcurrent (OCT) alarm is liable to occur and/or the machine may vibrate in a stop-on-contact state.
- 3. Unlike the servo lock function, the stop-on-contact function cannot be used to hold a load at a stop for an extended period of time.


The continuation of stop-on-contact control may cause the motor to overheat, a mechanical brake should be used to hold the load immediately after a stop.

ی ایک در ایسانی از این شراف ایک $(\gamma,\gamma,\gamma)^T$

4.10 LOAD BASED FREQUENCY CONTROL FUNCTION

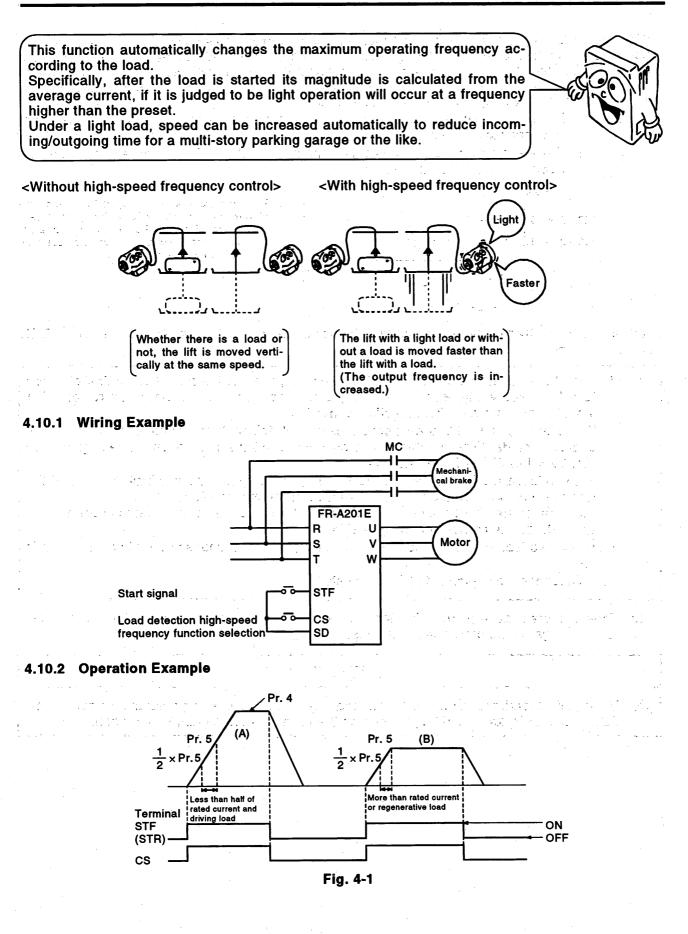

- When operation is performed with 6 or 7 set in Pr. 96 "torque control selection" and the CS terminal (load detection high-speed frequency function selection) switched on, the inverter varies the maximum frequency automatically as shown below between the settings of Pr. 4 "multi-speed setting (high speed)" and Pr. 5 "multi-speed setting (middle speed)" according to the magnitude of an average current during acceleration from half the setting of Pr. 5 to the frequency set in Pr. 5.
 - Example: 1. If the average current is less than half the rated current of the inverter, the maximum frequency is Pr. 4 as in A in Fig. 4-1.
 - 2. If the average current is more than the rated current of the inverter, the maximum frequency is Pr. 5 as in B in Fig. 4-1.

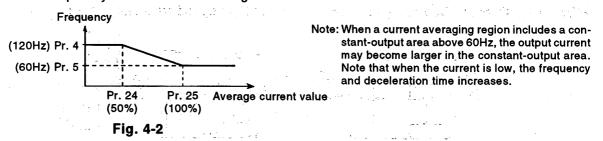

In this example, the frequency varies according to the current, e.g. 60Hz at a 100% current and 120Hz at a 50% current.

- Note: 1. With 6 or 7 set in Pr. 96 "torque control selection", the function of the CS terminal changes to a load torque high-speed frequency control feature and the automatic restart after instantaneous power failure function is inactive.
 - 2. With 6 or 7 set in Pr. 96 "torque control selection", this feature is valid only in the external operation mode. Note that this feature does not function when the remote setting function (Pr. 59 = 1 or 2) has been selected.
 - 3. When this feature is selected (Pr. 96 = 6 or 7), the output frequency limit is 120Hz. If the frequency set is more than 120Hz, the output frequency is 120Hz. Also, the carrier frequency setting range is 1.1 to 14.5kHz. If its setting is between 0.7 and 1.0kHz, the carrier frequency is 1.1kHz.
 - 4. When this feature is selected (Pr. 96 = 6 or 7), the fast-response current limit function is invalid.
 - 5. This function is implemented for every start.

Note: When a current averaging region includes a constant-output area, the output current may become larger in the constant-output area.

of them deputiently.

Under a light load, the frequency may increase up to 120Hz, creating a hazardous condition. Adequate interlocks should be provided on the machine before starting operation.

4.10.3 Setting

- (1) Set 701 in Pr. 77 "parameter write disable selection", Pr. 96 is accessible.
- (2) Set "6" or "7" in Pr. 96 "torque control selection". When the CS terminal is switched on, the inverter shifts to the load torque control mode. (Load based frequency control is selected.)
- (3) Refer to the following function explanations and set the parameters:

Parameter setting

Parameter Number	Description	Setting Range	Minimum Setting Increment	Factory Setting
4	Multi-speed setting (high speed)	0 to 400Hz	0.01Hz	60Hz
5	Multi-speed setting (middle speed)	0 to 400Hz	0.01Hz	30Hz
24	High-speed setting maximum current value	0 to 200%	0.1%	50%
25	Middle-speed setting minimum current value	0 to 200%	0.1%	100%
26	Current averaging range	0 to 400Hz, 9999	0.01Hz	9999
27	Current averaging filter constant	1 to 4000	1	. 16

Pr. 4 "multi-speed setting (high speed)" Pr. 5 "multi-speed setting (middle speed)"

• Pr. 4 is used to set the high-speed (light load) for load based frequency control, and Pr. 5 is used to set the low-speed (standard load) frequency. (Refer to Fig. 4-2.)

ي الم يقدم الأربي ال برجا الم يقدم الم الم الم

.

- Pr. 24 "high-speed setting maximum current value" Pr. 25 "middle-speed setting minimum current value"
- Used to set the maximum and minimum current values for high and middle speeds. (Refer to Fig. 4-2.) and a second second
- Pr. 26 "current averaging range" Pr. 27 "current averaging filter constant"
- By setting a value other than 9999 in Pr. 26 "current averaging range", currents during acceleration from (Pr. 26 × 1/2)Hz to (Pr. 26)Hz can be averaged.
- Pr. 27 "current averaging filter constant" is used to set the time constant of a filter relative to the output current. (Time constant $[ms] = 0.5 \times Pr. 27$ and the factory setting is 8ms.) Increasing the set value stabilizes the current but deteriorates response performance.

the second that is here

机合调度 法知道的 法保证 化电子电子

and a second s

and the second second second

• Frequencies set in the load based frequency control mode (Pr. 96 = 6, 7) The frequencies set by multiple selection of the load based frequency control selection terminal (CS) and multi-speed terminals (RH, RM, RL) are listed below:

Т	erminals	Selecte	d	- Set Frequency			
CS	RH	RM	RL	Set Frequency			
0				Under load based frequency control			
	0			Speed 1 (high speed) Pr. 4			
		0		Speed 2 (middle speed) Pr. 5			
· · · ·	· · ·		0	Speed 3 (low speed) Pr. 6			
0	0			Speed 1 (high speed) Pr. 4			
0	~	0		Speed 2 (middle speed) Pr. 5			
0		. .	0	Speed 3 (low speed) Pr. 6			
	0	0	• •	Speed 6 Pr. 26			
	0		0	Speed 5 Pr. 25			
	·- •- ·	0	0	Speed 4 Pr. 24			
0	0	Ō		Speed 6 Pr. 26			
0		0	Ο .	Speed 4 Pr. 24			
	0	0	0	Speed 7 Pr. 27			
0	0		0	Speed 5 Pr. 25			
0	0	0	0	Speed 7 Pr. 27			
			4 4	Setting by terminals 1, 2, 4, JOG			

Note: 1. O indicates that the terminal is on.

- 2. Indicates that the inverter is in the external operation command mode and the remote setting function is not selected.
- 3. Valid when Pr. 96 = 6 or 7. (When Pr. 96 = 0 or 5, the CS terminal acts as the automatic restart after instantaneous power failure function.
- 4. When 9999 is set in Pr. 24 to 27 (multi-speeds 4 to 7) when Pr. 96 = 0 or 5, speeds 4 to 7 are invalid.
- 5. The multi-speeds override the main speeds (across terminals 2-5, 4-5, 1-5).
- 6. The selection of the 12-bit digital speed input (inverter with the FR-EPA or EPE) makes the above list invalid. (The 12-bit digital speed input has the highest priority.) (Note that the CS terminal is valid.)
- 7. Jog operation has higher priority than the above list.

• Function list (The following features function in the external operation mode.)

Pr. 96	Load Based Frequency Control (CS)	Stop-on-Contact Control (RL, RT)	Multi-Speed (Speed 7) (RH, RM, RL)	Automatic Restart after Instantaneous Power Failure (CS)
0	×	×	0	0
5	×	0	0	0
6	0	×	0	×
7	0	0	0	×

O: Indicates that the feature is valid.

وبراد فالارد الأدادة

Restrictions on setting of 5, 6 or 7 in Pr. 96 Under the following conditions, the functions available when 5, 6 or 7 is set in Pr. 96 are not valid: • PU operation • Programmed operation • PU + external combined operation • PI control (with FR-EPD or EPH inboard option) • Remote setting function mode

- Orientation control (with FR-EPA inboard option)
- Jog operation (PU or external operations)

DETECTED SPEED CORRECTION 4.11 FOR PLG FEEDBACK CONTROL


When the inboard option (FR-EPA, EPB, EPC) is used with the inverter for PLG feedback control, this function converts and corrects the number of pulses from a speed detector (encoder) of that is not 1024PPR to 1024PPR.

> contention approximation of the statistical probability of the statistical statistic าศรีพระพุณศาสตรรณ ที่สุดสุดสุดสาวการสร้างได้ได้ และสารปกรณ์ที่จะ

 $\sum_{i=1}^{n-1} e^{-i\omega_i t}$

- 化试验检测量 化试剂 化过分输出 名应到后

4.11.1 Wiring Example

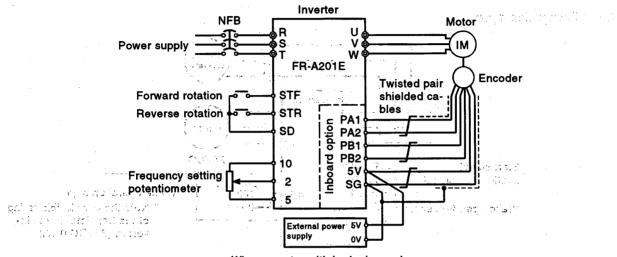

When a motor with brake is used, brake release timing must be noted.

್ಷ ಕ್ಷೇತ್ರ ಸಂಧ್ಯಾನ ಕ್ಷೇತ್ರಿ ಕಾರ್ಯಕರ್ಷದಲ್ಲಿ ಪ್ರದೇಶಕ್ಕೆ ಅವರ ವಿಶೇಷಣೆ ಬಿಂಗಡಿ ಕ್ಷೇತ್ರದ ಈ ಕಾರ್ಯಕ್ರಿ ಕಾರ್ಮಿಕ್ರಮ ಗಾಹಿತಿ ಕಾರ್ಯಕರ್ಷ 4.11.2 (Operation) ಎಂದರ್ಶಕ್ಷ ಕ್ಷೇತ್ರಗಳ ಗಾಹಿಕಾಗ ಗಾಹಿಕಾಗ ಎಂದು ಕ್ಷೇತ್ರಿ ಗಿತ್ತಿಗಳು ಕಾರ್ಕ್ರಿಯ ಕಾರ್ಕ್ರಿಕ್ಕೆ ಕ್ರೀತ್ರಿಗಳ ಕ್ಷೇತ್ರಿಗಳು ಸಂಕ್ರೆಯಾಗ ಗಾಹಿತಾಗಿ ಕಾರ್ಯಕ್ರಿಯಾಗಿ ಕ್ಷೇತ್ರಗಳ ಗಾಹಿಕಾಗ ಎಂದು ಕ್ಷೇತ್ರಿಗಳು ಕ್ರೀತ್ರಿಗಳು ಕಾರ್ಕ್ರಿಕ್ಕೆ ಕ್ರೀತ್ರ

ನ ಗೆ ಗೇವಿಕೆ ಇದ್ರಗಳಲ್ಲಿ By setting the conversion factor K found by the following formula in Pr. 84, control is possible when a non-1024PPR encoder is used.

en la Renarda de la completa de la comuna de l Nota Renarda K ≓11024/N Brassesse de la Comuna (de Comuna de Comuna de La comuna de la comuna de la comuna de l where, N = number of pulses of the speed detector used [PPR]

Example: When a 500PPR encoder is used, set 2.048 (=1024/500) in Pr. 84.

Note : Pr. 84 is inaccessible when the inboard option (FR-EPA, EPB, EPC) is not fitted en**to the inverter.** And he is North and the constraint of the constraint of the second states of the likeli kara karana kara dadi dincegen dee lai ku naita ya ilar litee

ina in the communitation was structured to the structure in the structure of 4.11.3 Specifications

and the straight of

The speed of the detected encoder input signal is multiplied by the factor to make correction.

84	PLG detection speed correction factor	0 to 10	0.001	0	0: No correction
Parameter Number	Description	Setting Range	Minimum Setting Increment	Factory Setting	Remark

Note The number of motor poles must be set in Pr. 37 "speed display". A generative state Example: For a 4-pole motor, set 4 in Pr. 37.




21 - 1

4.12 BRAKE SEQUENCE

This function of the inverter outputs a mechanical brake operation timing signal for vertical motion applications. This function allows safe operation as it prevents a drop during start due to a mechanical brake operation timing fault or an overcurrent alarm at a stop.

This feature may be used whether a mechanical brake operation confirmation signal is input to the inverter or not. This function is valid only when magnetic flux vector control is selected.

4.12.1 Wiring Example

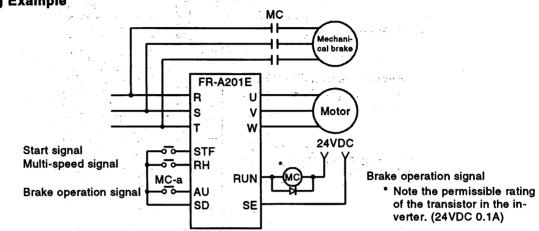


4.12.2 Operation Example


- At start: When the start signal is input to the inverter, the starting frequency is output. On arrival at a given frequency (Pr. 85), the inverter outputs the brake release signal (RUN). In a given time (Pr. 88) after the input of the brake operation completion signal (AU or STOP) (Note), the output frequency is increased to the preset speed.
- At stop : When the inverter has decelerated to a given frequency (Pr. 89), the brake release signal (RUN) is switched off. In a given time (Pr. 90) after the brake operation signal (AU or STOP) (Note) has switched off, the inverter output is switched off.

Note: When the mechanical brake operation confirmation signal is not input, the brake operation completion signal is replaced by the brake release signal.

- * This function is valid when 7 or 8 is set in Pr. 60 "intelligent mode selection", the inverter in the external operation mode, and magnetic flux vector control is selected.
- 1) When the brake sequence function is selected by setting 7 in Pr. 60 and the mechanical brake operation confirmation signal is input

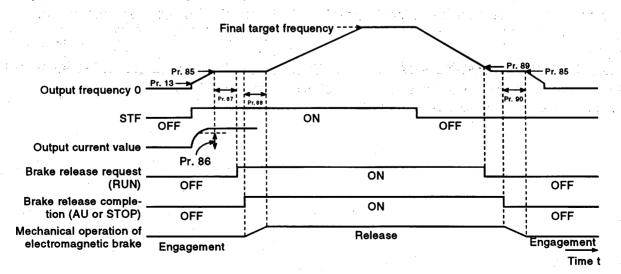

2) When the brake sequence function is selected by setting 8 in Pr. 60 and the mechanical brake operation confirmation signal is not input

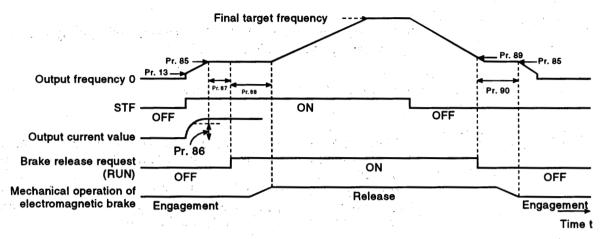

4.12.3 Setting

- (1) Select magnetic flux vector control. (Refer to page 14-1.)
- (2) Set "7" or "8" in Pr. 60 "intelligent mode selection". (See below.)
- Note that when 7 or 8 is set in Pr. 60, automatic restart after instantaneous power failure does not function. (Pr. 57 and 58 do not function.)

Pr. 60	Description
7	Brake sequence is selected and the mechanical brake operation confirmation signal is input.
8	Brake sequence is selected and the mechanical brake operation confirmation signal is not input.

Note: To ensure more positive brake sequence control, it is recommended to set 7 in Pr. 60 (mechanical brake operation confirmation signal input).

(3) Refer to the following function explanations and set the parameters:

Parameter setting

Parameter Number	Description	Setting Range	Minimum Setting Increment	Factory Setting	Remarks
30	Brake sequence error display erasure	0		0	0: No error
60	Intelligent mode selection	0 to 8	1	0	7, 8: Brake sequence
85	Brake release frequency	0 to 30Hz	0.01Hz	3Hz	May be set only when Pr. 89 ≥ Pr. 85.
86	Brake release current	0 to 200%	0.1%	50%	Rated inverter current = 100%
87	Brake release current detection time	0 to 2 seconds	0.1 seconds	0.3 seconds	
88	Brake operation time at start	0 to 5 seconds	0.1 seconds	0.3 seconds	
89	Brake engagement frequency	0 to 30Hz	0.01Hz	6Hz	May be set only when Pr. 89 ≥ Pr. 85.
90	Brake operation time at stop	0 to 5 seconds	0.1 seconds	0.3 seconds	
91	Deceleration detection function selection	0.1	1	0	0: Not selected, 1: Selected
92	Brake release completion signal selection	0.1	1	0	0: AU, 1: STOP. Valid only when Pr. 60 = 7.
93	Overspeed detection frequency	0 to 30Hz, 9999	0.01Hz	9999	9999: Overspeed is not detected.

• Pr. 85 to 91 are accessible and valid when Pr. 60 = 7 or 8, and Pr. 92 is accessible and valid when Pr. 60 = 7. (Pr. 85 to 92 are valid in the ordinary mode.)

Pr. 93 is accessible and valid when Pr. 60 = 7 or 8, the inverter is fitted with the FR-EPA, EPB or EPC inboard option, and Pr. 105 \neq 9999.

Pr. 85 "brake release fre- quency"	Set (rated motor slip frequency) + about 1.0Hz.
Pr. 86 "brake release current"	If this setting is too low, the load is liable to gravity-drop at start. Generally, set about 50% to 90%.
Pr. 87 "brake release current detection time"	Generally, set about 0.1 to 0.3 seconds.
Pr. 88 "brake operation time at start"	• When Pr. 60 = 7 (the mechanical brake operation confirmation signal is input), set mechanical delay time until when the brake is released.
	• When Pr. 60 = 8 (the mechanical brake operation confirmation signal is not input), set (mechanical delay time until when the brake is released) + about 0.1 to 0.2 seconds.
Pr. 89 "brake engagement fre- quency"	Generally, set (Pr. 85 setting) + 3 to 4Hz.
Pr. 90 "brake operation time at stop"	• When Pr. 60 = 7 (the mechanical brake operation confirmation signal is input), set (mechanical delay time until when the brake is engaged) + 0.1 seconds.
	• When Pr. $60 = 8$ (the mechanical brake operation confirmation signal is not input), set (mechanical delay time until when the brake is engaged) + about 0.2 to 0.3 seconds.
Pr. 91 "deceleration detection function selection"	 When deceleration is not normal during deceleration operation with 1 set in Pr. 91, the inverter results in an alarm (display: E.OPT, definition: Pr. 30 = 2), the output is shut off, and the brake release request (RUN terminal) is switched off. When 0 is set in Pr. 91, the alarm is not output.
Pr. 92 "brake release comple- tion signal selection"	Used to select the brake release completion signal input terminal. (For full information, refer to page 22-1.)
Pr. 93 "overspeed detection frequency"	When (detected frequency) - (output frequency) goes larger than the Pr. 93 setting during PLG feedback control, the inverter results in an alarm (display: E.OPT, definition: Pr. $30 = 1$), the output is shut off, and the brake release request (RUN terminal) is switched off.
radiolitzado Borna Beclauda e. Antes	ار المربيع المربية المربية من منهم المربية المربية المربية المربية المربية المربية المربية المربية المربية الم المربية المربية المربية المربية منهم منهم المربية المربية المربية المربية المربية المربية المربية المربية المرب
ار این از محمد با این است. از این از محمد با این این این محمد با است. ۱۹۰۰ این این ا	 A second s
a service and a service of the servic Service of the service of the service Service of the service	and share the second for the second
แหน่หมัดเป็นเป็นแสมชาติ 19	
n an	
그는 것 같은 바람이 많이 가지 않는 것 같아. 가지 않는 것 같은 것 같이 많이	그는 그는 것은 것 같아요. 그는 사람은 방법은 것 같은 물질에서 한 것 같은 것 같이 나라 나라 가지 않는 것 같이 한 것 같아요.
e na protection data data data data data data data dat	(1947) An an Alassa an

4.12.4 Terminals Used

	In Ordiname	In Brake Sequence Mode							
Terminal	In Ordinary Mode	Pr. 60 = 7	(with mechanical	Pr. 60 = 8 (without mechanical brake confirmation signal)					
RUN	Inverter running	Brake rele	ease request	Brake release request					
AU	Current input selection	Pr. 92=0	Brake release completion signal	Pr. 92=1	Current input selection	Current input selection			
STOP	Start self-holding selection	FI. 92=0	Start self-holding selection	FI. 92=1	Brake release completion signal	Start self-holding selection			

* Brake release completion (AU or STOP terminal)

Set Pr. 92 "brake release completion signal selection" to make the brake release completion signal terminal selectable.

- (1) When Pr. 92 = 0, the brake release completion signal is input to the AU terminal. 4 to 20mA DC current input cannot be used for operation. (Pr. 904 and Pr. 905 are invalid.)
- (2) When Pr. 92 = 1, the brake release completion signal is input to the STOP terminal. The start self-holding function is deactivated.

Hence, +

- Note: 1. Pr. 92 is accessible and valid when Pr. 60 = 7.
 - 2. When 0 is set to each digit of Pr. 40 (output terminal assignment), the standard RUN signal is output from each terminal.

4.12.5 Protective Function

If any of the following faults occurs in the brake sequence mode, the inverter results in an alarm, the output is shut off, and the brake release command (RUN terminal) is switched off.

On the inverter LED and PU02 screen, "E.OPT (inboard option alarm)" is displayed.

The details of the alarm can be confirmed on the display of Pr. 30 "brake sequence error display erasure".

Pr. 30 Display	Description
1	Indicates that (detected frequency) - (output frequency) go larger than the Pr. 93 setting during PLG feedback control. (Overspeed detection frequency)
2	Indicates that deceleration is not normal in deceleration operation during PLG feedback control. (Set Pr. 91 to select whether this function is activated or not.) (Except stall prevention operation)
3	Indicates that the brake release command (RUN terminal) was switched on during a motor stop. (Gravity-drop prevention function)
4	Indicates that the brake release request signal is not switched on more than 2 seconds after the input of the operation command (forward or reverse rotation).
5	Indicates that the brake release completion signal is not switched on more than 2 seconds after the brake release request signal is switched on.
6	Indicates that the brake release completion signal was switched off midway though the inverter switched on the brake release request.
7	Indicates that the brake release completion signal is not switched off more than 2 seconds after the brake release request signal was switched off at a stop.

.....

......

22 – 4

.

MEMO


. ---... 1.1 . a. - ' í er . æ., -• • í.)

. ...

5. PROTECTIVE FUNCTIONS

This chapter presents detailed information on the "protective functions" of the FR-A201E "inverter with built-in power return function". Always read the precautions and instructions in this chapter before using the equipment.

 If any fault has occurred in the inverter, the corresponding protective function is activated to bring the inverter to an alarm stop and automatically give the corresponding alarm indication on the PU display and inverter LED. When the protective function is activated, reset the inverter in accordance with page 10-1.

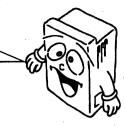

5.1.1 Alarms

Display				Description		Alarm
Parameter Unit	Inverter LED	Name		Description		Output (Across B-C)
OC During Acc	E.DC /	During acceleration	ut-off	If the inverter output current reaches or exceeds 200% of the rated current, the protective circuit is activated to stop the inverter. When any main cir- cuit device is overheated, the protective circuit is also activated to stop the output of the inverter.		
Stedy Spd Oc	E.0C2	During constant speed	urrent sh			Provided (Open)
Oc During Dec	E.DC.3	During deceleration During stop	Overci		3	
Ov During Acc	E.Du /	During acceleration	vervolt- off	If the converter output voltage is excessive due to the regenerative energy from the motor, the protec- tive circuit is activated to stop the transistor output.		
Stedy Spd Ov	E.002	During constant speed	Regenerative overvolt- age shut-off	This may also be activated by a surge voltage generated in the power supply system.	4	Provided (Open)
Ov During Dec	E.Ou3	During deceleration During stop	Regene a(· · · ·
Motor Overload	E FH (Motor protection)	Overload shut-off (electronic overcuri	rent	The electronic overcurrent protection in the in- verter detects inverter overload or motor overheat and activates the protective circuit to stop the in- verter output. When a multi-pole motor or more than one motor is driven, for example, the motor(s) cannot be protected by the electronic overcurrent	5	Provided (Open)
Inv. Overload	E, THT (Inverter protection)	protection)		protection. Provide a thermal relay in the inverter output circuit. In this case, setting the electronic overcurrent protection value to 0A activates the in- verter protection only. (Activated at a current 150% or more of the rated current.)	6	(0001)
Inst. Pwr. Loss	E. IPF	Instantaneous power failure protection		If an instantaneous power failure has occurred in excess of 15msec (this applies also to inverter in- put power shut-off), this function is activated to stop the inverter output. (If the power failure is within 15msec, the control circuit operates without fault. If the power failure persists for more than about 100msec, the protective circuit is reset.)		Provided (Open)
Under Voltage	آنال. E	Undervoltage protection		If the inverter power supply voltage has dropped, the control circuit cannot operate properly, result- ing in the decrease in motor torque and/or the in- crease in heat generation. To prevent this, if the power supply voltage drops below about 150V (300V for the 400V series), this function stops the inverter output.	8	Provided (Open)
Br. Cct. Fault	Е. ЬЕ	Power return circuit alarm detection		When the power return circuit is faulty or the regen erative electronic thermal relay or other error has occurred, this error display is output and the in- verter output is stopped.		Provided (Open)
Ground Fault	E. GF	Output side ground fault overcurrent protection		If a ground fault current has flown due to a ground fault occurring in the output (load) side of the in- d fault verter, this function stops the inverter output. A		Provided (Open)
OH Fault	E.[]HI	External thermal relay operation		If the external thermal relay for motor overheat pro- tection or the internally mounted temperature relay in the motor has been switched on (relay contacts open), this function stops the inverter output and keeps it stopped. This protection is only provided when "1" or "3" has been set in Pr. 17 "external thermal relay input function".		Provided (Open)

Disp	lay			Alarm	Alarm
Parameter Unit	Inverter LED	Name	Description	Code	Output (Across B-C)
OL is shown (during motor rotation)	E. LIL F (Indicates a) stop due to the activation of the function for a long time	Acceleration/constant- speed stall prevention current limit	If a current greater than 150% of the rated inverter current flows in the motor during acceleration, this function stops the increase in frequency until the load current reduces to prevent the inverter from resulting in overcurrent trip. If a current greater than 150% of the rated inverter current flows dur- ing constant-speed operation, this function also lowers the frequency until the load current reduces to prevent the inverter from resulting in overcur- rent trip. When the load current has reduced below 150%, this function increases the frequency again and accelerates up to the set speed or continues operation.	D	(Not pro- vided. Provided by EOLT display.)
Still Prev STP (at a motor stop)	Deceleration stall prevention	If the brake operating amount has exceeded the specified value due to excessive regenerative en- ergy during motor deceleration, this function stops the decrease in frequency to prevent the inverter from resulting in overvoitage trip. As soon as the regenerative energy has reduced, this function re- duces the frequency again and continues decelera- tion.		(Open)	
Option Fault	E.DPF	Inboard option connection alarm	Stops the inverter output if the dedicated option used in the inverter results in connection (connector) fault during operation.	E	Provided (Open)
Corrupt Memory	E. PE	Parameter storage device alarm	Stops the output if a fault in the EPROM which stores the function set values has occurred.	• F	Provided (Open)
Retry No. Over	E.rEF	Retry count exceeded	If operation cannot be resumed within the number of retry times set, this function stops the inverter output.	F	Provided (Open)
CPU Fault	E.EPU	CPU error	If the operation of the built-in CPU does not end within a predetermined period of time, the inverter self-determines it as alarm and stops the output.	F	Provided (Open)
PU Leave Out	E PUE	Parameter unit disconnection	Stops the inverter output if the parameter unit is disconnected. This protective function is activated when "2" or "3" has been set in Pr. 75 "reset selection/PU disconnection detection".	F	Provided (Open)


Note: When Pr. 60 = 7 or 8, refer to page 22-4.

• To know the operating status at the occurrence of alarm

When any alarm has occurred, the display automatically switches to the indication of the corresponding protective function (error). By pressing the [MONITOR] key at this point without resetting the inverter (see page 10-1), the display shows the output frequency. In this way, it is possible to know the running frequency at the occurrence of the alarm. It is also possible to know the current in the same manner. These values are not stored in memory and are erased when the inverter is reset.

5.1.2 Digital and Actual Characters

The alphanumeric characters and actual characters given in the display examples of this manual.

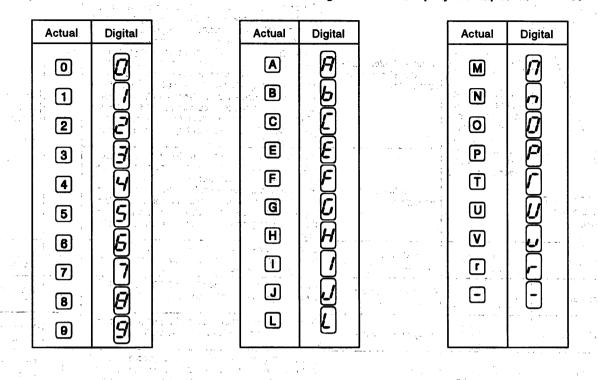

5.1.3 Alarm History (History of Alarm Definitions)

Up to eight most recent alarms (alarm definitions) are stored in memory. To check these, use the help function. For more information, see "5 ALARM HISTORY" on page 7-13.

5.1.4 Erasing the Alarm History (History of Alarm Definitions)

To erase the alarm history (history of alarm definitions), use the help function. For more information. For more information, see "6 ALARM HISTORY CLEAR" on page 7-13.

5.1.5 Alarm Code Output


By setting Pr. 76 (alarm code output selection), an alarm definition can be output as a 4-bit digital signal. This signal is output from the open collector output terminals equipped as standard on the inverter.

Correlation between alarm definitions and alarm codes are as follows. In the table, "0" indicates that the output transistor is off and "1" on (common terminal: SE).

Alarm D	efinition	Inverter	Out	out Termina	al Signal On	/Off	Alarm
(Protective Function)		LED Display	SU	IPF	OL SES	FU	Code
Normal operation			0	0	0	0	0
	During acceleration	E.OC1	.0	0	0	1	1
Overcurrent shut-off	During constant-speed operation	E.OC2	0	0	1	0	2
the second s	During deceleration	E.OC3	0	0	1	1960 - 1	3
Regenerative overvolta	ge shut-off	E.OV1 to 3	0	1	······································	0	4 .
Electronic overcurrent	Motor protection	E.THM	0	1	0	1	5
protector	Inverter protection	E.THT	0	1	1 10 10	0	6
Instantaneous power fa	ailure	E.IPF	´ 0	1	1	î î	7
Undervoltage		E.UVT	1	0	0	0	8
Power return circuit ala	.rm	E. BE	1	0 ·	1	0	Α
Output side ground fau	It/overcurrent	E. GF	1	0	1	1	В
External thermal relay	operation	E.OHT	1	1	0	.0	С
Stall-activated stop	····	E.OLT	1	1	<i>•</i> O	ag af 1 a	D
Inboard option alarm		E.OPT	1	1	1	0	1 - E 1
Parameter storage device alarm		E. PE					· · · · · · · · · · · · · · · · · · ·
Retry count exceeded	E.RET	1	1	1	1	F	
CPU error	E.CPU		•	•	· · · ·		
Parameter unit disconr	nection	E.PUE	•				·. ·

5.2 TROUBLESHOOTING

If any function of the inverter is lost due to a fault, establish the cause and make adjustments in accordance with the following inspection procedure. Contact your sales representative if the corresponding fault is not found below, the inverter has failed, a part has been damaged, or any other fault has occurred.

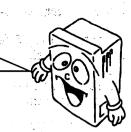

5.2.1 Checking the Parameter Unit Display

The display of the parameter unit is switched as follows to indicate the cause of a faulty operation.

	Display	Cause of Fault	Check Point	Demoster
Parameter Unit	Inverter LED	Cause of Fault		Remedy
OC During Acc	OC1:Overcurrent during acceleration		Acceleration too fast? Check for output short circuit or ground fault. Check for cooling fan stop.	Increase acceleration time. Change fan. Remove obstacle to cooling fan. (Note)
Stedy Spd Oc	OC2:Overcurrent during constant speed	Main circuit device overheat	Sudden load change? Check for output short circuit or ground fault. Check for cooling fan stop.	Keep load stable. Change fan. Remove obstacle to cooling fan. (Note)
OC During Dec	OC3 : Overcurrent during deceleration		Deceleration too fast? Check for output short circuit or ground fault. Check for cooling fan stop. Mechanical brake of motor operate too fast?	Increase deceleration time. Change fan. Remove obstacle to cooling fan. (Note) Check brake operation.
Ov During Acc	OV1 : Overvoltage during acceleration	· · · · · · · · · · · · · · · · · · ·	Acceleration too fast?	Increase acceleration time.
Stedy Spd Ov	OV2 : Overvoltage during constant speed	Overvoltage on DC bus (terminals P-	Sudden load change?	Keep load stable.
Ov During Dec	OV3 : Overvoltage during deceleration	N)	Deceleration too fast?	Increase deceleration time. (Set deceleration time which matches load GD ² .)- Reduce braking duty.
Motor Overload	THM: Overload alarm	Thermal relay for motor	Motor used under overload?	Reduce load. Increase motor and inverter
Inv. Overload	THT : Overload alarm	Thermal relay for inverter		capacities.
Inst. Pwr. Loss	IPF :Instantaneous power failure	Instantaneous power failure	Check the cause of instantaneous power failure.	
Under Voltage	UVT : Undervoltage	Drop of power supply voltage	Large-capacity motor started?	Check power system equipment such as power supply capacity.
Br. Cct. Fault	BE : Power return circuit alarm	Power return circuit alarm	Braking duty too large?	Reduce load GD ² . Reduce braking duty.
Ground Fault	GF : Ground fault overcurrent	Ground fault occurred in output circuit.	Check motor and cables for ground fault.	Remedy ground fault area.
OH Fault	OHT: External thermal relay operation	External thermal relay operated.	Check motor for overheat.	Reduce load and frequency of operation.
Still Prev STP	OLT : Stall prevention	Stall prevention or current limit function activated too long.	Motor used under overload?	Reduce load. Increase motor and inverter capacities.
Option Fault	OPT : Inboard option connection alarm☆	Option and inverter connected improperly.	Check for loose connector.	Securely connect.
Corrupt Memry	PE : Parameter storage device alarm	Storage device (EEPROM) faulty.	Number of parameter write times too many?	Change inverter.
Retry No. Over	RET : Retry count exceeded	Operation could not be resumed within the number of retry times set.	Check cause of alarm occurrence.	
CPU Fault	CPU:CPU error	CPU malfunction		Change inverter.
PU Leave Out	PUE : Parameter unit disconnection	The PU has been disconnected from the connector.	Check that the PU is connected securely.	Securely install the PU.
PU to Inverter comms. Error	0.00 (LED display OK)	•Reset signal ON •Loose connection between PU and inverter*1 •Communication circuit fault	•Check for miswiring to reset terminal. •Check for loose connector.	•Turn the reset signal off. •Securely connect. •Change inverter.
Inv. Reset ON	Err. (LED display fault) Fr-A ——	CPU malfunction *2		•Switch power off, then on. •Switch reset signal on, then off. •Change inverter.

Note: This alarm does not occur if the cooling fan stops, but it will occur to prevent the main circuit devices from overheating by the fan failure.

- *1: The parameter unit display remains unchanged but operation may be performed in the external operation mode.
- *2: If the alarm is kept displayed on the parameter unit LCD and unit LED after remedy, the internal circuit may be faulty. Consult your sales representative.
- \Rightarrow : When Pr. 60 = 7 or 8, refer to page 22-2.

5.2.2 Faults and Check Points

Fault	Typical Check Point
	(1) Checking the main circuit
•	Check that a proper power supply voltage is applied (inverter LED display is lit).
	Check that the motor is connected properly.
	(2) Checking the input signals
	• Check that the start signal is present.
	• Check that both the forward and reverse rotation start signals are not present simultaneously.
	 Check that the frequency setting signal is not zero.
	 Check that the signal across terminals AU-SD is on when the frequency setting signal is 4 to
	20mA.
Motor does not	Check that the output stop signal (across terminals MRS-SD) or reset signal (across RES-SD)
rotate.	is not on.
· · · · · ·	(3) Checking the parameter set values
	Check that the reverse rotation prevention (Pr. 78) is not set.
	• Check that the operation mode (Pr. 79) setting is correct.
	Check that the bias and gain (Pr. 902 to Pr. 905) settings are correct.
	Check that the starting frequency (Pr. 13) set value is not greater than the running frequency.
	• Check that various operational functions (such as three-speed operation), especially the
5	maximum frequency, are not zero.
	(4) Checking the load
n en ser en	Check that the load is not too heavy and the shaft is not locked.
1 .	(5) Others
	Check that alarm code (such as E.OC1) is not displayed on the inverter LED.
Motor rotates in	• Check that the phase sequence of the output terminals U, V and W is correct.
opposite direction.	Check that the start signals (forward rotation, reverse rotation) are connected properly.
·	Check that the frequency setting signal is OK. (Measure the input signal level.)
Speed greatly	Check that the following parameter set values are OK:
differs from the set	Maximum frequency (Pr. 1), minimum frequency (Pr. 2), bias, gain (Pr. 902 to Pr. 905), base
value.	frequency voltage (Pr. 19)
	 Check that the input signal lines are not affected by external noise. (Use of shielded cables)
Acceleration/decel-	Check that the acceleration/deceleration time set value is not too short.
eration is not	• Check that the load is not too heavy.
smooth.	Check that the torque boost set value is not too large to activate the current limit function.
Motor current is	Check that the load is not too heavy.
large.	Check that the torque boost (manual) set value is not too large.
	Check that the maximum frequency set value is OK, i.e. it is not too small.
Speed does not	Check that the load is not too heavy.
increase.	Check that the torque boost set value is not too large to activate the current limit function.
	(1) Inspection of load
e statistica e de la companya de la	Check that the load is not varying.
	(2) Inspection of input signal
· · · · · · · · · · · · · · · · · · ·	(2) Inspection of input signalCheck that the frequency setting signal is not varying.
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others
Speed varies during	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor
Speed varies during operation.	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied moto poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vecto control.
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control.
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied moto poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vecto control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control.
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0.
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77.
	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801
operation.	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage.
operation. PU to inverter	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON.
operation. "PU to inverter comms. error" is	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the PU is connected securely.
operation. "PU to inverter comms. error" is displayed on the	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the PU is connected securely.
operation. "PU to inverter comms. error" is	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON. Check that the PU is connected securely.
operation. "PU to inverter comms. error" is displayed on the PU screen.	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied moto poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vecto control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON.
operation. "PU to inverter comms. error" is displayed on the PU screen.	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied moto poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vecto control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON.
operation. "PU to inverter comms. error" is displayed on the PU screen. Note: Pr- indicate	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied moto poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON. S a parameter.
operation. "PU to inverter comms. error" is displayed on the PU screen.	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied motor poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON. Check that the PU is connected securely.
operation. "PU to inverter comms. error" is displayed on the PU screen. Note: Pr- indicate	 (2) Inspection of input signal Check that the frequency setting signal is not varying. (3) Others Check that the settings of the applied motor capacity (Pr. 80) and the number of applied moto poles (Pr. 81) are correct for the inverter capacity and motor capacity in magnetic flux vector control. Check that the wiring length is within 30m in magnetic flux vector control. Check that the wiring length is OK in V/F control. Remedy: Change the setting of special parameter 97 (Td compensation) to 0. This parameter is displayed only when 801 is set in Pr. 77. Note: Parameters Pr. 82 to 99, which are also displayed simultaneously when 801 is set in Pr. 77, must not be set to protect the inverter from damage. Check that the reset signal (terminals RES-SD) is not ON. S a parameter.

5.2.3 Protective Functions

When any of the protective functions has been activated, switch the power off, then on, or reset the inverter with the reset terminal (RES). (Inverter reset can also be executed in the PU help menu.) Note: For the definitions of the alarm codes, see page 24-1.

Function	Description		Parameter	splay	Alarm	Alarm Outpu
			Unit	Inverter LED	Code	
	If a current greater than 150% of the rated inverter of flows in the motor during acceleration, this function	stops				
-	the increase in frequency until the load current redu					
Acceleration constant-	prevent the inverter from resulting in overcurrent trip rent greater than 150% of the rated inverter current				•	المروري المع
peed stall	during steady (constant-speed) operation, this funct		OL is shown	rnı r		
revention	lowers the frequency until the load current reduces		during motor	EDLſ		
urrent limit	vent the inverter from resulting in overcurrent trip. V	rotation.	(OLT)		Not provided.	
	load current has reduced below 150%, this function	Still Prev STP	(Indicaes a stop	D	Provided by	
	creases the frequency again and accelerates up to t speed and continues operation.	is shown at a	due to the activation of the		EOLT display	
	If the brake operating amount has exceeded the spe	cified	motor stop.	function for a		
Deceleration	value due to excessive regenerative energy during r			long time during		
stall preven-	deceleration, this function stops the decrease in free			constant-speed operation.		
ion	to prevent the inverter from resulting in overvoltage soon as the regenerative energy has reduced, this f					
	reduces the frequency again and continues decelera			يە ئىرى بە		
		During				
		accel-	OC During Acc	E.DC 1	1	
	If the inverter output current reaches or exceeds 200% of the rated current, the protective circuit is	eration				· ··· ·
Overcurrent	activated to stop the inverter. When any main cir-	During	Stedy Spd Oc	E.DC 2	2	Provided
shut-off	cult device is overheated, the protective circuit is	speed				
	also activated to stop the inverter.	During		COCA		1.
		decel-	OC During Dec	E.DC 3	3	
		eration During		a El Color de		
		accel-	Ov During Acc	E.Du 1		
	If the converter output voltage is excessive due to	eration	g	2.00 1		-
Regenerative	the regenerative energy from the motor, the protec-	During		_		
overvoltage shut-off	tive circuit is activated to stop the transistor out- put. This may also be activated by a surge voltage		Stedy Spd Ov	E.Du2	4	Provided
Shut; on	generated in the power supply system.	speed During			ł	
		decel-		E.Ou 3	· ·	
·		eration			· ·	
	If an instantaneous power failure has occurred in ex					e 1944 de la Constante de la Co
	15msec (this applies also to inverter input power sh this function is activated to stop the inverter output					1 11
nstantaneous oower failure	to prevent misoperation. At this time, the alarm outp		Inst. Pwr. Loss	EIPF	-	Provided
protection	tacts are open (across B-C). (If the power failure is		IIISI. FWI. LUSS		7	Provided
	15msec, the control circuit operates without fault. If power failure persists for more than about 100msec			(IPF)		
	tective circuit is reset.)	, uie pro-				
	If the inverter power supply voltage has dropped, th	e control				
	circuit cannot operate properly, resulting in the decr					
Undervoltage protection	motor torque and/or the increase in heat generation vent this, if the power supply voltage drops below a		Under Voltage	EUur	8	Provided
Diorection	150V (300V for the 400V series), this function stops			(UVT)		: .
	verter output.			(011)		
Power return	When the power return circuit is faulty or the regene			Е. ЬЕ		
circuit alarm	electronic thermal relay or other error has occurred,		Br. Cct. Fault		A	Provided
letection	error display is output and the inverter output is sto The electronic overcurrent protection in the inverter			(BE) Motor protection		
• • • • • • •	inverter overload or motor overheat and activates th		Motor	•		
Overload shut-	tive circuit to stop the inverter output. When a multi-		Overload	ЕГНП	5	
off (electronic	motor or more than one motor is driven, for example		· · · · · · · · · · · · · · · · · · ·	(THM)		
overcurrent	motor(s) cannot be protected by the electronic over protection. Provide a thermal relay in the inverter of		· · ·	Inverter		Provided
protection)	cuit. In this case, setting the electronic overcurrent		inv. Overload	protection	6	
· · · · ·	tion value to 0A activates the inverter protection on	y.		<u>E.ſ Hſ</u>	lerĭ.	
	(Activated at a current 150% or more of the rated cu			(ТНТ)		
Output side	If a ground fault current has flown due to a ground f				· ·	· · · · · ·
pround fault	curring in the output (load) side of the inverter, this stops the inverter output. A ground fault occurring a		Ground Fault	E. GF		Drouldod
overcurrent	ground resistance may activate the overcurrent prot		Ground Fault	(GF)	В	Provided
protection	(OC1 to OC3).		1	,	1	1

		Di	splay	Aloum		
Function	Description	Parameter Unit	Inverter LED	Alarm Code	- Alarm Output	
External thermal relay operation	If the external thermal relay for motor overheat protection or the internally mounted temperature relay in the motor has been switched on (relay contacts open), this function stops the inverter output and keeps it stopped. This protection is only provided when "1" or "3" has been set in Pr. 17 "exter- nal thermal relay input" function.	OH Fault	Е.ОНГ (онт)	C	Provided	
Inboard option connection alarm	Stops the inverter output if the dedicated option used in the inverter results in connection (connector) fault. (Note)	Option Fault	Е.ОРГ (ОРТ)	Е	Provided	
Parameter storage device alarm	Stops the output if a fault in the EEPROM which stores the parameter set values has occurred.	Corrupt Memry	<i>E. PE</i>	F	Provided	
Retry count exceeded	If operation cannot be resumed within the number of retry times set, this function stops the inverter output.	Retry No. Over		, F.	Provided	
CPU error	If the operation of the built-in CPU does not end within a pre- determined period of time, the inverter self-determines it as alarm and stops the output.	CPU Fault	E.C.PU (CPU)	- F	Provided	
Parameter unit disconnec- tion	Stops the inverter output if the parameter unit is discon- nected. This protective function is activated only when "2" or "3" has been set in Pr. 75 "reset selection/PU disconnection detection" function.	PU Leave Out	E.PUE (PUE)	s.≓1 F ° s.≓1 F °	Provided	

*: The stall prevention operation current can be set as needed. The factory setting is 150%.

.....

고 말 가 고 말 가 요.

化过度 化过度过度

÷.,

a Malaka ay sa Sana Ar

1.50

Note: When Pr. 60 = 7 or 8, refer to page 22-2.

le and

· · · · · ·


n de la servicia de la superior de la servicia de l

MAINTENANCE AND INSPECTION 5.3

The transistorized inverter is a static unit consisting mainly of semiconductor devices. Daily inspection must be performed to prevent any fault from occurring due to adverse influence by the installation environment, such as temperature, humidity, dust, dirt and vibration, changes in the parts with time, service life, and other factors. · • • 1. H. 12 S. T. M.

ne z na se fi

i de la companya de la

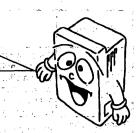

دیدی. مرد مرجق (۲۰۹۹) - صبر اصر مرجع سال

5.3.1 Precautions for Maintenance and Inspection

For 10 minutes after power is switched off, the smoothing capacitor remains at a high voltage. Before accessing the inverter for inspection, make sure that the charge lamp is off. (For the location of the charge lamp, see the terminal bock arrangement on page 27-8.)

n an the second seco Second second

201


- 5.3.2 Check Items
 - - (1) Daily inspections -
 - Check the following:
 - (1) Motor operation
 - (2) Installation environment
 - (3) Cooling system in the second state of the
 - (4) Vibration and noise
 - (5) Overheating and discoloration
 - During operation, check the inverter input voltage using a tester.
 - (2) Periodic maintenance and inspection -
- Check the areas inaccessible during operation and requiring period inspection.
 - (1) Cooling system...... Clean the air filter, etc.
 - (2) Screws and bolts..... Check that they are securely tightened and retighten as necessary.
 - (3) Conductors and insulating materials......Check for corrosion and damage.
 - (4) Insulation resistance..... Measure.
 - (5) Cooling fan, smoothing capacitor, relay....Check and change if necessary.

Note: Have a proper understanding of the definitions of power and alarm indications provided for the transistorized inverter. Also, have a understanding of the settings of electronic overcurrent protection, etc. and record proper set values. (Enter the values into the Customer Set Value section of the "Parameter List" on page 9-1.)

See the next page for the Inspection List.

(3) Insulation resistance test using megger -

- (1) Before performing the insulation resistance test using a megger on the external circuit, disconnect the cables from all terminals of the inverter so that the test voltage is not applied to the inverter.
- (2) For the continuity test of the control circuit, use a tester (high resistance range) and do not use the megger or buzzer.
- (3) For the inverter, conduct the insulation resistance test on the main circuit only as shown on the right and do not perform the test on the control circuit. (Use a 500VDC megger.)

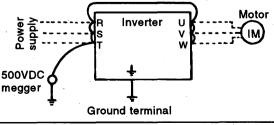

Daily and Periodic Inspection

the difference of the

		and statute concerns	e pe est	Interva	al si e c		and the strength of the	1
Area of Inspection	Inspection Item	Description		Pei	lodic	Method	Criterion	Instrument
Inspection	Ireill	الأعلاج الاستنابة المستراب المهاط الم	Daily	1 year		나는 유민이는 것 같은 북한 가지가 있는	일 : 이 가지 않는 것같은 것	
•	Surrounding environment	Check ambient temperature, humidity, dust, dirt, etc.	0			See note on page 3-1.	Ambient temperature: -10°C to +50°C, non-freezing. Ambient humidity: 90% or less, non-condensing.	Thermometer, hygrometer, recorder
General	Overall unit	Check for unusual vibration and noise.	0			Visual and auditory checks.	No fault.	
	Power sup- ply voltage	Check that main circuit voltage is normal.	. 0	n t <u>a</u> n Tang	Solo antes Regione	Measure voltage across inverter terminals R-S-T.	170 to 242V (323 to 506V) 50Hz 170 to 253V (323 to 506V) 60Hz	Tester, digital multimeter
	General	 Check with megger (across main circuit terminals and ground terminal). Check for loose screws and bolts. Check tor overheat on each part. 		0	0	 Disconnect all cables from inverter and mea- sure across terminals R, S, T, U, V, W and ground terminal with megger. Retighten. Visual check. 	(1) 5MΩ or more. (2), (3) No fault.	500VDC class megger
	Conductors, cables	 (4) Clean. (1) Check conductors for distortion. (2) Check cable sheaths for breakage. 	ra Geografia Straig	0 0		(1), (2) Visual check.	(1), (2) - No fault.	
Main circuit	Terminal block	Check for damage.		0		Visual check	No fault	
•	Smoothing capacitor	 Check for liquid leakage. Check for safety valve projection and bulge. Measure electrostatic capacity. 	00	o		(1), (2) Visual check. (3) Measure with capacity meter.	 (1), (2) No fault. (3) 85% or more of rated capacity. 	Capacity meter
	Relay	 Check for chatter during operation. Check for rough surface on contacts. 	uda Datis	0 0.5		 Auditory check. Visual check. 	(1) No fault. (2) No fault.	
en Maria de las	Resistor	 Check for crack in resistor insulation. Check for open cable. 		0 0 13,11	с. 1954 г.	 Visual check. Cement re- sistor, wire-wound resis- tor. Disconnect one end and measure with tester. 	 No fault. Error should be within ± 10% of indicated resistance value. 	Tester, digital multimeter
Control circuit Protective circuit	Operation check	 Check balance of output voltages across phases with inverter operated independently. Perform sequence protec- tive operation test to make sure of no fault in protective and display cir- cuits. 		0 		 Measure voltage across inverter output terminals U-V-W. Simulatively connect or disconnect inverter protective circuit output terminals. 	 Phase-to-phase voltage balance within 4V (8V) for 200V (400V). Fault must occur because of sequence. 	Digital multimeter, rectifier type voltmeter
Cooling system	Cooling fan	 Check for unusual vibra- tion and noise. Check for loose connec- tion. 	0	0		 (1) Turn by hand with power off. (2) Retighten. 	 Smooth rotation. No fault. 	
Display	Display	(1) Check for LED lamp blown. (2) Clean.	••• 0· ·	0		 Lamps indicate indicator lamps on panel. Clean with rag. 	(1) Check that lamps are lit.	
	Meter	Check that reading is normal.	0	1	1 2 1 2	Check reading of meters on panel.	Must satisfy specified and management values.	Voltmeter, ammeter, etc
Motor	General	 Check for unusual vibra- tion and noise. Check for unusual odor. 	0 0			 Auditory, sensory, visual checks. Check for unusual odor due to overheat, damage, etc. 	(1), (2) No fault.	
	Insulation resistance	Check with megger (across terminals and ground termi- nal).			0	Disconnect cables from U, V, W, including motor cables.	5MΩ or more.	500V megger

Note: The value for the 400V series is indicated in the parentheses.

5.3.3 Replacement of Parts

The inverter consists of many electronic parts such as semiconductor devices. The following parts may deteriorate with age because of their structures or physical characteristics, leading to reduced performance or failure of the inverter. For preventive maintenance, the parts must be changed periodically.

(1) Cooling fan

The cooling fan cools heat-generating parts such as the main circuit semiconductor devices. The life of the cooling fan bearing is usually 10,000 to 35,000 hours. Hence, the cooling fan must be changed every 2 to 3 years if the inverter is run continuously. When unusual noise and/or vibration is noticed during inspection, the cooling fan must be changed immediately.

(2) Smoothing capacitors

A large-capacity aluminum electrolytic capacitor is used for smoothing the DC in the main circuit, and an aluminum electrolytic capacitor is also used for stabilizing the control power in the control circuit. Their characteristics are adversely affected by ripple current, etc. When the inverter is operated in ordinary, air-conditioned environment, change the capacitors about every 5 years. When 5 years have elapsed, the capacitors will deteriorate more rapidly.

Check the capacitors at least every year (less than six months if the life will be expired soon). Check the following:

- 1) Case (side faces and bottom face for expansion)
- 2) Sealing plate (for remarkable warp and extreme crack)
- 3) Explosion-proof valve (for excessive valve expansion and operation)
- 4) Appearance, external crack, discoloration, leakage. When the measured capacitance of the capacitor has reduced below 85% of the rating, change the capacitor. For capacitance measurement, it is recommended to use a handy device available on the market.

(3) Relays

To prevent a contact fault, etc., relays must be changed according to the number of accumulative switching times (switching life).

See the following table for the inverter parts replacement guide. Lamps and other short-life parts must also be changed during periodic inspection.


Part Name	Standard Replacement Interval	Description
Cooling fan	2 to 3 years	Change (as required)
Smoothing capacitor in main circuit	5 years	Change (as required)
Smoothing capacitor on control board	5 years	Change the board (as required).
Relays		Change as required.

Replacement Parts of the Inverter

5.3.4 Measurement of Main Circuit Voltages, Currents and Powers

Measurement of voltages and currents

Since the voltages and currents on the inverter power supply and output sides include harmonics, accurate measurement depends on the instruments used and circuits measured. When instruments for commercial frequency are used for measurement, measure the following circuits using the instruments given on the next page.

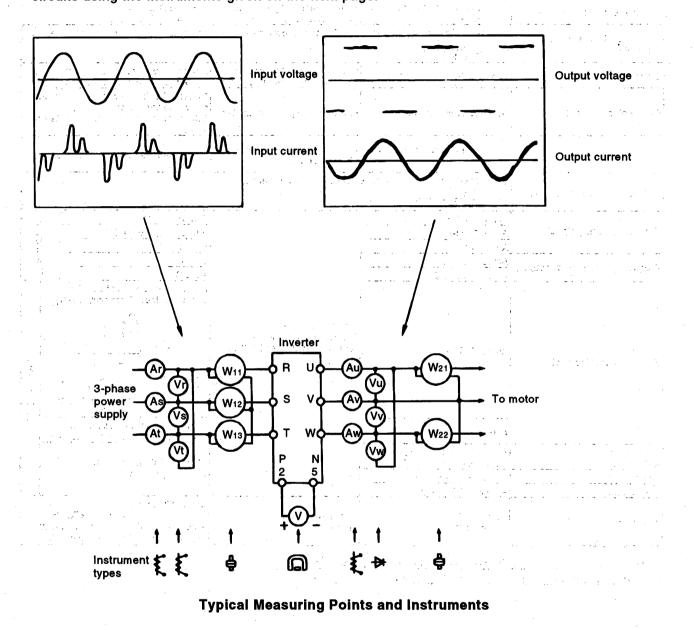

Measuring Points a	nd Instruments
--------------------	----------------

n de la competim Competimenta de la competimenta de

item	Measuring Point	Measuring Instrument	Remarks (Reference Measured Value) •
Power supply voltage V1	Across R-S, S-T and T-R	Moving-iron type AC voltmeter	Commercial power supply 170 to 242V (342 to 506V) 50Hz 170 to 253V (342 to 506V) 60Hz
Power supply side current I	R, S and T line currents	Moving-iron type AC ammeter	
Power supply side power P1	At R, S and T, and across R-S, S-T and T-R	Electrodynamic type single- phase wattmeter	P1=W11+W12+W13 (3-wattmeter method)
Power supply side power factor Pfi	Calculate after measuring power Pf ₁ = <u>P1</u> √3V1 · I1	supply voltage, power supply sid	le current and power supply side power.
Output side voltage V2	Across U-V, V-W and W-U	Rectifier type AC voltmeter (Note 1) (Not moving-iron type)	Difference between phases is within ± 1% of maximum output voltage:
Output side current l2	U, V and W line currents	Moving-iron type AC ammeter	Current should be equal to or less than rated inverter current. Difference between phases is 10% or lower.
Output side power P2	At U, V and W, and across U-V and V-W-	Electrodynamic type single- phase wattmeter	P2 = W21 + W22 2-wattmeter method (or 3-wattmeter method)
Output side power factor Pf2	Calculate in similar manner to p $Pf_2 = \frac{P_2}{\sqrt{3V_2 \cdot I_2}} \times 100\%$	ower supply side power factor.	y y y y y y y y y y y y y y y y y y y
Frequency setting signal	Across 2(+)-5		0 to 5V/0 to 10VDC 5 0 to ± 5V/0 to ± 10VDC 5 4 to 20mADC 8 5VDC 2
	Across 1(+)-5		0 to ± 5V/0 to ± 10VDC
	Across 4(+)-5		4 to 20mADC 5
Frequency setting power supply	Across 10(+)-5		
	Across 10E(+)-5		10VDC
Frequency meter signal	Across FM(+)-SD	Moving-coil type (Tester, etc. may be used) (Internal resistance: 50kΩ or larger)	Approx. 5VDC at maximum fre- quency (without frequency meter)
· · · · · · · · · · · · · · · · · · ·	Across AM(+)-5	and a second	Approx. 10VDC at maximum fre- quency (without frequency meter)
Start signal Select signal	Across STF, STR, RH, RM, RL, JOG/OH, RT, AU-SD		20 to 30VDC when open.
Reset	Across RES(+)-SD		ON voltage: 1V or less
Output stop	Across MRS(+)-SD		<u></u>
Alarm signal	Across A-C Across B-C	Moving-coll type (such as tester)	Continuity check <normal> <fault> Across A-C: Discontinuity Across B-C: Continuity Discontinuity</fault></normal>

Note 1: Accurate data will not be obtained by a tester. * Values in parentheses indicate those for 400V series.

化过去分子


el graduation.

۳<u>.</u>۴۰....

بحواص العربية الرابي المحار الرام

13.1

A 2 °

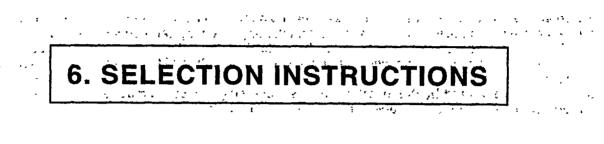

a second second to a set the second · · · · This chapter provides detailed information about "peripheral selection instructions" for the FR-A201E 11 . <u>1</u>2 "inverter with built-in power return function". 1 Always read the precautions and instructions in this ****** chapter before using the equipment. napter before using the equipment.

and a second second

. - -


• : 、、 بالمعترفة والمراجع · · · · · · · · A second to a second to the sec

۲. · 1.5.ι 11

• . . .

.

With the spread of electronic equipment, problems due to noises and leakage tend to increase. Because of its operation principle, the inverter generates noises and may affect adjacent devices. The following noise reduction measures can be taken according to the place of installation, select peripheral devices as required.

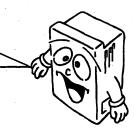

6.1.1 Electrical Noise

There are two types of electrical noise, external noise which cause malfunctioning of the inverter and those radiated from the inverter to cause malfunctioning of a peripheral device. Although the inverters are designed not to be influenced by noise the following general measures must be taken since the inverter is an electronic device which handles weak signals. In addition, since the inverter chops the output at high frequency, the inverter itself is a source of noise. If peripheral equipment is affected by the noise generated by the inverter, noise suppressing measures must also be taken. The noise suppressing measures differ depending on noise propagation route.

1) Basic measures

- Do not run the power cables (I/O cables) and signal cables of the inverter in parallel with each other, do not bundle them.
- Use twisted shield cables for control signal cables and connect the sheathes of the shield cables to terminal SD.
- Ground the inverter, motor, etc. at one point (single point earth).


2) Measures against external noise

When devices which generate noise (magnetic contactors, magnetic brakes, relays, for example) are installed near the inverter, the inverter may malfunction, the following measures must be taken:

- Provide surge suppressors for devices that generate noise.
- Fit line filters to signal cables.
- Ground the shields of the control signal cables with a metal cable clamp.


3) Measures against noises which are radiated by the inverter

Inverter-generated noises are largely classified into those radiated by the cables connected to the inverter and inverter main circuit (I/O), those electromagnetically and electrostatically inducted to the signal cables of the peripheral devices close to the main circuit power supply, and those transmitted through the power supply cables.

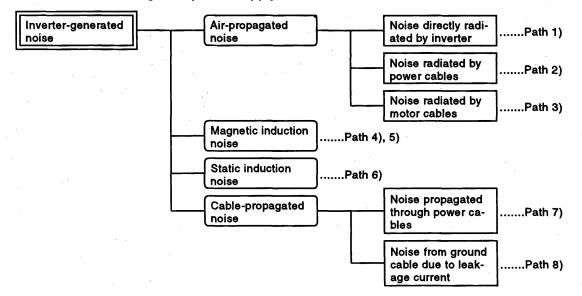


· · · ·	
	5) Telephone
· . ·	
:	
•	
	Motor (IM) Sensor
i Angel State	
in the Children	an an an an Anna an Ann Anna an Anna an
a the co	
Noise Path	Measures
	when devices which handle low-level signals and are susceptible to maitunction due to holse (such a
	When devices which handle low-level signals and are susceptible to malfunction due to noise (such a instruments, receivers and sensors) are installed near the inverter and their signal cables are contained
	instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate
	instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken:
	instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter.
1), 2), 3)	instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter.
1), 2), 3)	instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter.
1), 2), 3)	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and compared to the inverter.
1), 2), 3)	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects.
1), 2), 3)	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce the product of the inverter.
	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects.
1), 2), 3)	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects. When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction noises may be propagated to the signal cables and malfunction devices, the following measures must be taken:
	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects. When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction noises may be propagated to the signal cables and malfunction devices, the following measures must be taken: (1) Install easily affected devices as far away as possible from the inverter.
	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects. When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction noises may be propagated to the signal cables and malfunction devices, the following measures must be taken: (1) Install easily affected devices as far away as possible from the inverter. (2) Run easily affected devices as far away as possible from the inverter. (3) If the signal cables and power cables (inverter I/O cables) run in parallel with each other do not bundle
	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: (1) Install easily affected devices away from the inverter. (2) Run easily affected signal cables as far away as possible from the inverter. (3) Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on not bundle them. (4) Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. (5) Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects. When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction noises may be propagated to the signal cables and malfunction devices, the following measures must be taken: (1) Install easily affected signal cables as far away as possible from the inverter. (2) Run easily affected devices as far away as possible from the inverter. (3) If the signal cables and power cables (inverter I/O cables) run in parallel with each other do not bund them, keep parallel distance as short as possible. (4) Use shielded cables for signal and power cables and run them in individual metal conduits to produce the signal cables as far away as possible from the inverter.
4), 5), 6)	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: Install easily affected devices away from the inverter. Run easily affected signal cables as far away as possible from the inverter. Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on to bundle them. Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects. When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction noises may be propagated to the signal cables and malfunction devices, the following measures must be taken: Install easily affected signal cables as far away as possible from the inverter. When the signal cables and power cables and malfunction devices, the following measures must be taken: Install easily affected signal cables as far away as possible from the inverter. Install easily affected signal cables as far away as possible from the inverter. Run easily affected signal cables as far away as possible from the inverter. It he signal cables and power cables (inverter I/O cables) run in parallel with each other do not bund them, keep parallel distance as short as possible. Use shielded cables for signal and power cables and run them in individual metal conduits to produc further effects. When the power supplies of the peripheral devices are connected to the same power supply as the inverter inverter-generated noise may flow back through the power supply cables and affect the d
4), 5), 6)	 instruments, receivers and sensors) are installed near the inverter and their signal cables are contained the same panel as the inverter or are run near the inverter, the devices may malfunction due to air-propagate noise and the following measures must be taken: Install easily affected devices away from the inverter. Run easily affected signal cables as far away as possible from the inverter. Do not run the signal cables and power cables (inverter I/O cables) in parallel with each other and on to bundle them. Insert line noise filters into supply and motor cables, and radio noise filters into supply to reduce cab radiated noise. Use shielded cables for signal and power cables and run them in individual metal conduits to produce further effects. When the signal cables are run in parallel with or bundled with the power cables, magnetic and static induction taken: Install easily affected devices as far away as possible from the inverter. Use shielded cables are run in parallel with or bundled with the power cables, magnetic and static induction taken: Install easily affected devices as far away as possible from the inverter. Install easily affected signal cables as far away as possible from the inverter. Run easily affected signal cables as far away as possible from the inverter. Run easily affected signal cables as far away as possible from the inverter. In the signal cables and power cables (inverter I/O cables) run in parallel with each other do not bund them, keep parallel distance as short as possible. Use shielded cables for signal and power cables and run them in individual metal conduits to produc further effects. When the power supplies of the peripheral devices are connected to the same power supply as the inverter inverter-generated noise may flow back through the power supply cables and affect the devices, the fo

Data example

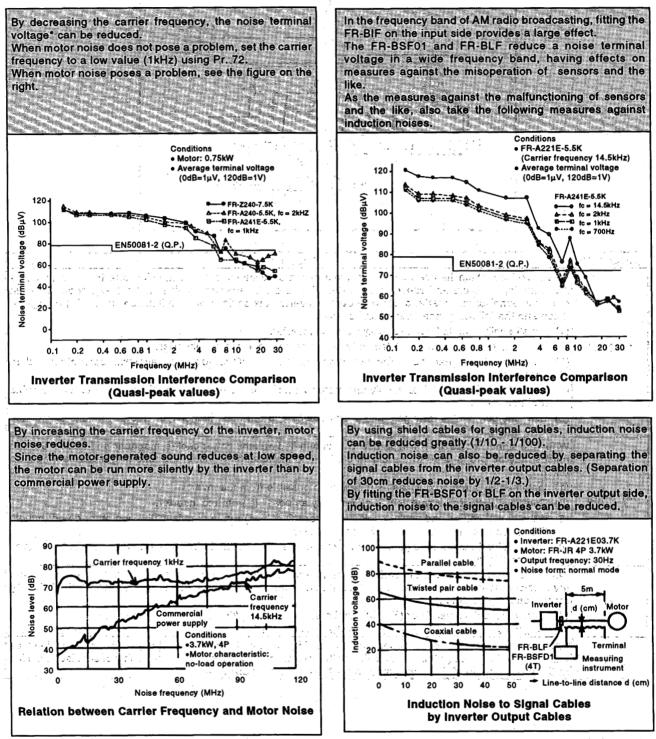

Noise terminal voltage: Represents the magnitude of noise propagated from the inverter to the power supply.

• Example of measures against noises

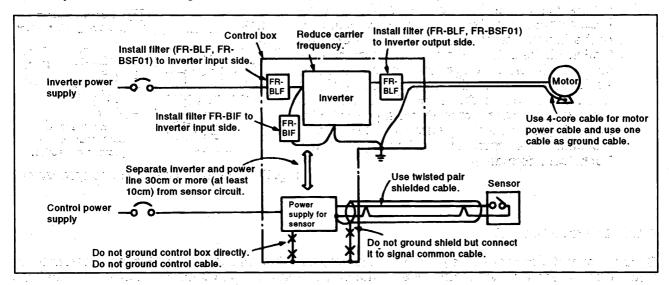

6.1.2 Power Harmonics

The inverter may generate power harmonics from its converter circuit, affecting generators, power capacitors, etc. Power harmonics differ from noise and leakage currents in generation source, frequency band and transmission method. Take appropriate measures according to the following description:

•	Differences	between	harmonics	and	noises	are	listed	below:	2
		<u>_</u>							

Item	Harmonics	Noises				
Frequency	Normally degrees 40 to 50, 3kHz or less	High frequency (several 10kHz to MHz order)				
Environment	To line, power impedance	To space, distance, wiring path				
Quantitative grasp	Theoretical calculation possible.	Random occurrence, quantitative grasp difficult.				
Generated amount	Almost proportional to load capacity.	According to current fluctuation value (larger as switching speed increases)				
Immunity of equipment affected	Specified in the standard of each device	Different according to manufacturer's equipmen specifications.				
Measure example	Install reactor (L).	Increase distance (I).				

Reduction technique

Harmonic currents generated on the power supply side by the inverter differ according to such conditions as the control mode (PWM, PAM), the presence/absence of the power factor improving reactor, and the output frequency and output current of the load.

The appropriate output frequency and output current would be found under the rated load at the maximum operating frequency. The following table lists harmonic current contents generated by the inverter under a 100% load:

Harmonic Current Contents (%)

Inverter Capacity	•	5.5K or More	•	
Harmonic Degree	Without ACL	With Power Factor Im- proving ACL	With Power Factor Im- proving DCL	
Fundamental	86.5	96°×3345	95.5	
5	44.5	24	26	
7	21	9.5	10.5	
11	6.5	3.7	7.1	
13	5.2	3.5	5.2	

Inverter Input Capacity (kVA)

Corresponding Mode	FR-A201							
Output kW	Without ACL	With Power Factor Im- proving ACL	With Power Factor Im- proving DCL					
5.5	12	9.0	8.5					
7.5	17	12	11					
- 11	20	17	16					
15	28	22	20					
18.5	34.5	27.5	25.5					
22	41	33	31					
30	52	44	41 .					
37	66	54	51					
45	80	66	62					
55	100	80	75					

and the second second

et lande fan de lande Same

Note: The power factor improving capacitor and surge suppressor on the inverter output side may be heated or damaged by the harmonic components of the inverter output. Also, as overcurrent protection will be activated due to overcurrent flowing in the inverter, do not install a capacitor and surge suppressor in the inverter output circuit when the motor is driven by the inverter. To improve the power factor, insert a power factor improving reactor in the inverter primary circuit or DC circuit. For more information, refer to the **Technical Information.**

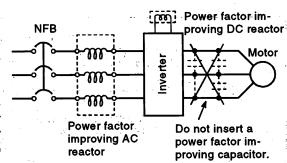


Fig. 5.2 Inverter Power Factor Improvement

Moto

26.2

NV1

æ₩

Earth leakage

circuit breake

NV2

-<u></u>₩ Earth leakage

circuit breaker

6.1.3 Leakage Current

Because of static capacitances existing in the inverter I/O wiring and motor, leakage current flows through them. Since its value depends on the static capacitances, carrier frequency, etc., leakage current increases when the low-noise type inverter is used. In this case, take the following measures.

supply

1) To-ground leakage current

Leakage current may flow into not only the inverter's own line but also the other line through the ground cable, etc. This leakage current may operate earth leakage circuit breakers and earth leakage relays unnecessarily.

Measures

• Decrease the carrier frequency (Pr. 72) increases.


of the inverter. Note that motor noise *: For information on selecting the earth leakage circuit breaker, see page 176.


Leakage Current Sneak Path

Inverter

- By using earth leakage circuit breakers compatible with harmonics and surges (e.g. Mitsubishi's New Super NV series) in the inverter's own line and other line, operation can be performed with low noise (with the carrier frequency kept high).
- * For the selection of the earth leakage circuit breaker, refer to page 26-7.


To-ground leakage current data example

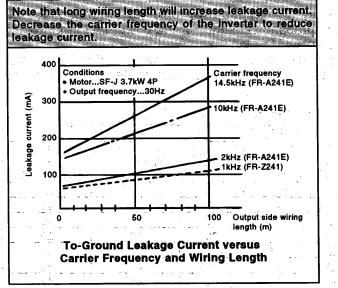

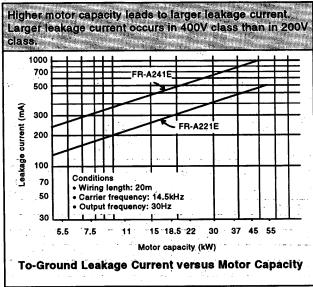

2) Line-to-line leakage current

Harmonics of the leakage current flowing in the static capacities between the inverter output cables may operate the external thermal relay unnecessarily. When the wiring length of a 400V class small-capacity model (especially 7.5kW or down) is long (50m or more), the external thermal relay is likely to operate unnecessarily because the ratio of the leakage current to the rated current of the motor increases.

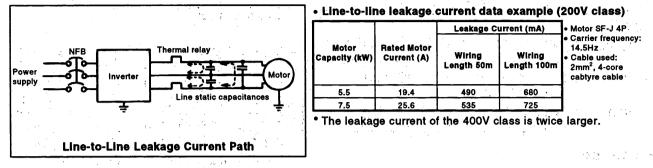

Measures

- Use the electronic overcurrent protection of the inverter. . افراني ور
- Install a reactor (FR-BOL) in the output side.

a et da s

9. a. j.

یا (مانیک ۱۹۹۵ - ۲۹۹۹ ۲۰۱۹ - ۲۹۹۹ - ۲۹۹۹ ۲۰۱۹ - ۲۹۹۹ - ۲۹۹۹ - ۲۹۹۹ - ۲۹۹۹

•.....

, the week of the state of the

Decrease the carrier frequency. Note that motor noise increases.

10 444

2004

To protect the motor from the line-to-line leakage current, it is recommended to use a temperature sensor to directly detect the temperature of the motor. 2 3 <u>1</u> 1 1 1

2011日までは4

· 我说我们的时候,你们的你们的。"

romente da crea e la comp

Alter in a second part

111 - 21

and the second second

in a start de

1.1.12

اليو مير. دين ميري المراجع ميري

د راه در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰ در ۲۰۰۰


z Parti konstructure entre interest de selet

6.1.4 Selecting the Rated Sensitivity Current for the Earth Leakage Circuit Breaker

When using the earth leakage circuit breaker with the inverter circuit, select its rated sensitivity current as follows:


- New Super NV series (Type SF, CF)
- Rated sensitivity current: l∆n≥10x(lg1+lg2+lgm) • Conventional NV series (Type CA, CS, SS)
- Rated sensitivity current: I∆n≥10x{lg₁+lgn+3x(lg₂+ lgm)}
 - Ig1,Ig2 : leakage currents of cable path during commercial power supply operation
 - Ign* : leakage current of noise filter on inverter input side
 - Igm : leakage current of motor during commercial power supply operation



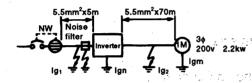

- Note: 1. The NV should be installed to the power supply Selection Example side of the inverter. (for the diagram sho
 - 2. Ground fault in the output side of the inverter can be detected at the running frequency of 120Hz or lower.
 - 3. In a Y connection neutral point grounded system, the sensitivity current is higher against ground fault in the inverter output side. Hence, the protective ground resistance of the load equipment should be 10Ω or less.
 - 4. When the breaker is grounded on the output side of the inverter, it may be unnecessarily operated by harmonics if the effective value is less than the rating. In this case, note that the eddy current and hysteresis loss increase and temperature rises.

Leakage Current Example of Cable Path during Commercial Power Supply Operation When the CV Cable Is Routed in Metal Conduit (200V 60Hz) Leakage Current Example of 3-Phase Induction Motor during Commercial Power Supply Operation (200V 60Hz)

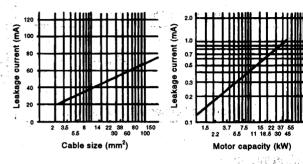

ា ខេត្តទហ្វា 🗧

20. See

· · · · · · · ·

2.1

ČCE.

12

Selection Example (for the diagram shown on the left) (mA)

	New Super NV	Conventional NV	
Leakage current lg1	$\frac{1}{0m} = 0.17$		
Leakage current ign	0 (without	noise filter)	
Leakage current lg2	$33 \times \frac{70 \text{m}}{1000 \text{m}} = 2.31$		
Motor leakage current lgm	0.	18	
Total leakage current	2.66	7.64	
Rated sensitivity current (≥lgx10)	30	100	

 For the leakage current value of the noise filter installed on the inverter input side, contact the corresponding filter manufacturer. (For Mitsubishi's dedicated filters, see pages 28-7 and 28-9.)

6.1.5 Peripheral Device List

مور. مصرحی	Motor Output	Applicable		aker (NFB) or rcuit Breaker (NV)	Magnetic	Cables	3 (mm²)
Voltage	(kW)	Inverter Type	Standard Standard	With power Factor Improving Reactor	Contactor (MC)	R,S,T	U,V,W
	5.5	FR-A221E-5.5k	Type NF50, NV50 50A	Type NF50, NV50 40A	S-K25	5.5	5.5
	7.5	FR-A221E-7.5k	Type NF100, NV100 60A	Type NF50, NV50 50A	S-K35	14	8
	< 11	FR-A221E-11k	Type NF100, NV100 75A	Type NF100, NV100 75A	S-K50	14	14
200V	15	FR-A221E-15k	Type NF225, NV225 125A	Type NF100, NV100 100A	S-K65	22	22
class	18.5	FR-A221E-18.5k	Type NF225, NV225 150A	Type NF225, NV225 125A	S-K80	30	30
	22	FR-A221E-22k	Type NF225, NV225 175A	Type NF225, NV225 150A	S-K95	38	30
	30	FR-A221E-30k	Type NF225, NV225 225A	Type NF225, NV225 175A	S-K125	60	50
	37 -	FR-A221E-37k	Type NF400, NV400 250A	Type NF225, NV225 225A	S-K150	80	80
	45	FR-A221E-45k	Type NF400, NV400 300A	Type NF400, NV400 300A	S-K180	100	80
1 tont a	55	FR-A221E-55k	Type NF400, NV400 400A	Type NF400, NV400 350A	S-K220	150	125
	5.5	FR-A241E-5.5k	Type NF30, NV30 30A	Type NF30, NV30 20A	S-K20	3.5	2
	7.5	FR-A241E-7.5k	Type NF30, NV30 30A	Type NF30, NV30 30A	S-K20	3.5	3.5
	11	FR-A241E-11k	Type NF50, NV50 50A	Type NF50, NV50 40A	S-K20	5.5	5.5
400V	- c152	FR-A241E-15k	Type NF100, NV100 60A	Type NF50, NV50 50A	S-K25	. 14	8
class	18.5	FR-A241E-18.5k	Type NF100, NV100 75A	Type NF100, NV100 60A	S-K35	14	8
×	22	FR-A241E-22k	Type NF100, NV100 100A	Type NF100, NV100 75A	S-K50	22	14
·	30	FR-A241E-30k	Type NF225, NV225 125A	Type NF100, NV100 100A	S-K65	22	22
	37	FR-A241E-37k	Type NF225, NV225 150A	Type NF225, NV225 125A	S-K80	30	22
	45	FR-A241E-45k	Type NF225, NV225 175A	Type NF225, NV225 150A	S-K80	38	30
	55	FR-A241E-55k	Type NF225, NV225 200A	Type NF225, NV225 175A	S-K100	50	50

a service of the first of the case of the service o

6.1.6 Driving the 400V Class Motor by the Inverter

In a PWM type inverter, a micro surge voltage attributable to a wiring constant is generated at the motor terminals. Especially for a 400V class motor, the micro surge voltage may deteriorate the motor insulation.

When a 400V class motor is driven by the inverter, consider the following measures:

Reduction technique

It is recommended to take either of the following measures:


(1) Rectifying the motor insulation

- For the 400V class motor, use an insulation-rectified motor. Specifically,
- 1) Specify the "400V class inverter-driven, insulation-rectified motor".
- 2) For the dedicated motor such as the constant-torque motor and low-vibration motor, use the "inverter-driven, dedicated motor".

(2) Suppressing the micro surge voltage from the inverter side

On the output side of the inverter, connect a filter which suppresses the micro surge voltage to make the terminal voltage of the motor 850V or less.

When the motor is to be driven by Mitsubishi inverter, connect the optional surge voltage suppressing filter (see page 28-10) on the output side of the inverter.

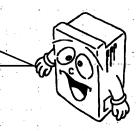

Finance In Anther Friday

7. SPECIFICATIONS

This chapter provides detailed information on the "specifications" of the FR-A201E "inverter with built-in power return function". Always read the precautions and instructions in this chapter before using the equipment.

A second second

7

7.1 SPECIFICATIONS

This section introduces specifications applied to the FR-A201E series. The inverter must be used in accordance with the following specifications:

7.1.1 Standard Specifications

200V Series

Тур	e FR-A221E-	5.5K	7.5K	11K	15K	18.5K	22K	30K	37K	45K	55K	
	blicable motor output (kW) *1	5.5	7.5	11	15	18.5	22	30	37	45	55	
	Rated capacity (kVA) *2	9.2	12.6	17.6	23.3	29	34	44	55	67	82	
Ħ	Rated current (A)	24	33	46	61	76	90	115	145	175	215	
utput	Overload current rating *3		15	0% 60 sec	onds, 200	% 0.5 seco	onds (inve	rse-time cl	naracteristi	ics)		
õ	Voltage *4		Three phase, 200 to 220V 50Hz, 200 to 230V 60Hz									
	Regenerative braking torque		100% continuous, 150% 60 seconds									
	Rated input AC voltage, frequency		Three phase, 200 to 220V 50Hz, 200 to 230V 60Hz									
supply	Permissible AC voltage fluctuation	170 to 242V 50Hz, 170 to 253V 60Hz										
Ъ	Permissible frequency fluctuation	±5%										
Ро	Instantaneous voltage drop immunity	Operat	on is cont	inued at m	ore than 1	65V. At le	ss than 16	5V, operat	ion is cont	linued for	15msec.	
	Power supply capacity (kVA) *5	12	17	20	28	34	41	52	66	80	100	
Pre	tective structure (JEM 1030)	Open type (IP00)										
	- II					Forced a	ir cooling					
	oling system											

400V Series

Туре	e FR-A241E-[]	5.5K	7.5K	11K	15K	18.5K	22K	30K	37K	45K	55K
	licable motor output (kW) *1	5.5	7.5	11	15	18.5	22	30	37	45	55
Т	Rated capacity (kVA) *2	9.1	13	17.5	23.6	29	32.8	43.4	54	65	84
۲ľ	Rated current (A)	12	17	23	31	38	43	57	71	86	110
Į	Overload current rating *3		15	0% 60 sec	onds, 2004	% 0.5 seco	onds (inver	se-time ch	naracteristi	ics)	
	Voltage *4		Three phase, 380 to 460V 50Hz/60Hz								1.1
	Regenerative braking torque				100% c	ontinuous,	150% 60	seconds			
	Rated input AC voltage, frequency	Three phase, 380 to 460V 50Hz/60Hz									
	Permissible AC voltage fluctuation	323 to 506V 50/60Hz *9									
. r	Permissible frequency fluctuation		±5%								
Operation is continued at more than 320V. At less than 320V, operation is continued for 150 mmunity						15msec.					
· [Power supply capacity (kVA) *5	12	17	20	28	34	41	52	66	80	100
Prot	ective structure (JEM 1030)	Open type (IP00)									
Coo	ling system					Forced a	ir cooling				
Ann	rox. weight (kg)	24	24	37	37	48	48	63	85	85	120

Short Circuit Ratings

The drive is suitable for use on a Circuit Capable of delivering not more than _____ RMS Symmetrical Amperes, 500 volts Maximum.

kW (HP) rating	•
5.5 to 37 (7.5 to 50)	5.000
45, 55 (60, 75)	10.000
45, 55 (60, 75)	10.000

		F	ecifications						
	Control system			Control specifications High carrier frequency sine-wave PWM control (V/F control or magnetic flux vector control can be selected)					
	Out	put freguenc	y range	0.2 to 400Hz					
	Free sett	quency ing	Analog input	0.015Hz/60Hz (terminal 2 input: 12 bits/0 to 10V, 11bits/0 to 5V, terminal 1 input: 12 bits/-10 to +10V, 11 bits/-5 to +5V)					
ŝ	resc	olution	Digital input	0.002Hz/60Hz (0.01Hz when PU is used)					
lca	_			Within ±0.2% of maximum output frequency (25°C±10°C)/analog input, within 0.01% of set output					
ecif	Free	quency accu	racy	frequency/digital input					
Control specification	Volt	age/frequen	cy characteristic	Base frequency set as required between 0 and 400Hz. Constant torque or variable torque pattern can be selected.					
Ē	Star	rting torque	the second second	150%/1Hz (for magnetic flux vector control)					
ŏ	Tor	que boost		Manual and automatic torque boost					
	Acc sett		celeration time	0 to 3600 seconds (acceleration and deceleration can be set individually), linear or S-pattern accel- eration/deceleration mode can be selected.					
	DC	dynamic bra	ke 👘 🖓 🖓	Operation frequency (0 to 120Hz), operation time (0 to 10 seconds), voltage (0 to 30%) variable					
			operation level	Current limit can be set (0 to 200% variable), presence or absence can be selected.					
		quency	Analog input	0 to 5VDC, 0 to 10VDC, 0 to ± 5VDC, 0 to ±10VDC, 4 to 20mA					
			Digital input	BCD 3-digit or 12-bit binary using parameter unit (when the FR-EPA or FR-EPE option is used)					
		Start signal		Forward and reverse rotations individual, start signal self-holding input (3-wire input) can be selected.					
				Up to 7 speeds can be selected. (Each speed can be set between 0 and 400Hz, running speed can					
		Multi-speed	selection	be changed during operation from the parameter unit.)					
suo	t signal	Second acceleration/deceleration time selection		0 to 3600 seconds (acceleration and deceleration can be set individually.)					
cat	nput	Jogging ope	ration selection	Provided with jogging (JOG) mode select terminal *7					
Ĕ	=	Current inpu	it selection	Input of frequency setting signal 4 to 20mADC (terminal 4) is selected.					
å		Output stop		Shut-off of inverter output (frequency, voltage)					
als		Alarm reset		Alarm retained at the activation of protective function is reset.					
Operational specifications	Operation		inctions	Maximum/minimum frequency setting, frequency jump operation, external thermal relay input selec- tion, polarity reversible operation, automatic restart operation after instantaneous power failure, com- mercial power supply-inverter switch-over operation, forward/reverse rotation prevention, slip compensation, operation mode selection, auto tuning function.					
	i signals	Operating status		4 types can be selected from inverter running, up to frequency, instantaneous power failure (undervoltage), frequency detection, second frequency detection, during program mode operation, during PU operation, overload alarm, regenerative brake pre-alarm, and electronic overcurrent protector pre-alarm. Open collector output.					
	Output	Alarm (inverter trip)		Contact outputchange-over contact (230VAC 0.3A, 30VDC 0.3A) Open collectoralarm code (4 bit) output					
	0	For meter		1 type can be selected from output frequency, motor current (steady or peak value), output voltage, frequency set value, running speed, motor torque, converter output voltage (steady or peak value), regenerative brake duty, electronic overcurrent protector load factor, input power, output power, load meter, and motor exciting current. Pulse train output (1440Hz/full scale) or analog output (0 to 10VDC).					
	par	Display on parameter unit or inverter LED		Selection can be made from output frequency, motor current (steady or peak value), output voltage, frequency set value, running speed, motor torque, overload, converter output voltage (steady or peak value), electronic overcurrent protector load factor, input power, output power, load meter, motor exciting current, cumulative operation time, regenerative brake duty.					
isplay			Alarm definition	Alarm definition is displayed when protective function is activated. 8 alarm definitions are stored.					
Disp	٨	litional	Operating status	State of input terminal signal, state of output terminal signal					
	disj	play to ameter unit	Alarm definition	Output voltage/current/irequency/input terminal state immediately before protective function is acti- vated					
	only		Interactive guidance	Operation guide, troubleshooting and graphic display by help function					
Pro	tecti	ive/alarm fun	· ·	Overcurrent shut-off (during acceleration, deceleration, constant speed), regenerative overvoltage shut-off, undervoltage, instantaneous power failure, overload shut-off (electronic overcurrent protec- tion), power return circuit alarm *8, ground fault current *9, output short circuit, main circuit device overheat, stall prevention, overload alarm.					
Ę	Am	bient temper	ature	-10°C to +50°C (non-freezing).					
l e	Am	bient humidi	ty	90%RH or less (non-condensing)					
l g	Sto	rage temper	ature *10	-20°C to +65°C					
Environment		bience		Indoors. No corrosive gases, flammable gas, oil mist, dust and dirt.					
μ	Alti	tude, vibratio	on .	Below 1000m, 5.9m/s ² (0.6G) or less (conforms to JIS C 0911)					

The applicable motor capacity indicated is the maximum applicable capacity when the Note: *1 Mitsubishi 4-pole standard motor is used.

*2. The rated capacity indicated assumes that the output voltage is 220V for the 200V シリエー とちやせ series and 440V for the 400V series.

*3 The % value of the overload current rating indicates a ratio to the rated output current of the inverter. For repeated use, it is necessary to wait until the inverter and motor return to temperature below the value at 100% load.

The maximum output voltage does not exceed the power supply voltage. Below the *4 power supply voltage, the maximum output voltage can be set as required.

Where a power supply is 342V and below or 484V and above for the 400V class *5 inverters, change the position of the jumper to the internal transformer, according to

page 3-7.

*6 The power supply capacity depends on the value of impedance on the power supply side (including the input reactor and cables).

*7 Jogging operation can also be performed from the parameter unit.

When the power return circuit alarm or regenerative electronic thermal relay error *8

, 1999) 1990 - State Andrewski, 1997 1997 - State Andrewski, 1997 1997 - State Andrewski, 1997 1997 - State Andrewski, 1997

anti e provinci Segundo de la composición Segundo de la composición de la composición de la composición de la composición de la

an de la company de la company a company de la company de la company a company de la co

1.1.1.4 esse linke for mensely komp

د

li setta di 1 n composito di ci

ran (incorrect) L'han a chailteachailteachailteachailteachailteachailteachailteachailteachailteachailteachailteachailteachailte

N and F

ala da serie da seri Canada da serie da se Serie da ser

ing the straight a second contract a

2.60

1. 291.1 and and a second se Second second

ars es.

n an ann an Anna an Ann Anna an Anna an

 $(1, 2, 2) \in \mathcal{A}_{1}^{2}$

n Bano

. C

だつき

214128423

occurs, the brake transistor alarm (BE error) is displayed.

:*9 May not be protected depending on the ground fault mode.

*10 Temperature applicable for a short period in transit, etc.

na an Agairtí (a BrBain Tallach Agairtí (a BrBain Tallach Agairtí (a Brain Mar an Tallach Brain)

, and a second


in the second

دیا ہے۔ ریما ہے داری میں ا

wite notiget gette Na sus esperies

14


7.1.2 Block Diagram

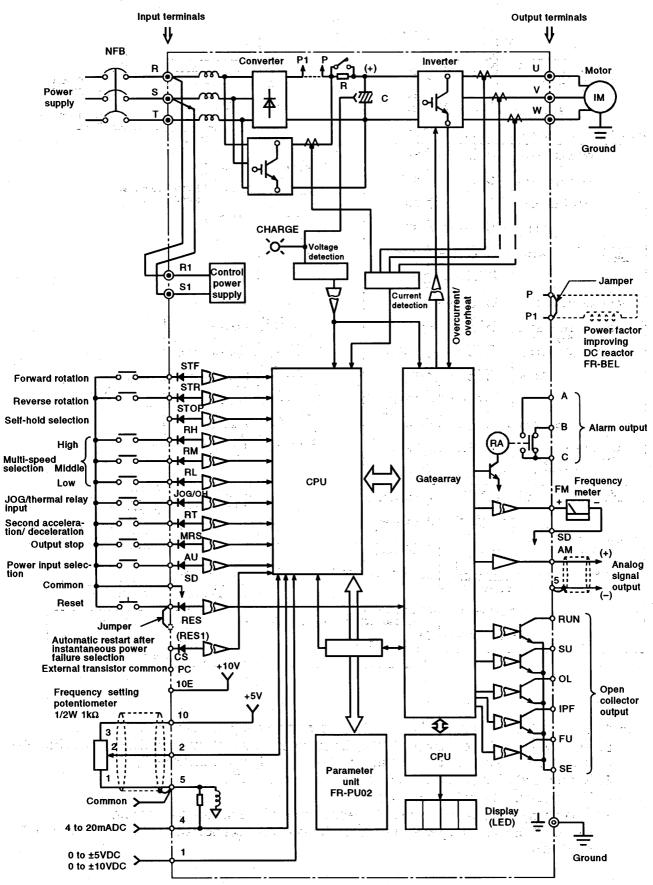

i i i

27 – 4



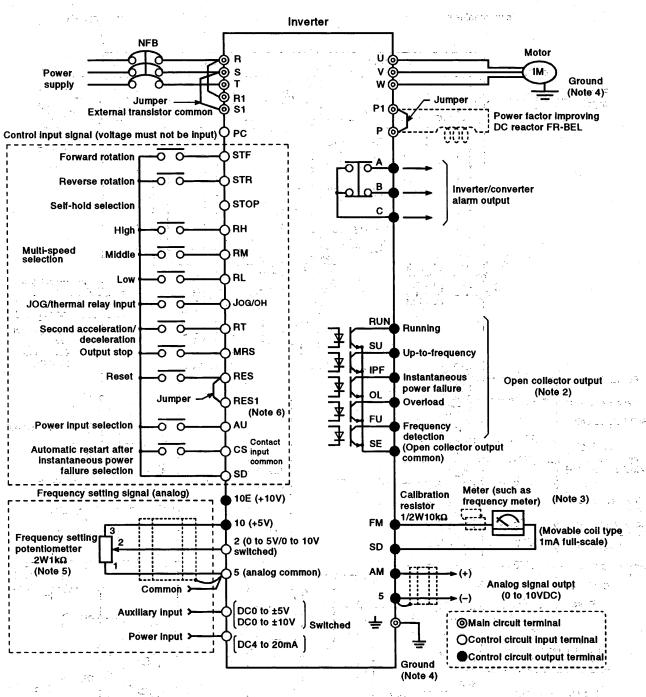

Note: 1. The input signal can be switched to the other from the parameter unit.

- 2. With the exception of running (RUN), the output terminals allow alarm definitions to be output in alarm codes and 10 different functions to be assigned to individually.
- 3. Not needed when calibration is made from the parameter unit.
- 4. The inverter and motor must be grounded.
- 5. $2W1k\Omega$ is recommended when the frequency setting is changed frequently.
- 6. Do not disconnect the jumper which has been factory-connected across the RES and RES1 terminals.

7.1.4 Terminals

Туре	e	Symbol	Terminal Name	Description							
		R, S, T	AC power input	Connect to the commercial power supply.							
	Γ	U, V, W	Inverter output	Connect a three-phase squirrel-cage motor.							
Main circuit		R1, S1	Power supply for control circuit	Connected to the AC power supply terminals R and S. display and alarm output, remove the jumper from the to apply external power to these terminals.							
Main	.)	P, P1	Power factor improving DC reactor connection	Disconnect the jumper from terminals P and P1 and cor power factor improving reactor (FR-BEL).	nnect the optional						
2		<u>_</u>	Ground	For grounding the inverter chassis. Must be earthed.							
	-	STF	Forward rotation start	Turn on the signal across STF and SD for forward ro- tation and turn off to stop. Acts as a programmed operation start signal in the programmed operation mode. (Turn on to start and turn off to stop.)	When the signals across terminals STF and SD, STR and SD are turned on simultaneously,						
·		STR	Reverse rotation start	Turn on the signal across STR and SD for reverse rotation and turn off to stop.	the stop command is given.						
		STOP -	Turn on the signal across terminals STOP and SD to se of the start signal.	lect the self-holding							
	, , ,	RH, RM, RL	Multi-speed selection	Turn on the signal across RH/RM/RL and SD as appropriate to select up to 7 speeds. Act as group 1, 2 and 3 select signals in the programmed operation mode.							
	, etc.)	JOG/OH	JOG mode selection_ or external thermal relay input	Turn on the signal across terminals JOG and SD to sele tory setting). Jog operation can be performed with the s STR). Can also be used as the thermal relay contact in the inverter by the operation of the external thermal relay	ect jog operation (fac start signal (STF or put terminal to stop						
	function selection,	RT	Second acceleration/ deceleration time selection	Turn on the signal across terminals RT and SD to select eration/deceleration time. When the second torque boo (base frequency) functions have been set, these function lected by turning on the signal across terminals RT and nal across terminals RT and SD to switch between the magnetic flux vector control and V/F control.	st and second V/F ons can also be se- SD. Tum on the sig						
2	(start,	MRS	Output stop	Turn on the signal across terminals MRS and SD (20ms or longer) to stop the inverter output. Used to shut off the inverter output to bring the motor a stop by the magnetic brake. Can also be used as the DC dynamic brake operation start signal or PU operation interlock signal.							
S	Contact	RES	Reset	Used to reset the protective circuit activated. Turn on the minals RES and SD for more than 0.1 sec, then turn it of nect the jumper connected across this terminal and the board.)	off. (Do not discon-						
		AU	Current input selection	When the signal across terminals AU and SD is turned be operated with the 4-20mADC frequency setting sign	on, the inverter can al.						
		CS	Automatic restart after instantaneous power failure selection	When the signal across terminals CS and SD has been can be made automatically when the power is restored ous power failure. Note that this operation requires res set. When the inverter is shipped from the factory, it is start.	turned on, restart after an instantane- tart parameters to be						
-		SD	Contact input common	Common to the contact input terminals and terminal FN common terminal of the control circuit.	· · · · · · · · · · · · · · · · · · ·						
		PC	External transistor common	When transistor output (open collector output), such as controller (PC), is connected, connect the external pow for transistor output to this terminal to prevent a fault c rent.	er supply common						

• =

27 – 6

Ту	pe	Symbol	Terminal Name		Description					
()		10E	Frequency setting power supply	10mA	When the frequency setting potentiometer is con- nected in the factory-set state, connect it to terminal 10. When it is connected to terminal 10E, change the input specifications of terminal 2.					
Control circuit (input signals)	ncy setting	2	Frequency setting (voltage)	reached at 5V (or 10V 5VDC (factory setting)	C (0 to 10VDC), the maximum output frequency is /) and I/O are proportional. Switch between input 0 to) and 0 to 10VDC from the parameter unit. Input resis- missible voltage 20VDC.					
ol circuit (ii	Analog frequency		Frequency setting (current)	By entering 4 to 20mA 20mA and I/O are pro	ADC, the maximum output frequency is reached at portional. This input signal is valid only when the sig- AU and SD is on. Input resistance 250Ω. Max. permissi-					
Contr	Ana	1	Auxiliary frequency setting	setting signal of termi setting) and 0 to ±10V	DC 0 to ±10VDC, this signal is added to the frequency inal 2 or 4. Switch between input 0 to ±5VDC (factory /DC (factory setting) from the parameter unit. Input re- permissible voltage ±20VDC.					
		5	Frequency setting input common	Common to the frequency setting signals (terminals 2, 1 or 4) and analog output terminal AM. OV line of the common circuit of the control circuit. Do not ground.						
	Contact	A, B, C	Alarm output	the inverter protective 200VAC 0.3A, 30VDC	output indicating that the output has been stopped by 9 function activated. 0 0.3A. Alarm: discontinuity across B-C (continuity continuity across B-C (discontinuity across A-C).					
		RUN	Inverter running	Switched low when th the starting frequency	he inverter output frequency is equal to or higher than ((factory set to 0.5Hz, variable). Switched high during brake operation (*). Permissible load 24VDC 0.1A.					
als)	Note):	SU	Up to frequency **	set frequency (factory	ne output frequency has reached within ±10% of the y setting, variable). Switched high during acceleration, *). Permissible load 24VDC 0.1A.					
tput sigr	collector (Note)	OL	Overload alarm **		ne current limit function has caused stall prevention to d high when stall prevention is reset (*). Permissible					
t (ou	ben co	IPF	Instantaneous power failure **		stantaneous power failure or undervoltage protection issible load 24VDC 0.1A.					
Control circuit (output signals)	Õ	FU	Frequency detection **		ne output frequency has reached or exceeded the de- optionally. Switched high when below the detection fre- ble load 24VDC 0.1A					
Cont		SE	Open collector output common	Common to the RUN, mon circuit of the con	SU, OL, IPF and FU terminals. Isolated from the com- ntrol circuit.					
	Pulse	FM	Formeter	One selected from 16 toring items, such as frequency, is output.	output Permissible load current 1mA 1440Hz at The out- 60Hz. (Max. frequency 2400Hz)					
- - 22 - 42	Analog	АМ	Analog signal output	put signal is proportic the magnitude of eac toring item. Terminals and AM can be used same time.	h moni- Factory-set output item: frequency s FM Output signal 0 to 10VDC					


• Low indicates that the open collector transistor is on (conducts). High indicates that the transistor is off (does not conduct).

** The output of these terminals can be reassigned by the output terminal assignment function (see page 9-19).

Note: Application of the voltage in the wrong direction will damage the inverter. Use care when wiring.

7.1.5 Terminal Block Arrangement

Terminal Block for Main Circuit <200V, 400V, Series>

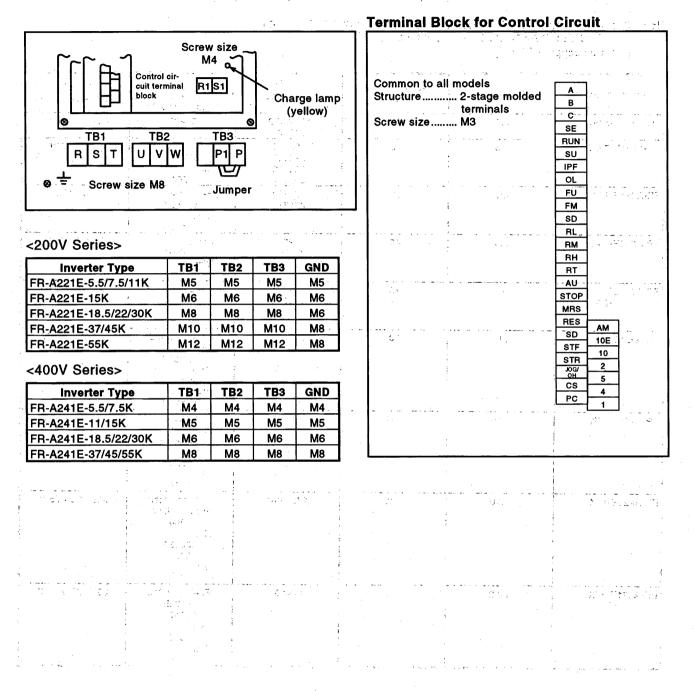

2,21

7.1.6 Field Wiring Reference Table

Field wiring reference table for input (R, S, T) and output (U, V, W)

Note (*1) Manufacturer : AMP INCORPORATED, HARRISBURG, PA 17105 PHONE : 717-564-0100 TWX : 510-657-4110

(*2) Use copper wire only

Inverter model	Screw size	Screw torque (Pound inch)	Crimping Type and to	Wire size /temp-rating (*2)	
-		(Pound Inch)	Crimping terminals	Crimping tools	(temp-rating (z)
FR-A221E-5.5K	M5	23	170785-2 171519-2	59239	AWG10 / 75°C
FR-A221E-7.5K	M5	23	322128 322048 322002 322154	Hand tool 59974-1 Dies 48752-1	AWG8 / 75°C
FR-A221E-11K	M5	23	322153 321671	Hand tool 59974-1 Dies 48753-1	AWG6 / 75°C
FR-A221E-15K	M6	40	322053 31811	Hand tool 59974-1 Dies 48754-1	AWG4 / 75°C
FR-A221E-18.5K -22K	M8	70	322074 326896		AWG2 / 75°C
FR-A221E-30K	M8	70	322086	Foot operated power unit 69325-3 Head 69066	AWG1/0 / 75°C
				Dies 48756-1	ан 1 а
FR-A221E-37K	M10	131	322095	Foot operated power unit 69325-3 Head 69066 Dies	AWG3/0 / 75°C
FR-A221E-45K	M10	131	170740-1	48758-1 Foot operated	AWG4/0 / 75°C
	· · · · · · · · · · · · · · · · · · ·			power unit 69040 Head 300430 48131 Dies 69065	
FR-A221E-55K	M12	219	324105	Foot operated power unit 69040 Head 48816 Dies	300MCM / 75°C
1				69060	


ale de stà

1.01

Inverter model	Screw size	Screw torque (Pound inch)		Crimping terminals Type and tool type (*1)				
		(Found men)	Crimping terminals	Crimping tools	/temp-rating (*2)			
FR-A241E-5.5K -7.2K	M4-55-55-55-55-55-55-55-55-55-55-55-55-55	13	35787-0 34169 32543-0 32968	59239	AWG10 / 75°C			
FR-A241E-11K -15K	M5	23	322128 322048 322002 322154	Hand tool 59974-1 Dies 48752-1	AWG8 / 75°C			
FR-A241E-18.5K -22K -30K	M6	40	322053 31811	Hand tool 59974-1 Dies 48753-1	AWG4 / 75°C			
FR-A241E-37K -45K	M8	70	322074 326896	Hand tool 59974-1 Dies 48755-1	AWG2 / 75°C			
FR-A241E-55K	M8	70	322056-0 324083-0	Foot operated power unit 69325-3 Head 69066-0 Dies 48757-1	AWG2/0 / 75°C			

27 – 10



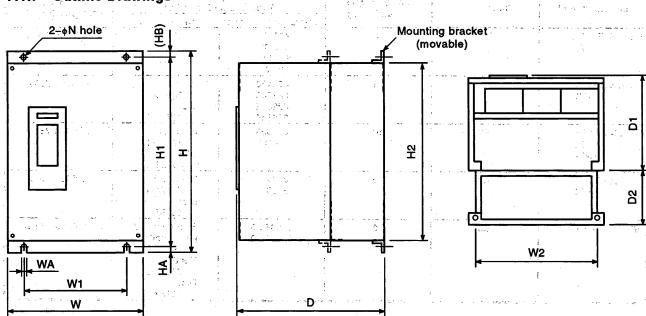


• 200V Class

 200V Class 	Inverter Type W W1 W2 WA H H1 H2 HA HB D D1 D2 DA													nit: mm
Inverter Type	W	W1	W2	WA	н	H1	H2	HA	HB	D	D1	D2	DA	N
FR-A221E-5.5/7.5K	250	190	234	10	470	454	425	8	8	270	170	100	2.3	10
FR-A221E-11/15K	300	220	284	10	600	575	540	10	15	294	169	125	3.2	10
FR-A221E-18.5/22K	390	290	370	12	600	575	535	10	15	320	190	130	3.2	12
FR-A221E-30K	450	350	430	12	700	675	635	10	15	340	195	145	3.2	12
FR-A221E-37/45K	470	370	450	14	700	670	630	15	15	368	205	163	3.2	14
FR-A221E-55K	600	480	580	14	900	870	830	15	15	405	215	190	3.2	14

• 400V Class

 400V Class 	400V Class													(Unit: mm)	
Inverter Type	W	W1	W2	WA	н	· H1	H2	HA	HB	D	D1	D2	DA	N	
FR-A241E-5.5/7.5K	250	190	234	10	470	454	425	8	8	270	170	100	2.3	10	
FR-A241E-11/15K	300	220	284	10	600	575	540	10	15	294	169	125	3.2	10	
FR-A241E-18.5/22K	360	290	340	12	600	575	535	10	15	320	190	130	3.2	12	
FR-A241E-30K	450	350	430	12	700	675	635	10	15	340	195	145	3.2	12	
FR-A241E-37/45K	470	370	450	14	700	670	⁻ 630	15	15	368	205	163	3.2	14	
FR-A241E-55K	600	480	580	14	900	870	830	15	15	405	215	190	3.2	14	

7.1.8 Panel Cutting Dimensions (for mounting the heatsink outside the panel)

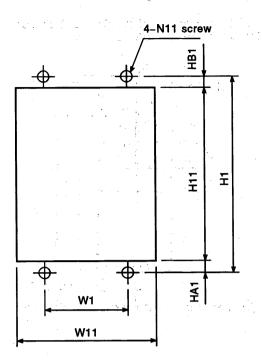


• 200V Series

Inverter Type	W1	W11	H1	H11 [~]	HA1	HB1	N11
FR-A221E-5.5/7.5K	190	240	454	434	12	- 8	M8
FR-A221E-11/15K	220	290	575	548	17	10	M8
FR-A221E-18.5/22K	290	376	575	546	17	12	M10
FR-A221E-30K	350	436	675	646	17	12	M10
FR-A221E-37/45K	370	456	670	641	17	12	M12
FR-A221E-55K	480	586	870	841	17	12-	-M12

• 400V Series

Inverter Type	W1	W11	H1	H11	HA1	HB1	N11
FR-A241E-5.5/7.5K	190	240	454	434	12	8	M8
FR-A241E-11/15K	220	290	575	548	17	10	M8
FR-A241E-18.5/22K	260	346	575	546	17	12	M10
FR-A241E-30K	350	436	675	646	17	12	M10
FR-A241E-37/45K	370	456	670	641	17	12	M12
FR-A241E-55K	480	586	870	841	17	12	M12

7.1.9 FR-PU02E Parameter Unit Dimension Diagram

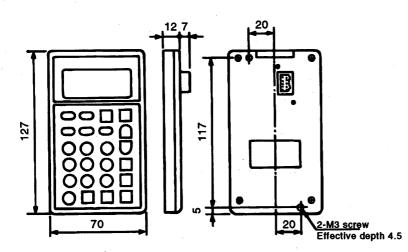


Note: The length of the installation screw should be selected so that it does not exceed the effective installation screw depth of the parameter unit.

FR-PU02E Specifications

Item	Specifications					
Ambient	Operating	Operating -10 to +50°C (Note 1)				
temperature	Storage	-	-20 to -65°C			
Ambient humidity	9	0%RH	Non-condensing -			
Operating ambience	No oil mist	and corrosive ga	ses. Minimal dūst and dirt.			
Connected object						
Power supply	Power is su	upplied from the i	nverter.			
Connection	Loaded to t	he inverter direct	y or connected by the cable.			
Display			13 characters x 4 lines)			
Keyboard	24 keys (co	overed with polyu	rethane film)			
Size	127 x (H) x	70 (W) x 12 (D)				


Panel cutting dimensions for installation of the parameter unit to a panel, etc.

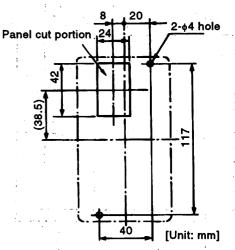

(View as seen from the parameter unit front)

- Note: 1. When the temperature is less than about 0°C, the liquid crystal display (LCD) may be slower in operation. And high temperature may reduce the LCD life. 2. Do not expose the liquid crystal
 - display directly to the sun.

7.1.10 FR-CU01 Serial Communication Unit Outline Drawing

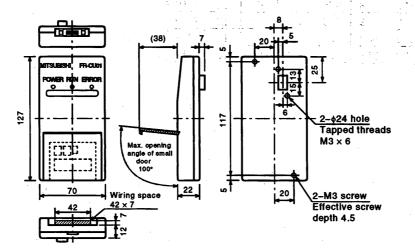


7.2 OPTIONS

Use of the following options with this FR-A201E series improves its functions.

general production of a star

. . .

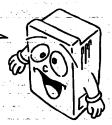

7.2.1 Option List

			and a second	
L	Option Name	Туре	Application, Specifications, Etc.	Applicable Inverter
	the second s	la serie	• 12-bit digital input	· · · · · · · · · · · · · · · · · · ·
	Industrial equipment compatible function	FR-EPA	 PLG feedback control 	
÷ . 1	industrial equipment compatible function	FR-EFA	 Extension analog output 	
			 Orientation control (machine tool spindle fixed- 	
			position stop control)	······································
FR-A)	Computer link function	FR-EPB	 RS-422, RS-485 interface for computer link (serial communication) 	and the second
E	Computer link function	FN-EFD	PLG feedback control	
2			MELSECNET/MINI-S3 (optical cable) interface	
pe	Programmable controller link function	FR-EPC	PLG feedback control	an a
(dedicated to			PEG reedback control Pi control	
ed.	Automatic control compatible function	FR-EPD		
9	Automatic control compatible function		 Battery backup for programmed operation (pro- grammed operation function is standard.) 	a statistica da
type	and and the second s		a 12-bit digital input	international and the second
5	I/O function	FR-EPE	Relay output (3 points)	oj trivituristetis
Dar			Extension analog output	
nboard			RS422/RS485 interface for computer link (serial	Common to all models
-	Computer link + extension output	1. 201	communication)	and a second
	function	FR-EPG	Selective relay output	
			Analog current output	
1		e de l'al de la la	Pulse train input	
			Selective relay output	
	Pulse train input function	FR-EPH	Analog current output	an a san san s
		-	• Pi control	• .
	Parameter unit (Japanese)	FR-PU02	Interactive parameter unit using LCD display	
			The LCD display and ten-key pad of the FR-PU02	
FR-A)	Parameter unit (English)	FR-PU02E	are indicated in English.	· · · · · · · · · · · · · · · · · · ·
睢	Parameter unit (4 languages)	FR-PU02ER	For use in English, German, French and Spanish.	
2		FR-ARW	Allows parameter settings to be read in batch and	
Ĕ	Parameter copy unit (Japanese)	FR-ARW	copied to the other inverter.	
ICa	Parameter copy unit (English)	FR-ARWE	The LCD display and ten-key pad of the FR-ARW	
(dedicated			are indicated in English.	
Ĭ	Parameter copy unit (4 languages)	FR-ARWER	For use in English, German, French and Spanish.	1
option	Accessory cover	<u> </u>	Blind cover fitted after the parameter unit is re-	
6			moved from the inverter.	· ·
nal	Serial communication unit	FR-CU01	RS485 interface for computer link (serial communica- tion)	
External			Noise filer which allows the inverter to conform to	
μŵ	VDE Standard compatible noise filer	FR-ALF-(H)*	the VDE Standard (0871 Class A noise terminal volt-	5.5K to 55K
			age).	According to capacity
			Used to improve the inverter input power factor	5.5K to 55K
	Power factor improving DC reactor	FR-BEL-(H)*	(overall power factor about 95%) and cooperate with	According to capacity
-			the power supply.	
₽	Radio noise filter	FR-BIF-(H)*	For radio noise reduction	4
6	Line noise filter	FR-BSF01	For line noise reduction (applies to small capacities)	4
hal		FR-BLF	For line noise reduction	Common to all models
External option	Parameter unit cable	FR-CBLD	Cable for connection with the parameter unit or para-	
Ιŭ			meter copy unit. Straight or L shape type available.	4
	Digital operation panel	FR-DU01	For operation from the control box surface.	
1	Surge voltage suppressing filter	FR-ASF-H	Absorbs surge voltage on the inverter output side.	400V series 5.5 to 55K According to capacity
L		I		Incoluting to capacity

.

	Option Name	Туре	Application, Specifications, Etc.	Applicable Inverter
	Manual controller	FR-AX	For independent operation With frequency meter, frequency setting potentiometer and start switch.	
	DC tach. follower	FR-AL	For joint operation using external signals. (0 to 5VDC, 0 to 10VDC) (1VA)**	
setters	Three speed selector	FR-AT	For three-speed (high, middle, low) switching opera- tion. (1.5VA)	
and se	Motorized speed setter	FR-FK	For remote operation. Allows operation to be control- led from several places. (5VA)	
	Ratio setter	FR-FH	For ratio control. Allows ratios to be set to five in- verters. (3VA)	
controllers	PG follower	FR-FP	For follow-up operation using the signal of a pilot generator (PG). (2VA)	
series c	Master controller	FR-FG	For parallel operation of several (up to 35) invert- ers. (5VA)	Common to all models
FR se	Soft starter	FR-FC	For soft start and stop. Allows parallel operation and acceleration/deceleration. (3VA)	
	Deviation detector	FR-FD	For synchronous operation. Used with a deviation sensor and synchro. (5VA)	result to the second
	Preamplifier	FR-FA	Can be used as A/V conversion or operational ampli- fier. (3VA)	·····
	Pilot generator	QVAH-10	For follow-up operation. 70/35VAC 500Hz (at 2500rpm)	
	Deviation sensor	YVGC-500W- NS	For synchronous operation (mechanical deviation detection). Output 90VAC/90°	
Others	Frequency setting potentiometer	WA2W1KΩ	For frequency setting. Wire-wound type. $2W1K\Omega$ B characteristic.	
0	Frequency meter	YM206RI 1mA	Dedicated frequency meter (up to 120Hz scale). Moving-coil DC ammeter.	,
	Calibration resistor	RV24YN 10KΩ	For calibration of the frequency meter. Carbon-film type. B characteristic.	

• Type for 400VAC class has H.

, c

1. 1 1. 1

Power supply specifications of the FR series 200VAC 50Hz, 200/220VAC 60Hz controllers and setters:

۰.

<u>ي</u>ن.

115VAC 60Hz

46

Rated power consumption. **

÷

28 – 2

ε.

ŝ

7.2.2 Inboard Dedicated Options

Function	FR-EPA (Industrial equipment compatible function)	FR-EPB (Computer link function)	FR-EPC (Programma- ble controller link function)	FR-EPD (Automatic control compatible function)	FR-EPE (I/O function)	FR-EPG (Computer link + extension output function)	FR-EPH (Pulse train input function)
PLG feedback control			•				
Orientation control		1.194	24 32 M	Alian and a and an an		•	
12-bit digital input							
Relay output		11 A A	Charles process		e serve 🌒 e Barrier	●(Note 1)	●(Note 1)
Extension analog output	•				n - Dir 🗎 tipas e		
Computer link				a de la composición d Composición de la composición de la comp		•	
MELSECNET/MINI-S3	محيصور با با اير ارامينيا 1. با ايرې اير	· · · · · · · · · · · · · · · · · · ·			and a strand set of the set of th	,	
PI control							•
Programmed operation	- 4	್ರಾಗಿ ಕೆ.ಲೆ.		t e geset	1.1.1.2.2.2.2.2.2.2		
Analog current output	1.1.1.2.1.1.2					●(Note 2)	●(Note 2)
Pulse train input							•

محمد المراجع مراجع والمحمد والمحمد

 r^{1} and r^{2}

Out of the above option units, only one can be installed in the inverter. Each option unit has several function as listed above.

	Function, Application, Etc.	Rating, Etc.	
PLG feedback control	• The motor speed is detected by the pulse encoder, this detection signal is fed back to the inverter, and its speed variation is automatically compensated for. Hence, the motor speed can be kept constant if load variation occurs.	 Speed variation ratio: within ±0.2% at the load variation of 0 to 100% (*) (at 1800r/min) Applicable motor: standard motor of 2 to 8 poles Encoder specifications: 3 phase, differential output, 1024P/rev. 	
	 The actual motor speed can be monitored on the in- verter LED display and parameter unit. [Application example] extruder, winder, conveyor, etc. 	 5VDC power supply Example: Tamagawa Seiki's TS 1508 N 207, etc. (*) Load of 100% Indicates the continuous operation torque of the motor at each running frequency. 	
	 Used with a pulse encoder installed to a machine tool spindle to allow the spindle to be stopped at a predetermined position (orientation function). 	 Positioning accuracy±1.5° Encoder specifications: same as those for the above PLG feedback function 	
Orientation control	 The current position can be monitored on the in- verter LED display an parameter unit. [Application example] fixed-position stop and index- ing of a machine tool spindle 		
	Input interface used to set the inverter frequency ac- curately using external BCD or binary digital signals.	 Input voltage, current: 24VDC, 5mA (per circuit) Input signal format: contact signal input or transistor 	
12-bit digital input	 Either 12-bit binary or BCD 3-digit signal can be selected. Gain and offset can also be adjusted. 	open collector (sink type) input Example: MELSEC AY40, AY40A, etc.	
Relay output (3 points)	 Any three signals can be selected and output as re- lay contacts (change-over contacts) from among the 10 standard output signals (RUN, SU, IPF/UVT, OL, FU1, FU2, RBP, THP, PRG, PU) of the inverter. 	Signal types: change-over contact (three output re- lays installed) Contact capacity: 230VAC 0.3A 30VDC 0.3A	
Extension analog output	• 16 signals, which can be monitored on the FM and AM terminals, such as output frequency, output volt- age, output current and motor torque, are expanded and output.	Output voltage (across LM0-LM2): 0 to 10VDC, max. 1mA Output current (across LM1-LM2): 0 to 1mADC (20mA)	
Analog current output (Note 2)	• A 1mA DC or 5V (10V) DC meter can be connected. (FR-EPA, EPE)	Output resolution: 3mV for voltage output Output resolution: 1µA for current output (20µA)	
	• A 20mADC or 5V(10V)DC meter can be connected. (FR-EPG, EPH)	Output accuracy ±10%	
Computer link function (serial communication)	Gain and offset can also be adjusted. Allows inverter operation/monitoring and parameter read/write to be performed using user program from a computer, e.g. personal computer or FA controller, which is connected by communication cables.	 Conforming standard: EIA Standard, for RS-422 and RS-485 Transmission format: multidrop link system Communication speed: max. 19200 baud rates 	
	 Noiseless communication system using twisted pair cables. 	Max. number of inverters : RS-422 - 10 inverters connected RS-485 - 32 inverters Overall extension: 500m	

	Function, Application, Etc.	Rating, Etc.	
MELSECNET/MINI-S3 Interface	Allows inverter operation/monitoring and parameter read/write to be performed using user program from the master station in the Mitsubishi programmable controller data link system MELSECNET/MINI-S3 (AJ71PT32-S3) which is connected by optical fiber.	 Max. number of inverters connected: 16 inverters (up to 64 inverters when used with remote I/O sta- tions) interstation transmission distance: 50m max. 1m min 	
	Communication is made via optical link system with- out noise.		
	• PI control function is required when process control, e.g. flow rate, air volume or pressure, is carried out by the inverter.	Pl control range: proportional band 1 to 1000% integral time 0.1 to 3600 seconds Output signal: high limit, low limit, during forward ro-	
PI control	• The set value can be set from any of terminal 2, 1 or parameter unit. The measured value (leedback signal) is input to terminal 4 by a 4-20mA current sig- nal.	tation, during reverse rotation	
Battery backup for programmed operation	• Allows the timer to be battery backed for pro- grammed operation. If a power failure occurs, auto- matic operation can be continued after the power is restored. (Programmed operation is standard in the inverter. See Pr. 87.) Group selection and time-out output signal for the programmed operation are in- corporated.	 Battery life: 10 years (lithium battery) Permissible power failure time: max. 18 hours when Pr. 200=0 (seconds selected) Max. 30 days when Pr. 200=1 (minutes selected) 	
Pulse train input	 Allows a pulse train signal to be used as a speed command input to the inverter. 	Max. permissible number of pulses: 100KPPS or less Input interface: Open collector system Input voltage/current: 24VDC, 10mA	
	1. Support of the second se		
	are an article are water in the second state of the	n an	

her die staaf

1 (1995) 1936 - The 1937 - The 1938 - The 19

 $a \ll t$

· · ·

میں میں ہے۔ رجم الحرم الوار

ut na sistera

م ماریخ بالا میکند در معامل بالا می می ایند. بالا میکند در معامل بالا می ایند میکند در ایند میکند ایند و تعامل میکند میکند میکند که میکند که میکند از معام ایند میکند کارم و بالا معامل بالا میچه بالا میکند. میکند کارم و بالا معامل بالا میچه بالا میکند میکند میکند میکند میکند و میکند و معامل میکند میکند و میکند. میگر فصل میکند کارم و میکند میکند میکند و بالا میکند و میکند و

• ••

a Aliana (Mariana) (Mariana) Aliana (Mariana) Aliana (Mariana)

· • .

در الح رور در التركيم المنظم العرود المعاد ال

A. 1993. 1
 A. 1993. 1
 A. 1993. A constraint of the state of the state

··. .--

al galance com

11. T.

an their processing in measure

a na gli at a 481

and service and the

 $\left\{ \cdot,\cdot \right\}$

n in an

ver-redii

ti setta de

ì

1. L.

11.1

· · · · · ·

ب آلی روید می از ایرین از ایران ایرین ایران ایران

13

ne undarr

1.1


.

s lating sh

والمراجعة والمعارضا بالأ

-1




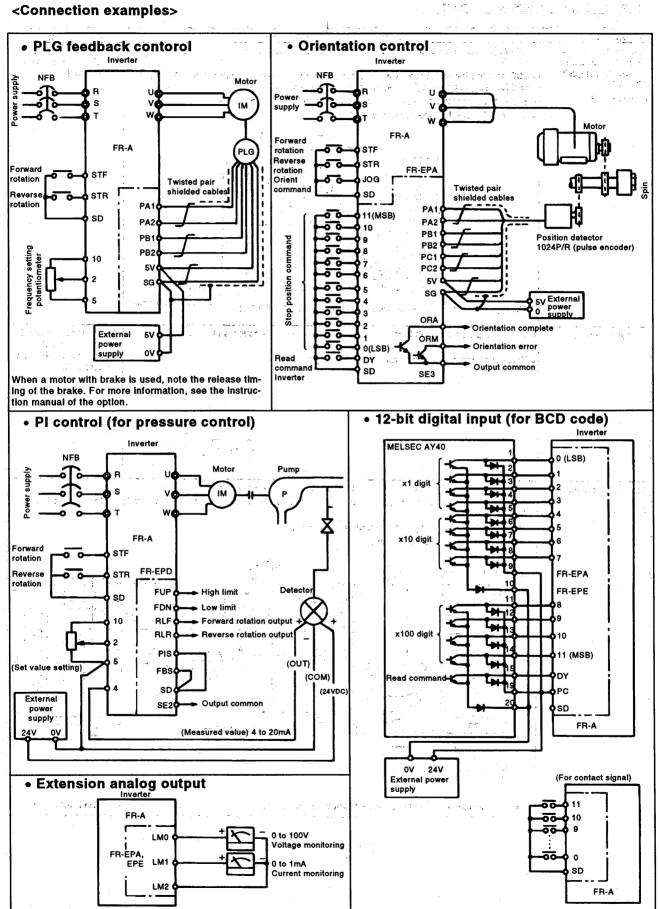



The states

28 – 5


7.2.3 External Dedicated Options

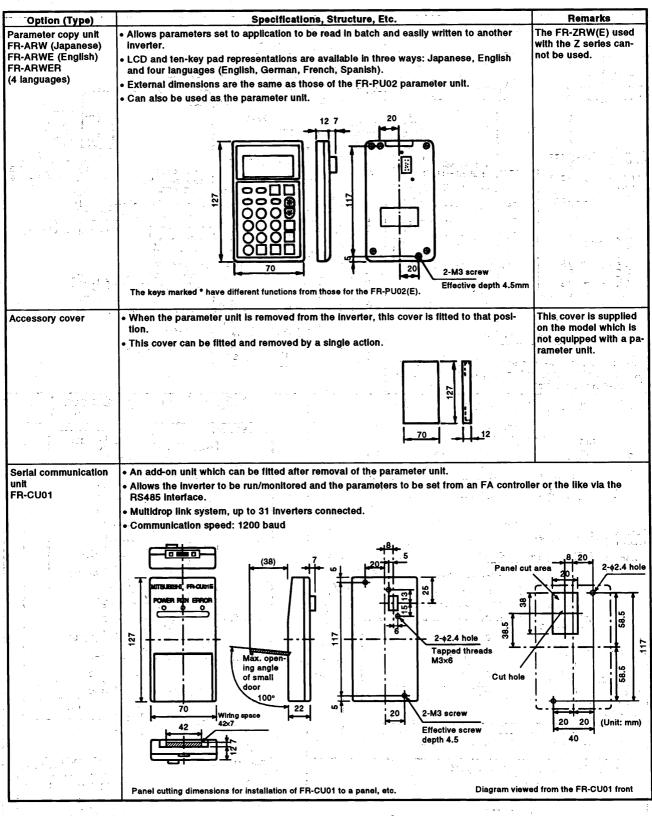

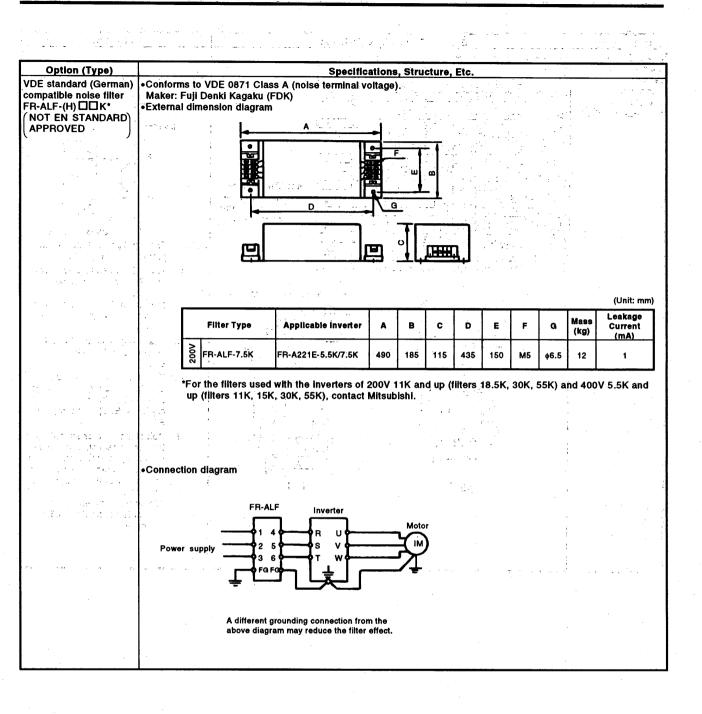


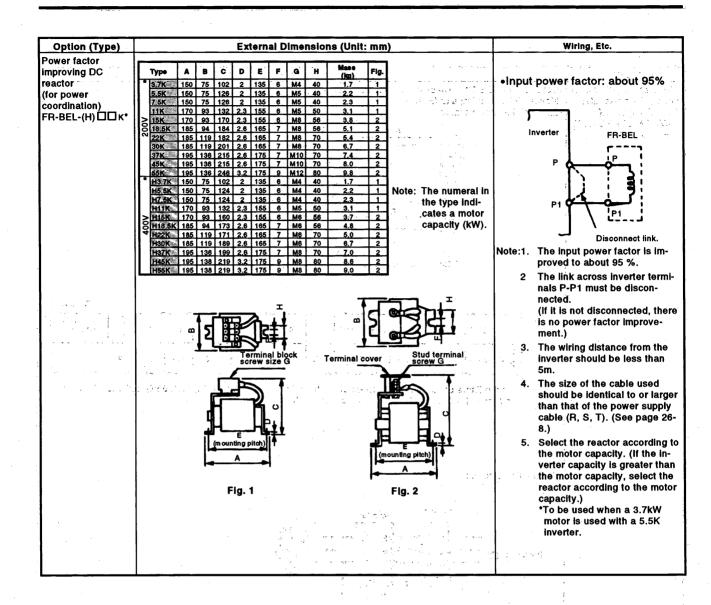

28 – 8

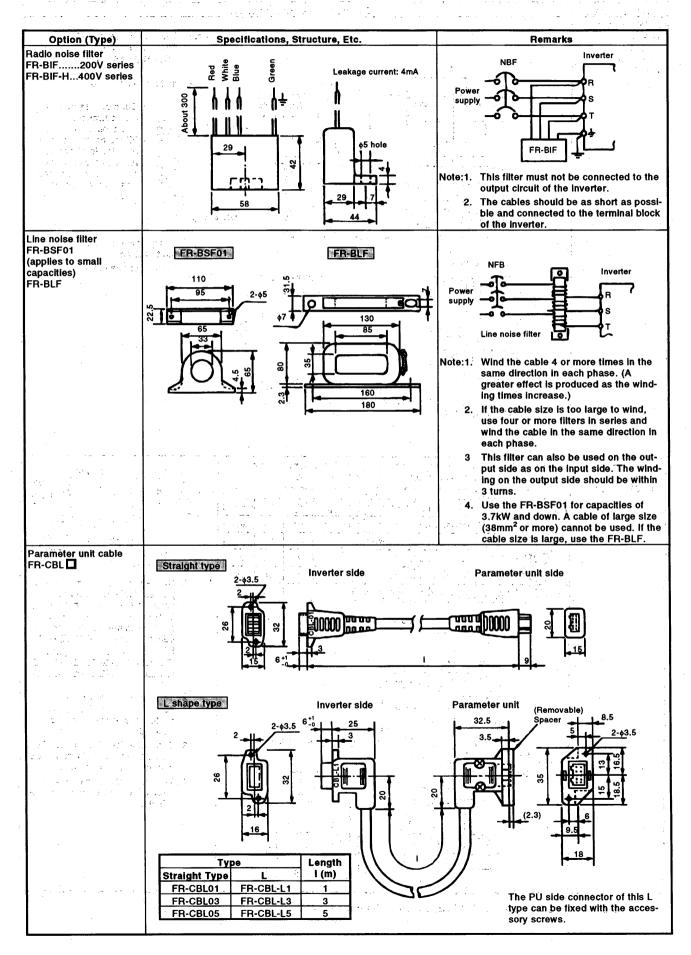

28 - 9

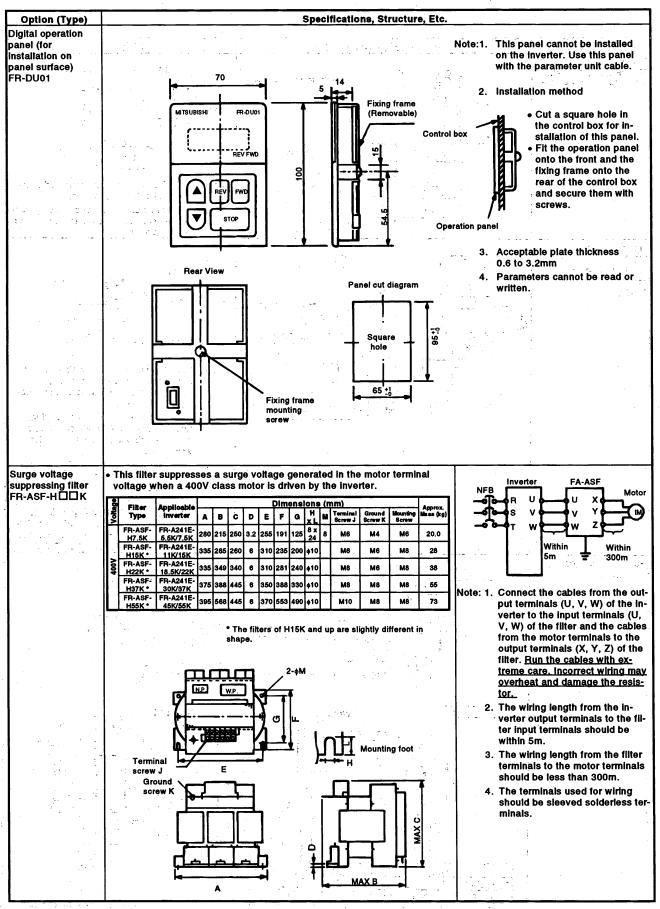

* (H) in the type code indicates that H is attached to the code for 400V.

28-10

÷.,

1 1 .	VARRANTY"
	Exceptions to the warranty, such as opportunity losses We do not warrant to reimburse you or your customers for opportunity losses, damage to produce other than ours, or any other businesses which result from a failure of our product, whether such failure has occured within the free warranty period or not.
2.	Repair after production stop If we stop producing any of our models (products), we will repair such model within seven years after the month of the year when its production is stopped.
3.	Delivery condition It is understood that a standard product which does not include setting and/or adjustment in applications is delivered when it arrives on your promises, and we are not obliged to adjust or test run such product on the spot.
	 will be operated under conditions hazardous to life. If you are planning to use this product in any specific application such as passenger mobile medical, aerospace, atomic, power or submarine junction equipment or system, please reference to our business department. This product is manufactured under rigorous quality control. However, safety devices should be installed if this product is applied to any facility that may result in a serious accident of loss due to a failure of this product.
	 This product should only be used with a load of three-phase induction motor.
	and a second
· · · · · ·	
· · · · · · · · · · · · · · · · · · ·	
· · · · · · · · · · · · · · · · · · ·	
· · · · · · · · · · · · · · · · · · ·	

ΜΕΜΟ

<u>.</u>	a and a second and a second
	i an
	an a
an a	an an sea an
· · · · · · · · · · · · · · · · · · ·	a ja kara esen olgano ele alegeneering. Arteno kara esen ele anten skare ele kara esen kara esen kara esen ele olgano ele olgano.
	가 있습니다. 그는 사람이 있었는 것 같은 것이 있는 것이 있는 것이 있는 것이 가지 않는 것이 있었다. 가지 않는 것이 있는 것이 가지 않는 것이 있다. 같은 것은 것이 가지 않는 것이 같은 것이 있었다. 것이 있는 것이 있는 것이 있는 것이 있는 것이 있는 것이 있다. 것이 있는 것이 같은 것이 같은 것이 있다. 같은 것이 같은 것이 있는 것이 있다. 것이 있는 것이 있는 것이 있는 것이 있는 것이 있는 것이 있는 것
	n an
i liti saite i	
J	
<u></u>	
. · · · ·	

REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	*Manual Number	Revision
June, 1996	IB (NA) 66637-A	First edition
	-	
		. }
	2	ι
	-	
		-
	r	
		2
	8	
	<u>``</u>	
	•	

