



EMERSON[™]
Industrial Automation



User Guide

Unidrive M600

Model size 3 to 10

Universal Variable Speed AC drive for induction and permanent magnet motors

Part Number: 0478-0004-03

Issue: 3



www.controltechniques.com

Original Instructions

For the purposes of compliance with the EU Machinery Directive 2006/42/EC:

General information

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation or adjustment of the optional operating parameters of the equipment or from mismatching the variable speed drive with the motor.

The contents of this guide are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous development and improvement, the manufacturer reserves the right to change the specification of the product or its performance, or the contents of the guide, without notice.

All rights reserved. No parts of this guide may be reproduced or transmitted in any form or by any means, electrical or mechanical including photocopying, recording or by an information storage or retrieval system, without permission in writing from the publisher.

Drive firmware version

This product is supplied with the latest firmware version. If this drive is to be connected to an existing system or machine, all drive firmware versions should be verified to confirm the same functionality as drives of the same model already present. This may also apply to drives returned from a Control Techniques Service Centre or Repair Centre. If there is any doubt please contact the supplier of the product.

The firmware version of the drive can be checked by looking at Pr **11.029**.

Environmental statement

Control Techniques is committed to minimising the environmental impacts of its manufacturing operations and of its products throughout their life cycle. To this end, we operate an Environmental Management System (EMS) which is certified to the International Standard ISO 14001. Further information on the EMS, our Environmental Policy and other relevant information is available on request, or can be found at www.greendrives.com.

The electronic variable-speed drives manufactured by Control Techniques have the potential to save energy and (through increased machine/process efficiency) reduce raw material consumption and scrap throughout their long working lifetime. In typical applications, these positive environmental effects far outweigh the negative impacts of product manufacture and end-of-life disposal.

Nevertheless, when the products eventually reach the end of their useful life, they must not be discarded but should instead be recycled by a specialist recycler of electronic equipment. Recyclers will find the products easy to dismantle into their major component parts for efficient recycling. Many parts snap together and can be separated without the use of tools, while other parts are secured with conventional fasteners. Virtually all parts of the product are suitable for recycling.

Product packaging is of good quality and can be re-used. Large products are packed in wooden crates, while smaller products come in strong cardboard cartons which themselves have a high recycled fibre content. If not re-used, these containers can be recycled. Polythene, used on the protective film and bags for wrapping product, can be recycled in the same way. Control Techniques' packaging strategy prefers easily-recyclable materials of low environmental impact, and regular reviews identify opportunities for improvement.

When preparing to recycle or dispose of any product or packaging, please observe local legislation and best practice.

REACH legislation

EC Regulation 1907/2006 on the Registration, Evaluation, Authorisation and restriction of Chemicals (REACH) requires the supplier of an article to inform the recipient if it contains more than a specified proportion of any substance which is considered by the European Chemicals Agency (ECHA) to be a Substance of Very High Concern (SVHC) and is therefore listed by them as a candidate for compulsory authorisation.

For current information on how this requirement applies in relation to specific Control Techniques products, please approach your usual contact in the first instance. Control Techniques position statement can be viewed at:

<http://www.controltechniques.com/REACH>

Copyright © May 2014 Control Techniques Ltd

Issue Number: 3

Drive Firmware: 01.07.01.00 onwards

For patent and intellectual property related information please go to: www.ctpatents.info.

How to use this guide

This user guide provides complete information for installing and operating the drive from start to finish.

The information is in logical order, taking the reader from receiving the drive through to fine tuning the performance.

NOTE

There are specific safety warnings throughout this guide, located in the relevant sections. In addition, Chapter 1 *Safety information* contains general safety information. It is essential that the warnings are observed and the information considered when working with or designing a system using the drive.

This map of the user guide helps to find the right sections for the task you wish to complete, but for specific information, refer to :

	Quick Start / bench testing	Familiarisation	System design	Programming and commissioning	Troubleshooting
1 Safety information	●	●	●	●	●
2 Product information		●	●		
3 Mechanical installation			●		
4 Electrical installation			●		
5 Getting started		●	●		
6 Basic parameters		●	●	●	
7 Running the motor	●	●	●	●	
8 Optimization			●	●	
9 NV media card operation			●	●	
10 Onboard PLC			●	●	
11 Advanced parameters			●	●	
12 Technical data		●	●	●	
13 Diagnostics					●
14 UL listing information			●	●	

Contents

1	Safety information	8	4	Electrical installation	60
1.1	Warnings, Cautions and Notes	8	4.1	Power connections	60
1.2	Electrical safety - general warning	8	4.2	AC supply requirements	65
1.3	System design and safety of personnel	8	4.3	Supplying the drive with DC	67
1.4	Environmental limits	8	4.4	DC bus paralleling	67
1.5	Access	8	4.5	24 Vdc supply	68
1.6	Fire protection	8	4.6	Low voltage operation	69
1.7	Compliance with regulations	8	4.7	Heatsink fan supply	69
1.8	Motor	8	4.8	Ratings	70
1.9	Mechanical brake control	8	4.9	Output circuit and motor protection	74
1.10	Adjusting parameters	8	4.10	Braking	77
1.11	Electrical installation	9	4.11	Ground leakage	81
2	Product information	10	4.12	EMC (Electromagnetic compatibility)	82
2.1	Introduction	10	4.13	Communications connections	91
2.2	Model number	10	4.14	Control connections	91
2.3	Ratings	11	4.15	SAFE TORQUE OFF (STO)	97
2.4	Operating modes	15	5	Getting started	98
2.5	Drive features	16	5.1	Understanding the display	98
2.6	Nameplate description	17	5.2	Keypad operation	98
2.7	Options	18	5.3	Menu structure	100
2.8	Items supplied with the drive	21	5.4	Menu 0	101
3	Mechanical installation	23	5.5	Advanced menus	101
3.1	Safety information	23	5.6	Changing the operating mode	103
3.2	Planning the installation	23	5.7	Saving parameters	103
3.3	Terminal cover removal	24	5.8	Restoring parameter defaults	104
3.4	Installing / removing option modules and keypads	30	5.9	Parameter access level and security	104
3.5	Dimensions and mounting methods	32	5.10	Displaying parameters with non-default values only	105
3.6	Enclosure for standard drives	43	5.11	Displaying destination parameters only	105
3.7	Enclosure design and drive ambient temperature	45	5.12	Communications	105
3.8	Heatsink fan operation	45	6	Basic parameters	106
3.9	Enclosing standard drive for high environmental protection	45	6.1	Menu 0: Basic parameters	106
3.10	Heatsink mounted brake resistor	48	6.2	Parameter descriptions	110
3.11	External EMC filter	51	6.3	Full descriptions	112
3.12	Line reactor mounting dimensions for size 9E and 10	54	7	Running the motor	125
3.13	Electrical terminals	55	7.1	Quick start connections	125
3.14	Routine maintenance	58	7.2	Changing the operating mode	125
			7.3	Quick start commissioning / start-up	130
			7.4	Quick start commissioning / start-up using Unidrive M Connect (V02.00.00.00 onwards)	134
			7.5	Diagnostics	138
			8	Optimization	139
			8.1	Motor map parameters	139
			8.2	Maximum motor rated current	151
			8.3	Current limits	151
			8.4	Motor thermal protection	151
			8.5	Switching frequency	152
			8.6	High speed operation	152

9	NV Media Card Operation	154	14	UL listing information	284
9.1	Introduction	154	14.1	General	284
9.2	NV Media Card support	154	14.2	Mounting	284
9.3	Transferring data	155	14.3	Environment	284
9.4	Data block header information	156	14.4	Electrical installation	284
9.5	NV Media Card parameters	157	14.5	UL listed accessories	284
9.6	NV Media Card trips	158	14.6	Motor overload protection	284
10	Onboard PLC	159	14.7	Motor overspeed protection	284
10.1	Onboard PLC and Machine Control Studio	159	14.8	Thermal memory retention	284
10.2	Benefits	159	14.9	Electrical Ratings	284
10.3	Features	159	14.10	cUL requirements for 575 V frame size 7 and 8	284
10.4	Onboard PLC parameters	160	14.11	Group installation	285
11	Advanced parameters	161			
11.1	Menu 1: Frequency / speed reference	172			
11.2	Menu 2: Ramps	176			
11.3	Menu 3: Frequency slaving, speed feedback and speed control	179			
11.4	Menu 4: Torque and current control	183			
11.5	Menu 5: Motor control	187			
11.6	Menu 6: Sequencer and clock	192			
11.7	Menu 7: Analog I/O	196			
11.8	Menu 8: Digital I/O	198			
11.9	Menu 9: Programmable logic, motorized pot, binary sum and timers	202			
11.10	Menu 10: Status and trips	208			
11.11	Menu 11: General drive set-up	210			
11.12	Menu 12: Threshold detectors, variable selectors and brake control function	212			
11.13	Menu 13: Standard motion controller	220			
11.14	Menu 14: User PID controller	224			
11.15	Menus 15, 16 and 17: Option module set-up	227			
11.16	Menu 18: Application menu 1	228			
11.17	Menu 19: Application menu 2	228			
11.18	Menu 20: Application menu 3	228			
11.19	Menu 21: Second motor parameters	229			
11.20	Menu 22: Additional Menu 0 set-up	230			
12	Technical data	232			
12.1	Drive technical data	232			
12.2	Optional external EMC filters	256			
13	Diagnostics	258			
13.1	Status modes (Keypad and LED status)	258			
13.2	Trip indications	258			
13.3	Identifying a trip / trip source	259			
13.4	Trips, Sub-trip numbers	260			
13.5	Internal / Hardware trips	282			
13.6	Alarm indications	282			
13.7	Status indications	282			
13.8	Programming error indications	283			
13.9	Displaying the trip history	283			
13.10	Behaviour of the drive when tripped	283			

Declaration of Conformity

Control Techniques Ltd
The Gro
Newtown
Powys
UK
SY16 3BE

Moteurs Leroy-Somer
Usine des Agriers
Boulevard Marcellin Leroy
CS10015
16915 Angoulême Cedex 9
France

This declaration applies to Unidrive M variable speed drive products, comprising models numbers as shown below:

The AC variable speed drive products listed above have been designed and manufactured in accordance with the following European harmonized standards:

Maaa-bbbbbbbb Valid characters:	
aaa	600, 700, 701, 702, 800, 810
bbbbbbbb	03200050A, 03200066A, 03200080A, 03200106A, 03400025A, 03400031A, 03400045A, 03400062A, 03400078A, 03400100A 04200137A, 04200185A, 04400150, 04400172A 05200250A, 05400270A, 05400300A, 05500030A, 05500040A, 05500069A 06200330A, 06200440A, 06400350A, 06400420A, 06400470A, 06500100A, 06500150A, 06500190A, 06500230A, 06500290A, 06500350A 07200610A, 07200750A, 07200830A, 07400660A, 07400770A, 07401000A, 07500440A, 07500550A, 07600190A, 07600240A, 07600290A, 07600380A, 07600440A, 07600540A 082001160A, 08201320A, 08401340A, 08401570A, 08500630A, 08500860A, 08600630A, 08600860A 09201760E, 09202190E, 09402000E, 09402240E, 09501040E, 09501310E, 09601040E, 09601310E 10202830E, 10203000E, 10402700E, 10403200E, 10501520E, 10501900E, 10601500E, 10601780E

EN 61800-5-1:2007	Adjustable speed electrical power drive systems - safety requirements - electrical, thermal and energy
EN 61800-3:2004	Adjustable speed electrical power drive systems. EMC product standard including specific test methods
EN 61000-6-2:2005	Electromagnetic compatibility (EMC). Generic standards. Immunity standard for industrial environments
EN 61000-6-4:2007	Electromagnetic compatibility (EMC). Generic standards. Emission standard for industrial environments
EN 61000-3-2:2006	Electromagnetic compatibility (EMC), Limits, Limits for harmonic current emissions (equipment input current <16 A per phase)
EN 61000-3-3:2008	Electromagnetic compatibility (EMC), Limits, Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current <16 A

EN 61000-3-2:2006 Applicable where input current <16 A. No limits apply for professional equipment where input power >1 kW.

These products comply with the Low Voltage Directive 2006/95/EC and the Electromagnetic Compatibility Directive 2004/108/EC.



T. Alexander
Control Techniques Vice President, Technology
Newtown

Date: 11th April 2014

These electronic drive products are intended to be used with appropriate motors, controllers, electrical protection components and other equipment to form complete end products or systems. Compliance with safety and EMC regulations depends upon installing and configuring drives correctly, including using the specified input filters. The drives must be installed only by professional assemblers who are familiar with requirements for safety and EMC. The assembler is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used. Refer to the User Guide. An EMC Data Sheet is also available giving detailed EMC information.

Declaration of Conformity (including 2006 Machinery Directive)

Control Techniques Ltd
The Gro
Newtown
Powys
UK
SY16 3BE

Moteurs Leroy-Somer
Usine des Agriers
Boulevard Marcellin Leroy
CS10015
16915 Angoulême Cedex 9
France

This declaration applies to the Unidrive M variable speed drive product range, comprising model numbers composed as shown below:

The harmonized standards used are shown below:

Maaa-bbbbbbbbbb Valid characters:	
aaa	600, 700, 701, 702, 800, 810
bbbbbbbbb	03200050A, 03200066A, 03200080A, 03200106A, 03400025A, 03400031A, 03400045A, 03400062A, 03400078A, 03400100A 04200137A, 04200185A, 04400150, 04400172A 05200250A, 05400270A, 05400300A, 05500030A, 05500040A, 05500069A 06200330A, 06200440A, 06400350A, 06400420A, 06400470A, 06500100A, 06500150A, 06500190A, 06500230A, 06500290A, 06500350A 07200610A, 07200750A, 07200830A, 07400660A, 07400770A, 07401000A, 07500440A, 07500550A, 07600190A, 07600240A, 07600290A, 07600380A, 07600440A, 07600540A 082001160A, 08201320A, 08401340A, 08401570A, 08500630A, 08500860A, 08600630A, 08600860A 09201760E, 09202190E, 09402000E, 09402240E, 09501040E, 09501310E, 09601040E, 09601310E 10202830E, 10203000E, 10402700E, 10403200E, 10501520E, 10501900E, 10601500E, 10601780E

EN 61800-5-1:2007	Adjustable speed electrical power drive systems - safety requirements - electrical, thermal and energy
EN 61800-3:2004	Adjustable speed electrical power drive systems. EMC product standard including specific test methods
EN 61000-6-2:2005	Electromagnetic compatibility (EMC). Generic standards. Immunity standard for industrial environments
EN 61000-6-4:2007	Electromagnetic compatibility (EMC). Generic standards. Emission standard for industrial environments
EN 61000-3-2:2006	Electromagnetic compatibility (EMC), Limits, Limits for harmonic current emissions (equipment input current <16 A per phase)
EN 61000-3-3:2008	Electromagnetic compatibility (EMC), Limits, Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current <16 A

This declaration relates to these products when used as a safety component of a machine. Only the SAFE TORQUE OFF function may be used for a safety function of a machine. None of the other functions of the drive may be used to carry out a safety function.

These products fulfil all the relevant provisions of Directives 2006/42/EC (The Machinery Directive) and 2004/108/EC (The EMC Directive).

EC type-examination has been carried out by the following notified body:

TÜV Rheinland Industrie Service GmbH
Am Grauen Stein
D-51105 Köln

Notified Body identification number: 0035

EC type-examination certificate number: 01/205/5270/12

Person authorised to compile the technical file:

C Hargis
Chief Engineer
Newtown, Powys. UK

T. Alexander
VP Technology
Date: 10th April 2014
Place: Newtown, Powys. UK




IMPORTANT NOTICE

These drive products are intended to be used with appropriate motors, sensors, electrical protection components and other equipment to form complete systems. It is the responsibility of the installer to ensure that the design of the complete machine, including its safety-related control system, is carried out in accordance with the requirements of the Machinery Directive and any other relevant legislation. The use of a safety-related drive in itself does not ensure the safety of the machine.

Compliance with safety and EMC regulations depends upon installing and configuring inverters correctly.


1 Safety information

1.1 Warnings, Cautions and Notes



A Warning contains information which is essential for avoiding a safety hazard.

WARNING



A Caution contains information which is necessary for avoiding a risk of damage to the product or other equipment.

CAUTION

NOTE

A Note contains information which helps to ensure correct operation of the product.

1.2 Electrical safety - general warning

The voltages used in the drive can cause severe electrical shock and/or burns, and could be lethal. Extreme care is necessary at all times when working with or adjacent to the drive.

Specific warnings are given at the relevant places in this User Guide.

1.3 System design and safety of personnel

The drive is intended as a component for professional incorporation into complete equipment or a system. If installed incorrectly, the drive may present a safety hazard.

The drive uses high voltages and currents, carries a high level of stored electrical energy, and is used to control equipment which can cause injury.

Close attention is required to the electrical installation and the system design to avoid hazards either in normal operation or in the event of equipment malfunction. System design, installation, commissioning/start-up and maintenance must be carried out by personnel who have the necessary training and experience. They must read this safety information and this User Guide carefully.

The STOP and SAFE TORQUE OFF functions of the drive do not isolate dangerous voltages from the output of the drive or from any external option unit. The supply must be disconnected by an approved electrical isolation device before gaining access to the electrical connections.

With the sole exception of the SAFE TORQUE OFF function, none of the drive functions must be used to ensure safety of personnel, i.e. they must not be used for safety-related functions.

Careful consideration must be given to the functions of the drive which might result in a hazard, either through their intended behavior or through incorrect operation due to a fault. In any application where a malfunction of the drive or its control system could lead to or allow damage, loss or injury, a risk analysis must be carried out, and where necessary, further measures taken to reduce the risk - for example, an over-speed protection device in case of failure of the speed control, or a fail-safe mechanical brake in case of loss of motor braking.

The SAFE TORQUE OFF function may be used in a safety-related application. The system designer is responsible for ensuring that the complete system is safe and designed correctly according to the relevant safety standards.

1.4 Environmental limits

Instructions in this User Guide regarding transport, storage, installation and use of the drive must be complied with, including the specified environmental limits. Drives must not be subjected to excessive physical force.

1.5 Access

Drive access must be restricted to authorized personnel only. Safety regulations which apply at the place of use must be complied with.

1.6 Fire protection

The drive enclosure is not classified as a fire enclosure. A separate fire enclosure must be provided. For further information, refer to section 3.2.5 *Fire protection* on page 23.

1.7 Compliance with regulations

The installer is responsible for complying with all relevant regulations, such as national wiring regulations, accident prevention regulations and electromagnetic compatibility (EMC) regulations. Particular attention must be given to the cross-sectional areas of conductors, the selection of fuses or other protection, and protective ground (earth) connections.

This User Guide contains instruction for achieving compliance with specific EMC standards.

Within the European Union, all machinery in which this product is used must comply with the following directives:

2006/42/EC Safety of machinery.

2004/108/EC: Electromagnetic Compatibility.

1.8 Motor

Ensure the motor is installed in accordance with the manufacturer's recommendations. Ensure the motor shaft is not exposed.

Standard squirrel cage induction motors are designed for single speed operation. If it is intended to use the capability of the drive to run a motor at speeds above its designed maximum, it is strongly recommended that the manufacturer is consulted first.

Low speeds may cause the motor to overheat because the cooling fan becomes less effective. The motor should be installed with a protection thermistor. If necessary, an electric forced vent fan should be used.

The values of the motor parameters set in the drive affect the protection of the motor. The default values in the drive should not be relied upon.

It is essential that the correct value is entered in Pr **00.046** motor rated current. This affects the thermal protection of the motor.

1.9 Mechanical brake control

The brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.

1.10 Adjusting parameters

Some parameters have a profound effect on the operation of the drive. They must not be altered without careful consideration of the impact on the controlled system. Measures must be taken to prevent unwanted changes due to error or tampering.

1.11 Electrical installation

1.11.1 Electric shock risk

The voltages present in the following locations can cause severe electric shock and may be lethal:

AC supply cables and connections

Output cables and connections

Many internal parts of the drive, and external option units

Unless otherwise indicated, control terminals are single insulated and must not be touched.

1.11.2 Stored charge

The drive contains capacitors that remain charged to a potentially lethal voltage after the AC supply has been disconnected. If the drive has been energized, the AC supply must be isolated at least ten minutes before work may continue.

2 Product information

2.1 Introduction

Universal AC and servo drive

Unidrive M600 delivers maximum machine performance with sensorless induction and sensorless permanent magnet motor control, for dynamic and efficient machine operation. An optional encoder port can be used for precise closed loop velocity applications and digital lock / frequency following.

Features

- Universal high performance drive for induction and sensorless permanent magnet motors.
- Onboard IEC 61131-3 programmable automation
- NV Media Card for parameter copying and data storage
- 485 serial communications interface
- Single channel SAFE TORQUE OFF (STO) input


Optional features

- Select up to three option modules

2.2 Model number

The way in which the model numbers for the Unidrive M600 range are formed is illustrated below:

Figure 2-1 Model number

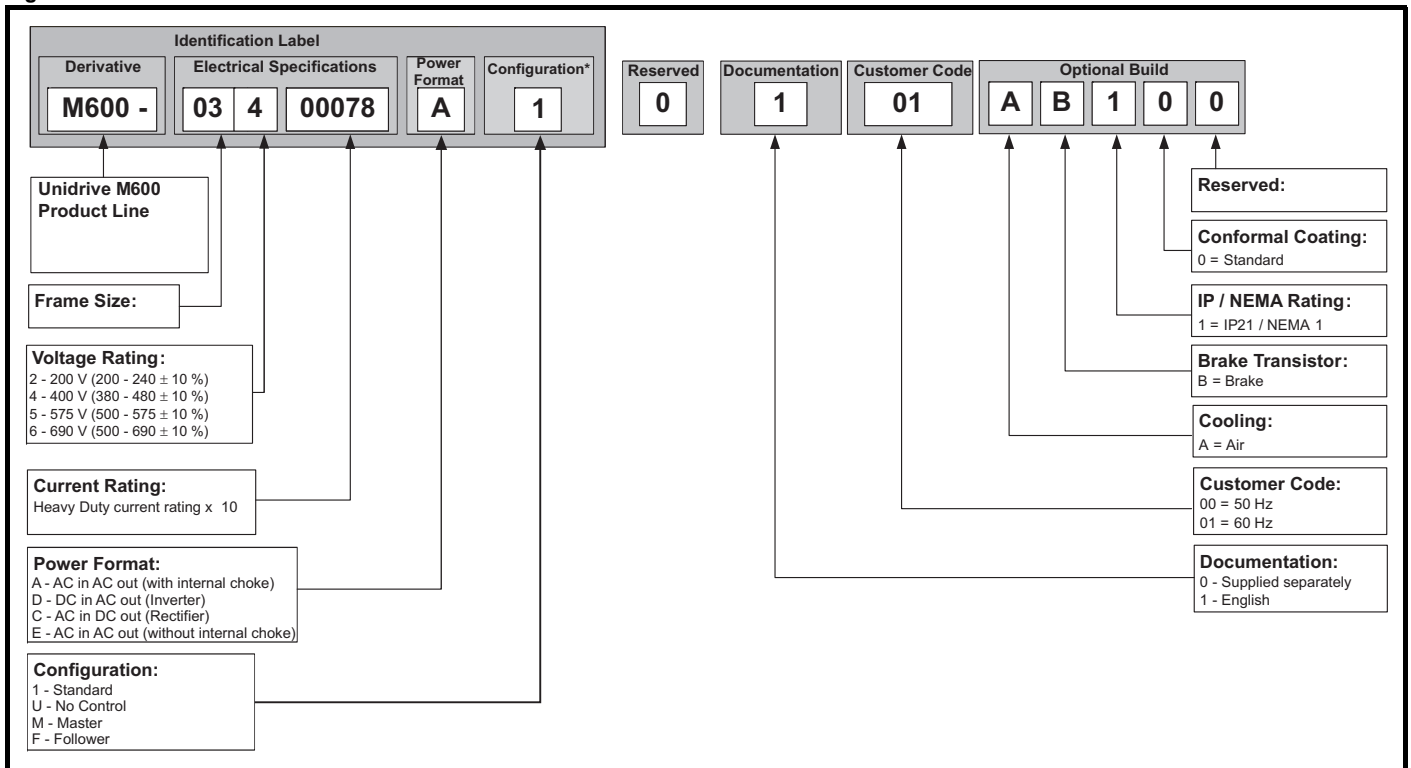


* Only shown on Frame 9E and 10 identification label.

NOTE

For simplicity, a Frame 9 drive with no internal choke (i.e. model 09xxxxxE) is referred to as a Frame 9E and a Frame 9 drive with an internal choke (i.e. model 09xxxxxA) is referred to as a Frame 9A. Any reference to Frame 9 is applicable to both sizes 9E and 9A.

2.3 Ratings

The drive is dual rated.
 The setting of the motor rated current determines which rating applies - Heavy Duty or Normal Duty.
 The two ratings are compatible with motors designed to IEC60034.
 The graph aside illustrates the difference between Normal Duty and Heavy Duty with respect to continuous current rating and short term overload limits.

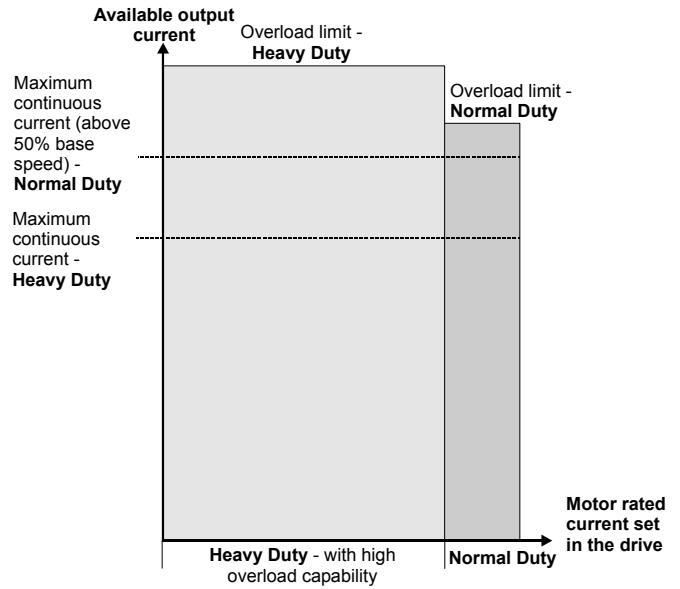

Normal Duty

For applications which use Self ventilated (TENV/TEFC) induction motors and require a low overload capability, and full torque at low speeds is not required (e.g. fans, pumps).
 Self ventilated (TENV/TEFC) induction motors require increased protection against overload due to the reduced cooling effect of the fan at low speed. To provide the correct level of protection the I^2t software operates at a level which is speed dependent. This is illustrated in the graph below.

NOTE

The speed at which the low speed protection takes effect can be changed by the setting of *Low Speed Thermal Protection Mode* (04.025). The protection starts when the motor speed is below 15 % of base speed when Pr 04.025 = 0 (default) and below 50 % when Pr 04.025 = 1.

Heavy Duty (default)

For constant torque applications or applications which require a high overload capability, or full torque is required at low speeds (e.g. winders, hoists).
 The thermal protection is set to protect force ventilated induction motors and permanent magnet servo motors by default.


NOTE

If the application uses a self ventilated (TENV/TEFC) induction motor and increased thermal protection is required for speeds below 50 % base speed, then this can be enabled by setting *Low Speed Thermal Protection Mode* (04.025) = 1.

Operation of motor I^2t protection


Motor I^2t protection is fixed as shown below and is compatible with:

- Self ventilated (TENV/TEFC) induction motors

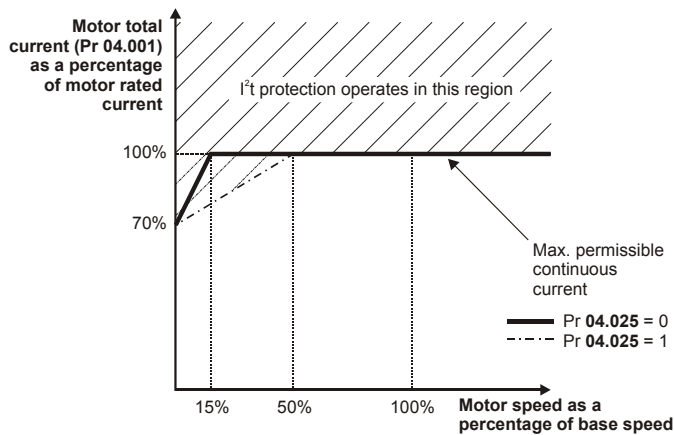

Motor I^2t protection defaults to be compatible with:

- Forced ventilation induction motors
- Permanent magnet servo motors

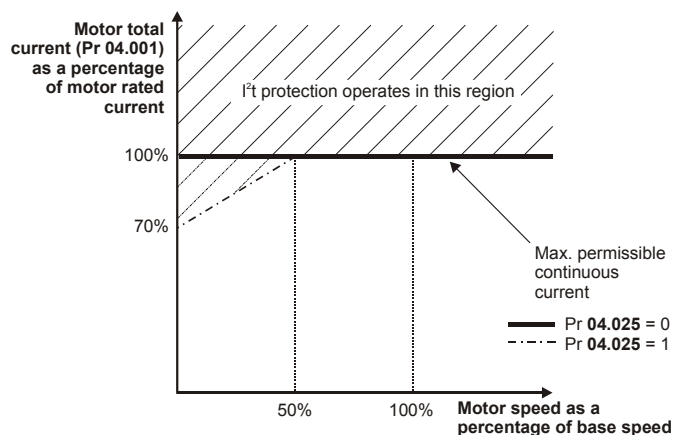

The continuous current ratings given are for maximum 40 °C (104 °F), 1000 m altitude and 3.0 kHz switching frequency. Derating is required for higher switching frequencies, ambient temperature >40 °C (104 °F) and high altitude. For further information, refer to Chapter 12 *Technical data* on page 269.

Table 2-1 200 V drive ratings (200 V to 240 V ±10 %)

Model		Normal Duty				Heavy Duty				
		Maximum continuous output current	Nominal power at 230 V	Motor power at 230 V	Peak current	Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 230 V	Motor power at 230 V
		A	kW	hp	A	A	A	A	kW	hp
Frame size 3	03200050	6.6	1.1	1.5	7.2	5	7.5	10	0.75	1
	03200066	8	1.5	2	8.8	6.6	9.9	13.2	1.1	1.5
	03200080	11	2.2	3	12.1	8	12	16	1.5	2
	03200106	12.7	3	3	13.9	10.6	15.9	21.2	2.2	3
Frame size 4	04200137	18	4	5	19.8	13.7	20.5	27.4	3	3
	04200185	25	5.5	7.5	27.5	18.5	27.7	37	4	5
Frame size 5	05200250	30	7.5	10	33	25	37.5	50	5.5	7.5
Frame size 6	06200330	50	11	15	55	33	49.5	66	7.5	10
	06200440	58	15	20	63.8	44	66	88	11	15
Frame size 7	07200610	75	18.5	25	82.5	61	91.5	122	15	20
	07200750	94	22	30	103.4	75	112.5	150	18.5	25
	07200830	117	30	40	128.7	83	124.5	166	22	30
Frame size 8	08201160	149	37	50	163.9	116	174	232	30	40
	08201320	180	45	60	198	132	198	264	37	50
Frame size 9	09201760	216	55	75	237.6	176	264	308	45	60
	09202190	266	75	100	292.6	219	328.5	383.25	55	75
Frame size 10	10202830	325	90	125	357.5	283	424.5	495.25	75	100
	10203000	360	110	150	396	300	450	525	90	125

Table 2-2 400 V drive ratings (380 V to 480 V ±10 %)

Model		Normal Duty				Heavy Duty				
		Maximum continuous output current	Nominal power at 400 V	Motor power at 460 V	Peak current	Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 400 V	Motor power at 460 V
		A	kW	hp	A	A	A	A	kW	hp
Frame size 3	03400025	3.4	1.1	1.5	3.7	2.5	3.7	5.0	0.75	1.0
	03400031	4.5	1.5	2.0	4.9	3.1	4.6	6.2	1.1	1.5
	03400045	6.2	2.2	3.0	6.8	4.5	6.7	9.0	1.5	2.0
	03400062	7.7	3.0	5.0	8.4	6.2	9.3	12.4	2.2	3.0
	03400078	10.4	4.0	5.0	11.4	7.8	11.7	15.6	3.0	5.0
	03400100	12.3	5.5	7.5	13.5	10.0	15.0	20.0	4.0	5.0
Frame size 4	04400150	18.5	7.5	10.0	20.3	15.0	22.5	30.0	5.5	10.0
	04400172	24.0	11.0	15.0	26.4	17.2	25.8	34.4	7.5	10.0
Frame size 5	05400270	30.0	15.0	20.0	33.0	27.0	40.5	54.0	11.0	20.0
	05400300	31.0	15.0	20.0	34.1	30.0	45.0	60.0	15.0	20.0
Frame size 6	06400350	38.0	18.5	25.0	41.8	35.0	52.5	70.0	15.0	25.0
	06400420	48.0	22.0	30.0	52.8	42.0	63.0	84.0	18.5	30.0
	06400470	63.0	30.0	40.0	69.3	47.0	70.5	94.0	22.0	30.0
Frame size 7	07400660	79	37	50	86.9	66	99	132	30	50
	07400770	94	45	60	103.4	77	115.5	154	37	60
	07401000	112	55	75	123.2	100	150	200	45	75
Frame size 8	08401340	155	75	100	170.5	134	201	268	55	100
	08401570	184	90	125	202.4	157	235.5	314	75	125
Frame size 9	09402000	221	110	150	243.1	200*	300	350	90	150
	09402240	266*	132	200	292.6	224*	336	392	110	150
Frame size 10	10402700	320	160	250	352	270	405	472.5	132	200
	10403200	361	200	300	397.1	320*	480	560	160	250

* These ratings are for 2 kHz switching frequency. For ratings at 3 kHz switching frequency refer to section 12.1.1 *Power and current ratings (Derating for switching frequency and temperature)* on page 269.

Table 2-3 575 V drive ratings (500 V to 575 V ±10 %)

Model		Normal Duty				Heavy Duty				
		Maximum continuous output current	Nominal power at 575 V	Motor power at 575 V	Peak current	Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 575 V	Motor power at 575 V
		A	kW	hp	A	A	A	A	kW	hp
Frame size 5	05500030	3.9	2.2	3	4.3	3	4.5	6	1.5	2
	05500040	6.1	4	5	6.7	4	6	8	2.2	3
	05500069	10	5.5	7.5	11	6.9	10.3	13.8	4	5.0
Frame size 6	06500100	12	7.5	10	13.2	10	15	20	5.5	7.5
	06500150	17	11	15	18.7	15	22.5	30	7.5	10
	06500190	22	15	20	24.2	19	28.5	38	11	15
	06500230	27	18.5	25	29.7	23	34.5	46	15	20
	06500290	34	22	30	37.4	29	43.5	58	18.5	25
	06500350	43	30	40	47.3	35	52.5	70	22	30
Frame size 7	07500440	53	37	50	58.3	44	66	88	30	40
	07500550	73	45	60	80.3	55	82.5	110	37	50
Frame size 8	08500630	86	55	75	94.6	63	94.5	126	45	60
	08500860	108	75	100	118.8	86	129	172	55	75
Frame size 9	09501040	125	90	125	137.5	104	156	182	75	100
	09501310	150	110	150	165	131	196.5	229.25	90	125
Frame size 10	10501520	200	130	200	220	152	228	266	110	150
	10501900	200	150	200	220	190	285	332.5	132	200

Table 2-4 690 V drive ratings (500 V to 690 V ±10 %)

Model		Normal Duty				Heavy Duty				
		Maximum continuous output current	Nominal power at 690 V	Motor power at 690 V	Peak current	Maximum continuous output current	Open loop peak current	RFC peak current	Nominal power at 690 V	Motor power at 690 V
		A	kW	hp	A	A	A	A	kW	hp
Frame size 7	07600190	23	18.5	25	25.3	19	28.5	38	15	20
	07600240	30	22	30	33	24	36	48	18.5	25
	07600290	36	30	40	39.6	29	43.5	58	22	30
	07600380	46	37	50	50.6	38	57	76	30	40
	07600440	52	45	60	57.2	44	66	88	37	50
	07600540	73	55	75	80.3	54	81	108	45	60
Frame size 8	08600630	86	75	100	94.6	63	94.5	126	55	75
	08600860	108	90	125	118.8	86	129	172	75	100
Frame size 9	09601040	125	110	150	137.5	104	156	182	90	125
	09601310	155	132	175	170.5	131	196.5	229.25	110	150
Frame size 10	10601500	172	160	200	189.2	150	225	262.5	132	175
	10601780	197	185	250	216.7	178	261	311.5	160	200

2.3.1 Typical short term overload limits

The maximum percentage overload limit changes depending on the selected motor. Variations in motor rated current, motor power factor and motor leakage inductance all result in changes in the maximum possible overload. The exact value for a specific motor can be calculated using the equations detailed in Menu 4 in the *Parameter Reference Guide*.

Typical values are shown in the table below for RFC (RFC-A or RFC-S) and open loop (OL) modes:

Table 2-5 Typical overload limits

Operating mode	RFC from cold	RFC from 100 %	Open loop from cold	Open loop from 100 %
Normal Duty overload with motor rated current = drive rated current	110 % for 165 s	110 % for 9 s	110 % for 165 s	110 % for 9 s
Heavy Duty overload with motor rated current = drive rated current (size 8 and below)	200 % for 28 s	200 % for 3 s	150 % for 60 s	150 % for 7 s
Heavy Duty overload with motor rated current = drive rated current (size 9E and 10)	175 % for 42 s	175 % for 5 s	150 % for 60 s	150 % for 7 s

Generally the drive rated current is higher than the matching motor rated current allowing a higher level of overload than the default setting.

The time allowed in the overload region is proportionally reduced at very low output frequency on some drive ratings.

NOTE

The maximum overload level which can be attained is independent of the speed.

2.4 Operating modes

The drive is designed to operate in any of the following modes:

Open loop mode

- Open loop vector mode
- Fixed V/F mode (V/Hz)
- Quadratic V/F mode (V/Hz)

RFC - A

- With position feedback sensor (requires optional SI-Encoder module)
- Without position feedback sensor (Sensorless)

RFC - S

- Without position feedback sensor (Sensorless)

2.4.1 Open loop mode

The drive applies power to the motor at frequencies varied by the user. The motor speed is a result of the output frequency of the drive and slip due to the mechanical load. The drive can improve the speed control of the motor by applying slip compensation. The performance at low speed depends on whether V/F mode or open loop vector mode is selected.

Open loop vector mode

The voltage applied to the motor is directly proportional to the frequency except at low speed where the drive uses motor parameters to apply the correct voltage to keep the flux constant under varying load conditions.

Typically 100 % torque is available down to 1 Hz for a 50 Hz motor.

Fixed V/F mode

The voltage applied to the motor is directly proportional to the frequency except at low speed where a voltage boost is provided which is set by the user. This mode can be used for multi-motor applications.

Typically 100 % torque is available down to 4 Hz for a 50 Hz motor.

Quadratic V/F mode

The voltage applied to the motor is directly proportional to the square of the frequency except at low speed where a voltage boost is provided which is set by the user. This mode can be used for running fan or pump applications with quadratic load characteristics or for multi-motor applications. This mode is not suitable for applications requiring a high starting torque.

2.4.2 RFC-A mode

Rotor Flux Control for Asynchronous (induction) motors (**RFC-A**) encompasses closed loop vector control with and without a position feedback device.

With position feedback (requires optional SI-Encoder module)

For use with induction motors with a feedback device installed. The drive directly controls the speed of the motor using the feedback device to ensure the rotor speed is exactly as demanded. Motor flux is accurately controlled at all times to provide full torque all the way down to zero speed.

Without position feedback (Sensorless)

Sensorless mode provides closed loop control without the need for position feedback by using current, voltages and key operating motor parameters to estimate the motor speed. It can eliminate instability traditionally associated with open loop control such as operating large motors with light loads at low frequencies.

2.4.3 RFC- S

Rotor Flux Control for Synchronous (permanent magnet brushless) motors (**RFC-S**) provides closed loop control without a position feedback device.

Without position feedback


For use with permanent magnet brushless motors without a feedback device installed.

Flux control is not required because the motor is self excited by the permanent magnets which form part of the rotor.

Full torque is available all the way down to zero speed, with salient motors.

2.5 Drive features

Figure 2-2 Features of the drive (size 3 to 10)

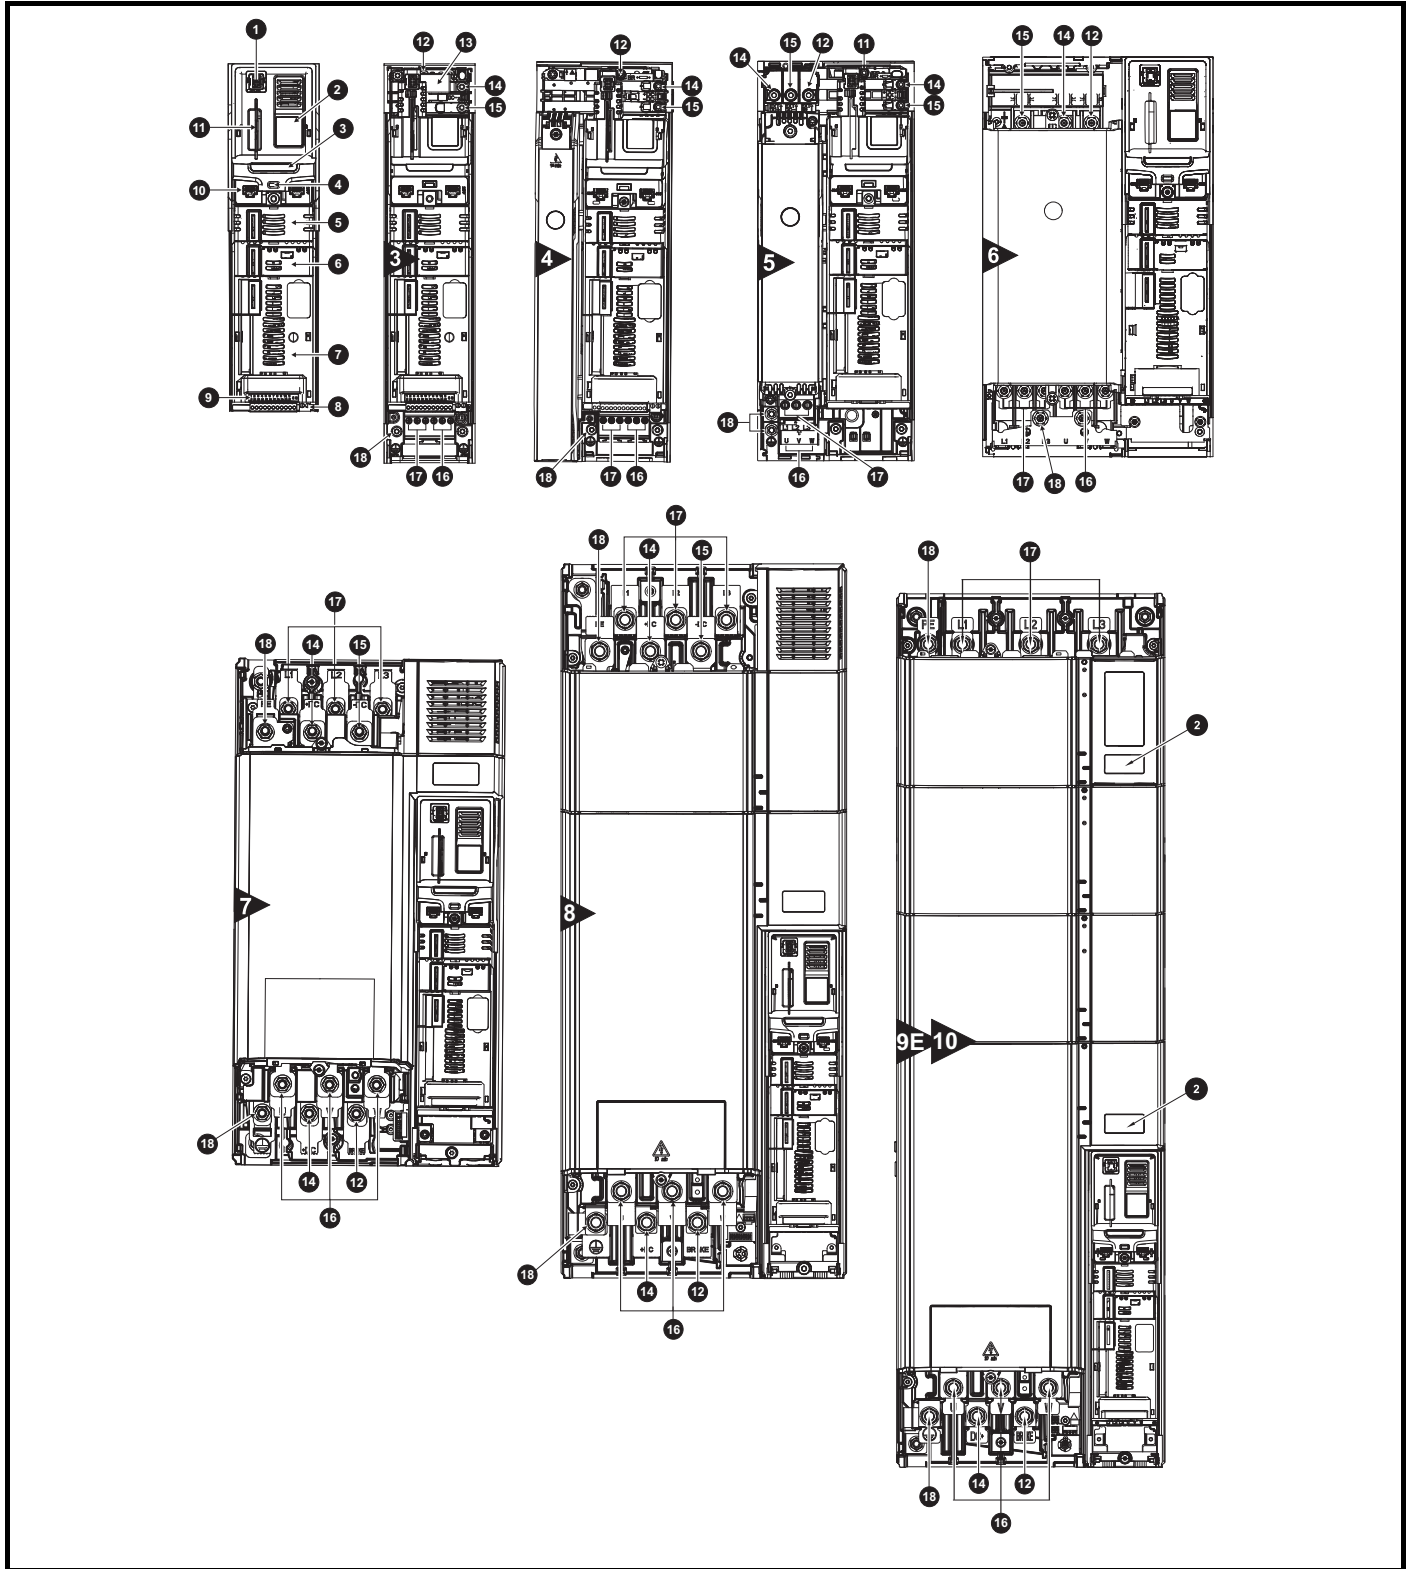


Key

- | | | | |
|-------------------------|-------------------------|-------------------------|---------------------------|
| 1. Keypad connection | 6. Option module slot 2 | 11. NV media card slot | 16. Motor connections |
| 2. Rating label | 7. Option module slot 3 | 12. Braking terminal | 17. AC supply connections |
| 3. Identification label | 8. Relay connections | 13. Internal EMC filter | 18. Ground connections |
| 4. Status LED | 9. Control connections | 14. DC bus + | |
| 5. Option module slot 1 | 10. Communications port | 15. DC bus - | |

2.6 Nameplate description

See Figure 2-2 for location of rating labels.

Figure 2-3 Typical drive rating labels

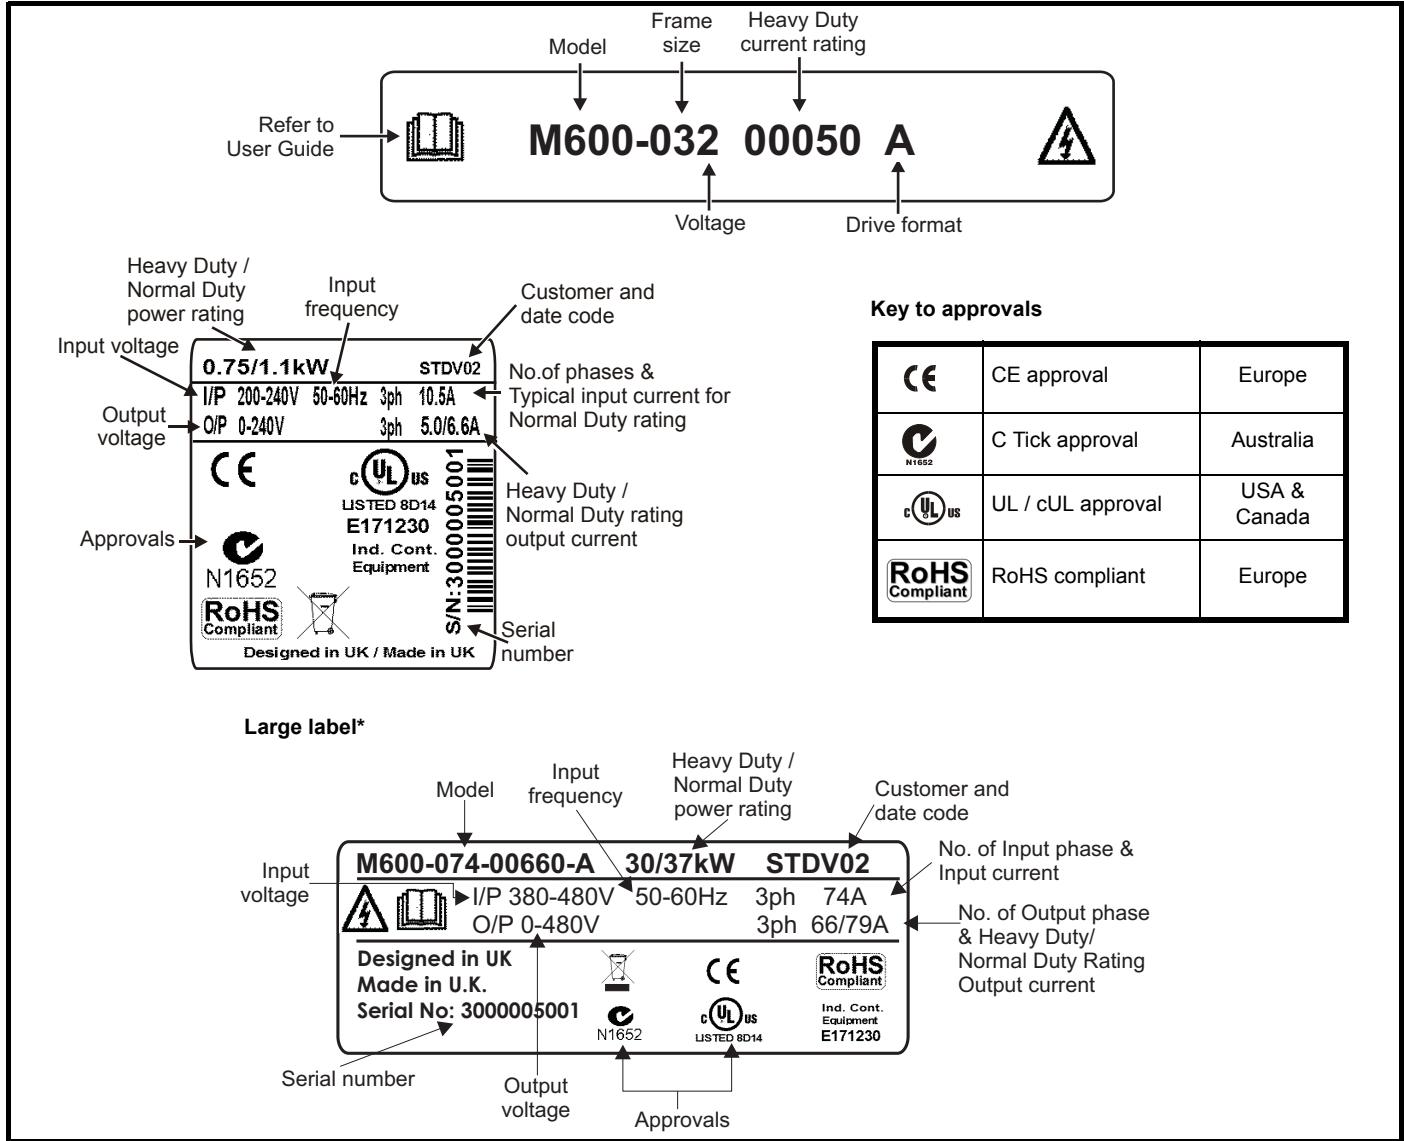

* This label is only applicable to Size 7 and above.

Refer to Figure 2-1 *Model number* on page 10 for further information relating to the labels.

NOTE

Date code format


The date code is split into two sections: a letter followed by a number. The letter indicates the year, and the number indicates the week number (within the year) in which the Solutions Module was built. The letters go in alphabetical order, starting with A in 1990 (B in 1991, C in 1992 etc).

Example:

A date code of **W28** would correspond to week 28 of year 2013.

2.7 Options

Figure 2-4 Options available with the drive

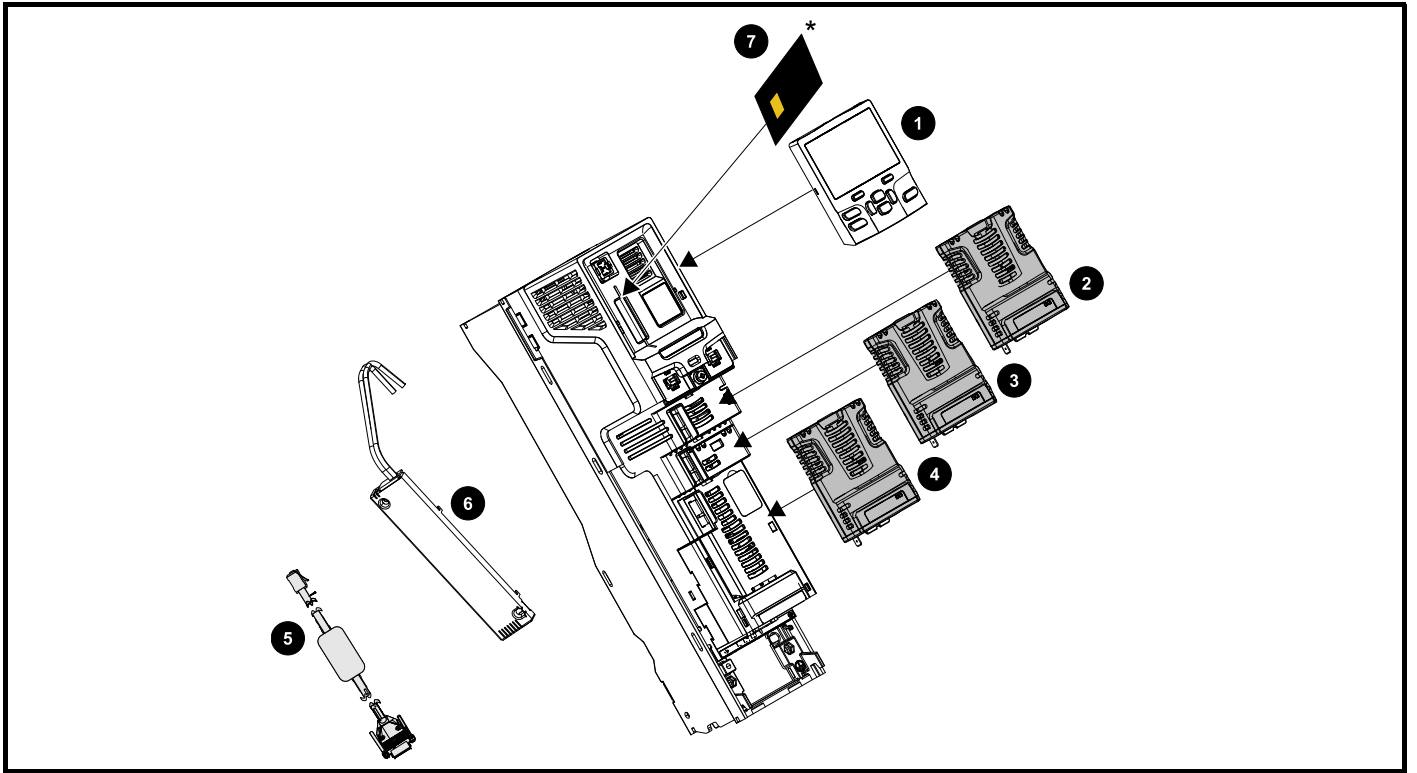

- | | |
|-------------------------|------------------------------|
| 1. Keypad | 6. Internal braking resistor |
| 2. Option module slot 1 | 7. NV media card |
| 3. Option module slot 2 | |
| 4. Option module slot 3 | |
| 5. CT Comms cable | |



Be aware of possible live terminals when inserting or removing the NV media card.

WARNING

All standard option modules are color-coded in order to make identification easy. All modules have an identification label on top of the module. Standard option modules can be installed to any of the available option slots on the drive. The following tables shows the color-code key and gives further details on their function.

Table 2-6 Option module identification












Type	Option module	Color	Name	Further Details
Fieldbus		N/A	KI-485 Adaptor	485 Comms Adaptor 485 Comms adaptor provides 485 communication interface. This adaptor supports 115 k Baud, node addresses between 1 to 16 and 8 1 NP M serial mode.
		Purple	SI-PROFIBUS	Profibus option PROFIBUS adapter for communications with the drive
		Medium Grey	SI-DeviceNet	DeviceNet option DeviceNet adapter for communications with the drive
		Light Grey	SI-CANopen	CANopen option CANopen adapter for communications with the drive
		Beige	SI-Ethernet	External Ethernet module that supports EtherNet/IP, Modbus TCP/IP and RTMoE. The module can be used to provide high speed drive access, global connectivity and integration with IT network technologies, such as wireless networking
		Yellow Green	SI-PROFINET RT	PROFINET RT option PROFINET RT adapter for communications with the drive
		Brown Red	SI-EtherCAT	EtherCAT option EtherCAT adapter for communications with the drive
Automation (I/O expansion)		Orange	SI-I/O	Extended I/O Increases the I/O capability by adding the following combinations: <ul style="list-style-type: none"> • Digital I/O • Digital Inputs • Analog Inputs (differential or single ended) • Analog Output • Relays
Feedback		Light Brown	SI-Encoder	Incremental encoder input interface module. Provides Closed loop Rotor Flux Control for induction motors (RFC-A) on M600.
		Dark Brown	SI-Universal Encoder	Additional combined encoder input and output interface supporting Incremental, SinCos, HIPERFACE, EnDAT and SSI encoders.
Safety		Yellow	SI-Safety	Safety module that provides an intelligent, programmable solution to meet the IEC 61800-5-2 functional safety standard

Table 2-7 Keypad identification



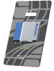

Type	Keypad	Name	Further Details
Keypad		KI-Keypad	LCD keypad option Keypad with a LCD display
		KI-Keypad RTC	LCD keypad option Keypad with a LCD display and real time clock

Table 2-8 Additional options

Type	Option	Name	Further Details
Back-up		SD Card Adaptor	SD Card Adaptor Allows the drive to use an SD card for drive back-up
		SMARTCARD	SMARTCARD Used for parameter back-up with the drive

2.8 Items supplied with the drive

The drive is supplied with a copy of the *Getting Started Guide*, a safety information booklet, the Certificate of Quality and an accessory kit box including the items shown in Table 2-9.

Table 2-9 Parts supplied with the drive





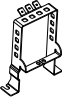
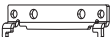
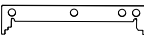
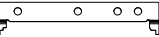














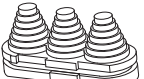
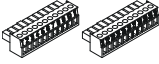



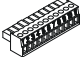
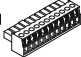
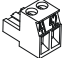
Description	Size 3	Size 4	Size 5	Size 6	Size 7	Size 8
Control connectors			 x 1	 x 1		
Relay connector			 x 1			
24 V power supply connector					 x 1	
Grounding bracket				 x 1		
Surface mounting brackets	 x 2	 x 2	 x 2	 x 2	 x 2	 x 2
Grounding clamp	 x 1		 x 1	 x 1		
DC terminal cover grommets	 x 2					
Terminal nuts				 M6 x 11	 M8 x 12	 M10 x 12
Supply and motor connector	 x 1		 x 1	 x 1		
Finger guard grommets			 x 3	 x 2		

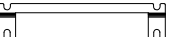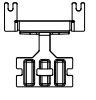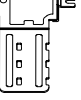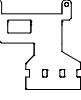Table 2-10 Parts supplied with the drive (size 9E and 10)

Description	Size 9E	Size 10
Control connectors	 x 1 x 1	 x 1
Relay connector		 x 1
24 V power supply connector		 x 1
Grounding bracket		 x 1
Fan power supply connector		 x 1
Surface mounting brackets		 x 2

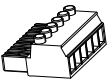3 Mechanical installation

This chapter describes how to use all mechanical details to install the drive. The drive is intended to be installed in an enclosure. Key features of this chapter include:

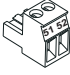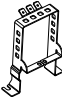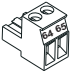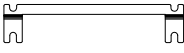- Through-hole mounting
- High IP as standard or through-panel mounting
- Enclosure sizing and layout
- Option module installing
- Terminal location and torque settings

3.1 Safety information



WARNING

Follow the instructions

The mechanical and electrical installation instructions must be adhered to. Any questions or doubt should be referred to the supplier of the equipment. It is the responsibility of the owner or user to ensure that the installation of the drive and any external option unit, and the way in which they are operated and maintained, comply with the requirements of the Health and Safety at Work Act in the United Kingdom or applicable legislation and regulations and codes of practice in the country in which the equipment is used.



WARNING

Competence of the installer

The drive must be installed by professional assemblers who are familiar with the requirements for safety and EMC. The assembler is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used.



WARNING

Enclosure

The drive is intended to be mounted in an enclosure which prevents access except by trained and authorized personnel, and which prevents the ingress of contamination. It is designed for use in an environment classified as pollution degree 2 in accordance with IEC 60664-1. This means that only dry, non-conducting contamination is acceptable.

3.2 Planning the installation

The following considerations must be made when planning the installation:

3.2.1 Access

Access must be restricted to authorized personnel only. Safety regulations which apply at the place of use must be complied with.

The IP (Ingress Protection) rating of the drive is installation dependent. For further information, refer to section 3.9 *Enclosing standard drive for high environmental protection* on page 45.

3.2.2 Environmental protection

The drive must be protected from:

- Moisture, including dripping water or spraying water and condensation. An anti-condensation heater may be required, which must be switched off when the drive is running.
- Contamination with electrically conductive material
- Contamination with any form of dust which may restrict the fan, or impair airflow over various components
- Temperature beyond the specified operating and storage ranges
- Corrosive gasses

NOTE

During installation it is recommended that the vents on the drive are covered to prevent debris (e.g. wire off-cuts) from entering the drive.

3.2.3 Cooling

The heat produced by the drive must be removed without its specified operating temperature being exceeded. Note that a sealed enclosure gives much reduced cooling compared with a ventilated one, and may need to be larger and/or use internal air circulating fans.

For further information, refer to section 3.6 *Enclosure for standard drives* on page 43.

3.2.4 Electrical safety

The installation must be safe under normal and fault conditions. Electrical installation instructions are given in Chapter 4 *Electrical installation* on page 60.

3.2.5 Fire protection

The drive enclosure is not classified as a fire enclosure. A separate fire enclosure must be provided.

For installation in the USA, a NEMA 12 enclosure is suitable.


For installation outside the USA, the following (based on IEC 62109-1, standard for PV inverters) is recommended.

Enclosure can be metal and/or polymeric, polymer must meet requirements which can be summarized for larger enclosures as using materials meeting at least UL 94 class 5VB at the point of minimum thickness.

Air filter assemblies to be at least class V-2.


The location and size of the bottom shall cover the area shown in Figure 3-1. Any part of the side which is within the area traced out by the 5° angle is also considered to be part of the bottom of the fire enclosure.

Figure 3-1 Fire enclosure bottom layout

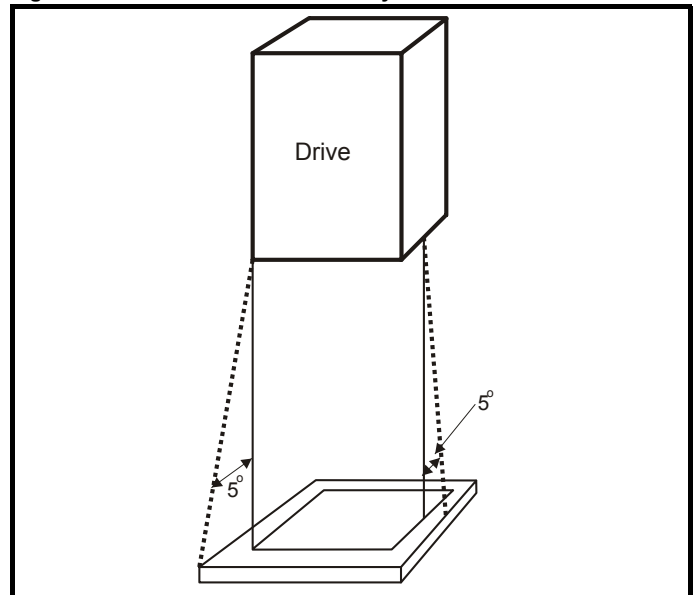

The bottom, including the part of the side considered to be part of the bottom, must be designed to prevent escape of burning material - either by having no openings or by having a baffle construction. This means that openings for cables etc. must be sealed with materials meeting the 5VB requirement, or else have a baffle above. See Figure 3-2 for acceptable baffle construction. This does not apply for mounting in an enclosed electrical operating area (restricted access) with concrete floor.

Figure 3-2 Fire enclosure baffle construction

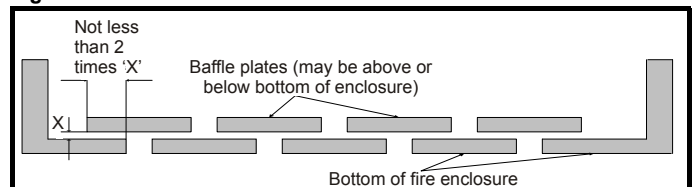

3.2.6 Electromagnetic compatibility

Variable speed drives are powerful electronic circuits which can cause electromagnetic interference if not installed correctly with careful attention to the layout of the wiring.

Some simple routine precautions can prevent disturbance to typical industrial control equipment.

If it is necessary to meet strict emission limits, or if it is known that electromagnetically sensitive equipment is located nearby, then full precautions must be observed. In-built into the drive, is an internal EMC filter, which reduces emissions under certain conditions. If these conditions are exceeded, then the use of an external EMC filter may be required at the drive inputs, which must be located very close to the drives. Space must be made available for the filters and allowance made for carefully segregated wiring. Both levels of precautions are covered in section 4.12 *EMC (Electromagnetic compatibility)* on page 82.

3.2.7 Hazardous areas

The drive must not be located in a classified hazardous area unless it is installed in an approved enclosure and the installation is certified.

3.3 Terminal cover removal



Isolation device

The AC and / or DC power supply must be disconnected from the drive using an approved isolation device before any cover is removed from the drive or before any servicing work is performed.

WARNING



Stored charge

The drive contains capacitors that remain charged to a potentially lethal voltage after the AC and / or DC power supply has been disconnected. If the drive has been energized, the power supply must be isolated at least ten minutes before work may continue.

Normally, the capacitors are discharged by an internal resistor. Under certain, unusual fault conditions, it is possible that the capacitors may fail to discharge, or be prevented from being discharged by a voltage applied to the output terminals. If the drive has failed in a manner that causes the display to go blank immediately, it is possible the capacitors will not be discharged. In this case, consult Control Techniques or their authorized distributor.

WARNING

3.3.1 Removing the terminal covers

Figure 3-3 Location and identification of terminal covers (size 3 to 10)


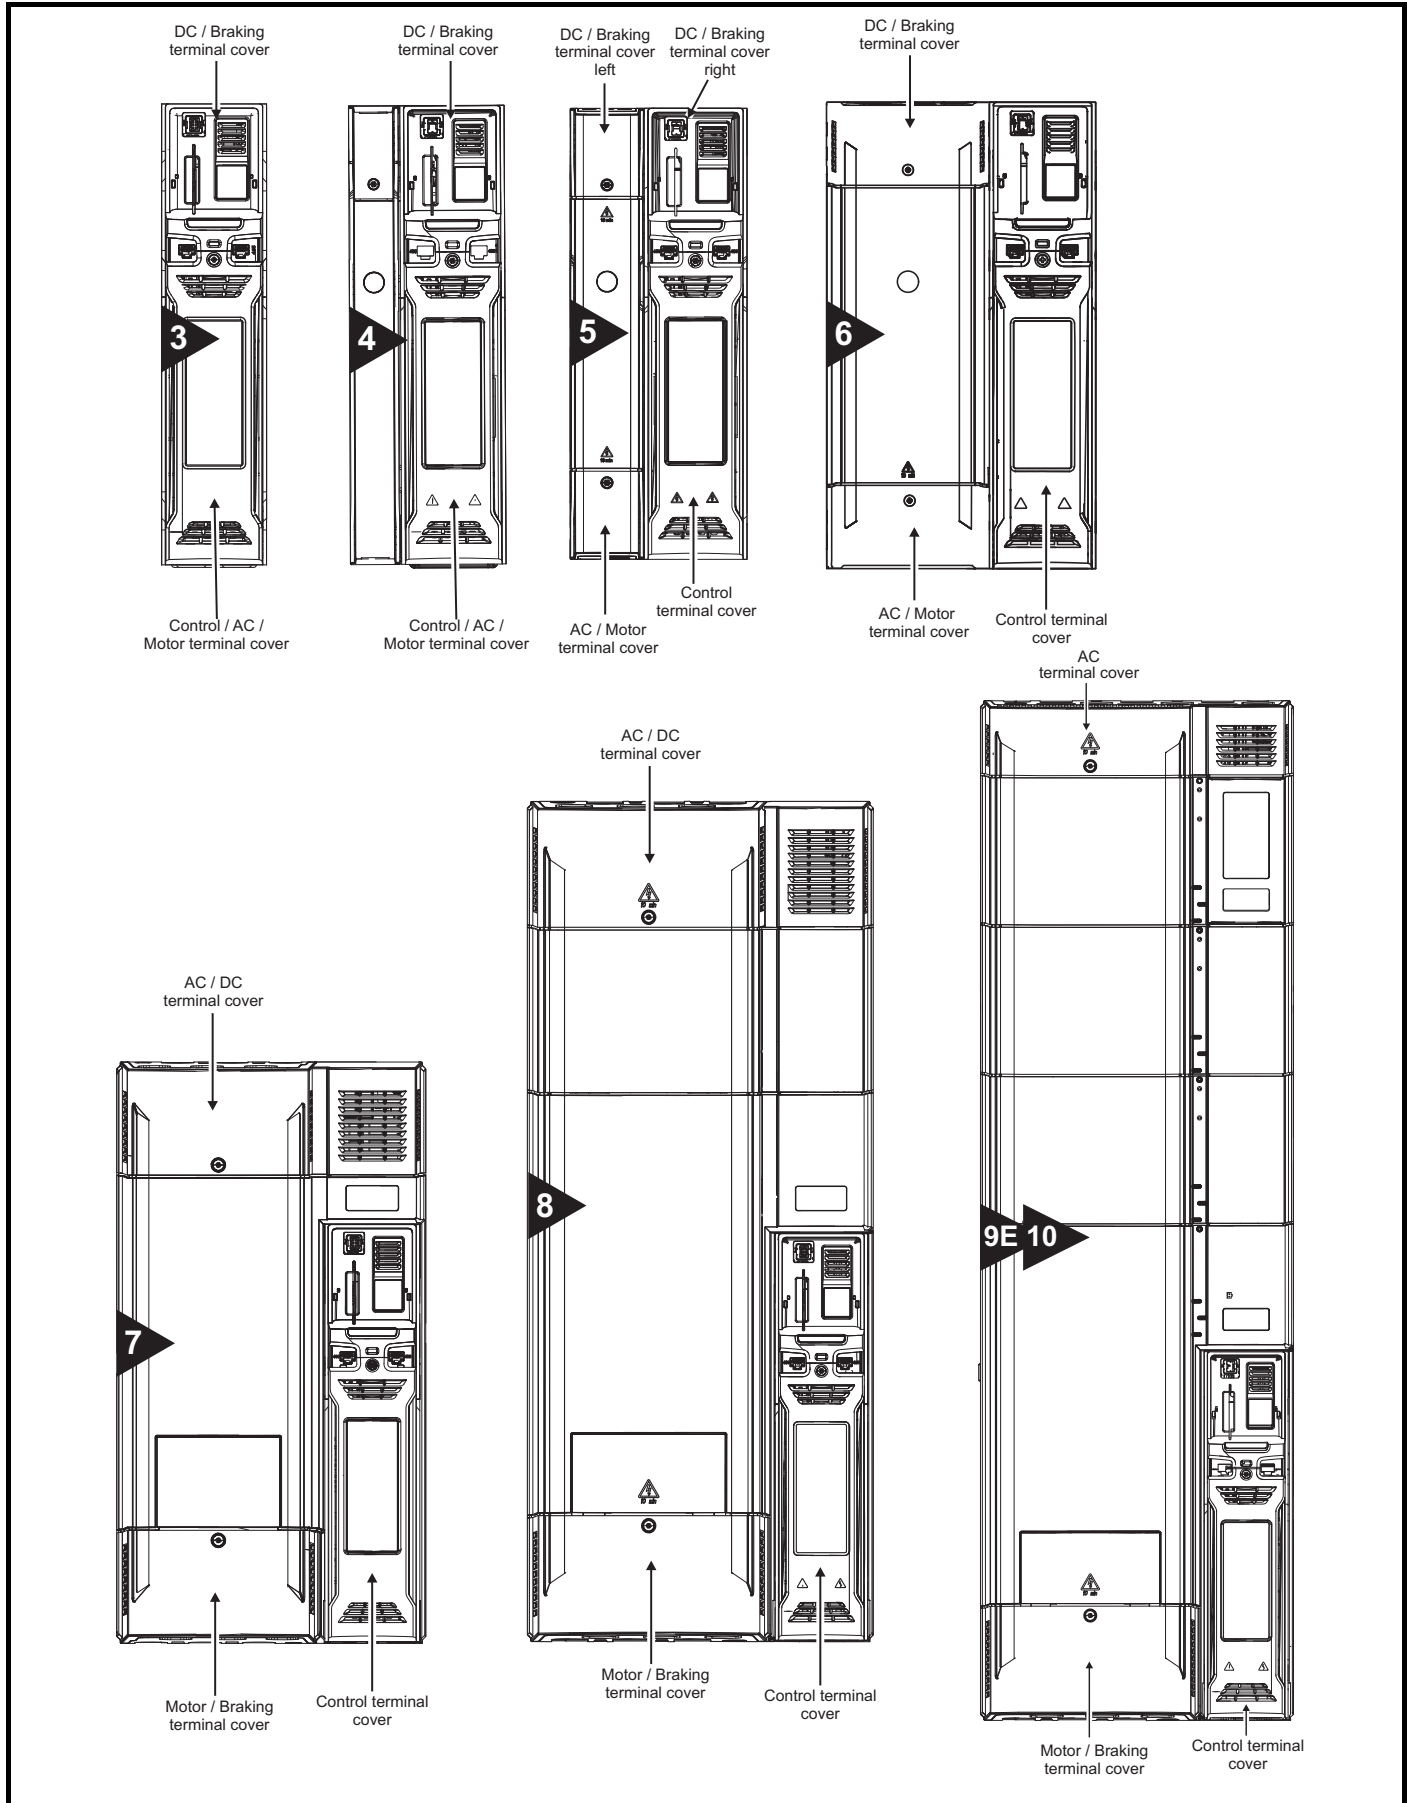



Figure 3-4 Removing the size 3 terminal covers

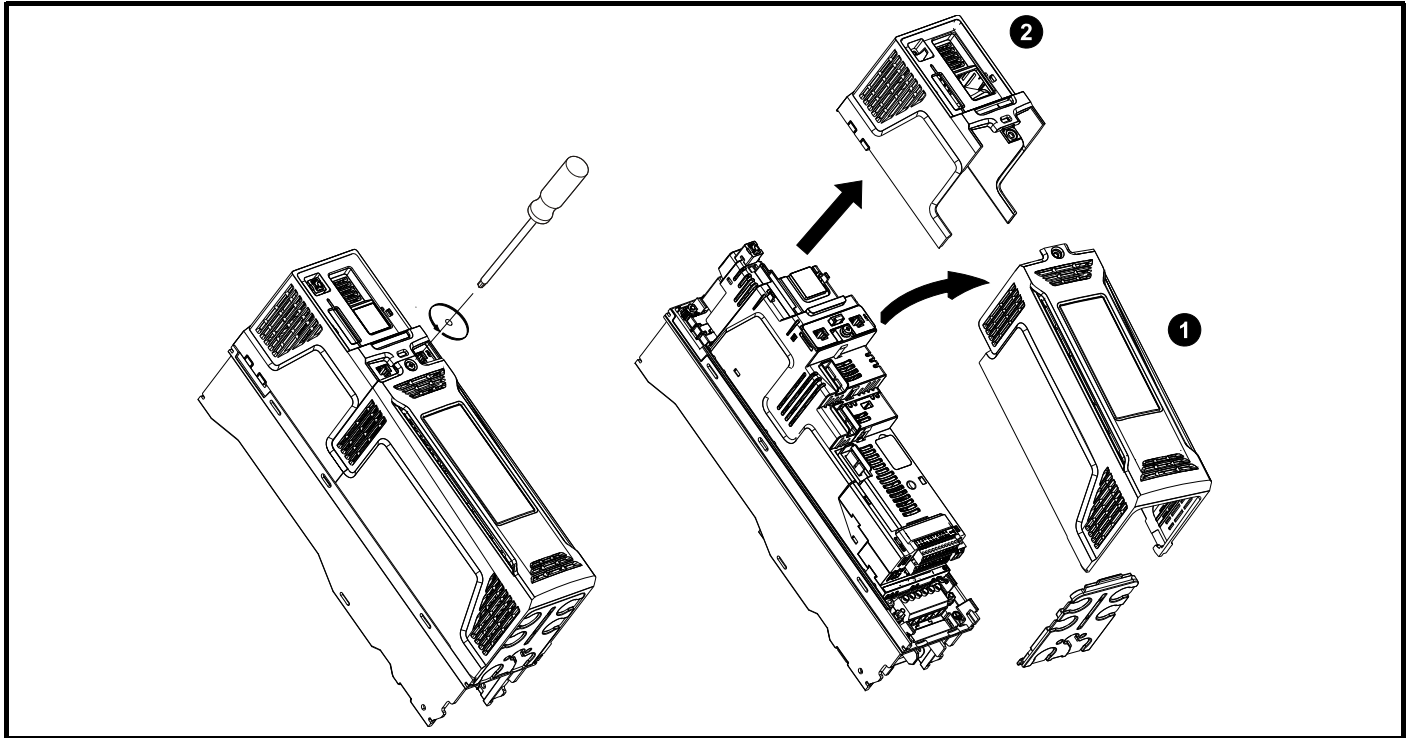

1. Control / AC / Motor terminal cover
2. DC / Braking terminal cover

On size 3 drives, the Control / AC / Motor terminal cover must be removed before removal of the DC / Braking terminal cover. When replacing the terminal covers, the screws should be tightened to a maximum torque of 1 N m (0.7 lb ft).


Figure 3-5 Removing the size 4 terminal covers

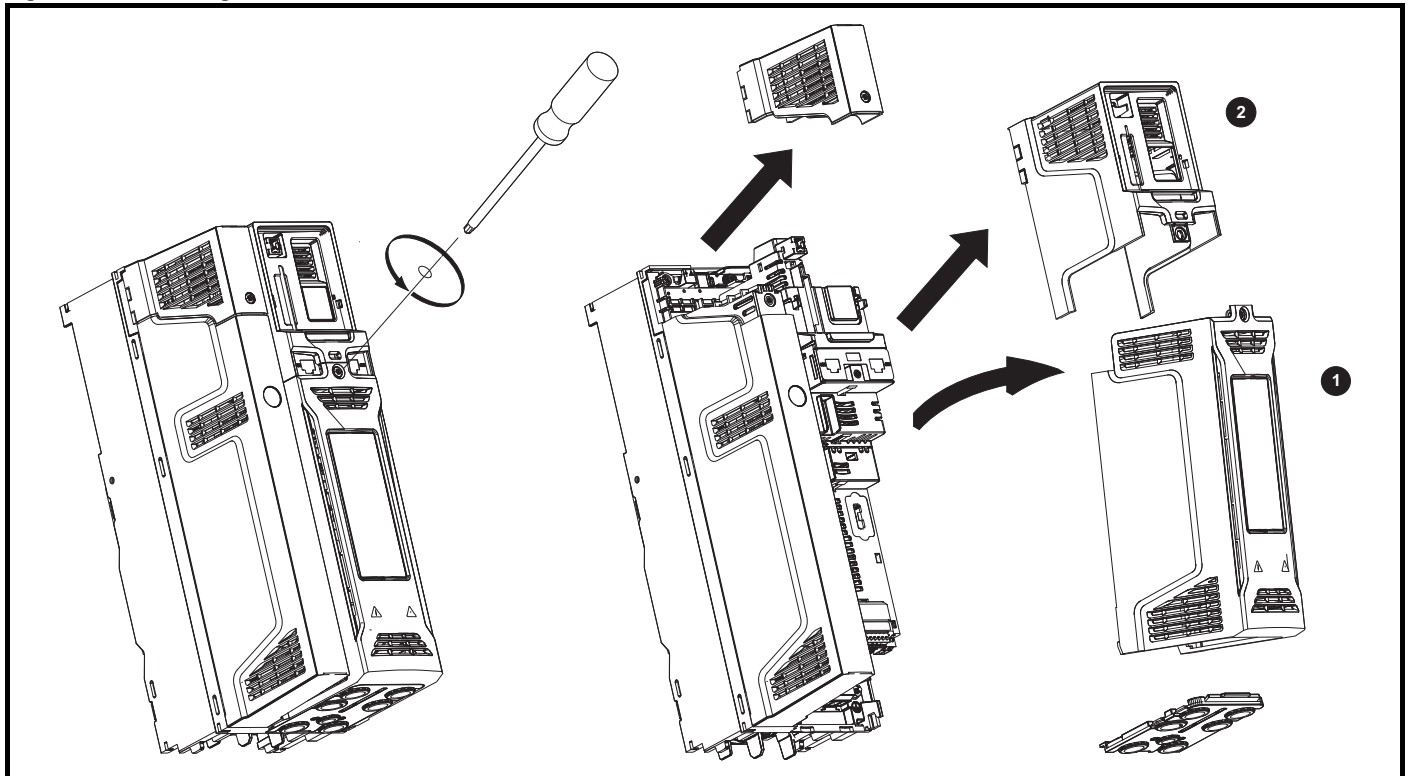

1. Control / AC / Motor terminal cover
2. DC / Braking terminal cover

On size 4 drives, the Control / AC / Motor terminal cover must be removed before removal of the DC / Braking terminal cover. When replacing the terminal covers, the screws should be tightened to a maximum torque of 1 N m (0.7 lb ft).

Figure 3-6 Removing the size 5 terminal covers

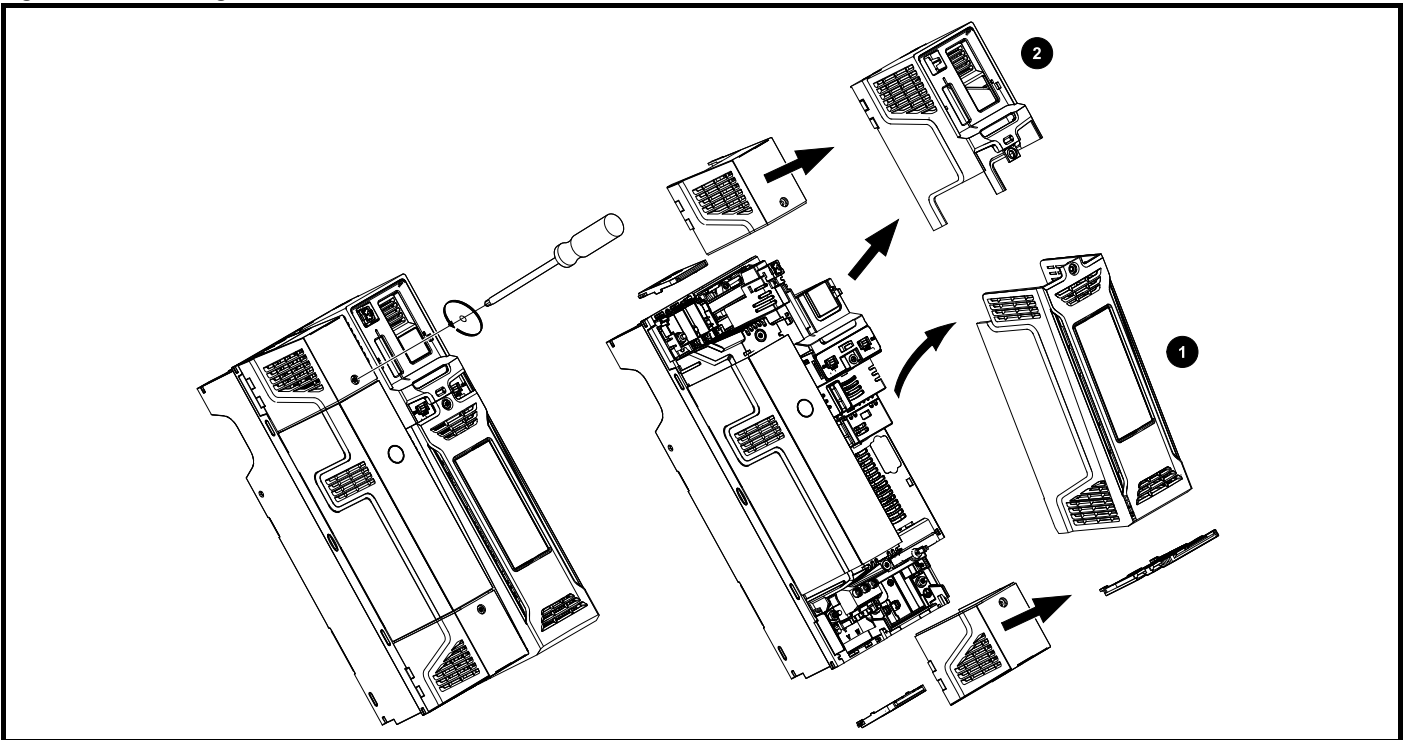

1. Control terminal cover
2. DC / Braking terminal cover right

On size 5 drives, the Control terminal cover must be removed before removal of the DC / Braking terminal cover right. When replacing the terminal covers, the screws should be tightened to a maximum torque of 1 N m (0.7 lb ft).

Figure 3-7 Removing the size 6 terminal covers


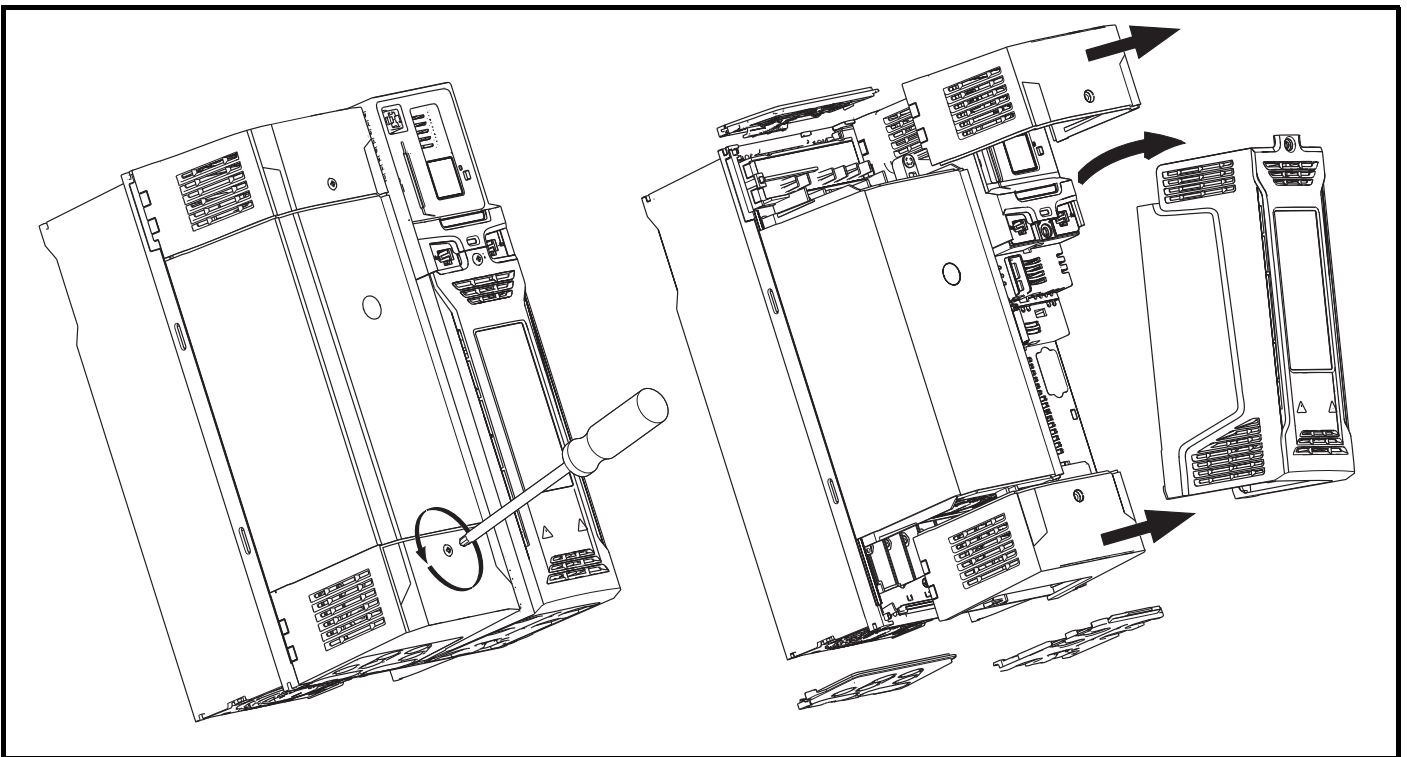



Figure 3-8 Removing the size 7 to 10 terminal covers (size 7 shown)

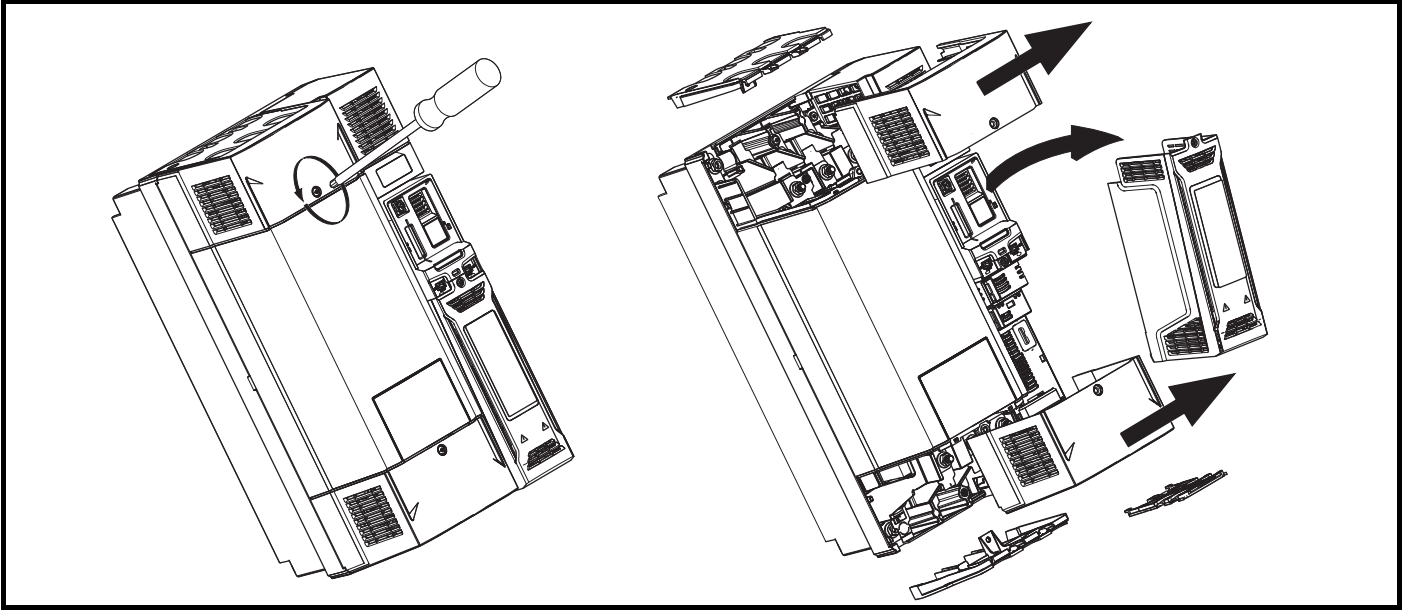

When replacing the terminal covers, the screws should be tightened to a maximum torque of 1 N m (0.7 lb ft).

3.3.2 Removing the finger-guard and DC terminal cover break-outs

Figure 3-9 Removing the finger-guard break-outs

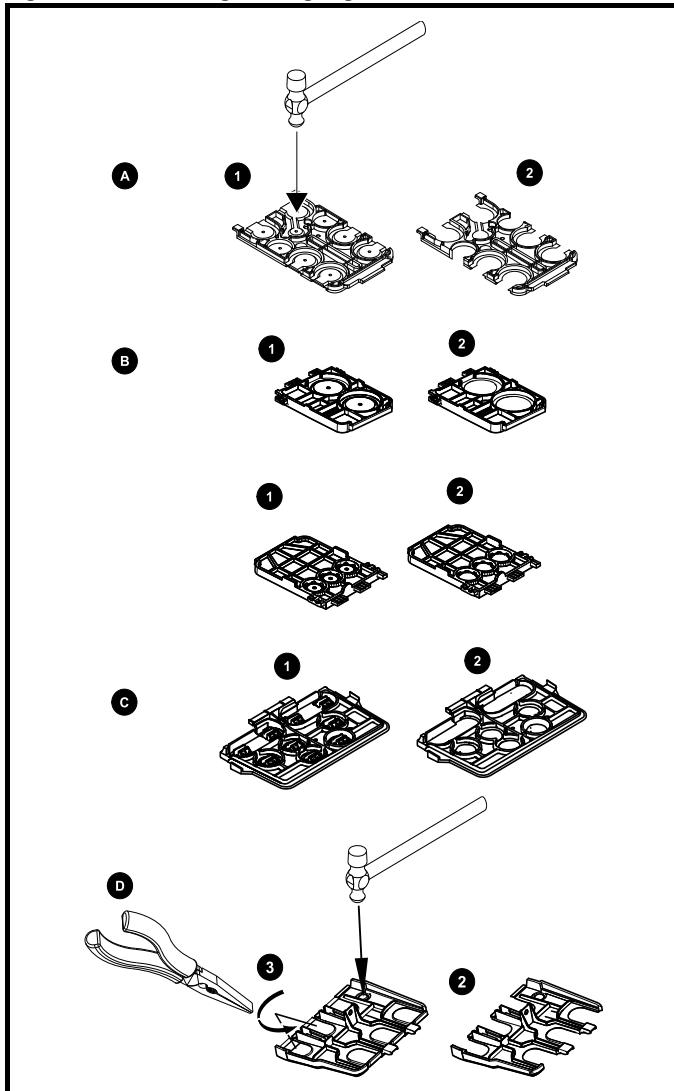

A: All sizes. B: Size 5 only. C: Size 6 only. D: Size 7 to 10.

Place finger-guard on a flat solid surface and hit relevant break-outs with hammer as shown (1). Continue until all required break-outs are removed (2). Remove any flash / sharp edges once the break-outs are removed.

Grommet kits are available for size 7 to 10 finger guards. For size 8 to 10, two versions are available allowing for either single or double cable entries.

Table 3-1 Grommet kits




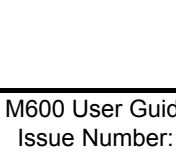
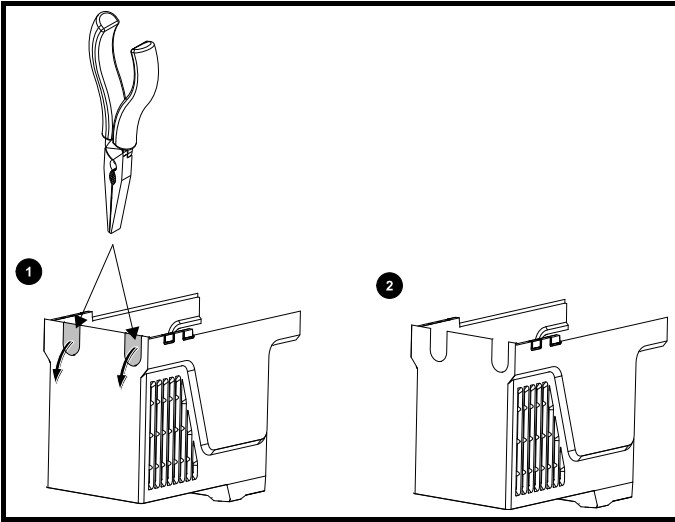
Drive size	Part number	Picture
Size 7 - Kit of 8 x single entry grommets	3470-0086-00	
Size 8 - Kit of 8 x single entry grommets	3470-0089-00	
Size 8 - Kit of 8 x double entry grommets	3470-0090-00	
Size 9E and 10 - Kit of 8 x double entry grommets	3470-0107-00	

Figure 3-10 Removing the size 3 and 4 DC terminal cover break-outs




Grasp the DC terminal cover break-outs with pliers as shown (1) and pull down in the direction shown to remove. Continue until all required break-outs are removed (2). Remove any flash / sharp edges once the break-outs are removed. Use the DC terminal cover grommets supplied in the accessory box (Table 2-9 on page 21) to maintain the seal at the top of the drive.

3.4 Installing / removing option modules and keypads

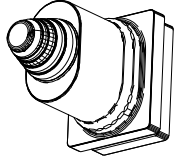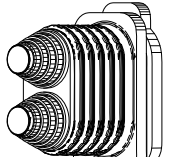

Power down the drive before installing / removing the option module. Failure to do so may result in damage to the product.

Figure 3-11 Installation of a standard option module

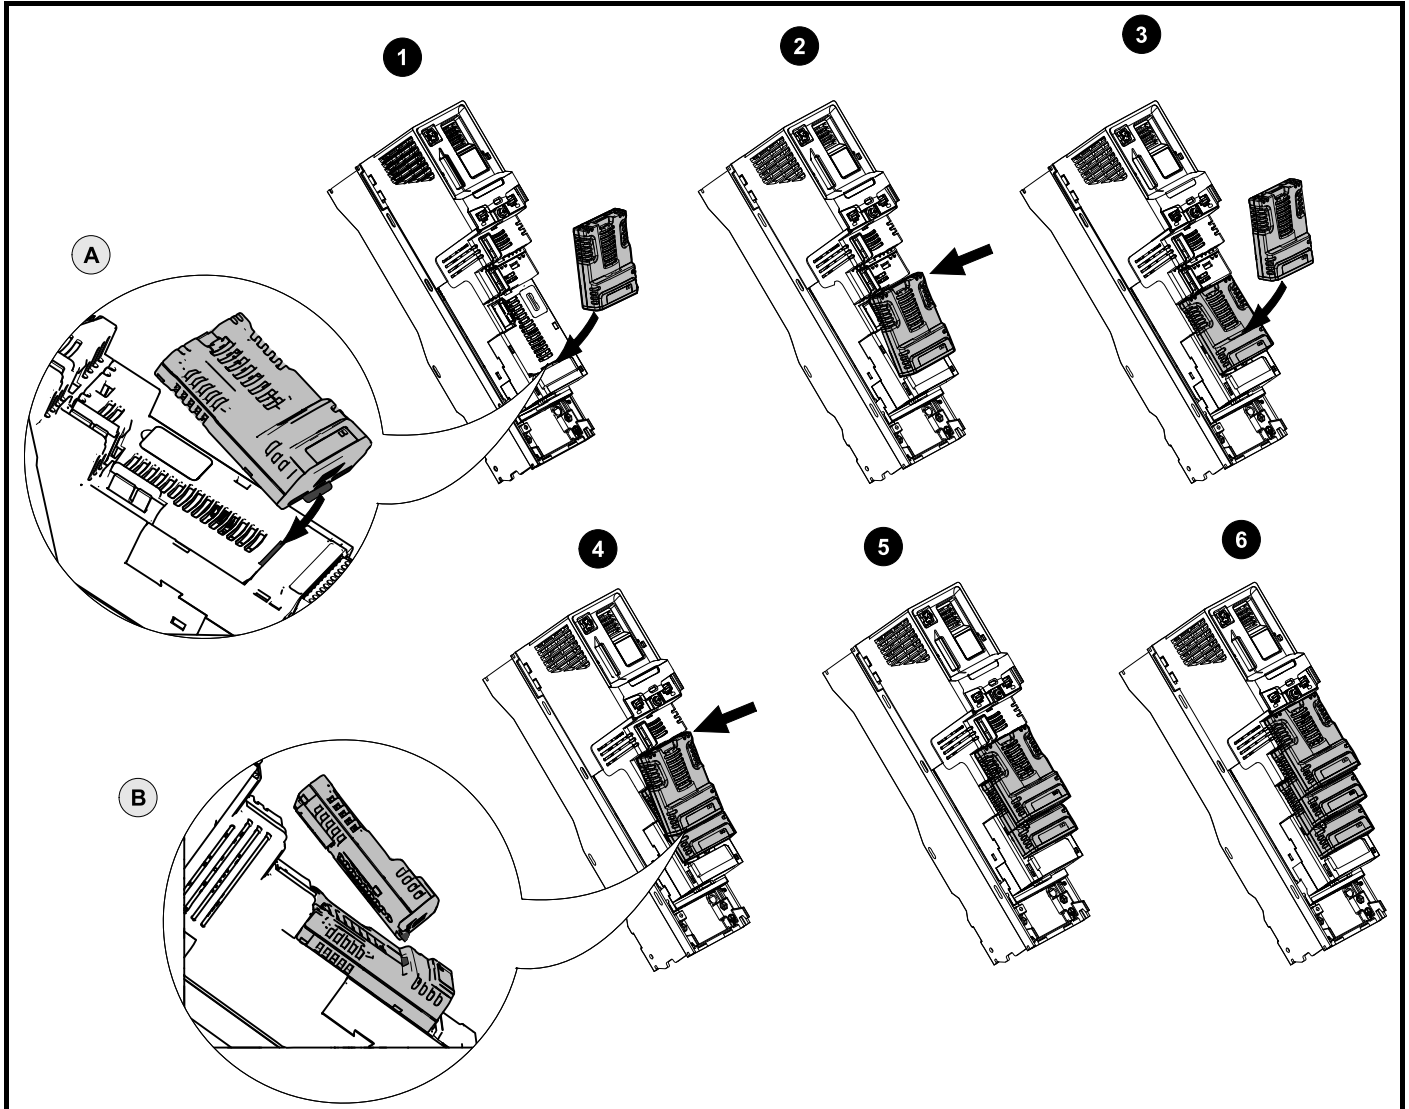

Installing the first option module

NOTE

Option module slots must be used in the following order: slot 3, slot 2 and slot 1 (refer to Figure 2-2 *Features of the drive (size 3 to 10)* on page 16 for slot numbers).

- Move the option module in direction shown (1).
- Align and insert the option module tab in to the slot provided (2), this is highlighted in the detailed view (A).
- Press down on the option module until it clicks into place.

Installing the second option module


- Move the option module in direction shown (3).
- Align and insert the option module tab in to the slot provided on the already installed option module (4), this is highlighted in the detailed view (B).
- Press down on the option module until it clicks into place. Image (5) shows two option modules fully installed.

Installing the third option module

- Repeat the above process.


The drive has the facility for all three option module slots to be used at the same time, image (6) shows the three option modules installed.

Figure 3-12 Removal of a standard option module

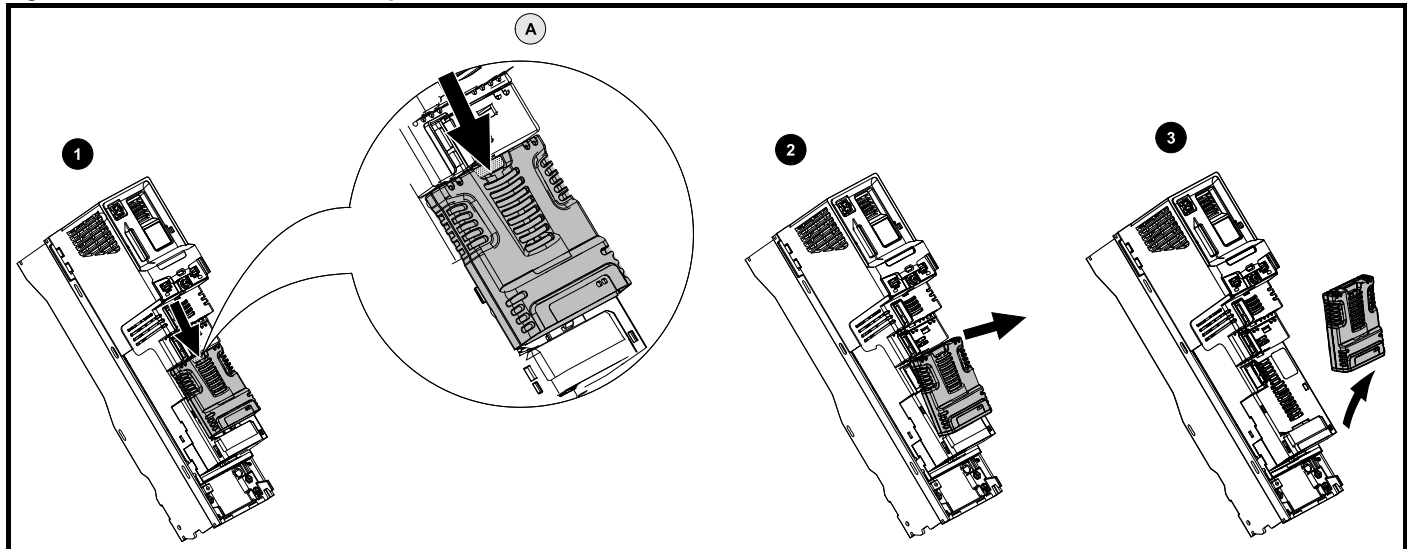

- Press down on the tab (1) to release the option module from the drive housing, the tab is highlighted in the detailed view (A).
- Tilt the option module towards you as shown (2).
- Totally remove the option module in direction shown (3).

Figure 3-13 Installation and removal of the KI-Keypad

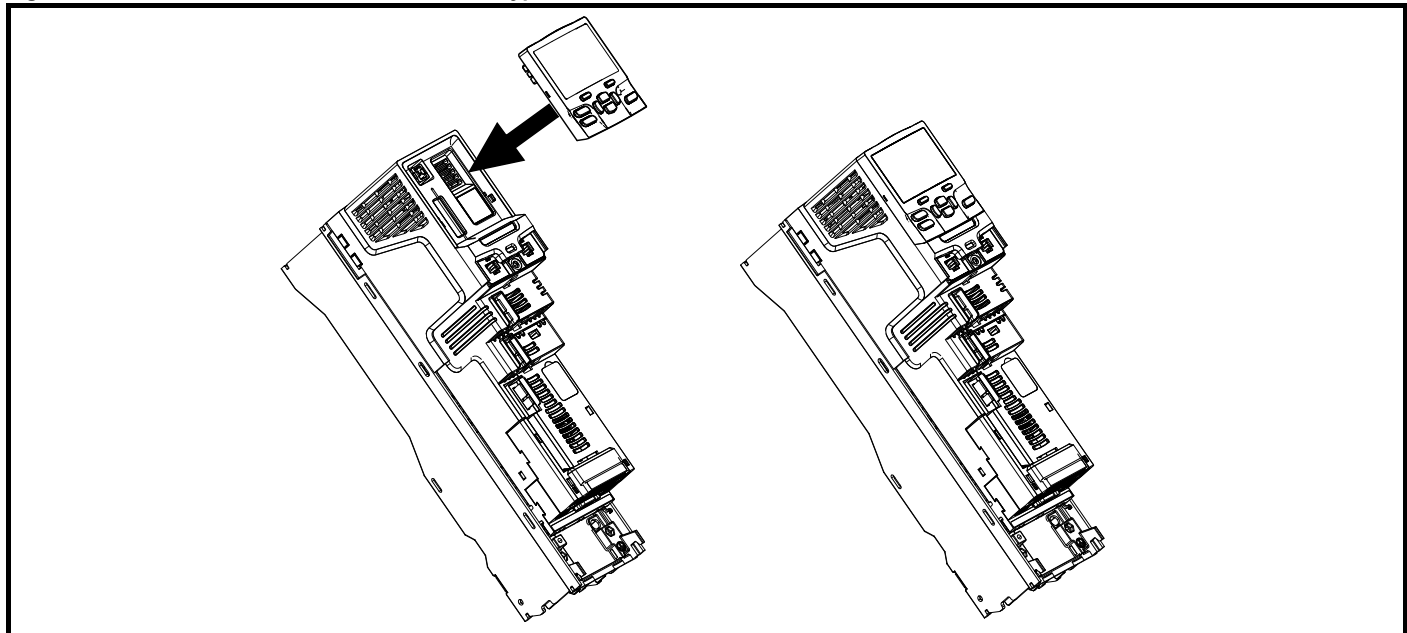

To install, align the keypad and press gently in the direction shown until it clicks into position.

To remove, reverse the installation instructions.

NOTE

The keypad can be installed / removed while the drive is powered up and running a motor, providing that the drive is not operating in keypad mode.

3.5 Dimensions and mounting methods

The drive can be either surface or through-panel mounted using the appropriate brackets. The following drawings show the dimensions of the drive and mounting holes for each method to allow a back plate to be prepared.

The Through-panel mounting kit is not supplied with the drive and can be purchased separately, below are the relevant part numbers:

Size	CT part number
3	3470-0053
4	3470-0056
5	3470-0067
6	3470-0055
7	3470-0079
8	3470-0083
9E	3470-0105
10	



If the drive has been used at high load levels for a period of time, the heatsink can reach temperatures in excess of 70 °C (158 °F). Human contact with the heatsink should be prevented.

WARNING




Many of the drives in this product range weigh in excess of 15 kg (33 lb). Use appropriate safeguards when lifting these models. A full list of drive weights can be found in section 12.1.19 *Weights* on page 244.

WARNING

3.5.1 Surface mounting


Figure 3-14 Surface mounting the size 3 drive

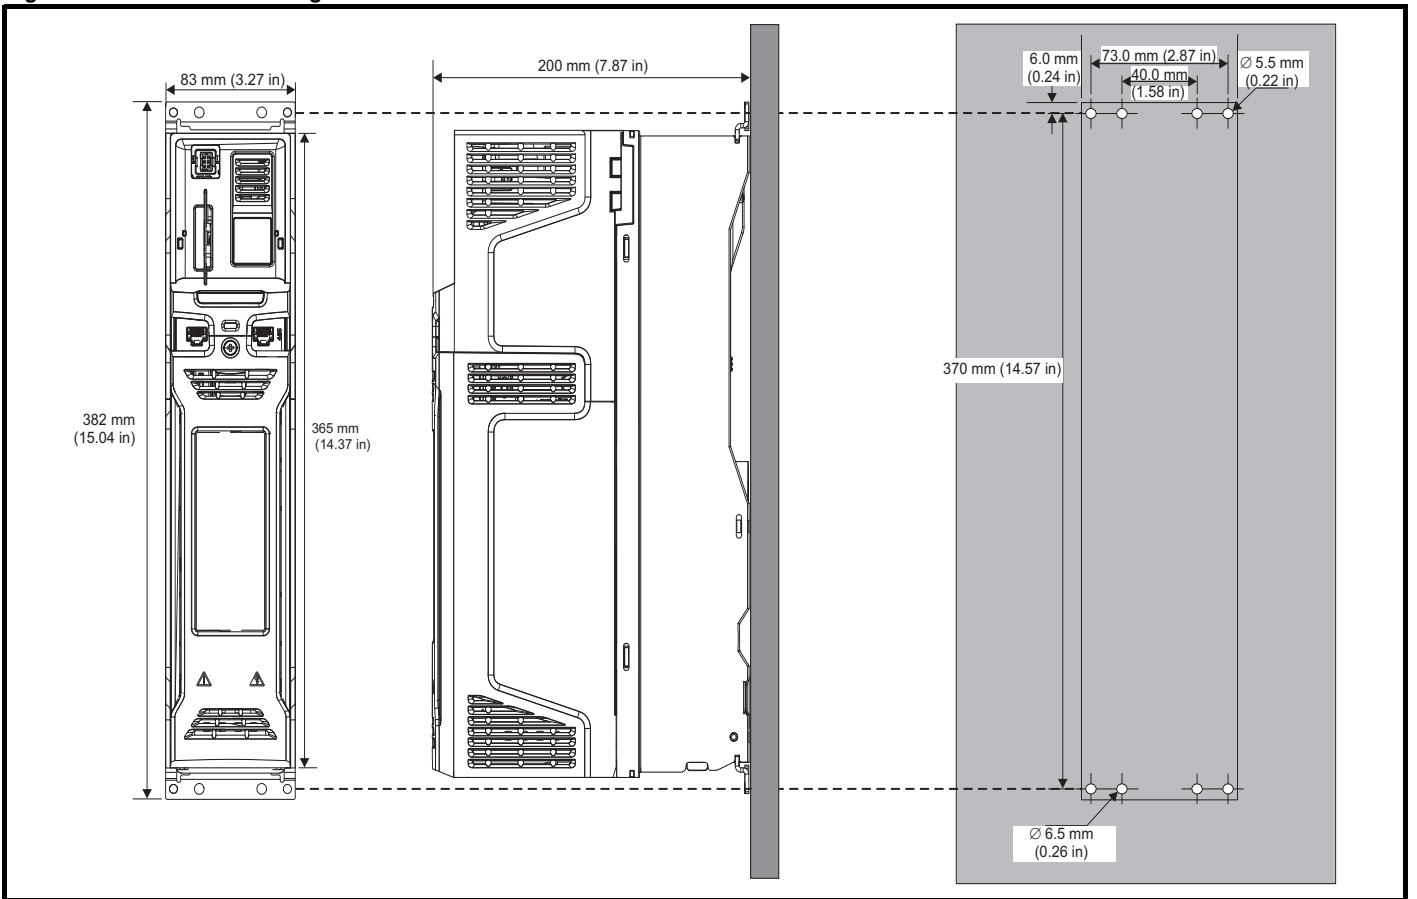

NOTE

Each mounting bracket contains 4 mounting holes, the outer holes (5.5 mm) x 2 should be used for mounting the drive to the backplate as this allows the heatsink fan to be replaced without removing the drive from the backplate. The inner holes (6.5 mm) x 2 are used for Unidrive SP size 1 retrofit applications. See Table 3-2 for further information.


Figure 3-15 Surface mounting the size 4 drive

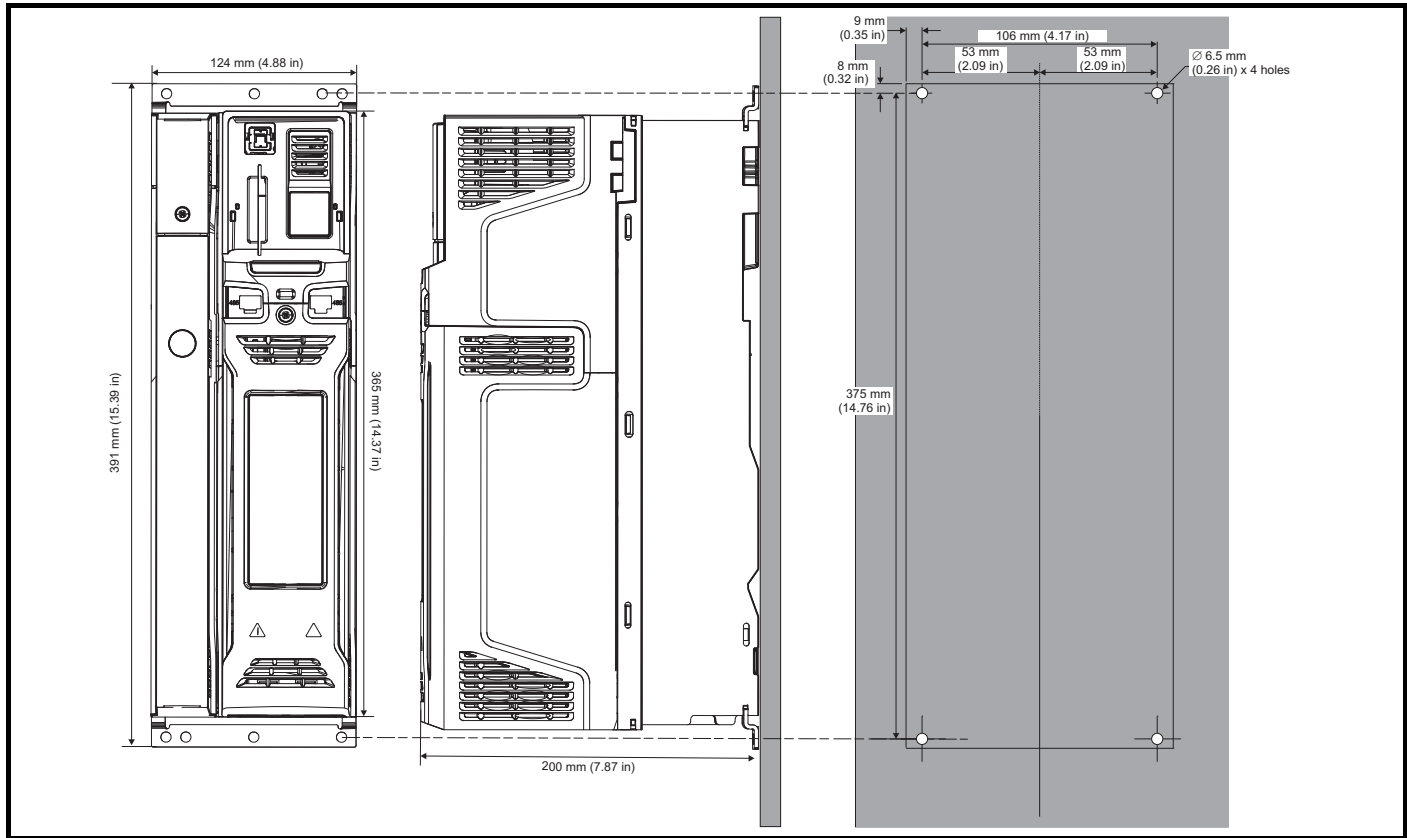

NOTE

The outer holes in the mounting bracket are to be used for surface mounting. See Table 3-2 for further information.


Figure 3-16 Surface mounting the size 5 drive

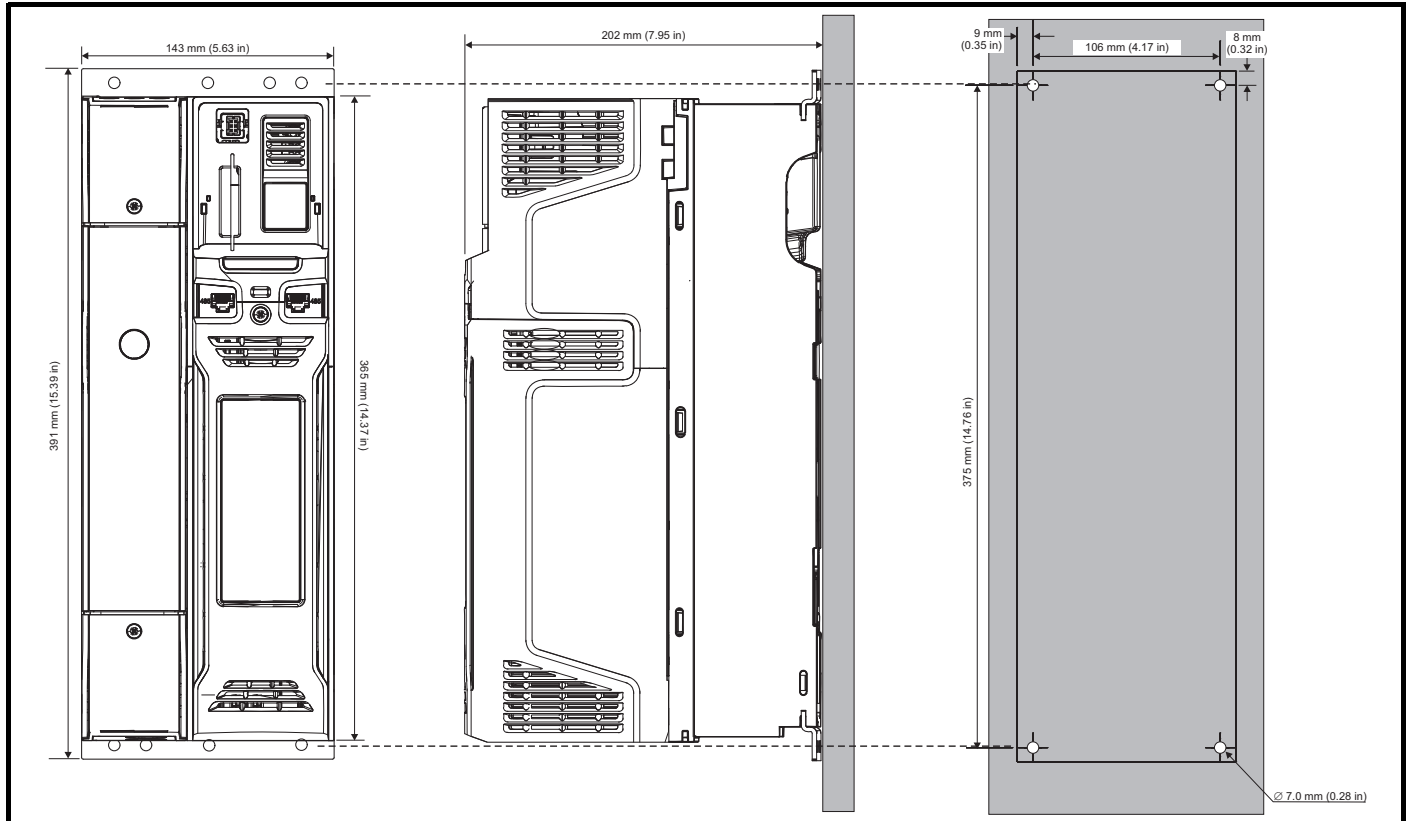

NOTE

The outer holes in the mounting bracket are to be used for surface mounting. See Table 3-2 for further information.

Figure 3-17 Surface mounting the size 6 drive

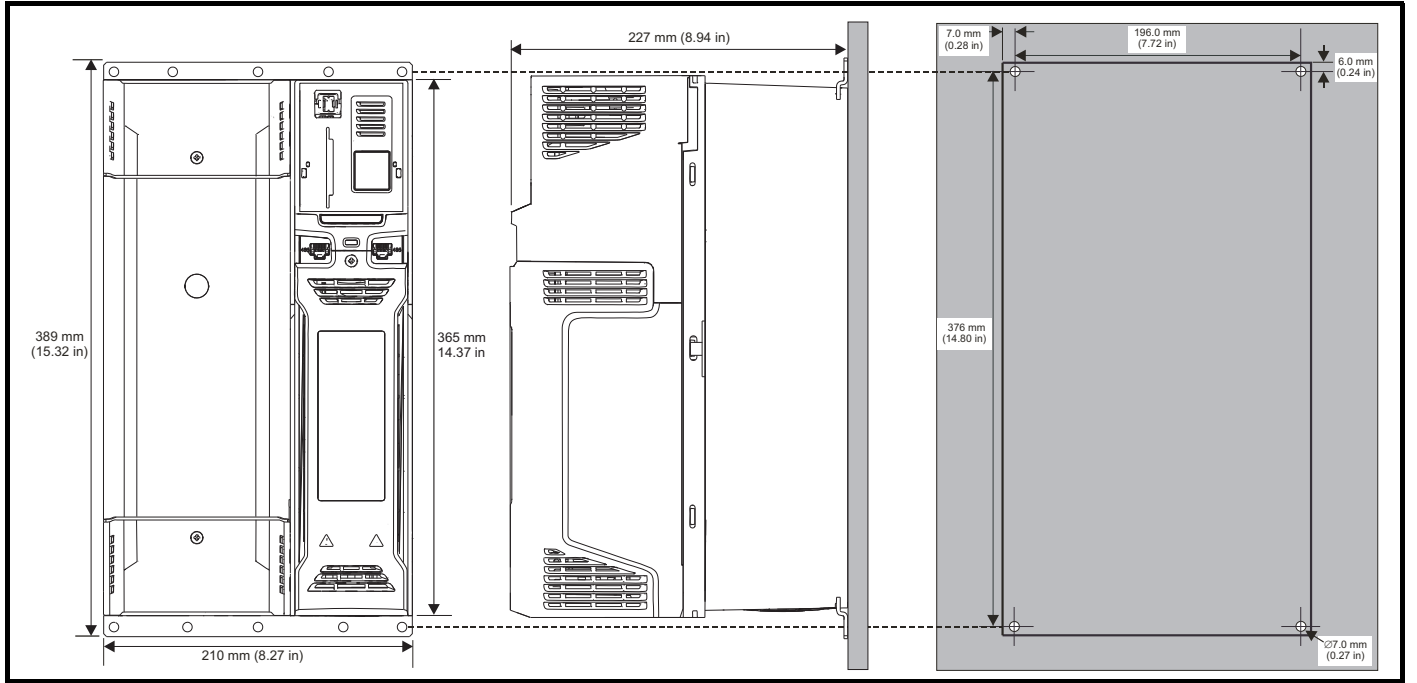

NOTE

The outer holes in the mounting bracket are to be used for surface mounting. See Table 3-2 for further information.

Figure 3-18 Surface mounting the size 7 drive

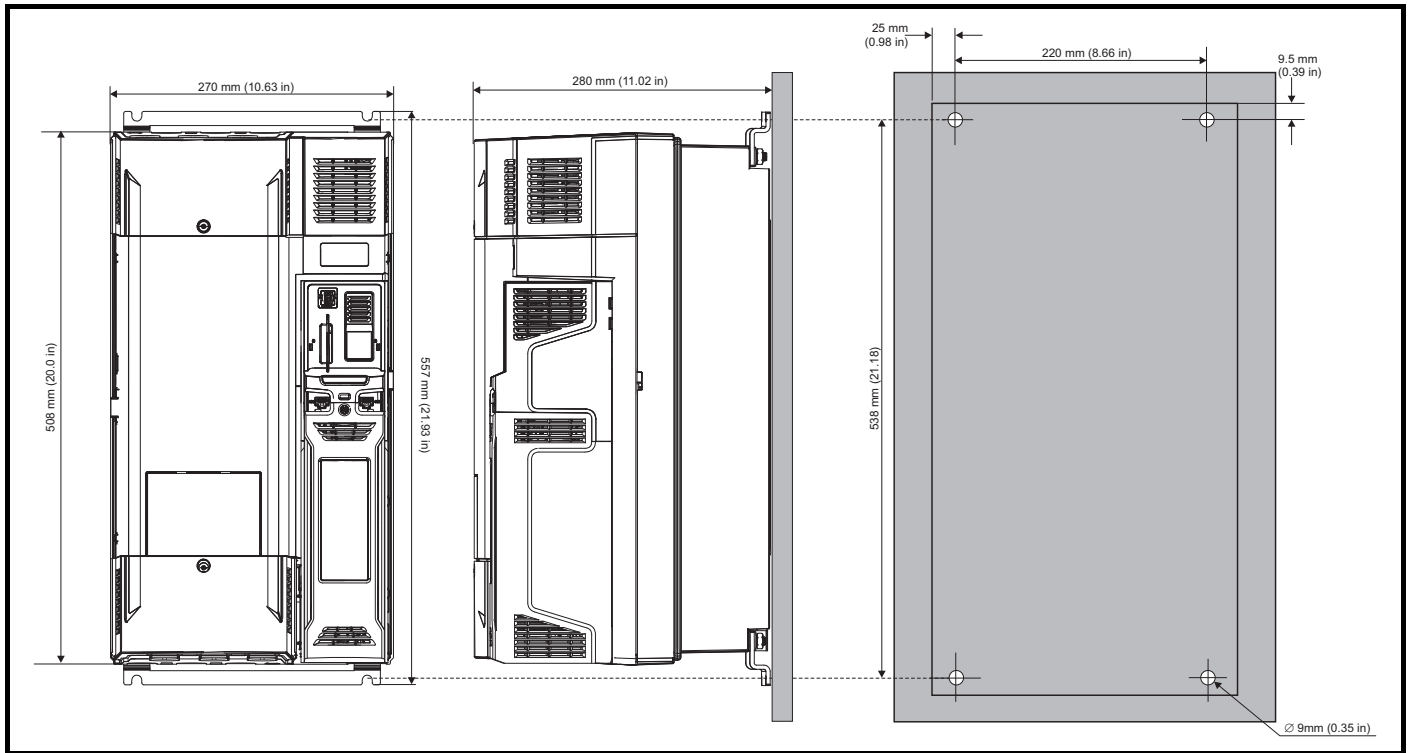


Figure 3-19 Surface mounting the size 8 drive


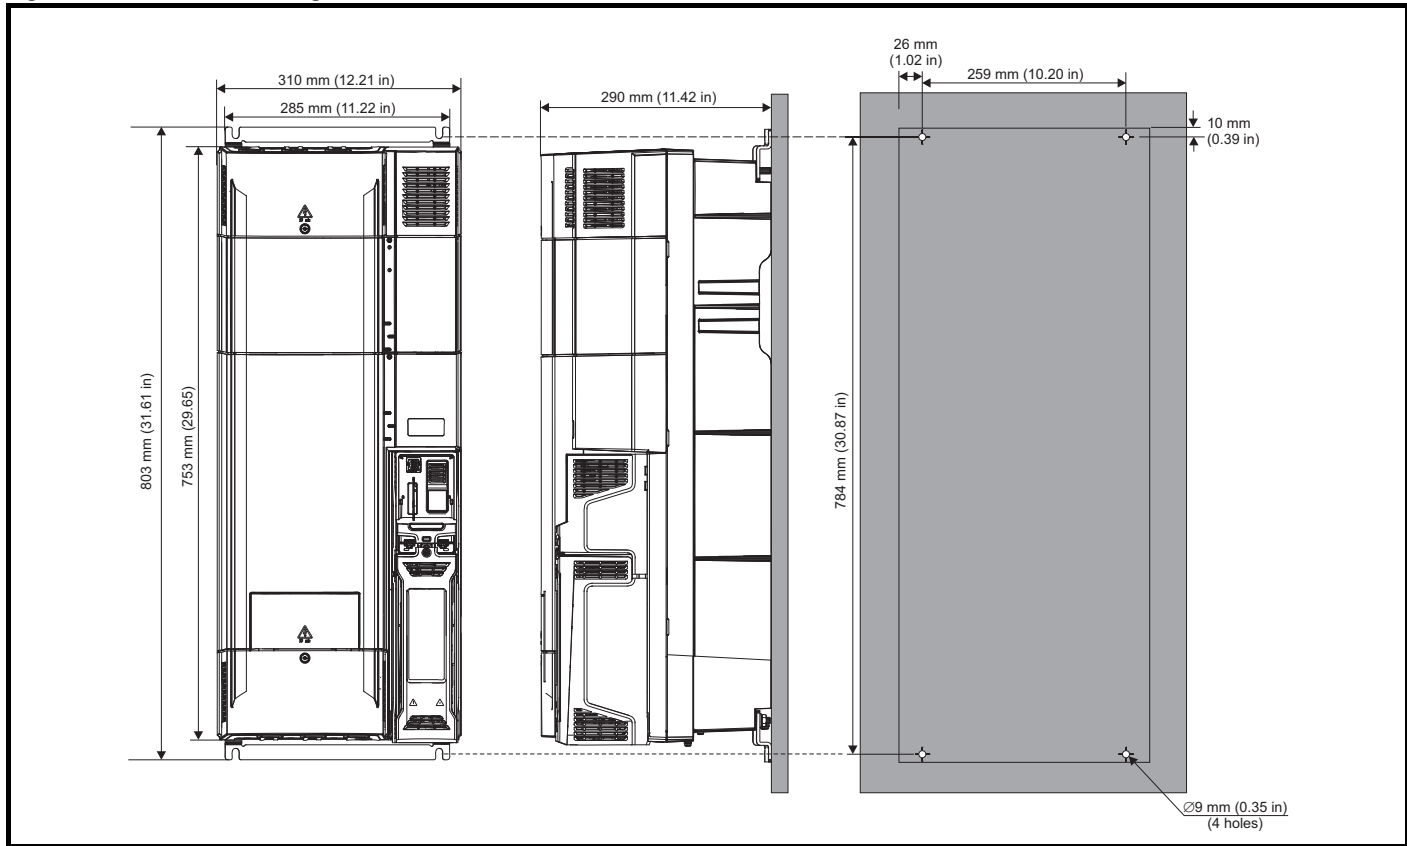


Figure 3-20 Surface mounting the size 9E and 10

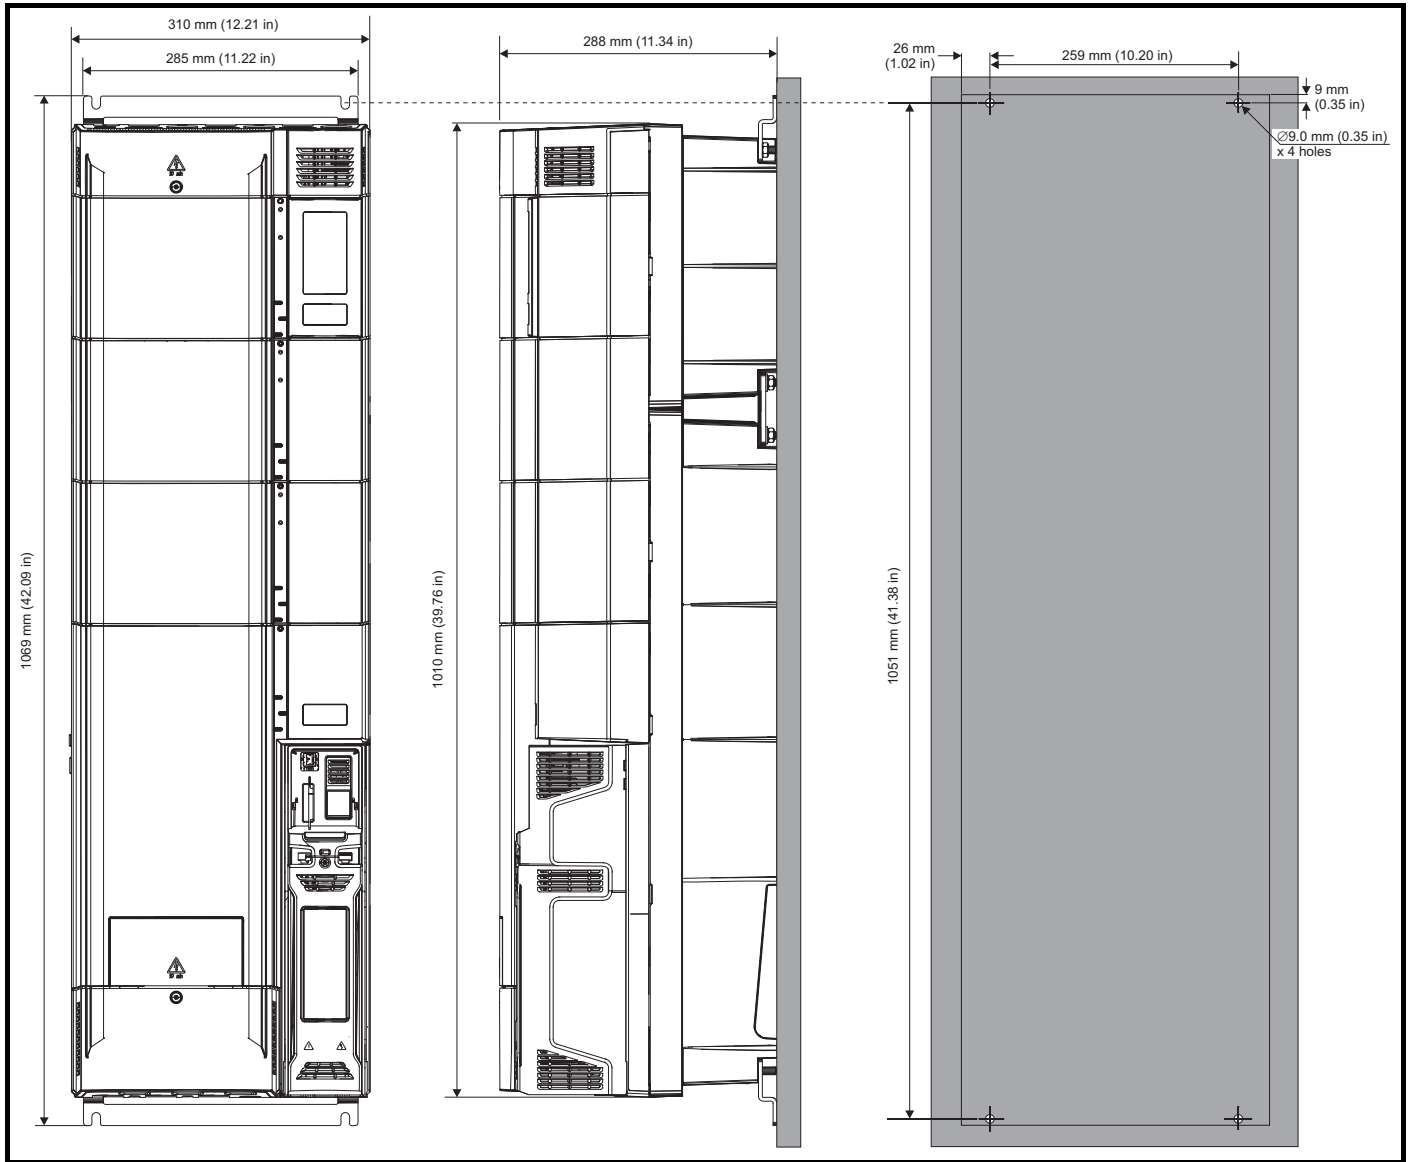

3.5.2 Through-panel mounting

Figure 3-21 Through-panel mounting the size 3 drive

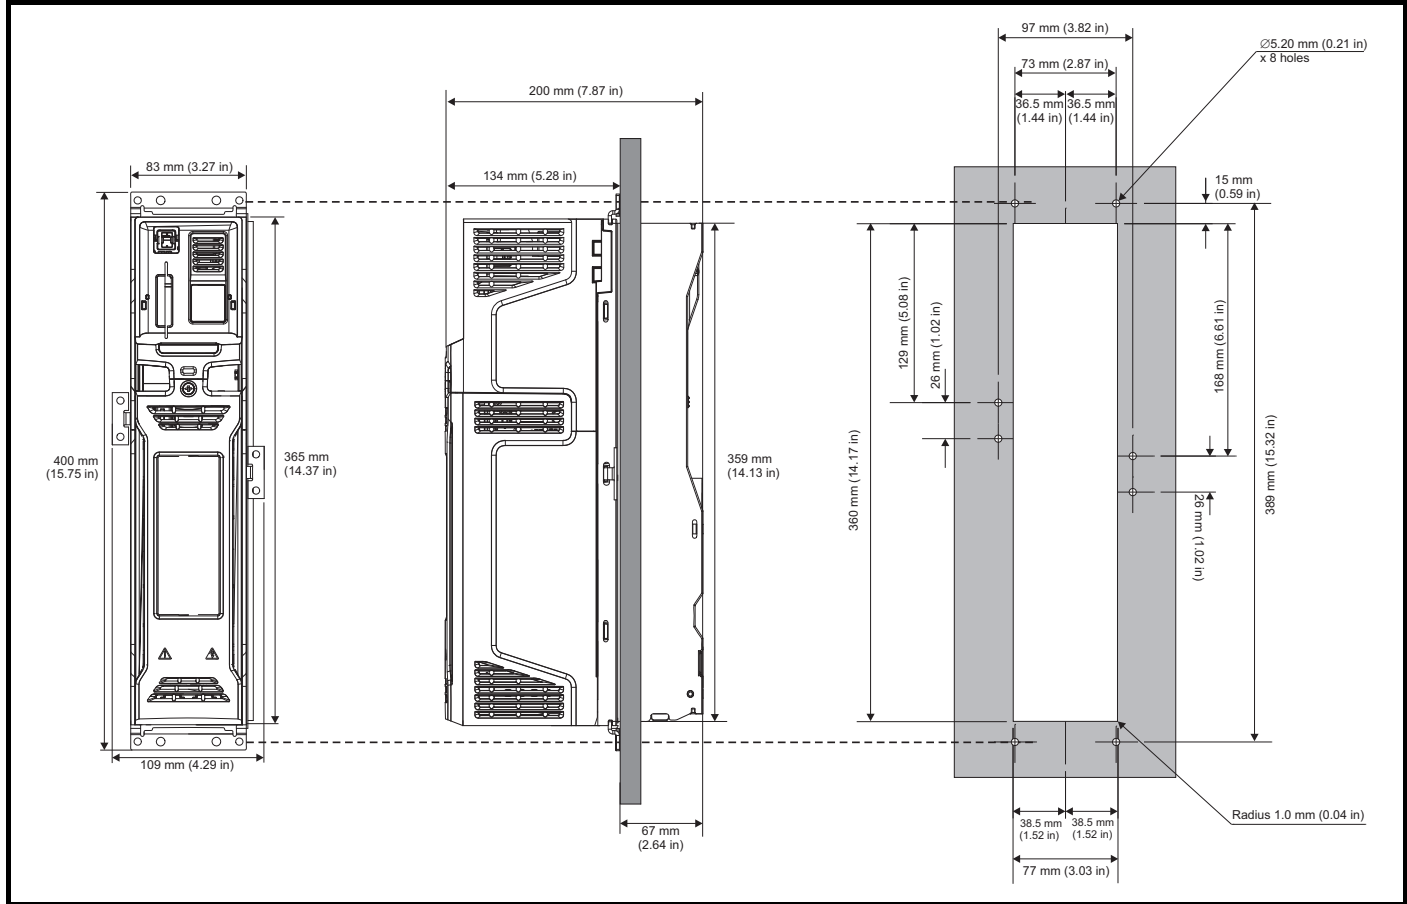


Figure 3-22 Through panel mounting the size 4 drive

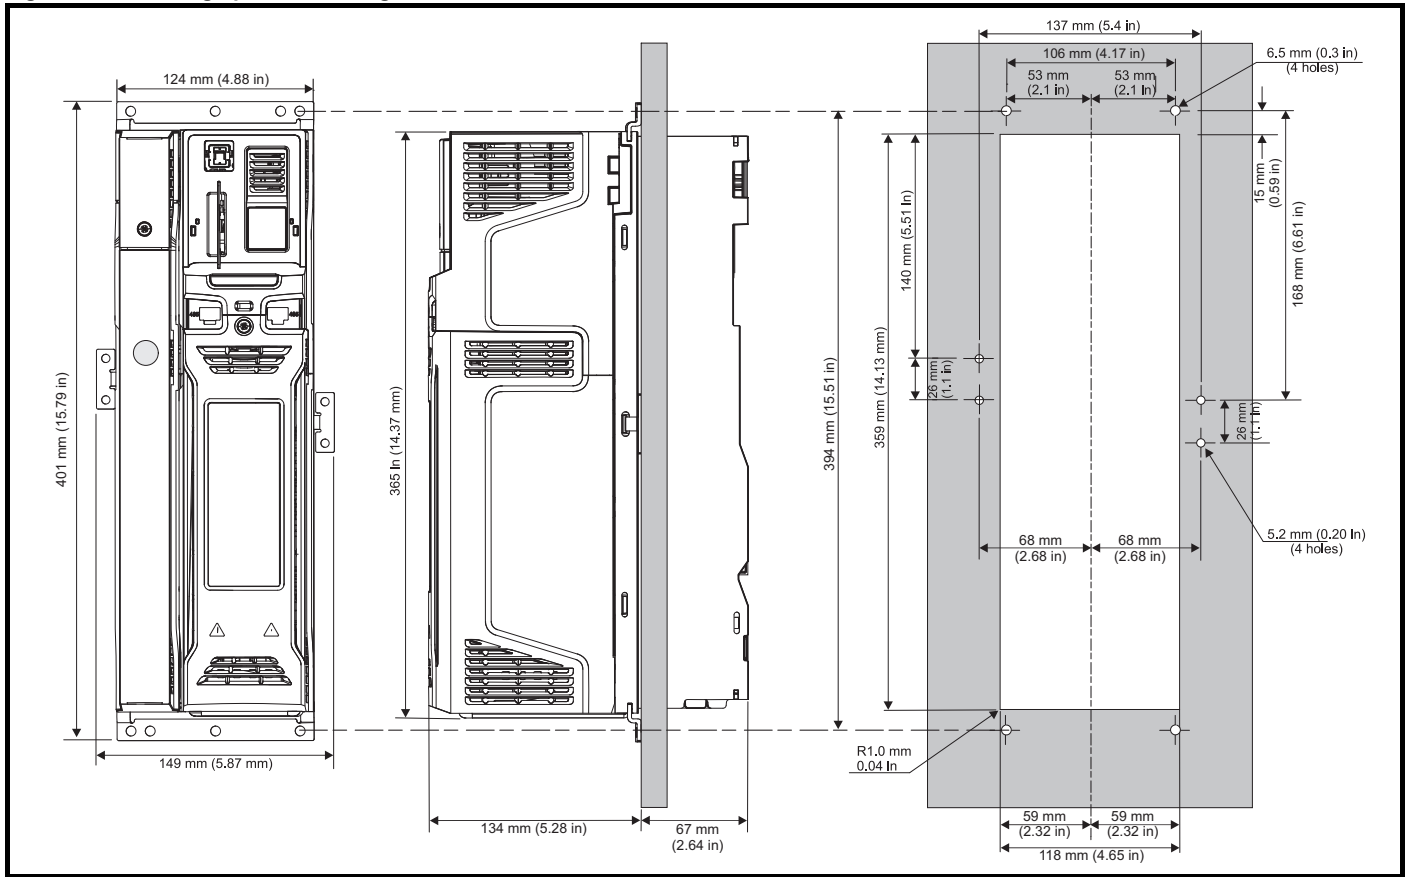


Figure 3-23 Through panel mounting the size 5 drive


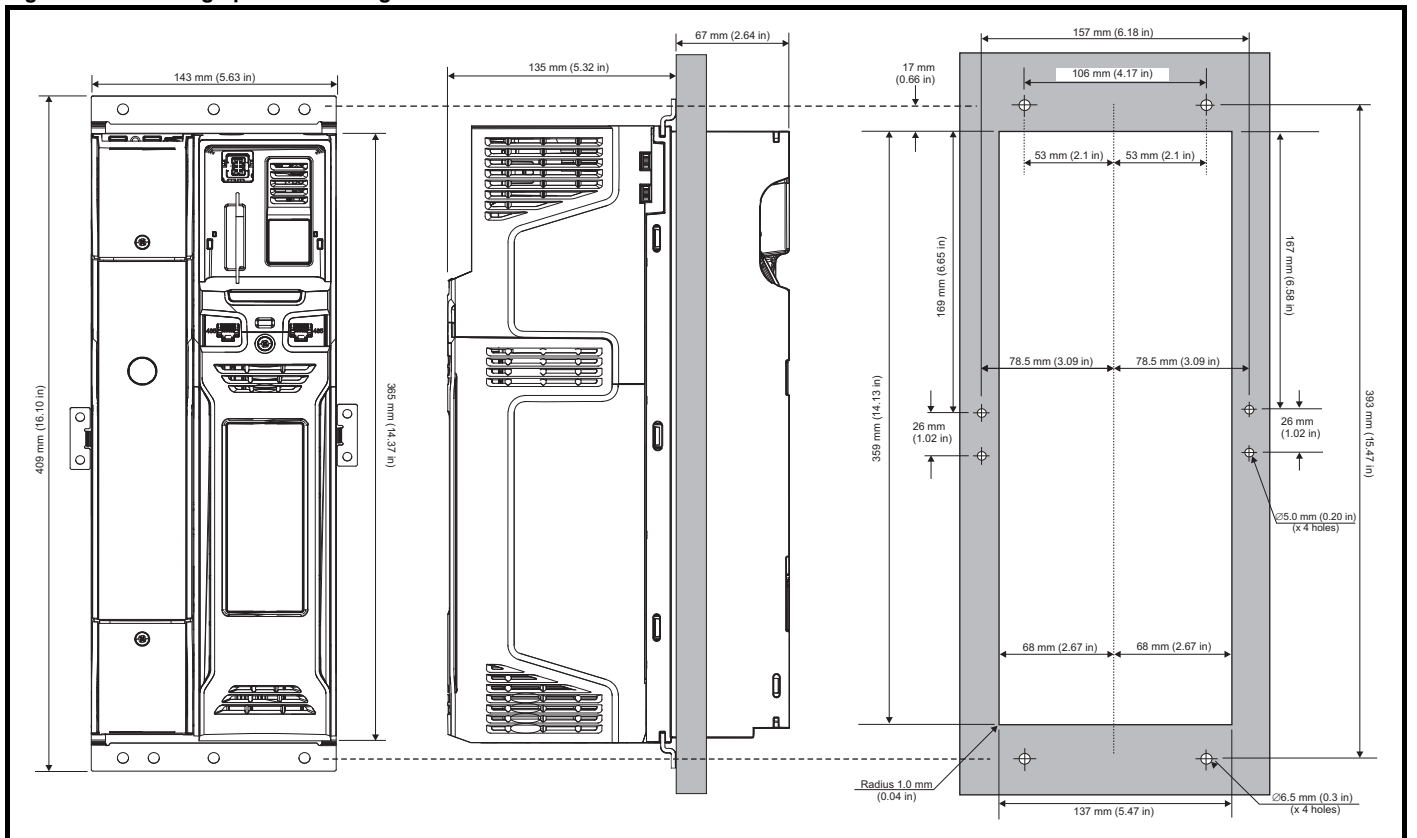


Figure 3-24 Through panel mounting the size 6 drive

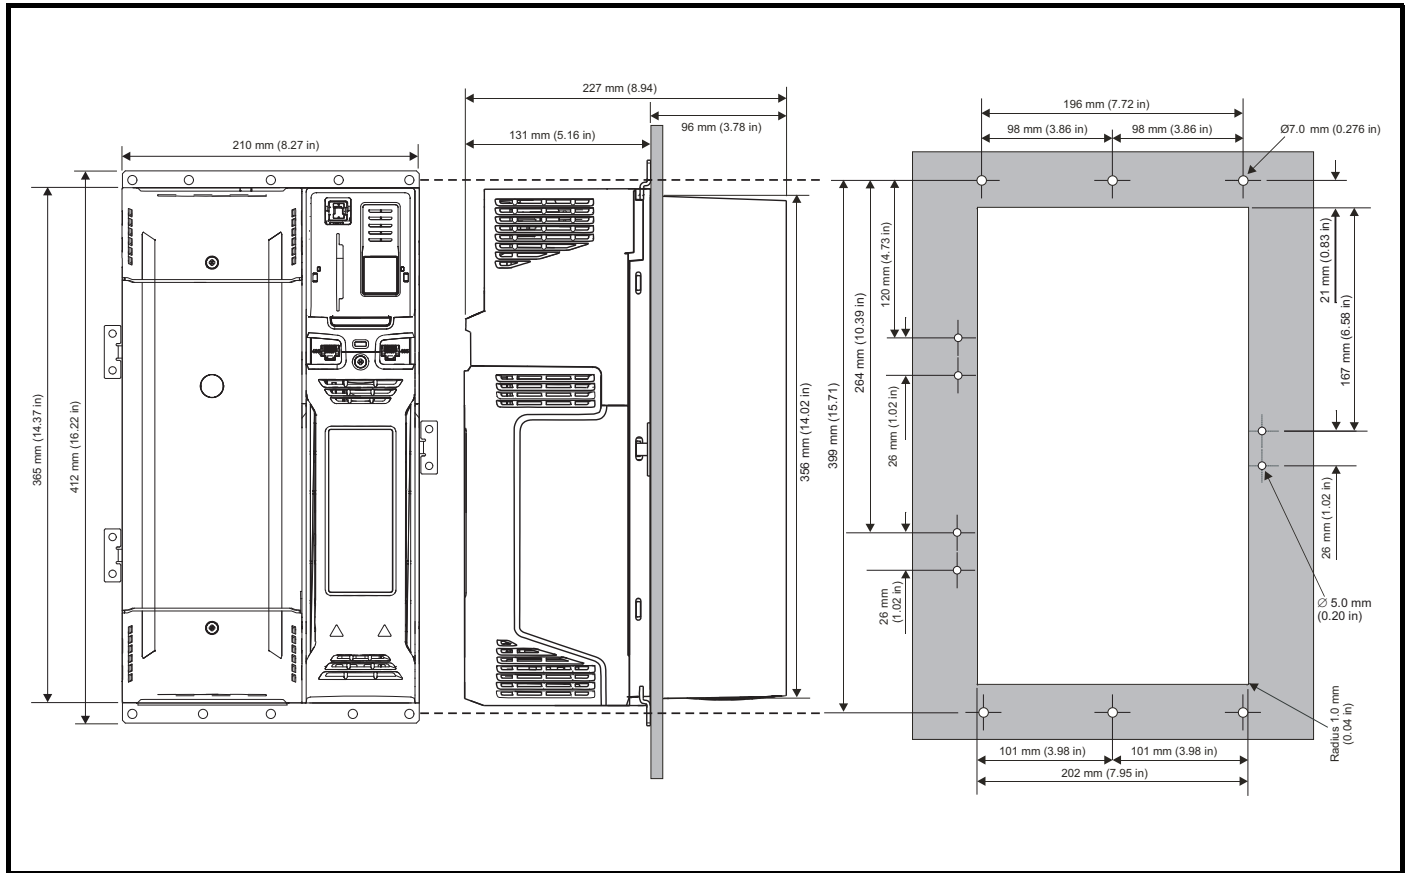

NOTE

The outer holes plus the hole located in the center of the bracket are to be used for through panel mounting.

Figure 3-25 Through panel mounting the size 7 drive

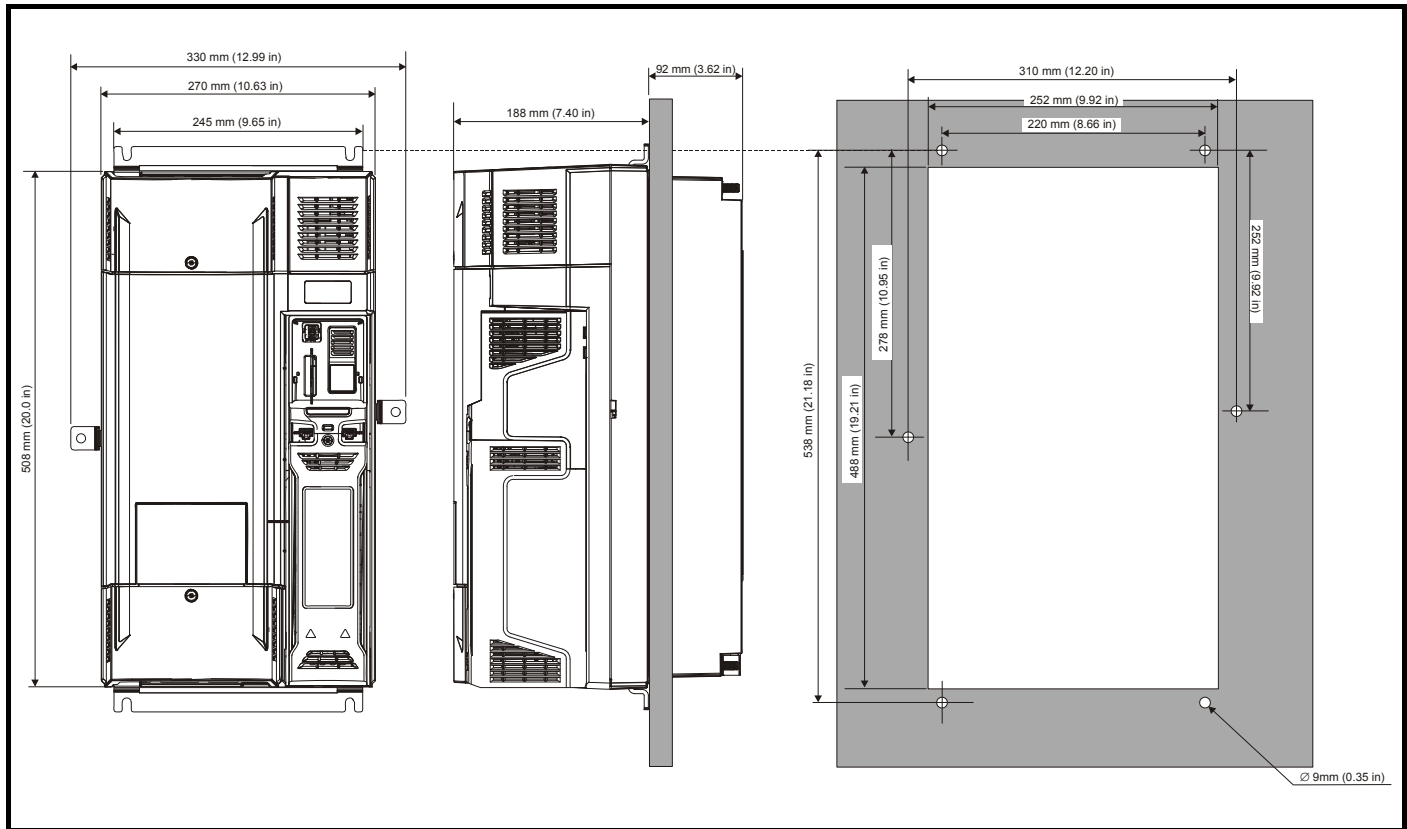


Figure 3-26 Through panel mounting the size 8 drive





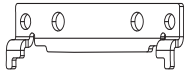
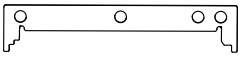

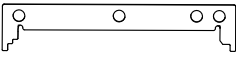
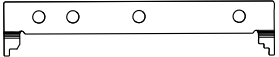

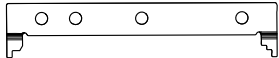
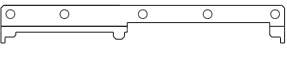

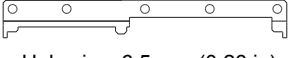
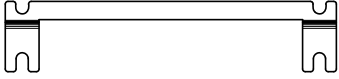





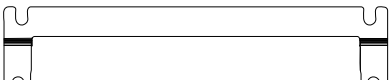

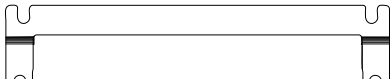


Figure 3-27 Through-panel mounting the size 9E and 10



3.5.3 Mounting brackets

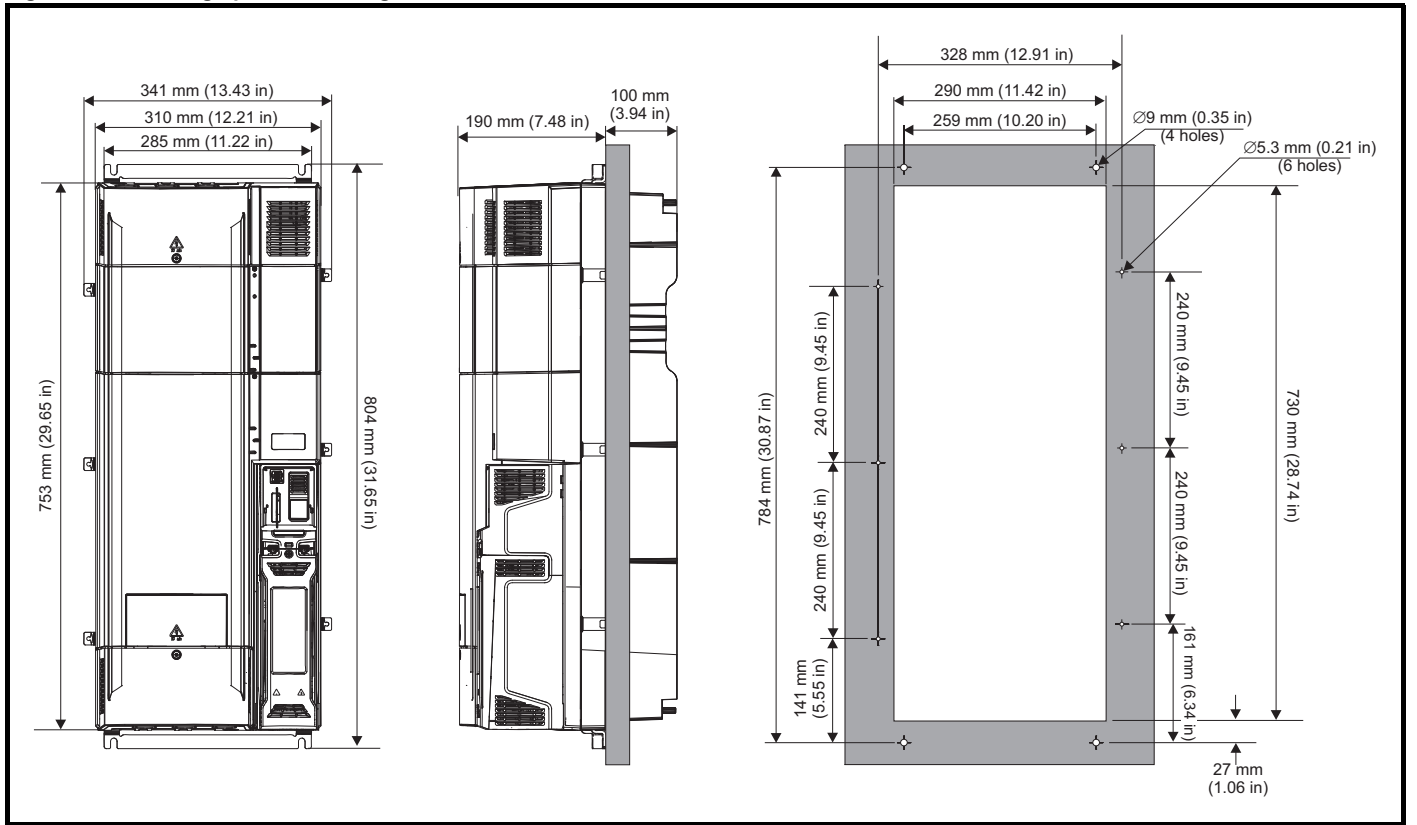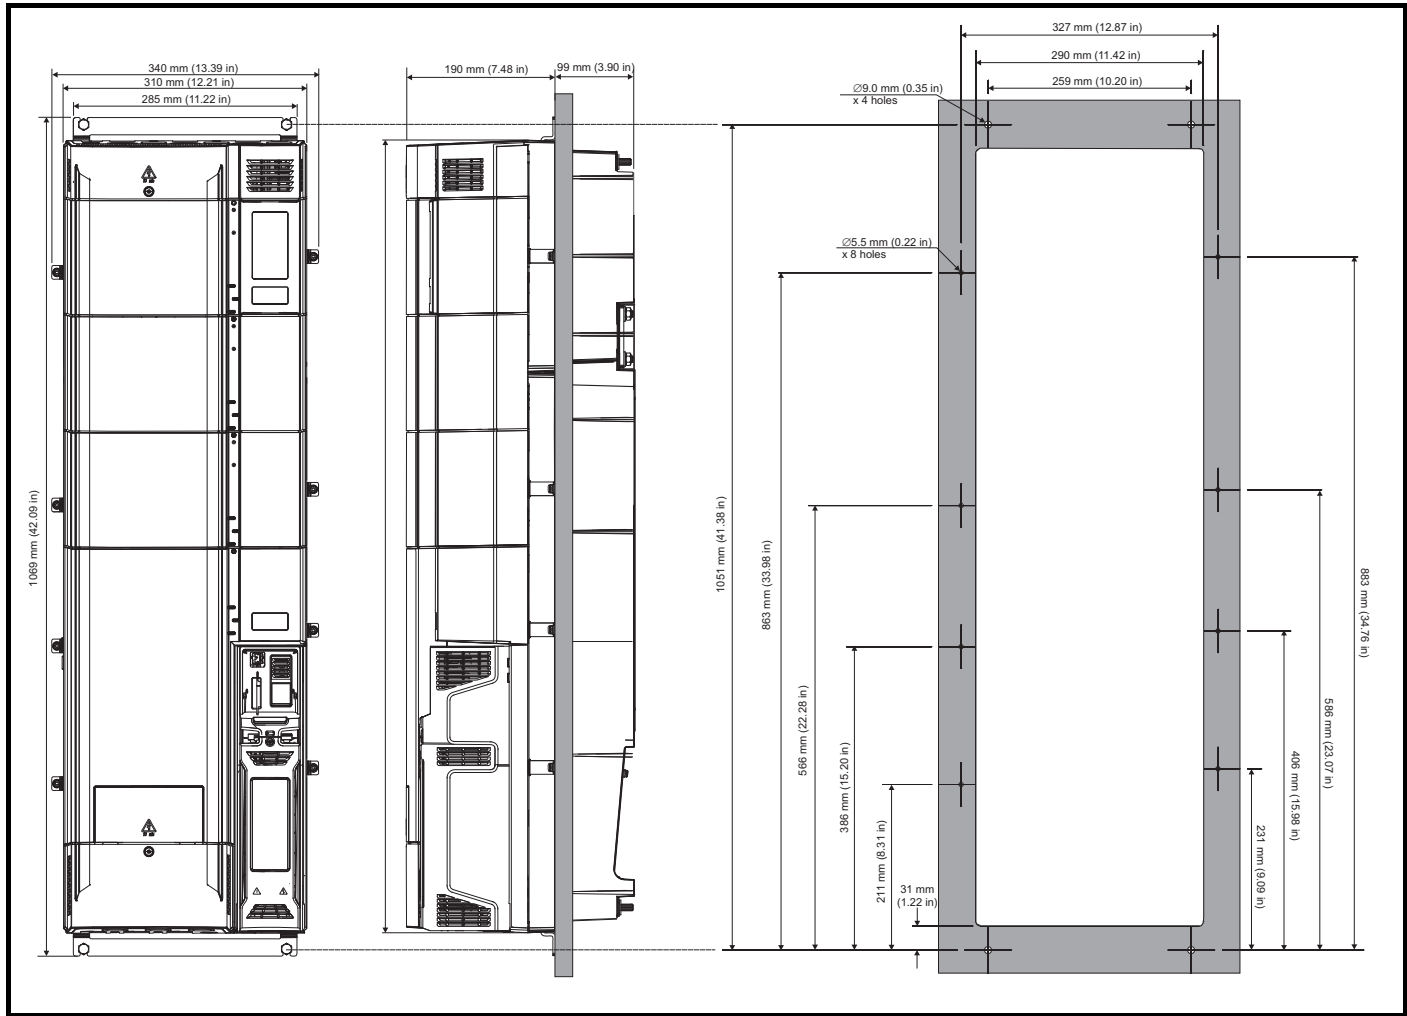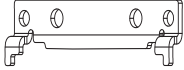Table 3-2 Mounting brackets

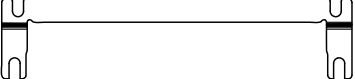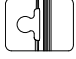Frame size	Surface	Qty	Through-panel	Qty
3	 Inner hole size: 6.5 mm (0.26 in) Outer hole size: 5.5 mm (0.22 in)	x 2	 Hole size: 5.5 mm (0.22 in)	x 2
			 Inner hole size: 6.5 mm (0.26 in) Outer hole size: 5.5 mm (0.22 in)	x 2
4	 Hole size: 6.5 mm (0.26 in)	x 2	 Hole size: 5.2 mm (0.21 in)	x 3
			 Hole size: 6.5 mm (0.26 in)	x 2
5	 Hole size: 6.5 mm (0.26 in)	x 2	 Hole size: 5.2 mm (0.21 in)	x 2
			 Hole size: 6.5 mm (0.26 in)	x 2
6	 Hole size: 6.5 mm (0.26 in)	x 2	 Hole size: 5.2 mm (0.21 in)	x 3
			 Hole size: 6.5 mm (0.26 in)	x 2
7	 Hole size: 9 mm (0.35 in)	x 2	 Hole size: 9 mm (0.35 in)	x 2
			 Hole size: 9 mm (0.35 in)	x 2
8	 Hole size: 9 mm (0.35 in)	x 2	 Hole size: 5.3 mm (0.21 in)	x 6
			 Hole size: 9 mm (0.35 in)	x 2
9E and 10	 Hole size: 9 mm (0.35 in)	x 2	 Hole size: 5.5 mm (0.22 in)	x 8
			 Hole size: 9 mm (0.35 in)	x 2

3.6 Enclosure for standard drives

3.6.1 Recommended spacing between the drives

Figure 3-28 Recommended spacing between the drives

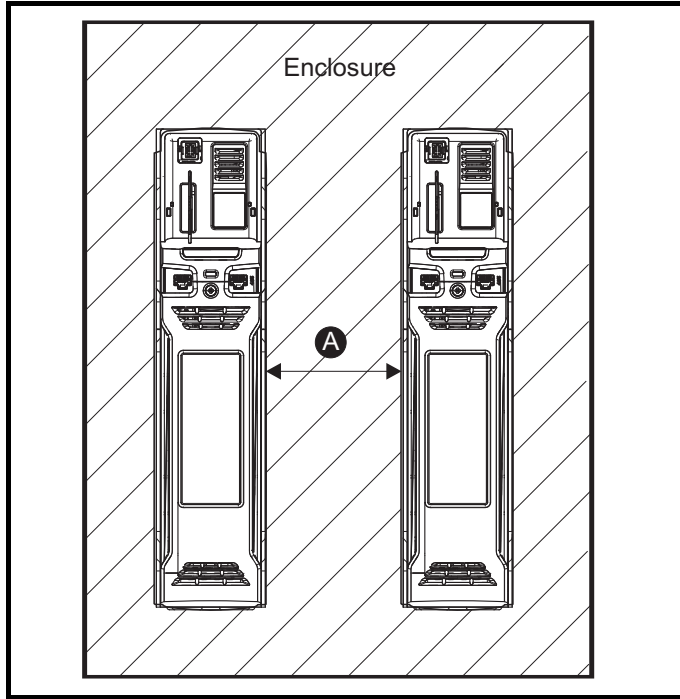


Table 3-3 Spacing required between the drives (without high IP bung)

Drive Size	Spacing (A)	
	40°C	50°C*
3	0 mm (0.00 in)	
4	0 mm (0.00 in)	
5	0 mm (0.00 in)	30 mm (1.18 in)
6	0 mm (0.00 in)	
7	30 mm (1.18 in)	
8	30 mm (1.18 in)	
9E	30 mm (1.18 in)	
10	30 mm (1.18 in)	

* 50°C derating applies, refer to Table 12-3 *Maximum permissible continuous output current @ 50 °C (122 °F)* on page 235.


NOTE

When through-panel mounted, ideally drives should be spaced 30 mm (1.18 in) to maximize panel stiffness.

3.6.2 Enclosure layout

Please observe the clearances in the diagram below taking into account any appropriate notes for other devices / auxiliary equipment when planning the installation.

Figure 3-29 Enclosure layout

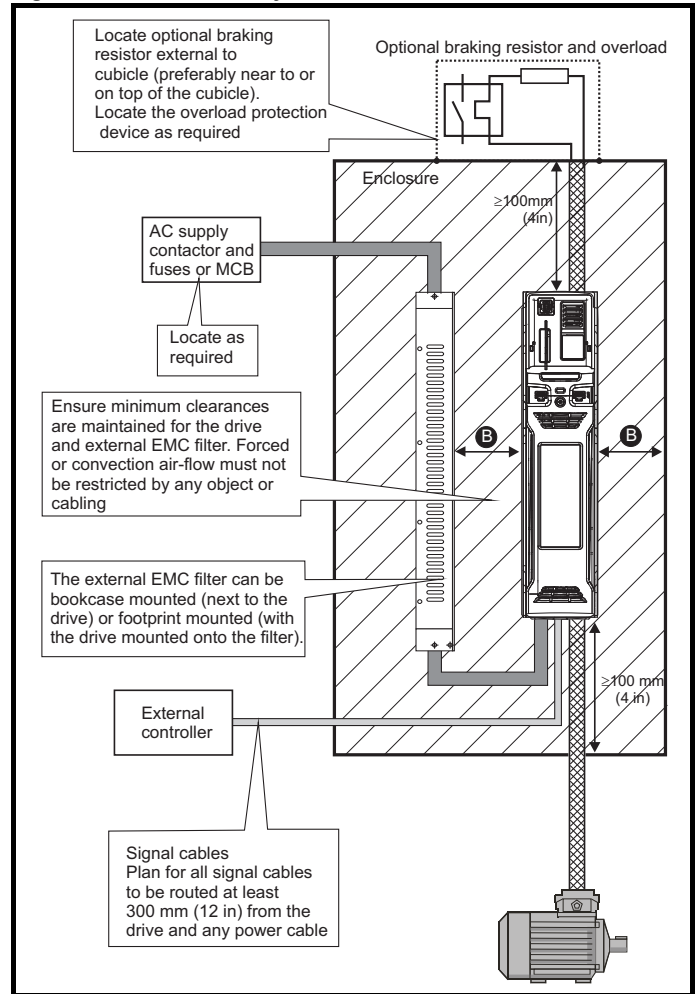

NOTE

For EMC compliance:

1. When using an external EMC filter, one filter is required for each drive.
2. Power cabling must be at least 100 mm (4 in) from the drive in all directions

Table 3-4 Spacing required between drive / enclosure and drive / EMC filter

Drive Size	Spacing (B)
3	0 mm (0.00 in)
4	30 mm (1.18 in)
5	
6	
7	
8	
9E	
10	

NOTE

Drive sizes 3 to 5 can be tile mounted where limited mounting space is available. The tile mounting kit is not supplied with the drive, it can be purchased separately.

3.6.3 Enclosure sizing

1. Add the dissipation figures from section on page 236 for each drive that is to be installed in the enclosure.
2. If an external EMC filter is to be used with each drive, add the dissipation figures from section 12.2.1 *EMC filter ratings* on page 256 for each external EMC filter that is to be installed in the enclosure.
3. If the braking resistor is to be mounted inside the enclosure, add the average power figures from for each braking resistor that is to be installed in the enclosure.
4. Calculate the total heat dissipation (in Watts) of any other equipment to be installed in the enclosure.
5. Add the heat dissipation figures obtained above. This gives a figure in Watts for the total heat that will be dissipated inside the enclosure.

Calculating the size of a sealed enclosure

The enclosure transfers internally generated heat into the surrounding air by natural convection (or external forced air flow); the greater the surface area of the enclosure walls, the better is the dissipation capability. Only the surfaces of the enclosure that are unobstructed (not in contact with a wall or floor) can dissipate heat.

Calculate the minimum required unobstructed surface area A_e for the enclosure from:

$$A_e = \frac{P}{k(T_{int} - T_{ext})}$$

Where:

A_e	Unobstructed surface area in m^2 ($1 m^2 = 10.9 ft^2$)
T_{ext}	Maximum expected temperature in $^{\circ}C$ <i>outside</i> the enclosure
T_{int}	Maximum permissible temperature in $^{\circ}C$ <i>inside</i> the enclosure
P	Power in Watts dissipated by <i>all</i> heat sources in the enclosure
k	Heat transmission coefficient of the enclosure material in $W/m^2/^{\circ}C$

Example

To calculate the size of an enclosure for the following:

- Two drives operating at the Normal Duty rating
- External EMC filter for each drive
- Braking resistors are to be mounted outside the enclosure
- Maximum ambient temperature inside the enclosure: $40^{\circ}C$
- Maximum ambient temperature outside the enclosure: $30^{\circ}C$

For example, if the power dissipation from each drive is 187 W and the power dissipation from each external EMC filter is 9.2 W.

Total dissipation: $2 \times (187 + 9.2) = 392.4 W$


NOTE

Power dissipation for the drives and the external EMC filters can be obtained from Chapter 12 *Technical data* on page 232.

The enclosure is to be made from painted 2 mm (0.079 in) sheet steel having a heat transmission coefficient of $5.5 W/m^2/^{\circ}C$. Only the top, front, and two sides of the enclosure are free to dissipate heat.

The value of $5.5 W/m^2/^{\circ}C$ can generally be used with a sheet steel enclosure (exact values can be obtained by the supplier of the material). If in any doubt, allow for a greater margin in the temperature rise.

Figure 3-30 Enclosure having front, sides and top panels free to dissipate heat

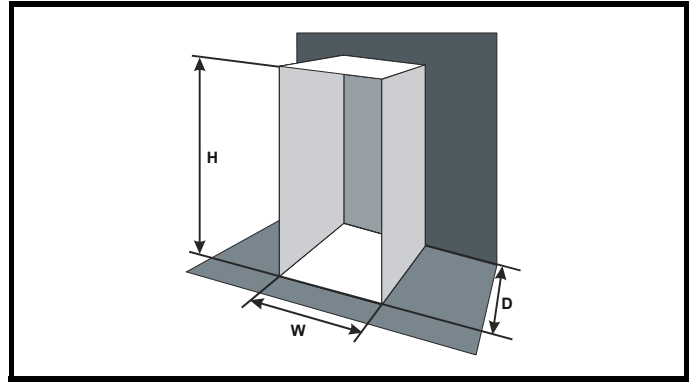

Insert the following values:

T_{int}	$40^{\circ}C$
T_{ext}	$30^{\circ}C$
k	5.5
P	392.4 W

The minimum required heat conducting area is then:

$$A_e = \frac{392.4}{5.5(40 - 30)}$$

$$= 7.135 m^2 (77.8 ft^2) \quad (1 m^2 = 10.9 ft^2)$$

Estimate two of the enclosure dimensions - the height (H) and depth (D), for instance. Calculate the width (W) from:

$$W = \frac{A_e - 2HD}{H + D}$$

Inserting $H = 2m$ and $D = 0.6m$, obtain the minimum width:

$$W = \frac{7.135 - (2 \times 2 \times 0.6)}{2 + 0.6}$$

$$= 1.821 m (71.7 in)$$

If the enclosure is too large for the space available, it can be made smaller only by attending to one or all of the following:

- Using a lower PWM switching frequency to reduce the dissipation in the drives
- Reducing the ambient temperature outside the enclosure, and/or applying forced-air cooling to the outside of the enclosure
- Reducing the number of drives in the enclosure
- Removing other heat-generating equipment

Calculating the air-flow in a ventilated enclosure

The dimensions of the enclosure are required only for accommodating the equipment. The equipment is cooled by the forced air flow.

Calculate the minimum required volume of ventilating air from:

$$V = \frac{3kP}{T_{int} - T_{ext}}$$

Where:

V	Air-flow in m^3 per hour ($1 m^3/hr = 0.59 ft^3/min$)
T_{ext}	Maximum expected temperature in $^{\circ}C$ <i>outside</i> the enclosure
T_{int}	Maximum permissible temperature in $^{\circ}C$ <i>inside</i> the enclosure
P	Power in Watts dissipated by <i>all</i> heat sources in the enclosure
k	Ratio of $\frac{P_o}{P_i}$

Where:

P_o is the air pressure at sea level

P_i is the air pressure at the installation

Typically use a factor of 1.2 to 1.3, to allow also for pressure-drops in dirty air-filters.

Example

To calculate the size of an enclosure for the following:

- Three drives operating at the Normal Duty rating
- External EMC filter for each drive
- Braking resistors are to be mounted outside the enclosure
- Maximum ambient temperature inside the enclosure: 40 °C
- Maximum ambient temperature outside the enclosure: 30 °C

For example, dissipation of each drive: 101 W and dissipation of each external EMC filter: 6.9 W (max).

Total dissipation: $3 \times (101 + 6.9) = 323.7 \text{ W}$

Insert the following values:

T_{int} 40 °C
 T_{ext} 30 °C
 k 1.3
 P 323.7 W

Then:

$$V = \frac{3 \times 1.3 \times 323.7}{40 - 30}$$

$$= 126.2 \text{ m}^3/\text{hr} \text{ (74.5 ft}^3/\text{min)} \quad (1 \text{ m}^3/\text{hr} = 0.59 \text{ ft}^3/\text{min)}$$

3.7 Enclosure design and drive ambient temperature

Drive derating is required for operation in high ambient temperatures

Totally enclosing or through panel mounting the drive in either a sealed cabinet (no airflow) or in a well ventilated cabinet makes a significant difference on drive cooling.

The chosen method affects the ambient temperature value (T_{rate}) which should be used for any necessary derating to ensure sufficient cooling for the whole of the drive.

The ambient temperature for the four different combinations is defined below:

1. Totally enclosed with no air flow (<2 m/s) over the drive
 $T_{rate} = T_{int} + 5 \text{ °C}$
2. Totally enclosed with air flow (>2 m/s) over the drive
 $T_{rate} = T_{int}$
3. Through panel mounted with no airflow (<2 m/s) over the drive
 $T_{rate} = \text{the greater of } T_{ext} + 5 \text{ °C, or } T_{int}$
4. Through panel mounted with air flow (>2 m/s) over the drive
 $T_{rate} = \text{the greater of } T_{ext} \text{ or } T_{int}$

Where:

T_{ext} = Temperature outside the cabinet

T_{int} = Temperature inside the cabinet

T_{rate} = Temperature used to select current rating from tables in Chapter 12 *Technical data* on page 232.

3.8 Heatsink fan operation

The drive is ventilated by an internal heatsink mounted fan. The fan housing forms a baffle plate, channelling the air through the heatsink chamber. Thus, regardless of mounting method (surface mounting or through-panel mounting), the installing of additional baffle plates is not required.

Ensure the minimum clearances around the drive are maintained to allow air to flow freely.

The heatsink fan on all sizes is a variable speed fan. The drive controls the speed at which the fan runs based on the temperature of the heatsink and the drive's thermal model system. The maximum speed at which the fan operates can be limited in Pr **06.045**. This could incur an output current derating. Refer to section 3.14.2 *Fan removal procedure* on page 59 for information on fan removal. The size 6 and 7 is also installed with a variable speed fan to ventilate the capacitor bank.


3.9 Enclosing standard drive for high environmental protection

An explanation of environmental protection rating is provided in section 12.1.9 *IP / UL Rating*.

The standard drive is rated to IP21 pollution degree 2 (dry, non-conductive contamination only) (NEMA 1). However, it is possible to configure the drive to achieve IP65 rating (sizes 3 to 8) or IP55 (size 9 and 10) (NEMA 12) at the rear of the heatsink for through-panel mounting (some current derating is required). Refer to Table 12-2 on page 234.

This allows the front of the drive, along with various switchgear, to be housed in a high IP enclosure with the heatsink protruding through the panel to the external environment. Thus, the majority of the heat generated by the drive is dissipated outside the enclosure maintaining a reduced temperature inside the enclosure. This also relies on a good seal being made between the heatsink and the rear of the enclosure using the gaskets provided.


Figure 3-31 Example of IP65 (sizes 3 to 8) or IP55 (size 9 and 10) (NEMA 12) through-panel layout

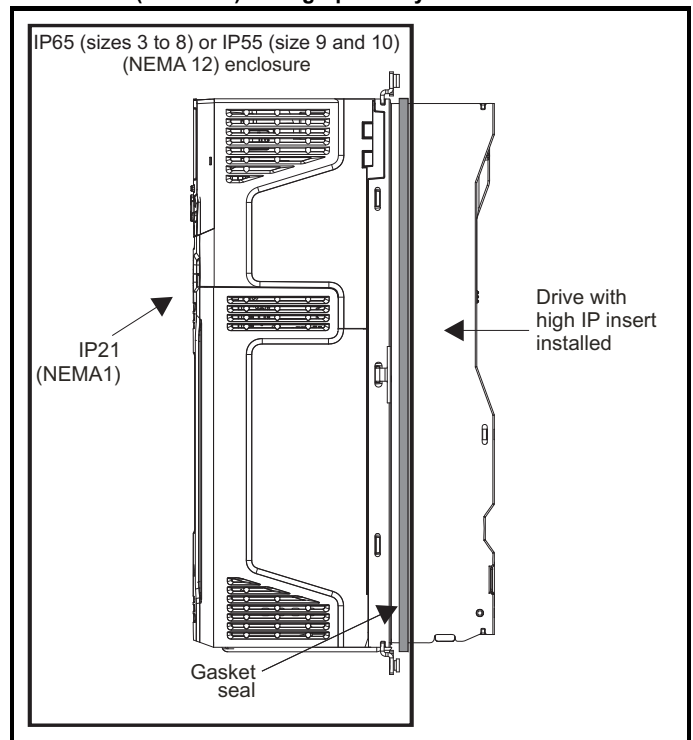

The main gasket should be installed as shown in Figure 3-32.

On drive sizes 3, 4 and 5, in order to achieve the high IP rating at the rear of the heatsink it is necessary to seal a heatsink vent by installing the high IP insert as shown in Figure 3-34, Figure 3-35 and Figure 3-36.

Figure 3-32 Installing the gasket

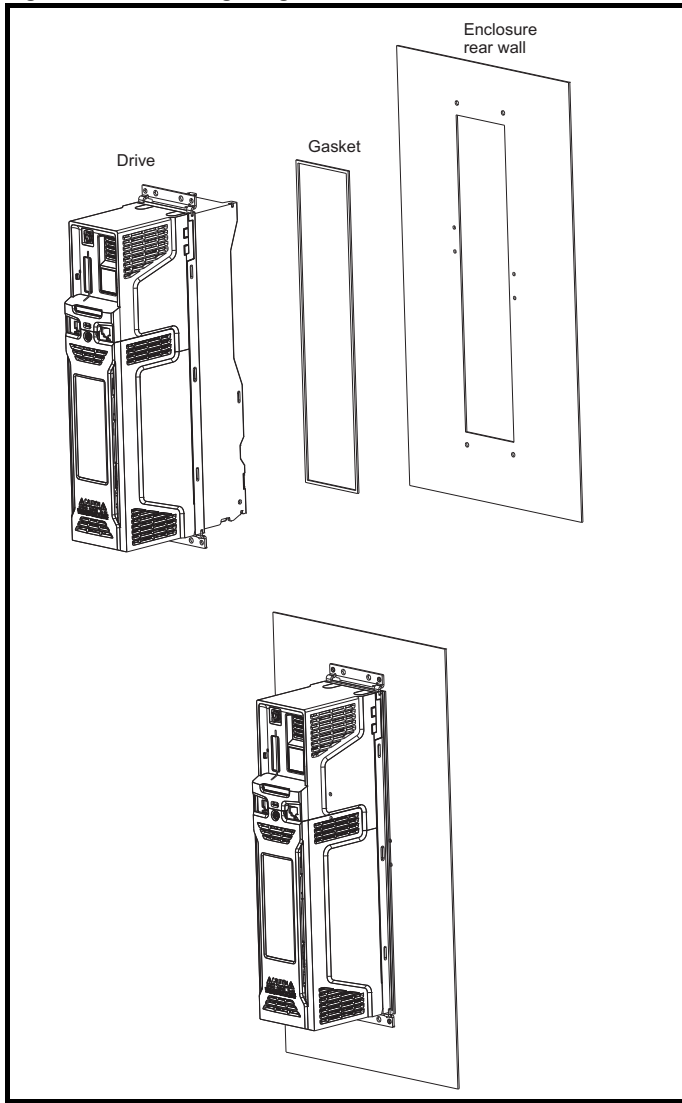

To seal the space between the drive and the backplate, use two sealing brackets as shown in Figure 3-33.

Figure 3-33 Through panel mounting


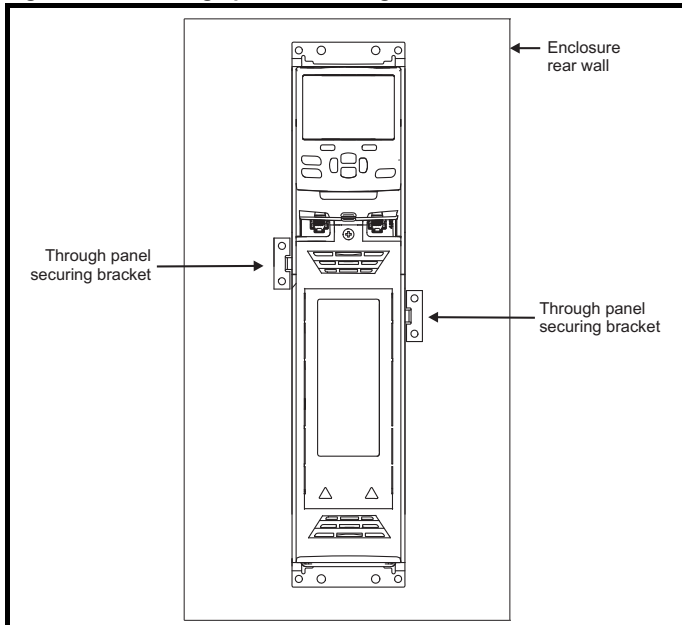


Figure 3-34 Installation of high IP insert for size 3

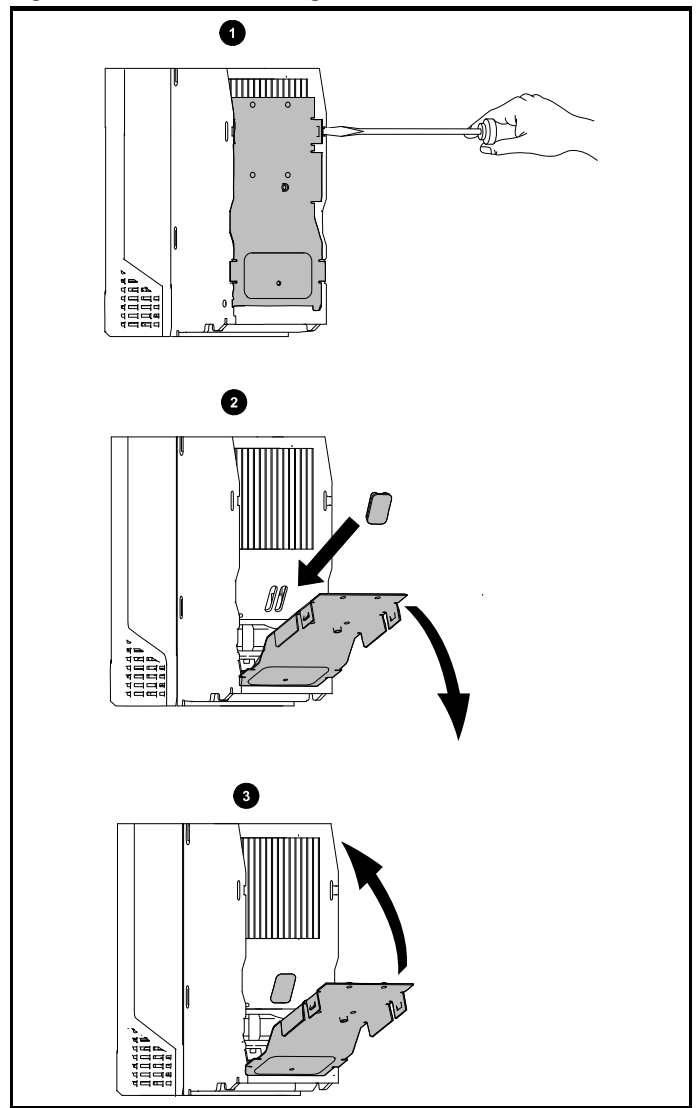


1. To install the high IP insert, firstly place a flat head screwdriver into the slot highlighted (1).
2. Pull the hinged baffle down to expose the ventilation hole, install the high IP insert into the ventilation hole in the heatsink (2). Ensure the high IP insert is securely installed by firmly pressing it into place (3).
3. Close the hinged baffle as shown (1).

To remove the high IP insert, reverse the above instructions.

The guidelines in Table 3-5 should be followed.


Figure 3-35 Installation of high IP insert for size 4

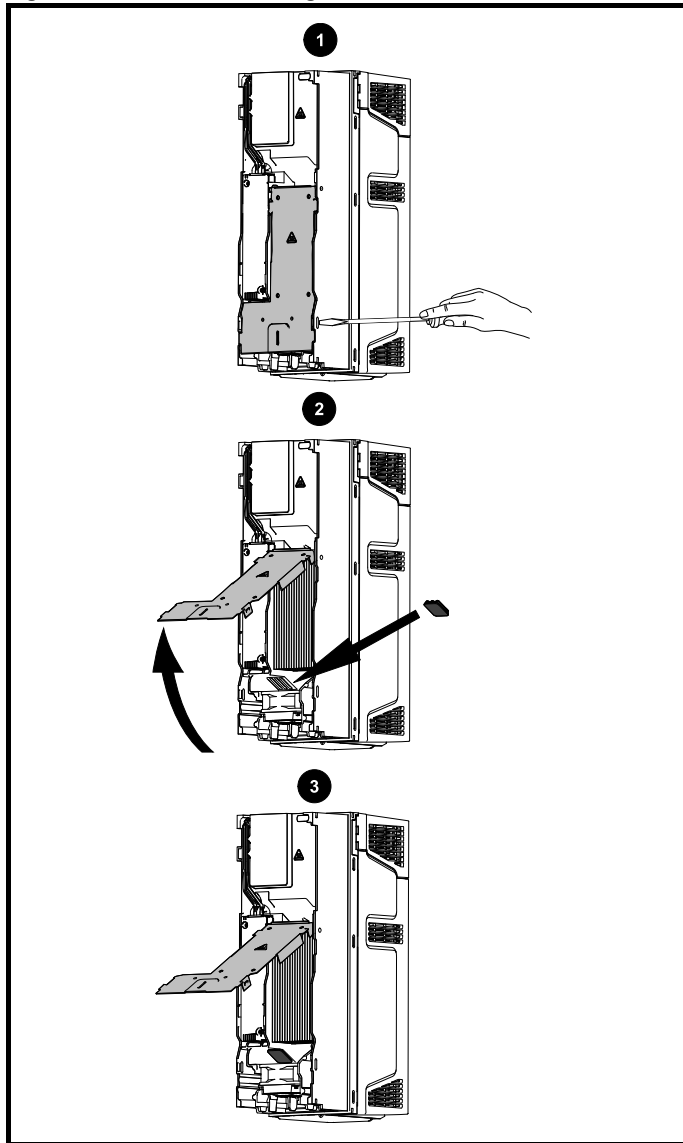

1. To install the high IP insert, firstly place a flat head screwdriver into the slot highlighted (1).
2. Pull the hinged baffle up to expose the ventilation hole, install the high IP insert into the ventilation hole in the heatsink (2).
3. Ensure the high IP insert is securely installed by firmly pressing it into place (3).
4. Close the hinged baffle as shown (1).

To remove the high IP insert, reverse the above instructions.
The guidelines in Table 3-5 should be followed.

Figure 3-36 Installation of high IP insert for size 5

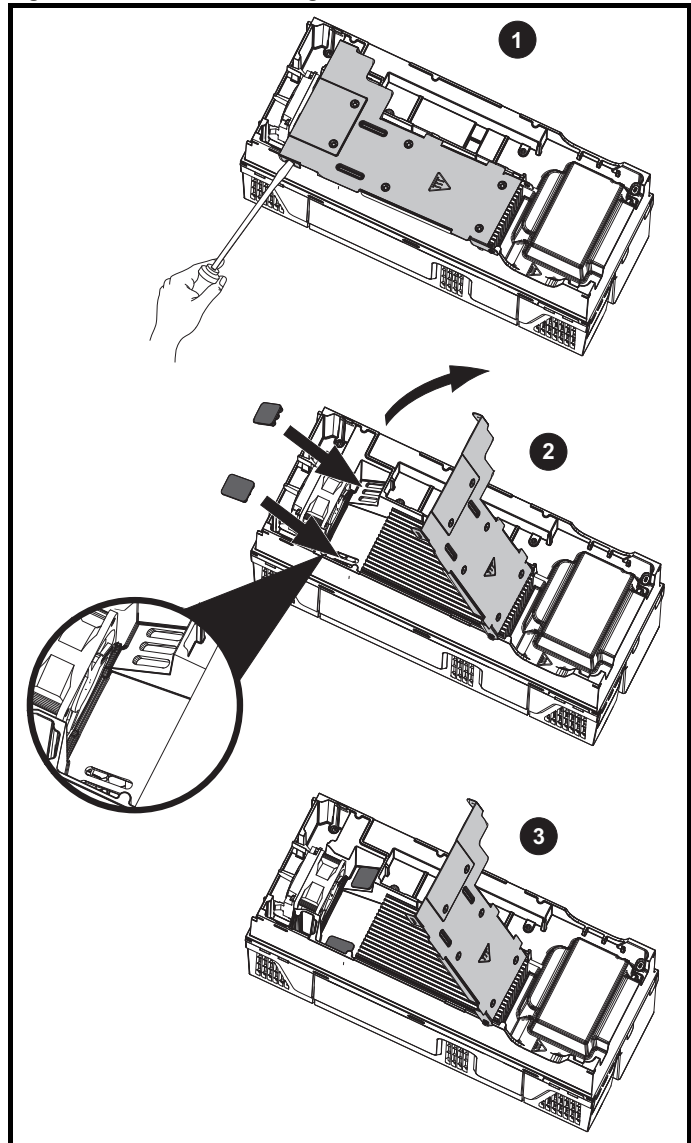

1. To install the high IP insert, firstly place a flat head screwdriver into the slot highlighted (1).
2. Pull the hinged baffle up to expose the ventilation holes, install the high IP inserts into the ventilation holes in the heatsink (2).
3. Ensure the high IP inserts are securely installed by firmly pressing them into place (3).
4. Close the hinged baffle as shown (1).

To remove the high IP insert, reverse the above instructions.
The guidelines in Table 3-5 should be followed.

Table 3-5 Environment considerations

Environment	High IP insert	Comments
Clean	Not installed	
Dry, dusty (non-conductive)	Installed	Regular cleaning recommended
Dry, dusty (conductive)	Installed	
IP65 compliance	Installed	

NOTE

A current derating must be applied to the drive if the high IP insert is installed. Derating information is provided in section 12.1.1 *Power and current ratings (Derating for switching frequency and temperature)* on page 232.

Failure to do so may result in nuisance tripping.


NOTE

When designing an IP65 (NEMA 12) enclosure (Figure 3-31 *Example of IP65 (sizes 3 to 8) or IP55 (size 9 and 10) (NEMA 12) through-panel layout* on page 45), consideration should be made to the dissipation from the front of the drive.

Table 3-6 Power losses from the front of the drive when through-panel mounted

Frame size	Power loss
3	≤ 50 W
4	≤ 75 W
5	≤ 100 W
6	≤ 100 W
7	≤ 204 W
8	≤ 347 W
9	≤ 480 W
10	≤ 480 W

3.10 Heatsink mounted brake resistor




The internal / heatsink mounted braking resistors must only be used with the following drives.
 Brake resistor 1220-2752-00 must only be used with size 3 drives. Brake resistor 1299-0003-00 must only be used with size 4 and 5 drives.

3.10.1 Size 3, 4 and 5 internal braking resistor

Size 3, 4 and 5 have been designed with an optional space-saving heatsink mounted resistor. The resistor can be installed within the heatsink fins of the drive. When the heatsink resistor is used, an external thermal protection device is not required as the resistor is designed such that it will fail safely under any fault conditions. The in-built software overload protection is set-up at default to protect the resistor. The resistor is rated to IP54 (NEMA 12).

3.10.2 Internal braking resistor installation instructions


Figure 3-37 Brake resistor installation on size 3

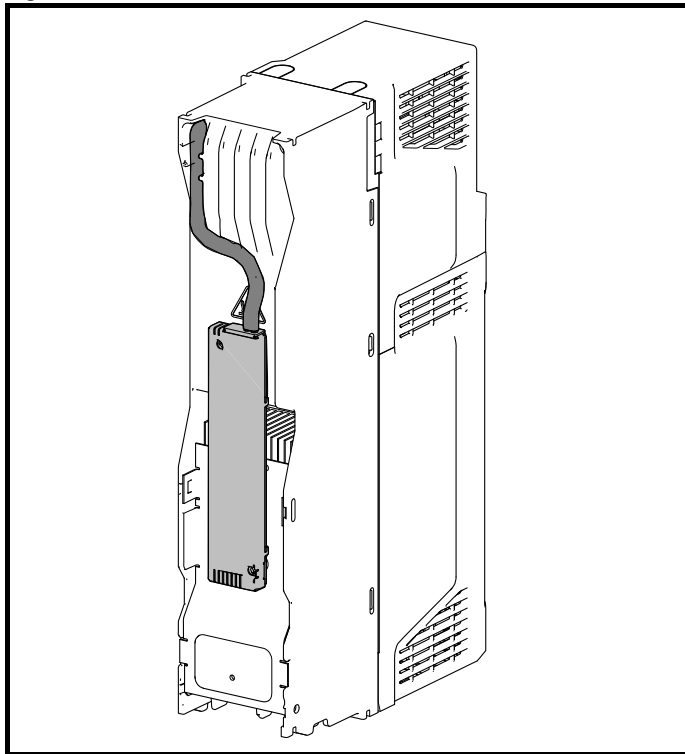

1. Remove the terminal covers as detailed in section 3.3.1 *Removing the terminal covers* on page 25.


2. Remove the internal EMC filter as shown in Figure 4-25 *Removal of the size 3 internal EMC filter* on page 84.
3. Remove the brake resistor bung from the hole in the chassis, the closed end of the bung will need to be pierced so that the cable has access to be routed through.
4. Feed brake resistor bung onto outer insulation of brake resistor cable. The wider end of the bung should be inserted first. The Narrow end should align with end of insulation.
5. Install the braking resistor to the heatsink using the captive screws. The screws should be tighten to a maximum torque of 2 N m (1.5 lb ft).
6. Route the cables through the provided hole at the rear of the heatsink as shown in Figure 3-37 and take the cable out from the front side of the drive. Ensure the cables are routed between the fins of the heatsink, and the cables are not trapped between the heatsink fins and the resistor.
7. Crimp the cable ends and make appropriate connections. The brake terminals must be tightened to a maximum torque of 2 N m (1.5 lb ft).
8. Replace the terminal covers on the drive, tighten to a maximum torque of 1 N m (0.7 lb ft).

Figure 3-38 Brake resistor installation on size 4

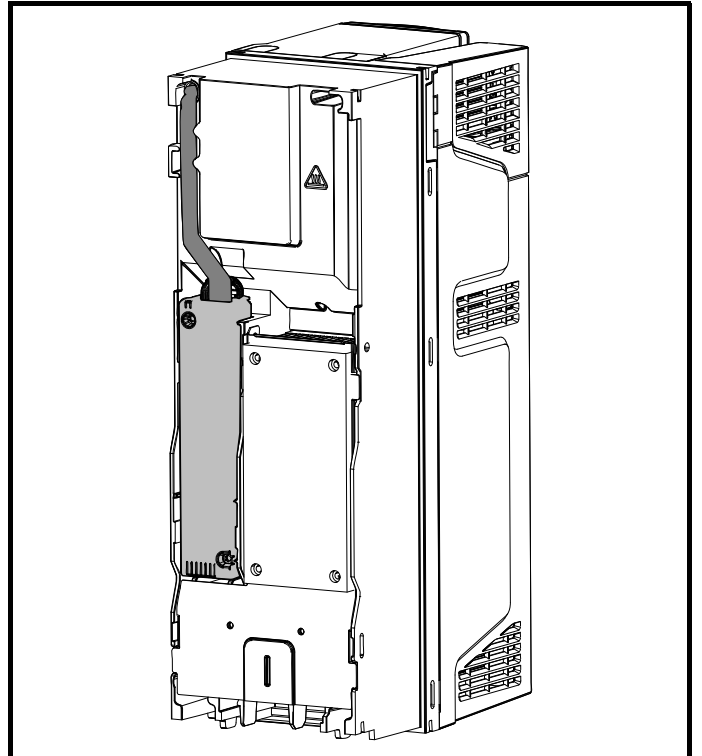

1. Remove the terminal covers as detailed in section 3.3.1 *Removing the terminal covers* on page 25.
2. Remove the brake resistor bung from the hole in the chassis, the closed end of the bung will need to be pierced so that the cable has access to be routed through.
3. Feed brake resistor bung onto outer insulation of brake resistor cable. The wider end of the bung should be inserted first. The Narrow end should align with end of insulation.
4. Install the braking resistor to the heatsink using the captive screws. The screws should be tighten to a maximum torque of 2 N m (1.5 lb ft).
5. Route the cables through the provided hole at the rear of the heatsink as shown in Figure 3-38 and take the cable out from the front side of the drive. Ensure the cables are routed between the fins of the heatsink, and the cables are not trapped between the heatsink fins and the resistor.
6. Crimp the cable ends and make appropriate connections. The brake terminals must be tightened to a maximum torque of 2 N m (1.5 lb ft).
7. Replace the terminal covers on the drive, tighten to a maximum torque of 1 N m (0.7 lb ft).

Figure 3-39 Brake resistor installation on size 5

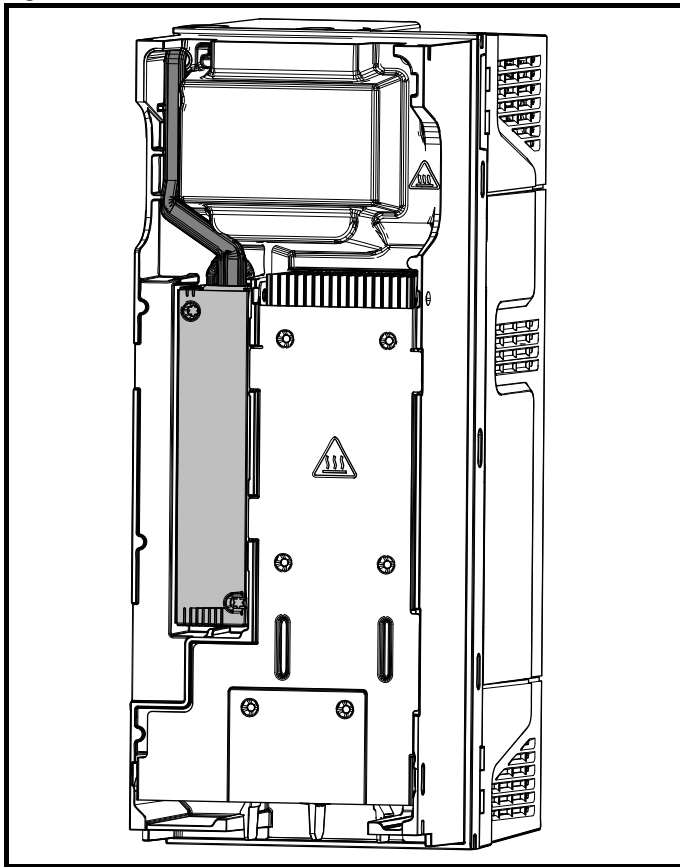


1. Remove the terminal covers as detailed in section 3.3.1 *Removing the terminal covers* on page 25.
2. Remove the brake resistor bung from the hole in the chassis, the closed end of the bung will need to be pierced so that the cable has access to be routed through.
3. Feed brake resistor bung onto outer insulation of brake resistor cable. The wider end of the bung should be inserted first. The Narrow end should align with end of insulation.
4. Install the braking resistor to the heatsink using the captive screws. The screws should be tightened to a maximum torque of 2 N m (1.5 lb ft).
5. Route the cables through the provided hole at the rear of the heatsink as shown in Figure 3-38 and take the cable out from the front side of the drive. Ensure the cables are routed between the fins of the heatsink, and the cables are not trapped between the heatsink fins and the resistor.
6. Crimp the cable ends and make appropriate connections. The brake terminals must be tightened to a maximum torque of 2 N m (1.5 lb ft).
7. Replace the terminal covers on the drive, tighten to a maximum torque of 1 N m (0.7 lb ft).

3.10.3 External brake resistor

External brake resistors are available from Control Techniques for drive sizes 3 to 6. They can be mounted in the enclosure as per mounting recommendation in Figure 3-29 *Enclosure layout* on page 43 using mounting brackets part number 6541-0187-00. Figure 3-40 below shows the brake resistor mounted on the mounting bracket. Two M4 screws and nuts (2) can be used to fix the brake resistor to the mounting bracket. One M4 nut with washer (1) is provided to use for the ground connection. The brake resistor is equipped with a thermal switch, the thermal switch should be integrated in the control circuit by the user.

Figure 3-40 Brake resistor with the mounting bracket

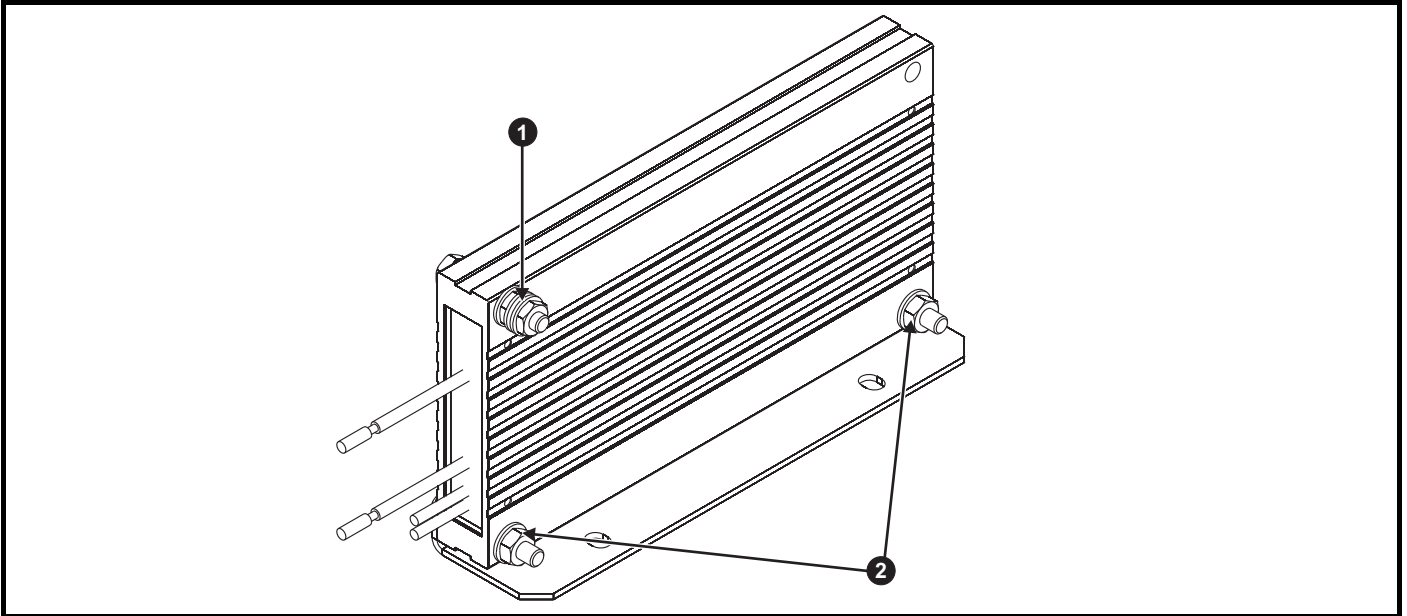

1. Ground connection (1 x M4 nut and washer).
2. Attaching the brake resistor to the mounting bracket (using 2 x M4 screws and nuts).

Figure 3-41 Mounting bracket dimensions


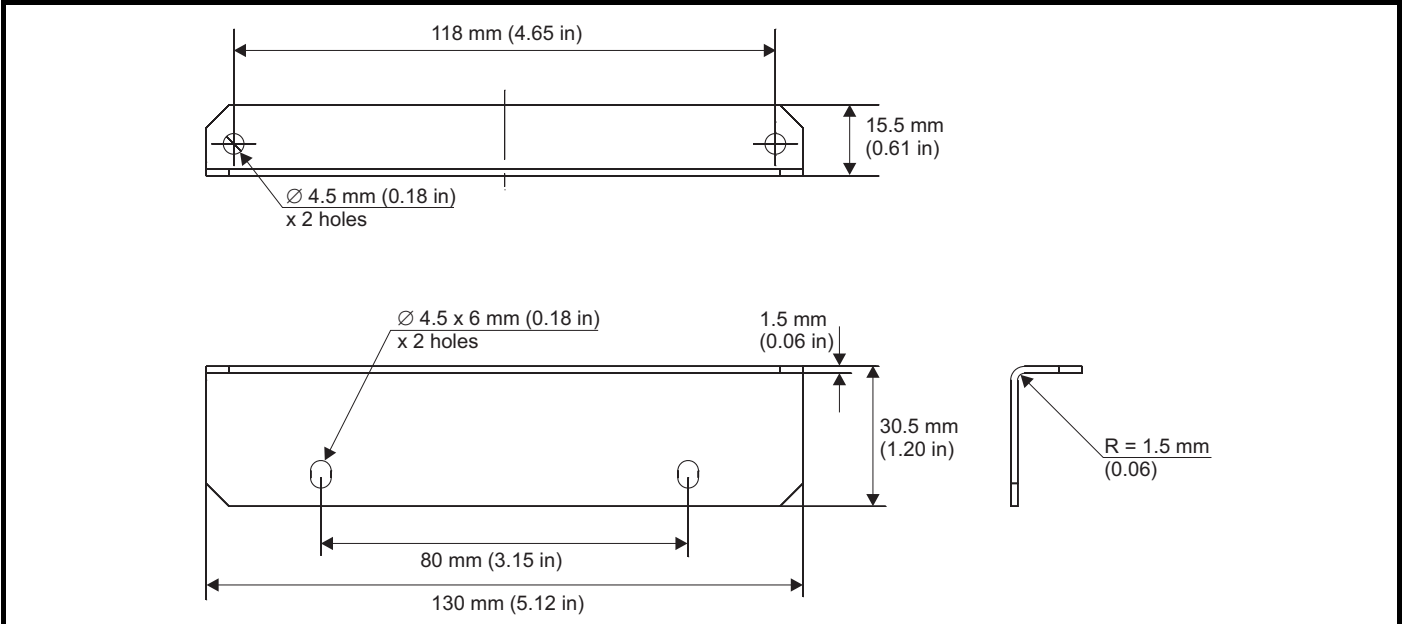


Figure 3-42 Brake resistor dimensions

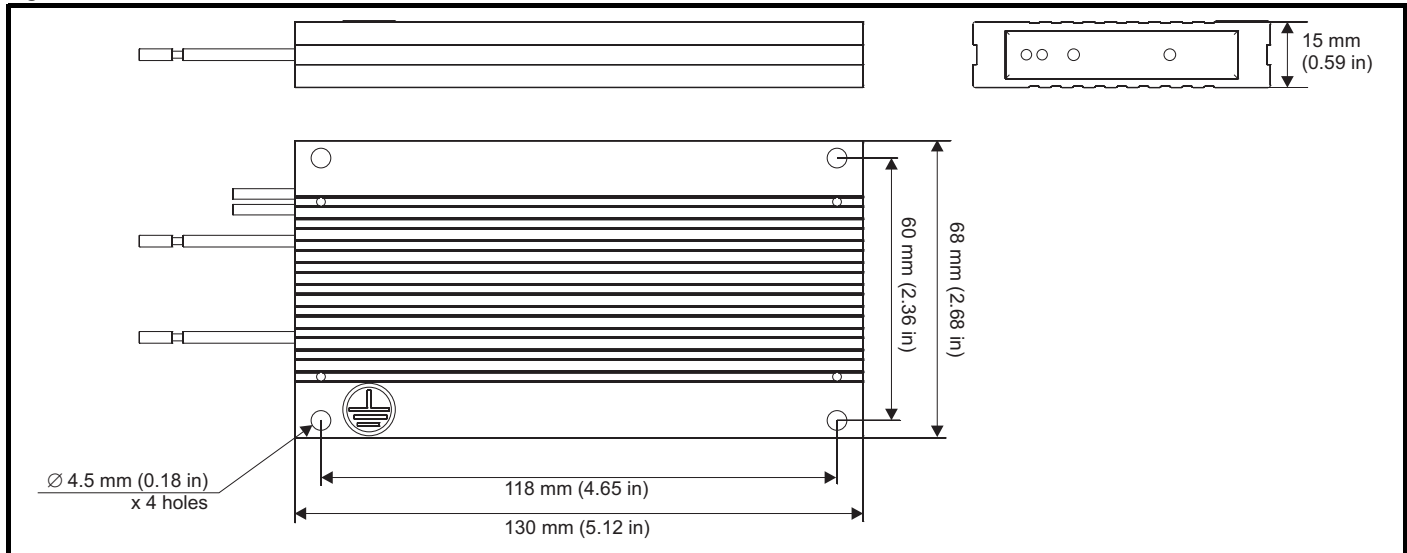

3.11 External EMC filter

The external EMC filter details for each drive rating are provided in the table below.

Table 3-7 External EMC filter data

Model	CT part number	Weight	
		kg	lb
200 V			
03200050 to 03200106	4200-3230	1.9	4.20
04200137 to 04200185	4200-0272	4.0	8.82
05200250	4200-0312	5.5	12.13
06200330 to 06200440	4200-2300	6.5	14.3
07200610 to 07200830	4200-1132	6.9	15.2
08201160 to 08201320	4200-1972	9.6	21.1
400 V			
03400025 to 03400100	4200-3480	2.0	4.40
04400150 to 04400172	4200-0252	4.1	9.04
05400270 to 05400300	4200-0402	5.5	12.13
06400350 to 06400470	4200-4800	6.7	14.8
07400660 to 07401000	4200-1132	6.9	15.2
08401340 to 08401570	4200-1972	9.6	21.1
575 V			
05500030 to 05500069	4200-0122	7.0	15.4
06500100 to 06500350	4200-3690	7.0	15.4
07500440 to 07500550	4200-0672		
08500630 to 08500860	4200-1662	9.35	9.35
690 V			
07600190 to 07600540	4200-0672		
08600630 to 08600860	4200-1662	9.35	9.35

The external EMC filters for sizes 0 to 6 can be footprint mounted or bookcase mounted as shown in Figure 3-43 and Figure 3-44. The external EMC filters for sizes 7 to 10, are designed to be mounted above the drive as shown in Figure 3-45.

Mount the external EMC filter following the guidelines in section 4.12.5 *Compliance with generic emission standards* on page 87.


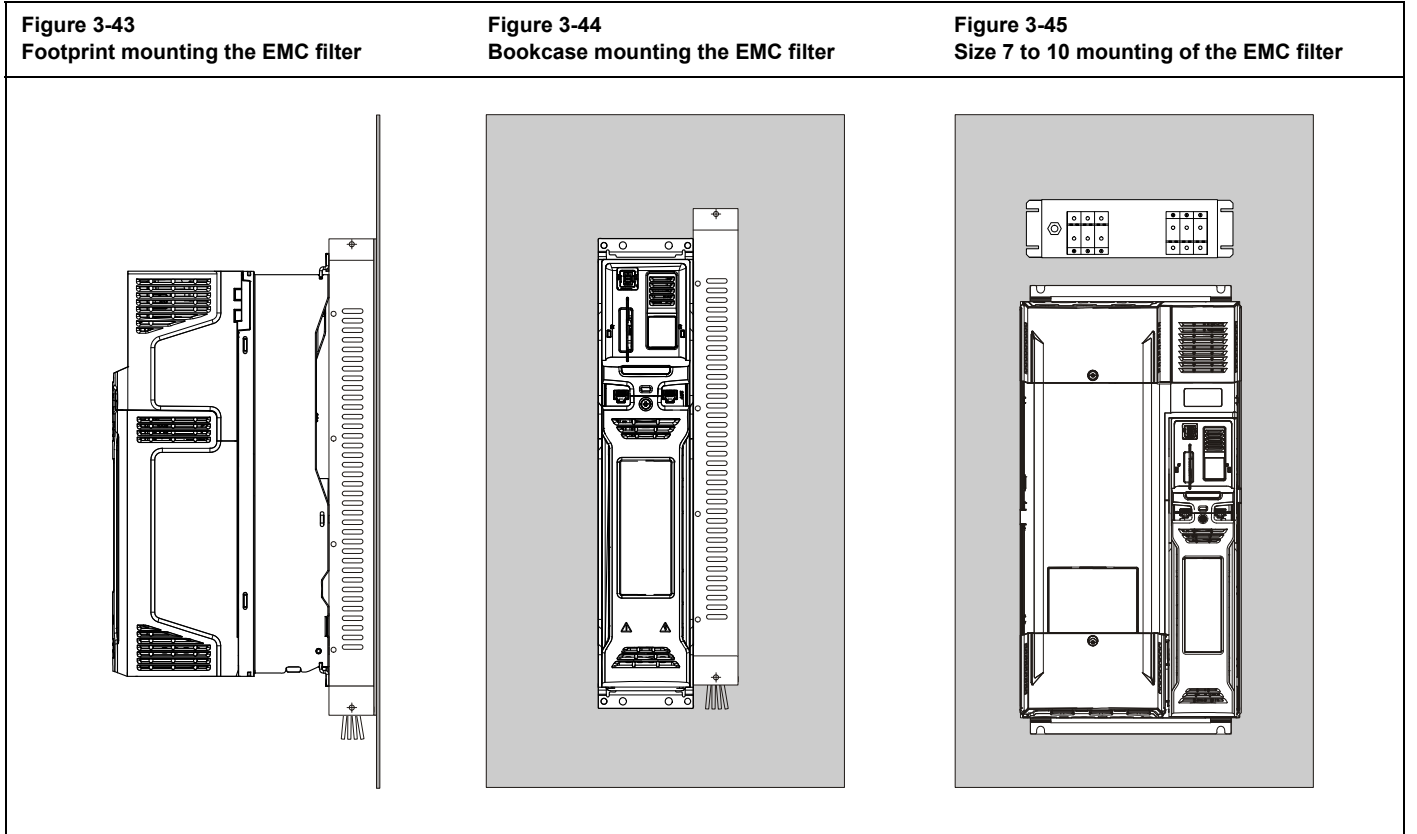


Figure 3-46 External EMC filter (size 3 to 6)

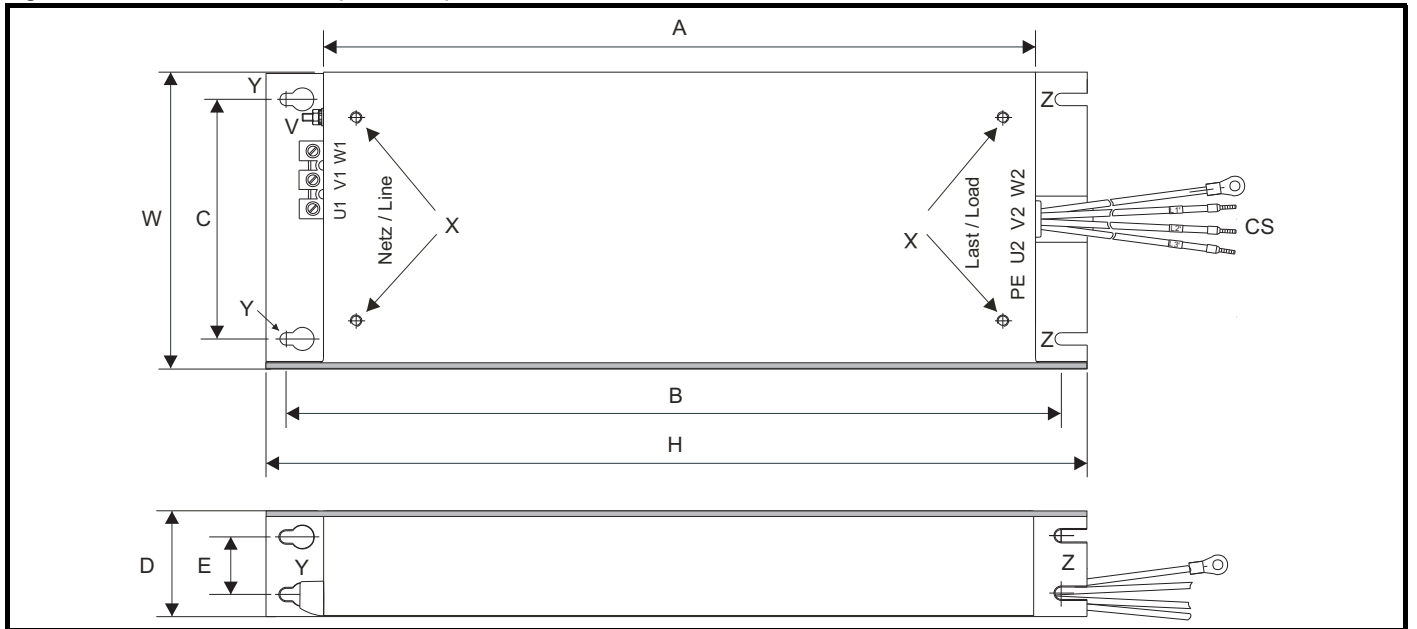

V: Ground stud
 Z: Bookcase mounting slot diameter.
 X: Threaded holes for footprint mounting of the drive
 CS: Cable size
 Y: Footprint mounting hole diameter

Table 3-8 Size 3 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS
4200-3230	384 mm	414 mm	56 mm	41 mm		426 mm	83 mm	M5	M5	5.5 mm	5.5 mm	2.5 mm ²
4200-3480	(15.12 in)	(16.30 in)	(2.21 in)	(1.61 in)		(16.77 in)	(3.27 in)			(0.22 in)	(0.22 in)	(14 AWG)

Table 3-9 Size 4 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS
4200-0272	395 mm (15.55 in)	425 mm (16.73 in)	100 mm (3.94 in)	60 mm (2.36 in)	33 mm (1.30 in)	437 mm (17.2 in)	123 mm (4.84 in)	M6	M6	6.5 mm (0.26 in)	6.5 mm (0.26 in)	6 mm ² (10 AWG)
4200-0252												

Table 3-10 Size 5 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS
4200-0312	395 mm (15.55 in)	425 mm (16.73 in)	106 mm (4.17 in)	60 mm (2.36 in)	33 mm (1.30 in)	437 mm (17.2 in)	143 mm (5.63 in)	M6	M6	6.5 mm (0.26 in)	6.5 mm (0.26 in)	10 mm ² (8 AWG)
4200-0402												2.5 mm ² (14 AWG)
4200-0122												

Table 3-11 Size 6 external EMC filter dimensions

CT part number	A	B	C	D	E	H	W	V	X	Y	Z	CS
4200-2300	392 mm (15.43 in)	420 mm (16.54 in)	180 mm (7.09 in)	60 mm (2.36 in)	33 mm (1.30 in)	434 mm (17.09 in)	210 mm (8.27 in)	M6	M6	6.5 mm (0.26 in)	6.5 mm (0.26 in)	16 mm ² (6 AWG)
4200-4800												
4200-3690												

Figure 3-47 External EMC filter (size 7 to 8)

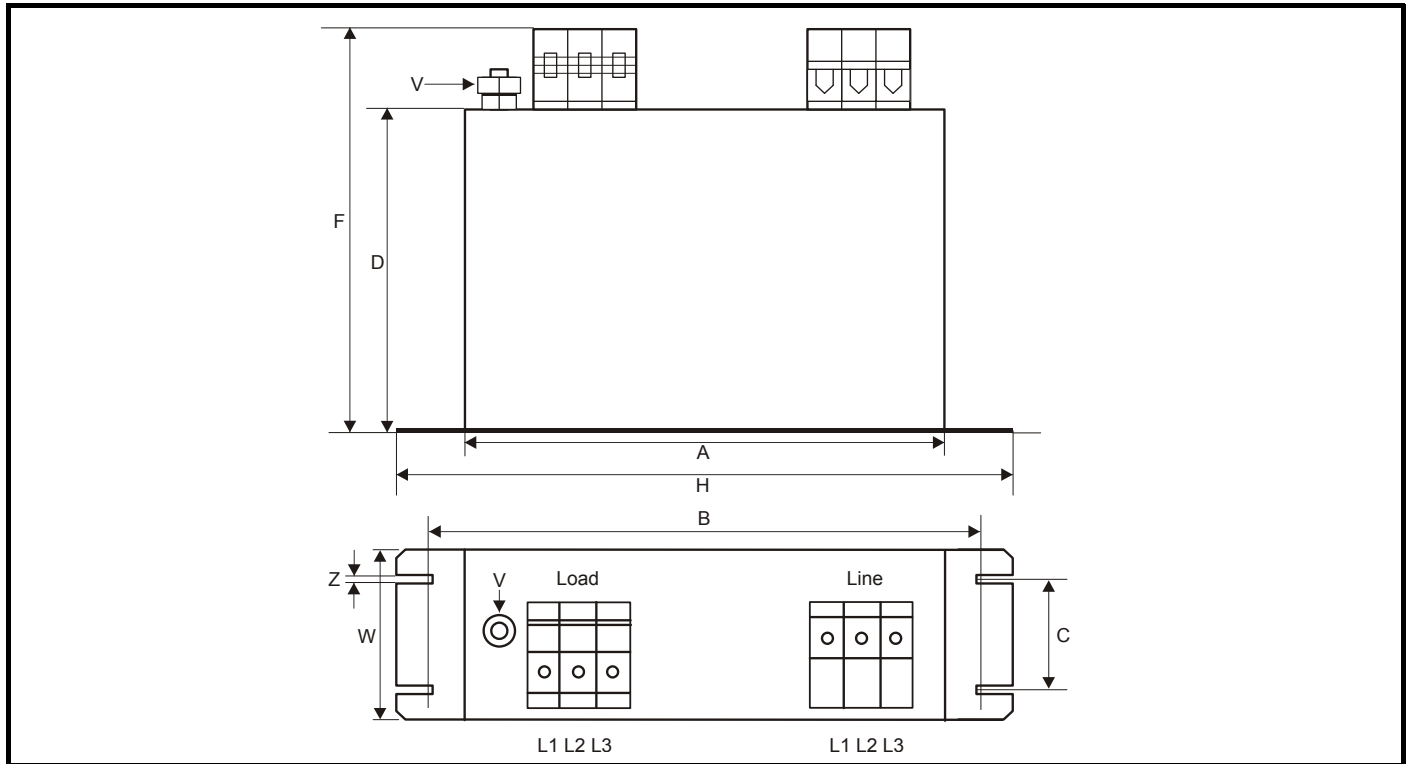


Table 3-12 Size 7 external EMC filter dimensions

CT part number	A	B	C	D	E	F	H	W	V	X	Y	Z
4200-1132	240 mm (9.45 in)	255 mm (10.04 in)	55 mm (2.17 in)	150 mm (5.90 in)		205 mm (8.07 in)	270 mm (10.63 in)	90 mm (3.54 in)	M10			6.5 mm (0.26 in)
4200-0672												

Table 3-13 Size 8 external EMC filter dimensions

CT part number	A	B	C	D	E	F	H	W	V	X	Y	Z
4200-1972	240 mm (9.45 in)	255 mm (10.04 in)	55 mm (2.17 in)	150 mm (5.90 in)		205 mm (8.07 in)	270 mm (10.63 in)	90 mm (3.54 in)	M10			6.5 mm (10.26 in)
4200-1662												

3.12 Line reactor mounting dimensions for size 9E and 10

Figure 3-48 Input line reactor (INLX0X) for size 9E and 10


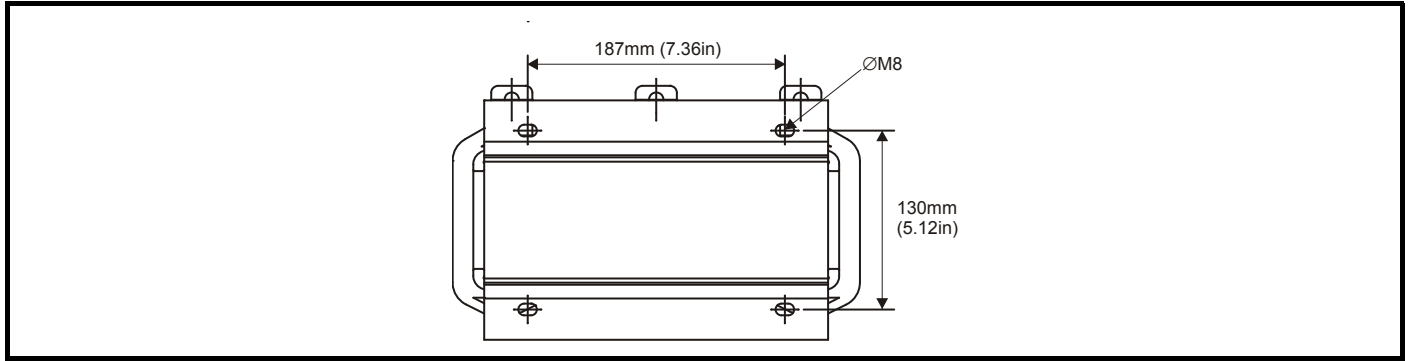


Figure 3-49 Input line reactor force cooled (INLX0XW)

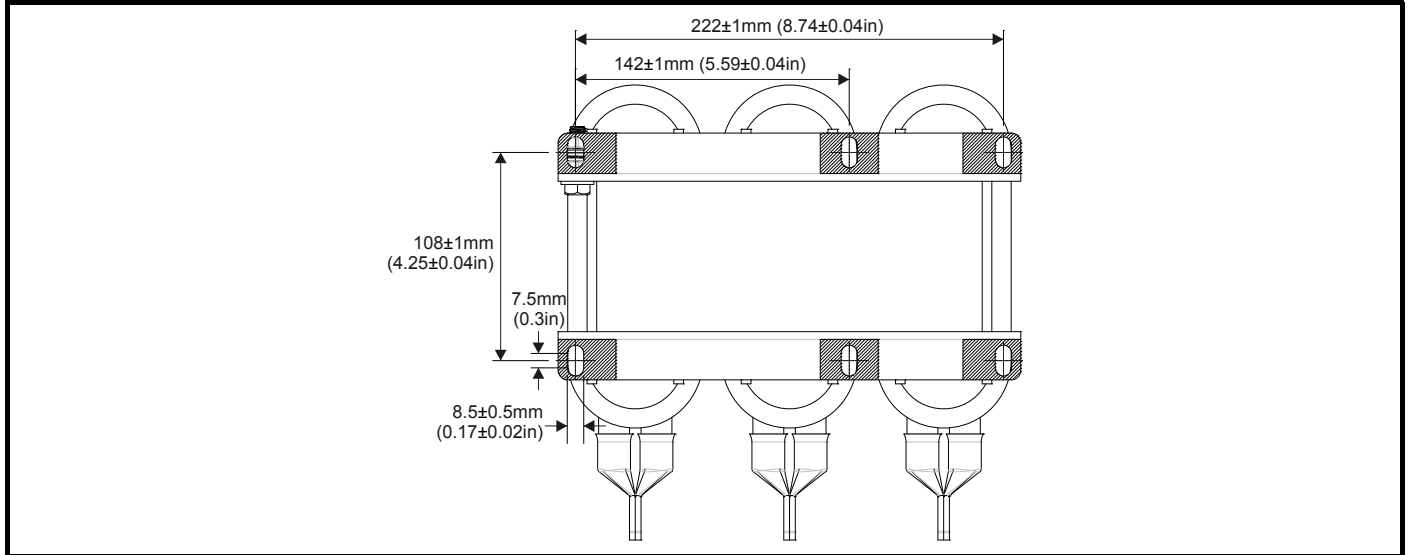


For overall dimensions and other details, refer to section 4.2.3 *Input line reactor specification for size 9E and 10* on page 65.

3.13 Electrical terminals

3.13.1 Location of the power and ground terminals


Figure 3-50 Locations of the power and ground terminals (size 3 to 8)

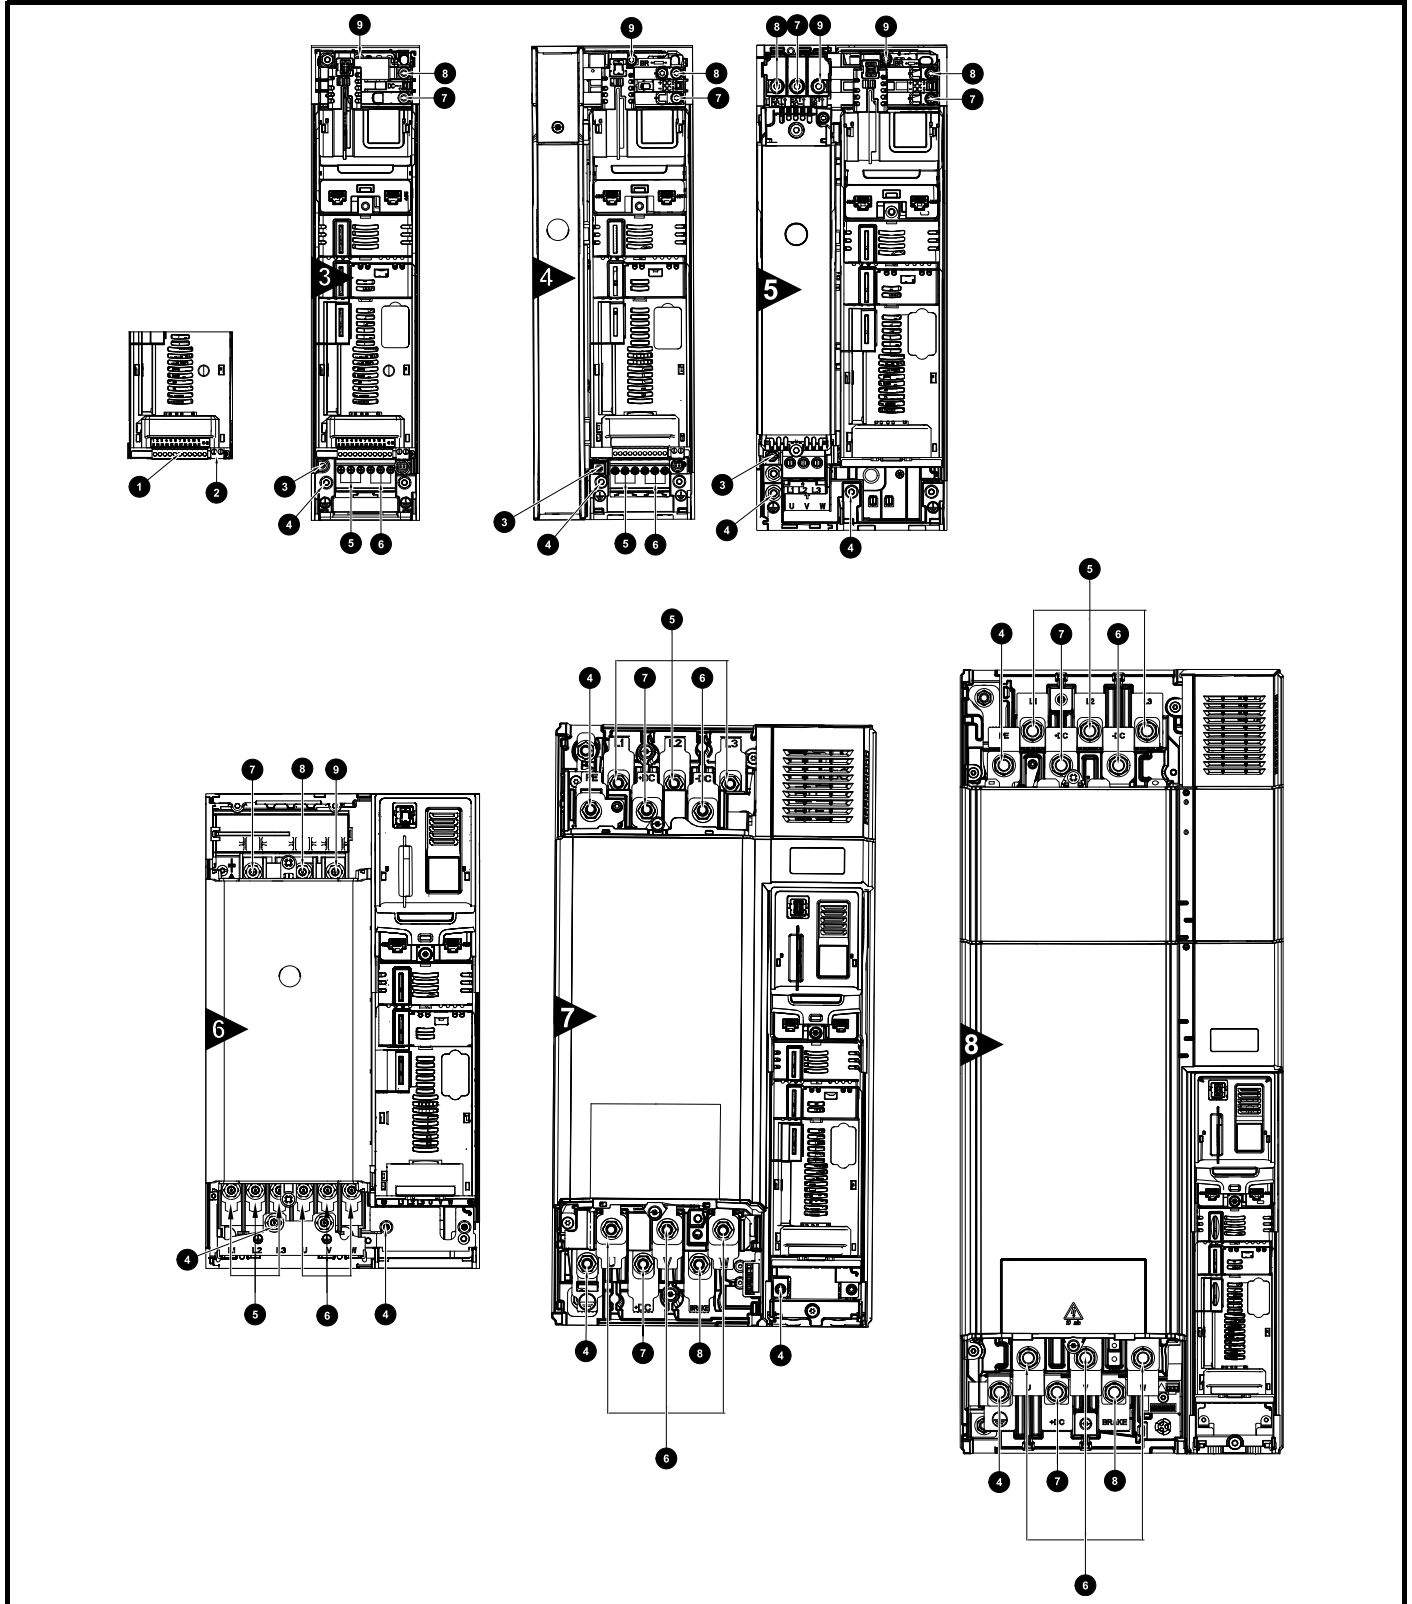

Key

- | | | |
|---------------------------------|-----------------------|-------------------|
| 1. Control terminals | 4. Ground connections | 7. DC bus - |
| 2. Relay terminals | 5. AC power terminals | 8. DC bus + |
| 3. Additional ground connection | 6. Motor terminals | 9. Brake terminal |

Figure 3-51 Location of the power and ground terminals (size 9E and 10)

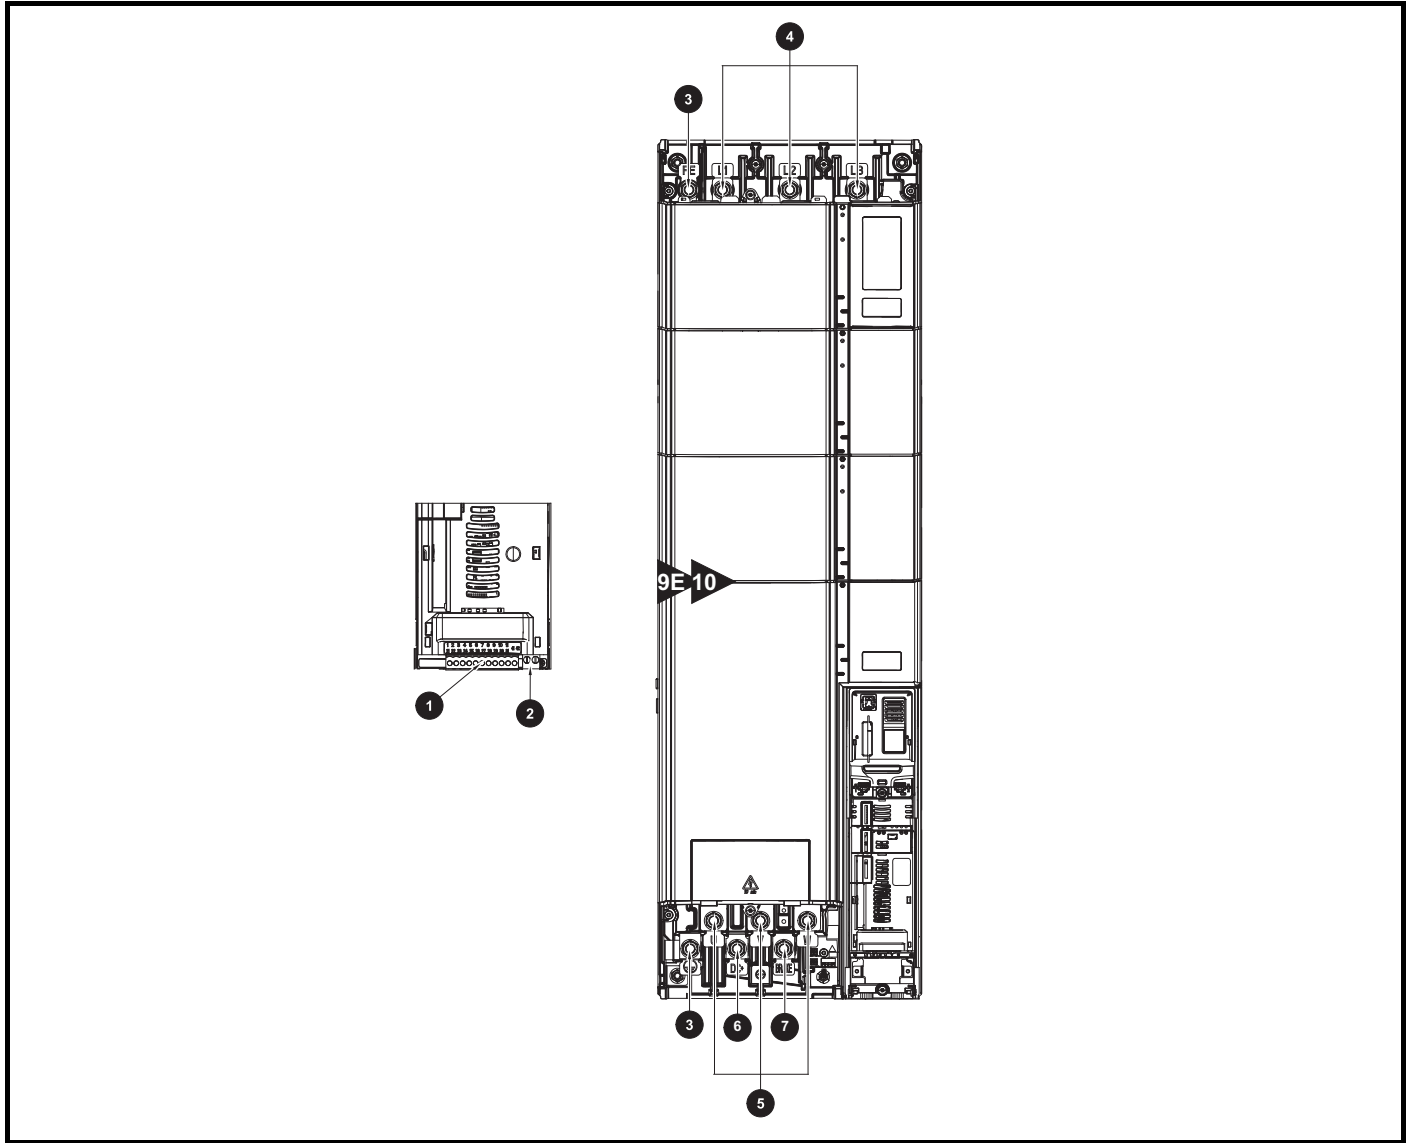

Key

- | | | |
|-----------------------|-----------------------|-------------------|
| 1. Control terminals | 4. AC power terminals | 7. Brake terminal |
| 2. Relay terminals | 5. Motor terminals | |
| 3. Ground connections | 6. DC bus + | |

3.13.2 Terminal sizes and torque settings



To avoid a fire hazard and maintain validity of the UL listing, adhere to the specified tightening torques for the power and ground terminals. Refer to the following tables.

Table 3-14 Drive power terminal data

Unidrive M frame size	AC and motor terminals		DC and braking		Ground terminal	
	Recommended	Maximum	Recommended	Maximum	Recommended	Maximum
3 and 4	Plug-in terminal block		T20 Torx (M4)		T20 Torx (M4) / M4 Nut (7 mm AF)	
	0.7 N m (0.5 lb ft)	0.8 N m (0.6 lb ft)	2.0 N m (1.4 lb ft)	2.5 N m (1.8 lb ft)	2.0 N m (1.4 lb ft)	2.5 N m (1.8 lb ft)
5	Plug-in terminal block		T20 Torx (M4) / M4 Nut (7 mm AF)		M5 Nut (8 mm AF)	
	1.5 N m (1.1 lb ft)	1.8 N m (1.3 lb ft)	1.5 N m (1.1 lb ft)	2.5 N m (1.8 lb ft)	2.0 N m (1.4 lb ft)	5.0 N m (3.7 lb ft)
6	M6 Nut (10 mm AF)		M6 Nut (10 mm AF)		M6 Nut (10 mm AF)	
	6.0 N m(4.4 lb ft)	8.0 N m(6.0 lb ft)	6.0 N m(4.4 lb ft)	8.0 N m(6.0 lb ft)	6.0 N m(4.4 lb ft)	8.0 N m(6.0 lb ft)
7	M8 Nut (13 mm AF)		M8 Nut (13 mm AF)		M8 Nut (13 mm AF)	
	12 N m (8.8 lb ft)	14 N m (10.0 lb ft)	12 N m (8.8 lb ft)	14 N m (10.0 lb ft)	12 N m (8.8 lb ft)	14 N m (10.0 lb ft)
8 to 10	M10 Nut (17 mm AF)		M10 Nut (17 mm AF)		M10 Nut (17 mm AF)	
	15 N m (11.1 lb ft)	20 N m (14.8 lb ft)	15 N m (11.1 lb ft)	20 N m (14.8 lb ft)	15 N m (11.1 lb ft)	20 N m (14.8 lb ft)

Table 3-15 Drive control and relay terminal data

Model	Connection type	Torque setting
All	Plug-in terminal block	0.5 N m (0.4 lb ft)

Table 3-17 External EMC filter terminal data

CT part number	Power connections		Ground connections				
	Max cable size	Max torque	Ground stud size	Max torque			
4200-1132	50 mm ² (1/0 AWG)	8.0 N m (6.0 lb ft)	M10	18 N m (13.3 lb ft)			
4200-0672		20 N m (14.8 lb ft)					
4200-1972		2.3 N m (1.7 lb ft)					
4200-1662	16 mm ² (6 AWG)	1.8 N m (1.4 lb ft)	M6	5.0 N m (3.7 lb ft)			
4200-0122		0.8 N m (0.59 lb ft)					
4200-0252		0.8 N m (0.59 lb ft)					
4200-0272		2.3 N m (1.70 lb ft)					
4200-0312	4 mm ² (12 AWG)	0.8 N m (0.59 lb ft)	M5	2.5 N m (1.8 lb ft)			
4200-0402					16 mm ² (6 AWG)	M6	5.0 N m (3.7 lb ft)
4200-3230							
4200-3480	4 mm ² (12 AWG)	0.8 N m (0.59 lb ft)	M5	2.5 N m (1.8 lb ft)			
4200-2300	16 mm ² (6 AWG)	2.3 N m (1.70 lb ft)	M6	5.0 N m (3.7 lb ft)			
4200-4800							
4200-3690							

Table 3-16 Plug-in terminal block maximum cable sizes

Model size	Terminal block description	Max cable size
All	11 way control connectors	1.5 mm ² (16 AWG)
	2 way relay connector	2.5 mm ² (12 AWG)
3	6 way AC power connector	6 mm ² (10 AWG)
4		
5	3 way AC power connector 3 way motor connector	8 mm ² (8 AWG)
6	2 way low voltage power 24 V supply connector	1.5 mm ² (16 AWG)
7		
8		
9E		
10		

3.14 Routine maintenance

The drive should be installed in a cool, clean, well ventilated location. Contact of moisture and dust with the drive should be prevented.

Regular checks of the following should be carried out to ensure drive / installation reliability are maximized:

Environment	
Ambient temperature	Ensure the enclosure temperature remains at or below maximum specified
Dust	Ensure the drive remains dust free – check that the heatsink and drive fan are not gathering dust. The lifetime of the fan is reduced in dusty environments.
Moisture	Ensure the drive enclosure shows no signs of condensation
Enclosure	
Enclosure door filters	Ensure filters are not blocked and that air is free to flow
Electrical	
Screw connections	Ensure all screw terminals remain tight
Crimp terminals	Ensure all crimp terminals remains tight – check for any discoloration which could indicate overheating
Cables	Check all cables for signs of damage

3.14.1 Real time clock battery replacement

Those keypads which have the real time clock feature contain a battery to ensure the clock works when the drive is powered down. The battery has a long life time but if the battery needs to be replaced or removed, follow the instructions below.


Low battery voltage is indicated by  low battery symbol on the keypad display.

Figure 3-52 KI-Keypad RTC (rear view)

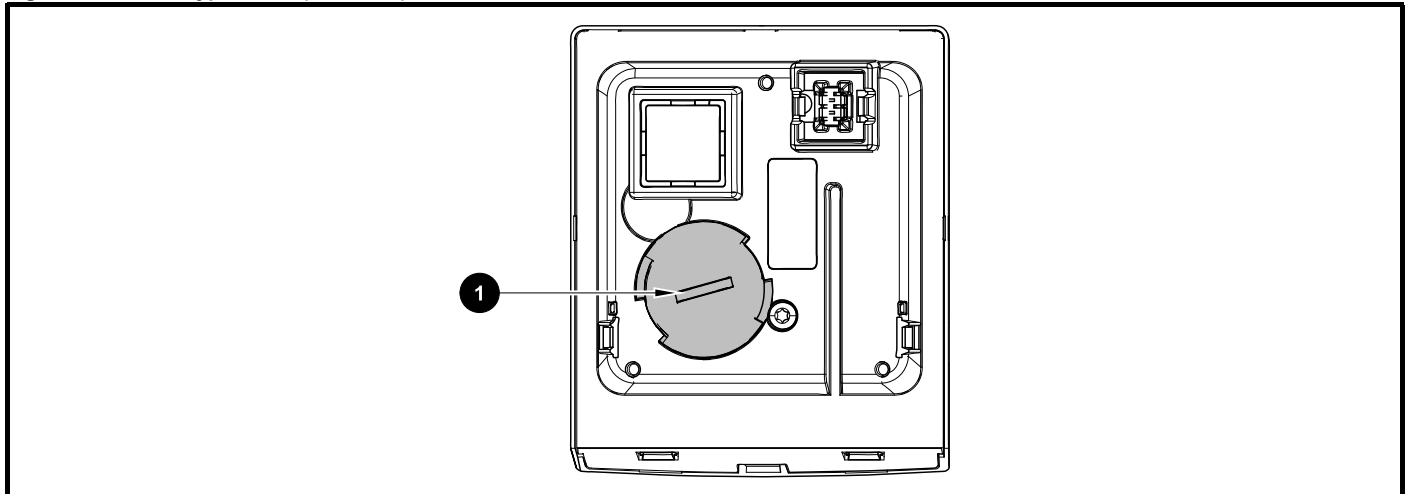


Figure 3-52 above illustrates the rear view of the KI-Keypad RTC.


1. To remove the battery cover insert a flat head screwdriver into the slot as shown (1), push and turn anti-clockwise until the battery cover is released.
2. Replace the battery (the battery type is: CR2032).
3. Reverse point 1 above to replace battery cover.

NOTE

Ensure the battery is disposed of correctly.

3.14.2 Fan removal procedure

Figure 3-53 Removal of the size 3, 4 and 5 heatsink fan (size 3 shown)

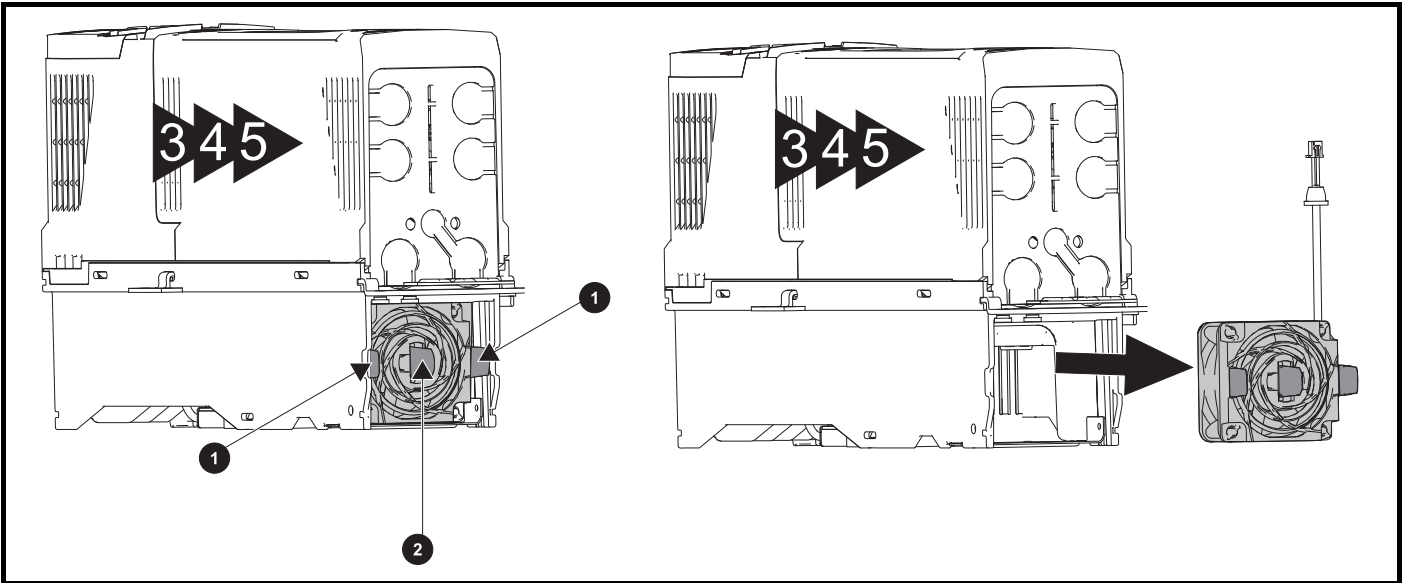


1. Ensure the fan cable is disconnected from the drive prior to attempting fan removal.
2. Press the two tabs (1) inwards to release the fan from the drive frame.
3. Using the central fan tab (2), withdraw the fan assembly from the drive housing.

Replace the fan by reversing the above instructions.

NOTE

If the drive is surface mounted using the outer holes on the mounting bracket, then the heatsink fan can be replaced without removing the drive from the backplate.

Figure 3-54 Removal of the size 6 heatsink fan

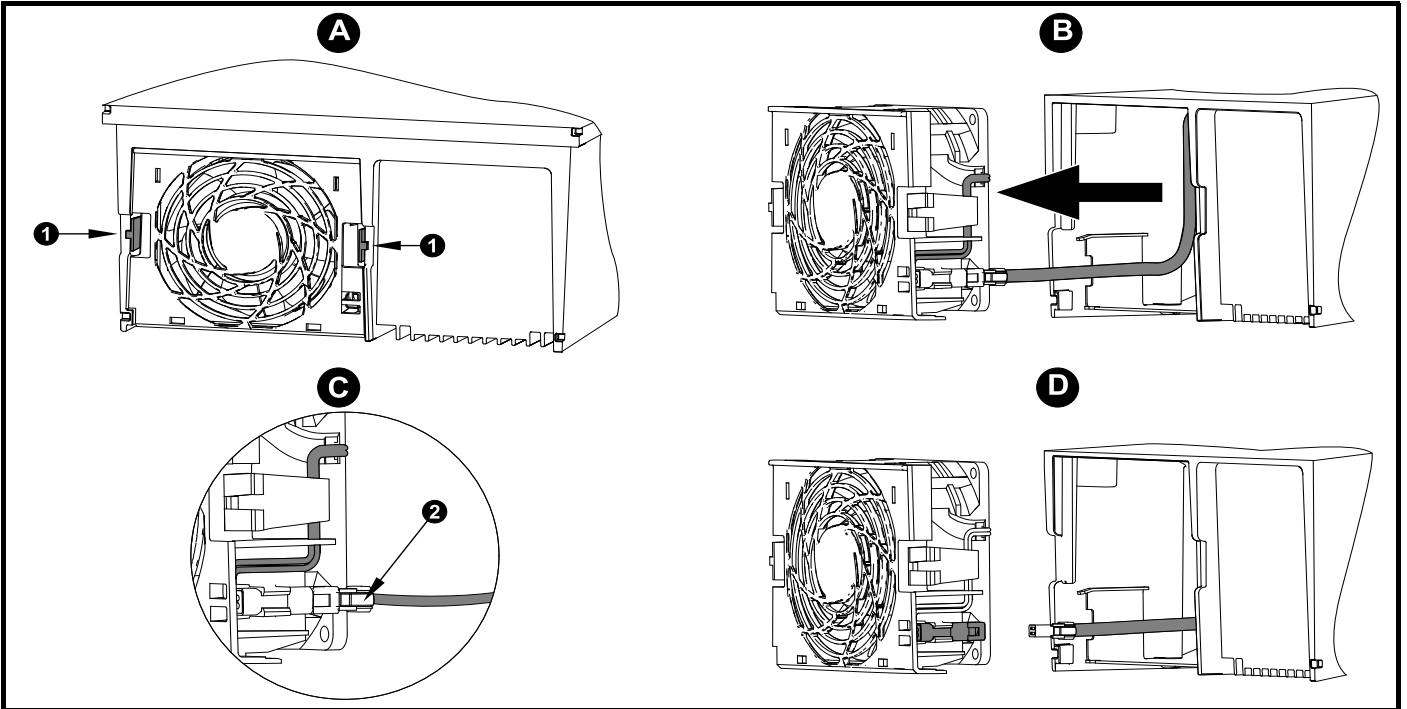

- A: Press the tabs (1) inwards to release the fan assembly from the underside of the drive.
- B: Use the tabs (1) to withdraw the fan by pulling it away from the drive.
- C: Depress and hold the locking release on the fan cable lead as shown (2).
- D: With the locking release depressed (2), take hold of the fan supply cable and carefully pull to separate the connectors.

4 Electrical installation

Many cable management features have been incorporated into the product and accessories, this chapter shows how to optimize them. Key features include:

- SAFE TORQUE OFF function
- Internal EMC filter
- EMC compliance with shielding / grounding accessories
- Product rating, fusing and cabling information
- Brake resistor details (selection / ratings)

Electric shock risk

The voltages present in the following locations can cause severe electric shock and may be lethal:

- AC supply cables and connections
- DC and brake cables, and connections
- Output cables and connections
- Many internal parts of the drive, and external option units

Unless otherwise indicated, control terminals are single insulated and must not be touched.

Isolation device

The AC and / or DC power supply must be disconnected from the drive using an approved isolation device before any cover is removed from the drive or before any servicing work is performed.

STOP function

The STOP function does not remove dangerous voltages from the drive, the motor or any external option units.

SAFE TORQUE OFF function

The SAFE TORQUE OFF function does not remove dangerous voltages from the drive, the motor or any external option units.

Stored charge

The drive contains capacitors that remain charged to a potentially lethal voltage after the AC and / or DC power supply has been disconnected. If the drive has been energized, the AC and / or DC power supply must be isolated at least ten minutes before work may continue. Normally, the capacitors are discharged by an internal resistor. Under certain, unusual fault conditions, it is possible that the capacitors may fail to discharge, or be prevented from being discharged by a voltage applied to the output terminals. If the drive has failed in a manner that causes the display to go blank immediately, it is possible the capacitors will not be discharged. In this case, consult Control Techniques or their authorized distributor.

Equipment supplied by plug and socket

Special attention must be given if the drive is installed in equipment which is connected to the AC supply by a plug and socket. The AC supply terminals of the drive are connected to the internal capacitors through rectifier diodes which are not intended to give safety isolation. If the plug terminals can be touched when the plug is disconnected from the socket, a means of automatically isolating the plug from the drive must be used (e.g. a latching relay).


Permanent magnet motors

Permanent magnet motors generate electrical power if they are rotated, even when the supply to the drive is disconnected. If that happens then the drive will become energized through its motor terminals. If the motor load is capable of rotating the motor when the supply is disconnected, then the motor must be isolated from the drive before gaining access to any live parts.

4.1 Power connections

4.1.1 AC and DC connections


Figure 4-1 Size 3 power connections

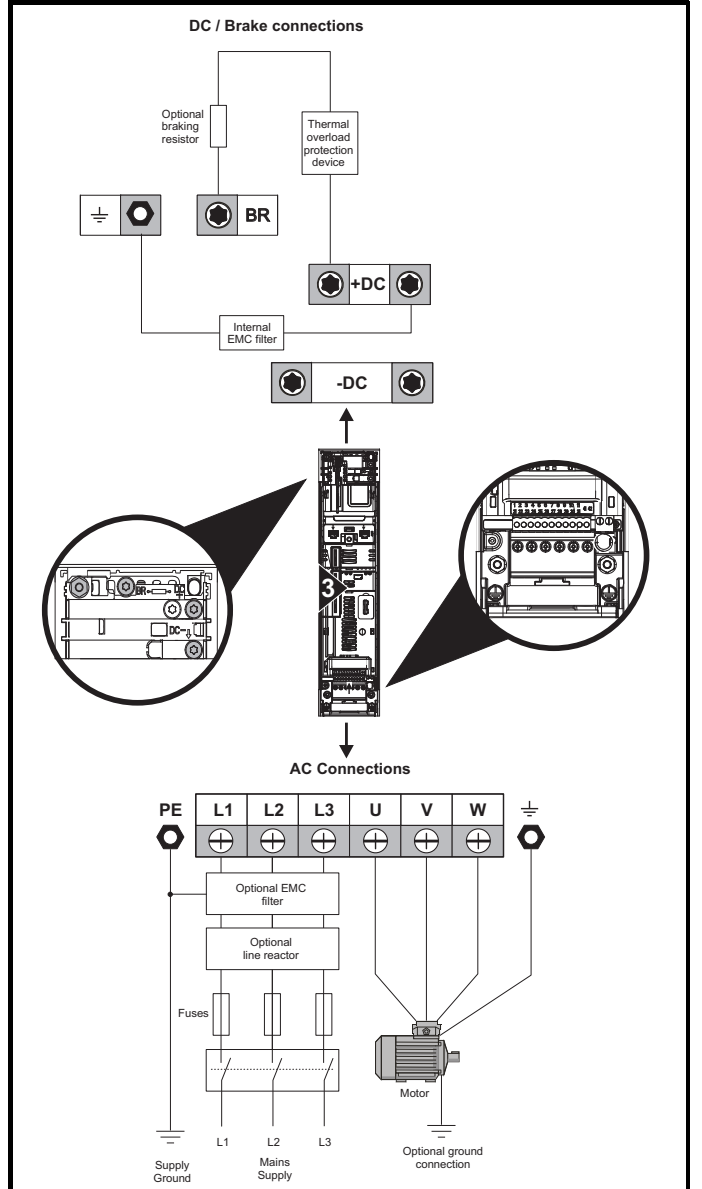

If the heatsink mounted resistor is used, an overload protection device is not required. The resistor is designed to fail safely under fault conditions.


See Figure 4-7 for further information on ground connections.

Figure 4-2 Size 4 power connections

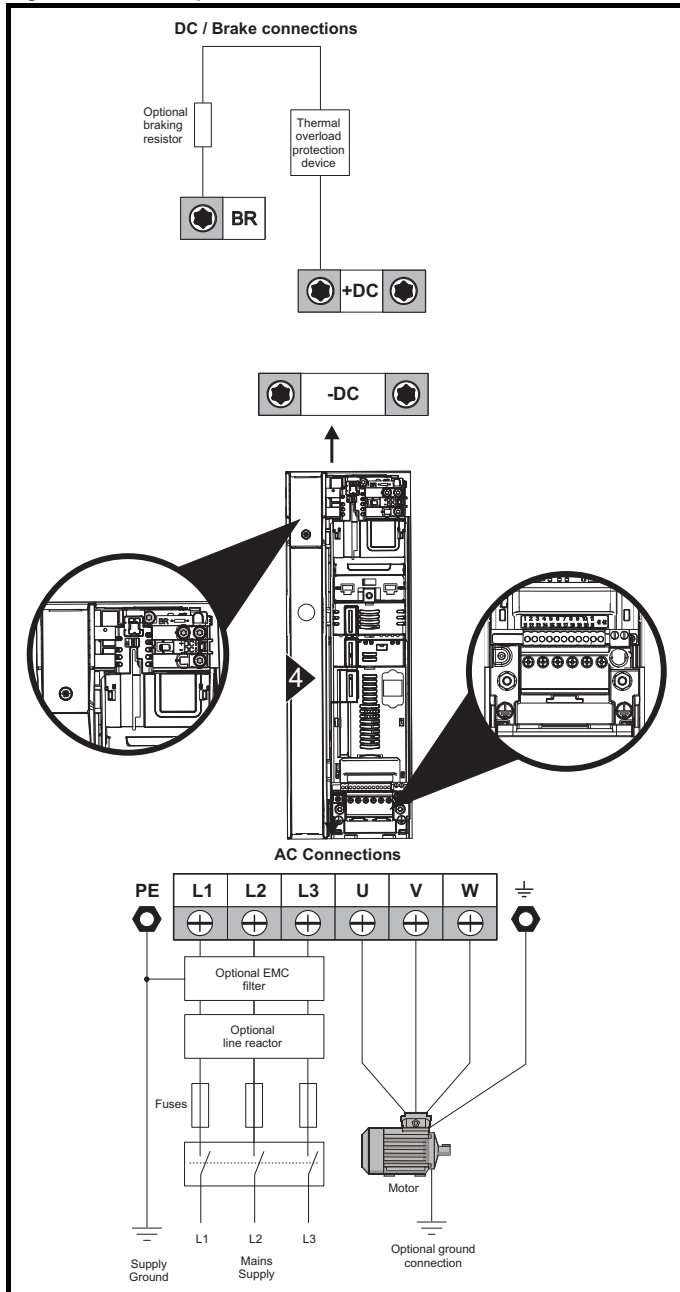

If the heatsink mounted resistor is used, an overload protection device is not required. The resistor is designed to fail safely under fault conditions. See Figure 4-7 for further information on ground connections.

Figure 4-3 Size 5 power connections

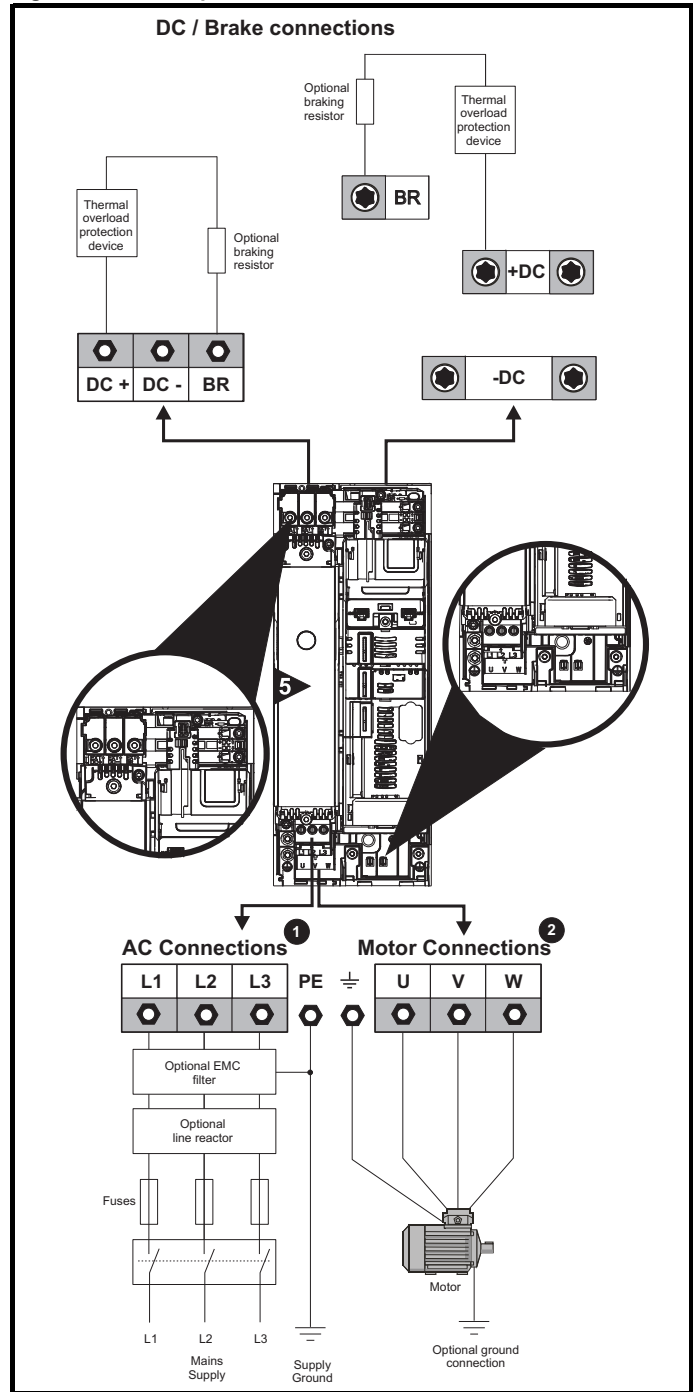

The upper terminal block (1) is used for AC supply connection.

The lower terminal block (2) is used for Motor connection.

If the heatsink mounted resistor is used, an overload protection device is not required. The resistor is designed to fail safely under fault conditions.

See Figure 4-8 for further information on ground connections.

Figure 4-4 Size 6 power connections

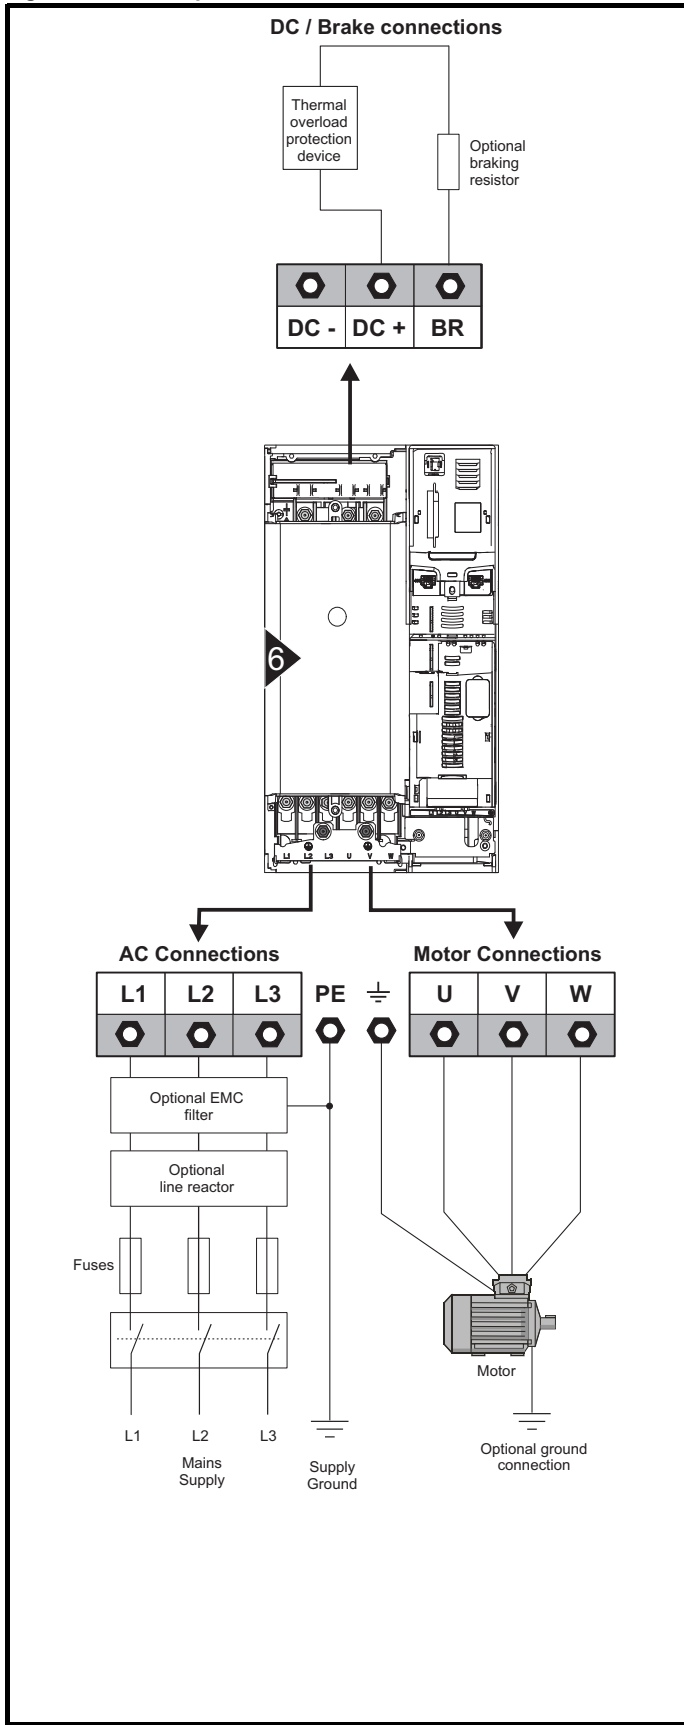


Figure 4-5 Size 7 and 8 power connections (Size 7 shown)


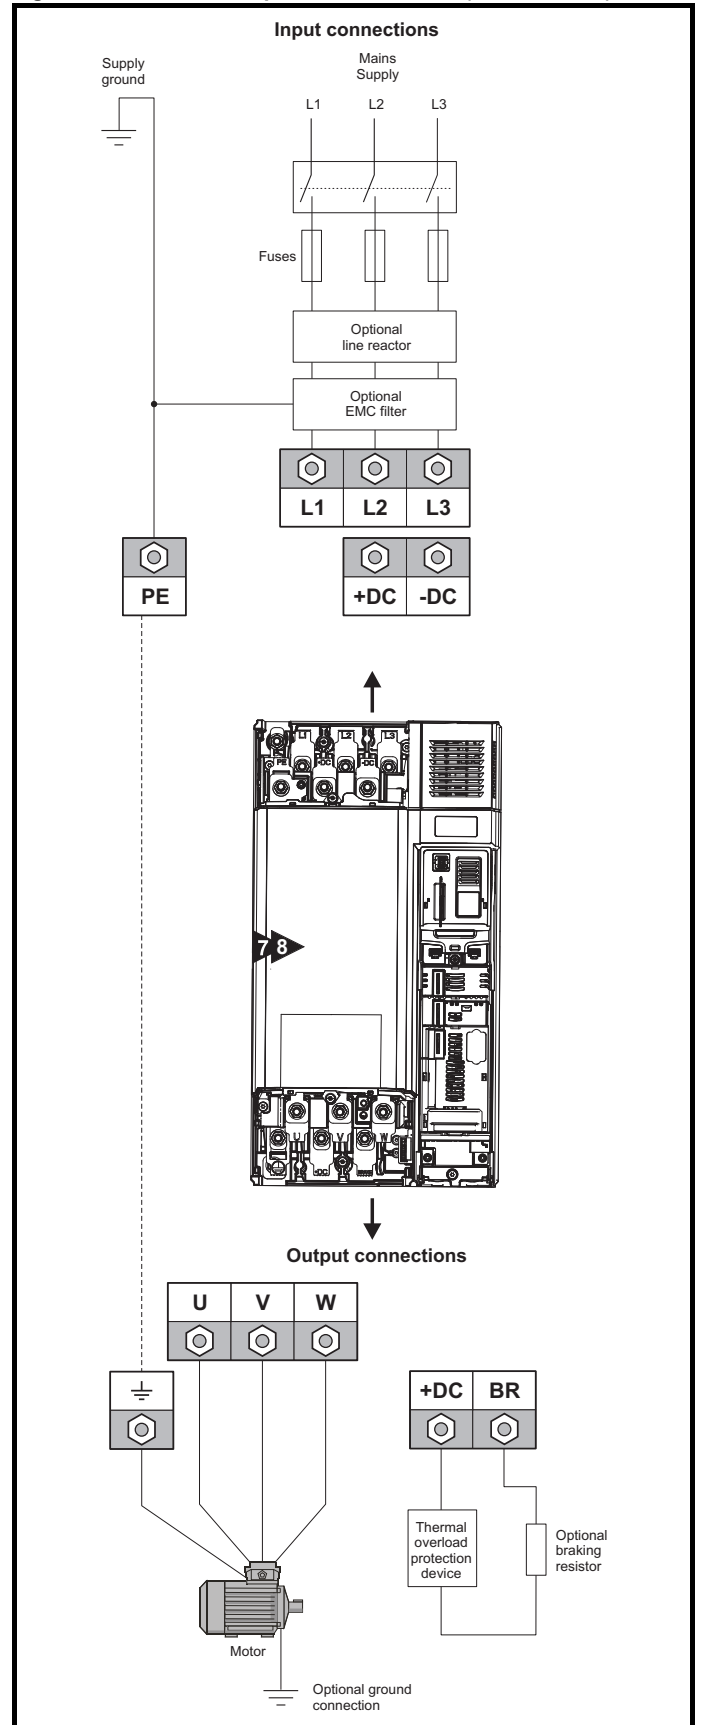


Figure 4-6 Size 9E and 10 power connections



A separate line reactor (INLXXX) of at least the value shown in Table 4-3 and Table 4-2 on page 66 must be used with size 9E and 10. Failure to provide sufficient reactance could damage or reduce the service life of the drive.

4.1.2 Ground connections

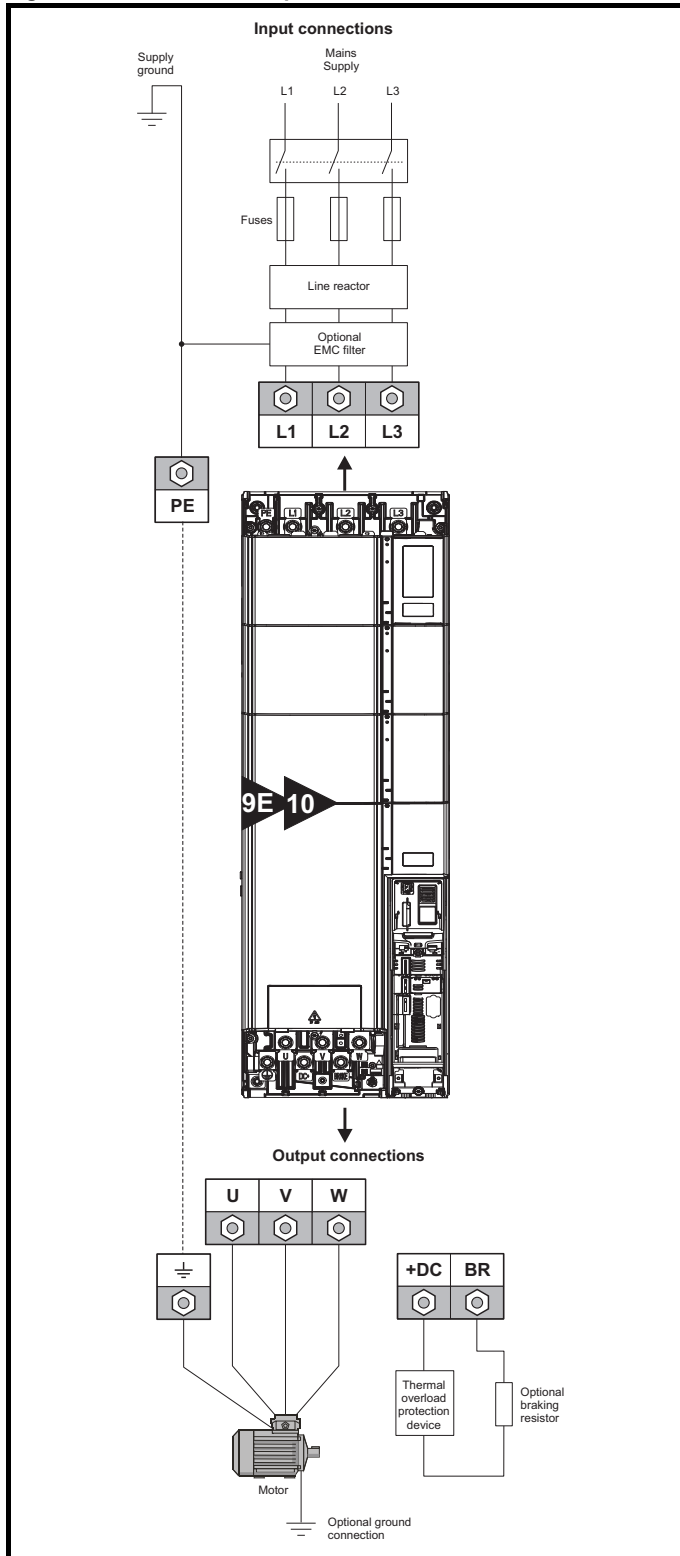


Electrochemical corrosion of grounding terminals
Ensure that grounding terminals are protected against corrosion i.e. as could be caused by condensation.

Size 3 and 4

On sizes 3 and 4, the supply and motor ground connections are made using the M4 studs located either side of the drive near the plug-in power connector. Refer to Figure 4-7 for additional ground connection.

Figure 4-7 Size 3 and 4 ground connections

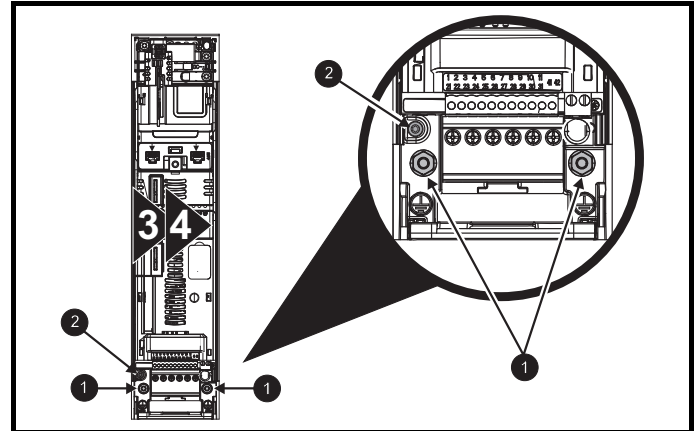


1. Ground connection studs.
2. Additional ground connection.

Size 5

On size 5, the supply and motor ground connections are made using the M5 studs located near the plug-in power connector. Refer to Figure 4-8 for additional ground connection.

Figure 4-8 Size 5 ground connections

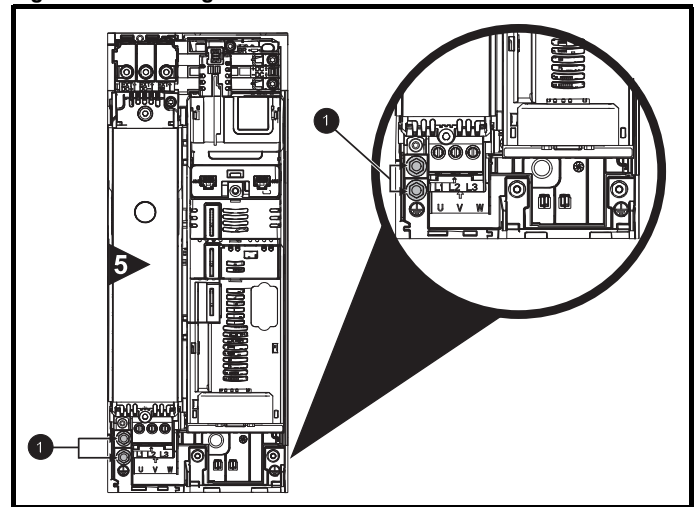


1. Ground connection studs.

Size 6

On a size 6, the supply and motor ground connections are made using the M6 studs located above the supply and motor terminals. Refer to Figure 4-9 below.

Figure 4-9 Size 6 ground connections

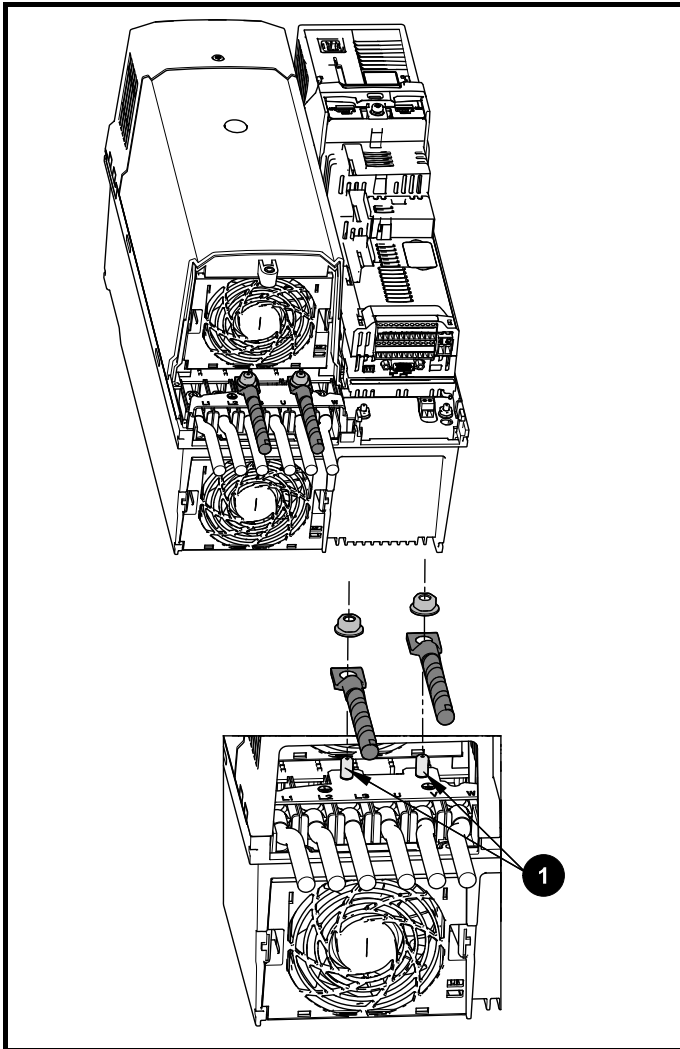

1. Ground connection studs


Size 7

On size 7, the supply and motor ground connections are made using the M8 studs located by the supply and motor connection terminals.

Size 8 to 10

On size 8 to 10, the supply and motor ground connections are made using the M10 studs located by the supply and motor connection terminals.

Figure 4-10 Size 7 to 10 ground connections

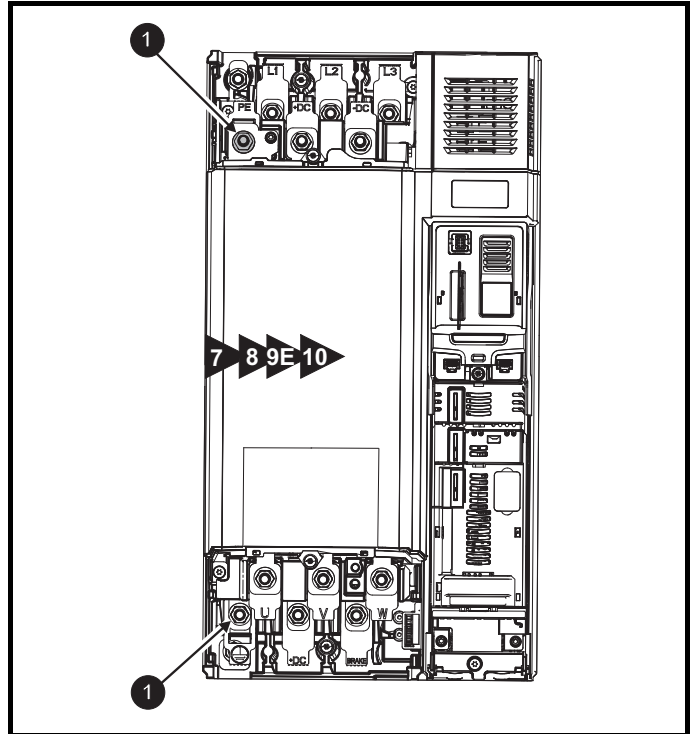

1. Ground connection studs.

The ground loop impedance must conform to the requirements of local safety regulations.

WARNING The drive must be grounded by a connection capable of carrying the prospective fault current until the protective device (fuse, etc.) disconnects the AC supply.

The ground connections must be inspected and tested at appropriate intervals.

Table 4-1 Protective ground cable ratings

Input phase conductor size	Minimum ground conductor size
$\leq 10 \text{ mm}^2$	Either 10 mm^2 or two conductors of the same cross-sectional area as the input phase conductor (an additional ground connection is provided on sizes 3, 4 and 5 for this purpose).
$> 10 \text{ mm}^2$ and $\leq 16 \text{ mm}^2$	The same cross-sectional area as the input phase conductor
$> 16 \text{ mm}^2$ and $\leq 35 \text{ mm}^2$	16 mm^2
$> 35 \text{ mm}^2$	Half of the cross-sectional area of the input phase conductor

4.2 AC supply requirements

Voltage:

- 200 V drive: 200 V to 240 V ± 10 %
- 400 V drive: 380 V to 480 V ± 10 %
- 575 V drive: 500 V to 575 V ± 10 %
- 690 V drive: 500 V to 690 V ± 10 %

Number of phases: 3

Maximum supply imbalance: 2 % negative phase sequence (equivalent to 3 % voltage imbalance between phases).

Frequency range: 45 to 66 Hz

For UL compliance only, the maximum supply symmetrical fault current must be limited to 100 kA

4.2.1 Supply types

All drives are suitable for use on any supply type i.e TN-S, TN-C-S, TT and IT.

- Supplies with voltage up to 600 V may have grounding at any potential, i.e. neutral, centre or corner ("grounded delta")
- Supplies with voltage above 600 V may not have corner grounding

Drives are suitable for use on supplies of installation category III and lower, according to IEC60664-1. This means they may be connected permanently to the supply at its origin in a building, but for outdoor installation additional over-voltage suppression (transient voltage surge suppression) must be provided to reduce category IV to category III.



Operation with IT (ungrounded) supplies:

Special attention is required when using internal or external EMC filters with ungrounded supplies, because in the event of a ground (earth) fault in the motor circuit the drive may not trip and the filter could be over-stressed. In this case, either the filter must not be used (removed) or additional independent motor ground fault protection must be provided. For instructions on removal, refer to section 4.12.2 *Internal EMC filter* on page 84. For details of ground fault protection contact the supplier of the drive.

A ground fault in the supply has no effect in any case. If the motor must continue to run with a ground fault in its own circuit then an input isolating transformer must be provided and if an EMC filter is required it must be located in the primary circuit.

Unusual hazards can occur on ungrounded supplies with more than one source, for example on ships. Contact the supplier of the drive for more information.

4.2.2 Supplies requiring line reactors

Input line reactors reduce the risk of damage to the drive resulting from poor phase balance or severe disturbances on the supply network.

Where line reactors are to be used, reactance values of approximately 2 % are recommended. Higher values may be used if necessary, but may result in a loss of drive output (reduced torque at high speed) because of the voltage drop.

For all drive ratings, 2 % line reactors permit drives to be used with a supply unbalance of up to 3.5 % negative phase sequence (equivalent to 5% voltage imbalance between phases).

Severe disturbances may be caused by the following factors, for example:

- Power factor correction equipment connected close to the drive.
- Large DC drives having no or inadequate line reactors connected to the supply.
- Across the line (DOL) started motor(s) connected to the supply such that when any of these motors are started, the voltage dip exceeds 20 %.

Such disturbances may cause excessive peak currents to flow in the input power circuit of the drive. This may cause nuisance tripping, or in extreme cases, failure of the drive.

Drives of low power rating may also be susceptible to disturbance when connected to supplies with a high rated capacity.

Line reactors are particularly recommended for use with the following drive models when one of the above factors exists, or when the supply capacity exceeds 175 kVA:

- 03200050, 03200066, 03200080, 03200106,
- 03400025, 03400031, 03400045, 03400062

Model sizes 03400078 to 07600540 have an internal DC choke and model sizes 08201160 to 08600860 have internal AC line chokes so they do not require AC line reactors except for cases of excessive phase unbalance or extreme supply conditions. Drive sizes 9E and 10 do not have internal input line reactors hence an external input line reactor must be used. For more information refer to Section *If symmetrical fault current exceeds 38 kA then a line reactor with a higher inductance must be used, consult the supplier of the drive.*

When required, each drive must have its own reactor(s). Three individual reactors or a single three-phase reactor should be used.

Reactor current ratings

The current rating of the line reactors should be as follows:

Continuous current rating:

- Not less than the continuous input current rating of the drive

Repetitive peak current rating:

- Not less than twice the continuous input current rating of the drive

4.2.3 Input line reactor specification for size 9E and 10



A separate line reactor (INLXXX) of at least the value shown in Table 4-3 and Table 4-2 must be used with size 9E and 10. Failure to provide sufficient reactance could damage or reduce the service life of the drive.

Table 4-2 Size 9E and 10 Model and Line reactor part number

Size	Drive model	Inductor model	Line reactor part number
9	09201760, 09202190, 09402000, 09402240	INL 401	4401-0181
		INL 401W*	4401-0208
10	09501040, 09501310, 09601040, 09601310	INL 601	4401-0183
		INL 402	4401-0182
	10202830, 10203000, 10402700, 10403200	INL 402W*	4401-0209
		10501520, 10501900, 10601500, 10601780	INL 602

*May represent a more economic solution where operating temperature and cooling requirements are observed.

Figure 4-11 Input line reactor dimensions

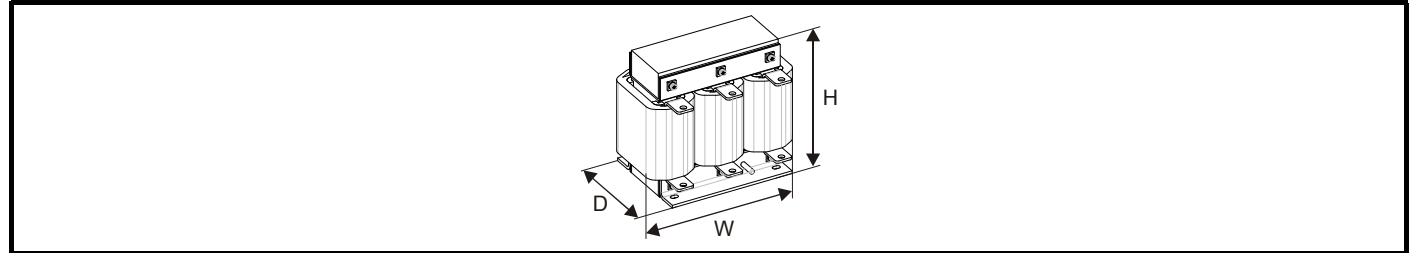


Table 4-3 Input line reactor ratings

Part number	Model	Current	Inductance	Overall width (W)	Overall depth (D)	Overall height (H)	Weight	Max ambient temp	Min airflow	Maximum losses	Quantity required
		A	μH	mm	mm	mm		°C	m/s	W	
4401-0181	INL 401	245	63	240	190	225	32	50	1	148	1
4401-0182	INL 402	339	44	276	200	225	36	50	1	205	1
4401-0208	INL 401W*	245	63	255	235	200	27	40	3		1
4401-0209	INL 402W*	339	44	255	235	200	27	40	3		1
4401-0183	INL 601	145	178	240	190	225	33	50	1	88	1
4401-0184	INL 602	192	133	276	200	225	36	50	1	116	1

*May represent a more economic solution where operating temperature and cooling requirements are observed.

NOTE

If symmetrical fault current exceeds 38 kA then a line reactor with a higher inductance must be used, consult the supplier of the drive.

4.2.4 Input inductor calculation

To calculate the inductance required (at Y%), use the following equation:

$$L = \frac{Y}{100} \times \frac{V}{\sqrt{3}} \times \frac{1}{2\pi f I}$$

Where:


- I = drive rated input current (A)
- L = inductance (H)
- f = supply frequency (Hz)
- V = voltage between lines

4.3 Supplying the drive with DC

All drive sizes have the option to be powered from an external DC power supply. Refer to section 3.13 *Electrical terminals* on page 55 to identify the location of DC supply connections.

The DC supply connections for size 3 and 4 are located under the DC / Braking terminal cover. Figure 4-12 below shows DC supply connections and cable routing.

Figure 4-12 DC supply connections (size 3 shown)

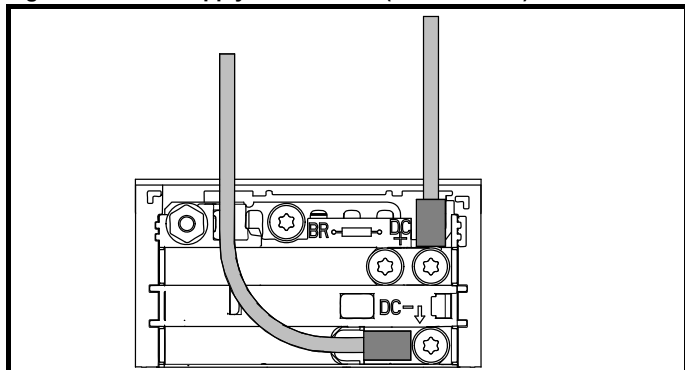

NOTE

The Internal EMC filter and plastics have been removed from the above Figure 4-12 to demonstrate the routing of the DC cables.

4.4 DC bus paralleling


DC bus paralleling using standard cable / busbars is supported by all frame sizes.

On frame sizes 3, 4, 5 and 6, terminal and enclosure design enables the DC bus of a number of drives to be connected together using pre-made busbars. The diagram below shows how the busbar links connect the DC bus of several drives together.

The connecting of the DC bus between several drives is typically used to:

1. Return energy from a drive which is being overhauled by the load to a second motoring drive.
2. Allow the use of one braking resistor to dissipate regenerative energy from several drives.

Figure 4-13 DC bus paralleling (size 3 shown)

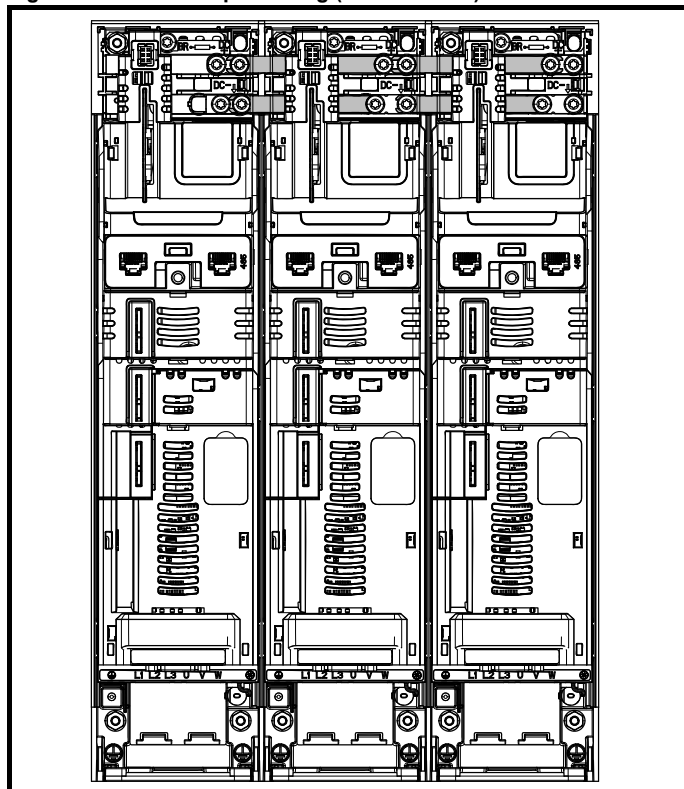

There are limitations to the combinations of drives which can be used in this configuration.

For application data, contact the supplier of the drive.

NOTE

The DC bus paralleling kit is not supplied with the drive but available to order from Control Techniques.

Table 4-4 DC bus paralleling kit part numbers

Size	CT part number
3	3470-0048-00
4	3470-0061-00
5	3470-0068-00
6	3470-0063-00

4.5 24 Vdc supply

The 24 Vdc supply connected to control terminals 1 & 2 provides the following functions:

- It can be used to supplement the drive's own internal 24 V supply when multiple option modules are being used and the current drawn by these modules is greater than the drive can supply.
- It can be used as a back-up power supply to keep the control circuits of the drive powered up when the line power supply is removed. This allows any fieldbus modules, application modules, encoders or serial communications to continue to operate.
- It can be used to commission the drive when the line power supply is not available, as the display operates correctly. However, the drive will be in the Under voltage trip state unless either line power supply or low voltage DC operation is enabled, therefore diagnostics may not be possible. (Power down save parameters are not saved when using the 24 V back-up power supply input).
- If the DC bus voltage is too low to run the main SMPS in the drive, then the 24 V supply can be used to supply all the low voltage power requirements of the drive. *Low Under Voltage Threshold Select* (06.067) must also be enabled for this to happen.

NOTE

On size 6 and larger, the power 24 Vdc supply (terminals 51, 52) must be connected to enable the 24 V dc supply to be used as a backup supply, when the line power supply is removed. If the power 24 Vdc supply is not connected none of the above mentioned functions can be used, "Waiting For Power Systems" will be displayed on the keypad and no drive operations are possible. The location of the power 24 Vdc can be identified from Figure 4-14 *Location of the 24 Vdc power supply connection on size 6* on page 68.

Table 4-5 24 Vdc Supply connections

Function	Sizes 3-5	Sizes 6-7
Supplement the drive's internal supply	Terminal 1, 2	Terminal 1, 2
Back-up supply for the control circuit	Terminal 1, 2	Terminal 51, 52

The working voltage range of the control 24 V power supply is as follows:


1	0 V
2	+24 Vdc
Nominal operating voltage	24.0 Vdc
Minimum continuous operating voltage	19.2 V
Maximum continuous operating voltage	28.0 V
Minimum start up voltage	21.6 V
Maximum power supply requirement at 24 V	40 W
Recommended fuse	3 A, 50 Vdc

Minimum and maximum voltage values include ripple and noise. Ripple and noise values must not exceed 5 %.

The working range of the 24 V power supply is as follows:

51	0 V
52	+24 Vdc
Size 6	
Nominal operating voltage	24.0 Vdc
Minimum continuous operating voltage	18.6 Vdc
Maximum continuous operating voltage	28.0 Vdc
Minimum startup voltage	18.4 Vdc
Maximum power supply requirement	40 W
Recommended fuse	4 A @ 50 Vdc
Size 7 to 10	
Nominal operating voltage	24.0 Vdc
Minimum continuous operating voltage	19.2 Vdc
Maximum continuous operating voltage	30 Vdc (IEC), 26 Vdc (UL)
Minimum startup voltage	21.6 Vdc
Maximum power supply requirement	60 W
Recommended fuse	4 A @ 50 Vdc

Figure 4-14 Location of the 24 Vdc power supply connection on size 6

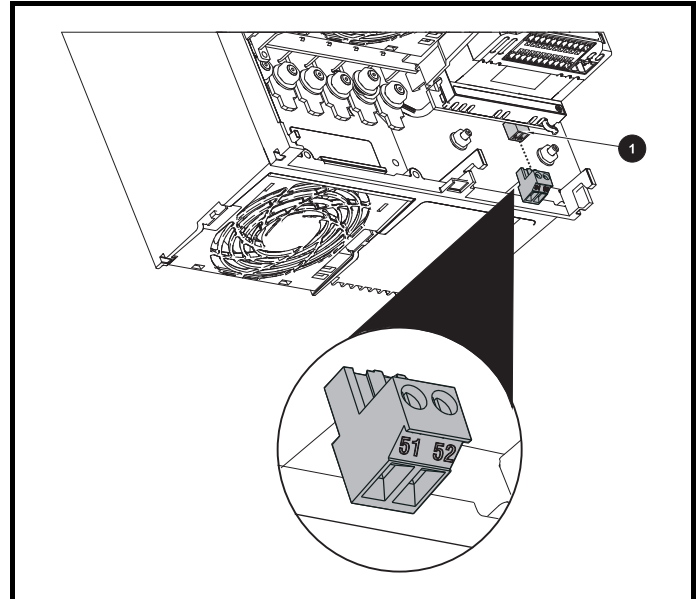

1. 24 Vdc power supply connection

Figure 4-15 Location of the 24 Vdc power supply connection on size 7


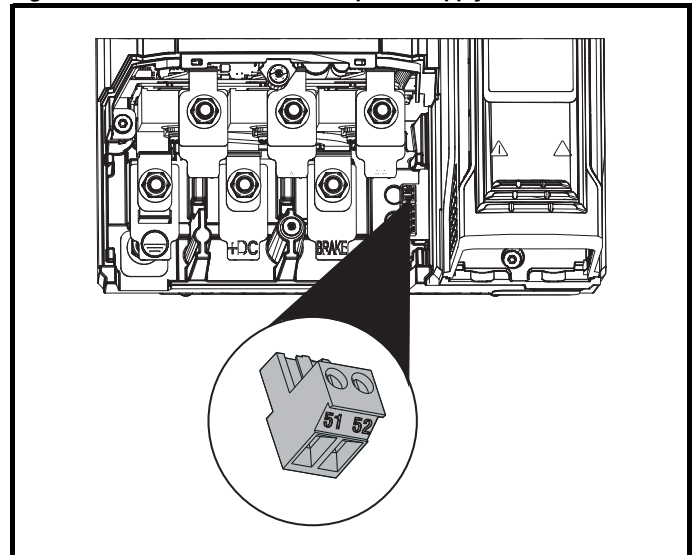


Figure 4-16 Location of the 24 Vdc power supply connection on size 8 to 10

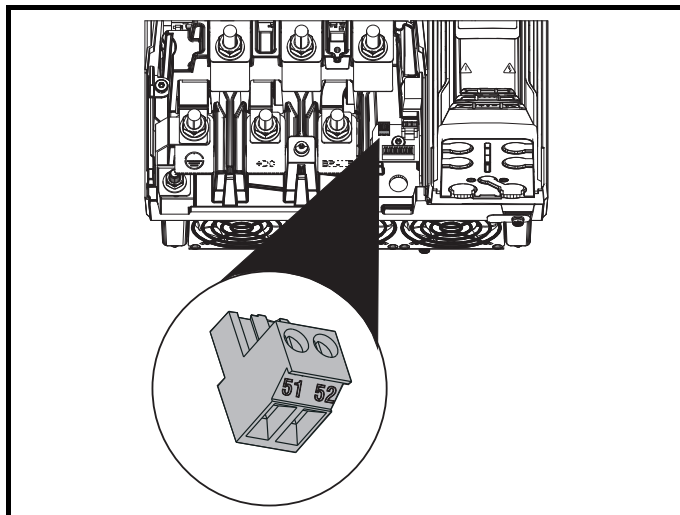

4.6 Low voltage operation

With the addition of a 24 Vdc power supply to supply the control circuits, the drive is able to operate from a low voltage DC supply with a range from 24 Vdc to the maximum DC volts. It is possible for the drive to go from operating on a normal line power supply voltage to operating on a much lower supply voltage without interruption.

Going from low voltage operation to normal mains operation requires the inrush current to be controlled. This may be provided externally. If not, the drive supply can be interrupted to utilise the normal soft starting method in the drive.

To fully exploit the new low voltage mode of operation, the under voltage trip level is now user programmable. For application data, contact the supplier of the drive.

The working voltage range of the low voltage DC power supply is as follows:

Size 3 to 10

Minimum continuous operating voltage:	26 V
Minimum start up voltage:	32 V
Maximum over voltage trip threshold:	230 V drives: 415 V
	400 V drives: 830 V
	575 V drives: 990 V
	690 V drives: 1190 V

4.7 Heatsink fan supply

The heatsink fan on all drive sizes is supplied internally by the drive.

4.8 Ratings

The input current is affected by the supply voltage and impedance.

Typical input current

The values of typical input current are given to aid calculations for power flow and power loss.

The values of typical input current are stated for a balanced supply.


Maximum continuous input current

The values of maximum continuous input current are given to aid the selection of cables and fuses. These values are stated for the worst case condition with the unusual combination of stiff supply with bad balance. The value stated for the maximum continuous input current would only be seen in one of the input phases. The current in the other two phases would be significantly lower.

The values of maximum input current are stated for a supply with a 2 % negative phase-sequence imbalance and rated at the supply fault current given in Table 4-6.

Table 4-6 Supply fault current used to calculate maximum input currents

Model	Symmetrical fault level (kA)
All	100



Fuses

The AC supply to the drive must be installed with suitable protection against overload and short-circuits. Table 4-7 shows recommended fuse ratings. Failure to observe this requirement will cause risk of fire.

WARNING

Table 4-7 AC Input current and fuse ratings (200 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
03200050	8.2	10.4	15.8	16	25	gG	20	25	CC or J
03200066	9.9	12.6	20.9	20			25		
03200080	14	17	25	25			25		
03200106	16	20	34	25			25		
04200137	17	20	30	25	25	gG	25	25	CC or J
04200185	23	28	41	32	32		30	30	
05200250	24	31	52	40	40	gG	40	40	CC or J
06200330	42	48	64	63	63	gG	60	60	CC or J
06200440	49	56	85				60		
07200610	58	67	109	80	80	gG	80	80	CC or J
07200750	73	84	135	100	100		100	100	
07200830	91	105	149	125	125		125	125	
08201160	123	137	213	200	200	gR	200	200	HSJ
08201320	149	166	243				225	225	
09201760	172	205	270	250	250	gR	250	250	HSJ
09202190	228	260	319				315	315	
10202830	277	305	421	400	400	gR	400	400	HSJ
10203000	333	361	494				450	450	

Table 4-8 AC Input current and fuse ratings (400 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
03400025	5	5	7	10	10	gG	10	10	CC or J
03400031	6	7	9						
03400045	8	9	13						
03400062	11	13	21						
03400078	12		20						
03400100	14		25						
04400150	17	19	30	25	25	gG	25	25	CC or J
04400172	22	24	35	32	32		30	30	
05400270	26	29	52	40	40	gG	35	35	CC or J
05400300	27	30	58						
06400350	32	36	67	63	63	gR	40	60	HSJ or DFJ
06400420	41	46	80				50		
06400470	54	60	90				60		
07400660	67	74	124	100	100	gG	80	80	CC or J
07400770	80	88	145				100	100	
07401000	96	105	188				125	125	
08401340	137	155	267	250	250	gR	225	225	HSJ
08401570	164	177	303						
09402000	211	232	306	315	315	gR	300	300	HSJ
09402240	245	267	359				350	350	
10402700	306	332	445	400	400	gR	400	400	HSJ
10403200	370	397	523				450	450	

Table 4-9 AC Input current and fuse ratings (575 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
05500030	4	4	7	10	20	gG	10	10	CC or J
05500040	6	7	9						
05500069	9	11	15						
06500100	12	13	22	20	40	gG	20	30	CC or J
06500150	17	19	33	32			25		
06500190	22	24	41	40			30		
06500230	26	29	50	50			63		
06500290	33	37	63		40				
06500350	41	47	76		63	50			
07500440	41	45	75	50	50	gG	50	50	CC or J
07500550	57	62	94	80	80		80	80	
08500630	74	83	121	125	125	gR	100	100	HSJ
08500860	92	104	165	160	160		150	150	
09501040	145	166	190	150	150	gR	150	150	HSJ
09501310	145	166	221	200	200		175	175	
10501520	177	197	266	250	250	gR	250	250	HSJ
10501900	199	218	310						


Table 4-10 AC Input current and fuse ratings (690 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
07600190	18	20	32	25	50	gG	25	50	CC or J
07600240	23	26	41	32			30		
07600290	28	31	49	40			35		
07600380	36	39	65	50			50		
07600440	40	44	75				80		
07600540	57	62	92	80	80	80	80	80	80
08600630	74	83	121	125	125	gR	100	100	HSJ
08600860	92	104	165	160	160		150	150	
09601040	124	149	194	150	150	gR	150	150	HSJ
09601310	145	171	226	200	200		200	200	
10601500	180	202	268	225	225	gR	250	250	HSJ
10601780	202	225	313	250	250	aR*	250	250	

* Class aR fuses do not provide branch circuit protection. Ensure that the input cables are suitably protected using HRC fuses or breaker.

NOTE

Ensure cables used suit local wiring regulations.



The nominal cable sizes below are only a guide. The mounting and grouping of cables affects their current-carrying capacity, in some cases smaller cables may be acceptable but in other cases a larger cable is required to avoid excessive temperature or voltage drop. Refer to local wiring regulations for the correct size of cables.

CAUTION

Table 4-11 Cable ratings (200 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
03200050	1.5	4	B2	1.5	4	B2	14	10	14	10
03200066				4			4			
03200080				4			4		12	
03200106	4	4	4	4	4	4	12	12	12	12
04200137	6	8	B2	6	8	B2	10	8	10	8
04200185	8			8			8		8	
05200250	10	10	B2	10	10	B2	8	8	8	8
06200330	16	25	B2	16	25	B2	4	3	4	3
06200440	25			25			3		3	
07200610	35	70	B2	35	70	B2	2	1/0	2	1/0
07200750				1			1			
07200830				70			1/0		1/0	
08201160	95	2 x 70	B2	95	2 x 70	B2	3/0	2 x 1	3/0	2 x 1
08201320	2 x 70			2 x 1			2 x 1			
09201760	2 x 70		B1	2 x 95		B2	2 x 2/0		2 x 2/0	
09202190	2 x 95			2 x 120			2 x 4/0		2 x 4/0	
10202830	2 x 120		B1	2 x 120		C	2 x 250		2 x 250	
10203000	2 x 150		C	2 x 120			2 x 300		2 x 250	

Table 4-12 Cable ratings (400 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG					
	Input			Output			Input		Output			
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum		
03400025	1.5	4	B2	1.5	4	B2	18	10	18	10		
03400031							16		16			
03400045							14		14			
03400062											2.5	2.5
03400078												
03400100	12	12										
04400150	4	6	B2	4	6	B2	10	8	10	8		
04400172	6			6			8		8			
05400270	6	6	B2	6	6	B2	8	8	8	8		
05400300							8		8			
06400350	10	25	B2	10	25	B2	6	3	6	3		
06400420	16			4			4					
06400470	25			3			3					
07400660	35	70	B2	35	70	B2	1	1/0	1	1/0		
07400770	50			2			2					
07401000	70			1/0			1/0					
	2 x 50			2 x 70			B2		2 x 50		2 x 70	B2
08401570	2 x 70	2 x 70	2 x 1/0		2 x 1/0							
09402000	2 x 70		B1	2 x 95		B2	2 x 3/0		2 x 2/0			
09402240	2 x 95			2 x 120			2 x 4/0		2 x 4/0			
10402700	2 x 120		C	2 x 120		B2	2 x 300		2 x 250			
10403200	2 x 150			2 x 150			2 x 350		2 x 300			

Table 4-13 Cable ratings (575 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
05500030	0.75	1.5	B2	0.75	1.5	B2	16	16	16	16
05500040	1			1			14		14	
05500069	1.5			1.5			14		14	
06500100	2.5	25	B2	2.5	25	B2	14	3	14	3
06500150	4			4			10		10	
06500190	6			6			10		10	
06500230	10			10			8		8	
06500350	16			6			6			
07500440	16			25			B2		16	
07500550	25	25	3		3					
08500630	35	50	B2	35	50	B2	1	1	1	1
08500860	50			50						
09501040	2 x 70		B2	2 x 35		B2	2 x 1		2 x 3	
09501310	2 x 70			2 x 50			2 x 1		2 x 1	
10501520	2 x 70		B2	2 x 70		B2	2 x 2/0		2 x 2/0	
10501900	2 x 95			2 x 95			2 x 2/0		2 x 2/0	

Table 4-14 Cable ratings (690 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
07600190	10	25	B2	10	25	B2	8	3	8	3
07600240							6		6	
07600290							6		6	
07600380							4		4	
07600440							4		4	
07600540							3		3	
08600630	50	70	B2	50	70	B2	2	1/0	2	1/0
08600860	70			70			1/0		1/0	
09601040	2 x 50		B2	2 x 35		B2	2 x 1		2 x 3	
09601310	2 x 70			2 x 50			2 x 1/0		2 x 1	
10601500	2 x 70		B2	2 x 70		B2	2 x 2/0		2 x 1/0	
10601780	2 x 95						2 x 3/0		2 x 2/0	

NOTE

PVC insulated cable should be used.

NOTE

Cable sizes are from IEC60364-5-52:2001 table A.52.C with correction factor for 40°C ambient of 0.87 (from table A52.14) for cable installation method as specified.

Installation class (ref: IEC60364-5-52:2001)

- B1 - Separate cables in conduit.
- B2 - Multicore cable in conduit.
- C - Multicore cable in free air.

Cable size may be reduced if a different installation method is used, or if the ambient temperature is lower.

NOTE

The nominal output cable sizes assume that the motor maximum current matches that of the drive. Where a motor of reduced rating is used the cable rating may be chosen to match that of the motor. To ensure that the motor and cable are protected against overload, the drive must be programmed with the correct motor rated current.

A fuse or other protection must be included in all live connections to the AC supply.

Fuse types

The fuse voltage rating must be suitable for the drive supply voltage.

Ground connections

The drive must be connected to the system ground of the AC supply. The ground wiring must conform to local regulations and codes of practice.

NOTE

For information on ground cable sizes, refer to Table 4-1 *Protective ground cable ratings* on page 64.


4.8.1 Main AC supply contactor

The recommended AC supply contactor type for size 3 and 10 is AC1.

4.9 Output circuit and motor protection

The output circuit has fast-acting electronic short-circuit protection which limits the fault current to typically no more than five times the rated output current, and interrupts the current in approximately 20 μs. No additional short-circuit protection devices are required.

The drive provides overload protection for the motor and its cable. For this to be effective, *Rated Current (00.046)* must be set to suit the motor.



Rated Current (00.046) must be set correctly to avoid a risk of fire in the event of motor overload.

WARNING

There is also provision for the use of a motor thermistor to prevent overheating of the motor, e.g. due to loss of cooling.

4.9.1 Cable types and lengths

Since capacitance in the motor cable causes loading on the output of the drive, ensure the cable length does not exceed the values given in Table 4-15 to .

Use 105 °C (221 °F) (UL 60/75 °C temp rise) PVC-insulated cable with copper conductors having a suitable voltage rating, for the following power connections:

- AC supply to external EMC filter (when used)
- AC supply (or external EMC filter) to drive
- Drive to motor
- Drive to braking resistor

Table 4-15 Maximum motor cable lengths (200 V drives)

200 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
03200050	65 m (210 ft)						
03200066	100 m (330 ft)				50 m (165 ft)	37 m (120 ft)	
03200080	130 m (425 ft)			100 m (330 ft)			75 m (245 ft)
03200106	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)	
04200137	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)	
04200185							
05200250	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)	
06200330	300 m (984 ft)	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	
06200440							
07200610	250 m (820 ft)	185 m (607 ft)	125 m (410 ft)	90 m (295 ft)			
07200750							
07200830							
08201160	250 m (820 ft)	185 m (607 ft)	125 m (410 ft)	90 m (295 ft)			
08201320							
09201760	250 m (820 ft)						
09202190							
10202830	250 m (820 ft)						
10203000							

Table 4-16 Maximum motor cable lengths (400 V drives)

400 V Nominal AC supply voltage									
Model	Maximum permissible motor cable length for each of the following switching frequencies								
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz		
03400025	65 m (210 ft)								
03400031	100 m (330 ft)				75 m (245 ft)	50 m (165 ft)	37 m (120 ft)		
03400045	130 m (425 ft)			100 m (330 ft)					
03400062	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)			
03400078									
03400100									
04400150	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)			
04400172									
05400270	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)			
05400300									
06400350	300 m (984 ft)	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)			
06400420									
06400470									
07400660	250 m (820 ft)	185 m (607 ft)	125 m (410 ft)	90 m (295 ft)					
07400770									
07401000									
08401340	250 m (820 ft)	185 m (607 ft)	125 m (410 ft)	90 m (295 ft)					
08401570									
09402000	250 m (820 ft)								
09402240									
10402700	250 m (820 ft)								
10403200									

Table 4-17 Maximum motor cable lengths (575 V drives)

575 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
05500030	200 m (660 ft)						
05500040							
05500069							
06500100	300 m (984 ft)	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	
06500150							
06500190							
06500230							
06500290							
06500350							
07500440	200 m (660 ft)						
07500550							
08500630	250 m (820 ft)						
08500860							
09501040	250 m (820 ft)						
09501310							
10501520	250 m (820 ft)						
10501900							

Table 4-18 Maximum motor cable lengths (690 V drives)

690 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
07600190	250 m (820 ft)	185 m (607 ft)	125 m (410 ft)	90 m (295 ft)			
07600240							
07600290							
07600380							
07600440							
07600540							
08600630	250 m (820 ft)	185 m (607 ft)	125 m (410 ft)	90 m (295 ft)			
08600860							
09601040	250 m (820 ft)						
09601310							
10601500	250 m (820 ft)						
10601780							


4.9.2 High-capacitance / reduced diameter cables

The maximum cable length is reduced from that shown in Section

4.9.1 *Cable types and lengths* if high capacitance or reduced diameter motor cables are used.

Most cables have an insulating jacket between the cores and the armor or shield; these cables have a low capacitance and are recommended. Cables that do not have an insulating jacket tend to have high capacitance; if a cable of this type is used, the maximum cable length is half that quoted in the tables, (Figure 4-17 shows how to identify the two types).

Figure 4-17 Cable construction influencing the capacitance

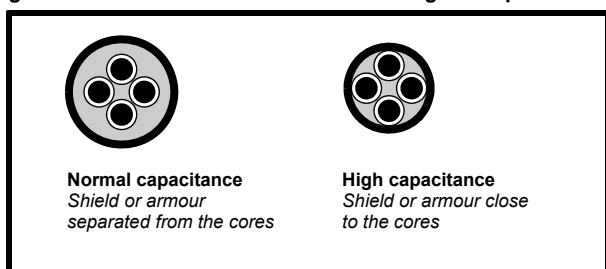

The maximum motor cable lengths specified in Section 4.9.1 *Cable types and lengths* is shielded and contains four cores. Typical capacitance for this type of cable is 130 pF/m (i.e. from one core to all others and the shield connected together).

4.9.3 Motor winding voltage

The PWM output voltage can adversely affect the inter-turn insulation in the motor. This is because of the high rate of change of voltage, in conjunction with the impedance of the motor cable and the distributed nature of the motor winding.

For normal operation with AC supplies up to 500 Vac and a standard motor with a good quality insulation system, there is no need for any special precautions. In case of doubt the motor supplier should be consulted. Special precautions are recommended under the following conditions, but only if the motor cable length exceeds 10 m:

- AC supply voltage exceeds 500 V
- DC supply voltage exceeds 670 V
- Operation of 400 V drive with continuous or very frequent sustained braking
- Multiple motors connected to a single drive

For multiple motors, the precautions given in section 4.9.4 *Multiple motors* on page 76 should be followed.

For the other cases listed, it is recommended that an inverter-rated motor be used taking into account the voltage rating of the inverter. This has a reinforced insulation system intended by the manufacturer for repetitive fast-rising pulsed voltage operation.

Users of 575 V NEMA rated motors should note that the specification for inverter-rated motors given in NEMA MG1 section 31 is sufficient for motoring operation but not where the motor spends significant periods braking. In that case an insulation peak voltage rating of 2.2 kV is recommended.

If it is not practical to use an inverter-rated motor, an output choke (inductor) should be used. The recommended type is a simple iron-cored component with a reactance of about 2 %. The exact value is not critical. This operates in conjunction with the capacitance of the motor cable to increase the rise-time of the motor terminal voltage and prevent excessive electrical stress.

4.9.4 Multiple motors

Open-loop only

If the drive is to control more than one motor, one of the fixed V/F modes should be selected (Pr 05.014 = Fixed or Squared). Make the motor connections as shown in Figure 4-18 and Figure 4-19. The maximum motor cable lengths specified in section 4.9.1 *Cable types and lengths* on page 75 apply to the sum of the total cable lengths from the drive to each motor.

It is recommended that each motor is connected through a protection relay since the drive cannot protect each motor individually. For Δ connection, a sinusoidal filter or an output inductor must be connected as shown in Figure 4-19, even when the cable lengths are less than the maximum permissible. For details of inductor sizes refer to the supplier of the drive.

Figure 4-18 Preferred chain connection for multiple motors


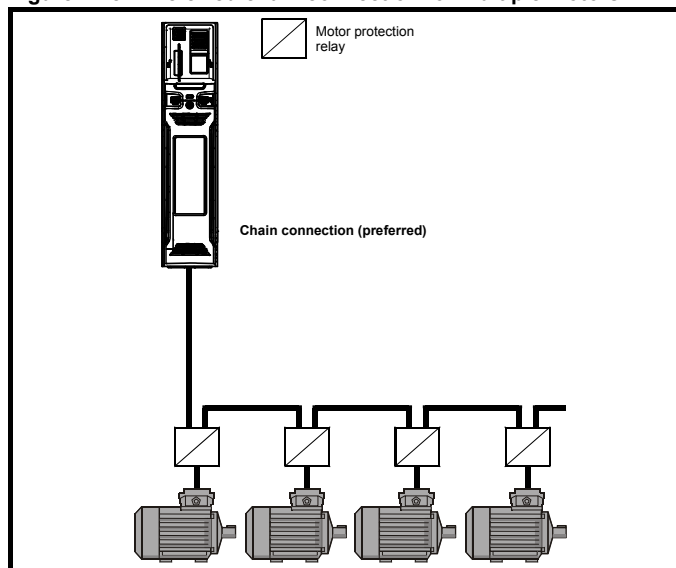


Figure 4-19 Alternative connection for multiple motors

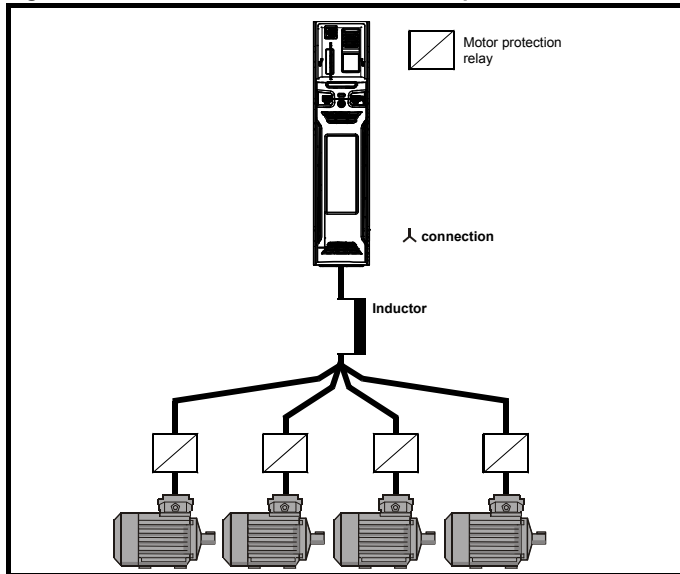

4.9.5 λ / Δ motor operation

The voltage rating for λ and Δ connections of the motor should always be checked before attempting to run the motor.

The default setting of the motor rated voltage parameter is the same as the drive rated voltage, i.e.

- 400 V drive 400 V rated voltage
- 230 V drive 230 V rated voltage

A typical 3 phase motor would be connected in λ for 400 V operation or Δ for 230 V operation, however, variations on this are common e.g.

λ 690 V Δ 400 V.

Incorrect connection of the windings will cause severe under or over fluxing of the motor, leading to a very poor output torque or motor saturation and overheating respectively.

4.9.6 Output contactor



If the cable between the drive and the motor is to be interrupted by a contactor or circuit breaker, ensure that the drive is disabled before the contactor or circuit breaker is opened or closed. Severe arcing may occur if this circuit is interrupted with the motor running at high current and low speed.

A contactor is sometimes required to be installed between the drive and motor for safety purposes.

The recommended motor contactor is the AC3 type.

Switching of an output contactor should only occur when the output of the drive is disabled.

Opening or closing of the contactor with the drive enabled will lead to:

1. OI ac trips (which cannot be reset for 10 seconds)
2. High levels of radio frequency noise emission
3. Increased contactor wear and tear

The Drive Enable terminal (T31) when opened provides a SAFE TORQUE OFF function. This can in many cases replace output contactors.

For further information see section 4.15 *SAFE TORQUE OFF (STO)* on page 97.

4.10 Braking

Braking occurs when the drive is decelerating the motor, or is preventing the motor from gaining speed due to mechanical influences. During braking, energy is returned to the drive from the motor.

When motor braking is applied by the drive, the maximum regenerated power that the drive can absorb is equal to the power dissipation (losses) of the drive.

When the regenerated power is likely to exceed these losses, the DC bus voltage of the drive increases. Under default conditions, the drive brakes the motor under PI control, which extends the deceleration time as necessary in order to prevent the DC bus voltage from rising above a user defined set-point.

If the drive is expected to rapidly decelerate a load, or to hold back an overhauling load, a braking resistor must be installed.

Table 4-19 shows the default DC voltage level at which the drive turns on the braking transistor. However the braking resistor turn on and the turn off voltages are programmable with *Braking IGBT Lower Threshold* (06.073) and *Braking IGBT Upper Threshold* (06.074).

Table 4-19 Default braking transistor turn on voltage

Drive voltage rating	DC bus voltage level
200 V	390 V
400 V	780 V
575 V	930 V
690 V	1120 V

NOTE

When a braking resistor is used, Pr **00.015** should be set to Fast ramp mode.



High temperatures

Braking resistors can reach high temperatures. Locate braking resistors so that damage cannot result. Use cable having insulation capable of withstanding high temperatures.

4.10.1 Heatsink mounted braking resistor

A resistor has been especially designed to be mounted within the heatsink of the drive (size 3, 4 and 5). See section 3.10 *Heatsink mounted brake resistor* on page 48 for mounting details. The design of the resistor is such that no thermal protection circuit is required, as the device will fail safely under fault conditions. On size 3, 4 and 5 the in built software overload protection is set-up at default for the designated heatsink mounted resistor. The heatsink mounted resistor is not supplied with the drive and can be purchased separately.

Table 4-20 provides the resistor data for each drive rating.

NOTE

The internal / heatsink mounted resistor is suitable for applications with a low level of regen energy only. See Table 4-20.



Braking resistor overload protection parameter settings

Failure to observe the following information may damage the resistor.

The drive software contains an overload protection function for a braking resistor. On size 3, 4 and 5 this function is enabled at default to protect the heatsink mounted resistor. Below are the parameter settings.

Parameter		Size 3		Size 4		Size 5		
		200 V drive	400 V drive	200 V drive	400 V drive	200 V drive	400 V drive	575 V drive
Braking resistor rated power	Pr 10.030	50 W		100 W		100 W		
Braking resistor thermal time constant	Pr 10.031	3.3 s		2.0 s		2.0 s		
Braking resistor resistance	Pr 10.061	75 Ω		38 Ω		38 Ω		

For more information on the braking resistor software overload protection, see Pr **10.030**, Pr **10.031** and Pr **10.061** full descriptions in the *Parameter Reference Guide*.

If the resistor is to be used at more than half of its average power rating, the drive cooling fan must be set to full speed by setting Pr **06.045** to 11.

Table 4-20 Heatsink mounted braking resistor data

Parameter	Size 3	Size 4	Size 5
Part number	1220-2752-00	1299-0003-00	
DC resistance at 25 °C	75 Ω	37.5 Ω	
Peak instantaneous power over 1 ms at nominal resistance	8 kW	16 kW	
Average power over 60 s *	50 W	100 W	
Ingress Protection (IP) rating	IP54		
Maximum altitude	2000 m		

* To keep the temperature of the resistor below 70 °C (158 °F) in a 30 °C (86 °F) ambient, the average power rating is 50 W for size 3, 100 W for size 4 and 5. The above parameter settings ensure this is the case.

4.10.2 External braking resistor



Overload protection

When an external braking resistor is used, it is essential that an overload protection device is incorporated in the braking resistor circuit; this is described in Figure 4-20 on page 81.

When a braking resistor is to be mounted outside the enclosure, ensure that it is mounted in a ventilated metal housing that will perform the following functions:

- Prevent inadvertent contact with the resistor
- Allow adequate ventilation for the resistor

When compliance with EMC emission standards is required, external connection requires the cable to be armored or shielded, since it is not fully contained in a metal enclosure. See section 4.12.5 *Compliance with generic emission standards* on page 87 for further details.

Internal connection does not require the cable to be armored or shielded.

Minimum resistances and power ratings for the braking resistor at 40 °C (104 °F)

Table 4-21 Braking resistor resistance and power rating (200 V)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
03200050	20	8.5	1.5
03200066			1.9
03200080			2.8
03200106			3.6
04200137	18	9.4	4.6
04200185			6.3
05200250	16.5	10.3	8.6
06200330	8.6	19.7	12.6
06200440			16.4
07200610	6.1	27.8	20.5
07200750			24.4
07200830			32.5
08201160	2.2	76.9	41
08201320			47.8
09201760	1.2	144.5	59.4
09202190			79.7
10202830	1.3	130	98.6
10203000			116.7

Table 4-22 Braking resistor resistance and power rating (400 V)

Model	Minimum resistance*	Instantaneous power rating	Continuous power rating
	Ω		kW
03400025	74	9.2	1.5
03400031			2.0
03400045			2.8
03400062			4.6
03400078	50	13.6	5.0
03400100			6.6
04400150	34	19.9	9.0
04400172			12.6
05400270	31.5	21.5	16.2
05400300	18	37.5	19.6
06400350	17	39.8	21.6
06400420			25
06400470			32.7
07400660			41.6
07400770	9.0	75.2	50.6
07401000			60.1
08401340	4.8	140.9	81
08401570			98.6
09402000	2.4	282.9	118.6
09402240			156.9
10402700	2.6	260	198.2
10403200			237.6

Table 4-23 Braking resistor resistance and power rating (575 V)

Model	Minimum resistance*	Instantaneous power rating	Continuous power rating
	Ω		kW
05500030	80	12.1	2.6
05500040			4.6
05500069			6.5
06500100	13	74	8.7
06500150			12.3
06500190			16.3
06500230			19.9
06500290			24.2
06500350			31.7
07500440	8.5	113.1	39.5
07500550			47.1
08500630	5.5	174.8	58.6
08500860			78.1
09501040	3.3	291.3	97.7
09501310			116.7
10501520	3.3	291.3	155.6
10501900	2.5	384.4	

Table 4-24 Braking resistor resistance and power rating (690 V)

Model	Minimum resistance*	Instantaneous power rating	Continuous power rating
	Ω		kW
07600190	11.5	121.2	20.6
07600240			23.9
07600290			32.5
07600380			41.5
07600440			47.8
07600540			60.5
08600630	5.5	253.5	79.7
08600860			95.2
09601040	4.2	331.9	116.3
09601310			139.1
10601500	4.2	331.9	166.7
10601780	3.3	422.4	193

* Resistor tolerance: $\pm 10\%$

For high-inertia loads or under continuous braking, the *continuous power* dissipated in the braking resistor may be as high as the power rating of the drive. The total *energy* dissipated in the braking resistor is dependent on the amount of energy to be extracted from the load.

The instantaneous power rating refers to the short-term maximum power dissipated during the *on* intervals of the pulse width modulated braking control cycle. The braking resistor must be able to withstand this dissipation for short intervals (milliseconds). Higher resistance values require proportionately lower instantaneous power ratings.

In most applications, braking occurs only occasionally. This allows the continuous power rating of the braking resistor to be much lower than the power rating of the drive. It is therefore essential that the instantaneous power rating and energy rating of the braking resistor are sufficient for the most extreme braking duty that is likely to be encountered.

Optimization of the braking resistor requires careful consideration of the braking duty.

Select a value of resistance for the braking resistor that is not less than the specified minimum resistance. Larger resistance values may give a cost saving, as well as a safety benefit in the event of a fault in the braking system. Braking capability will then be reduced, which could cause the drive to trip during braking if the value chosen is too large.

The following external brake resistors are available from Control Techniques for drive sizes 3 to 6.

Table 4-25 External brake resistors for drive sizes 3 to 6

Part number	Part description	Resistance value	Continuous power (40°C)	Max. instantaneous (40°C) ton = 1 ms	Pulse power (40°C) 1/120 s (ED 0.8 %)	Pulse power (40°C) 5/120 s (ED 4.2 %)	Pulse power (40°C) 10/120 s (ED 8.3 %)	Pulse power (40°C) 40/120 s (ED 33.3 %)
1220-2201	DBR, 100 W, 20R, 130 x 68, TS	20 Ω	100 W	2.0 MW	2300 W	1000 W	650 W	250 W
1220-2401	DBR, 100 W, 40R, 130 x 68, TS	40 Ω	100 W	1.6 MW	1900 W	900 W	610 W	240 W
1220-2801	DBR, 100 W, 80R, 130 x 68, TS	80 Ω	100 W	1.25 MW	1500 W	775 W	570 W	230 W

The brake resistors can be used in a series or parallel to get the required resistance and power depending on the size of the drive as per Table 4-21 to Table 4-24. The brake resistor is equipped with a thermal switch. The thermal switch should be integrated in the control circuit by the user.

The resistor combinations shown in Table 4-26 below can be made using one or more brake resistor/s from Table 4-25 above. Pr **10.030**, Pr **10.031** and Pr **10.061** should be set as per information provided in Table 4-26 below. Refer to description of Pr **10.030**, Pr **10.031** and Pr **10.061** in the *Parameter Reference Guide* for more information.


Table 4-26 Resistor combinations

Unidrive M type	Heavy duty (kW)	150 % Peak power (Ω)	200 % Peak power (Ω)	Braking voltage (Vdc)	Resistor Min. value (Ω)	Resistor combinations (Ω)
03200050	0.7	135	101	390	20	1 x 20 = 20 1 x 40 = 40 2 x 40 = 20 (when connected in parallel) 2 x 80 = 40 (when connected in parallel)
03200066	1.1	92	69			
03200080	1.5	68	51			
03200106	2.2	46	34			
03400025	0.7	540	405	780	74	1 x 80 = 80 2 x 40 = 80 (when connected in series)
03400031	1.1	370	277			
03400045	1.5	271	203			
03400062	2.2	184	138		50	
03400078	3.0	135	101			
03400100	4.0	101	76			
04200137	3.0	34	25	390	18	1 x 20 = 20 2 x 40 = 20 (when connected in parallel)
04200185	4.0	26	19			
04400150	5.5	74	56	780	34	1 x 40 = 40 2 x 80 = 40 (when connected in parallel)
04400172	7.5	54	40			
05200250	5.5	19	14	390	16.5	1 x 20 = 20 2 x 40 = 20 (when connected in parallel)
05400270	11.0	37	28	780	31.5	1 x 40 = 40 2 x 80 = 40 (when connected in parallel)
05400300	15.0	27	20		18	1 x 20 = 20 2 x 40 = 20 (when connected in parallel)
05500030	1.5	384	288	930	80	1 x 80 = 80 2 x 40 = 80 (when connected in parallel)
05500040	2.2	263	197			
05500069	4.0	144	108			
06200330	7.5	13.3	10	390	8.6	2 x 20 = 10 (when connected in parallel) 4 x 40 = 10 (when connected in parallel)
06200440	11.0	9.3	7			
06400350	15.0	27	20	780	17	1 x 20 = 20 2 x 40 = 20 (when connected in parallel) 4 x 80 = 20 (when connected in parallel)
06400420	18.5	22	16.4			
06400470	22.0	18.4	13.8			
06500100	5.5	104	78	930	13	1 x 20 = 20 2 x 40 = 20 (when connected in parallel) 3 x 40 = 13 (when connected in parallel) 4 x 80 = 20 (when connected in parallel)
06500150	7.5	77	58			
06500190	11.0	52	39			
06500230	15.0	39	29			
06500290	18.5	33	25			
06500350	22.0	27	20			

Thermal protection circuit for the braking resistor

The thermal protection circuit must disconnect the AC supply from the drive if the resistor becomes overloaded due to a fault. Figure 4-20 shows a typical circuit arrangement.

Figure 4-20 Typical protection circuit for a braking resistor

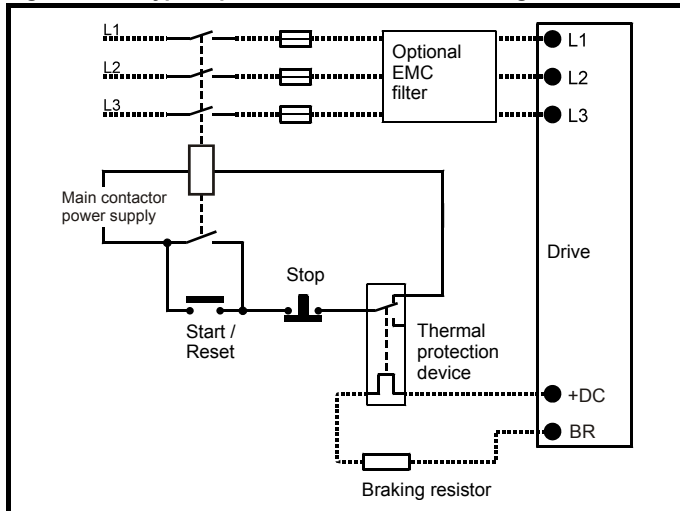

See Figure 4-1 on page 60 and Figure 4-4 on page 62 for the location of the +DC and braking resistor connections.

4.10.3 Braking resistor software overload protection

The drive software contains an overload protection function for a braking resistor. In order to enable and set-up this function, it is necessary to enter three values into the drive:

- *Braking Resistor Rated Power* (10.030)
- *Braking Resistor Thermal Time Constant* (10.031)
- *Braking Resistor Resistance* (10.061)

This data should be obtained from the manufacturer of the braking resistors.

Pr **10.039** gives an indication of braking resistor temperature based on a simple thermal model. Zero indicates the resistor is close to ambient and 100 % is the maximum temperature the resistor can withstand. A 'Brake Resistor' alarm is given if this parameter is above 75 % and the braking IGBT is active. A Brake R Too Hot trip will occur if Pr **10.039** reaches 100 %, when Pr **10.037** is set to 0 (default value) or 1.

If Pr **10.037** is equal to 2 or 3, a Brake R Too Hot trip will not occur when Pr **10.039** reaches 100 %, but instead the braking IGBT will be disabled until Pr **10.039** falls below 95 %. This option is intended for applications with parallel connected DC buses where there are several braking resistors, each of which cannot withstand full DC bus voltage continuously. With this type of application it is unlikely the braking energy will be shared equally between the resistors because of voltage measurement tolerances within the individual drives. Therefore with Pr **10.037** set to 2 or 3, then as soon as a resistor has reached its maximum temperature the drive will disable the braking IGBT, and another resistor on another drive will take up the braking energy. Once Pr **10.039** has fallen below 95 % the drive will allow the braking IGBT to operate again.

See the *Parameter Reference Guide* for more information on Pr **10.030**, Pr **10.031**, Pr **10.037** and Pr **10.039**.

This software overload protection should be used in addition to an external overload protection device.

4.11 Ground leakage

The ground leakage current depends upon whether the internal EMC filter is installed or not. The drive is supplied with the filter installed. Instructions for removing the internal filter are given in section 4.12.2 *Internal EMC filter* on page 84.

With internal filter installed:

Size 3 to 5: 28 mA* AC at 400 V 50 Hz
30 µA DC with a 600 V DC bus (10 MΩ)

Size 7 to 10: 56 mA* AC at 400 V 50 Hz
18 µA DC with a 600 V DC bus (33 MΩ)

* Proportional to the supply voltage and frequency.

With internal filter removed:

<1 mA



When the internal filter is installed the leakage current is high. In this case a permanent fixed ground connection must be provided, or other suitable measures taken to prevent a safety hazard occurring if the connection is lost.

4.11.1 Use of residual current device (RCD)

There are three common types of ELCB / RCD:

1. AC - detects AC fault currents
2. A - detects AC and pulsating DC fault currents (provided the DC current reaches zero at least once every half cycle)
3. B - detects AC, pulsating DC and smooth DC fault currents
 - Type AC should never be used with drives.
 - Type A can only be used with single phase drives
 - Type B must be used with three phase drives



Only type B ELCB / RCD are suitable for use with 3 phase inverter drives.

If an external EMC filter is used, a delay of at least 50 ms should be incorporated to ensure spurious trips are not seen. The leakage current is likely to exceed the trip level if all of the phases are not energized simultaneously.

4.12 EMC (Electromagnetic compatibility)

The requirements for EMC are divided into three levels in the following three sections:

Section 4.10.3, General requirements for all applications, to ensure reliable operation of the drive and minimise the risk of disturbing nearby equipment. The immunity standards specified in Chapter 12 *Technical data* on page 232 will be met, but no specific emission standards are applied. Note also the special requirements given in *Surge immunity of control circuits - long cables and connections outside a building* on page 90 for increased surge immunity of control circuits where control wiring is extended.

Section 4.12.4, Requirements for meeting the EMC standard for power drive systems, IEC61800-3 (EN 61800-3:2004).

Section 4.12.5, Requirements for meeting the generic emission standards for the industrial environment, IEC61000-6-4, EN 61000-6-4:2007.

The recommendations of section 4.12.3 will usually be sufficient to avoid causing disturbance to adjacent equipment of industrial quality. If particularly sensitive equipment is to be used nearby, or in a non-industrial environment, then the recommendations of section 4.12.4 or section 4.12.5 should be followed to give reduced radio-frequency emission.

In order to ensure the installation meets the various emission standards described in:

- The EMC data sheet available from the supplier of the drive
- The Declaration of Conformity at the front of this manual
- Chapter 12 *Technical data* on page 232

The correct external EMC filter must be used and all of the guidelines in section 4.12.3 *General requirements for EMC* on page 86 and section 4.12.5 *Compliance with generic emission standards* on page 87 must be followed.

Table 4-27 Drive and EMC filter cross reference

Model	CT part number
200 V	
03200050 to 03200106	4200-3230
04200137 to 04200185	4200-0272
05200250	4200-0312
06200330 to 06200440	4200-2300
07200610 to 07200830	4200-1132
08201160 to 08201320	4200-1972
400 V	
03400025 to 03400100	4200-3480
04400150 to 04400172	4200-0252
05400270 to 05400300	4200-0402
06400350 to 06400470	4200-4800
07400660 to 07401000	4200-1132
08401340 to 08401570	4200-1972
575 V	
05500030 to 05500069	4200-0122
06500100 to 06500350	4200-3690
07500440 to 07500550	4200-0672
08500630 to 08500860	4200-1662
690 V	
07600190 to 07600540	4200-0672
08600630 to 08600860	4200-1662

NOTE

The installer of the drive is responsible for ensuring compliance with the EMC regulations that apply in the country in which the drive is to be used.


4.12.1 Grounding hardware

The drive is supplied with a grounding bracket and grounding clamp to facilitate EMC compliance. They provide a convenient method for direct grounding of cable shields without the use of "pig-tails". Cable shields can be bared and clamped to the grounding bracket using metal clips or clamps¹ (not supplied) or cable ties. Note that the shield must in all cases be continued through the clamp to the intended terminal on the drive, in accordance with the connection details for the specific signal.

¹ A suitable clamp is the Phoenix DIN rail mounted SK14 cable clamp (for cables with a maximum outer diameter of 14 mm).

- See Figure 4-21, Figure 4-22 and Figure 4-23 for details on installing the grounding clamp.
- See Figure 4-24 for details on installing the grounding bracket.

Figure 4-21 Installation of grounding clamp (size 3 and 4)

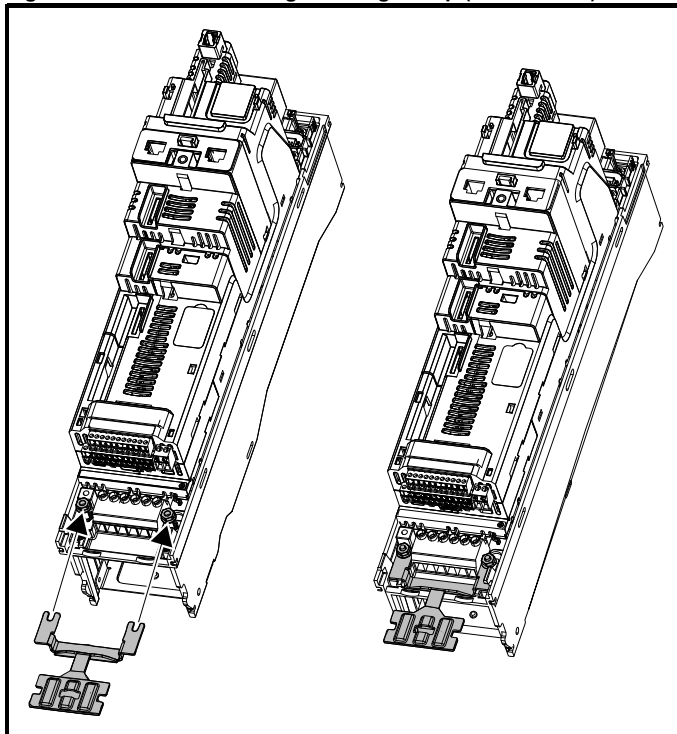


Loosen the ground connection nuts and slide the grounding clamp in the direction shown. Once in place, the ground connection nuts should be tightened with a maximum torque of 2 N m (1.47 lb ft).



High ground leakage current


When an EMC filter is used, a permanent fixed ground connection must be provided which does not pass through a connector or flexible power cord. This includes the internal EMC filter.

Figure 4-22 Installation of grounding clamp (size 5)

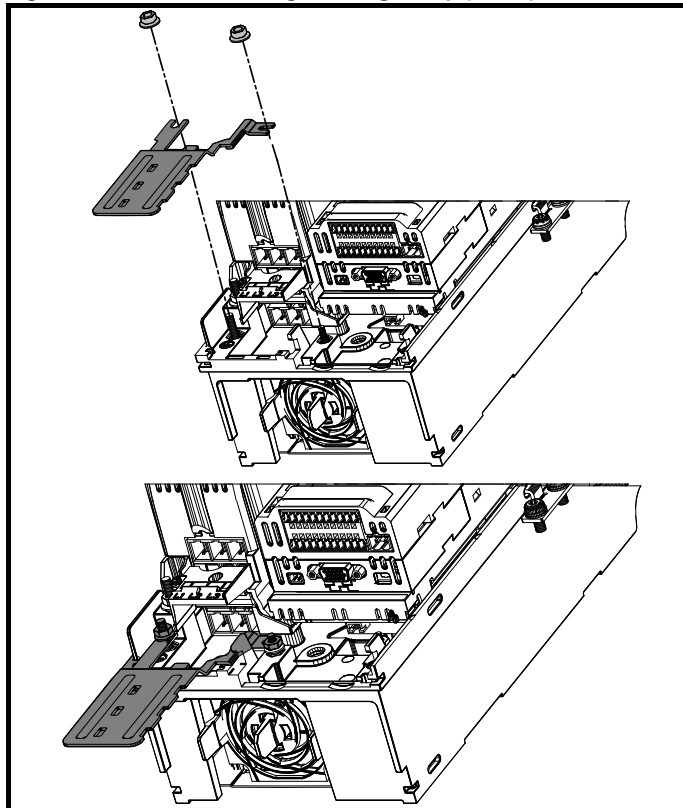


Loosen the ground connection nuts and slide the grounding clamp down onto the pillars in the direction shown. Once in place, the ground connection nuts should be tightened with a maximum torque of 2 N m (1.47 lb ft).

Figure 4-23 Installation of grounding clamp (size 6)

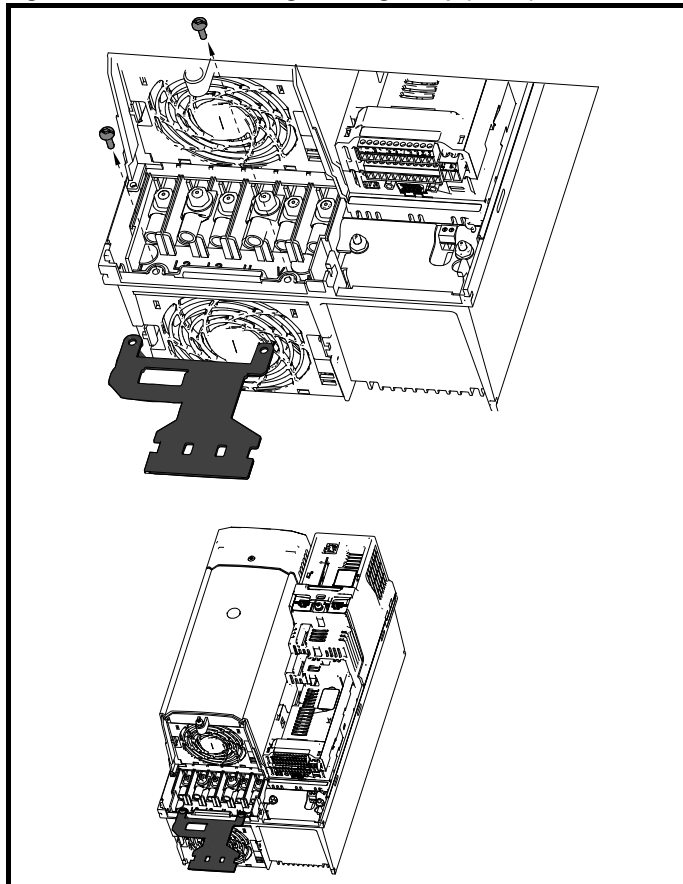


The grounding clamp is secured using the provided 2 x M4 x 10 mm fasteners. The fasteners should be tightened with the maximum torque of 2 N m (1.47 lb ft).

Figure 4-24 Installation of grounding bracket (all sizes -size 3 shown)

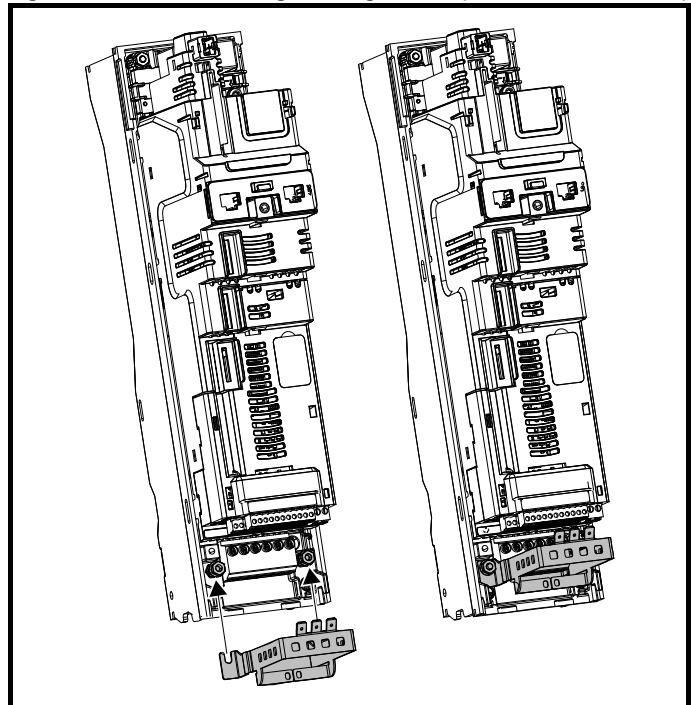

Loosen the ground connection nuts and slide the grounding bracket in the direction shown. Once in place, the ground connection nuts should be tightened with a maximum torque of 2 N m (1.47 lb ft).




WARNING On size 3 the grounding bracket is secured using the power ground terminal of the drive. Ensure that the supply ground connection is secure after installing / removing the grounding bracket. Failure to do so will result in the drive not being grounded.

A faston tab is located on the grounding bracket for the purpose of connecting the drive 0 V to ground should the user require to do so.

4.12.2 Internal EMC filter

It is recommended that the internal EMC filter be kept in place unless there is a specific reason for removing it.




If the drive is used with ungrounded (IT) supplies, the internal EMC filter must be removed unless additional motor ground fault protection is installed. For instructions on removal refer to section 4.12.2. For details of ground fault protection contact the supplier of the drive.

WARNING

If the drive is used as a motoring drive as part of a regen system, then the internal EMC filter must be removed.


The internal EMC filter reduces radio-frequency emission into the line power supply. Where the motor cable is short, it permits the requirements of EN 61800-3:2004 to be met for the second environment - see section 4.12.4 *Compliance with EN 61800-3:2004 (standard for Power Drive Systems)* on page 87 and section 12.1.27 *Electromagnetic compatibility (EMC)* on page 254. For longer motor cables the filter continues to provide a useful reduction in emission levels, and when used with any length of shielded motor cable up to the limit for the drive, it is unlikely that nearby industrial equipment will be disturbed. It is recommended that the filter be used in all applications unless the instructions given above require it to be removed, or where the ground leakage current of 28 mA for size 3 is unacceptable. See section 4.12.2 for details of removing and installing the internal EMC filter.



The supply must be disconnected before removing the internal EMC filter.


WARNING

Figure 4-25 Removal of the size 3 internal EMC filter

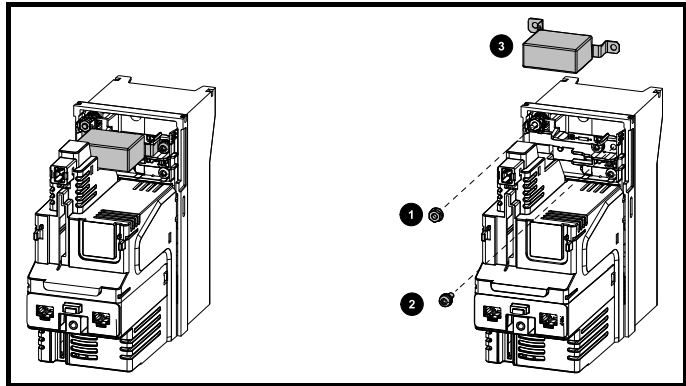


Remove the screw and nut (1) and (2) as shown above. Lift away from the securing points and rotate away from the drive. Ensure the screw and nut are replaced and re-tightened with a maximum torque of 2 N m (1.47 lb ft).

Figure 4-26 Removal of the size 4 internal EMC filter

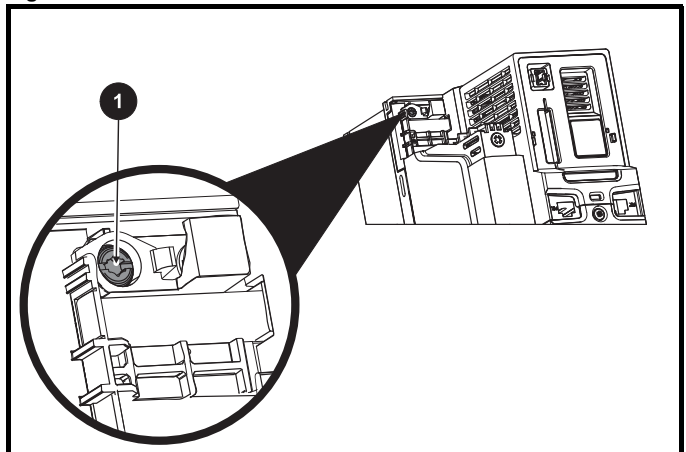


To electrically disconnect the Internal EMC filter, remove the screw as highlighted above (1).

Figure 4-27 Removal of the size 5 internal EMC filter

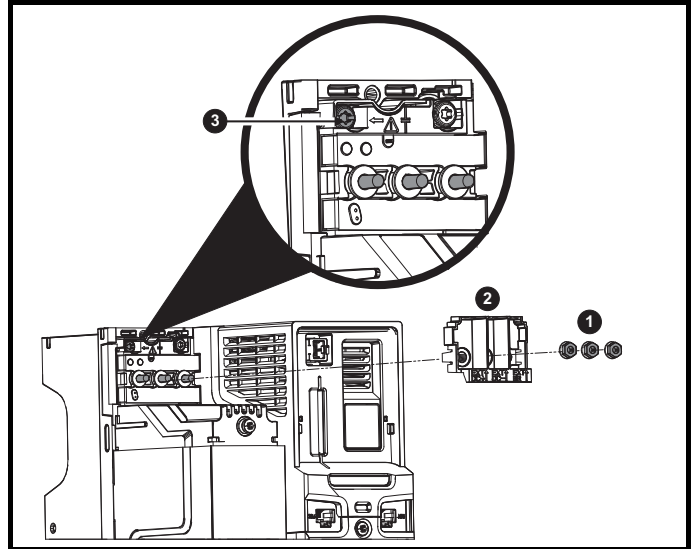


Remove the three M4 terminal nuts (1). Lift away the cover (2) to expose the M4 Torx internal EMC filter removal screw. Finally remove the M4 Torx internal EMC filter removal screw (3) to electrically disconnect the internal EMC filter.

Figure 4-28 Removal of the size 6 internal EMC filter

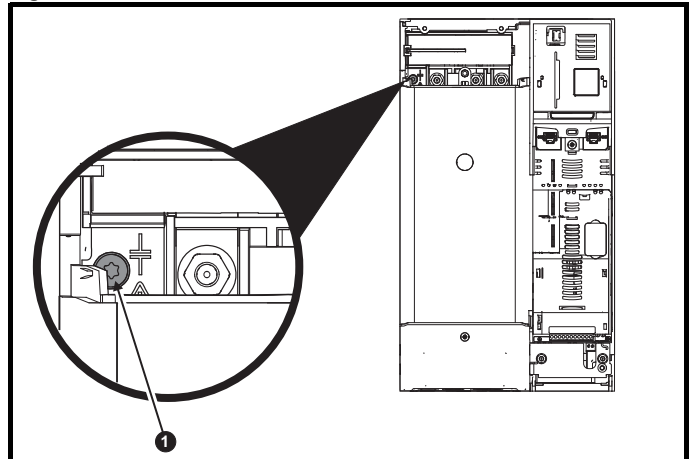

To electrically disconnect the Internal EMC filter, remove the screw as highlighted above (1).

Figure 4-29 Removal of the size 7 and 8 internal EMC filter and line to ground varistors (size 7 shown)

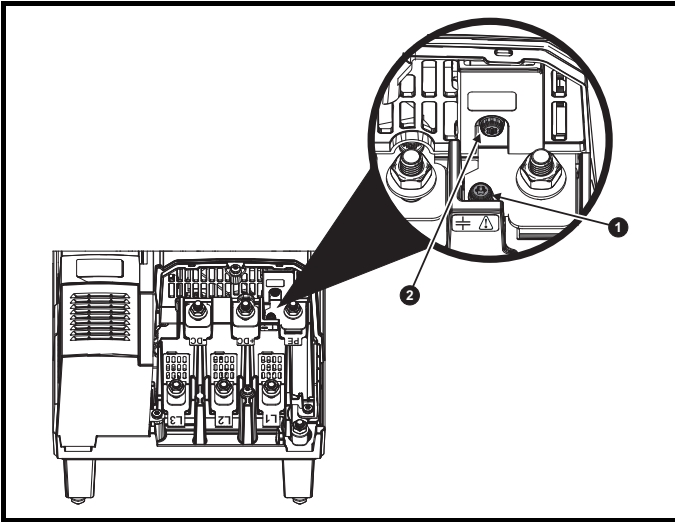

To electrically disconnect the Internal EMC filter, remove the screw as highlighted above (1).

To electrically disconnect the line to ground varistors, remove the screw as highlighted above (2).


NOTE

The Internal EMC filter on size 9E and 10 cannot be removed.

NOTE

The line to ground varistors should only be removed in special circumstances.

Figure 4-30 Removal of size 9E and 10 line to ground varistors

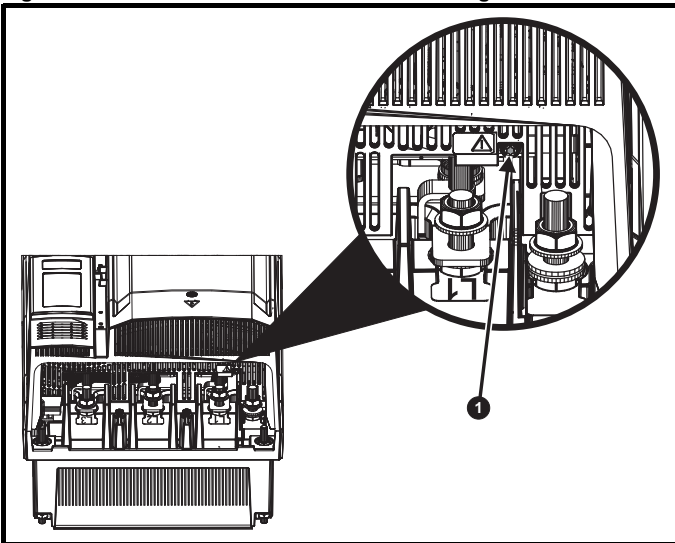

To electrically disconnect the line to ground varistors, remove the screw as highlighted above (1).


4.12.3 General requirements for EMC

Ground (earth) connections

The grounding arrangements should be in accordance with Figure 4-31, which shows a single drive on a back-plate with or without an additional enclosure.

Figure 4-31 shows how to configure and minimise EMC when using unshielded motor cable. However shielded cable is a better option, in which case it should be installed as shown in section 4.12.5 *Compliance with generic emission standards* on page 87.


Figure 4-31 General EMC enclosure layout showing ground connections

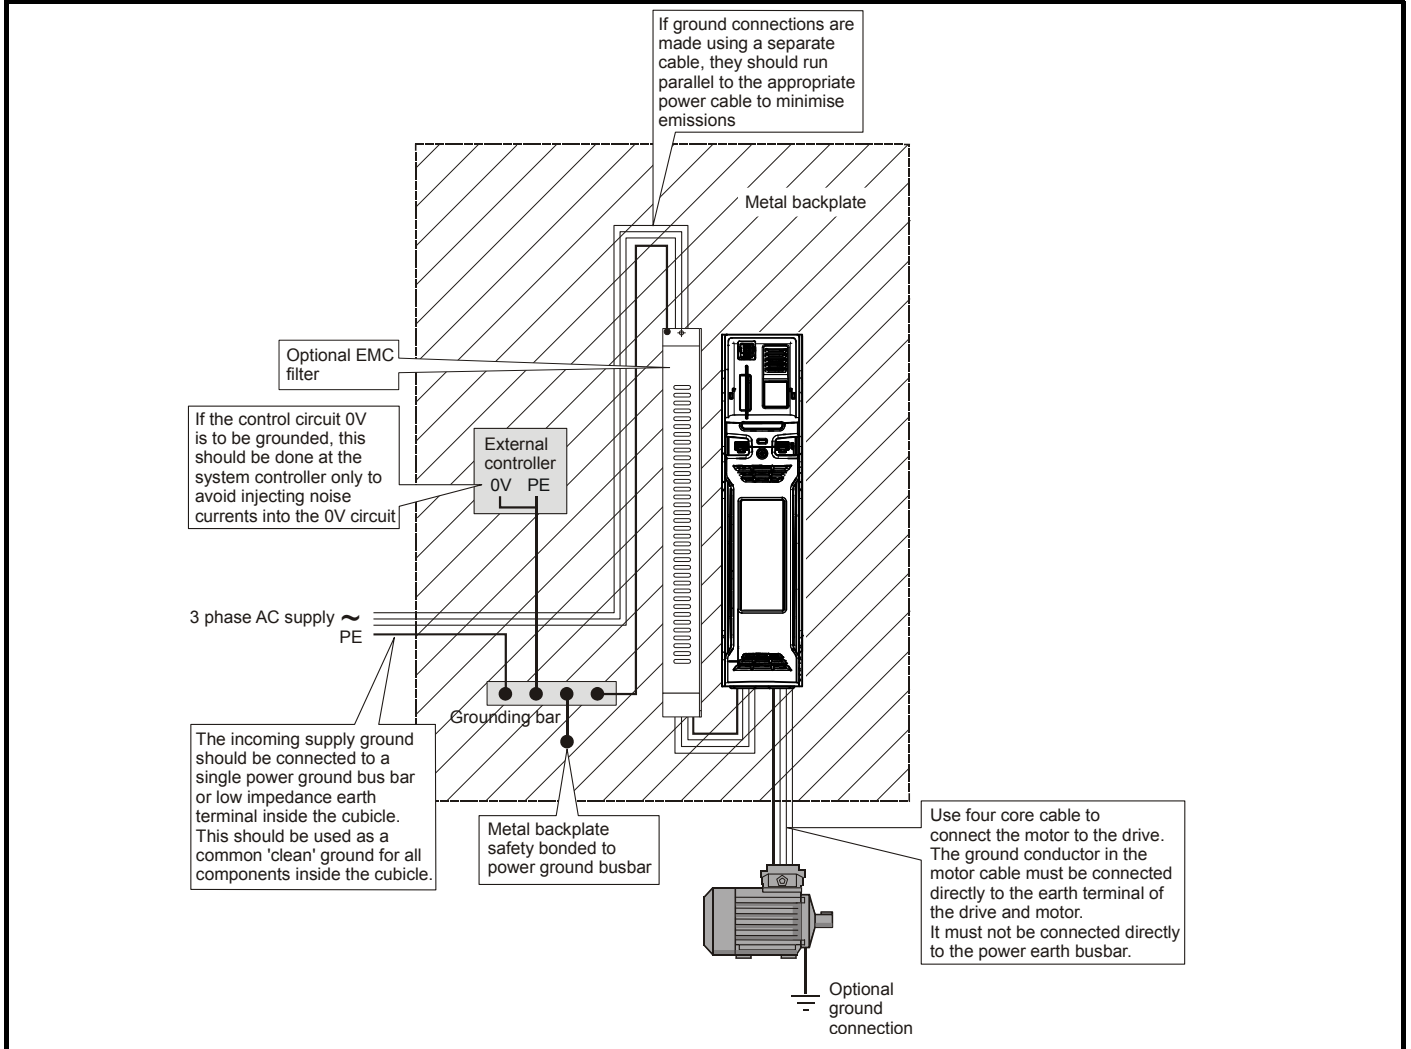

Cable layout

Figure 4-32 indicates the clearances which should be observed around the drive and related 'noisy' power cables by all sensitive control signals / equipment.

Figure 4-32 Drive cable clearances

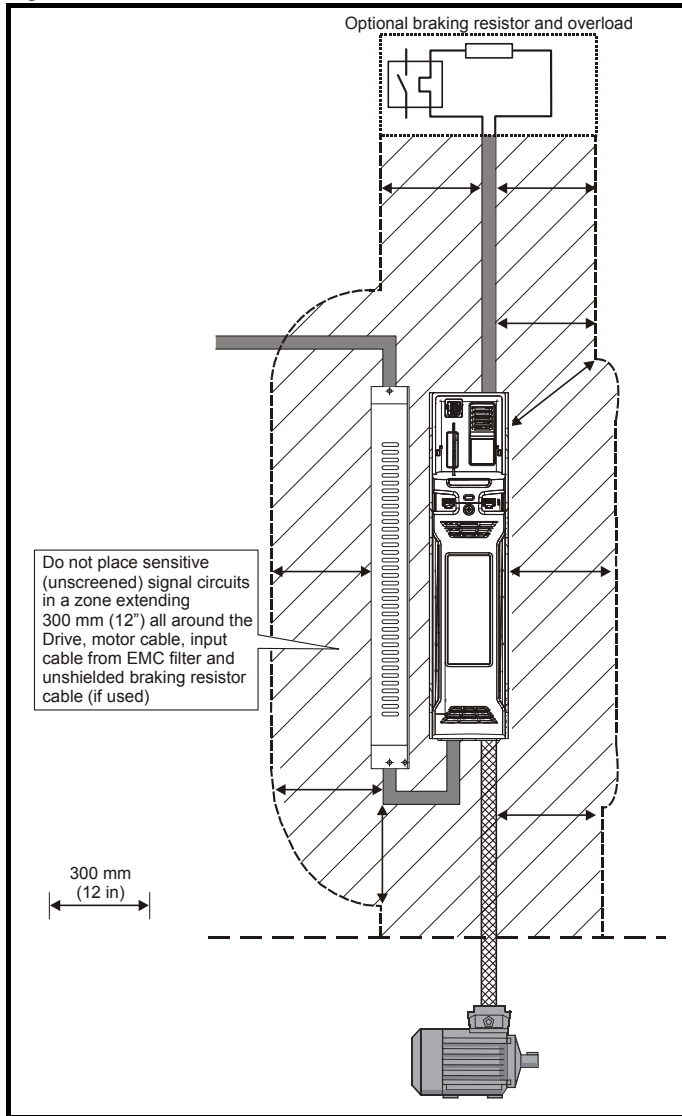

NOTE

Any signal cables which are carried inside the motor cable (i.e. motor thermistor, motor brake) will pick up large pulse currents via the cable capacitance. The shield of these signal cables must be connected to ground close to the motor cable, to avoid this noise current spreading through the control system.

4.12.4 Compliance with EN 61800-3:2004 (standard for Power Drive Systems)

Meeting the requirements of this standard depends on the environment that the drive is intended to operate in, as follows:

Operation in the first environment

Observe the guidelines given in section 4.12.5 *Compliance with generic emission standards* on page 87. An external EMC filter will always be required.



This is a product of the restricted distribution class according to IEC 61800-3
 In a residential environment this product may cause radio interference in which case the user may be required to take adequate measures.

Operation in the second environment

In all cases a shielded motor cable must be used, and an EMC filter is required for all drives with a rated input current of less than 100 A.

The drive contains an in-built filter for basic emission control. In some cases feeding the motor cables (U, V and W) once through a ferrite ring can maintain compliance for longer cable lengths.

For longer motor cables, an external filter is required. Where a filter is required, follow the guidelines in Section 4.12.5 *Compliance with generic emission standards*.

Where a filter is not required, follow the guidelines given in section 4.12.3 *General requirements for EMC* on page 86.



CAUTION

The second environment typically includes an industrial low-voltage power supply network which does not supply buildings used for residential purposes. Operating the drive in this environment without an external EMC filter may cause interference to nearby electronic equipment whose sensitivity has not been appreciated. The user must take remedial measures if this situation arises. If the consequences of unexpected disturbances are severe, it is recommended that the guidelines in Section 4.12.5 *Compliance with generic emission standards* be adhered to.

Refer to section 12.1.27 *Electromagnetic compatibility (EMC)* on page 254 for further information on compliance with EMC standards and definitions of environments.

Detailed instructions and EMC information are given in the *EMC Data Sheet* which is available from the supplier of the drive.

4.12.5 Compliance with generic emission standards

The following information applies to frame sizes 3 to 10.

Use the recommended filter and shielded motor cable. Observe the layout rules given in Figure 4-33 and Figure 4-36. Ensure the AC supply and ground cables are at least 100 mm from the power module and motor cable.

Figure 4-33 Supply and ground cable clearance (sizes 3 to 6)



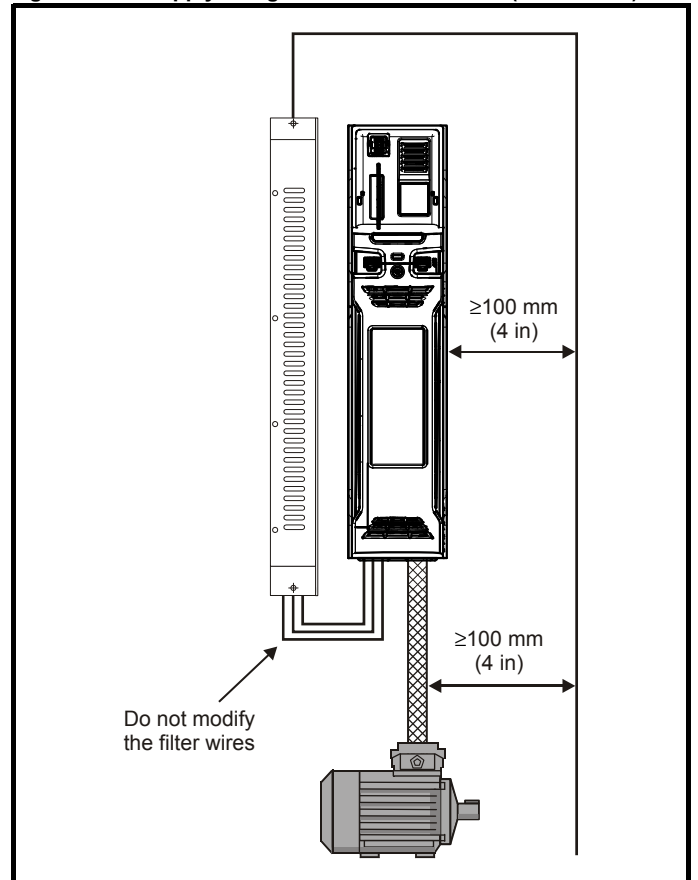


Figure 4-34 Supply and ground cable clearance (size 7 onwards)

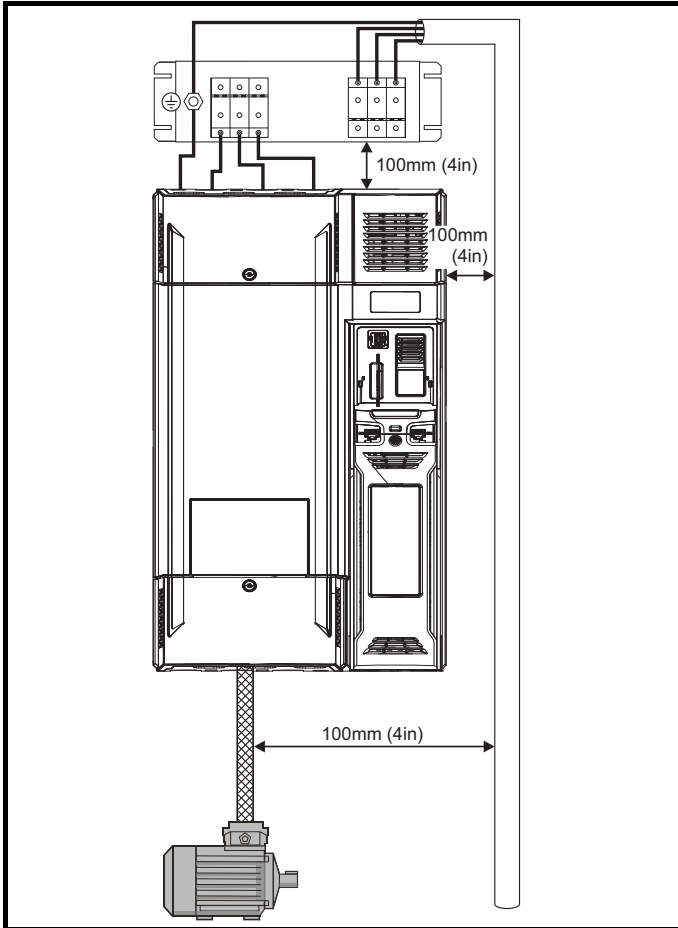


Ensure the AC supply and ground cables are at least 100 mm from the power module and motor cable.

Figure 4-35 Sensitive signal circuit clearance

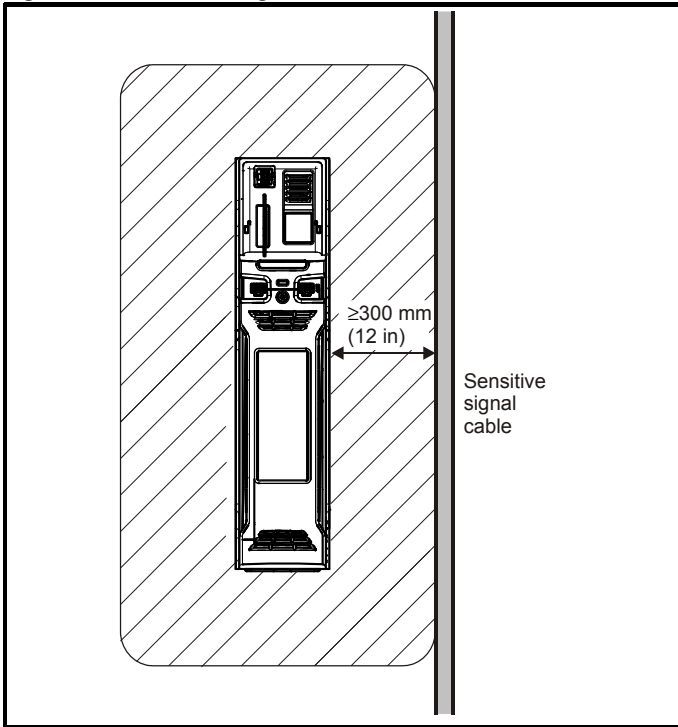

Avoid placing sensitive signal circuits in a zone 300 mm (12 in) in the area immediately surrounding the power module. Ensure good EMC grounding.

Figure 4-36 Grounding the drive, motor cable shield and filter

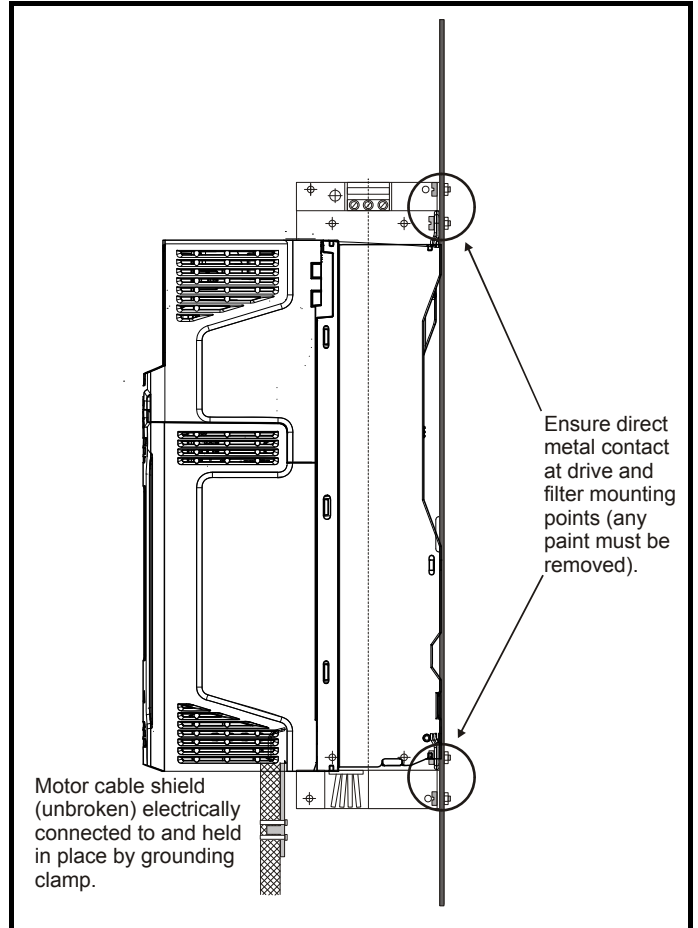


Connect the shield of the motor cable to the ground terminal of the motor frame using a link that is as short as possible and not exceeding 50 mm (2 in) long.

A complete 360° termination of the shield to the terminal housing of the motor is beneficial.


From an EMC consideration it is irrelevant whether the motor cable contains an internal (safety) ground core, or if there is a separate external ground conductor, or where grounding is through the shield alone. An internal ground core will carry a high noise current and therefore it must be terminated as close as possible to the shield termination.

Figure 4-37 Grounding the motor cable shield

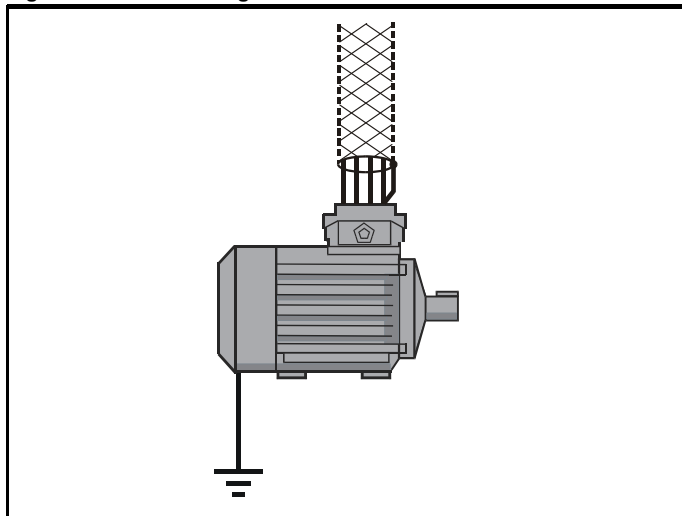

Unshielded wiring to the optional braking resistor(s) may be used provided the wiring runs internally to the enclosure. Ensure a minimum spacing of 300 mm (12 in) from the signal wiring and the AC supply wiring to the external EMC filter. If this condition cannot be met then the wiring must be shielded.


Figure 4-38 Shielding requirements of optional external braking resistor

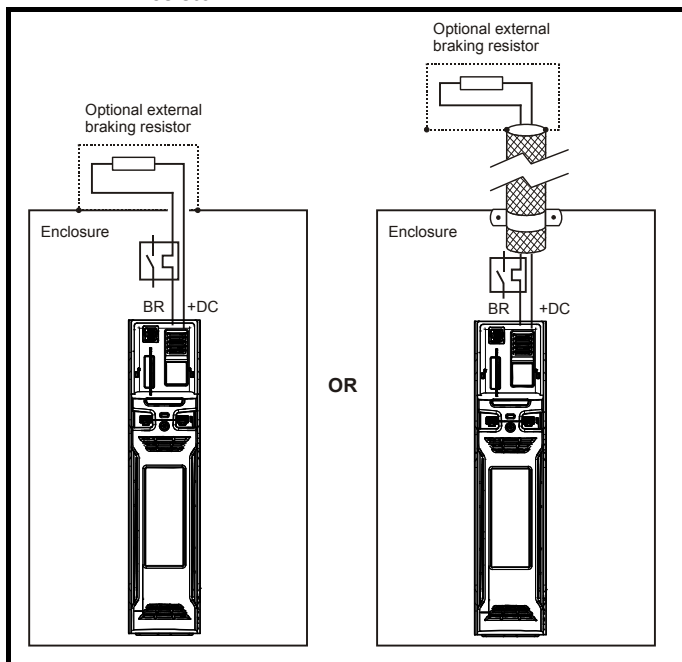

If the control wiring is to leave the enclosure, it must be shielded and the shield(s) clamped to the drive using the grounding bracket as shown in Figure 4-39. Remove the outer insulating cover of the cable to ensure the shield(s) make direct contact with the bracket, but keep the shield(s) intact until as close as possible to the terminals

Alternatively, wiring may be passed through a ferrite ring, part number 3225-1004.

Figure 4-39 Grounding of signal cable shields using the grounding bracket

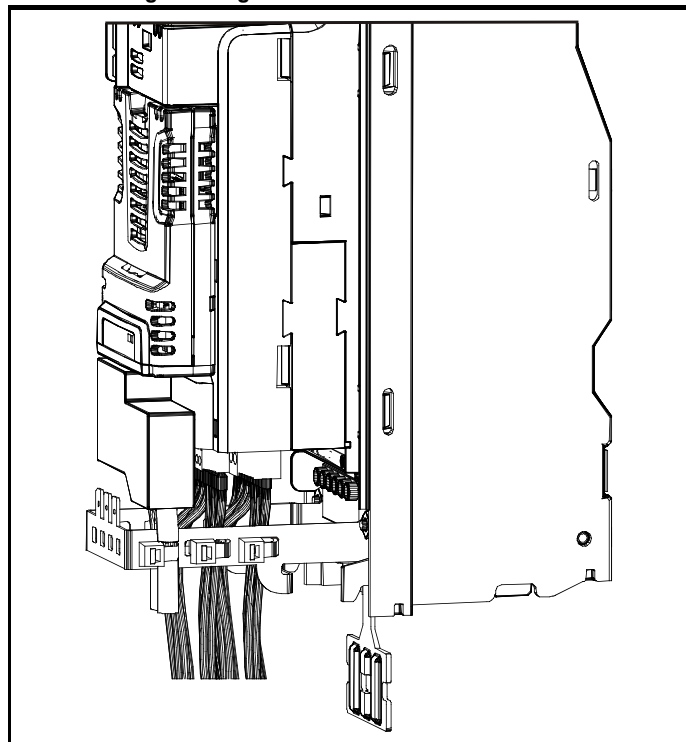

4.12.6 Variations in the EMC wiring

Interruptions to the motor cable

The motor cable should ideally be a single length of shielded or armored cable having no interruptions. In some situations it may be necessary to interrupt the cable, as in the following examples:


- Connecting the motor cable to a terminal block in the drive enclosure
- Installing a motor isolator / disconnect switch for safety when work is done on the motor

In these cases the following guidelines should be followed.

Terminal block in the enclosure

The motor cable shields should be bonded to the back-plate using uninsulated metal cable-clamps which should be positioned as close as possible to the terminal block. Keep the length of power conductors to a minimum and ensure that all sensitive equipment and circuits are at least 0.3 m (12 in) away from the terminal block.

Figure 4-40 Connecting the motor cable to a terminal block in the enclosure

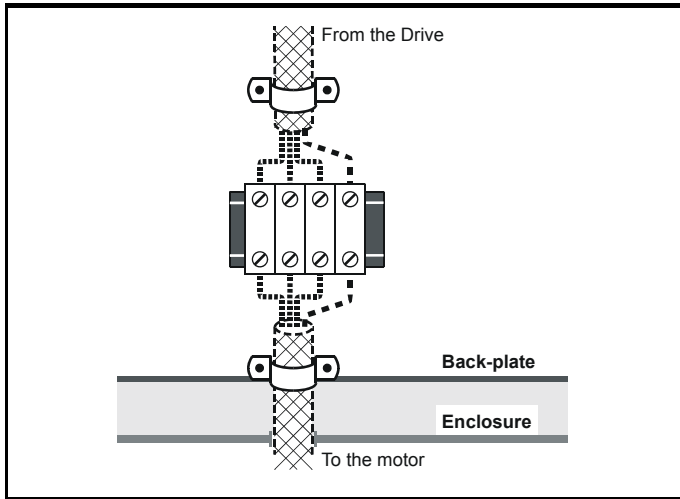


Using a motor isolator / disconnect-switch

The motor cable shields should be connected by a very short conductor having a low inductance. The use of a flat metal coupling-bar is recommended; conventional wire is not suitable.

The shields should be bonded directly to the coupling-bar using uninsulated metal cable-clamps. Keep the length of the exposed power conductors to a minimum and ensure that all sensitive equipment and circuits are at least 0.3 m (12 in) away.

The coupling-bar may be grounded to a known low-impedance ground nearby, for example a large metallic structure which is connected closely to the drive ground.

Figure 4-41 Connecting the motor cable to an isolator / disconnect switch

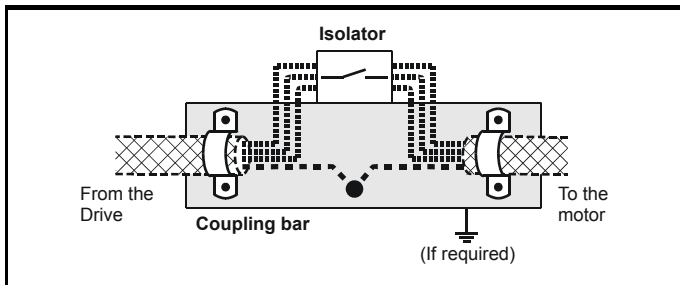

Surge immunity of control circuits - long cables and connections outside a building

The input/output ports for the control circuits are designed for general use within machines and small systems without any special precautions.

These circuits meet the requirements of EN 61000-6-2:2005 (1 kV surge) provided the 0 V connection is not grounded.

In applications where they may be exposed to high-energy voltage surges, some special measures may be required to prevent malfunction or damage. Surges may be caused by lightning or severe power faults in association with grounding arrangements which permit high transient voltages between nominally grounded points. This is a particular risk where the circuits extend outside the protection of a building.

As a general rule, if the circuits are to pass outside the building where the drive is located, or if cable runs within a building exceed 30 m, some additional precautions are advisable. One of the following techniques should be used:

1. Galvanic isolation, i.e. do not connect the control 0 V terminal to ground. Avoid loops in the control wiring, i.e. ensure every control wire is accompanied by its return (0 V) wire.

2. Shielded cable with additional power ground bonding. The cable shield may be connected to ground at both ends, but in addition the ground conductors at both ends of the cable must be bonded together by a power ground cable (equipotential bonding cable) with cross-sectional area of at least 10 mm², or 10 times the area of the signal cable shield, or to suit the electrical safety requirements of the plant. This ensures that fault or surge current passes mainly through the ground cable and not in the signal cable shield. If the building or plant has a well-designed common bonded network this precaution is not necessary.
3. Additional over-voltage suppression - for the analog and digital inputs and outputs, a zener diode network or a commercially available surge suppressor may be connected in parallel with the input circuit as shown in Figure 4-42 and Figure 4-43.

If a digital port experiences a severe surge its protective trip may operate (I/O Overload trip). For continued operation after such an event, the trip can be reset automatically by setting Pr 10.034 to 5.

Figure 4-42 Surge suppression for digital and unipolar inputs and outputs


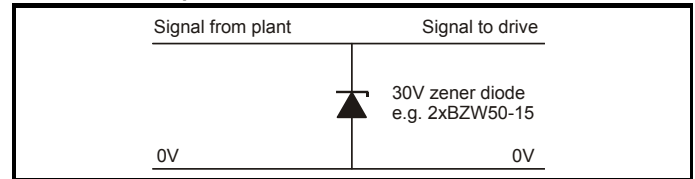


Figure 4-43 Surge suppression for analog and bipolar inputs and outputs

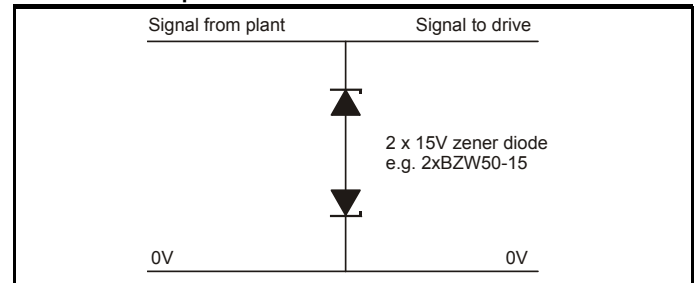

Surge suppression devices are available as rail-mounting modules, e.g. from Phoenix Contact:


- Unipolar TT-UKK5-D/24 DC
- Bipolar TT-UKK5-D/24 AC

These devices are not suitable for encoder signals or fast digital data networks because the capacitance of the diodes adversely affects the signal. Most encoders have galvanic isolation of the signal circuit from the motor frame, in which case no precautions are required. For data networks, follow the specific recommendations for the particular network.

4.13 Communications connections

The drive offers a 2 wire 485 interface. This enables the drive set-up, operation and monitoring to be carried out with a PC or controller if required.

Figure 4-44 Location of the comms connectors

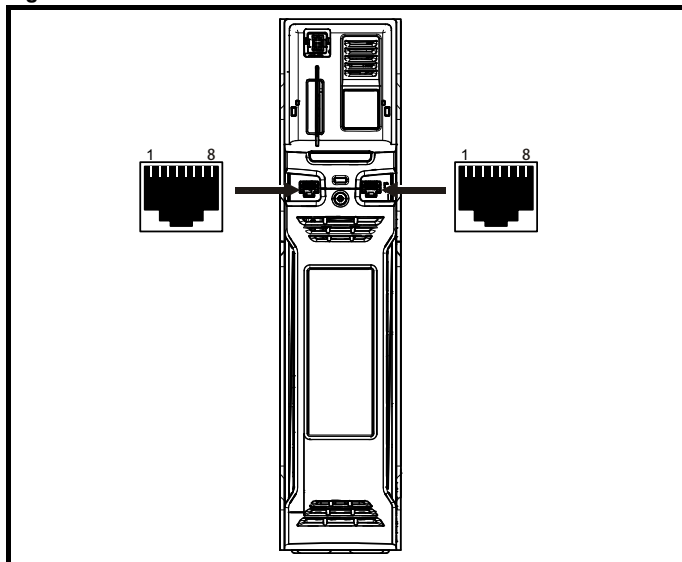

The 485 option provides two parallel RJ45 connectors are provided allowing easy daisy chaining. The drive only supports Modbus RTU protocol. See Table 4-28 for the connection details.

NOTE

Standard Ethernet cables are not recommended for use when connecting drives on a 485 network as they do not have the correct twisted pairs for the pinout of the serial comms port.

Table 4-28 Serial communication port pin-outs

Pin	Function
1	120 Ω Termination resistor
2	RX TX
3	Isolated 0 V
4	+24 V (100 mA)
5	Isolated 0 V
6	TX enable
7	RX\ TX\
8	RX\ TX\ (if termination resistors are required, link to pin 1)
Shell	Isolated 0 V

Minimum number of connections are 2, 3, 7 and shield.

4.13.1 Isolation of the 485 serial communications port

The serial PC communications port is double insulated and meets the requirements for SELV in EN 50178:1998.



In order to meet the requirements for SELV in IEC60950 (IT equipment) it is necessary for the control computer to be grounded. Alternatively, when a lap-top or similar device is used which has no provision for grounding, an isolation device must be incorporated in the communications lead.

An isolated serial communications lead has been designed to connect the drive to IT equipment (such as laptop computers), and is available from the supplier of the drive. See below for details:

Table 4-29 Isolated serial comms lead details

Part number	Description
4500-0096	CT USB Comms cable

The "isolated serial communications" lead has reinforced insulation as defined in IEC60950 for altitudes up to 3,000 m.

4.14 Control connections

4.14.1 General

Table 4-30 The control connections consist of:

Function	Qty	Control parameters available	Terminal number
Differential analog input	1	Mode, offset, invert, scaling	5, 6
Single ended analog input	2	Mode, offset, invert, scaling, destination	7, 8
Analog output	2	Source, scaling,	9, 10
Digital input	3	Destination, invert, logic select	27, 28, 29
Digital input / output	3	Input / output mode select, destination / source, invert, logic select	24, 25, 26
Relay	1	Source, invert	41, 42
Drive enable (SAFE TORQUE OFF)	1		31
+10 V User output	1		4
+24 V User output	1	Source, invert	22
0V common	6		1, 3, 11, 21, 23, 30
+24V External input	1	Destination, invert	2

Key:

Destination parameter:	Indicates the parameter which is being controlled by the terminal / function
Source parameter:	Indicates the parameter being output by the terminal
Mode parameter:	Analog - indicates the mode of operation of the terminal, i.e. voltage 0-10 V, current 4-20 mA etc. Digital - indicates the mode of operation of the terminal, i.e. positive / negative logic (the Drive Enable terminal is fixed in positive logic), open collector.

All analog terminal functions can be programmed in menu 7.

All digital terminal functions (including the relay) can be programmed in menu 8.



The control circuits are isolated from the power circuits in the drive by basic insulation (single insulation) only. The installer must ensure that the external control circuits are insulated from human contact by at least one layer of insulation (supplementary insulation) rated for use at the AC supply voltage.



If the control circuits are to be connected to other circuits classified as Safety Extra Low Voltage (SELV) (e.g. to a personal computer), an additional isolating barrier must be included in order to maintain the SELV classification.



If any of the digital inputs (including the drive enable input) are connected in parallel with an inductive load (i.e. contactor or motor brake) then suitable suppression (i.e. diode or varistor) should be used on the coil of the load. If no suppression is used then over voltage spikes can cause damage to the digital inputs and outputs on the drive.



Ensure the logic sense is correct for the control circuit to be used. Incorrect logic sense could cause the motor to be started unexpectedly. Positive logic is the default state for the drive.

NOTE

Any signal cables which are carried inside the motor cable (i.e. motor thermistor, motor brake) will pick up large pulse currents via the cable capacitance. The shield of these signal cables must be connected to ground close to the point of exit of the motor cable, to avoid this noise current spreading through the control system.


NOTE

The SAFE TORQUE OFF drive enable terminal is a positive logic input only. It is not affected by the setting of *Input Logic Polarity* (08.029).

NOTE

The common 0 V from analog signals should, wherever possible, not be connected to the same 0 V terminal as the common 0 V from digital signals. Terminals 3 and 11 should be used for connecting the 0V common of analog signals and terminals 21, 23 and 30 for digital signals. This is to prevent small voltage drops in the terminal connections causing inaccuracies in the analog signals.

Figure 4-45 Default terminal functions

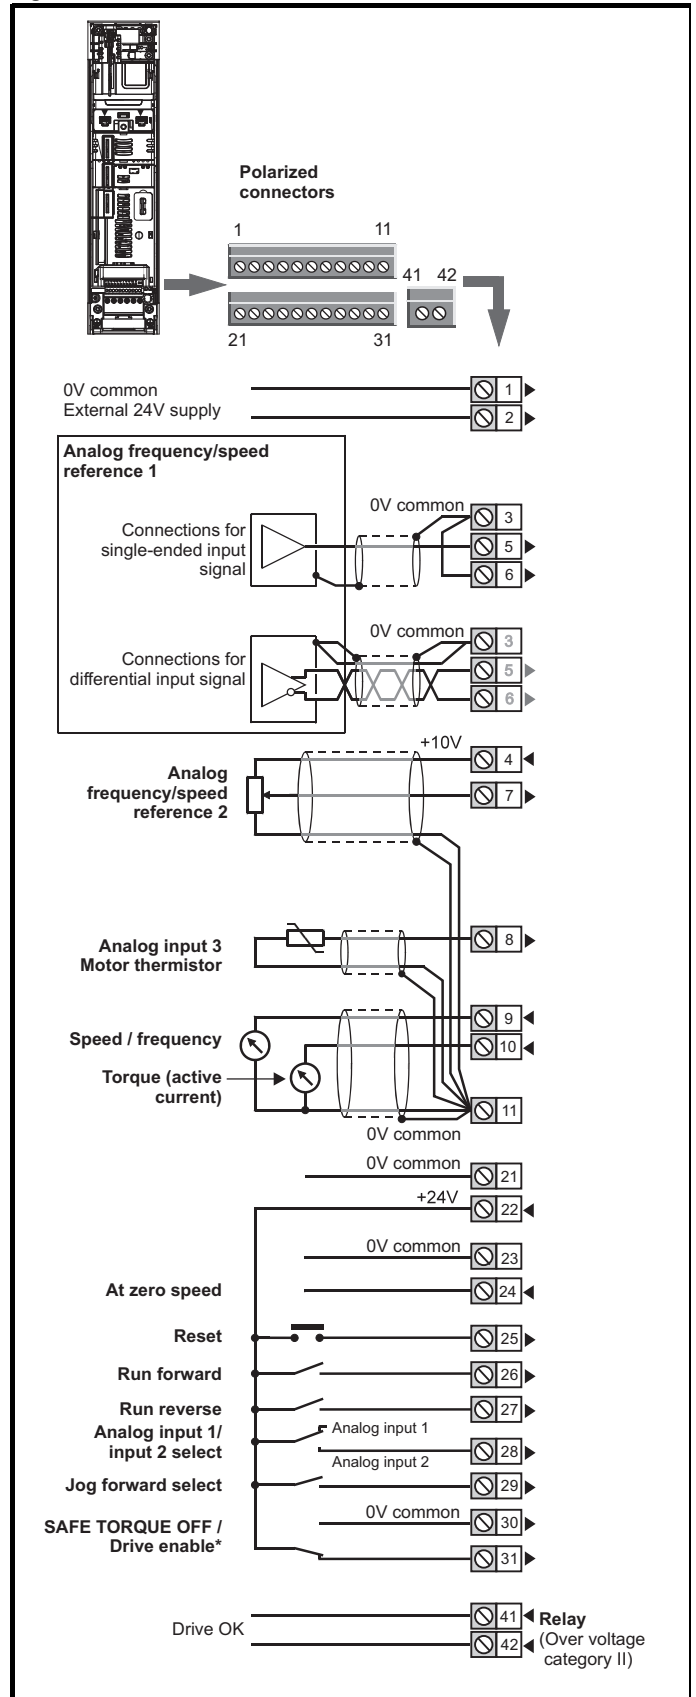

*The SAFE TORQUE OFF / Drive enable terminal is a positive logic input only.

4.14.2 Control terminal specification

1	0V common
Function	Common connection for all external devices

2	+24V external input
Function	To supply the control circuit without providing a supply to the power stage
Programmability	Can be switched on or off to act as a digital input by setting the source Pr 08.063 and input invert Pr 08.053
Nominal voltage	+24.0 Vdc
Minimum continuous operating voltage	+19.2 Vdc
Maximum continuous operating voltage	+28.0 Vdc
Minimum start-up voltage	21.6 Vdc
Recommended power supply	40 W 24 Vdc nominal
Recommended fuse	3 A, 50 Vdc

3	0V common
Function	Common connection for all external devices

4	+10V user output
Function	Supply for external analog devices
Voltage	10.2 V nominal
Voltage tolerance	±1 %
Nominal output current	10 mA
Protection	Current limit and trip @ 30 mA

4	Precision reference Analog input 1	
5	Non-inverting input	
6	Inverting input	
Default function	Frequency/speed reference	
Type of input	Bipolar differential analog voltage or current, thermistor input	
Mode controlled by:	Pr 07.007	
Operating in Voltage mode		
Full scale voltage range	±10 V ±2 %	
Maximum offset	±10 mV	
Absolute maximum voltage range	±36 V relative to 0 V	
Working common mode voltage range	±13 V relative to 0 V	
Input resistance	≥100 kΩ	
Monotonic	Yes (including 0 V)	
Dead band	None (including 0 V)	
Jumps	None (including 0 V)	
Maximum offset	20 mV	
Maximum non linearity	0.3% of input	
Maximum gain asymmetry	0.5 %	
Input filter bandwidth single pole	~3 kHz	
Operating in current mode		
Current ranges	0 to 20 mA ±5 %, 20 to 0 mA ±5 %, 4 to 20 mA ±5 %, 20 to 4 mA ±5 %	
Maximum offset	250 μA	
Absolute maximum voltage (reverse biased)	±36 V relative to 0 V	
Equivalent input resistance	≤300 Ω	
Absolute maximum current	±30 mA	
Operating in thermistor input mode (in conjunction with analog input 3)		
Internal pull-up voltage	2.5 V	
Trip threshold resistance	User defined in Pr 07.048	
Short-circuit detection resistance	50 Ω ± 40 %	
Common to all modes		
Resolution	12 bits (11 bits plus sign)	
Sample / update period	250 μs with destinations Pr 01.036 , Pr 01.037 , Pr 03.022 or Pr 04.008 in RFC-A and RFC-S modes. 4 ms for open loop mode and all other destinations in RFC-A or RFC-S modes.	

7 Analog input 2	
Default function	Frequency / speed reference
Type of input	Bipolar single-ended analog voltage or unipolar current
Mode controlled by...	Pr 07.011
Operating in voltage mode	
Full scale voltage range	$\pm 10\text{ V} \pm 2\%$
Maximum offset	$\pm 10\text{ mV}$
Absolute maximum voltage range	$\pm 36\text{ V}$ relative to 0 V
Input resistance	$\geq 100\text{ k}\Omega$
Operating in current mode	
Current ranges	0 to 20 mA $\pm 5\%$, 20 to 0 mA $\pm 5\%$, 4 to 20 mA $\pm 5\%$, 20 to 4 mA $\pm 5\%$
Maximum offset	250 μA
Absolute maximum voltage (reverse bias)	$\pm 36\text{ V}$ relative to 0V
Absolute maximum current	$\pm 30\text{ mA}$
Equivalent input resistance	$\leq 300\Omega$
Common to all modes	
Resolution	12 bits (11 bits plus sign)
Sample / update	250 μs with destinations Pr 01.036 , Pr 01.037 or Pr 03.022 , Pr 04.008 in RFC-A or RFC-S. 4ms for open loop mode and all other destinations in RFC-A or RFC-S mode.

8 Analog input 3	
Default function	Thermistor input
Type of input	Bipolar single-ended analog voltage, or thermistor input
Mode controlled by...	Pr 07.015
Operating in Voltage mode (default)	
Voltage range	$\pm 10\text{ V} \pm 2\%$
Maximum offset	$\pm 10\text{ mV}$
Absolute maximum voltage range	$\pm 36\text{ V}$ relative to 0 V
Input resistance	$\geq 100\text{ k}\Omega$
Operating in thermistor input mode	
Supported thermistor types	Din 4408, KTY 84, PT100, PT 1000, PT 2000
Internal pull-up voltage	2.5 V
Trip threshold resistance	User defined in Pr 07.048
Reset resistance	User defined in Pr 07.048
Short-circuit detection resistance	$50\Omega \pm 40\%$
Common to all modes	
Resolution	12 bits (11 bits plus sign)
Sample / update period	4 ms

9 Analog output 1	
10 Analog output 2	
Terminal 9 default function	OL > Motor FREQUENCY output signal RFC > SPEED output signal
Terminal 10 default function	Motor active current
Type of output	Bipolar single-ended analog voltage
Operating in Voltage mode (default)	
Voltage range	$\pm 10\text{ V} \pm 5\%$
Maximum offset	$\pm 120\text{ mV}$
Maximum output current	$\pm 20\text{ mA}$
Load resistance	$\geq 1\text{ k}\Omega$
Protection	20 mA max. Short circuit protection
Common to all modes	
Resolution	10-bit
Sample / update period	250 μs (output will only change at update rate of the source parameter if slower)

11 0V common	
Function	Common connection for all external devices

21 0V common	
Function	Common connection for all external devices

22 +24 V user output (selectable)	
Terminal 22 default function	+24 V user output
Programmability	Can be switched on or off to act as a fourth digital output (positive logic only) by setting the source Pr 08.028 and source invert Pr 08.018
Nominal output current	100 mA combined with DIO3
Maximum output current	100 mA 200 mA (total including all Digital I/O)
Protection	Current limit and trip
Sample / update period	2 ms when configured as an output (output will only change at the update rate of the source parameter if slower)

23 0V common	
Function	Common connection for all external devices

24	Digital I/O 1
25	Digital I/O 2
26	Digital I/O 3
Terminal 24 default function	AT ZERO SPEED output
Terminal 25 default function	DRIVE RESET input
Terminal 26 default function	RUN FORWARD input
Type	Positive or negative logic digital inputs, positive logic voltage source outputs
Input / output mode controlled by...	Pr 08.031 , Pr 08.032 and Pr 08.033
Operating as an input	
Logic mode controlled by...	Pr 08.029
Absolute maximum applied voltage range	-3 V to +30 V
Impedance	>2 mA @15 V from IEC 61131-2, type 1, 6.6 k Ω
Input thresholds	10 V \pm 0.8 V from IEC 61131-2, type 1
Operating as an output	
Nominal maximum output current	100 mA (DIO1 & 2 combined) 100 mA (DIO3 & 24 V User Output Combined)
Maximum output current	100 mA 200 mA (total including all Digital I/O)
Common to all modes	
Voltage range	0 V to +24 V
Sample / Update period	2 ms (output will only change at the update rate of the source parameter)

27	Digital Input 4
28	Digital Input 5
Terminal 27 default function	RUN REVERSE input
Terminal 28 default function	Analog INPUT 1 / INPUT 2 select
Type	Negative or positive logic digital inputs
Logic mode controlled by...	Pr 08.029
Voltage range	0 V to +24 V
Absolute maximum applied voltage range	-3 V to +30 V
Impedance	>2 mA @15 V from IEC 61131-2, type 1, 6.6 k Ω
Input thresholds	10 V \pm 0.8 V from IEC 61131-2, type 1
Sample / Update period	250 μ s when configured as an input with destinations Pr 06.035 or Pr 06.036 . 600 μ s when configured as an input with destination Pr 06.029 . 2 ms in all other cases.

29	Digital Input 6
Terminal 29 default function	JOG SELECT input
Type	Negative or positive logic digital inputs
Logic mode controlled by...	Pr 08.029
Voltage range	0 V to +24 V
Absolute maximum applied voltage range	-3 V to +30 V
Impedance	>2 mA @15 V from IEC 61131-2, type 1, 6.6 k Ω
Input thresholds	10 V \pm 0.8 V from IEC 61131-2, type 1
Sample / Update period	250 μ s when configured as an input with destinations Pr 06.035 or Pr 06.036 . 2 ms in all other cases.


30	0V common
Function	Common connection for all external devices

Refer to section 4.15 **SAFE TORQUE OFF (STO)** on page 97 for further information.

31	SAFE TORQUE OFF function (drive enable)
Type	Positive logic only digital input
Voltage range	0 V to +24 V
Absolute maximum applied voltage	30 V
Logic Threshold	10 V \pm 5 V
Low state maximum voltage for disable to SIL3 and PL e	5 V
Impedance	>4 mA @15 V from IEC 61131-2, type 1, 3.3 k Ω
Low state maximum current for disable to SIL3 and PL e	0.5 mA
Response time	Nominal: 8 ms Maximum: 20 ms
The SAFE TORQUE OFF function may be used in a safety-related application in preventing the drive from generating torque in the motor to a high level of integrity. The system designer is responsible for ensuring that the complete system is safe and designed correctly according to the relevant safety standards. If the SAFE TORQUE OFF function is not required, this terminal is used for enabling the drive.	

41	42	Relay contacts
Default function	Drive OK indicator	
Contact voltage rating	240 Vac, Installation over-voltage category II	
Contact maximum current rating	2 A AC 240 V 4 A DC 30 V resistive load 0.5 A DC 30 V inductive load (L/R = 40 ms)	
Contact minimum recommended rating	12 V 100 mA	
Contact type	Normally open	
Default contact condition	Closed when power applied and drive OK	
Update period	4 ms	

51	0 V
52	+24 Vdc
Size 6	
Nominal operating voltage	24.0 Vdc
Minimum continuous operating voltage	18.6 Vdc
Maximum continuous operating voltage	28.0 Vdc
Minimum startup voltage	18.4 Vdc
Maximum power supply requirement	40 W
Recommended fuse	4 A @ 50 Vdc
Size 7 to 10	
Nominal operating voltage	24.0 Vdc
Minimum continuous operating voltage	19.2 Vdc
Maximum continuous operating voltage	30 Vdc (IEC), 26 Vdc (UL)
Minimum startup voltage	21.6 Vdc
Maximum power supply requirement	60 W
Recommended fuse	4 A @ 50 Vdc

	<p>To prevent the risk of a fire hazard in the event of a fault, a fuse or other over-current protection must be installed in the relay circuit.</p>
WARNING	

4.15 SAFE TORQUE OFF (STO)

The SAFE TORQUE OFF function provides a means for preventing the drive from generating torque in the motor, with a very high level of integrity. It is suitable for incorporation into a safety system for a machine. It is also suitable for use as a conventional drive enable input.

The safety function is active when the STO input is in the logic-low state as specified in the control terminal specification. The function is defined according to EN 61800-5-2 and IEC 61800-5-2 as follows. (In these standards a drive offering safety-related functions is referred to as a PDS(SR)):

'Power, that can cause rotation (or motion in the case of a linear motor), is not applied to the motor. The PDS(SR) will not provide energy to the motor which can generate torque (or force in the case of a linear motor).'

This safety function corresponds to an uncontrolled stop in accordance with stop category 0 of IEC 60204-1.

The SAFE TORQUE OFF function makes use of the special property of an inverter drive with an induction motor, which is that torque cannot be generated without the continuous correct active behavior of the inverter circuit. All credible faults in the inverter power circuit cause a loss of torque generation.

The SAFE TORQUE OFF function is fail-safe, so when the SAFE TORQUE OFF input is disconnected the drive will not operate the motor, even if a combination of components within the drive has failed. Most component failures are revealed by the drive failing to operate. SAFE TORQUE OFF is also independent of the drive firmware. This meets the requirements of the following standards, for the prevention of operation of the motor.

Data as verified by TÜV Rheinland:

According to EN ISO 13849-1:

PL = e

Category = 4

MTTF_D = High

DC_{av} = High

Mission Time and Proof Test Interval = 20 years

The calculated MTTF_D for the complete STO function is:

STO1 2574 yr

According to EN 61800-5-2:

SIL = 3

PFH = $4.21 \times 10^{-11} \text{ h}^{-1}$

The SAFE TORQUE OFF input also meets the requirements of EN 81-1 (clause 12.7.3 b) as part of a system for preventing unwanted operation of the motor in a lift (elevator).

SAFE TORQUE OFF can be used to eliminate electro-mechanical contactors, including special safety contactors, which would otherwise be required for safety applications.

The function can be used in safety-related machines or systems which have been designed according to IEC 62061 or IEC 61508, or other standards which are compatible with IEC 61508, since the analysis and the integrity metrics used in EN 61800-5-2 are the same.

Note on response time of SAFE TORQUE OFF, and use with safety controllers with self-testing outputs.

SAFE TORQUE OFF has been designed to have a response time of greater than 1 ms, so that it is compatible with safety controllers whose outputs are subject to a dynamic test with a pulse width not exceeding 1 ms.

Note on the use of servo motors, other permanent-magnet motors, reluctance motors and salient-pole induction motors.

When the drive is disabled through SAFE TORQUE OFF, a possible (although highly unlikely) failure mode is for two power devices in the inverter circuit to conduct incorrectly.

This fault cannot produce a steady rotating torque in any AC motor. It produces no torque in a conventional induction motor with a cage rotor. If the rotor has permanent magnets and/or saliency, then a transient alignment torque may occur. The motor may briefly try to rotate by up to 180° electrical, for a permanent magnet motor, or 90° electrical, for a salient pole induction motor or reluctance motor. This possible failure mode must be allowed for in the machine design.



WARNING

The design of safety-related control systems must only be done by personnel with the required training and experience. The SAFE TORQUE OFF function will only ensure the safety of a machine if it is correctly incorporated into a complete safety system. The system must be subject to a risk assessment to confirm that the residual risk of an unsafe event is at an acceptable level for the application.



WARNING

SAFE TORQUE OFF inhibits the operation of the drive, this includes inhibiting braking. If the drive is required to provide both braking and SAFE TORQUE OFF in the same operation (e.g. for emergency stop) then a safety timer relay or similar device must be used to ensure that the drive is disabled a suitable time after braking. The braking function in the drive is provided by an electronic circuit which is not fail-safe. If braking is a safety requirement, it must be supplemented by an independent fail-safe braking mechanism.



WARNING

SAFE TORQUE OFF does not provide electrical isolation. The supply to the drive must be disconnected by an approved isolation device before gaining access to power connections.

With SAFE TORQUE OFF there are no single faults in the drive which can permit the motor to be driven. Therefore it is not necessary to have a second channel to interrupt the power connection, nor a fault detection circuit.

It is important to note that a single short-circuit from the SAFE TORQUE OFF input to a DC supply of approximately +24 V would cause the drive to be enabled. This can be excluded under EN ISO 13849-2 by the use of protected wiring. The wiring can be protected by either of the following methods:

- By placing the wiring in a segregated cable duct or other enclosure.
- or
- By providing the wiring with a grounded shield in a positive-logic grounded control circuit. The shield is provided to avoid a hazard from an electrical fault. It may be grounded by any convenient method; no special EMC precautions are required.



WARNING

It is essential to observe the maximum permitted voltage of 5 V for a safe low (disabled) state of SAFE TORQUE OFF. The connections to the drive must be arranged so that voltage drops in the 0 V wiring cannot exceed this value under any loading condition. It is strongly recommended that the SAFE TORQUE OFF circuit be provided with a dedicated 0 V conductor which should be connected to terminal 30 at the drive.

SAFE TORQUE OFF over-ride

The drive does not provide any facility to over-ride the SAFE TORQUE OFF function, for example for maintenance purposes.

For more information regarding the SAFE TORQUE OFF input, please see the *Control Techniques Safe Torque Off Engineering Guide* available for download from www.controltechniques.com.

5 Getting started

This chapter introduces the user interfaces, menu structure and security levels of the drive.

5.1 Understanding the display


The keypad can only be mounted on the drive.

5.1.1 KI-Keypad

The KI-Keypad display consists of two rows of text. The upper row shows the drive status or the menu and parameter number currently being viewed. The lower row of the display line shows the parameter value or the specific trip type. The last two characters on the first row may display special indications. If more than one of these indications is active then the indications are prioritized as shown in Table 5-2.


When the drive is powered up the lower row will show the power up parameter defined by *Parameter Displayed At Power-Up* (11.022).

Figure 5-1 KI-Keypad

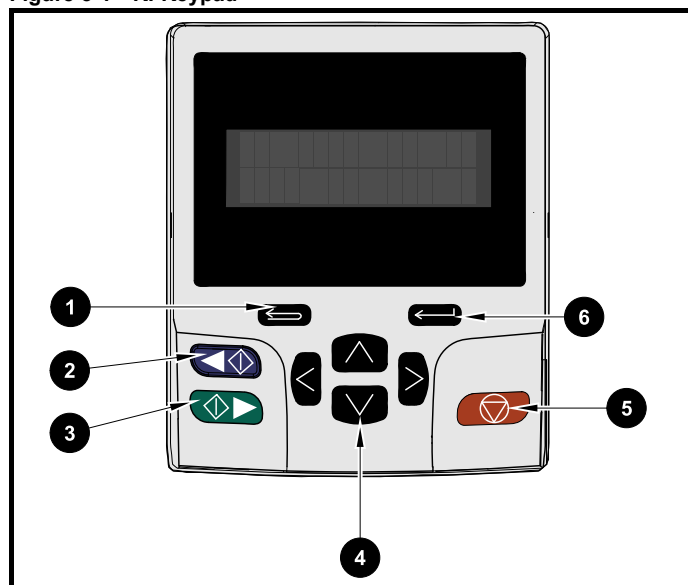

1. Escape button
2. Start reverse (Auxiliary button)
3. Start forward
4. Navigation keys (x4)
5. Stop / Reset (red) button
6. Enter button

NOTE




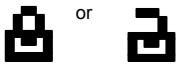



The red stop  button is also used to reset the drive.

The parameter value is correctly displayed in the lower row of the keypad display, see table below.

Table 5-1 Keypad display formats

Display formats	Value
IP Address	127.000.000.000
MAC Address	01ABCDEF2345
Time	12:34:56
Date	31-12-11 or 12-31-11
Version number	01.02.02.00
Character	ABCD
32 bit number with decimal point	21474836.47
16 bit binary number	0100001011100101

Table 5-2 Active action icon

Active action icon	Description	Row (1=top)	Priority in row
	Accessing non-volatile media card	1	1
	Alarm active	1	2
	Keypad real-time clock battery low	1	3
	Drive security active and locked or unlocked	1	4
	Motor map 2 active	2	1
	User program running	3	1
	Keypad reference active	4	1

5.2 Keypad operation

5.2.1 Control buttons

The keypad consists of:

- Navigation Keys - Used to navigate the parameter structure and change parameter values.
- Enter / Mode button - Used to toggle between parameter edit and view mode.
- Escape / Exit button - Used to exit from parameter edit or view mode. In parameter edit mode, if parameter values are edited and the exit button pressed the parameter value will be restored to the value it had on entry to edit mode.
- Start forward button - Use to provide a 'Run' command if keypad mode is selected.
- Start reverse button - Used to control the drive if keypad mode is selected and the reverse button is activated. If *Enable Auxiliary Key* (06.013) = 1, then the keypad reference is toggled between run forward and run reverse each time the button is pressed. If *Enable Auxiliary Key* (06.013) = 2, then the button functions as a run reverse key.
- Stop / Reset button - Used to reset the drive. In keypad mode can be used for 'Stop'.

NOTE


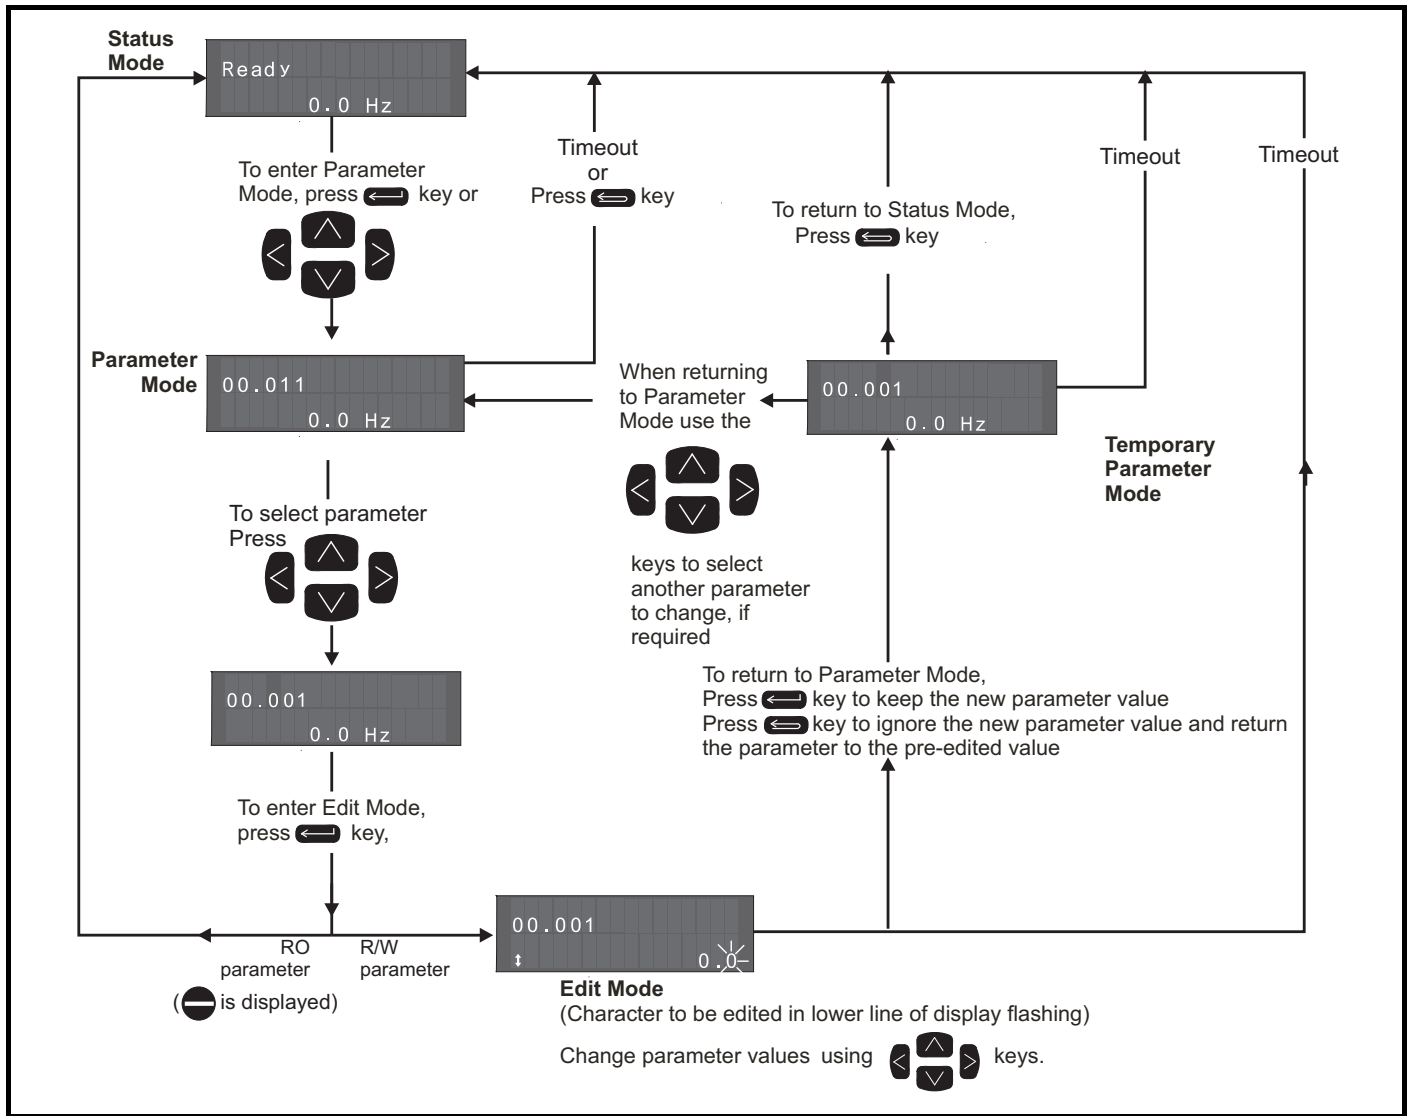
Low battery voltage is indicated by  low battery symbol on the keypad display. Refer to section 3.14.1 *Real time clock battery replacement* on page 58 for information on battery replacement.

Figure 5-2 overleaf shows an example on moving between menus and editing parameters.

Figure 5-2 Display modes



NOTE

The navigation keys can only be used to move between menus if Pr **00.049** has been set to show 'All Menus'. Refer to section 5.9 *Parameter access level and security* on page 104.

5.2.2 Quick access mode

The quick access mode allows direct access to any parameter without scrolling through menus and parameters.

To enter the quick access mode, press and hold the Enter button on the keypad while in 'parameter mode'.

Figure 5-3 Quick access mode



5.2.3 Keypad shortcuts


In 'parameter mode':

- If the up and down keypad buttons are pressed together, then the keypad display will jump to the start of the parameter menu being viewed, i.e. Pr **05.005** being viewed, when the above buttons pressed together will jump to Pr **05.000**.
- If the left and right keypad buttons are pressed together, then the keypad display will jump to the last viewed parameter in Menu 0.

In 'parameter edit mode':

- If the up and down keypad buttons are pressed together, then the parameter value of the parameter being edited will be set to 0.
- If the left and right keypad buttons are pressed together, the least significant digit (furthest right) will be selected on the keypad display for editing.

Figure 5-4 Mode examples

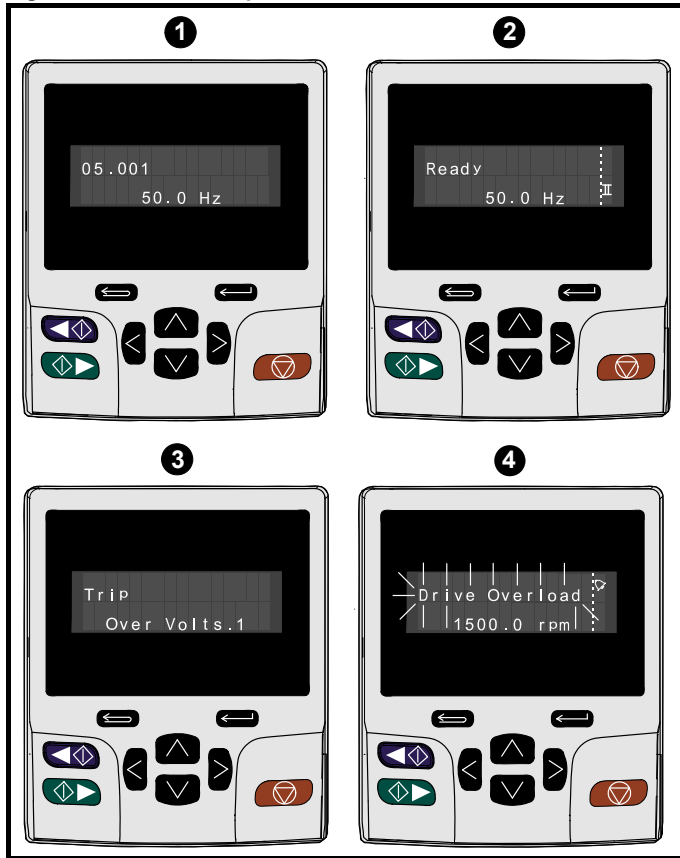

1. Parameter view mode: Read write or Read only

2. Status mode: Drive OK status

If the drive is ok and the parameters are not being edited or viewed, the upper row of the display will show one of the following:

- 'Inhibit', 'Ready' or 'Run'.

3. Status mode: Trip status

When the drive is in trip condition, the upper row of the display will indicate that the drive has tripped and the lower row of the display will show the trip code. For further information regarding trip codes, refer to Table 13-3 *Trip indications* on page 260.

4. Status mode: Alarm status

During an 'alarm' condition the upper row of the display flashes between the drive status (Inhibit, Ready or Run, depending on what is displayed) and the alarm.



Do not change parameter values without careful consideration; incorrect values may cause damage or a safety hazard.

WARNING

NOTE

When changing the values of parameters, make a note of the new values in case they need to be entered again.

NOTE


For new parameter-values to apply after the line power supply to the drive is interrupted, new values must be saved. Refer to section 5.7 *Saving parameters* on page 103.

5.3 Menu structure

The drive parameter structure consists of menus and parameters.

The drive initially powers up so that only Menu 0 can be viewed. The up and down arrow buttons are used to navigate between parameters and once Pr 00.049 has been set to 'All Menus' the left and right buttons are used to navigate between menus. For further information, refer to section 5.9 *Parameter access level and security* on page 104

Figure 5-5 Parameter navigation

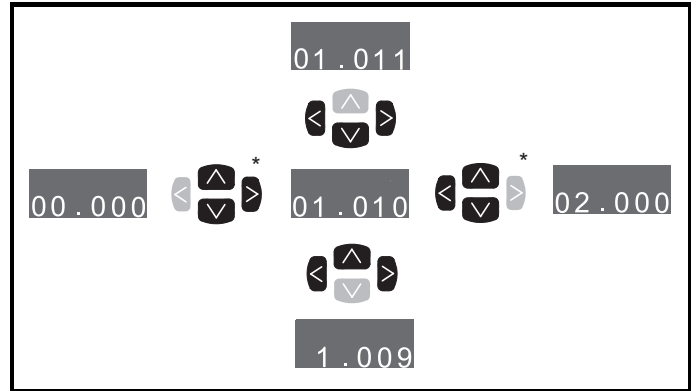


* Can only be used to move between menus if all menus have been enabled (Pr 00.049). Refer to section 5.9 *Parameter access level and security* on page 104.

The menus and parameters roll over in both directions.

i.e. if the last parameter is displayed, a further press will cause the display to rollover and show the first parameter.

When changing between menus the drive remembers which parameter was last viewed in a particular menu and thus displays that parameter.

Figure 5-6 Menu structure

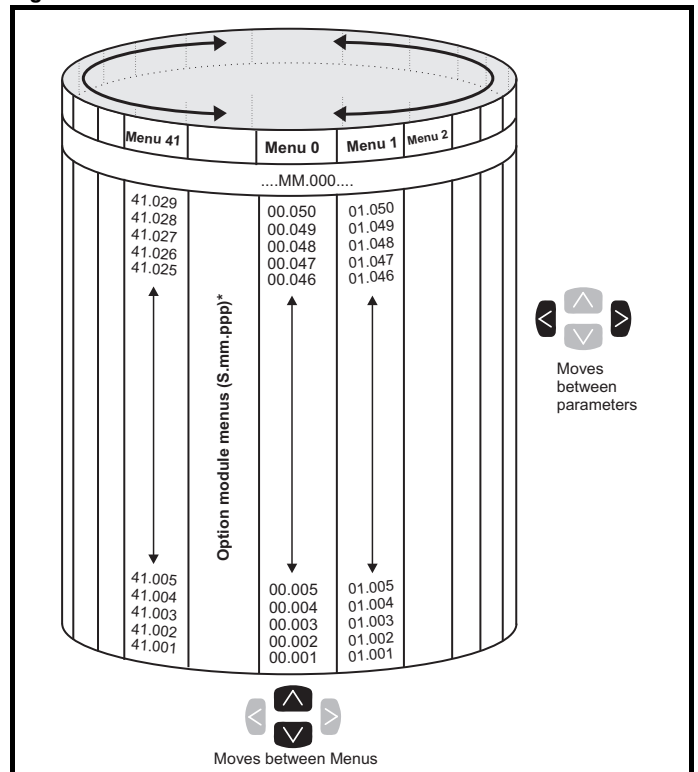

* The option module menus (S.mm.ppp) are only displayed if option modules are installed. Where S signifies the option module slot number and the mm.ppp signifies the menu and the parameter number of the option module's internal menus and parameter.


5.4 Menu 0

Menu 0 is used to bring together various commonly used parameters for basic easy set up of the drive. The parameters displayed in Menu 0 can be configured in Menu 22.

Appropriate parameters are copied from the advanced menus into Menu 0 and thus exist in both locations.

For further information, refer to Chapter 6 *Basic parameters* on page 106.

Figure 5-7 Menu 0 copying

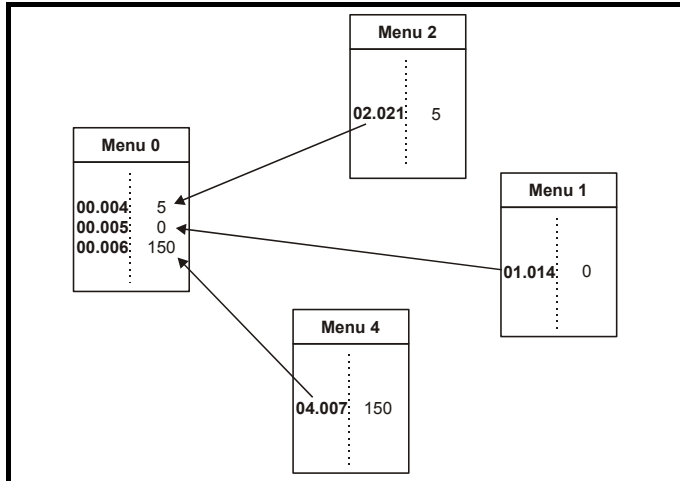

5.5 Advanced menus

The advanced menus consist of groups or parameters appropriate to a specific function or feature of the drive. Menus 0 to 41 can be viewed on the KI-Keypad.


The option module menus (S.mm.ppp) are only displayed if option modules are installed. Where S signifies the option module slot number and the mm.ppp signifies the menu and parameter number of the option module's internal menus and parameter.

Table 5-3 Advanced menu descriptions

Menu	Description
0	Commonly used basic set up parameters for quick / easy programming
1	Frequency / Speed reference
2	Ramps
3	Frequency slaving, speed feedback and speed control
4	Torque and current control
5	Motor control
6	Sequencer and clock
7	Analog I/O, Temperature monitoring
8	Digital I/O
9	Programmable logic, motorized pot, binary sum, timers and scope
10	Status and trips
11	Drive set-up and identification, serial communications
12	Threshold detectors and variable selectors
13	Standard motion control
14	User PID controller
15	Option module slot 1 set-up menu
16	Option module slot 2 set-up menu
17	Option module slot 3 set-up menu
18	General option module application menu 1
19	General option module application menu 2
20	General option module application menu 3
21	Second motor parameters
22	Menu 0 set-up
23	Not allocated
28	Reserved menu
29	Reserved menu
30	Onboard user programming application menu
Slot 1	Slot 1 option menus*
Slot 2	Slot 2 option menus*
Slot 3	Slot 3 option menus*

*Only displayed when the option modules are installed.

5.5.1 KI-Keypad set-up menu

To enter the keypad set-up menu press and hold the escape  button on the keypad from status mode. All the keypad parameters are saved to the keypad non-volatile memory when exiting from the keypad set-up menu.




To exit from the keypad set-up menu press the escape  or  or  button. Below are the keypad set-up parameters.

Table 5-4 KI-Keypad set-up parameters

Parameters		Range	Type
Keypad.00	Language	Classic English (0) English (1)	RW
Keypad.01	Show Units	Off (0), On (1)	RW
Keypad.02	Backlight Level	0 to 100 %	RW
Keypad.03	Keypad Date	01.01.10 to 31.12.99	RO
Keypad.04	Keypad Time	00:00:00 to 23:59:59	RO
Keypad.05	Show Raw Text Parameter Values	Off (0), On (1)	RW
Keypad.06	Software Version	00.00.00.00 to 99.99.99.99	RO

NOTE

It is not possible to access the keypad parameters via any communications channel.

5.5.2 Display messages

The following tables indicate the various possible mnemonics which can be displayed by the drive and their meaning.

Table 5-5 Status indications

Upper row string	Description	Drive output stage
Inhibit	The drive is inhibited and cannot be run. The SAFE TORQUE OFF signal is not applied to SAFE TORQUE OFF terminals or Pr 06.015 is set to 0. The other conditions that can prevent the drive from enabling are shown as bits in <i>Enable Conditions</i> (06.010)	Disabled
Ready	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active	Disabled
Stop	The drive is stopped / holding zero speed	Enabled
Run	The drive is active and running	Enabled
Scan	The drive is enabled in Regen mode and is trying to synchronize to the supply	Enabled
Supply Loss	Supply loss condition has been detected	Enabled
Deceleration	The motor is being decelerated to zero speed / frequency because the final drive run has been deactivated	Enabled
dc injection	The drive is applying dc injection braking	Enabled
Position	Positioning / position control is active during an orientation stop	Enabled
Trip	The drive has tripped and no longer controlling the motor. The trip code appears in the lower display	Disabled
Active	The Regen unit is enabled and synchronized to the supply	Enabled
Under Voltage	The drive is in the under voltage state either in low voltage or high voltage mode	Disabled
Heat	The motor pre-heat function is active	Enabled
Phasing	The drive is performing a 'phasing test on enable'	Enabled

5.5.3 Alarm indications

An alarm is an indication given on the display by alternating the alarm string with the drive status string on the upper row and showing the alarm symbol in the last character in the upper row. Alarms strings are not displayed when a parameter is being edited, but the user will still see the alarm character on the upper row.

Table 5-6 Alarm indications

Alarm string	Description
Brake Resistor	Brake resistor overload. <i>Braking Resistor Thermal Accumulator</i> (10.039) in the drive has reached 75.0 % of the value at which the drive will trip.
Motor Overload	<i>Motor Protection Accumulator</i> (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
Ind Overload	Regen inductor overload. <i>Inductor Protection Accumulator</i> (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
Drive Overload	Drive over temperature. <i>Percentage Of Drive Thermal Trip Level</i> (07.036) in the drive is greater than 90 %.
Auto Tune	The autotune procedure has been initialized and an autotune in progress.
Limit Switch	Limit switch active. Indicates that a limit switch is active and that is causing the motor to be stopped.

Table 5-7 Option module and NV media card and other status indications at power-up

First row string	Second row string	Status
Booting	Parameters	Parameters are being loaded
Drive parameters are being loaded from a NV Media Card		
Booting	User Program	User program being loaded
User program is being loaded from a NV Media Card to the drive		
Booting	Option Program	User program being loaded
User program is being loaded from a NV Media Card to the option module in slot X		
Writing To	NV Card	Data being written to NV Media Card
Data is being written to a NV Media Card to ensure that its copy of the drive parameters is correct because the drive is in Auto or Boot mode		
Waiting For	Power System	Waiting for power stage
The drive is waiting for the processor in the power stage to respond after power-up		
Waiting For	Options	Waiting for an option module
The drive is waiting for the options modules to respond after power-up		
Uploading From	Options	Loading parameter database
At power-up it may be necessary to update the parameter database held by the drive because an option module has changed or because an applications module has requested changes to the parameter structure. This may involve data transfer between the drive an option modules. During this period 'Uploading From Options' is displayed		



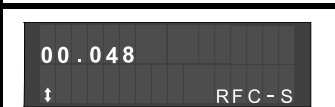
5.6 Changing the operating mode

Changing the operating mode returns all parameters to their default value, including the motor parameters. *User security status* (00.049) and *User security code* (00.034) are not affected by this procedure).


Procedure

Use the following procedure only if a different operating mode is required:

1. Ensure the drive is not enabled, i.e. terminal 31 is open or Pr **06.015** is OFF (0)
2. Enter either of the following values in Pr **mm.000**, as appropriate:
1253 (50Hz AC supply frequency)
1254 (60Hz AC supply frequency)
3. Change the setting of Pr **00.048** as follows:

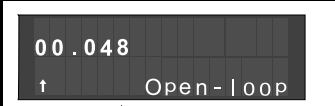Pr 00.048 setting		Operating mode
	1	Open-loop
	2	RFC-A
	3	RFC-S


The figures in the second column apply when serial communications are used.

4. Either:
 - Press the red  reset button
 - Toggle the reset digital input
 - Carry out a drive reset through serial communications by setting Pr **10.038** to 100.

NOTE


Entering 1253 or 1254 in Pr **mm.000** will only load defaults if the setting of Pr **00.048** has been changed.

5.7 Saving parameters

When changing a parameter in Menu 0, the new value is saved when pressing the  Enter button to return to parameter view mode from parameter edit mode.

If parameters have been changed in the advanced menus, then the change will not be saved automatically. A save function must be carried out.

Procedure


1. Select 'Save Parameters*' in Pr **mm.000** (alternatively enter a value of 1000* in Pr **mm.000**)
2. Either:
 - Press the red  reset button
 - Toggle the reset digital input, or
 - Carry out a drive reset through serial communications by setting Pr **10.038** to 100

* If the drive is in the under voltage state (i.e. when the control terminal 1 & 2 are being supplied from a low voltage DC supply) a value of 1001 must be entered into Pr **mm.000** to perform a save function.

5.8 Restoring parameter defaults

Restoring parameter defaults by this method saves the default values in the drives memory. *User security status* (00.049) and *User security code* (00.034) are not affected by this procedure).

Procedure

1. Ensure the drive is not enabled, i.e. terminal 31 is open or Pr **06.015** is OFF (0)
2. Select 'Reset 50 Hz Defs' or 'Reset 60 Hz Defs' in Pr **mm.000**. (alternatively, enter 1233 (50 Hz settings) or 1244 (60 Hz settings) in Pr **mm.000**).
3. Either:
 - Press the red  reset button
 - Toggle the reset digital input
 - Carry out a drive reset through serial communications by setting Pr **10.038** to 100

5.9 Parameter access level and security

The parameter access level determines whether the user has access to Menu 0 only or to all the advanced menus (Menus 1 to 41) in addition to Menu 0.

The User Security determines whether the access to the user is read only or read write.

Both the User Security and Parameter Access Level can operate independently of each other as shown in Table 5-8.

Table 5-8 Parameter access level and security

User security status (11.044)	Access level	User security	Menu 0 status	Advanced menu status
0	Menu 0	Open	RW	Not visible
		Closed	RO	Not visible
1	All Menus	Open	RW	RW
		Closed	RO	RO
2	Read-only Menu 0	Open	RO	Not visible
		Closed	RO	Not visible
3	Read-only	Open	RO	RO
		Closed	RO	RO
4	Status only	Open	Not visible	Not visible
		Closed	Not visible	Not visible
5	No access	Open	Not visible	Not visible
		Closed	Not visible	Not visible

The default settings of the drive are Parameter Access Level Menu 0 and user Security Open i.e. read / write access to Menu 0 with the advanced menus not visible.

5.9.1 User Security Level / Access Level

The drive provides a number of different levels of security that can be set by the user via *User Security Status* (11.044); these are shown in the table below.

User Security Status (Pr 11.044)	Description
Menu 0 (0)	All writable parameters are available to be edited but only parameters in Menu 0 are visible
All menus (1)	All parameters are visible and all writable parameters are available to be edited
Read- only Menu 0 (2)	Access is limited to Menu 0 parameters only. All parameters are read-only
Read-only (3)	All parameters are read-only however all menus and parameters are visible
Status only (4)	The keypad remains in status mode and no parameters can be viewed or edited
No access (5)	The keypad remains in status mode and no parameters can be viewed or edited. Drive parameters cannot be accessed via a comms/ fieldbus interface in the drive or any option module

5.9.2 Changing the User Security Level /Access Level


The security level is determined by the setting of Pr **00.049** or Pr **11.044**. The Security Level can be changed through the keypad even if the User Security Code has been set.


5.9.3 User Security Code

The User Security Code, when set, prevents write access to any of the parameters in any menu.


Setting User Security Code


Enter a value between 1 and 2147483647 in Pr **00.034** and press the

 button; the security code has now been set to this value. In order to activate the security, the Security level must be set to desired level in Pr **00.049**. When the drive is reset, the security code will have been

activated and the drive returns to Menu 0 and the  symbol is displayed in the right hand corner of the keypad display. The value of Pr **00.034** will return to 0 in order to hide the security code.


Unlocking User Security Code

Select a parameter that need to be edited and press the  button, the upper display will now show 'Security Code'. Use the arrow buttons

to set the security code and press the  button. With the correct security code entered, the display will revert to the parameter selected in edit mode.

If an incorrect security code is entered, the following message 'Incorrect security code' is displayed, then the display will revert to parameter view mode.

Disabling User Security

Unlock the previously set security code as detailed above. Set Pr **00.034** to 0 and press the  button. The User Security has now been disabled, and will not have to be unlocked each time the drive is powered up to allow read / write access to the parameters.

5.10 Displaying parameters with non-default values only

By selecting 'Show non-default' in Pr **mm.000** (Alternatively, enter 12000 in Pr **mm.000**), the only parameters that will be visible to the user will be those containing a non-default value. This function does not require a drive reset to become active. In order to deactivate this function, return to Pr **mm.000** and select 'No action' (alternatively enter a value of 0). Please note that this function can be affected by the access level enabled, refer to section 5.9 *Parameter access level and security* on page 104 for further information regarding access level.

5.11 Displaying destination parameters only

By selecting 'Destinations' in Pr **mm.000** (Alternatively enter 12001 in Pr **mm.000**), the only parameters that will be visible to the user will be destination parameters. This function does not require a drive reset to become active. In order to deactivate this function, return to Pr **mm.000** and select 'No action' (alternatively enter a value of 0).

Please note that this function can be affected by the access level enabled, refer to section 5.9 *Parameter access level and security* on page 104 for further information regarding access level.

5.12 Communications

The Unidrive M600 drive offers a 2 wire 485 interface. This enables the drive set-up, operation and monitoring to be carried out with a PC or controller if required.

5.12.1 485 Serial communications

The EIA485 option provides two parallel RJ45 connectors allowing easy daisy chaining. The drive only supports Modbus RTU protocol.

The serial communications port of the drive is a RJ45 socket, which is isolated from the power stage and the other control terminals (see section 4.13 *Communications connections* on page 91 for connection and isolation details).

The communications port applies a 2 unit load to the communications network.

USB/EIA232 to EIA485 Communications

An external USB/EIA232 hardware interface such as a PC cannot be used directly with the 2-wire EIA485 interface of the drive. Therefore a suitable converter is required.

Suitable USB to EIA485 and EIA232 to EIA485 isolated converters are available from Control Techniques as follows:

- CT USB Comms cable (CT Part No. 4500-0096)
- CT EIA232 Comms cable (CT Part No. 4500-0087)

NOTE

When using the CT EIA232 Comms cable the available baud rate is limited to 19.2 k baud.

When using one of the above converters or any other suitable converter with the drive, it is recommended that no terminating resistors be connected on the network. It may be necessary to 'link out' the terminating resistor within the converter depending on which type is used. The information on how to link out the terminating resistor will normally be contained in the user information supplied with the converter.

Serial communications set-up parameters

The following parameters need to be set according to the system requirements.

Serial communications set-up parameters		
<i>Serial Mode</i> (11.024) {00.035}	8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 2 NP (8), 7 1 NP (9), 7 1 EP (10), 7 1 OP (11), 7 2 NP M (12), 7 1 NP M (13), 7 1 EP M (14), 7 1 OP M (15)	The drive only supports the Modbus RTU protocol and is always a slave. This parameter defines the supported data formats used by the 485 comms port (if installed) on the drive. This parameter can be changed via the drive keypad, via a option module or via the comms interface itself.
<i>Serial Baud Rate</i> (11.025) {00.036}	300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600(8), 76800(9), 115200 (10)	This parameter can be changed via the drive keypad, via a option module or via the comms interface itself. If it is changed via the comms interface, the response to the command uses the original baud rate. The master should wait at least 20 ms before sending a new message using the new baud rate.
<i>Serial Address</i> (11.023) {00.037}	1 to 247	This parameter defines the serial address and an addresses between 1 and 247 are permitted.

6 Basic parameters

Menu 0 is used to bring together various commonly used parameters for basic easy set up of the drive. All the parameters in Menu 0 appear in other menus in the drive (denoted by {...}). Menus 22 can be used to configure the parameters in Menu 0.


6.1 Menu 0: Basic parameters


Parameter			Range			Default			Type					
			OL	RFC-A	RFC-S	OL	RFC-A	RFC-S						
00.001	Minimum Reference Clamp	{01.007}	±VM_NEGATIVE_REF_CLAMP1 Hz / rpm			0 Hz / rpm			RW	Num				US
00.002	Maximum Reference Clamp1	{01.006}	±VM_POSITIVE_REF_CLAMP1 Hz / rpm			50 Hz: 50.0 Hz 60 Hz: 60.0 Hz	50 Hz: 1500.0 rpm 60 Hz: 1800.0 rpm		RW	Num				US
00.003	Acceleration Rate 1	{02.011}	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm		5.0 s/100 Hz		2.000 s/1000 rpm		RW	Num			US
00.004	Deceleration Rate 1	{02.021}	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm		10.0 s/100 Hz		2.000 s/1000 rpm		RW	Num			US
00.005	Reference Selector	{01.014}	A1 A2 (0), A1 Preset (1), A2 Preset (2) Preset (3), Keypad (4), Precision (5) Keypad Ref (6)			A1 A2 (0)			RW	Txt				US
00.006	Symmetrical Current Limit	{04.007}	±VM_MOTOR1_CURRENT_LIMIT %			165.0 %	175.0 %		RW	Num		RA		US
00.007	Open-loop Control Mode / Action On Enable	{05.014}	Ur S (0), Ur (1), Fixed (2), Ur Auto (3), Ur I (4), Square (5), Current 1P (6)			Ur I (4)			RW	Txt				US
	Speed Controller Proportional Gain Kp1	{03.010}				0.0000 to 200.000 s/rad		0.0300 s/rad		RW	Num			US
00.008	Low Frequency Voltage Boost	{05.015}	0.0 to 25.0 %			3.0 %				RW	Num			US
	Speed Controller Integral Gain Ki1	{03.011}				0.00 to 655.35 s ² /rad		0.10 s ² /rad		RW	Num			US
00.009	Dynamic V to F Select	{05.013}	Off (0) or On (1)			Off (0)			RW	Bit				US
	Speed Controller Differential Feedback Gain Kd 1	{03.012}				0.00000 to 0.65535 1/rad		0.00000 1/rad		RW	Num			US
00.010	Motor Rpm	{05.004}	±180000 rpm						RO	Num	ND	NC	PT	FI
	Speed Feedback	{03.002}				±VM_SPEED rpm			RO	Num	ND	NC	PT	FI
00.011	Output Frequency	{05.001}	±VM_SPEED_FREQ_REF Hz						RO	Num	ND	NC	PT	FI
	P1 Position	{03.029}				0 to 65535			RO	Num	ND	NC	PT	FI
00.012	Current Magnitude	{04.001}	±VM_DRIVE_CURRENT_UNIPOLAR A						RO	Bit	ND	NC	PT	FI
00.013	Torque Producing Current	{04.002}	±VM_DRIVE_CURRENT A						RO	Bit	ND	NC	PT	FI
00.014	Torque Mode Selector	{04.011}	0 or 1	0 to 5		0			RW	Num				US
00.015	Ramp Mode Select	{02.004}	Fast (0), Standard (1), Std boost (2)	Fast (0), Standard (1)		Standard (1)			RW	Txt				US
00.016	Ramp Enable	{02.002}	Off (0) or On (1)					On (1)		RW	Bit			US
00.017	Digital Input 6 Destination	{08.026}	0.000 to 59.999			06.031				RW	Num	DE		PT US
	Current Reference Filter 1 Time Constant	{04.012}				0.0 to 25.0 ms		1.0 ms		RW	Num			US
00.019	Analog Input 2 Mode	{07.011}	4-20 mA Low (-4), 20-4 mA Low (-3), 4-20 mA Hold (-2), 20-4 mA Hold (-1), 0-20 mA (0), 20-0 mA (1), 4-20 mA Trip (2), 20-4 mA Trip (3), 4-20 mA (4), 20-4 mA (5), Volt (6)			Volt (6)			RW	Txt				US
00.020	Analog Input 2 Destination	{07.014}	00.000 to 59.999			01.037				RW	Num	DE		PT US
00.021	Analog Input 3 Mode	{07.015}	Volt (6), Therm Short Cct (7), Thermistor (8), Therm No Trip (9)			Volt (6)			RW	Txt				US
00.022	Bipolar Reference Enable	{01.010}	Off (0) or On (1)			Off (0)			RW	Bit				US
00.023	Jog Reference	{01.005}	0.0 to 400.0 Hz	0.0 to 4000.0 rpm		0.0 Hz / rpm			RW	Num				US
00.024	Preset Reference 1	{01.021}	±VM_SPEED_FREQ_REF Hz / rpm			0.0 Hz / rpm			RW	Num				US
00.025	Preset Reference 2	{01.022}	±VM_SPEED_FREQ_REF Hz / rpm			0.0 Hz / rpm			RW	Num				US
00.026	Preset Reference 3	{01.023}	±VM_SPEED_FREQ_REF Hz			0.0 Hz				RW	Num			US
	Overspeed Threshold	{03.008}				0 to 40000 rpm		0 rpm		RW	Num			US
00.027	Preset Reference 4	{01.024}	±VM_SPEED_FREQ_REF Hz			0.0 Hz				RW	Num			US
00.028	Enable Auxiliary Key	{06.013}	Disabled (0), Forward / Reverse (1), Reverse (2)			Disabled (0)			RW	Num				US
00.029	NV Media Card Data Previously Loaded	{11.036}	0 to 999			0			RO	Num		NC	PT	
00.030	Parameter Cloning	{11.042}	None (0), Read (1), Program (2), Auto (3), Boot (4)			None (0)			RW	Txt		NC		US
00.031	Rated Voltage	{11.033}	200 V (0), 400 V (1), 575 V (2), 690 V (3)						RO	Txt	ND	NC	PT	
00.032	Maximum Heavy Duty Rating	{11.032}	0.000 to 99999.999 A						RO	Num	ND	NC	PT	

Parameter			Range			Default			Type					
			OL	RFC-A	RFC-S	OL	RFC-A	RFC-S						
00.033	Catch A Spinning Motor	{06.009}	Disable (0), Enable (1), Fwd Only (2), Rev Only (3)			Disable (0)			RW	Txt				US
	Motor Parameter Adaptive Control	{05.016}		0 to 2			0		RW	Num				US
00.034	User Security Code	{11.030}	0 to 2147483647			0			RW	Num	ND	NC	PT	US
00.035	Serial Mode	{11.024}	8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 2 NP (8), 7 1 NP (9), 7 1 EP (10), 7 1 OP (11), 7 2 NP M (12), 7 1 NP M (13), 7 1 EP M (14), 7 1 OP M (15)			8 2 NP (0)			RW	Txt				US
00.036	Serial Baud Rate	{11.025}	300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 76800 (9), 115200 (10)			19200 (6)			RW	Txt				US
00.037	Serial Address	{11.023}	1 to 247			1			RW	Num				US
00.038	Current Controller Kp Gain	{04.013}	0 to 30000			20	150		RW	Num				US
00.039	Current Controller Ki Gain	{04.014}	0 to 30000			40	2000		RW	Num				US
00.040	Auto-tune	{05.012}	0 to 2	0 to 5	0 to 6	0			RW	Num		NC		
00.041	Maximum Switching Frequency	{05.018}	2 kHz (0), 3 kHz (1), 4 kHz (2), 6 kHz (3), 8 kHz (4), 12 kHz (5), 16 kHz (6)			3 kHz (1)			RW	Txt		RA		US
00.042	Number Of Motor Poles	{05.011}	Automatic (0) to 480 Poles (240)			Automatic (0)		6 Poles (3)	RW	Num				US
00.043	Rated Power Factor	{05.010}	0.000 to 1.000			0.850			RW	Num		RA		US
00.044	Rated Voltage	{05.009}	±VM_AC_VOLTAGE_SET V			200V drive: 230V 50Hz default 400V drive: 400V 60Hz default 400V drive: 460V 575V drive: 575V 690V drive: 690V			RW	Num		RA		US
00.045	Rated Speed	{05.008}	0 to 33000 rpm	0.00 to 33000.00 rpm	0.00 to 33000.00 rpm	Eur - 1500 rpm USA - 1800 rpm	Eur - 1450.00 rpm USA - 1750.00 rpm	3000.00 rpm	RW	Num				US
00.046	Rated Current	{05.007}	±VM_RATED_CURRENT A			Maximum Heavy Duty Rating (11.032) A			RW	Num		RA		US
00.047	Rated Frequency	{05.006}	0.0 to 550.0 Hz			50Hz: 50.0 60Hz: 60.0			RW	Num				US
	Volts per 1000 rpm	{05.033}				0 to 10000 V / 1000 rpm			98 V / 1000 rpm	RW	Num			US
00.048	User Drive Mode	{11.031}	Open-loop (1), RFC-A (2), RFC-S (3), Regen (4)			Open-loop (1)	RFC-A (2)	RFC-S (3)	RW	Txt	ND	NC	PT	
00.049	User Security Status	{11.044}	Menu 0 (0), All Menus (1), Read-only Menu 0 (2), Read-only (3), Status Only (4), No Access (5)			Menu 0 (0)			RW	Txt	ND		PT	
00.050	Software Version	{11.029}	0 to 99999999						RO	Num	ND	NC	PT	
00.051	Action On Trip Detection	{10.037}	00000 to 11111			00000			RW	Bin				US
00.052	Reset Serial Communications	{11.020}	Off (0) or On (1)			Off (0)			RW	Bit	ND	NC		
00.053	Motor Thermal Time Constant 1	{04.015}	1.0 to 3000.0 s			89.0 s			RW	Num				US
00.054	RFC Low Speed Mode	{05.064}			Injection (0), Non-salient (1)			Non-salient (1)	RW	Txt				US
00.055	Low Speed Sensorless Mode Current	{05.071}			0.0 to 1000.0 %			20.0 %	RW	Num		RA		US
00.056	No-load Lq	{05.072}			0.000 to 500.000 mH			0.000 mH	RW	Num		RA		US
00.057	Iq Test Current For Inductance Measurement	{05.075}			0 to 200 %			100 %	RW	Num				US
00.058	Phase Offset At Iq Test Current	{05.077}			±90.0 °			0.0 °	RW	Num		RA		US
00.059	Lq At The Defined Iq Test Current	{05.078}			0.000 to 500.000 mH			0.000 mH	RW	Num		RA		US
00.060	Id Test Current for Inductance Measurement	{05.082}			-100 to 0 %			-50 %	RW	Num				US
00.061	Lq At The Defined Id Test Current	{05.084}			0.000 to 500.000 mH			0.000 mH	RW	Num		RA		US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter						

Figure 6-1 Menu 0 logic diagram

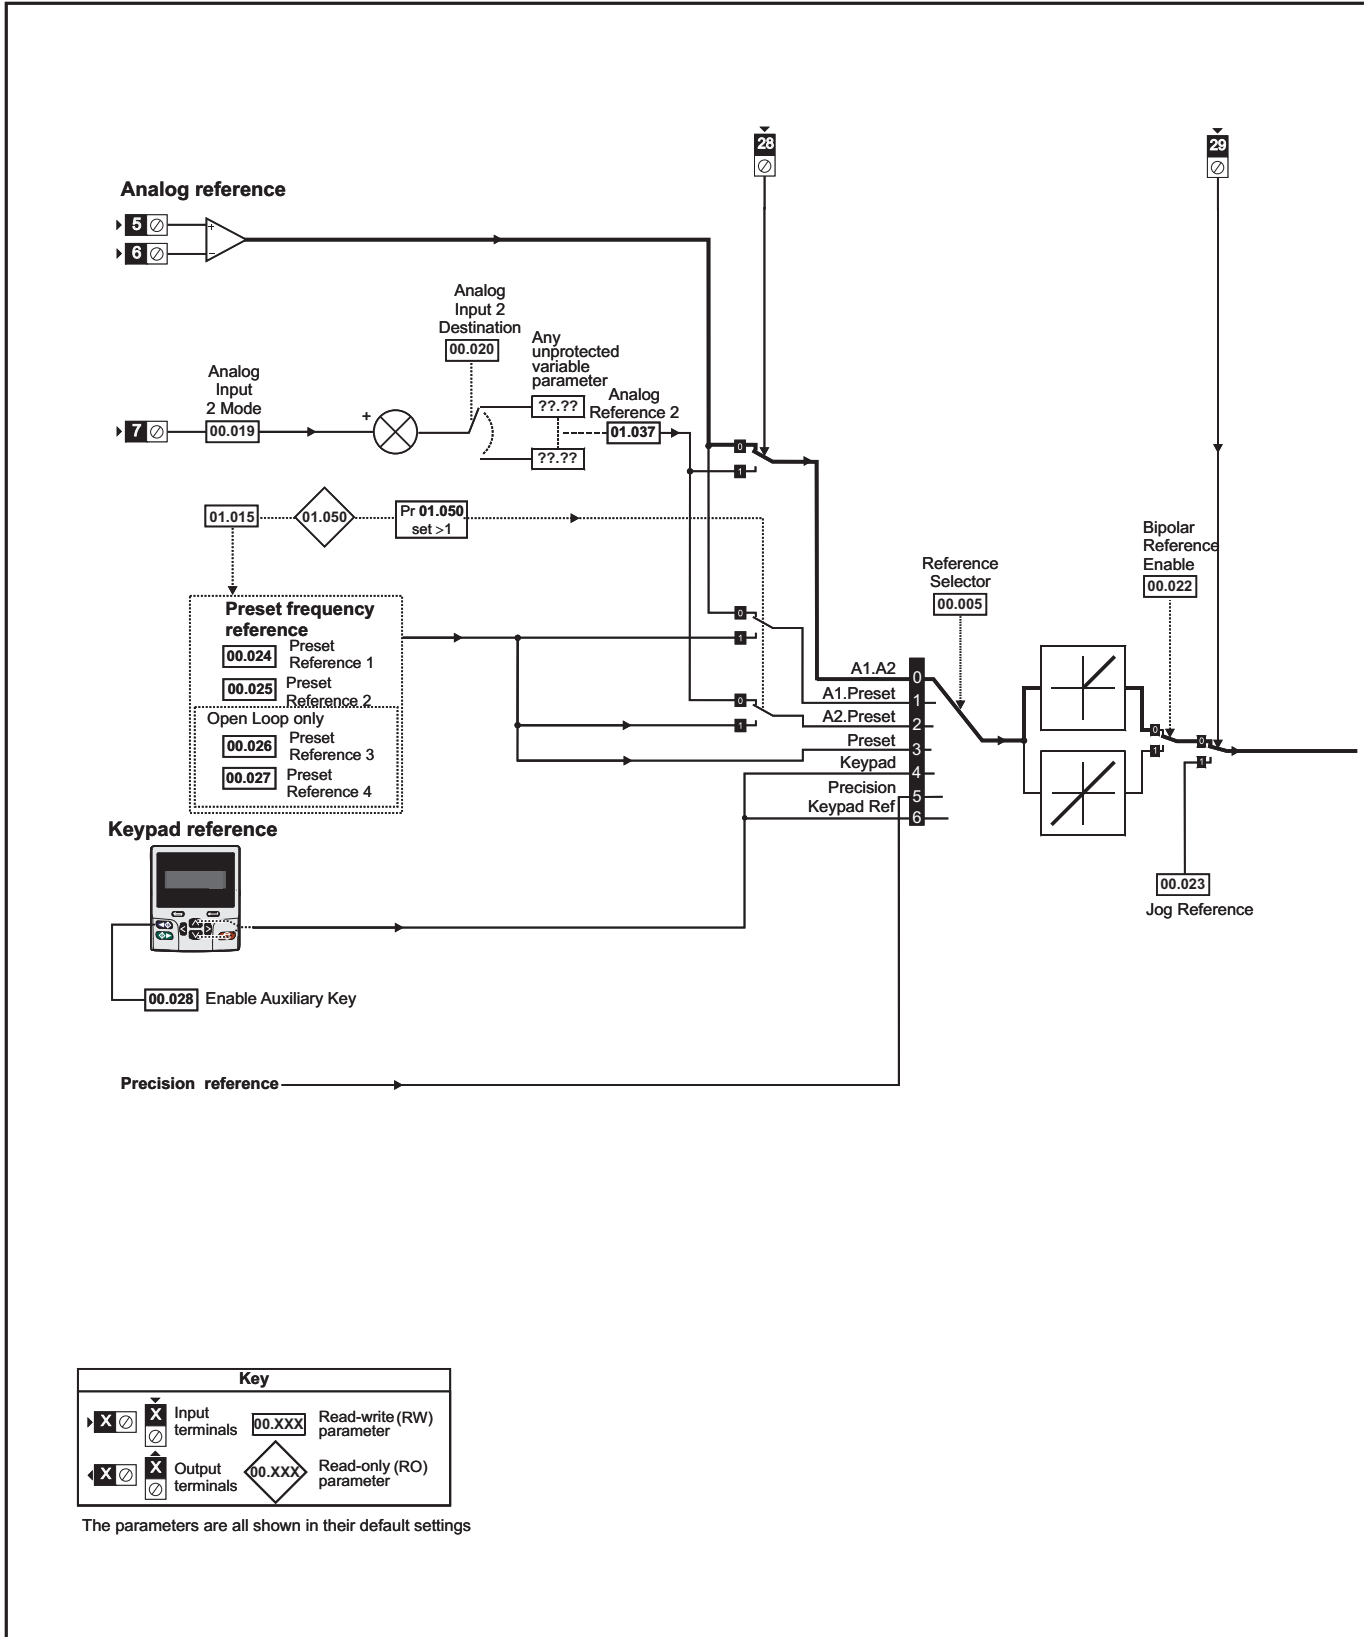

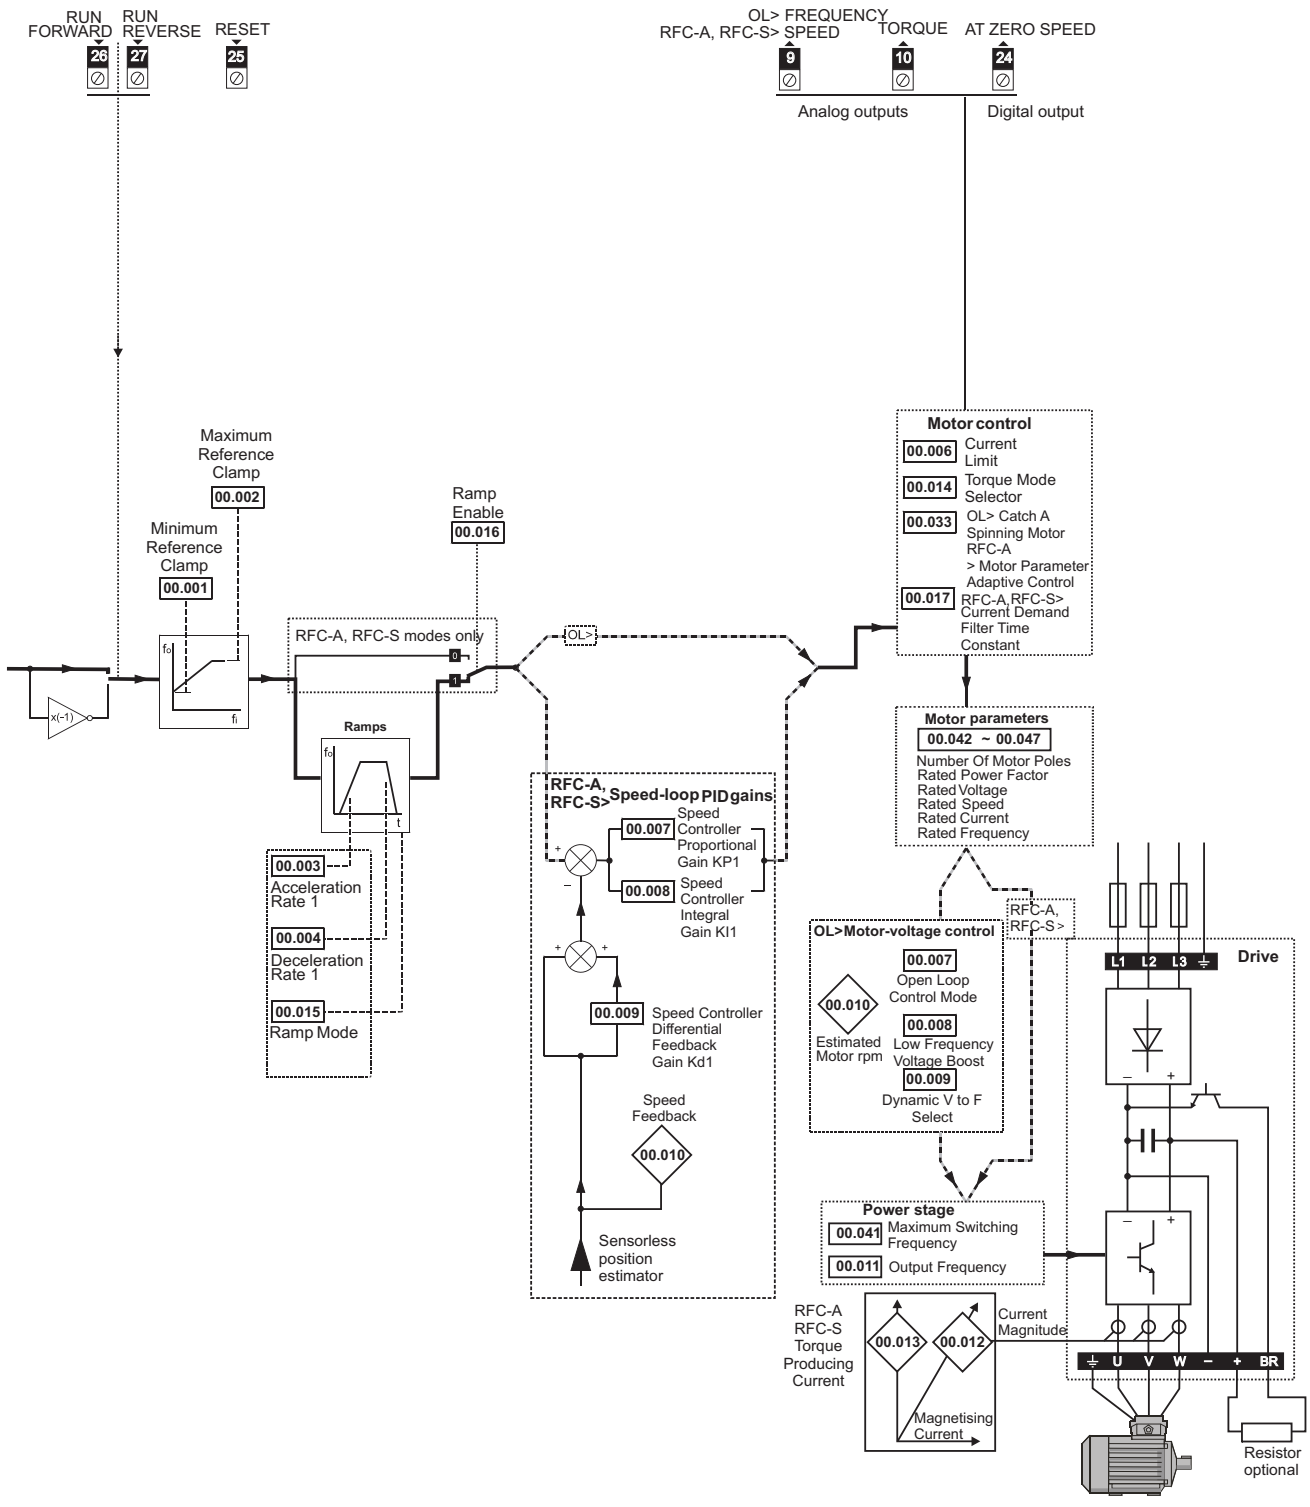

6.2 Parameter descriptions

6.2.1 Pr mm.000

Pr **mm.000** is available in all menus, commonly used functions are provided as text strings in Pr **mm.000** shown in Table 6-1. The functions in Table 6-1 can also be selected by entering the appropriate numeric values (as shown in Table 6-2) in Pr **mm.000**. For example, enter 7001 in Pr **mm.000** to erase the file in NV media card location 001.

Table 6-1 Commonly used functions in xx.000

Value	Equivalent value	String	Action
0	0	[No Action]	
1000	1	[Save parameters]	Save parameters when under voltage is not active and low voltage threshold is not active
6001	2	[Load file 1]	Load the drive parameters or user program file from NV media card file 001
4001	3	[Save to file 1]	Transfer the drive parameters to parameter file 001
6002	4	[Load file 2]	Load the drive parameters or user program file from NV media card file 002
4002	5	[Save to file 2]	Transfer the drive parameters to parameter file 002
6003	6	[Load file 3]	Load the drive parameters or user program file from NV media card file 003
4003	7	[Save to file 3]	Transfer the drive parameters to parameter file 003
12000	8	[Show non-default]	Displays parameters that are different from defaults
12001	9	[Destinations]	Displays parameters that are set
1233	10	[Reset 50Hz Defs]	Load parameters with standard (50 Hz) defaults
1244	11	[Reset 60Hz Defs]	Load parameters with US (60 Hz) defaults
1070	12	[Reset modules]	Reset all option modules
11001	13	[Read Enc. NP P1]	No function
11051	14	[Read Enc. NP P2]	

Table 6-2 Functions in Pr mm.000

Value	Action
1000	Save parameters when <i>Under Voltage Active</i> (Pr 10.016) is not active and <i>Low Under Voltage Threshold Select</i> mode (Pr 06.067 = Off) is not active.
1001	Save parameter under all conditions
1070	Reset all option modules
1233	Load standard (50 Hz) defaults
1234	Load standard (50 Hz) defaults to all menus except option module menus (i.e 15 to 20 and 24 to 28)
1244	Load US (60 Hz) defaults
1245	Load US (60 Hz) defaults to all menus except option module menus (i.e 15 to 20 and 24 to 28)
1253	Change drive mode and load standard (50 Hz) defaults
1254	Change drive mode and load US (60 Hz) defaults
1255	Change drive mode and load standard (50 Hz) defaults except for menus 15 to 20 and 24 to 28
1256	Change drive mode and load US (60 Hz) defaults except for menus 15 to 20 and 24 to 28
1299	Reset {Stored HF} trip.
2001*	Create a boot file on a non-volatile media card based on the present drive parameters including all Menu 20 parameters
4yyy*	NV media card: Transfer the drive parameters to parameter file xxx
5yyy*	NV media card: Transfer the onboard user program to onboard user program file xxx
6yyy*	NV media card: Load the drive parameters from parameter file xxx or the onboard user program from onboard user program file xxx
7yyy*	NV media card: Erase file xxx
8yyy*	NV Media card: Compare the data in the drive with file xxx
9555*	NV media card: Clear the warning suppression flag
9666*	NV media card: Set the warning suppression flag
9777*	NV media card: Clear the read-only flag
9888*	NV media card: Set the read-only flag
9999*	NV media card: Erase and format the NV media card
12000**	Only display parameters that are different from their default value. This action does not require a drive reset.
12001**	Only display parameters that are used to set-up destinations (i.e. DE format bit is 1). This action does not require a drive reset.
40yyy	Back-up all drive data.
60yyy	Load all drive data.

* See Chapter 9 *NV Media Card Operation* on page 154 for more information on these functions.

** These functions do not require a drive reset to become active. All other functions require a drive reset to initiate the function.

To allow easy access to some commonly used functions, refer to the table overleaf. Equivalent values and strings are also provided in the table above.

6.3 Full descriptions

Table 6-3 Key to parameter table coding

Coding	Attribute
RW	Read/Write: can be written by the user
RO	Read only: can only be read by the user
Bit	1 bit parameter. 'On' or 'Off' on the display
Num	Number: can be uni-polar or bi-polar
Txt	Text: the parameter uses text strings instead of numbers.
Bin	Binary parameter
IP	IP Address parameter
Mac	Mac Address parameter
Date	Date parameter
Time	Time parameter
Chr	Character parameter
FI	Filtered: some parameters which can have rapidly changing values are filtered when displayed on the drive keypad for easy viewing.
DE	Destination: This parameter selects the destination of an input or logic function.
RA	Rating dependent: this parameter is likely to have different values and ranges with drives of different voltage and current ratings. Parameters with this attribute will be transferred to the destination drive by non-volatile storage media when the rating of the destination drive is different from the source drive and the file is a parameter file. However, the values will be transferred if only the current rating is different and the file is a difference from default type file.
ND	No default: The parameter is not modified when defaults are loaded
NC	Not copied: not transferred to or from non-volatile media during copying.
PT	Protected: cannot be used as a destination.
US	User save: parameter saved in drive EEPROM when the user initiates a parameter save.
PS	Power-down save: parameter automatically saved in drive EEPROM when the under volts (UV) trip occurs.

6.3.1 Parameter x.00

00.000 {mm.000} Parameter zero					
RW	Num	ND	NC	PT	US
↕	0 to 65,535				

6.3.2 Speed limits

00.001 {01.007} Minimum Reference Clamp					
RW	Num	ND	NC	PT	US
OL	±VM_NEGATIVE_REF_CLAMP1 Hz / rpm	↕	⇒	0.0 Hz	
RFC-A				0.0 rpm	
RFC-S					

(When the drive is jogging, [00.001] has no effect.)

Open-loop

Set Pr **00.001** at the required minimum output frequency of the drive for both directions of rotation. The drive speed reference is scaled between Pr **00.001** and Pr **00.002**. [00.001] is a nominal value; slip compensation may cause the actual frequency to be higher.

RFC-A / RFC-S

Set Pr **00.001** at the required minimum motor speed for both directions of rotation. The drive speed reference is scaled between Pr **00.001** and Pr **00.002**.

00.002 {01.006} Maximum Reference Clamp					
RW	Num	ND	NC	PT	US
OL	±VM_POSITIVE_REF_CLAMP1 Hz / rpm	↕	⇒	50Hz default: 50.0 Hz 60Hz default: 60.0 Hz	
RFC-A				50Hz default: 1500.0 rpm 60Hz default: 1800.0 rpm	
RFC-S					

(The drive has additional over-speed protection).

Open-loop

Set Pr **00.002** at the required maximum output frequency for both directions of rotation. The drive speed reference is scaled between Pr **00.001** and Pr **00.002**. [00.002] is a nominal value; slip compensation may cause the actual frequency to be higher.

RFC-A / RFC-S

Set Pr **00.002** at the required maximum motor speed for both directions of rotation. The drive speed reference is scaled between Pr **00.001** and Pr **00.002**.

For operating at high speeds see section 8.6 *High speed operation* on page 152.

6.3.3 Ramps, speed reference selection, current limit

00.003 {02.011} Acceleration Rate 1					
RW	Num	ND	NC	PT	US
OL	±VM_ACCEL_RATE	↕	⇒	5.0 s/100 Hz	
RFC-A				2.000 s/1000 rpm	
RFC-S					

Set Pr **00.003** at the required rate of acceleration.

Note that larger values produce lower acceleration. The rate applies in both directions of rotation.

00.004 {02.021} Deceleration Rate 1					
RW	Num	ND	NC	PT	US
OL	±VM_ACCEL_RATE	↕	⇒	10.0 s/100 Hz	
RFC-A				2.000 s/1000 rpm	
RFC-S					

Set Pr **00.004** at the required rate of deceleration.

Note that larger values produce lower deceleration. The rate applies in both directions of rotation.

00.005 {01.014} Reference Selector									
RW	Txt								US
OL	A1 A2 (0), A1 Preset (1), A2 Preset (2), Preset (3), Keypad (4), Precision (5), Keypad Ref (6)	⇕	⇒	A1 A2 (0)					
RFC-A									
RFC-S									

Use Pr **00.005** to select the required frequency/speed reference as follows:

Setting	Description
A1 A2	0 Analog input 1 OR analog input 2 selectable by digital input, terminal 28
A1 Preset	1 Analog input 1 OR preset frequency/speed
A2 Preset	2 Analog input 2 OR preset frequency/speed
Preset (3)	3 Pre-set frequency/speed
Keypad (4)	4 Keypad mode
Precision (5)	5 Precision reference
Keypad Ref (6)	6 Keypad Reference

00.006 {04.007} Symmetrical Current Limit									
RW	Num								US
OL	±VM_MOTOR1_ CURRENT_LIMIT %	⇕	⇒	165 %					
RFC-A									
RFC-S									

Pr **00.006** limits the maximum output current of the drive (and hence maximum motor torque) to protect the drive and motor from overload. Set Pr **00.006** at the required maximum torque as a percentage of the rated torque of the motor, as follows:

$$[00.006] = \frac{T_R}{T_{RATED}} \times 100 (\%)$$

Where:

T_R Required maximum torque
 T_{RATED} Motor rated torque

Alternatively, set Pr **00.006** at the required maximum active (torque-producing) current as a percentage of the rated active current of the motor, as follows:

$$[00.006] = \frac{I_R}{I_{RATED}} \times 100 (\%)$$

Where:

I_R Required maximum active current
 I_{RATED} Motor rated active current

6.3.4 Voltage boost, (open-loop), Speed-loop PID gains (RFC-A / RFC-S)

00.007 {05.014} Open-loop Control Mode (OL)									
00.007 {03.010} Speed Controller Proportional Gain Kp1 (RFC)									
RW	Txt / Num								US
OL	Ur S (0), Ur (1), Fixed (2), Ur Auto (3), Ur I (4), Square (5), Current 1P (6)	⇕	⇒	Ur I (4)					
RFC-A									
RFC-S									

Open-loop

There are seven voltage modes available, which fall into three categories, vector control, fixed boost and single phase current output. For further details, refer to section 8.1.1 *Open loop motor control* on page 139.

RFC-A/ RFC-S

Pr **00.007 (03.010)** operates in the feed-forward path of the speed-control loop in the drive. See Figure 11-4 *Menu 3 RFC-A, RFC-S logic diagram* on page 180 for a schematic of the speed controller. For information on setting up the speed controller gains, refer to section 8 *Optimization* on page 139.

00.008 {05.015} Low Frequency Voltage Boost (OL)									
00.008 {03.011} Speed Controller Integral Gain Ki1 (RFC)									
RW	Num								US
OL	0.0 to 25.0 %	⇕	⇒	3.0 %					
RFC-A									
RFC-S									

Open-loop

When *Open-loop Control Mode* (00.007) is set at **Fd** or **SrE**, set Pr **00.008 (05.015)** at the required value for the motor to run reliably at low speeds.

Excessive values of Pr **00.008** can cause the motor to be overheated.

RFC-A/ RFC-S

Pr **00.008 (03.011)** operates in the feed-forward path of the speed-control loop in the drive. For information on setting up the speed controller gains See section 11-4 *Menu 3 RFC-A, RFC-S logic diagram* on page 180. For information on setting up the speed controller gains, refer to section 8 *Optimization* on page 139.

00.009 {05.013} Dynamic V to F Select (OL)									
00.009 {03.012} Speed Controller Differential Feedback Gain Kd 1 (RFC)									
RW	Bit								US
OL	⇕	Off (0) or On (1)	⇒	Off (0)					
RFC-A									
RFC-S									

Open-loop

Set Pr **00.009 (05.013)** at 0 when the V/f characteristic applied to the motor is to be fixed. It is then based on the rated voltage and frequency of the motor.


Set Pr **00.009** at 1 when reduced power dissipation is required in the motor when it is lightly loaded. The V/f characteristic is then variable resulting in the motor voltage being proportionally reduced for lower

motor currents. Figure 6-2 shows the change in V/f slope when the motor current is reduced.

RFC-A / RFC-S

Pr **00.009 (03.012)** operates in the feedback path of the speed-control loop in the drive. See Figure 11-4 *Menu 3 RFC-A, RFC-S logic diagram* on page 180 for a schematic of the speed controller. For information on setting up the speed controller gains, refer to Figure 8 *Optimization* on page 139.

Figure 6-2 Fixed and variable V/f characteristics

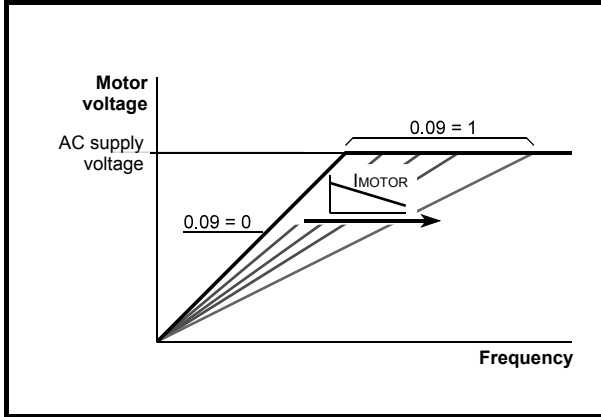

6.3.5 Monitoring

00.010 {05.004} Motor Rpm									
RW	Bit								US
OL	↕	±180000 rpm		⇒					

Open-loop

Pr **00.010 (05.004)** indicates the value of motor speed that is estimated from the following:

- 02.001** Post Ramp Reference
- 00.042** Number Of Motor Poles

00.010 {03.002} Speed Feedback									
RO	Num	FI			ND	NC	PT		
RFC-A	↕	±VM_SPEED rpm		⇒					
RFC-S									

RFC-A / RFC-S

Pr **00.010 (03.002)** indicates the value of motor speed that is obtained from the speed feedback.

00.011 {05.001} Output Frequency (OL)									
00.011 {03.029} P1 Position (RFC)									
RO	Num	FI			ND	NC	PT		
OL	↕	±VM_SPEED_FREQ_REF Hz		⇒					
RFC-A									
RFC-S	↕	0 to 65535		⇒					

Open-loop and RFC-A


Pr **00.011** displays the frequency at the drive output.

RFC-S

Pr **00.011** displays the position of the encoder in mechanical values of 0 to 65,535. There are 65,536 units to one mechanical revolution.

00.012 {04.001} Current Magnitude									
RO	Bit	FI			ND	NC	PT		
OL		±VM_DRIVE_CURRENT_UNIPOLAR A		⇒					
RFC-A	↕								
RFC-S									

Pr **00.012** displays the rms value of the output current of the drive in each of the three phases. The phase currents consist of an active component and a reactive component, which can form a resultant current vector as shown in the following diagram:

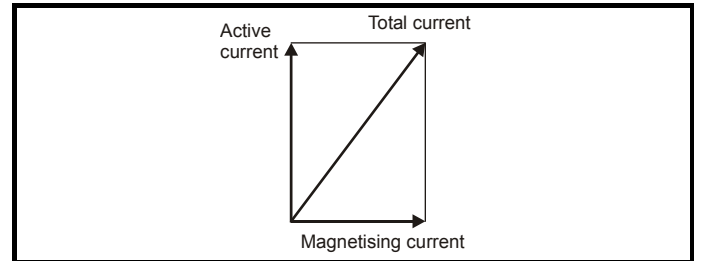

The active current is the torque producing current and the reactive current is the magnetizing or flux-producing current.

00.013 {04.002} Torque Producing Current									
RO	Bit	FI			ND	NC	PT		
OL		±VM_DRIVE_CURRENT A		⇒					
RFC-A	↕								
RFC-S									

When the motor is being driven below its rated speed, the torque is proportional to **[00.013]**.

6.3.6 Jog reference, Ramp mode selector, Stop and torque mode selectors

Pr **00.014** is used to select the required control mode of the drive as follows:

00.014 {04.011} Torque Mode Selector									
RW	Num								US
OL	↕	0 or 1		⇒	0				
RFC-A	↕	0 to 5		⇒	0				
RFC-S									

Setting	Open-Loop	RFC-A/S
0	Frequency control	Speed control
1	Torque control	Torque control
2		Torque control with speed override
3		Coiler/uncoiler mode
4		Speed control with torque feed-forward
5		Bi-directional torque control with speed override

00.015 {02.004} Ramp Mode Select	
RW	Txt
OL	Fast (0), Standard (1), Std boost (2) ⇒ Standard (1)
RFC-A	Fast (0), Standard (1) ⇒ Standard (1)
RFC-S	


Pr 00.015 sets the ramp mode of the drive as shown below:

0: Fast ramp

Fast ramp is used where the deceleration follows the programmed deceleration rate subject to current limits. This mode must be used if a braking resistor is connected to the drive.

1: Standard ramp

Standard ramp is used. During deceleration, if the voltage rises to the standard ramp level (Pr 02.008) it causes a controller to operate, the output of which changes the demanded load current in the motor. As the controller regulates the link voltage, the motor deceleration increases as the speed approaches zero speed. When the motor deceleration rate reaches the programmed deceleration rate the controller ceases to operate and the drive continues to decelerate at the programmed rate. If the standard ramp voltage (Pr 02.008) is set lower than the nominal DC bus level the drive will not decelerate the motor, but it will coast to rest. The output of the ramp controller (when active) is a current demand that is fed to the frequency changing current controller (Open-loop modes) or the torque producing current controller (RFC-A or RFC-S modes). The gain of these controllers can be modified with Pr 04.013 and Pr 04.014.

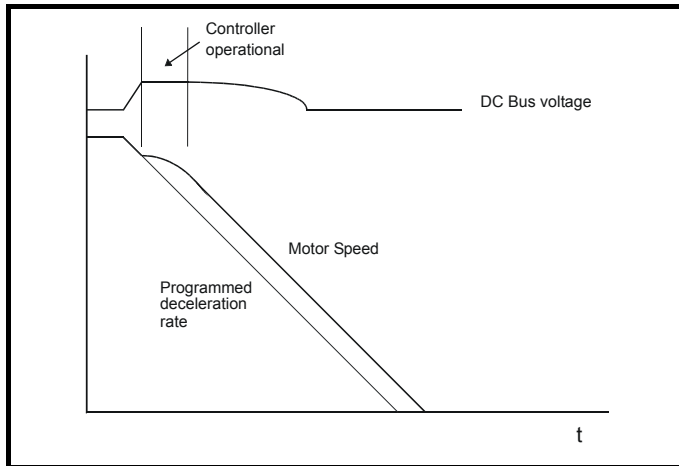

2: Standard ramp with motor voltage boost

This mode is the same as normal standard ramp mode except that the motor voltage is boosted by 20 %. This increases the losses in the motor, dissipating some of the mechanical energy as heat giving faster deceleration.

00.016 {02.002} Ramp Enable	
RW	Bit
OL	⇒
RFC-A	Off (0) or On (1) ⇒ On (1)
RFC-S	

Setting Pr 00.016 to 0 allows the user to disable the ramps. This is generally used when the drive is required to closely follow a speed reference which already contains acceleration and deceleration ramps.

00.017 {08.026} Digital Input 6 Destination				
RW	Num	DE	PT	US
OL	00.000 to 59.999	⇒	06.031	

Open-loop

Pr 00.017 sets the destination of digital input T29.

00.017 {04.012} Current Reference Filter Time Constant				
RW	Num	DE	PT	US
RFC-A	0.0 to 25.0 ms ⇒ 1.0 ms			
RFC-S				

RFC-A / RFC-S

A first order filter, with a time constant defined by Pr 00.017, is provided on the current demand to reduce acoustic noise and vibration produced as a result of position feedback quantisation noise. The filter introduces a lag in the speed loop, and so the speed loop gains may need to be reduced to maintain stability as the filter time constant is increased.

00.019 {07.011} Analog Input 2 Mode				
RW	Num	DE	PT	US
OL	4-20 mA Low (-4), 20-4 mA Low (-3), 4-20 mA Hold (-2), 20-4 mA Hold (-1), 0-20 mA (0), 20-0 mA (1), 4-20 mA Trip (2), 20-4 mA Trip (3), 4-20 mA (4), 20-4 mA (5), Volt (6)			
RFC-A				
RFC-S		⇒		

In modes 2 and 3, a current loop loss trip is generated if the current falls below 3 mA.

In modes -4, -3, 2 and 3 the analog input level goes to 0.0 % if the input current falls below 3 mA.

In modes -2 and -1 the analog input remains at the value it had in the previous sample before the current fell below 3 mA.

Pr Value	Pr string	Comments
-4	4-20 mA Low	4-20 mA low value on current loss (1)
-3	20-4 mA Low	20-4 mA low value on current loss (1)
-2	4-20 mA Hold	4-20 mA hold at level before loss on current loss
-1	20-4 mA Hold	20-4 mA hold at level before loss on current loss
0	0-20 mA	
1	20-0 mA	
2	4-20 mA Trip	4-20 mA trip on current loss
3	20-4 mA Trip	20-4 mA trip on current loss
4	4-20 mA	
5	20-4 mA	
6	Volt	

00.020 {07.014} Analog Input 2 Destination				
RW	Num	DE	PT	US
OL	00.000 to 59.999 ⇒ 01.037			
RFC-A				
RFC-S				

Pr 00.020 sets the destination of analog input 2.

00.021 {07.015} Analog Input 3 Mode										
RW	Txt						PT	US		
OL										
RFC-A	↕	Volt (6), Therm Short Cct (7), Thermistor (8), Therm No Trip (9)				⇒	Volt (6)			
RFC-S										

00.025 {01.022} Preset Reference 2										
RW	Num								US	
OL										
RFC-A	↕	±VM_SPEED_FREQ_REF Hz / rpm				⇒	0.0 Hz / rpm			
RFC-S										

Pr value	Pr string	Comments
6	Volt	
7	Therm Short Cct	Temperature measurement input with short circuit detection
8	Thermistor	Temperature measurement without short circuit detection
9	Therm No Trip	Temperature measurement input with no trips

00.026 {01.023} Preset Reference 3 (OL)										
00.026 {03.008} Overspeed Threshold (RFC)										
RW	Num								US	
OL	↕	±VM_SPEED_FREQ_REF Hz				⇒	0.0 Hz / rpm			
RFC-A	↕	0 to 40000 rpm								
RFC-S										

Open-loop



If the preset reference has been selected (see Pr 00.005), the speed at which the motor runs is determined by these parameters.

RFC-A / RFC-S

If the speed feedback (Pr 03.002) exceeds this level in either direction, an overspeed trip is produced. If this parameter is set to zero, the overspeed threshold is automatically set to 120 % x SPEED_FREQ_MAX.

00.022 {01.010} Bipolar Reference Enable										
RW	Bit								US	
OL										
RFC-A	↕	OFF (0) or On (1)				⇒	OFF (0)			
RFC-S										

Pr 00.022 determines whether the reference is uni-polar or bi-polar as follows:

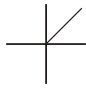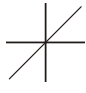Pr 00.022	Function	
0	Unipolar speed/frequency reference	
1	Bipolar speed/frequency reference	

00.027 {01.024} Preset Reference 4 (OL)										
RW	Num								US	
OL	↕	±VM_SPEED_FREQ_REF Hz				⇒	0.0			
RFC-A	↕					⇒				
RFC-S										

Open-loop

Refer to Pr 00.024 to Pr 00.026.

RFC-A / RFC-S

Enter in Pr 00.027 the number of lines per revolution of the drive encoder.

00.023 {01.005} Jog Reference										
RW	Num								US	
OL	↕	0.0 to 400.0 Hz				⇒	0.0			
RFC-A	↕	0.0 to 4000.0 rpm				⇒	0.0			
RFC-S										

Enter the required value of jog frequency/speed.

The frequency/speed limits affect the drive when jogging as follows:

Frequency-limit parameter	Limit applies
Pr 00.001 Minimum reference clamp	No
Pr 00.002 Maximum reference clamp	Yes

00.028 {06.013} Enable Auxiliary Key										
RW	Num								US	
OL										
RFC-A	↕	Disabled (0), Forward / Reverse (1), Reverse (2)				⇒	Disabled (0)			
RFC-S										

When a keypad is installed, this parameter enables the forward/reverse key.

00.024 {01.021} Preset Reference 1										
RW	Num								US	
OL										
RFC-A	↕	±VM_SPEED_FREQ_REF Hz / rpm				⇒	0.0 Hz / rpm			
RFC-S										

00.029 {11.036} NV Media Card Data Previously Loaded										
RO	Num						NC	PT	US	
OL										
RFC-A	↕	0 to 999				⇒	0			
RFC-S										

This parameter shows the number of the data block last transferred from a SMARTCARD to the drive.

00.030 {11.42} Parameter Cloning	
RO	Txt
OL	None (0), Read (1), Program (2), Auto (3), Boot (4)
RFC-A	⇕
RFC-S	⇒

* Only a value of 3 or 4 in this parameter is saved.

NOTE
If Pr **00.030** is equal to 1 or 2, this value is not transferred to the EEPROM or the drive. If Pr **00.030** is set to a 3 or 4 the value is transferred.

Pr String	Pr value	Comment
None	0	Inactive
Read	1	Read parameter set from the NV Media Card
Program	2	Programming a parameter set to the NV Media Card
Auto	3	Auto save
Boot	4	Boot mode

For further information, please refer to section 9 *NV Media Card Operation* on page 154.

00.031 {11.033} Drive Rated Voltage	
RO	Txt
OL	200 V (0), 400 V (1), 575 V (2), 690 V (3)
RFC-A	⇕
RFC-S	⇒

Pr **00.031** indicates the voltage rating of the drive.

00.032 {11.032} Maximum Heavy Duty Rating	
RO	Num
OL	0.000 to 99999.999 A
RFC-A	⇕
RFC-S	⇒

Pr **00.032** indicates the maximum continuous Heavy Duty current rating.

00.033 {06.009} Catch A Spinning Motor (OL)	
00.033 {05.016} Motor Parameter Adaptive Control (RFC-A)	
RW	Num
OL	Disable (0), Enable (1), Fwd Only (2), Rev Only (3)
RFC-A	⇕
RFC-S	⇒

Open-loop

When the drive is enabled with Pr **00.033** = 0, the output frequency starts at zero and ramps to the required reference. When the drive is enabled when Pr **00.033** has a non-zero value, the drive performs a start-up test to determine the motor speed and then sets the initial output frequency to the synchronous frequency of the motor. Restrictions may be placed on the frequencies detected by the drive as follows:

Pr 00.033	Pr string	Function
0	Disable	Disabled
1	Enable	Detect all frequencies
2	Fwd only	Detect positive frequencies only
3	Rev only	Detect negative frequencies only

RFC-A

The motor rated full load rpm parameter (Pr **00.045**) in conjunction with the motor rated frequency parameter (Pr **00.046**) defines the full load slip of the motor. The slip is used in the motor model for closed-loop vector control. The full load slip of the motor varies with rotor resistance which can vary significantly with motor temperature. When Pr **00.033** is set to 1 or 2, the drive can automatically sense if the value of slip defined by Pr **00.045** and Pr **00.046** has been set incorrectly or has varied with motor temperature. If the value is incorrect parameter Pr **00.045** is automatically adjusted. The adjusted value in Pr **00.045** is not saved at power-down. If the new value is required at the next power-up it must be saved by the user.

Automatic optimization is only enabled when the speed is above 12.5 % of rated speed, and when the load on the motor load rises above 62.5 % rated load. Optimization is disabled again if the load falls below 50 % of rated load.

For best optimization results the correct values of stator resistance (Pr **05.017**), transient inductance (Pr **05.024**), stator inductance (Pr **05.025**) and saturation breakpoints (Pr **05.029**, Pr **05.030**) should be stored in the relevant parameters. These values can be obtained by the drive during an autotune (see Pr **00.040** for further details).

Rated rpm auto-tune is not available if the drive is not using external position/speed feedback.

The gain of the optimizer, and hence the speed with which it converges, can be set at a normal low level when Pr **00.033** is set to 1. If this parameter is set to 2 the gain is increased by a factor of 16 to give faster convergence.

00.034 {11.030} User security code	
RW	Num
OL	0 to 2147483647
RFC-A	⇕
RFC-S	⇒

If any number other than 0 is programmed into this parameter, user security is applied so that no parameters except Pr **00.049** can be adjusted with the keypad. When this parameter is read via a keypad it appears as zero. For further details refer to section 5.9.3 *User Security Code* on page 104.

00.035 {11.024} Serial Mode	
RW	Txt
OL	8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 2 NP (8), 7 1 NP (9), 7 1 EP (10), 7 1 OP (11), 7 2 NP M (12), 7 1 NP M (13), 7 1 EP M (14), 7 1 OP M (15)
RFC-A	
RFC-S	8 2 NP (0)

This parameter defines the communications protocol used by the EIA485 comms port on the drive. This parameter can be changed via the drive keypad, via a Solutions Module or via the comms interface itself. If it is changed via the comms interface, the response to the command uses the original protocol. The master should wait at least 20 ms before send a new message using the new protocol. (Note: ANSI uses 7 data bits, 1 stop bit and even parity; Modbus RTU uses 8 data bits, 2 stops bits and no parity).

Pr Value	Pr String
0	8 2 NP
1	8 1 NP
2	8 1 EP
3	8 1 OP
4	8 2 NP M
5	8 1 NP M
6	8 1 EP M
7	8 1 OP M
8	7 2 NP
9	7 1 NP
10	7 1 EP
11	7 1 OP
12	7 2 NP M
13	7 1 NP M
14	7 1 EP M
15	7 1 OP M

The core drive always uses the Modbus rtu protocol and is always a slave. *Serial Mode* (11.024) defines the data format used by the serial comms interface. The bits in the value of *Serial Mode* (11.024) define the data format as follows. Bit 3 is always 0 in the core product as 8 data bits are required for Modbus rtu. The parameter value can be extended in derivative products which provide alternative communications protocols if required.

Bits	3	2	1 and 0
Format	Number of data bits 0 = 8 bits 1 = 7 bits	Register mode 0 = Standard 1 = Modified	Stop bits and Parity 0 = 2 stop bits, no parity 1 = 1 stop bit, no parity 2 = 1 stop bit, even parity 3 = 1 stop bit, odd parity

Bit 2 selects either standard or modified register mode. The menu and parameter numbers are derived for each mode as given in the following table. Standard mode is compatible with Unidrive SP. Modified mode is provided to allow register numbers up to 255 to be addressed. If any menus with numbers above 63 should contain more than 99 parameters, then these parameters cannot be accessed via Modbus rtu.

Register mode	Register address
Standard	(mm x 100) + ppp - 1 where mm ≤ 162 and ppp ≤ 99
Modified	(mm x 256) + ppp - 1 where mm ≤ 63 and ppp ≤ 255

Changing the parameters does not immediately change the serial communications settings. See *Reset Serial Communications* (11.020) for more details.

00.036 {11.025} Serial Baud Rate	
RW	Txt
OL	300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 76800 (9), 115200 (10)
RFC-A	
RFC-S	19200 (6)

This parameter can be changed via the drive keypad, via a Solutions Module or via the comms interface itself. If it is changed via the comms interface, the response to the command uses the original baud rate. The master should wait at least 20 ms before send a new message using the new baud rate.

00.037 {11.023} Serial Address	
RW	Num
OL	
RFC-A	1 to 247
RFC-S	1

Used to define the unique address for the drive for the serial interface. The drive is always a slave address 0 is used to globally address all slaves, and so this address should not be set in this parameter

00.038 {04.013} Current Controller Kp Gain	
RW	Num
OL	20
RFC-A	0 to 30000
RFC-S	150

00.039 {04.014} Current Controller Ki Gain	
RW	Num
OL	40
RFC-A	0 to 30000
RFC-S	2000

These parameters control the proportional and integral gains of the current controller used in the open loop drive. The current controller either provides current limits or closed loop torque control by modifying the drive output frequency. The control loop is also used in its torque mode during line power supply loss, or when the controlled mode standard ramp is active and the drive is decelerating, to regulate the flow of current into the drive.

00.040 {05.012}		Auto-tune												
RW	Num												NC	
OL	↕	0 to 2						⇒	0					
RFC-A	↕	0 to 5						⇒						
RFC-S	↕	0 to 6						⇒						

Open-Loop

There are two autotune tests available in open loop mode, a stationary and a rotating test. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive.

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary test measures the *Stator Resistance* (05.017), *Transient Inductance* (05.024), *Maximum Deadtime Compensation* (05.059) and current at *Maximum Deadtime Compensation* (05.060) which are required for good performance in vector control modes (see Open Loop Control Mode (00.007), later in this table). If *Enable Stator Compensation* (05.049) = 1, then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). The stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr **00.043**. To perform a Stationary autotune, set Pr **00.040** to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, as above, then a rotating test is performed in which the motor is accelerated with currently selected ramps up to a frequency of *Rated Frequency* (05.006) $\times \frac{2}{3}$, and the frequency is maintained at that level for 4 seconds. *Stator Inductance* (05.025) is measured and this value is used in conjunction with other motor parameters to calculate *Rated Power Factor* (05.010). To perform a Rotating autotune, set Pr **00.040** to 2, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the *Control Word* (06.042) and *Control Word Enable* (06.043).

RFC-A

There are four autotune tests available in RFC-A mode, a stationary test, a rotating test and two inertia measurement tests. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive. An inertia measurement test should be performed separately to a stationary or rotating autotune.

It is highly recommended that a rotating autotune is performed (Pr **00.040** set to 2).

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary autotune measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr **04.013** and Pr **04.014** are updated. *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060) for the drive are also measured. Additionally, if *Enable Stator Compensation* (05.049) = 1, then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr **00.043**.

To perform a Stationary autotune, set Pr **00.040** to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, a rotating test is then performed which the motor is accelerated with currently selected ramps up to a frequency of *Rated Frequency* (05.006) $\times \frac{2}{3}$, and the frequency is maintained at the level for up to 40 s. During the rotating autotune the *Stator Inductance* (05.025), and the motor saturation breakpoints (Pr **05.029**, Pr **05.030**, Pr **06.062** and Pr **05.063**) are modified by the drive. The power factor is also modified for user information only, but is not used after this point as the stator inductance is used in the vector control algorithm instead. To perform a Rotating autotune, set Pr **00.040** to 2, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

Following the completion of an autotune test, the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the control word (Pr **06.042** & Pr **06.043**).

RFC-S

There are two autotune tests available in RFC-S sensorless mode, a stationary autotune and an inertia measurement test.

- The stationary autotune can be used to measure all the necessary parameters for basic control. The tests measures *Stator Resistance* (05.017), *Ld* (05.024), *No Load Lq* (05.068), *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060). If *Enable Stator Compensation* (05.049) = 1 then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). The *Stator Resistance* (05.017) and the *Ld* (05.024) are then used to set up *Current controller Kp Gain* (04.013) and *Current Controller Ki Gain* (04.014). To perform a Stationary autotune, set Pr **00.040** to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- In sensorless mode, if Rotating autotune is selected (Pr **00.040** = 2), then a stationary autotune is performed.

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the *Drive Enable Parameter* (06.015) to OFF (0) or disabling the drive via the control word (Pr **06.042** & Pr **06.043**).

00.041 {05.018}		Maximum Switching Frequency												
RW	Num												US	
OL														
RFC-A	⇕	2 kHz (0), 3 kHz (1), 4 kHz (2), 6 kHz (3), 8 kHz (4), 12 kHz (5), 16 kHz (6)												3 kHz (1)
RFC-S														

This parameter defines the required switching frequency. The drive may automatically reduce the actual switching frequency (without changing this parameter) if the power stage becomes too hot. A thermal model of the IGBT junction temperature is used based on the heatsink temperature and an instantaneous temperature drop using the drive output current and switching frequency. The estimated IGBT junction temperature is displayed in Pr **07.034**. If the temperature exceeds 145 °C the switching frequency is reduced if this is possible (i.e >3 kHz). Reducing the switching frequency reduces the drive losses and the junction temperature displayed in Pr **07.034** also reduces. If the load condition persists the junction temperature may continue to rise again above 145 °C and the drive cannot reduce the switching frequency further the drive will initiate an 'Oht Inverter' trip. Every second the drive will attempt to restore the switching frequency to the level set in Pr **00.041**.

The full range of switching frequencies is not available on all ratings of Unidrive M. See section 8.5 *Switching frequency* on page 152 for the maximum available switching frequency for each drive rating.

6.3.7 Motor parameters

00.042 {05.011}		Number Of Motor Poles												
RW	Num												US	
OL														
RFC-A	⇕	Automatic (0) to 480 Poles (240)												Automatic (0)
RFC-S														6 Poles (3)

Open-loop

This parameter is used in the calculation of motor speed, and in applying the correct slip compensation. When Automatic (0) is selected, the number of motor poles is automatically calculated from the *Rated Frequency* (00.047) and the *Rated Speed* rpm (00.045). The number of poles = 120 * rated frequency / rpm rounded to the nearest even number.

RFC-A

This parameter must be set correctly for the vector control algorithms to operate correctly. When Automatic (0) is selected, the number of motor poles is automatically calculated from the *Rated Frequency* (00.047) and the *Rated Speed* rpm (00.045) rpm. The number of poles = 120 * rated frequency / rpm rounded to the nearest even number.

RFC-S

This parameter must be set correctly for the vector control algorithms to operate correctly. When auto is selected the number of poles is set to 6.

00.043 {05.010}		Rated Power Factor												
RW	Num												US	
OL	⇕	0.000 to 1.000												0.850
RFC-A	⇕	0.000 to 1.000												0.850
RFC-S	⇕													

The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current.

Open-loop

The power factor is used in conjunction with the motor rated current (Pr **00.046**) to calculate the rated active current and magnetizing current of the motor. The rated active current is used extensively to control the drive, and the magnetizing current is used in vector mode Rs compensation. It is important that this parameter is set up correctly.

This parameter is obtained by the drive during a rotational autotune. If a stationary autotune is carried out, then the nameplate value should be entered in Pr **00.043**.

RFC-A

If the stator inductance (Pr **05.025**) contains a non-zero value, the power factor used by the drive is continuously calculated and used in the vector control algorithms (this will not update Pr **00.043**).

If the stator inductance is set to zero (Pr **05.025**) then the power factor written in Pr **00.043** is used in conjunction with the motor rated current and other motor parameters to calculate the rated active and magnetizing currents which are used in the vector control algorithm.

This parameter is obtained by the drive during a rotational autotune. If a stationary autotune is carried out, then the nameplate value should be entered in Pr **00.043**.

00.044 {05.009}		Rated Voltage												
RW	Num												US	
OL														200 V drive: 230 V
RFC-A	⇕	±VM_AC_VOLTAGE_ SET												50Hz default 400 V drive: 400 V 60Hz default 400 V drive: 460 V
RFC-S														575 V drive: 575 V 690 V drive: 690 V

Open-loop and RFC-A

Enter the value from the rating plate of the motor.

00.045 {05.008}		Rated Speed												
RW	Num												US	
OL	⇕	0 to 33000 rpm												50 Hz default: 1500 rpm 60 Hz default: 1800 rpm
RFC-A	⇕	0.00 to 33000.00 rpm												50 Hz default: 1450 rpm 60 Hz default: 1750 rpm
RFC-S	⇕	0.00 to 33000.00 rpm												3000.00 rpm

Open-loop

This is the speed at which the motor would rotate when supplied with its base frequency at rated voltage, under rated load conditions (= synchronous speed - slip speed). Entering the correct value into this parameter allows the drive to increase the output frequency as a function of load in order to compensate for this speed drop.

Slip compensation is disabled if Pr **00.045** is set to 0 or to synchronous speed, or if Pr **05.027** is set to 0.

If slip compensation is required this parameter should be set to the value from the rating plate of the motor, which should give the correct rpm for a hot machine. Sometimes it will be necessary to adjust this when the drive is commissioned because the nameplate value may be inaccurate. Slip compensation will operate correctly both below base speed and within the field weakening region. Slip compensation is normally used to correct for the motor speed to prevent speed variation with load. The rated load rpm can be set higher than synchronous speed to deliberately introduce speed droop. This can be useful to aid load sharing with mechanically coupled motors.

RFC-A

Rated load rpm is used with motor rated frequency to determine the full load slip of the motor which is used by the vector control algorithm. Incorrect setting of this parameter can result in the following:

- Reduced efficiency of motor operation
- Reduction of maximum torque available from the motor
- Failure to reach maximum speed
- Over-current trips
- Reduced transient performance
- Inaccurate control of absolute torque in torque control modes

The nameplate value is normally the value for a hot machine, however, some adjustment may be required when the drive is commissioned if the nameplate value is inaccurate. The rated full load rpm can be optimized by the drive (For further information, refer to section 8.1.2 *RFC-A Mode* on page 142).

RFC-S

The rated speed is not used by the motor control algorithms, but is used by the motor thermal protection system.

00.046 {05.007} Rated Current	
RW	Num
OL	±VM_RATED_CURRENT ⇒ Maximum Heavy Duty Rating (11.032)
RFC-A	
RFC-S	

Enter the name-plate value for the motor rated current.

00.047 {05.006} Rated Frequency	
00.047 {05.033} Volts per 1000 rpm	
RW	Num
OL	0.0 to 550.0 Hz ⇒ 50 Hz default: 50.0 Hz 60 Hz default: 60.0 Hz
RFC-A	
RFC-S	
RFC-S	0 to 10000 V / 1000 rpm ⇒ 98 V / 1000 rpm

Enter the value from the rating plate of the motor.

6.3.8 Operating-mode selection

00.048 {11.031} User Drive Mode	
RW	Txt
OL	Open-loop (1), RFC-A (2), RFC-S (3), Regen (4) ⇒
RFC-A	
RFC-S	
	Open-loop (1)
	RFC-A (2)
	RFC-S (3)

The settings for Pr 0.48 are as follows:

Setting	Operating mode
1	Open-loop
2	RFC-A
3	RFC-S
4	Regen

This parameter defines the drive operating mode. Pr mm.000 must be set to '1253' (European defaults) or '1254' (USA defaults) before this parameter can be changed. When the drive is reset to implement any change in this parameter, the default settings of all parameters will be set according to the drive operating mode selected and saved in memory.

6.3.9 Status information

00.049 {11.044} User Security Status	
RW	Txt
OL	Menu 0 (0), All Menus (1), Read-only Menu 0 (2), Read-only (3), Status Only (4), No Access (5) ⇒ Menu 0 (0)
RFC-A	
RFC-S	

This parameter controls access via the drive keypad as follows:

Security level	Description
0 (Menu 0)	All writable parameters are available to be edited but only parameters in Menu 0 are visible.
1 (All Menus)	All writable parameters are visible and available to be edited.
2 (Read-only Menu 0)	All parameters are read-only. Access is limited to Menu 0 parameters only.
3 (Read-only)	All parameters are read-only however all menus and parameters are visible.
4 (Status Only)	The keypad remains in status mode and no parameters can be viewed or edited.
5 (No Access)	The keypad remains in status mode and no parameters can be viewed or edited. Drive parameters cannot be accessed via a comms / fieldbus interface in the drive or any option module.

The keypad can adjust this parameter even when user security is set.

00.050 {11.029} Software Version	
RO	Num
OL	0 to 99999999 ⇒
RFC-A	
RFC-S	

The parameter displays the software version of the drive.

00.051 {10.037} Action On Trip Detection	
RW	Bin
OL	00000 to 11111 ⇒ 00000
RFC-A	
RFC-S	

Each bit in this parameter has the following functions:

Bit	Function
0	Stop on non-important trips
1	Disable braking resistor overload detection
2	Disable phase loss stop
3	Disable braking resistor temperature monitoring
4	Disable parameter freeze on trip

Example

Pr **10.037**=8 (1000_{binary}) Th Brake Res trip is disabled

Pr **10.037**=12 (1100_{binary}) Th Brake Res and phase loss trip is disabled

Stop on non-important trips

If bit 0 is set to one the drive will attempt to stop before tripping if any of the following trip conditions are detected: I/O Overload, An Input 1 Loss, An Input 2 Loss or Keypad Mode.

Disable braking resistor overload detection

For details of braking resistor overload detection mode see Pr **10.030**.

Disable phase loss trip

Normally the drive will stop when the input phase loss condition is detected. If this bit is set to 1 the drive will continue to run and will only trip when the drive is brought to a stop by the user.

Disable braking resistor temperature monitoring

Size 3, 4 and 5 drives have an internal user install braking resistor with a thermistor to detect overheating of the resistor. As default bit 3 of Pr **10.037** is set to zero, and so if the braking resistor and its thermistor is not installed the drive will produce a trip (Th Brake Res) because the thermistor appears to be open-circuit. This trip can be disabled so that the drive can run by setting bit 3 of Pr **10.037** to one. If the resistor is installed then no trip is produced unless the thermistor fails, and so bit 3 of Pr **10.037** can be left at zero. This feature only applies to size 3, 4 and 5 drives. For example if Pr **10.037** = 8, then Th Brake Res trip will be disabled.

Disable parameter freeze on trip

If this bit is 0 then the parameters listed below are frozen on trip until the trip is cleared. If this bit is 1 then this feature is disabled.

Open-loop mode	RFC-A and RFC-S modes
Reference Selected (01.001)	Reference Selected (01.001)
Pre-skip Filter Reference (01.002)	Pre-skip Filter Reference (01.002)
Pre-ramp Reference (01.003)	Pre-ramp Reference (01.003)
Post Ramp Reference (02.001)	Post Ramp Reference (02.001)
Frequency Slaving Demand (03.001)	Final Speed Reference (03.001)
	Speed Feedback (03.002)
	Speed Error (03.003)
	Speed Controller Output (03.004)
Current Magnitude (04.001)	Current Magnitude (04.001)
Torque Producing Current (04.002)	Torque Producing Current (04.002)
Magnetising Current (04.017)	Magnetising Current (04.017)
Output Frequency (05.001)	Output Frequency (05.001)
Output Voltage (05.002)	Output Voltage (05.002)
Output Power (05.003)	Output Power (05.003)
D.c. Bus Voltage (05.005)	D.c. Bus Voltage (05.005)
Analog Input 1 (07.001)*	Analog Input 1 (07.001)*
Analog Input 2 (07.002)*	Analog Input 2 (07.002)*
Analog Input 3 (07.003)*	Analog Input 3 (07.003)*

00.052 {11.020} Reset Serial Communications	
RW	Bit
OL	
RFC-A	⇕
RFC-S	⇕

Off (0) or On (1) ⇔ Off (0)

When *Serial Address* (11.023), *Serial Mode* (11.024), *Serial Baud Rate* (11.025), *Minimum Comms Transmit Delay* (11.026) or *Silent Period* (11.027) are modified the changes do not have an immediate effect on the serial communications system. The new values are used after the next power-up or if *Reset Serial Communications* (11.020) is set to one. *Reset Serial Communications* (11.020) is automatically cleared to zero after the communications system is updated.

00.053 {04.015} Motor Thermal Time Constant	
RW	Num
OL	
RFC-A	⇕
RFC-S	⇕

1.0 to 3000.0 s ⇔ 89.0 s

Pr **00.053** is the motor thermal time constant of the motor, and is used (along with the motor rated current Pr **00.046**, and total motor current Pr **00.012**) in the thermal model of the motor in applying thermal protection to the motor.

Setting this parameter to 0 disables the motor thermal protection.

For further details, refer to section 8.4 Motor thermal protection on page 132.

6.3.10 Additional parameters for RSC-S sensorless control

00.054 {05.064} RFC Low Speed Mode	
RW	Txt
OL	
RFC-A	⇕
RFC-S	⇕

Injection (0), Non salient (1) ⇔ Non salient (1)

If sensorless mode is being used and is active (i.e. *Sensorless Mode Active* (03.078) = 1) and the motor speed is below *Rated Speed* (00.045) / 10 then a special low speed algorithm must be used to control the motor. *RFC Low Speed Mode* (00.054) is used to select the algorithm to be used.

0: Injection

A high frequency signal is injected into the motor to detect the motor flux axis. This can be used in a similar way to operation with position feedback except that for the drive to remain stable the speed controller bandwidth may need to be limited to 10 Hz or less and the current limit may need to be limited (see *Low Speed Sensorless Mode Current* (00.055)).

1: Non-salient

If the ratio $L_q/L_d < 1.1$ on no load then the injection mode cannot be used and this mode should be used instead. This mode does not provide the same level of control as injection mode and has the following restrictions:

- Speed control is possible, but not torque control.
- Spinning start is not possible and the motor must start from standstill.
- Below *Rated Speed* (00.045) / 10 it will not be possible to produce more than approximately 60 % to 70 % of rated torque.
- There may be some movement of the motor shaft in either direction as the motor starts.
- It is not possible to measure the motor inertia using auto-tuning with *Auto-tune* (00.040) = 4.
- Normally the ramp rate should not be slower than 5 s/1000 rpm when operating in the region below *Rated Speed* (00.045) / 10.
- This mode is not intended to control the motor for prolonged periods below *Rated Speed* (00.045) / 10, but is intended to allow the motor to be started from standstill to run outside the low speed region.
- This mode is not intended to allow motor reversals. If the direction does need to be reversed, the motor should be stopped and any oscillations must die away, before the motor is restarted in the other direction.

Low Speed Sensorless Mode Current (00.055) defines a current applied in the motor d axis to aid starting. The default value is suitable for most motors with a load of up to 60% rated torque. However, in some applications this level may need to be adjusted.

00.055 {05.071} Low Speed Sensorless Mode Current Limit		RW	Num	RA	US
OL	⇕	⇨			
RFC-A					
RFC-S					

Injection mode

For low speed sensorless operation with signal injection (*RFC Low Speed Mode* (05.064) = 0) it is necessary to have a ratio of $L_q/L_d = 1.1$. Even if a motor has a larger ratio on no load, this ratio normally reduces as the q axis current is increased from zero. *Low Speed Sensorless Mode Current Limit* (05.071) should be set at a level that is lower than the point where the inductance ratio falls to 1.1. The value of this parameter is used to define the drive current limits when signal injection is active and prevent loss of control of the motor.

Non-salient mode

For low speed sensorless operation for non-salient motors (*RFC Low Speed Mode* (05.064) = 1) defines a current applied in the d axis to aid starting. For most motors and applications requiring up to 60 % torque on starting, the default value is suitable. However the level of current may need to be increased to make the motor start.

00.056 {05.072} No-load Lq		RW	Num	RA	US
OL	⇕	⇨			
RFC-A					
RFC-S					

Motor q axis inductance with no current in the motor.

00.057 {05.075} Iq Test Current For Inductance Measurement		RW	Num	RA	US
OL	⇕	⇨			
RFC-A					
RFC-S					

Maximum test current level used for Iq during auto-tuning when measuring the motor inductance and phase offset as a percentage of *Rated Current* (00.046). This value is also used by the sensorless control algorithm to define the motor inductance and a reference frame phase offset at different levels of Iq. The values of *Lq At The Defined Iq Test Current* (00.059), and *Phase Offset At Iq Test Current* (00.058), should be the values which correspond to the test current level. For most motors, *Phase Offset At Iq Test Current* (00.058) will be zero and have little effect on the performance, however Lq is likely to vary significantly with Iq and should be set up correctly for good performance. If *Lq At The Defined Iq Test Current* (00.059), or *Iq Test Current For Inductance Measurement* (00.057) are zero, then the estimate of Lq will not be affected by the level of Iq, and if *Phase Offset At Iq Test Current* (00.058) or *Iq Test Current For Inductance Measurement* (00.057) are zero the phase offset will not be affected by the level of Iq.

00.058 {05.077} Phase Offset At Iq Test Current		RW	Num	RA	US
OL	⇕	⇨			
RFC-A					
RFC-S					

This parameter defines the offset of the point of minimum inductance as an electrical angle from the point with no current in the motor, to the point with a level of Iq equivalent to *Iq Test Current For Inductance Measurement* (00.057). When the value is left at its default value of zero, no compensation for phase offset with changes in Iq are made. *Phase Offset At Iq Test Current* (00.058) is used for low speed RFC sensorless control using injection mode. A positive value advances the point of minimum inductance with positive Iq. See *RFC Low Speed Mode* (00.054). For most motors a value of zero is acceptable.

00.059 {05.078} Lq At The Defined Iq Test Current		RW	Num	RA	US
OL	⇕	⇨			
RFC-A					
RFC-S					

Motor q axis inductance with no current in the d axis and the current defined by *Iq Test Current For Inductance Measurement* (00.057) in the q axis of the motor. If this parameter is left at its default value of zero, then no compensation is made to the value of Lq with changes in Iq.

00.060 {05.082}		Id Test Current For Inductance Measurement												
RW	Num												US	
OL	↕											⇒		
RFC-A														
RFC-S	↕	-100 to 0 %										⇒	- 50 %	

Minimum test current level used for Id during auto-tuning when measuring the motor inductance as a percentage of *Rated Current* (00.046). This is then used in a similar way as *Iq Test Current For Inductance Measurement* (00.057), to estimate the value of Lq used in the control algorithms as Id changes. If *Lq At The Defined Id Test Current* (00.061), or *Id Test Current for Inductance Measurement* (00.060) are set to zero, then no compensation is made for changes in Lq with Id.

00.061 {05.084}		Lq At The Id Test Current												
RW	Num												US	
OL	↕											⇒		
RFC-A														
RFC-S	↕	0.000 to 500.000 mH										⇒	0.000 mH	

Motor q axis inductance with no current in the q axis and the current defined by *Id Test Current for Inductance Measurement* (00.060) in the d axis of the motor. If this parameter is left at its default value of zero then no compensation is made to the value of Lq with changes in Id.

7 Running the motor

This chapter takes the new user through all the essential steps to running a motor for the first time, in each of the possible operating modes.

For information on tuning the drive for the best performance, see *Chapter 8 Optimization on page 139*.



Ensure that no damage or safety hazard could arise from the motor starting unexpectedly.



The values of the motor parameters affect the protection of the motor. The default values in the drive should not be relied upon. It is essential that the correct value is entered in Pr **00.046 Rated Current**. This affects the thermal protection of the motor.



If the drive is started using the keypad it will run to the speed defined by the keypad reference (Pr **01.017**). This may not be acceptable depending on the application. The user must check in Pr **01.017** and ensure that the keypad reference has been set to 0.



If the intended maximum speed affects the safety of the machinery, additional independent over-speed protection must be used.

7.1 Quick start connections

7.1.1 Basic requirements

This section shows the basic connections which must be made for the drive to run in the required mode. For minimal parameter settings to run in each mode please see the relevant part of section 7.3 *Quick start commissioning / start-up* on page 130.

Table 7-1 Minimum control connection requirements for each control mode

Drive control method	Requirements
Terminal mode	Drive enable Speed / Torque reference Run forward / Run reverse
Keypad mode	Drive enable
Serial communications	Drive enable Serial communications link

Table 7-2 Minimum requirements for each mode of operation

Operating mode	Requirements
Open loop mode	Induction motor
RFC – A sensorless (without feedback position)	Induction motor without speed feedback
RFC - S sensorless (without position feedback)	Permanent magnet motor without speed and position feedback

7.2 Changing the operating mode

Changing the operating mode returns all parameters to their default value, including the motor parameters. *User Security Status* (Pr **00.049**) and *User Security Code* (Pr **00.034**) are not affected by this procedure).

Procedure

Use the following procedure only if a different operating mode is required:

- Enter either of the following values in Pr **mm.000**, as appropriate:
1253 (50 Hz AC supply frequency)
1254 (60 Hz AC supply frequency)
- Change the setting of Pr **00.048** as follows:

Pr 00.048 setting		Operating mode
00.048 ↑ Open-loop	1	Open-loop
00.048 ↓ RFC-A	2	RFC-A
00.048 ↓ RFC-S	3	RFC-S

The figures in the second column apply when serial communications are used.

3. Either:


- Press the red  reset button
- Toggle the reset digital input
- Carry out a drive reset through serial communications by setting Pr **10.038** to 100 (ensure that Pr. **mm.000** returns to 0).

Figure 7-1 Minimum connections to get the motor running in any operating mode (size 3 and 4)

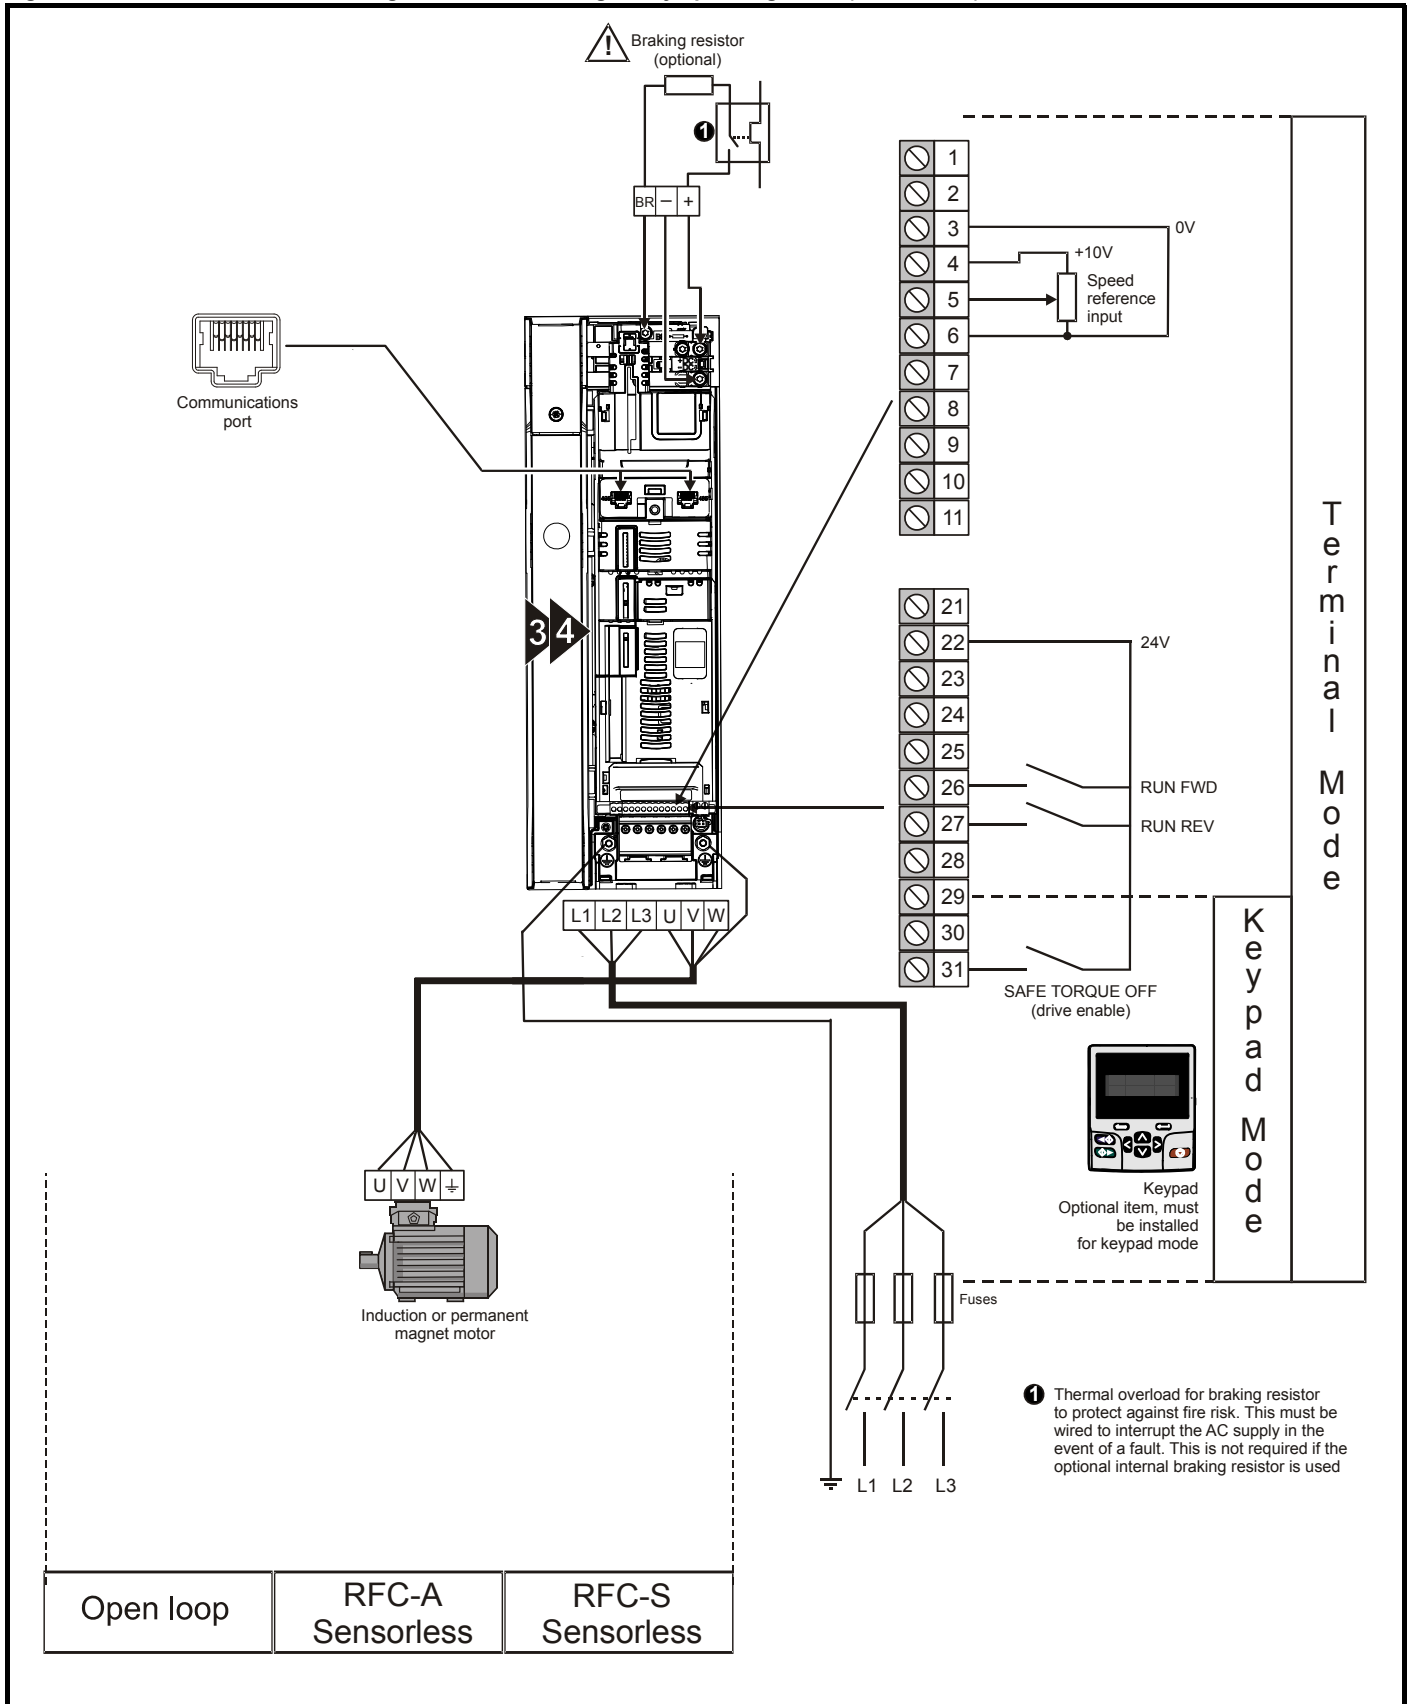


Figure 7-2 Minimum connections to get the motor running in any operating mode (size 5)

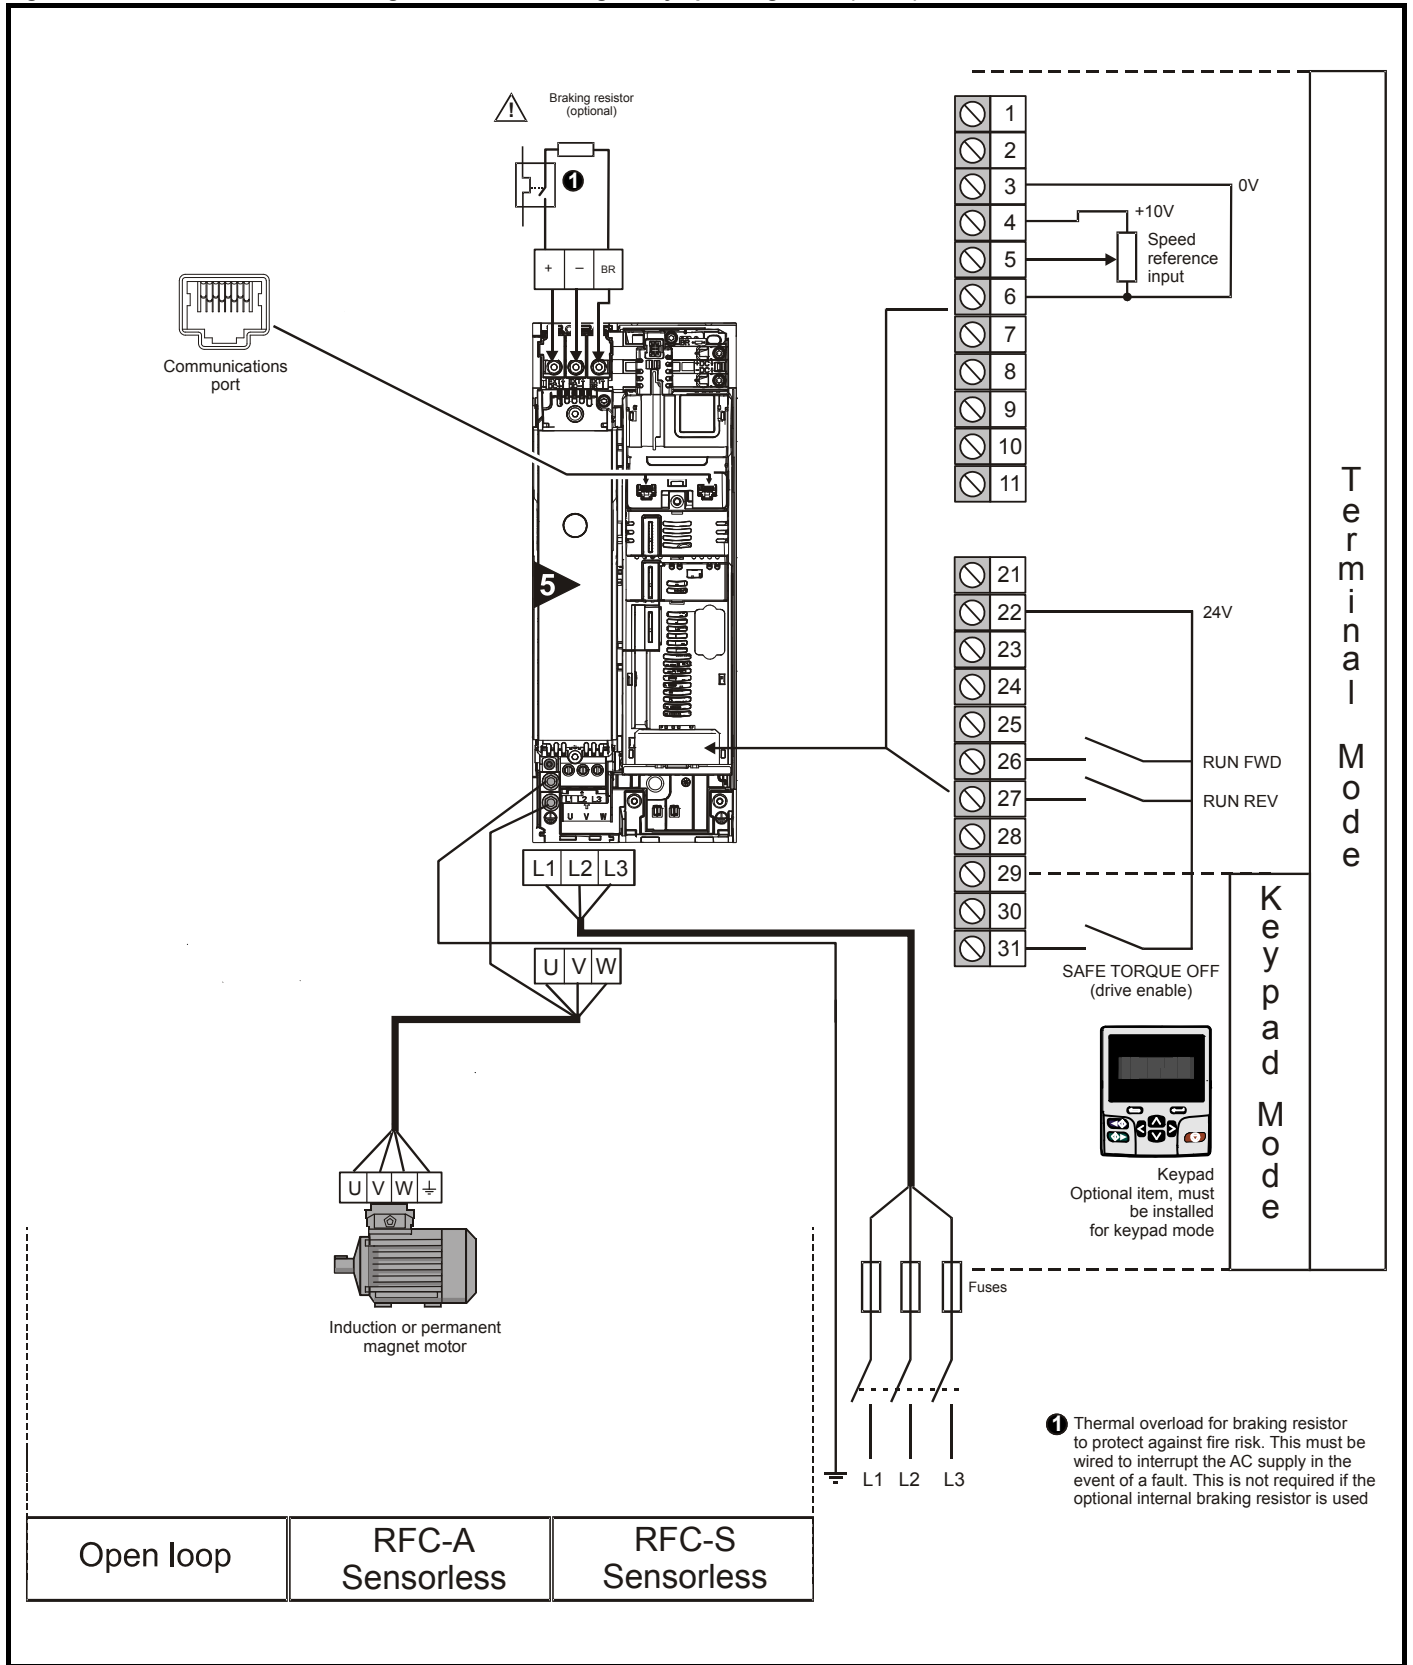


Figure 7-3 Minimum connections to get the motor running in any operating mode (size 6)


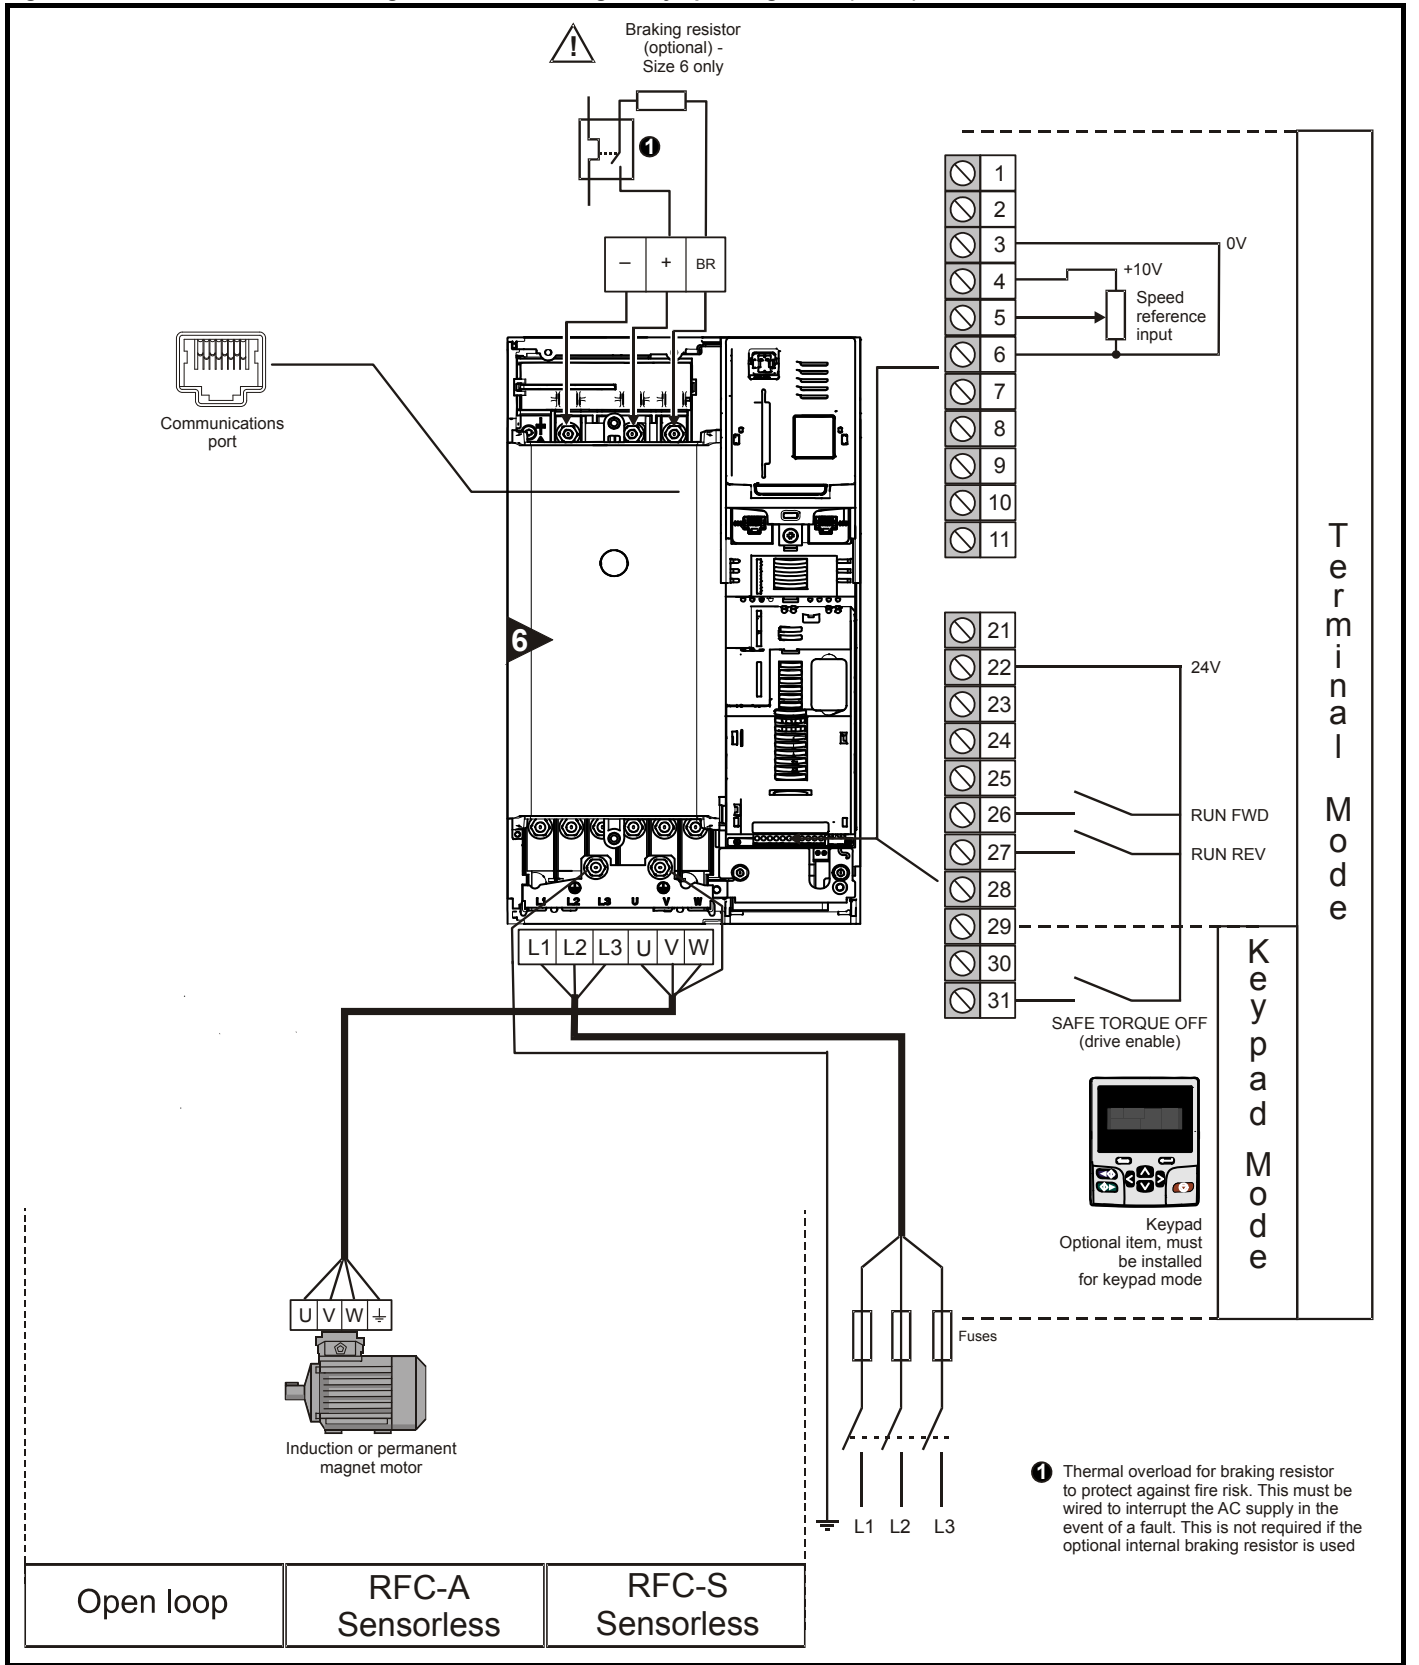


Figure 7-4 Minimum connections to get the motor running in any operating mode (size 7 onwards)

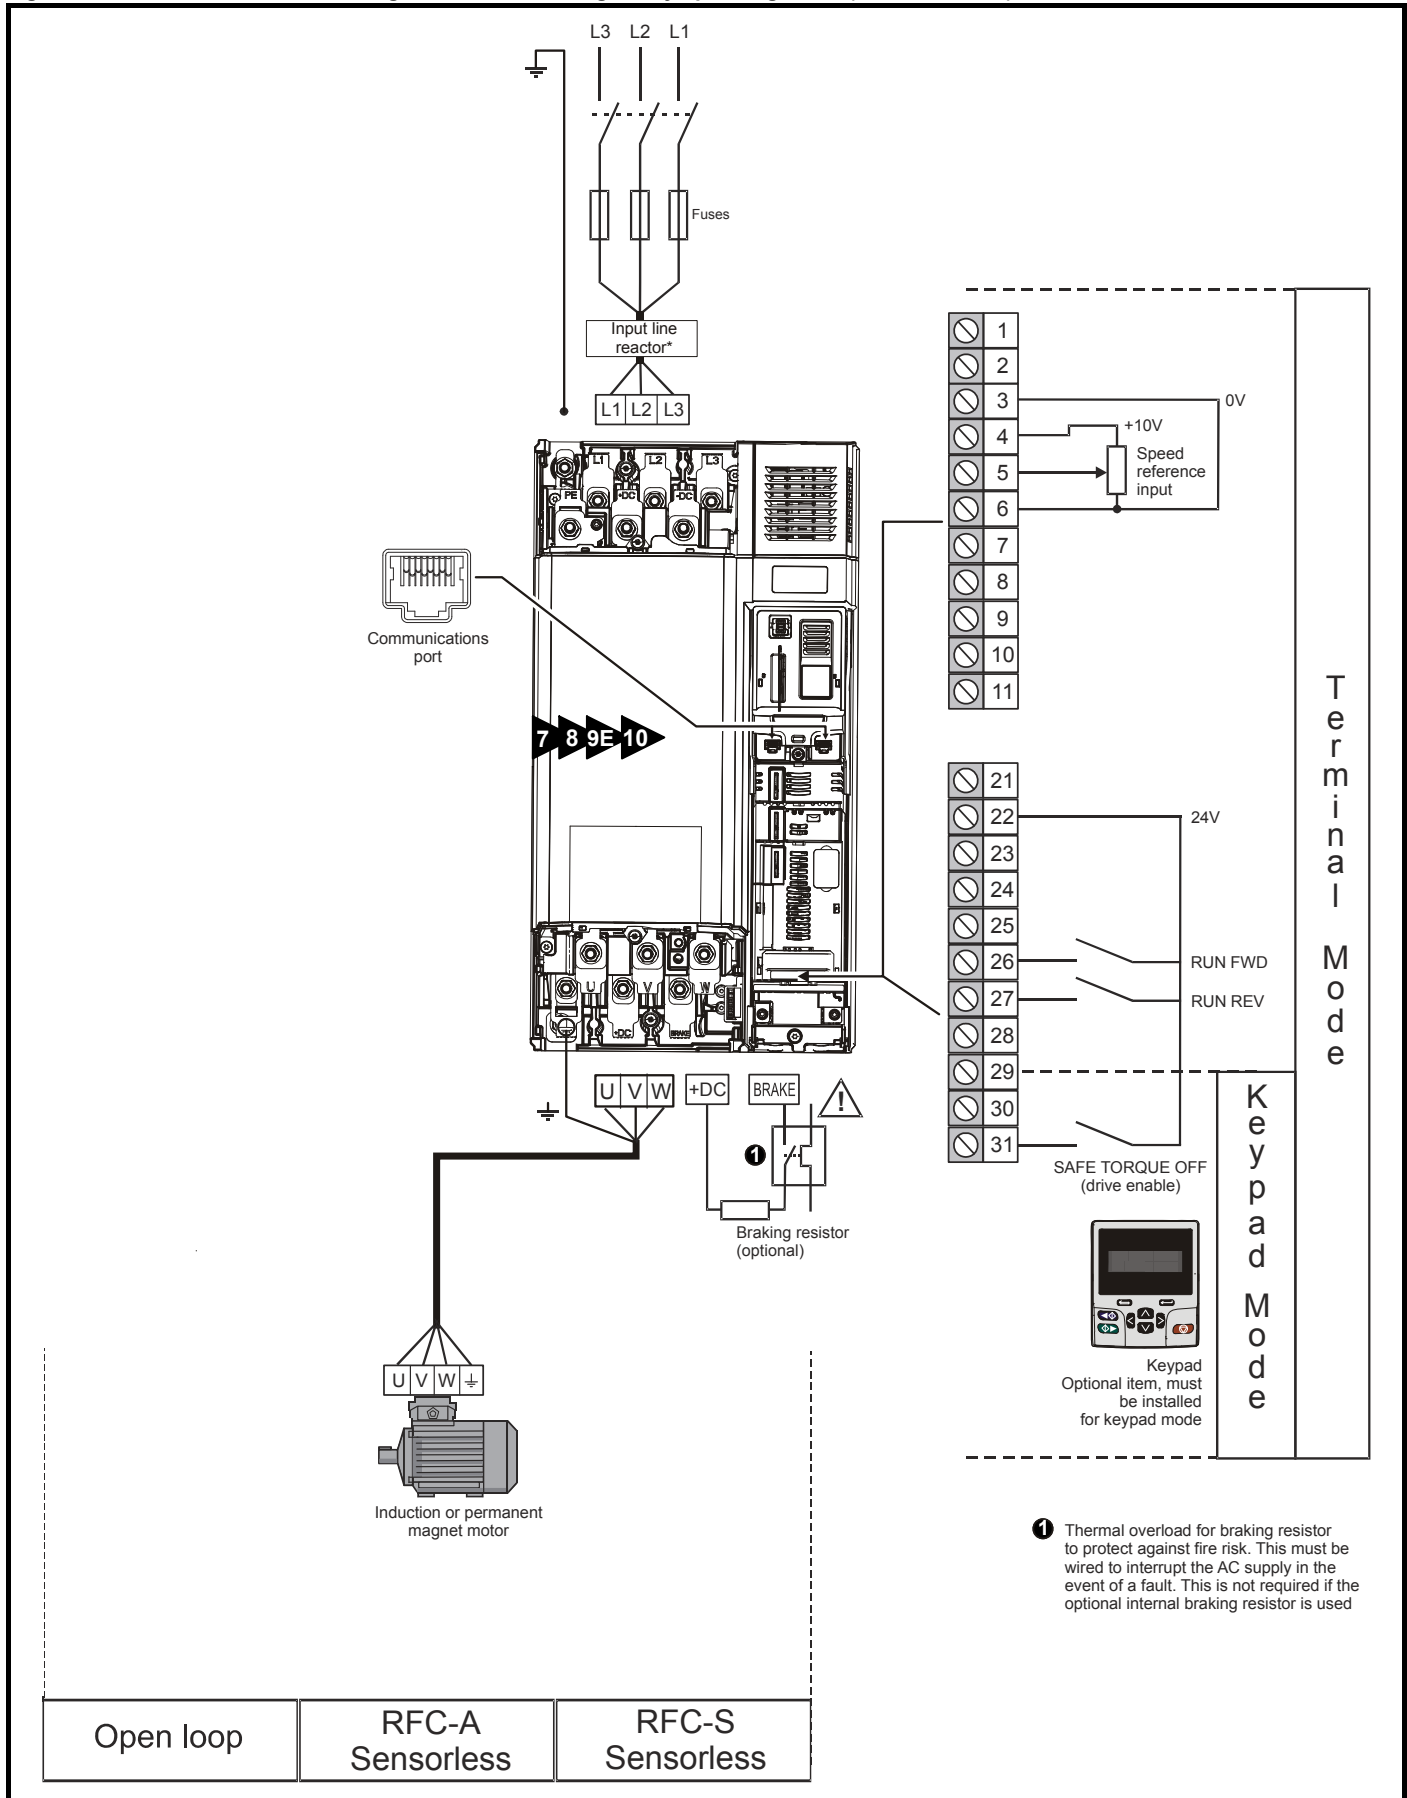

1 Thermal overload for braking resistor to protect against fire risk. This must be wired to interrupt the AC supply in the event of a fault. This is not required if the optional internal braking resistor is used

* Required for size 9E and 10.

7.3 Quick start commissioning / start-up






7.3.1 Open loop

Action	Detail																																													
Before power-up	Ensure: <ul style="list-style-type: none"> The drive enable signal is not given (terminal 31) Run signal is not given Motor is connected 																																													
Power-up the drive	Verify that Open Loop mode is displayed as the drive powers up. If the mode is incorrect see section 5.6 <i>Changing the operating mode</i> on page 103. Ensure: <ul style="list-style-type: none"> Drive displays 'Inhibit' If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 258.																																													
Enter motor nameplate details	Enter: <ul style="list-style-type: none"> Motor rated frequency in Pr 00.047 (Hz) Motor rated current in Pr 00.046 (A) Motor rated speed in Pr 00.045 (rpm) Motor rated voltage in Pr 00.044 (V) - check if Δ or λ connection 	 <table border="1"> <tr> <td colspan="2">Mot X XXXXXXXXXX</td> <td colspan="2">No XXXXXXXXXX kg</td> </tr> <tr> <td>IP55</td> <td>I_gF</td> <td>°C</td> <td>s S1</td> </tr> <tr> <td>V</td> <td>Hz</td> <td>min</td> <td>kW cosφ A</td> </tr> <tr> <td>Δ 230</td> <td>50</td> <td>1445</td> <td>2.20 0.80 8.50</td> </tr> <tr> <td>λ 400</td> <td></td> <td></td> <td></td> </tr> <tr> <td colspan="4">CN = 14.5Nm</td> </tr> <tr> <td>Δ 240</td> <td>50</td> <td>1445</td> <td>2.20 0.76 8.50</td> </tr> <tr> <td>λ 415</td> <td></td> <td></td> <td></td> </tr> <tr> <td colspan="4">CN = 14.4Nm</td> </tr> <tr> <td colspan="4">CTP: VEN 1PHASE 1~0.45A P=110W R.F. 52MIN</td> </tr> <tr> <td colspan="4">IEC 34 (BPT)</td> </tr> </table>	Mot X XXXXXXXXXX		No XXXXXXXXXX kg		IP55	I _g F	°C	s S1	V	Hz	min	kW cosφ A	Δ 230	50	1445	2.20 0.80 8.50	λ 400				CN = 14.5Nm				Δ 240	50	1445	2.20 0.76 8.50	λ 415				CN = 14.4Nm				CTP: VEN 1PHASE 1~0.45A P=110W R.F. 52MIN				IEC 34 (BPT)			
Mot X XXXXXXXXXX		No XXXXXXXXXX kg																																												
IP55	I _g F	°C	s S1																																											
V	Hz	min	kW cosφ A																																											
Δ 230	50	1445	2.20 0.80 8.50																																											
λ 400																																														
CN = 14.5Nm																																														
Δ 240	50	1445	2.20 0.76 8.50																																											
λ 415																																														
CN = 14.4Nm																																														
CTP: VEN 1PHASE 1~0.45A P=110W R.F. 52MIN																																														
IEC 34 (BPT)																																														
Set maximum frequency	Enter: <ul style="list-style-type: none"> Maximum frequency in Pr 00.002 (Hz) 																																													
Set acceleration / deceleration rates	Enter: <ul style="list-style-type: none"> Acceleration rate in Pr 00.003 (s/100 Hz) Deceleration rate in Pr 00.004 (s/100 Hz) (If braking resistor installed, set Pr 00.015 = Fast. Also ensure Pr 10.030 and Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen). 																																													
Motor thermistor set-up	The motor thermistor can be selected in Pr 07.015 . Refer to Pr 07.015 for further information.																																													
Autotune	<p>The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p>WARNING A rotating autotune will cause the motor to accelerate up to $2/3$ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference.</p> <p>The drive can be stopped at any time by removing the run signal or removing the drive enable.</p> </div> <ul style="list-style-type: none"> A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. A stationary autotune measures stator resistance and transient inductance of the motor and values relating to deadtime compensation from the drive. These are required for good performance in vector control modes. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.043. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at $2/3$ base speed in the direction selected. The rotating autotune measures the power factor of the motor. <p>To perform an autotune:</p> <ul style="list-style-type: none"> Set Pr 00.040 = 1 for a stationary autotune or set Pr 00.040 = 2 for a rotating autotune Close the Drive Enable signal (terminal 31). The drive will display 'Ready'. Close the run signal (terminal 26 or 27). The upper row of the display will flash 'Auto Tune' while the drive is performing the autotune. Wait for the drive to display 'Ready' or 'Inhibit' and for the motor to come to a standstill. <p>If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 258.</p> <ul style="list-style-type: none"> Remove the drive enable and run signal from the drive. 	 																																												
Save parameters	Select 'Save Parameters' in Pr mm.000 (alternatively enter a value of 1000 in Pr mm.000) and press the red reset button or toggle the reset digital input.																																													
Run	Drive is now ready to run																																													

7.3.2 RFC - A mode (with position feedback)

Induction motor with position feedback using optional SI-Encoder module

Only an incremental quadrature encoder as supported by the optional SI-Encoder module will be considered here.

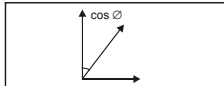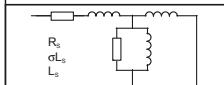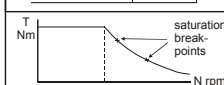







Action	Detail	
Before power-up	Ensure: <ul style="list-style-type: none"> The drive enable signal is not given (terminal 31). Run signal is not given Motor and feedback device are connected 	
Power-up the drive	Verify that RFC-A mode is displayed as the drive powers up. If the mode is incorrect see section 5.6 <i>Changing the operating mode</i> on page 103, otherwise restore parameter defaults (See section 5.8 <i>Restoring parameter defaults</i> on page 104). Ensure: <ul style="list-style-type: none"> Drive displays 'Inhibit' If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 258.	
Enable motor feedback and set parameters	Incremental encoder basic set-up Set Pr 03.024 = Feedback (0) Enter: <ul style="list-style-type: none"> Encoder power supply in Pr. mm.036 = 5 V (0), 8 V (1) or 15 V (2). * NOTE If output voltage from the encoder is >5 V, then the termination resistors must be disabled Pr mm.039 to 0. *  Setting the encoder voltage supply too high for the encoder could result in damage to the feedback device. CAUTION <ul style="list-style-type: none"> Drive encoder Lines Per Revolution (LPR) in Pr mm.034 (set according to encoder) * Drive encoder termination resistor setting in Pr mm.039: * <ul style="list-style-type: none"> 0 = A-A1, B-B1 termination resistors disabled 1 = A-A1, B-B1, termination resistors enabled * mm is dependant on the slot into which the SI-Encoder module is installed (15 = Slot 1, 16 = Slot 2, 17 = Slot 3).	
Enter motor nameplate details	<ul style="list-style-type: none"> Motor rated frequency in Pr 00.047 (Hz) Motor rated current in Pr 00.046 (A) Motor rated speed in Pr 00.045 (rpm) Motor rated voltage in Pr 00.044 (V) - check if Δ or Λ connection 	
Set maximum speed	Enter: Maximum speed in Pr 00.002 (rpm)	
Set acceleration / deceleration rates	Enter: <ul style="list-style-type: none"> Acceleration rate in Pr 00.003 (s/1000 rpm) Deceleration rate in Pr 00.004 (s/1000 rpm) (If braking resistor installed, set Pr 00.015 = Fast. Also ensure Pr 10.030, Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen). 	
Motor thermistor set-up	The motor thermistor can be selected in Pr 07.015 . Refer to Pr 07.015 for further information.	
Autotune	The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive.  A rotating autotune will cause the motor to accelerate up to $2/3$ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference. WARNING The drive can be stopped at any time by removing the run signal or removing the drive enable. <ul style="list-style-type: none"> A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. The stationary autotune measures the stator resistance and transient inductance of the motor and values relating to deadtime compensation from the drive. Measured values are used to calculate the current loop gains, and at the end of the test the values in Pr 00.038 and Pr 00.039 are updated. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.043. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at $2/3$ base speed in the direction selected. The rotating autotune measures the stator inductance of the motor and calculates the power factor. To perform an autotune: <ul style="list-style-type: none"> Set Pr 00.040 = 1 for a stationary autotune or set Pr 00.040 = 2 for a rotating autotune Close the drive enable signal (terminal 31). The drive will display 'Ready'. Close the run signal (terminal 26 or 27). The upper row of the display will flash 'Auto Tune' while the drive is performing the autotune. Wait for the drive to display 'Ready' or 'Inhibit' and for the motor to come to a standstill If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 258. <ul style="list-style-type: none"> Remove the drive enable and run signal from the drive. 	  
Save parameters	Select 'Save Parameters' in Pr mm.000 (alternatively enter a value of 1000 in Pr mm.000) and press red	
Run	Drive is now ready to run	

7.3.3 RFC - A Sensorless

Induction motor without position feedback

Action	Detail	
Before power-up	Ensure: <ul style="list-style-type: none"> The drive enable signal is not given (terminal 31) Run signal is not given Motor is connected 	
Power-up the drive	Verify that RFC-A mode is displayed as the drive powers up. If the mode is incorrect see section 5.6 <i>Changing the operating mode</i> on page 103, otherwise restore parameter defaults (See section 5.8 <i>Restoring parameter defaults</i> on page 104). Ensure: <ul style="list-style-type: none"> Drive displays 'Inhibit' If the drive trips, see <i>Chapter 13 Diagnostics</i> on page 258.	
Enter motor nameplate details	Enter: <ul style="list-style-type: none"> Motor rated frequency in Pr 00.047 (Hz) Motor rated current in Pr 00.046 (A) Motor rated speed in Pr 00.045 (rpm) Motor rated voltage in Pr 00.044 (V) - check if Δ or Y connection 	
Set maximum speed	Enter: <ul style="list-style-type: none"> Maximum speed in Pr 00.002 (rpm) 	
Set acceleration / deceleration rates	Enter: <ul style="list-style-type: none"> Acceleration rate in Pr 00.003 (s/1000rpm) Deceleration rate in Pr 00.004 (s/1000rpm) (If braking resistor installed, set Pr 00.015 = FAST. Also ensure Pr 10.030, Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen). 	
Autotune	<p>The drive is able to perform either a stationary or a rotating autotune. The motor must be at a standstill before an autotune is enabled. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive.</p> <p>NOTE It is highly recommended that a rotating autotune is performed (Pr 00.040 set to 2).</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>WARNING A rotating autotune will cause the motor to accelerate up to $\frac{2}{3}$ base speed in the direction selected regardless of the reference provided. Once complete the motor will coast to a stop. The enable signal must be removed before the drive can be made to run at the required reference. The drive can be stopped at any time by removing the run signal or removing the drive enable.</p> </div> <ul style="list-style-type: none"> A stationary autotune can be used when the motor is loaded and it is not possible to uncouple the load from the motor shaft. The stationary autotune measures the stator resistance and transient inductance of the motor and values relating to deadtime compensation from the drive. Measured values are used to calculate the current loop gains, and at the end of the test the values in Pr 00.038 and Pr 00.039 are updated. A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.043. A rotating autotune should only be used if the motor is uncoupled. A rotating autotune first performs a stationary autotune before rotating the motor at $\frac{2}{3}$ base speed in the direction selected. The rotating autotune measures the stator inductance of the motor and calculates the power factor. <p>To perform an autotune:</p> <ul style="list-style-type: none"> Set Pr 00.040 = 1 for a stationary autotune or set Pr 00.040 = 2 for a rotating autotune Close the drive enable signal (terminal 31). The drive will display 'Ready' or 'Inhibit'. Close the run signal (terminal 26 or 27). The lower display will flash 'Autotune' while the drive is performing the autotune. Wait for the drive to display 'Ready' or 'Inhibit' and for the motor to come to a standstill. <p>If the drive trips, see <i>Chapter 13 Diagnostics</i> on page 258.</p> <ul style="list-style-type: none"> Remove the drive enable and run signal from the drive. 	
Save parameters	Select 'Save Parameters' in Pr mm.000 (alternatively enter a value of 1000 in Pr mm.000) and press red reset button or toggle the reset digital input.	
Run	Drive is now ready to run	

7.3.4 RFC-S Sensorless Permanent magnet motor without position feedback

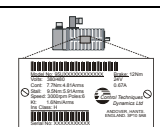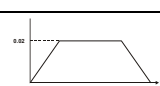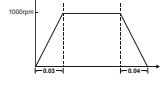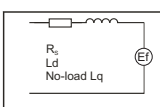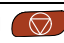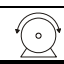Action	Detail	
Before power-up	Ensure: <ul style="list-style-type: none"> The drive enable signal is not given (terminal 31). Run signal is not given Motor is connected 	
Power-up the drive	Verify that RFC-S mode is displayed as the drive powers up. If the mode is incorrect see Chapter 5.6 <i>Changing the operating mode</i> on page 103, otherwise restore parameter defaults (see Chapter 5.8 <i>Restoring parameter defaults</i> on page 104). Ensure: <ul style="list-style-type: none"> Drive displays 'inhibit' If the drive trips, see Chapter 13 <i>Diagnostics</i> on page 258.	
Enter motor nameplate details	Enter: <ul style="list-style-type: none"> Motor rated current in Pr 00.046 (A) Ensure that this equal to or less than the Heavy Duty rating of the drive otherwise 'Motor Too Hot' trips may occur during the autotune. Number of poles in Pr 00.042 Motor rated voltage in Pr 00.044 (V) 	
Set maximum speed	Enter: <ul style="list-style-type: none"> Maximum speed in Pr 00.002 (rpm) 	
Set acceleration / deceleration rates	Enter: <ul style="list-style-type: none"> Acceleration rate in Pr 00.003 (s/1000 rpm) Deceleration rate in Pr 00.004 (s/1000 rpm) (If braking resistor installed, set Pr 00.015 = Fast. Also ensure Pr 10.030, Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen). 	
Autotune	The drive is able to perform a stationary autotune. The motor must be at a standstill before an autotune is enabled. A stationary autotune will give moderate performance. <ul style="list-style-type: none"> A stationary autotune is performed to locate the flux axis of the motor. The stationary autotune measures the stator resistance, inductance in flux axis, inductance in torque axis with no load on the motor and values relating to deadtime compensation from the drive. Measured values are used to calculate the current loop gains, and at the end of the test the values in Pr 00.038 and Pr 00.039 are updated. To perform an autotune: <ul style="list-style-type: none"> Set Pr 00.040 = 1 or 2 for a stationary autotune. (Both perform the same tests). Close the run signal (terminal 26 or 27). Close the drive enable signal (terminal 31). The upper row of the display will flash 'Auto Tune' while the drive is performing the test. Wait for the drive to display 'Ready' or 'Inhibit'. If the drive trips it cannot be reset until the drive enable signal (terminal 31) has been removed. See Chapter 13 <i>Diagnostics</i> on page 258. <ul style="list-style-type: none"> Remove the drive enabled and run signal from the drive. 	
Check Saliency	In sensorless mode, when the motor speed is below Pr 00.045 / 10, a special low speed algorithm must be used to control the motor. There are two modes available, with the mode chosen based on the saliency of the motor. The ratio No-load Lq (Pr 00.056) / Ld (Pr 05.024) provides a measure of the saliency. If this value is > 1.1, then Non-salient mode must be used (this is the default), otherwise Injection mode may be used. Set Pr 00.054 for the selected mode: Injection (0) or Non-salient (1).	
Save parameters	Select 'Save Parameters' in Pr mm.000 (alternatively enter a value of 1000 in Pr mm.000) and press red  reset button or toggle the reset digital input.	
Run	Drive is now ready to run	

7.4 Quick start commissioning / start-up using Unidrive M Connect (V02.00.00.00 onwards)

Unidrive M Connect is a Windows™ based software commissioning/start-up tool for Unidrive M. Unidrive M Connect can be used for commissioning / start-up and monitoring, drive parameters can be uploaded, downloaded and compared and simple or custom menu listings can be created. Drive menus can be displayed in standard list format or as live block diagrams. Unidrive M Connect is able to communicate with a single drive or a network. Unidrive M Connect can be downloaded from www.controltechniques.com (file size approximately 100 MB).


Unidrive M Connect system requirements

- Windows 8, Windows 7 SP1, Windows Vista SP2, Windows XP SP3
- Minimum of 1280 x 1024 screen resolution with 256 colours
- Microsoft.Net Frameworks 4.0 (this is provided in the downloaded file)
- Note that you must have administrator rights to install Unidrive M Connect


Any previous copy of Unidrive M Connect should be uninstalled before proceeding with the installation (existing projects will not be lost). Included within Unidrive M Connect is the *Parameter Reference Guide* for Unidrive M600.

7.4.1 Power-up the drive

1. Start Unidrive M Connect, and on the 'Project Management' screen select 'Scan serial RTU network' or 'Scan all connected drives'.

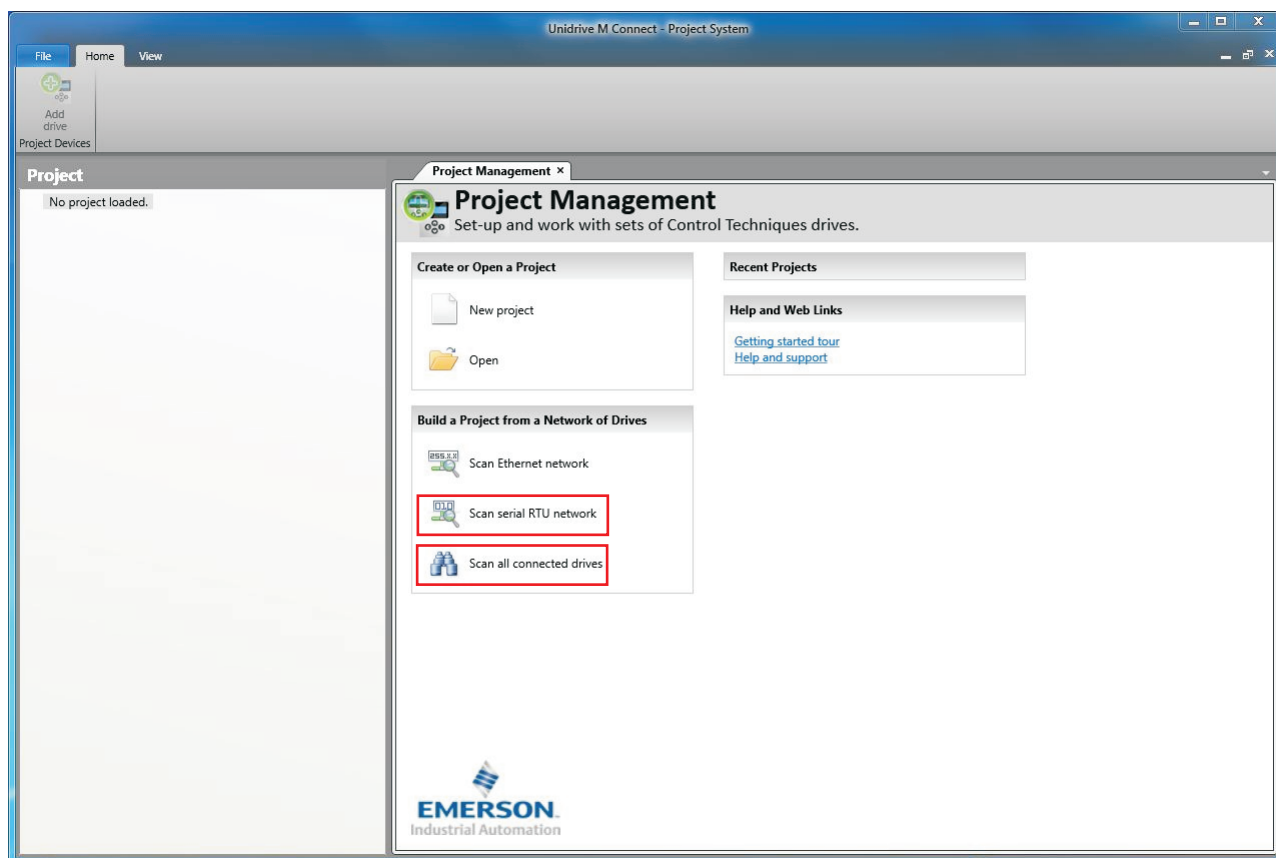

Select the discovered drive.

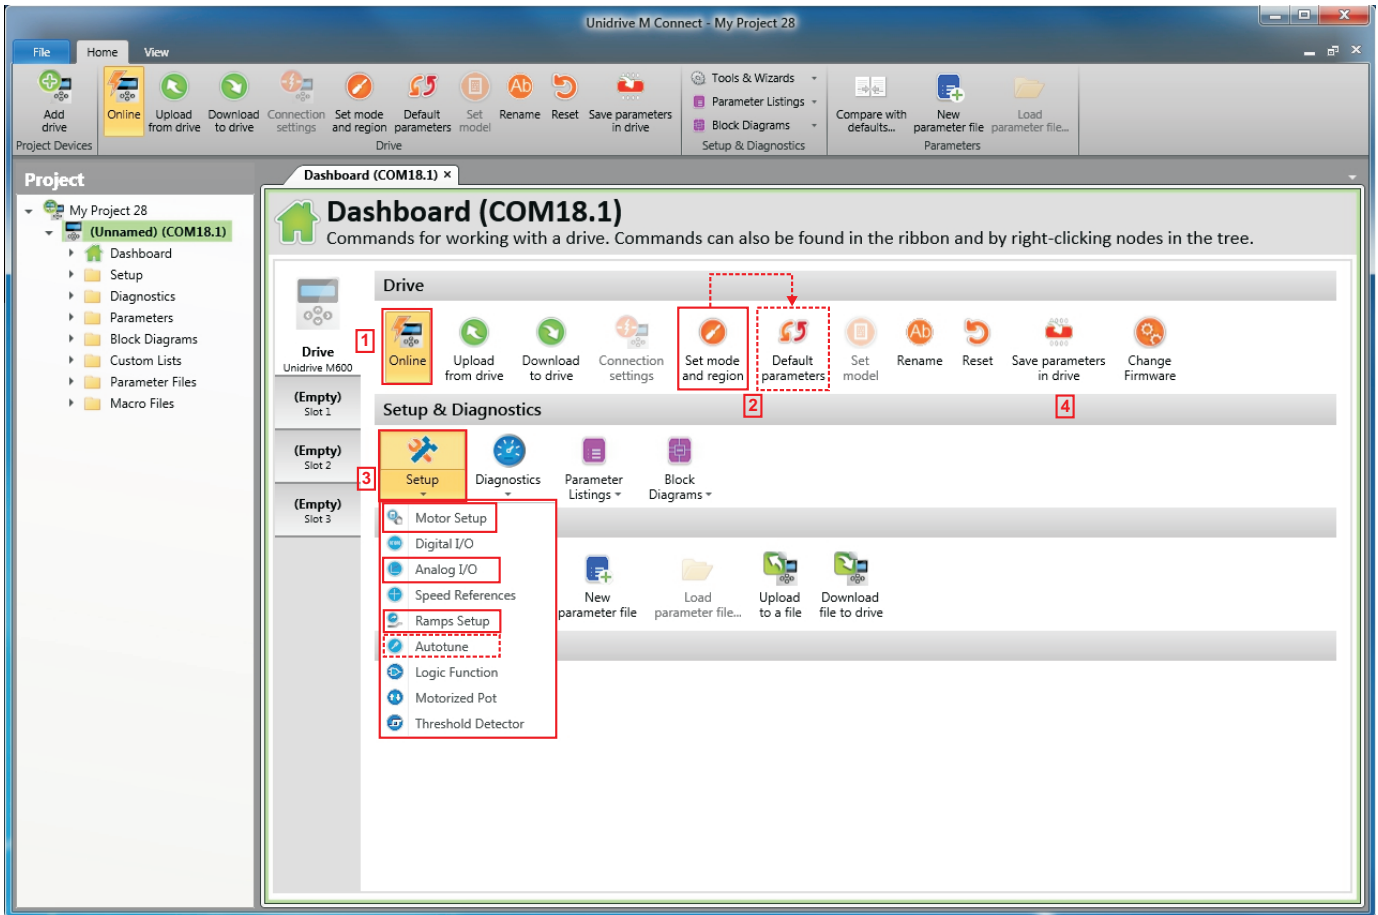

1. Select the 'Online' icon to connect with the drive. When a successful connection is made the icon will be highlighted orange.

2. Select 'Set mode and region'.


If the required control mode is highlighted in the 'Drive Settings' dialog, then:

- Change the supply frequency, if required and select 'Apply', otherwise select 'Cancel'.
- Select 'Default parameters' from the Dashboard and in the 'Default Parameters' dialogue, select 'Apply'

If the required control mode is not highlighted in the 'Drive Settings' dialog then:

- Select the required mode and supply frequency.
- Select 'Apply'.

3. Select 'Setup' and perform the steps highlighted (dotted lines indicate a step which may not need to be performed (see below):


Action	Detail
Motor Setup	Unidrive M Connect contains a database for induction motors and permanent magnet motors. Provision is also made to enter motor nameplate data. The next section describes the use of the motor database for a Leroy Somer LSRPM motor used in RFC-S Sensorless mode.
Motor Feedback Setup	This only needs to be performed in RFC-A (with feedback) mode Set Pr 03.024 = Feedback (0) Enter: <ul style="list-style-type: none"> Encoder power supply in Pr. mm.036 = 5 V (0), 8 V (1) or 15 V (2). * <p>NOTE If output voltage from the encoder is >5 V, then the termination resistors must be disabled Pr mm.039 to 0. *</p> <div style="border: 1px solid black; padding: 5px;">  <p>Setting the encoder voltage supply too high for the encoder could result in damage to the feedback device.</p> </div> <ul style="list-style-type: none"> Drive encoder Lines Per Revolution (LPR) in Pr mm.034 (set according to encoder) * Drive encoder termination resistor setting in Pr mm.039: * <ul style="list-style-type: none"> 0 = A-A\, B-B\ termination resistors disabled 1 = A-A\, B-B\, termination resistors enabled <p>* mm is dependant on the slot into which the SI-Encoder module is installed (15 =Slot 1, 16 = Slot 2, 17 = Slot 3).</p>
Analog I/O	The motor thermistor can be selected in Pr 07.015 . Refer to the parameter help for Pr 07.015 for further information.
Ramps Setup	Enter the required Acceleration rate and Deceleration rate Note: If a braking resistor is installed, set 'Ramp mode' to 'Fast'. Also ensure Pr 10.030 and Pr 10.031 and Pr 10.061 are set correctly, otherwise premature 'Brake R Too Hot' trips may be seen).
Autotune	Not required when using data from the motor database for a Leroy Somer LSRPM motor used in RFC-S Sensorless mode.

4. Select 'Save parameters in drive' to perform a parameter save.
The drive is now ready to run.

7.4.2 Use of the motor database for a Leroy Somer LSRPM motor for use in RFC-S Sensorless mode.


Select 'Motor Setup' from the 'Dashboard'.

On the 'Motor Setup' screen, select 'Choose a motor'.

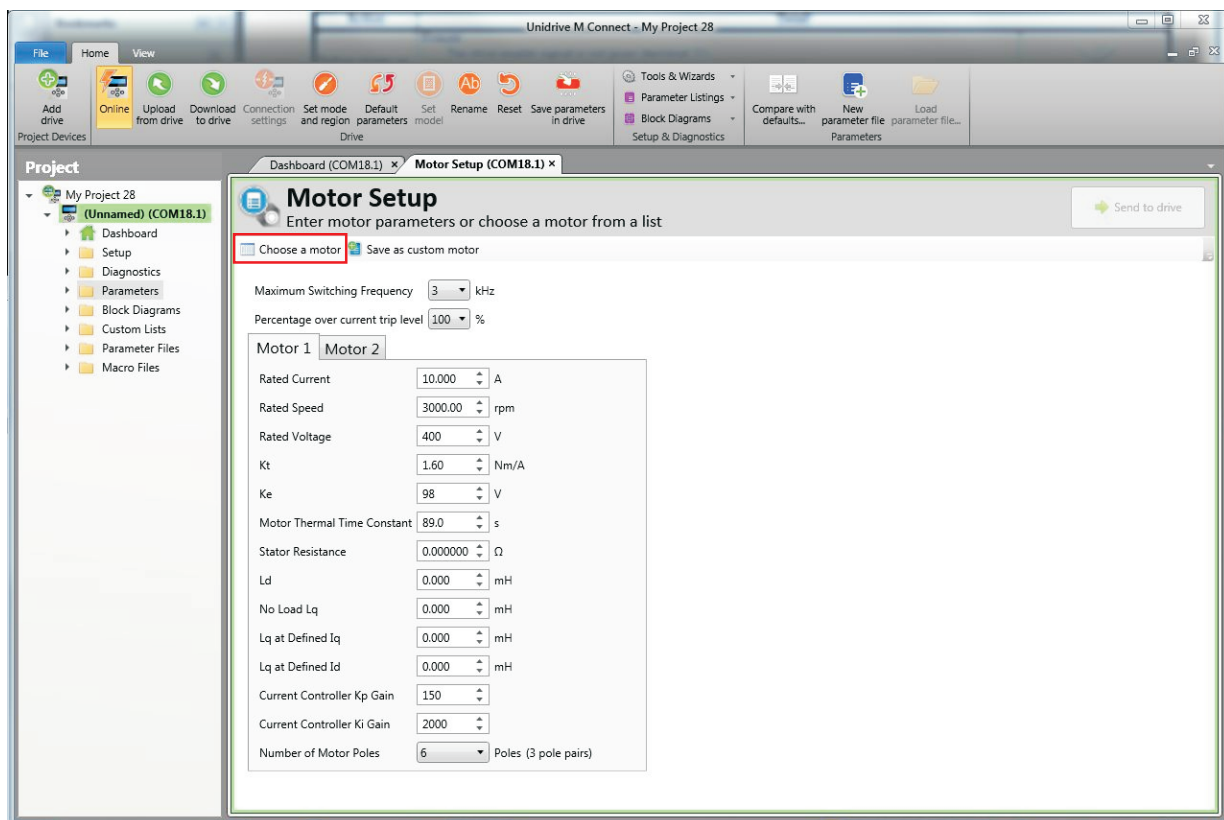


Select the required motor database:

Select the required motor from the list and click 'OK'.

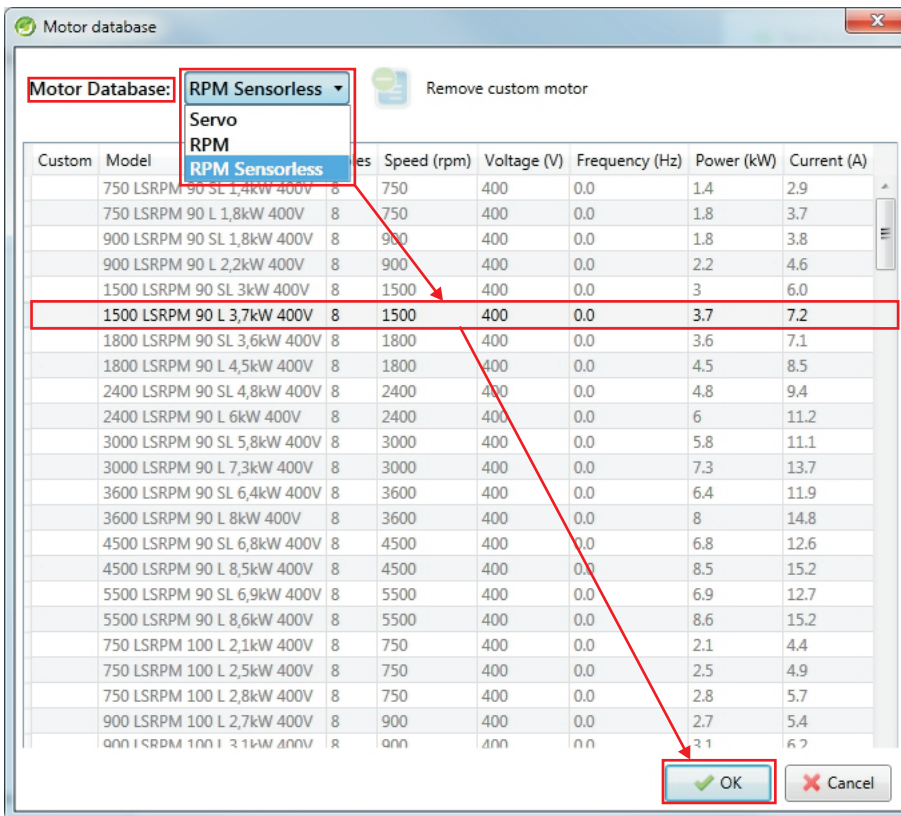


The data for the selected motor is displayed on the 'Motor Setup' screen. Click 'Send to drive' to set the associated parameters.

It is possible to set motor parameters for motor 2, by selecting the 'Motor 2' tab and following the same procedure.

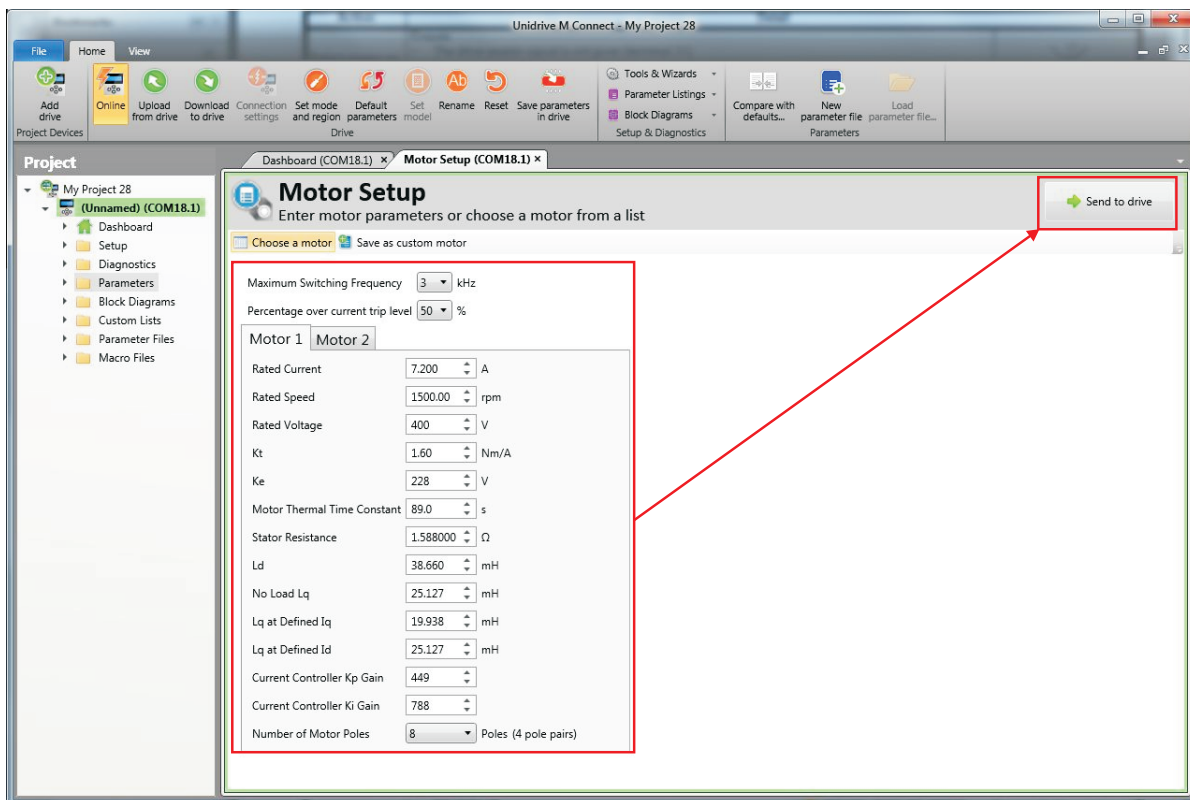


7.5 Diagnostics

If the drive trips, it is possible to interrogate the trip log from within Unidrive M Connect. Select 'Drive Trip Log' from the 'Dashboard'.

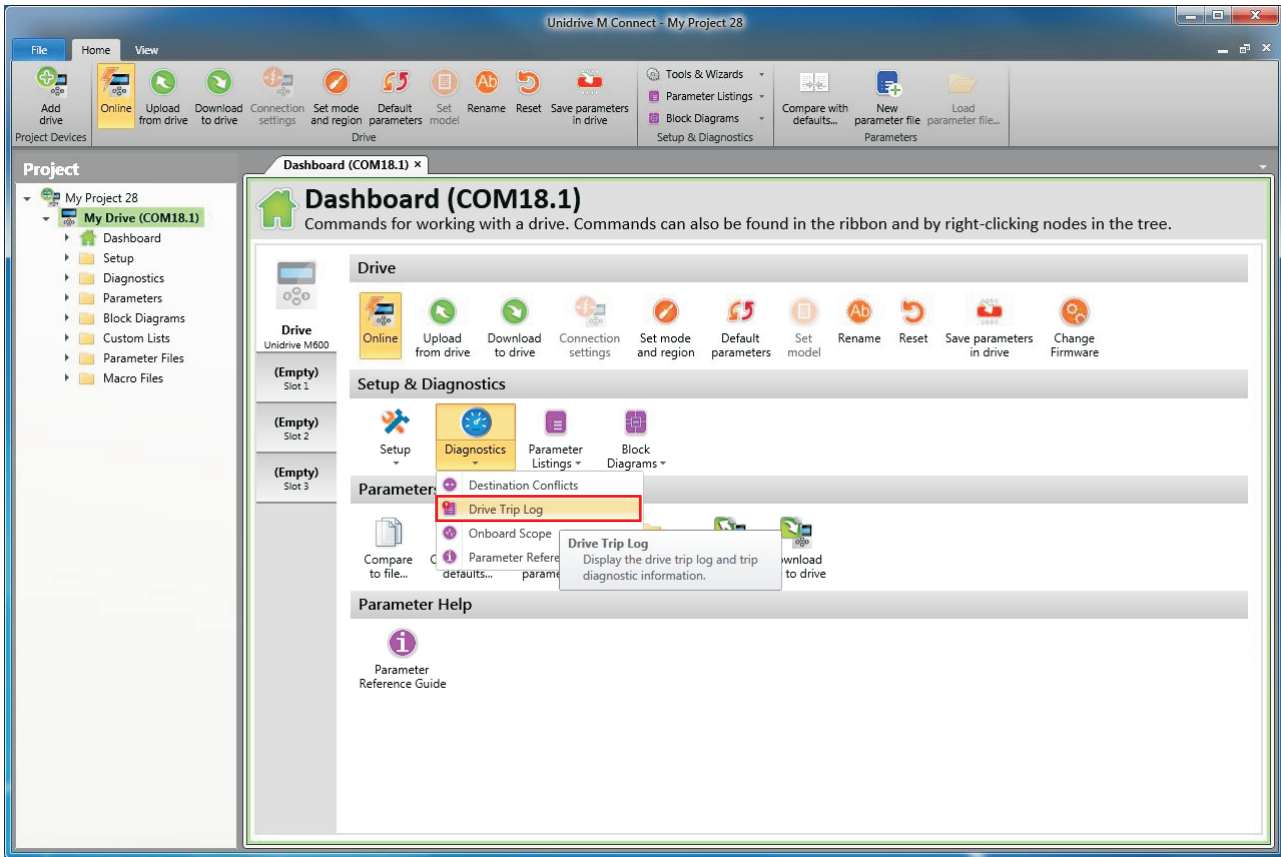

The drive trip log shows the trip responsible for stopping the autotune and a description of the trip.

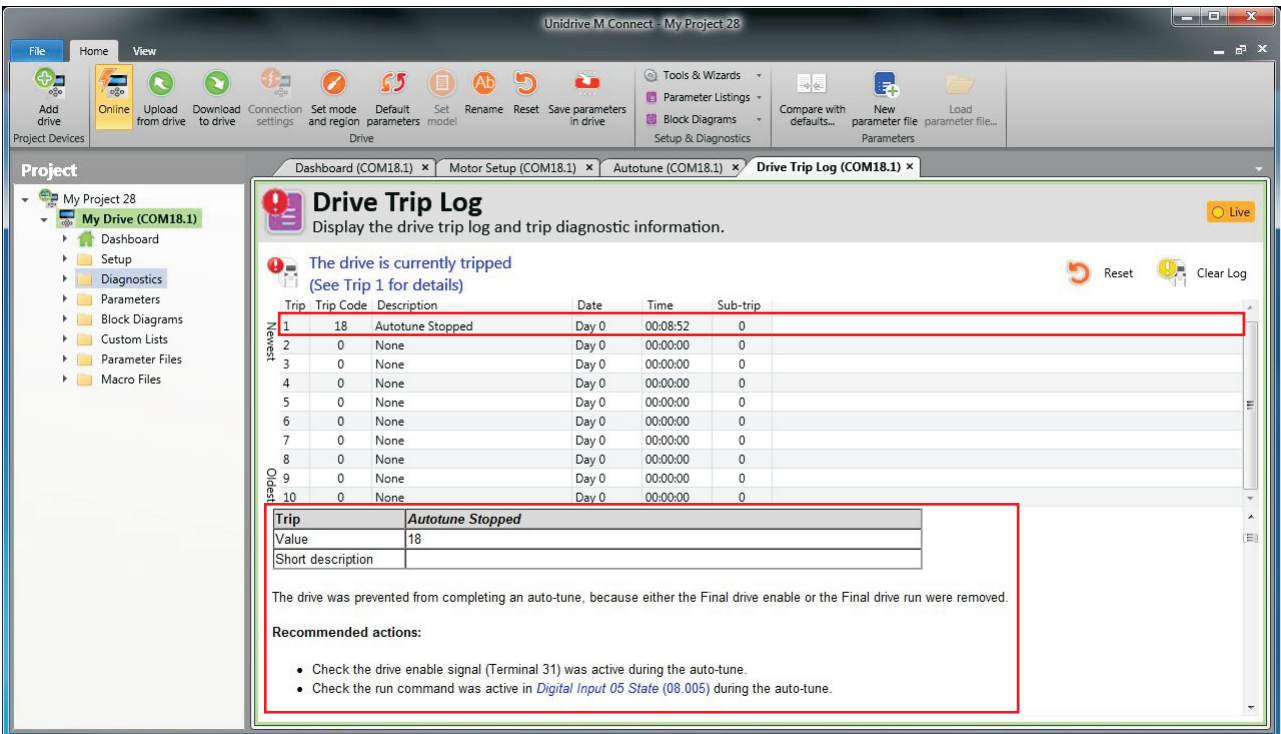

8 Optimization

This chapter takes the user through methods of optimizing the drive set-up and maximize the performance. The auto-tuning features of the drive simplify the optimization tasks.

8.1 Motor map parameters

8.1.1 Open loop motor control

Pr 00.046 {05.007} Rated Current	Defines the maximum continuous motor current
<ul style="list-style-type: none"> The rated current parameter must be set to the maximum continuous current of the motor. (See section 8.2 <i>Maximum motor rated current</i> on page 151, for information about setting this parameter higher than the maximum Heavy Duty current rating). The motor rated current is used in the following: <ul style="list-style-type: none"> Current limits (see section section 8.3 <i>Current limits</i> on page 151, for more information) Motor thermal overload protection (see section 8.4 <i>Motor thermal protection</i> on page 151, for more information) Vector mode voltage control (see <i>Open Loop Control Mode</i> (00.007), later in this table) Slip compensation (see <i>Enable Slip Compensation</i> (05.027), later in this table) Dynamic V/F control 	
Pr 00.044 {05.009} Rated Voltage	Defines the voltage applied to the motor at rated frequency
Pr 00.047 {05.006} Rated Frequency	Defines the frequency at which rated voltage is applied
<p>The <i>Rated Voltage</i> (00.044) and the <i>Rated Frequency</i> (00.047) are used to define the voltage to frequency characteristic applied to the motor (see <i>Open Loop Control Mode</i> (00.007), later in this table). The <i>Rated Frequency</i> (00.047) is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see <i>Rated Speed</i> (00.045), later in this table).</p>	
Pr 00.045 {05.008} Rated Speed	Defines the full load rated speed of the motor
Pr 00.042 {05.011} Number Of Motor Poles	Defines the number of motor poles
<p>The motor rated speed and the number of poles are used with the motor rated frequency to calculate the rated slip of induction machines in Hz.</p> $\text{Rated slip (Hz)} = \text{Motor rated frequency} - (\text{Number of pole pairs} \times [\text{Motor rated speed} / 60]) = \mathbf{00.047} = \left(\frac{\mathbf{00.042}}{2} \times \frac{\mathbf{00.045}}{60} \right)$ <p>If Pr 00.045 is set to 0 or to synchronous speed, slip compensation is disabled. If slip compensation is required this parameter should be set to the nameplate value, which should give the correct rpm for a hot machine. Sometimes it will be necessary to adjust this when the drive is commissioned because the nameplate value may be inaccurate. Slip compensation will operate correctly both below base speed and within the field-weakening region. Slip compensation is normally used to correct for the motor speed to prevent speed variation with load. The rated load rpm can be set higher than synchronous speed to deliberately introduce speed droop. This can be useful to aid load sharing with mechanically coupled motors.</p> <p>Pr 00.042 is also used in the calculation of the motor speed display by the drive for a given output frequency. When Pr 00.042 is set to 'Automatic', the number of motor poles is automatically calculated from the rated frequency Pr 00.047, and the motor rated speed Pr 00.045.</p> $\text{Number of poles} = 120 \times (\text{Rated Frequency} (00.047) / \text{Rated Speed} (00.045)) \text{ rounded to the nearest even number.}$	
Pr 00.043 {05.010} Rated Power Factor	Defines the angle between the motor voltage and current
<p>The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. The power factor is used in conjunction with the <i>Rated Current</i> (00.046), to calculate the rated active current and magnetising current of the motor. The rated active current is used extensively to control the drive, and the magnetising current is used in vector mode stator resistance compensation. It is important that this parameter is set up correctly. The drive can measure the motor rated power factor by performing a rotating autotune (see <i>Autotune</i> (Pr 00.040), below).</p>	

Pr 0.40 {5.12} Autotune

There are two autotune tests available in open loop mode, a stationary and a rotating test. A rotating autotune should be used whenever possible so the measured value of power factor of the motor is used by the drive.

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary test measures the *Stator Resistance* (05.017), *Transient Inductance* (05.024), *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060) which are required for good performance in vector control modes (see *Open Loop Control Mode* (00.007), later in this table). If *Enable Stator Compensation* (05.049) = 1, then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). The stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr **00.043**. To perform a Stationary autotune, set Pr **00.040** to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, as above, then a rotating test is performed in which the motor is accelerated with currently selected ramps up to a frequency of *Rated Frequency* (05.006) $\times \frac{2}{3}$, and the frequency is maintained at that level for 4 seconds. *Stator Inductance* (05.025) is measured and this value is used in conjunction with other motor parameters to calculate *Rated Power Factor* (05.010). To perform a Rotating autotune, set Pr **00.040** to 2, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the *Control Word* (06.042) and *Control Word Enable* (06.043).

Pr 00.007 {05.014} Open Loop Control Mode

There are several voltage modes available which fall into two categories, vector control and fixed boost.

Vector control

Vector control mode provides the motor with a linear voltage characteristic from 0 Hz to motor *Rated Frequency* (00.047), and then a constant voltage above motor rated frequency. When the drive operates between motor rated frequency/50 and motor rated frequency/4, full vector based stator resistance compensation is applied. When the drive operates between motor rated frequency/4 and motor rated frequency/2 the stator resistance compensation is gradually reduced to zero as the frequency increases. For the vector modes to operate correctly the *Rated Power Factor* (00.043), *Stator Resistance* (05.017) and *Voltage Offset At Zero Current* (05.058) are all required to be set up accurately. The drive can be made to measure these by performing an autotune (see Pr 00.040 *Autotune*). The drive can also be made to measure the stator resistance and voltage offset automatically every time the drive is enabled or the first time the drive is enabled after it is powered up, by selecting one of the vector control voltage modes.

(0) **Ur S** = The stator resistance and the voltage offset are measured and the parameters for the selected motor map are over-written each time the drive is made to run. This test can only be done with a stationary motor where the flux has decayed to zero. Therefore this mode should only be used if the motor is guaranteed to be stationary each time the drive is made to run. To prevent the test from being done before the flux has decayed there is a period of 1 second after the drive has been in the ready state during which the test is not done if the drive is made to run again. In this case, previously measured values are used. Ur S mode ensures that the drive compensates for any change in motor parameters due to changes in temperature. The new values of stator resistance and voltage offset are not automatically saved to the drive's EEPROM.(4)

(4) **Ur I** = The stator resistance and voltage offset are measured when the drive is first made to run after each power-up. This test can only be done with a stationary motor. Therefore this mode should only be used if the motor is guaranteed to be stationary the first time the drive is made to run after each power-up. The new values of stator resistance and voltage offset are not automatically saved to the drive's EEPROM.

(1) **Ur** = The stator resistance and voltage offset are not measured. The user can enter the motor and cabling resistance into the *Stator Resistance* (05.017). However this will not include resistance effects within the drive inverter. Therefore if this mode is to be used, it is best to use an autotune test initially to measure the stator resistance and voltage offset.

(3) **Ur_Auto** = The stator resistance and voltage offset are measured once, the first time the drive is made to run. After the test has been completed successfully the *Open Loop Control Mode* (00.007) is changed to Ur mode. The *Stator Resistance* (05.017) and *Voltage Offset At Zero Current* (05.058) parameters are written to, and along with the *Open Loop Control Mode* (00.007), are saved in the drive's EEPROM. If the test fails, the voltage mode will stay set to Ur Auto and the test will be repeated next time the drive is made to run.

Fixed boost

Neither the stator resistance nor the voltage offset are used in the control of the motor, instead a fixed characteristic with low frequency voltage boost as defined by Pr **00.008**, is used. Fixed boost mode should be used when the drive is controlling multiple motors. There are two settings of fixed boost available:

(2) **Fixed** = This mode provides the motor with a linear voltage characteristic from 0 Hz to *Rated Frequency* (00.047), and then a constant voltage above rated frequency.

(5) **Square** = This mode provides the motor with a square law voltage characteristic from 0 Hz to *Rated Frequency* (00.047), and then a constant voltage above rated frequency. This mode is suitable for variable torque applications like fans and pumps where the load is proportional to the square of the speed of the motor shaft. This mode should not be used if a high starting torque is required.

Pr 00.007 {05.014} Open Loop Control Mode (cont)



Fixed boost

Neither the stator resistance nor the voltage offset are used in the control of the motor, instead a fixed characteristic with low frequency voltage boost as defined by parameter Pr 00.008, is used. Fixed boost mode should be used when the drive is controlling multiple motors. There are two settings of fixed boost available:

(2) **Fixed** = This mode provides the motor with a linear voltage characteristic from 0 Hz to *Rated Frequency* (00.047), and then a constant voltage above rated frequency.


(5) **Square** = This mode provides the motor with a square law voltage characteristic from 0 Hz to *Rated Frequency* (00.047), and then a constant voltage above rated frequency. This mode is suitable for variable torque applications like fans and pumps where the load is proportional to the square of the speed of the motor shaft. This mode should not be used if a high starting torque is required.

For both these modes, at low frequencies (from 0Hz to $\frac{1}{2} \times$ Pr 00.047) a voltage boost is applied defined by Pr 00.008 as shown below:

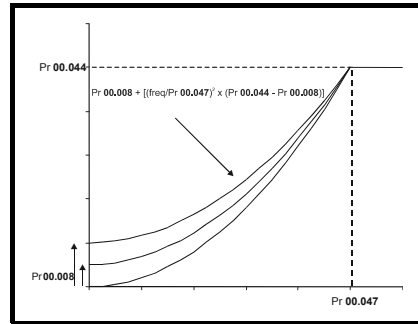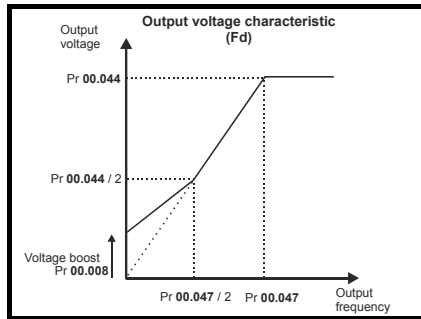

Pr 05.027 Enable Slip Compensation

When a motor, being controlled in open loop mode, has load applied a characteristic of the motor is that the output speed droops in proportion to the load applied as shown:

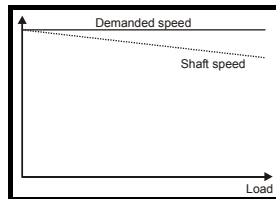

In order to prevent the speed droop shown above slip compensation should be enabled. To enable slip compensation Pr 05.027 must be set to a 1 (this is the default setting), and the motor rated speed must be entered in Pr 00.045 (Pr 05.008).

The motor rated speed parameter should be set to the synchronous speed of the motor minus the slip speed. This is normally displayed on the motor nameplate, i.e. for a typical 18.5 kW, 50 Hz, 4 pole motor, the motor rated speed would be approximately 1465 rpm. The synchronous speed for a 50 Hz, 4 pole motor is 1500 rpm, so therefore the slip speed would be 35 rpm. If the synchronous speed is entered in Pr 00.045, slip compensation will be disabled. If too small a value is entered in Pr 00.045, the motor will run faster than the demanded frequency. The synchronous speeds for 50 Hz motors with different numbers of poles are as follows:

2 pole = 3000 rpm, 4 pole = 1500 rpm, 6pole =1000 rpm, 8 pole = 750 rpm

8.1.2 RFC-A Mode

Induction motor with position feedback (using SI-Encoder module)

Pr 00.046 {05.007} Motor Rated Current	Defines the maximum motor continuous current
<p>The motor rated current parameter must be set to the maximum continuous current of the motor. (See section 8.2 <i>Maximum motor rated current</i> on page 151, for information about setting this parameter higher than the maximum Heavy Duty current rating.) The motor rated current is used in the following:</p> <ul style="list-style-type: none"> • Current limits (see section 8.3 <i>Current limits</i> on page 151, for more information). • Motor thermal overload protection (see section 8.4 <i>Motor thermal protection</i> on page 151, for more information) • Vector control algorithm 	
Pr 00.044 {05.009} Rated Voltage	Defines the voltage applied to the motor at rated frequency
Pr 00.047 {05.006} Rated Frequency	Defines the frequency at which rated voltage is applied
<p>The <i>Rated Voltage</i> (00.044) and the <i>Rated Frequency</i> (00.047) are used to define the voltage to frequency characteristic applied to the motor (see <i>Open Loop Control Mode</i> (00.007), later in this table). The motor rated frequency is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see motor <i>Rated Speed</i> (00.045), later in this table).</p>	
<p>The graph is titled "Output voltage characteristic". The vertical axis is labeled "Output voltage" and the horizontal axis is labeled "Output frequency". A solid line starts at the origin (0,0) and rises linearly. A dashed horizontal line from the y-axis at "Pr 00.044 / 2" meets the line at a point, and a dashed vertical line from the x-axis at "Pr 00.047 / 2" meets the line at the same point. The line continues linearly to a point where a dashed horizontal line from the y-axis at "Pr 00.044" meets the line at a point, and a dashed vertical line from the x-axis at "Pr 00.047" meets the line at the same point. From this point, the line continues horizontally to the right, representing constant output voltage for frequencies above the rated frequency.</p>	
Pr 00.045 {05.008} Rated Speed	Defines the full load rated speed of the motor
Pr 00.042 {05.011} Number Of Motor Poles	Defines the number of motor poles
<p>The motor rated speed and motor rated frequency are used to determine the full load slip of the motor which is used by the vector control algorithm. Incorrect setting of this parameter has the following effects:</p> <ul style="list-style-type: none"> • Reduced efficiency of motor operation • Reduction of maximum torque available from the motor • Reduced transient performance • Inaccurate control of absolute torque in torque control modes <p>The nameplate value is normally the value for a hot motor; however, some adjustment may be required when the drive is commissioned if the nameplate value is inaccurate. Either a fixed value can be entered in this parameter or an optimization system may be used to automatically adjust this parameter (see <i>Motor Parameter Adaptive Control</i> (05.016), later in this table).</p> <p>When Pr 00.042 is set to 'Automatic', the number of motor poles is automatically calculated from the motor <i>Rated Frequency</i> (00.047), and the motor <i>Rated Speed</i> (00.045).</p> <p>Number of poles = $120 \times (\text{Motor Rated Frequency (00.047)} / \text{Motor Rated Speed (00.045)})$ rounded to the nearest even number.</p>	
Pr 00.043 {5.10} Rated Power Factor	Defines the angle between the motor voltage and current
<p>The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. If the <i>Stator Inductance</i> (05.025) is set to zero then the power factor is used in conjunction with the motor <i>Rated Current</i> (00.046) and other motor parameters to calculate the rated active and magnetising currents of the motor, which are used in the vector control algorithm. If the stator inductance has a non-zero value this parameter is not used by the drive, but is continuously written with a calculated value of power factor. The stator inductance can be measured by the drive by performing a rotating autotune (see <i>Autotune</i> (Pr 00.040), later in this table).</p>	

Pr 00.040 {05.012} Autotune

There are four autotune tests available in RFC-A mode, a stationary test, a rotating test and two inertia measurement tests. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive. An inertia measurement test should be performed separately to a stationary or rotating autotune.

It is highly recommended that a rotating autotune is performed (Pr 00.040 set to 2).

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary autotune measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr 04.013 and Pr 04.014 are updated. *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060) for the drive are also measured. Additionally, if *Enable Stator Compensation* (05.049) = 1, then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.043. To perform a stationary autotune, set Pr 00.040 to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, a rotating test is then performed in which the motor is accelerated with currently selected ramps up to a frequency of *Rated Frequency* (05.006) x 2/3, and the frequency is maintained at the level for up to 40 s. During the rotating autotune the *Stator Inductance* (05.025), and the motor saturation breakpoints (Pr 05.029, Pr 05.030, Pr 06.062 and Pr 05.063) are modified by the drive. The power factor is also modified for user information only, but is not used after this point as the stator inductance is used in the vector control algorithm instead. To perform a Rotating autotune, set Pr 00.040 to 2, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- The inertia measurement test can measure the total inertia of the load and the motor. This is used to set the speed loop gains (see Speed loop gains) and to provide torque feed-forwards when required during acceleration.

Two tests are available:

Signal injection (when using an SI-Encoder module) This test measures the mechanical characteristic of the motor and load by rotating the motor at the speed defined by the present speed reference and injecting a series of speed test signals. This test should only be used provided all the basic control parameters have been set-up correctly and the speed controller parameters should be set to conservative levels, such as the default values, so that the motor is stable when it runs. If *Mechanical Load Test Level* (05.021) is left at its default value of zero then the peak level of the injection signal will be 1 % of the maximum speed reference subject to a maximum of 500 rpm. If a different test level is required then *Mechanical Load Test Level* (05.021) should be set to a non-zero value to define the level as a percentage of the maximum speed reference, again subject to a maximum of 500 rpm. The user defined speed reference which defines the speed of the motor should be set to a level higher than the test level, but not high enough for flux weakening to become active. In some cases however, it is possible to perform the test at zero speed provided the motor is free to move, but it may be necessary to increase the test signal from the default value. The test will give the correct results when there is a static load applied to the motor and in the presence of mechanical damping. To perform an Inertia measurement autotune, set Pr 00.040 to 4, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

If the speed controller cannot be set up for stable operation an alternative test is provided, where a series of torque levels are applied to accelerate and decelerate the motor to measure the inertia.

Applied torque (sensorless mode) This test may give inaccurate results, if the motor rated speed is not set to the correct value for the motor, or if standard ramp mode is active. During the inertia measurement test a series of progressively larger torque levels are applied to the motor (20 %, 40 % ... 100 % of rated torque) to accelerate the motor up to $\frac{3}{4} \times \text{Rated Speed}$ (05.008) to determine the inertia from the acceleration/ deceleration time. The test attempts to reach the required speed within 5 s, but if this fails the next torque level is used. When 100 % torque is used the test allows 60 s for the required speed to be reached, but if this is unsuccessful an Autotune trip is initiated. To reduce the time taken for the test it is possible to define the level of torque to be used for the test by setting *Mechanical Load Test Level* (05.021) to a non-zero value. When the test level is defined the test is only carried out at the defined test level and 60 s is allowed for the motor to reach the required speed. It should be noted that if the maximum speed allows for flux weakening then it may not be possible to achieve the required torque level to accelerate the motor quickly enough. If this is the case, the maximum speed reference should be reduced. To perform an Inertia measurement autotune, set Pr 00.040 to 4, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the control word (Pr 06.042 & Pr 06.043)

Pr 05.016 Motor Parameter Adaptive Control

(When using an SI-Encoder option module)

The motor *Rated Speed* (00.045) in conjunction with the motor *Rated Frequency* (00.047) defines the full load slip of the motor. The slip is used in the motor model for RFC-A control. The full load slip of the motor varies with rotor resistance which can vary significantly with motor temperature. When Pr 05.016 is set to 1 or 2 the drive can automatically sense if the value of slip defined by Pr 00.047 and Pr 00.045 has been set incorrectly or if it has varied with motor temperature. If the value is incorrect Pr 00.045 is automatically adjusted. Pr 00.045 is not saved at power-down, and so when the drive is powered-down and up again it will return to the last saved value. If the new value is required at the next power-up it must be saved by the user.

The adaptive control system is only enabled when the $|\text{Output Frequency}|$ (05.001) is above Rated Frequency (05.006) / 8, and the $|\text{Percentage Load}|$ (04.020) is greater than 60 %. The adaptive control system is disabled again if the $|\text{Percentage Load}|$ (04.020) falls below 50 %. For best optimization results the correct values of *Stator Resistance* (05.017), *Transient Inductance* (05.024), *Stator Inductance* (05.025), *Saturation Breakpoint 1* (05.029), *Saturation Breakpoint 2* (05.062), *Saturation Breakpoint 3* (05.030) and *Saturation Breakpoint 4* (05.063) should be used. If *Motor Parameter Adaptive Control* (05.016) = 1 the gain of the adaptive control system is low and hence the rate at which it converges is slow. If *Motor Parameter Adaptive Control* (05.016) = 2 the gain is increased by a factor of 16 and the convergence rate is increased.

Pr 00.038 {04.013} / Pr 00.039 {04.014} Current Loop Gains

The current loop gains proportional (Kp) and integral (Ki) gains control the response of the current loop to a change in current (torque) demand. The default values give satisfactory operation with most motors. However, for optimal performance in dynamic applications it may be necessary to change the gains to improve the performance. The *Current Controller Kp Gain* (04.013) is the most critical value in controlling the performance. The values for the current loop gains can be calculated by performing a stationary or rotating autotune (see *Autotune* Pr 00.040, earlier in this table) the drive measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor and calculates the current loop gains.

This will give a step response with minimum overshoot after a step change of current reference. The proportional gain can be increased by a factor of 1.5 giving a similar increase in bandwidth; however, this gives a step response with approximately 12.5 % overshoot. The equation for the integral gain gives a conservative value. In some applications where it is necessary for the reference frame used by the drive to dynamically follow the flux very closely (i.e. high speed Sensorless RFC-A induction motor applications) the integral gain may need to have a significantly higher value.

Speed Loop Gains (Pr 00.007 {03.010}, Pr 00.008 {03.011}, Pr 00.009 {03.012})

The speed loop gains control the response of the speed controller to a change in speed demand. The speed controller includes proportional (Kp) and integral (Ki) feed forward terms, and a differential (Kd) feedback term. The drive holds two sets of these gains and either set may be selected for use by the speed controller with Pr 03.016. If Pr 03.016 = 0, gains Kp1, Ki1 and Kd1 (Pr 00.007 to Pr 00.009) are used, and if Pr 03.016 = 1, gains Kp2, Ki2 and Kd2 (Pr 03.013 to Pr 03.015) are used. Pr 03.016 may be changed when the drive is enabled or disabled. If the load is predominantly a constant inertia and constant torque, the drive can calculate the required Kp and Ki gains to give a required compliance angle or bandwidth dependant on the setting of Pr 03.017.

Speed Controller Proportional Gain (Kp), Pr 00.007 {03.010} and Pr 03.013

If the proportional gain has a value and the integral gain is set to zero the controller will only have a proportional term, and there must be a speed error to produce a torque reference. Therefore as the motor load increases there will be a difference between the reference and actual speeds. This effect, called regulation, depends on the level of the proportional gain, the higher the gain the smaller the speed error for a given load. If the proportional gain is too high either the acoustic noise produced by speed feedback quantization becomes unacceptable, or the stability limit is reached.

Speed Controller Integral Gain (Ki), Pr 00.008 {03.011} and Pr 03.014


The integral gain is provided to prevent speed regulation. The error is accumulated over a period of time and used to produce the necessary torque demand without any speed error. Increasing the integral gain reduces the time taken for the speed to reach the correct level and increases the stiffness of the system, i.e. it reduces the positional displacement produced by applying a load torque to the motor. Unfortunately increasing the integral gain also reduces the system damping giving overshoot after a transient. For a given integral gain the damping can be improved by increasing the proportional gain. A compromise must be reached where the system response, stiffness and damping are all adequate for the application. For RFC-A Sensorless mode, it is unlikely that the integral gain can be increased much above 0.50.

Differential Gain (Kd), Pr 00.009 {03.012} and Pr 03.015

The differential gain is provided in the feedback of the speed controller to give additional damping. The differential term is implemented in a way that does not introduce excessive noise normally associated with this type of function. Increasing the differential term reduces the overshoot produced by under-damping, however, for most applications the proportional and integral gains alone are sufficient.

There are six methods of tuning the speed loop gains dependant on the setting of Pr 03.017:

- Pr 03.017 = 0, User set-up.
This involves the connecting of an oscilloscope to analog output 1 to monitor the speed feedback.
Give the drive a step change in speed reference and monitor the response of the drive on the oscilloscope.
The proportional gain (Kp) should be set up initially. The value should be increased up to the point where the speed overshoots and then reduced slightly.
The integral gain (Ki) should then be increased up to the point where the speed becomes unstable and then reduced slightly.
It may now be possible to increase the proportional gain to a higher value and the process should be repeated until the system response matches the ideal response as shown.
The diagram shows the effect of incorrect P and I gain settings as well as the ideal response.
- Pr 03.017 = 1, Bandwidth set-up
If bandwidth based set-up is required, the drive can calculate Kp and Ki if the following parameters are set up correctly:
Pr 03.020 - Required bandwidth,
Pr 03.021 - Required damping factor,
Pr 03.018 - Motor and load inertia.
The drive can be made to measure the motor and load inertia by performing an inertia measurement autotune (see Autotune Pr 00.040, earlier in this table).
- Pr 03.017 = 2, Compliance angle set-up
If compliance angle based set-up is required, the drive can calculate Kp and Ki if the following parameters are set up correctly:
Pr 03.019 - Required compliance angle,
Pr 03.021 - Required damping factor,
Pr 03.018 - Motor and load inertia
The drive can be made to measure the motor and load inertia by performing an inertia measurement autotune (see Autotune Pr 00.040, earlier in this table).
- Pr 03.017 = 3, Kp gains times 16
If Speed Controller Set-up Method (03.017) = 3 the selected proportional gain used by the drive is multiplied by 16.

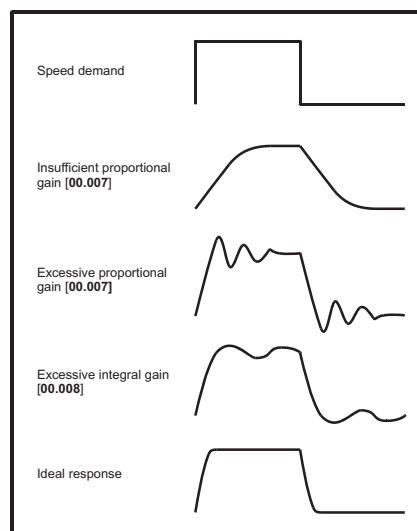

5. Pr 03.017 = 4 - 6

If Speed Controller Set-up Method (03.017) is set to a value from 4 to 6 the Speed Controller Proportional Gain Kp1 (03.010) and Speed Controller Integral Gain Ki1 (03.011) are automatically set up to give the bandwidths given in the table below and a damping factor of unity. These settings give low, standard or high performance.

Pr 03.017	Performance	Bandwidth
4	Low	5 Hz
5	Standard	25 Hz
6	High	100 Hz

6. Pr 03.017 = 7

If Speed Controller Set-up Method (03.017) = 7 then Speed Controller Proportional Gain Kp1 (03.010), Speed Controller Integral Gain Ki1 (03.011) and Speed Controller Differential Feedback Gain Kd1 (03.012) are set up to give a closed-loop speed controller response that approximates to a first order system with a transfer function of $1 / (s\tau + 1)$, where $\tau = 1/\omega_{bw}$ and $\omega_{bw} = \text{Bandwidth}$ (03.020). In this case the damping factor is meaningless, and Damping Factor (03.021) and Compliance Angle (03.019) have no effect.

8.1.3 RFC-A Sensorless mode

Induction motor without position feedback

Pr 00.046 {05.007} Motor Rated Current	Defines the maximum motor continuous current
<p>The motor rated current parameter must be set to the maximum continuous current of the motor. (See section 8.2 <i>Maximum motor rated current</i> on page 151, for information about setting this parameter higher than the maximum Heavy Duty current rating.) The motor rated current is used in the following:</p> <ul style="list-style-type: none"> • Current limits (see section 8.3 <i>Current limits</i> on page 151, for more information). • Motor thermal overload protection (see section 8.4 <i>Motor thermal protection</i> on page 151, for more information) • Vector control algorithm 	
Pr 00.044 {05.009} Rated Voltage	Defines the voltage applied to the motor at rated frequency
Pr 00.047 {05.006} Rated Frequency	Defines the frequency at which rated voltage is applied
<p>The <i>Rated Voltage</i> (00.044) and the <i>Rated Frequency</i> (00.047) are used to define the voltage to frequency characteristic applied to the motor (see <i>Open Loop Control Mode</i> (00.007), later in this table). The motor rated frequency is also used in conjunction with the motor rated speed to calculate the rated slip for slip compensation (see motor <i>Rated Speed</i> (00.045), later in this table).</p>	
	<p>The graph, titled 'Output voltage characteristic', plots Output voltage on the vertical axis against Output frequency on the horizontal axis. The curve starts at the origin (0,0) and rises linearly to a point where the frequency is Pr 00.047 and the voltage is Pr 00.044. From this point, the voltage remains constant at Pr 00.044 for all higher frequencies. A dashed line from the point (Pr 00.047 / 2, Pr 00.044 / 2) on the linear portion of the curve indicates that the voltage is proportional to the frequency in this region.</p>
Pr 00.045 {05.008} Rated Speed	Defines the full load rated speed of the motor
Pr 00.042 {05.011} Number Of Motor Poles	Defines the number of motor poles
<p>The motor rated speed and motor rated frequency are used to determine the full load slip of the motor which is used by the vector control algorithm. Incorrect setting of this parameter has the following effects:</p> <ul style="list-style-type: none"> • Reduced efficiency of motor operation • Reduction of maximum torque available from the motor • Reduced transient performance • Inaccurate control of absolute torque in torque control modes <p>The nameplate value is normally the value for a hot motor; however, some adjustment may be required when the drive is commissioned if the nameplate value is inaccurate. Either a fixed value can be entered in this parameter or an optimization system may be used to automatically adjust this parameter (see <i>Motor Parameter Adaptive Control</i> (05.016), later in this table).</p> <p>When Pr 00.042 is set to 'Automatic', the number of motor poles is automatically calculated from the motor <i>Rated Frequency</i> (00.047), and the motor <i>Rated Speed</i> (00.045).</p> <p>Number of poles = $120 \times (\text{Motor Rated Frequency (00.047)} / \text{Motor Rated Speed (00.045)})$ rounded to the nearest even number.</p>	
Pr 00.043 {5.10} Rated Power Factor	Defines the angle between the motor voltage and current
<p>The power factor is the true power factor of the motor, i.e. the angle between the motor voltage and current. If the <i>Stator Inductance</i> (05.025) is set to zero then the power factor is used in conjunction with the motor <i>Rated Current</i> (00.046) and other motor parameters to calculate the rated active and magnetising currents of the motor, which are used in the vector control algorithm. If the stator inductance has a non-zero value this parameter is not used by the drive, but is continuously written with a calculated value of power factor. The stator inductance can be measured by the drive by performing a rotating autotune (see <i>Autotune</i> (Pr 00.040), later in this table).</p>	

Pr 00.040 {05.012} Autotune

There are three autotune tests available in RFC-A mode, a stationary test, a rotating test and an inertia measurement test. A stationary autotune will give moderate performance whereas a rotating autotune will give improved performance as it measures the actual values of the motor parameters required by the drive. An inertia measurement test should be performed separately to a stationary or rotating autotune.

It is highly recommended that a rotating autotune is performed (Pr 00.040 set to 2).

- A stationary autotune can be used when the motor is loaded and it is not possible to remove the load from the motor shaft. The stationary autotune measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor. These are used to calculate the current loop gains, and at the end of the test the values in Pr 04.013 and Pr 04.014 are updated. *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060) for the drive are also measured. Additionally, if *Enable Stator Compensation* (05.049) = 1, then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). A stationary autotune does not measure the power factor of the motor so the value on the motor nameplate must be entered into Pr 00.043. To perform a stationary autotune, set Pr 00.040 to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- A rotating autotune should only be used if the motor is unloaded. A rotating autotune first performs a stationary autotune, a rotating test is then performed in which the motor is accelerated with currently selected ramps up to a frequency of *Rated Frequency* (05.006) x 2/3, and the frequency is maintained at the level for up to 40 s. During the rotating autotune the *Stator Inductance* (05.025), and the motor saturation breakpoints (Pr 05.029, Pr 05.030, Pr 06.062 and Pr 05.063) are modified by the drive. The power factor is also modified for user information only, but is not used after this point as the stator inductance is used in the vector control algorithm instead. To perform a Rotating autotune, set Pr 00.040 to 2, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).
- The inertia measurement test can measure the total inertia of the load and the motor. This is used to set the speed loop gains (see Speed loop gains) and to provide torque feed-forwards when required during acceleration.

Applied torque (sensorless mode) This test may give inaccurate results, if the motor rated speed is not set to the correct value for the motor, or if standard ramp mode is active. During the inertia measurement test a series of progressively larger torque levels are applied to the motor (20 %, 40 % ... 100 % of rated torque) to accelerate the motor up to $\frac{3}{4} \times \text{Rated Speed}$ (05.008) to determine the inertia from the acceleration/ deceleration time. The test attempts to reach the required speed within 5 s, but if this fails the next torque level is used. When 100 % torque is used the test allows 60 s for the required speed to be reached, but if this is unsuccessful an Autotune trip is initiated. To reduce the time taken for the test it is possible to define the level of torque to be used for the test by setting *Mechanical Load Test Level* (05.021) to a non-zero value. When the test level is defined the test is only carried out at the defined test level and 60 s is allowed for the motor to reach the required speed. It should be noted that if the maximum speed allows for flux weakening then it may not be possible to achieve the required torque level to accelerate the motor quickly enough. If this is the case, the maximum speed reference should be reduced. To perform an Inertia measurement autotune, set Pr 00.040 to 4, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the *Drive Enable* (06.015) to OFF (0) or disabling the drive via the control word (Pr 06.042 & Pr 06.043)

Pr 05.016 Motor Parameter Adaptive Control

(When using an SI-Encoder option module)

The motor *Rated Speed* (00.045) in conjunction with the motor *Rated Frequency* (00.047) defines the full load slip of the motor. The slip is used in the motor model for RFC-A control. The full load slip of the motor varies with rotor resistance which can vary significantly with motor temperature. When Pr 05.016 is set to 1 or 2 the drive can automatically sense if the value of slip defined by Pr 00.047 and Pr 00.045 has been set incorrectly or if it has varied with motor temperature. If the value is incorrect Pr 00.045 is automatically adjusted. Pr 00.045 is not saved at power-down, and so when the drive is powered-down and up again it will return to the last saved value. If the new value is required at the next power-up it must be saved by the user.

The adaptive control system is only enabled when the $|\text{Output Frequency (05.001)}|$ is above $\text{Rated Frequency (05.006)} / 8$, and the $|\text{Percentage Load (04.020)}|$ is greater than 60 %. The adaptive control system is disabled again if the $|\text{Percentage Load (04.020)}|$ falls below 50 %. For best optimization results the correct values of *Stator Resistance* (05.017), *Transient Inductance* (05.024), *Stator Inductance* (05.025), *Saturation Breakpoint 1* (05.029), *Saturation Breakpoint 2* (05.062), *Saturation Breakpoint 3* (05.030) and *Saturation Breakpoint 4* (05.063) should be used. If *Motor Parameter Adaptive Control* (05.016) = 1 the gain of the adaptive control system is low and hence the rate at which it converges is slow. If *Motor Parameter Adaptive Control* (05.016) = 2 the gain is increased by a factor of 16 and the convergence rate is increased.

Pr 00.038 {04.013} / Pr 00.039 {04.014} Current Loop Gains

The current loop gains proportional (Kp) and integral (Ki) gains control the response of the current loop to a change in current (torque) demand. The default values give satisfactory operation with most motors. However, for optimal performance in dynamic applications it may be necessary to change the gains to improve the performance. The *Current Controller Kp Gain* (04.013) is the most critical value in controlling the performance. The values for the current loop gains can be calculated by performing a stationary or rotating autotune (see *Autotune* Pr 00.040, earlier in this table) the drive measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor and calculates the current loop gains.

This will give a step response with minimum overshoot after a step change of current reference. The proportional gain can be increased by a factor of 1.5 giving a similar increase in bandwidth; however, this gives a step response with approximately 12.5 % overshoot. The equation for the integral gain gives a conservative value. In some applications where it is necessary for the reference frame used by the drive to dynamically follow the flux very closely (i.e. high speed Sensorless RFC-A induction motor applications) the integral gain may need to have a significantly higher value.

Speed Loop Gains (Pr 00.007 {03.010}, Pr 00.008 {03.011}, Pr 00.009 {03.012})

The speed loop gains control the response of the speed controller to a change in speed demand. The speed controller includes proportional (Kp) and integral (Ki) feed forward terms, and a differential (Kd) feedback term. The drive holds two sets of these gains and either set may be selected for use by the speed controller with Pr 03.016. If Pr 03.016 = 0, gains Kp1, Ki1 and Kd1 (Pr 00.007 to Pr 00.009) are used, and if Pr 03.016 = 1, gains Kp2, Ki2 and Kd2 (Pr 03.013 to Pr 03.015) are used. Pr 03.016 may be changed when the drive is enabled or disabled. If the load is predominantly a constant inertia and constant torque, the drive can calculate the required Kp and Ki gains to give a required compliance angle or bandwidth dependant on the setting of Pr 03.017.

Speed Controller Proportional Gain (Kp), Pr 00.007 {03.010} and Pr 03.013

If the proportional gain has a value and the integral gain is set to zero the controller will only have a proportional term, and there must be a speed error to produce a torque reference. Therefore as the motor load increases there will be a difference between the reference and actual speeds. This effect, called regulation, depends on the level of the proportional gain, the higher the gain the smaller the speed error for a given load. If the proportional gain is too high either the acoustic noise produced by speed feedback quantization becomes unacceptable, or the stability limit is reached.

Speed Controller Integral Gain (Ki), Pr 00.008 {03.011} and Pr 03.014


The integral gain is provided to prevent speed regulation. The error is accumulated over a period of time and used to produce the necessary torque demand without any speed error. Increasing the integral gain reduces the time taken for the speed to reach the correct level and increases the stiffness of the system, i.e. it reduces the positional displacement produced by applying a load torque to the motor. Unfortunately increasing the integral gain also reduces the system damping giving overshoot after a transient. For a given integral gain the damping can be improved by increasing the proportional gain. A compromise must be reached where the system response, stiffness and damping are all adequate for the application. For RFC-A Sensorless mode, it is unlikely that the integral gain can be increased much above 0.50.

Differential Gain (Kd), Pr 00.009 {0 3.012} and Pr 03.015

The differential gain is provided in the feedback of the speed controller to give additional damping. The differential term is implemented in a way that does not introduce excessive noise normally associated with this type of function. Increasing the differential term reduces the overshoot produced by under-damping, however, for most applications the proportional and integral gains alone are sufficient.

There are six methods of tuning the speed loop gains dependant on the setting of Pr 03.017:

- Pr 03.017 = 0, User set-up.
This involves the connecting of an oscilloscope to analog output 1 to monitor the speed feedback.
Give the drive a step change in speed reference and monitor the response of the drive on the oscilloscope.
The proportional gain (Kp) should be set up initially. The value should be increased up to the point where the speed overshoots and then reduced slightly.
The integral gain (Ki) should then be increased up to the point where the speed becomes unstable and then reduced slightly.
It may now be possible to increase the proportional gain to a higher value and the process should be repeated until the system response matches the ideal response as shown.
The diagram shows the effect of incorrect P and I gain settings as well as the ideal response.
- Pr 03.017 = 1, Bandwidth set-up
If bandwidth based set-up is required, the drive can calculate Kp and Ki if the following parameters are set up correctly:
Pr 03.020 - Required bandwidth,
Pr 03.021 - Required damping factor,
Pr 03.018 - Motor and load inertia.
The drive can be made to measure the motor and load inertia by performing an inertia measurement autotune (see Autotune Pr 00.040, earlier in this table).
- Pr 03.017 = 2, Compliance angle set-up
If compliance angle based set-up is required, the drive can calculate Kp and Ki if the following parameters are set up correctly:
Pr 03.019 - Required compliance angle,
Pr 03.021 - Required damping factor,
Pr 03.018 - Motor and load inertia
The drive can be made to measure the motor and load inertia by performing an inertia measurement autotune (see Autotune Pr 00.040, earlier in this table).
- Pr 03.017 = 3, Kp gains times 16
If Speed Controller Set-up Method (03.017) = 3 the selected proportional gain used by the drive is multiplied by 16.

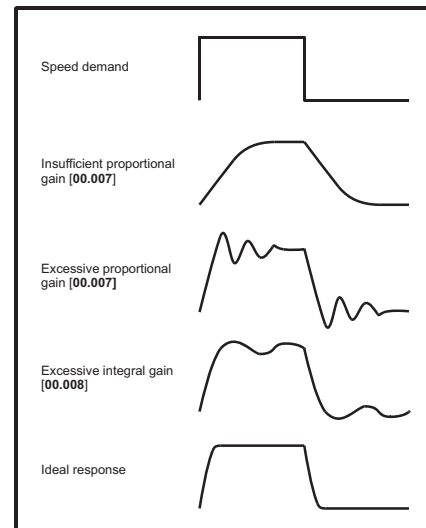

5. Pr 03.017 = 4 - 6

If Speed Controller Set-up Method (03.017) is set to a value from 4 to 6 the Speed Controller Proportional Gain Kp1 (03.010) and Speed Controller Integral Gain Ki1 (03.011) are automatically set up to give the bandwidths given in the table below and a damping factor of unity. These settings give low, standard or high performance.

Pr 03.017	Performance	Bandwidth
4	Low	5 Hz
5	Standard	25 Hz
6	High	100 Hz

6. Pr 03.017 = 7

If Speed Controller Set-up Method (03.017) = 7 then Speed Controller Proportional Gain Kp1 (03.010), Speed Controller Integral Gain Ki1 (03.011) and Speed Controller Differential Feedback Gain Kd1 (03.012) are set up to give a closed-loop speed controller response that approximates to a first order system with a transfer function of $1 / (s\tau + 1)$, where $\tau = 1/\omega_{bw}$ and $\omega_{bw} = \text{Bandwidth}$ (03.020). In this case the damping factor is meaningless, and Damping Factor (03.021) and Compliance Angle (03.019) have no effect.

8.1.4 RFC-S Sensorless mode

Permanent magnet motor without Position feedback

Pr 00.046 {05.007} Rated Current

Defines the maximum motor continuous current

The motor rated current parameter must be set to the maximum continuous current of the motor. The motor rated current is used in the following:

- Current limits (see section 8.3 *Current limits* on page 151, for more information)
- Motor thermal overload protection (see section 8.4 *Motor thermal protection* on page 151, for more information)

Pr 00.042 {05.011} Number Of Motor Poles

Defines the number of motor poles

The number of motor poles parameter defines the number of electrical revolutions in one whole mechanical revolution of the motor. This parameter must be set correctly for the control algorithms to operate correctly. When Pr 00.042 is set to "Automatic" the number of poles is 6.

Pr 00.040 {05.012} Autotune

There are two autotune tests available in RFC-S sensorless mode, a stationary autotune and an inertia measurement test.

- Stationary Autotune

The stationary autotune can be used to measure all the necessary parameters for basic control. The tests measures *Stator Resistance* (05.017), *Ld* (05.024), *No Load Lq* (05.068), *Maximum Deadtime Compensation* (05.059) and *Current At Maximum Deadtime Compensation* (05.060). If *Enable Stator Compensation* (05.049) = 1 then *Stator Base Temperature* (05.048) is made equal to *Stator Temperature* (05.046). The *Stator Resistance* (05.017) and *Ld* (05.024) are then used to set up *Current controller Kp Gain* (04.013) and *Current Controller Ki Gain* (04.014). To perform a Stationary autotune, set Pr 00.040 to 1, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

- Rotating Autotune

In sensorless mode, if Rotating autotune is selected (Pr 00.040 = 2), then a stationary autotune is performed.

- Inertia measurement test

NOTE: It is not possible to perform this test if, after autotune, the ratio *No load Lq* (05.072) / *Ld* (05.024) < 1.1 and Pr 05.064 has been set to Non-salient.

The inertia measurement test can measure the total inertia of the load and the motor. This is used to set the speed loop gains (see Speed loop gains) and to provide torque feed-forwards when required during acceleration. The test may give inaccurate results, if the motor rated speed is not set to the correct value for the motor, or if standard ramp mode is active. During the inertia measurement test a series of progressively larger torque levels are applied to the motor (20 %, 40 % ... 100 % of rated torque) to accelerate the motor up to 3/4 x *Rated Speed* (05.008) to determine the inertia from the acceleration/deceleration time. The test attempts to reach the required speed within 5 s, but if this fails the next torque level is used. When 100 % torque is used the test allows 60 s for the required speed to be reached, but if this is unsuccessful an Autotune trip is initiated. To reduce the time taken for the test it is possible to define the level of torque to be used for the test by setting *Mechanical Load Test Level* (05.021) to a non-zero value. When the test level is defined the test is only carried out at the defined test level and 60 s is allowed for the motor to reach the required speed. It should be noted that if the maximum speed allows for flux weakening then it may not be possible to achieve the required torque level to accelerate the motor quickly enough. If this is the case, the maximum speed reference should be reduced. To perform an Inertia measurement autotune, set Pr 00.040 to 4, and provide the drive with both an enable signal (on terminal 31) and a run signal (on terminal 26 or 27).

Following the completion of an autotune test the drive will go into the inhibit state. The drive must be placed into a controlled disable condition before the drive can be made to run at the required reference. The drive can be put in to a controlled disable condition by removing the SAFE TORQUE OFF signal from terminal 31, setting the drive Enable Parameter (06.015) to OFF (0) or disabling the drive via the control word (Pr 06.042 & Pr 06.043).

Pr 00.038 {04.013} / Pr 00.039 {04.014} Current Loop Gains

The current loop gains proportional (Kp) and integral (Ki) gains control the response of the current loop to a change in current (torque) demand. The default values give satisfactory operation with most motors. However, for optimal performance in dynamic applications it may be necessary to change the gains to improve the performance. The proportional gain (Pr 04.013) is the most critical value in controlling the performance. The values for the current loop gains can be calculated by performing a stationary or rotating autotune (see *Autotune* Pr 00.040, earlier in this table) the drive measures the *Stator Resistance* (05.017) and *Transient Inductance* (05.024) of the motor and calculates the current loop gains.

This will give a step response with minimum overshoot after a step change of current reference. The proportional gain can be increased by a factor of 1.5 giving a similar increase in bandwidth; however, this gives a step response with approximately 12.5 % overshoot. The equation for the integral gain gives a conservative value. In some applications where it is necessary for the reference frame used by the drive to dynamically follow the flux very closely the integral gain may need to have a significantly higher value.

Speed Loop Gains (Pr 00.007 {03.010}, Pr 00.008 {03.011}, Pr 00.009 {03.012})

The speed loop gains control the response of the speed controller to a change in speed demand. The speed controller includes proportional (Kp) and integral (Ki) feed forward terms, and a differential (Kd) feedback term. The drive holds two sets of these gains and either set may be selected for use by the speed controller with Pr 03.016. If Pr 03.016 = 0, gains Kp1, Ki1 and Kd1 (Pr 00.007 to Pr 00.009) are used, and if Pr 03.016 = 1, gains Kp2, Ki2 and Kd2 (Pr 03.013 to Pr 03.015) are used. Pr 03.016 may be changed when the drive is enabled or disabled. If the load is predominantly a constant inertia and constant torque, the drive can calculate the required Kp and Ki gains to give a required compliance angle or bandwidth dependant on the setting of Pr 03.017.

NOTE: In sensorless mode, the speed controller bandwidth may need to be limited to 10 Hz or less for stable operation.

Speed Controller Proportional Gain (Kp), Pr 00.007 {03.010} and Pr 03.013

If the proportional gain has a value and the integral gain is set to zero the controller will only have a proportional term, and there must be a speed error to produce a torque reference. Therefore as the motor load increases there will be a difference between the reference and actual speeds. This effect, called regulation, depends on the level of the proportional gain, the higher the gain the smaller the speed error for a given load. If the proportional gain is too high either the acoustic noise produced by speed feedback quantization becomes unacceptable, or the stability limit is reached.

Speed Controller Integral Gain (Ki), Pr 00.008 {03.011} and Pr 03.014


The integral gain is provided to prevent speed regulation. The error is accumulated over a period of time and used to produce the necessary torque demand without any speed error. Increasing the integral gain reduces the time taken for the speed to reach the correct level and increases the stiffness of the system, i.e. it reduces the positional displacement produced by applying a load torque to the motor. Unfortunately increasing the integral gain also reduces the system damping giving overshoot after a transient. For a given integral gain the damping can be improved by increasing the proportional gain. A compromise must be reached where the system response, stiffness and damping are all adequate for the application. For RFC-A Sensorless mode, it is unlikely that the integral gain can be increased much above 0.50.

Differential Gain (Kd), Pr 00.009 {03.012} and Pr 03.015

The differential gain is provided in the feedback of the speed controller to give additional damping. The differential term is implemented in a way that does not introduce excessive noise normally associated with this type of function. Increasing the differential term reduces the overshoot produced by under-damping, however, for most applications the proportional and integral gains alone are sufficient.

There are six methods of tuning the speed loop gains dependant on the setting of Pr 03.017:

- Pr 03.017 = 0, User set-up.
This involves the connecting of an oscilloscope to analog output 1 to monitor the speed feedback.
Give the drive a step change in speed reference and monitor the response of the drive on the oscilloscope.
The proportional gain (Kp) should be set up initially. The value should be increased up to the point where the speed overshoots and then reduced slightly.
The integral gain (Ki) should then be increased up to the point where the speed becomes unstable and then reduced slightly.
It may now be possible to increase the proportional gain to a higher value and the process should be repeated until the system response matches the ideal response as shown.
The diagram shows the effect of incorrect P and I gain settings as well as the ideal response.
- Pr 03.017 = 1, Bandwidth set-up
If bandwidth based set-up is required, the drive can calculate Kp and Ki if the following parameters are set up correctly:
Pr 03.020 - Required bandwidth,
Pr 03.021 - Required damping factor,
Pr 03.018 - Motor and load inertia.
The drive can be made to measure the motor and load inertia by performing an inertia measurement autotune (see Autotune Pr 00.040, earlier in this table).
- Pr 03.017 = 2, Compliance angle set-up
If compliance angle based set-up is required, the drive can calculate Kp and Ki if the following parameters are set up correctly:
Pr 03.019 - Required compliance angle,
Pr 03.021 - Required damping factor,
Pr 03.018 - Motor and load inertia
The drive can be made to measure the motor and load inertia by performing an inertia measurement autotune (see Autotune Pr 00.040, earlier in this table).
- Pr 03.017 = 3, Kp gains times 16
If Speed Controller Set-up Method (03.017) = 3 the selected proportional gain used by the drive is multiplied by 16.

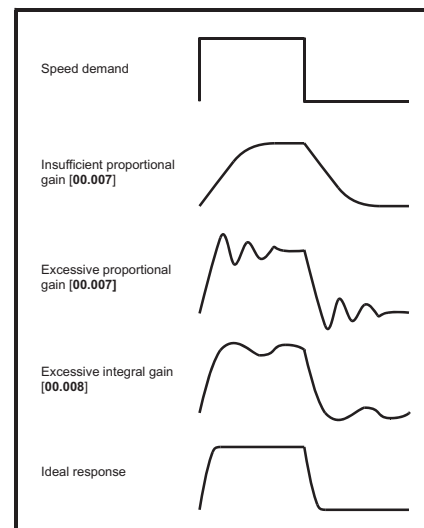

5. Pr 03.017 = 4 - 6

If Speed Controller Set-up Method (03.017) is set to a value from 4 to 6 the Speed Controller Proportional Gain Kp1 (03.010) and Speed Controller Integral Gain Ki1 (03.011) are automatically set up to give the bandwidths given in the table below and a damping factor of unity. These settings give low, standard or high performance.

Pr 03.017	Performance	Bandwidth
4	Low	5 Hz
5	Standard	25 Hz
6	High	100 Hz

6. Pr 03.017 = 7

If Speed Controller Set-up Method (03.017) = 7 then Speed Controller Proportional Gain Kp1 (03.010), Speed Controller Integral Gain Ki1 (03.011) and Speed Controller Differential Feedback Gain Kd1 (03.012) are set up to give a closed-loop speed controller response that approximates to a first order system with a transfer function of $1 / (s\tau + 1)$, where $\tau = 1/\omega_{bw}$ and $\omega_{bw} = \text{Bandwidth}$ (03.020). In this case the damping factor is meaningless, and Damping Factor (03.021) and Compliance Angle (03.019) have no effect.

8.2 Maximum motor rated current

The maximum motor rated current allowed by the drive is greater than the *Maximum Heavy Duty Current Rating* (11.032). The ratio between the Normal Duty rating and the *Maximum Heavy Duty Current Rating* (11.032) varies between drive sizes. The values for the Normal and Heavy Duty rating can be found in section 2.3 *Ratings* on page 11. If the motor *Rated Current* (00.046) is set above the *Maximum Heavy Duty Current Rating* (11.032), the current limits and the motor thermal protection scheme are modified (see section 8.3 *Current limits* on page 151 and section 8.4 *Motor thermal protection* on page 151 for more information).

8.3 Current limits

The default setting for the current limit parameters are:

- 165 % x motor rated current for open loop mode
- 175 % x motor rated current for RFC-A and RFC-S modes

There are three parameters which control the current limits:

- Motoring current limit: power flowing from the drive to the motor
- Regen current limit: power flowing from the motor to the drive
- Symmetrical current limit: current limit for both motoring and regen operation

The lowest of either the motoring and regen current limit, or the symmetrical current limit applies.

The maximum setting of these parameters depends on the values of motor rated current, drive rated current and the power factor.

Increasing the motor rated current (Pr **00.046/05.007**) above the Heavy Duty rating (default value), will automatically reduce the current limits in Pr **04.005** to Pr **04.007**. If the motor rated current is then set to or below the Heavy Duty rating, the current limits will be left at their reduced values.

The drive can be oversized to permit a higher current limit setting to provide higher accelerating torque as required up to a maximum of 1000 %.

8.4 Motor thermal protection

A dual time constant thermal model is provided to estimate the motor temperature as a percentage of its maximum allowed temperature.

The motor thermal protection is modelled using losses in the motor. The losses in the motor are calculated as a percentage value, so that under these conditions the *Motor Protection Accumulator* (04.019) would eventually reach 100 %.

Percentage losses = 100 % x [Load related losses + Iron losses]

Where:

$$\text{Load related losses} = (1 - K_{fe}) \times (I / (K_1 \times I_{\text{Rated}}))^2$$

$$\text{Iron losses} = K_{fe} \times (w / w_{\text{Rated}})^{1.6}$$

Where:

I = Current Magnitude (04.001)

I_{Rated} = Rated Current (05.007)

K_{fe} = Rated Iron Losses As Percentage Of Losses (04.039) / 100 %

The *Motor Protection Accumulator* (04.019) is given by:

$$\text{Pr } 04.019 = \text{Percentage Losses} \times [(1 - K_2) (1 - e^{-t/\tau_1}) + K_2 (1 - e^{-t/\tau_2})]$$

Where:

T = Motor Protection Accumulator (04.019)

K_2 = Motor Thermal Time Constant 2 Scaling (04.038) / 100 %


τ_1 = Motor Thermal Time Constant 1 (04.015)

τ_2 = Motor Thermal Time Constant 2 (04.037)

K_1 = Varies, see below


If *Rated Current* (05.007) \leq *Maximum Heavy Duty Current* (11.032)

Figure 8-1 Motor thermal protection (Heavy Duty)

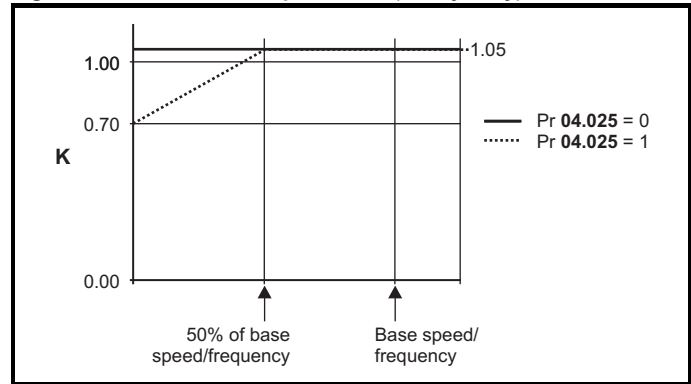

If Pr **04.025** is 0 the characteristic is for a motor which can operate at rated current over the whole speed range. Induction motors with this type of characteristic normally have forced cooling. If Pr **04.025** is 1 the characteristic is intended for motors where the cooling effect of motor fan reduces with reduced motor speed below 50 % of base speed/frequency. The maximum value for K1 is 1.05, so that above the knee of the characteristics the motor can operate continuously up to 105 % current.

Figure 8-2 Motor thermal protection (Normal Duty)

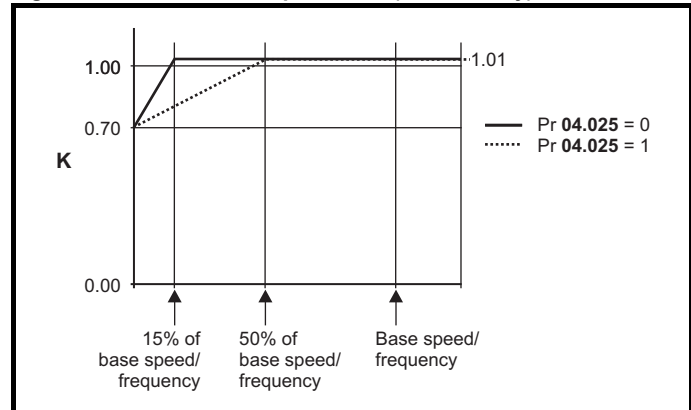

Both settings of Pr **04.025** are intended for motors where the cooling effect of the motor fan reduces with reduced motor speed, but with different speeds below which the cooling effect is reduced. If Pr **04.025** is 0 the characteristic is intended for motors where the cooling effect reduces with motor speed below 15 % of base speed/frequency. If Pr **04.025** is 1 the characteristic is intended for motors where the cooling effect reduces with motor speed below 50 % of base speed/frequency. The maximum value for K1 is 1.01, so that above the knee of the characteristics the motor can operate continuously up to 101 % current.

When the estimated temperature in Pr **04.019** reaches 100 % the drive takes some action depending on the setting of Pr **04.016**. If Pr **04.016** is 0, the drive trips when Pr **04.019** reaches 100 %. If Pr **04.016** is 1, the current limit is reduced to $(K - 0.05) \times 100 \%$ when Pr **04.019** reaches 100 %.

The current limit is set back to the user defined level when Pr **04.019** falls below 95 %. The thermal model temperature accumulator is reset to zero at power-up and accumulates the temperature of the motor while the drive remains powered-up. If the rated current defined by Pr **05.007** is altered, the accumulator is reset to zero.

The default setting of the thermal time constant (Pr **04.015**) is 89 s which is equivalent to an overload of 150 % for 60 s from cold.

8.5 Switching frequency

The default switching frequency is 3 kHz, however this can be increased up to a maximum of 16 kHz by Pr **05.018** (dependent on drive size). The available switching frequencies are shown below.

Table 8-1 Available switching frequencies

Drive size	Model	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
3	All							
4								
5								
6		✓	✓	✓	✓	✓	✓	✓
7								
8								
9E								
10	10202830 to 10203000							
	10501520 to 10501900	✓	✓	✓	✓	✓	✓	✓
	10601500 to 10601780							
	10402700 to 10403200	✓	✓	✓	✓			

If switching frequency is increased from 3 kHz the following apply:

- Increased heat loss in the drive, which means that derating to the output current must be applied.
See the derating tables for switching frequency and ambient temperature in *section 12.1.1 Power and current ratings (Derating for switching frequency and temperature)* on page 232.
- Reduced heating of the motor - due to improved output waveform quality.
- Reduced acoustic noise generated by the motor.
- Increased sample rate on the speed and current controllers. A trade off must be made between motor heating, drive heating and the demands of the application with respect to the sample time required.

Table 8-2 Sample rates for various control tasks at each switching frequency

	3, 6, 12 kHz	2, 4, 8, 16 kHz	Open loop	RFC-A RFC-S
Level 1	3 kHz = 167 μs 6 kHz = 83 μs 12 kHz = 83 μs	2 kHz = 250 μs 4 kHz = 125 μs 8 kHz = 62.5 μs 16 kHz = 62.5 μs	Peak limit	Current controllers
Level 2	250 μs	2 kHz - 500 μs 4 kHz - 250 μs 8 kHz - 125 μs 16 kHz - 125 μs	Current limit and ramps	Speed controller and ramps
Level 3	1 ms		Voltage controller	
Level 4	4 ms		Time critical user interface	
Background			Non-time critical user interface	


8.6 High speed operation

8.6.1 Field weakening (constant power) operation

(Open loop and RFC-A mode only)

The drive can be used to run an induction machine above synchronous speed into the constant power region. The speed continues to increase and the available shaft torque reduces. The characteristics below show the torque and output voltage characteristics as the speed is increased above the rated value.

Figure 8-3 Torque and rated voltage against speed

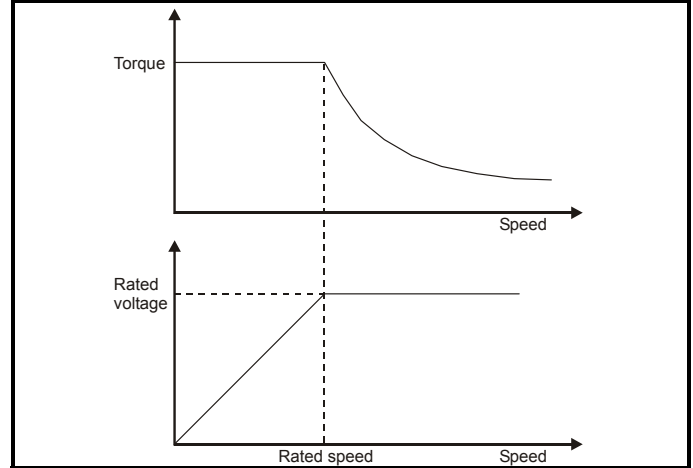

Care must be taken to ensure the torque available above base speed is sufficient for the application to run satisfactorily.

The saturation breakpoint parameters (Pr **05.029**, Pr **05.030**, Pr **05.062** and Pr **05.063**) found during the autotune in RFC-A mode ensure the magnetizing current is reduced in the correct proportion for the specific motor. (In open loop mode the magnetizing current is not actively controlled).

8.6.2 Permanent magnet motor high speed operation

High speed servo mode is enabled by setting Pr **05.022** = 1. Care must be taken when using this mode with permanent magnet motor to avoid damaging the drive. The voltage produced by the permanent magnet motor magnets is proportional to speed. For high speed operation the drive must apply currents to the motor to counter-act the flux produced by the magnets. It is possible to operate the motor at very high speeds that would give a very high motor terminal voltage, but this voltage is prevented by the action of the drive.

If however, the drive is disabled (or tripped) when the motor voltages would be higher than the rating of the drive without the currents to counter-act the flux from the magnets, it is possible to damage the drive. If high speed mode is enabled the motor speed must be limited to the levels given in the table below unless an additional hardware protection system is used to limit the voltages applied to the drive output terminals to a safe level.

Drive voltage rating	Maximum motor speed (rpm)	Maximum safe line to line voltage at the motor terminals (V rms)
200	$400 \times 1000 / (K_e \times \sqrt{2})$	$400 / \sqrt{2}$
400	$800 \times 1000 / (K_e \times \sqrt{2})$	$800 / \sqrt{2}$
575	$955 \times 1000 / (K_e \times \sqrt{2})$	$955 / \sqrt{2}$
690	$1145 \times 1000 / (K_e \times \sqrt{2})$	$1145 / \sqrt{2}$

K_e is the ratio between r.m.s. line to line voltage produced by the motor and the speed in V/1000 rpm. Care must also be taken not to demagnetize the motor. The motor manufacturer should always be consulted before using this mode.

By default, high speed operation is disabled (Pr **05.022** = 0).

It is also possible to enable high speed operation, and allow the drive to automatically limit the motor speed to the levels specified in the tables and generate an Overspeed.1 trip if the levels are exceeded (Pr **05.022** = -1)

8.6.3 Maximum speed / frequency

In all operating modes (Open loop, RFC-A and RFC-S) the maximum output frequency is limited to 550 Hz. However, in RFC-S mode the speed is also limited by the voltage constant (K_e) of the motor. K_e is a specific constant for the servo motor being used. It can normally be found on the motor data sheet in V/k rpm (volts per 1,000 rpm).

8.6.4 Quasi-Square wave (open-loop only)

The maximum output voltage level of the drive is normally limited to an equivalent of the drive input voltage minus voltage drops within the drive (the drive will also retain a few percent of the voltage in order to maintain current control). If the motor rated voltage is set at the same level as the supply voltage, some pulse deletion will occur as the drive output voltage approaches the rated voltage level. If Pr **05.020** (Quasi-square wave enable) is set to 1 the modulator will allow over modulation, so that as the output frequency increases beyond the rated frequency the voltage continues to increase above the rated voltage. The modulation depth will increase beyond unity; first producing trapezoidal and then quasi-square waveforms.

This can be used for example:

- To obtain high output frequencies with a low switching frequency which would not be possible with space vector modulation limited to unity modulation depth,

or

- In order to maintain a higher output voltage with a low supply voltage.

The disadvantage is that the machine current will be distorted as the modulation depth increases above unity, and will contain a significant amount of low order odd harmonics of the fundamental output frequency. The additional low order harmonics cause increased losses and heating in the motor.

9 NV Media Card Operation

9.1 Introduction

The Non-Volatile Media Card feature enables simple configuration of parameters, parameter back-up, storing / reading PLC programs and drive copying using a SMARTCARD or SD card storing / reading PLC programs. The drive offers backward compatibility for a Unidrive SP SMARTCARD.

The NV Media Card can be used for:

- Parameter copying between drives
- Saving drive parameter sets
- Saving an onboard user program

The NV Media Card is located at the top of the module under the drive display (if installed) on the left-hand side.

Ensure the NV Media Card is inserted with the contacts facing the left-hand side of the drive.

The drive only communicates with the NV Media Card when commanded to read or write, meaning the card may be "hot swapped".


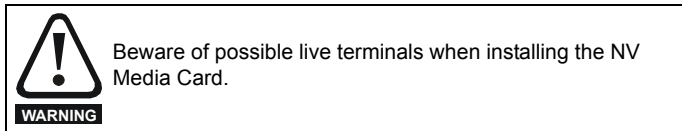


Figure 9-1 Installation of the NV Media Card

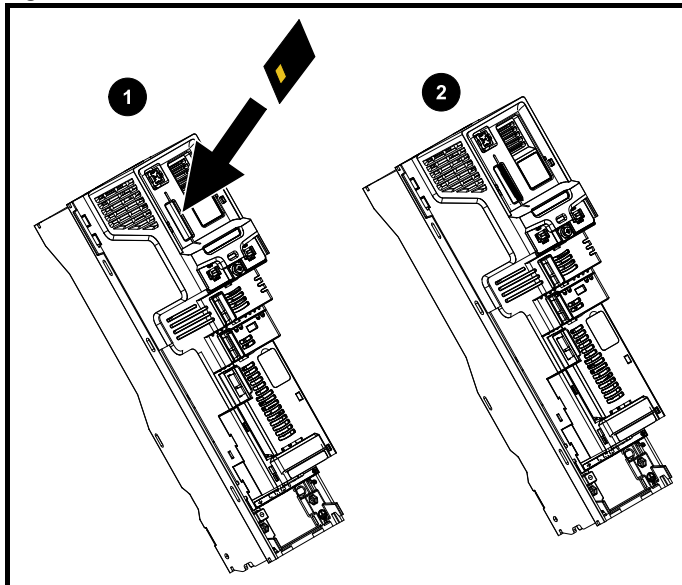

1. Installing the NV Media Card
2. NV Media Card installed

NV Media Card	Part number
SD Card Adaptor (memory card not included)	3130-1212-03
8 kB SMARTCARD	2214-4246-03
64 kB SMARTCARD	2214-1006-03

9.2 NV Media Card support

The NV Media Card can be used to store drive parameter sets and / or PLC programs set from the Unidrive M in data blocks 001 to 499 on the card.

The Unidrive M is compatible with a Unidrive SP SMARTCARD and is able to read and translate the Unidrive SP parameter set into a compatible parameter set for Unidrive M. This is only possible if the Unidrive SP parameter set was transferred to the SMARTCARD using the difference from defaults transfer method (i.e. 4yyy transfer).

The Unidrive M is not able to read any other type of Unidrive SP data block on the card. Although it is possible to transfer difference from default data blocks from a Unidrive SP into the Unidrive M, the following should be noted:

1. If a parameter from the source drive does not exist in the target drive then no data is transferred for that parameter.
2. If the data for the parameter in the target drive is out of range then the data is limited to the range of the target parameter.
3. If the target drive has a different rating to the source drive then the normal rules for this type of transfer apply.

Figure 9-2 Basic NV Media Card operation

Drive reads all parameters from the NV Media Card

Pr 00.030 = Read +

Programs all drive parameters to the NV Media Card

NOTE
Overwrites any data already in data block 1

Pr 00.030 = Program +

Drive automatically writes to the NV Media Card when a parameter save is performed

Auto Save

Pr 00.030 = Auto +

Drive boots from the NV Media Card on power up and automatically writes to the NV Media Card when a parameter save is performed

Auto Save

Pr 00.030 = Boot +

The whole card may be protected from writing or erasing by setting the read-only flag as detailed in section 9.3.9 9888 / 9777 - *Setting and clearing the NV Media Card read only flag* on page 156.

The card should not be removed during data transfer, as the drive will produce a trip. If this occurs then either the transfer should be reattempted or in the case of a card to drive transfer, default parameters should be loaded.

9.3 Transferring data

Data transfer, erasing and protecting the information is performed by entering a code in Pr **mm.000** and then resetting the drive as shown in Table 9-1.

Table 9-1 SMARTCARD and SD card codes

Code	Operation	SMARTCARD	SD card
2001	Transfer the drive parameters to parameter file 001 and sets the block as bootable. This will include the parameters from attached option modules.	✓	✓
4yyy	Transfer the drive parameters to parameter file yyy. This will include the parameters from attached option modules.	✓	✓
5yyy	Transfer the onboard user program to onboard user program file yyy.	✓	✓
6yyy	Load the drive parameters from parameter file yyy or the onboard user program from onboard user program file yyy.	✓	✓
7yyy	Erase file yyy.	✓	✓
8yyy	Compare the data in the drive with file yyy. If the files are the same then Pr mm.000 (mm.000) is simply reset to 0 when the compare is complete. If the files are different a 'Card Compare' trip is initiated. All other NV media card trips also apply.	✓	✓
9555	Clear the warning suppression flag	✓	✓
9666	Set the warning suppression flag	✓	✓
9777	Clear the read-only flag	✓	✓
9888	Set the read-only flag	✓	✓
9999	Erase and format the NV media card	✓	
40yyy	Backup all drive data (parameter differences from defaults, an onboard user program and miscellaneous option data), including the drive name; the store will occur to the </MCDF/driveyyy/> folder; if it does not exist, it will be created. Because the name is stored, this is a backup, rather than a copy. The command code will be cleared when all drive and option data have been saved.		✓
60yyy	Load all drive data (parameter differences from defaults, an onboard user program and miscellaneous option data); the load will come from the </MCDF/driveyyy/> folder. The command code will not be cleared until the drive and all option data have been loaded.		✓

Where yyy indicates the block number 001 to 999.

NOTE

If the read only flag is set then only codes 6yyy or 9777 are effective.

9.3.1 Writing to the NV Media Card

4yyy - Writes defaults differences to the NV Media Card

The data block only contains the parameter differences from the last time default settings were loaded.

All parameters except those with the NC (Not copied) coding bit set are transferred to the NV Media Card. In addition to these parameters all menu 20 parameters (except Pr **20.000**), can be transferred to the NV Media Card.

Writing a parameter set to the NV Media Card (Pr 11.042 = Program (2))

Setting Pr **11.042** to Program (2) and resetting the drive will save the parameters to the NV Media Card, i.e. this is equivalent to writing 4001 to Pr **mm.000**. All NV Media Card trips apply except 'Card Change'. If the data block already exists it is automatically overwritten. When the action is complete this parameter is automatically reset to None (0).

9.3.2 Reading from the NV Media Card

6yyy - Reading from NV Media Card

When the data is transferred back to the drive, using 6yyy in Pr **mm.000**, it is transferred to the drive RAM and the EEPROM. A parameter save is not required to retain the data after-power down. Set up data for any option modules installed stored on the card are transferred to the drive. If the option modules installed are different between source and destination drives, the menus for the option module slots where the option module categories are different are not updated from the card and will contain their default values after the copying action. The drive will

produce a 'Card Option' trip if the option module installed to the source and the destination drives are different or are in different slots. If the data is being transferred to the drive with different voltage or current rating a 'Card Rating' trip will occur.

The following drive rating dependant parameters (RA coding bit set) will not be transferred to the destination drive by a NV Media Card when the voltage rating of the destination drive is different from the source drive and the file is a parameter file.

However, drive rating dependent parameters will be transferred if only the current rating is different. If drive rating dependant parameters are not transferred to the destination drive they will contain their default values.

Pr **02.008** Standard Ramp Voltage

Pr **04.005** to Pr **04.007** and Pr **21.027** to Pr **21.029** Motoring Current Limits

Pr **04.024**, User Current Maximum Scaling

Pr **05.007**, Pr **21.007** Rated Current

Pr **05.009**, Pr **21.009** Rated Voltage

Pr **05.010**, Pr **21.010** Rated Power Factor

Pr **05.017**, Pr **21.012** Stator Resistance

Pr **05.018** Maximum Switching Frequency

Pr **05.024**, Pr **21.014** Transient Inductance

Pr **05.025**, Pr **21.024** Stator Inductance

Pr **06.006** Injection Braking Level

Pr **06.048** Supply Loss Detection Level

Pr **06.065** Standard Under Voltage Threshold

Pr **06.066** Low Under Voltage Threshold

Reading a parameter set from the NV Media Card (Pr 11.042 = Read (1))

Setting Pr 11.042 to Read (1) and resetting the drive will transfer the parameters from the card into the drive parameter set and the drive EEPROM, i.e. this is equivalent to writing 6001 to Pr mm.000.

All NV Media Card trips apply. Once the parameters are successfully copied this parameter is automatically reset to None (0). Parameters are saved to the drive EEPROM after this action is complete.

9.3.3 Auto saving parameter changes (Pr 11.042 = Auto (3))

This setting causes the drive to automatically save any changes made to menu 0 parameters on the drive to the NV Media Card. The latest menu 0 parameter set in the drive is therefore always backed up on the NV Media Card. Changing Pr 11.042 to Auto (3) and resetting the drive will immediately save the complete parameter set from the drive to the card, i.e. all parameters except parameters with the NC coding bit set. Once the whole parameter set is stored only the individual modified menu 0 parameter setting is updated.

Advanced parameter changes are only saved to the NV Media Card when Pr mm.000 is set to 'Save Parameters' or a 1000 and the drive reset.

All NV Media Card trips apply, except 'Card Change'. If the data block already contains information it is automatically overwritten.

If the card is removed when Pr 11.042 is set to 3 Pr 11.042 is then automatically set to None (0).

When a new NV Media Card is installed Pr 11.042 must be set back to Auto (3) by the user and the drive reset so the complete parameter set is rewritten to the new NV Media Card if auto mode is still required.

When Pr 11.042 is set to Auto (3) and the parameters in the drive are saved, the NV Media Card is also updated, and therefore the NV Media Card becomes a copy of the drives stored configuration.

At power up, if Pr 11.042 is set to Auto (3), the drive will save the complete parameter set to the NV Media Card. The drive will display 'Card Write' during this operation. This is done to ensure that if a user puts a new NV Media Card in during power down the new NV Media Card will have the correct data.

NOTE

When Pr 11.042 is set to Auto (3) the setting of Pr 11.042 itself is saved to the drive EEPROM but not the NV Media Card.

9.3.4 Booting up from the NV Media Card on every power up (Pr 11.042 = Boot (4))

When Pr 11.042 is set to Boot (4) the drive operates the same as Auto mode except when the drive is powered-up. The parameters on the NV Media Card will be automatically transferred to the drive at power up if the following are true:

- A card is inserted in the drive
- Parameter data block 1 exists on the card
- The data in block 1 is type 1 to 4 (as defined in Pr 11.038)
- Pr 11.042 on the card set to Boot (4)

The drive will display 'Booting Parameters' during this operation. If the drive mode is different from that on the card, the drive gives a 'Card Drive Mode' trip and the data is not transferred.

If 'Boot' mode is stored on the copying NV Media Card this makes the copying NV Media Card the master device. This provides a very fast and efficient way of re-programming a number of drives.

NOTE

'Boot' mode is saved to the card, but when the card is read, the value of Pr 11.042 is not transferred to the drive.

9.3.5 Booting up from the NV Media Card on every power up (Pr mm.000 = 2001)

It is possible to create a bootable parameter data block by setting Pr mm.000 to 2001 and initiating a drive reset. This data block is created in one operation and is not updated when further parameter changes are made.

Setting Pr mm.000 to 2001 will overwrite the data block 1 on the card if it already exists.

9.3.6 8yyy - Comparing the drive full parameter set with the NV Media Card values

Setting 8yyy in Pr mm.000, will compare the NV Media Card file with the data in the drive. If the compare is successful Pr mm.000 is simply set to 0. If the compare fails a 'Card Compare' trip is initiated.

9.3.7 7yyy / 9999 - Erasing data from the NV Media Card values

Data can be erased from the NV Media Card either one block at a time or all blocks in one go.

- Setting 7yyy in Pr mm.000 will erase NV Media Card data block yyy
- Setting 9999 in Pr mm.000 will erase all the data blocks on a SMARTCARD, but not on an SD Card.

9.3.8 9666 / 9555 - Setting and clearing the NV Media Card warning suppression flag

If the option modules installed to the source and destination drive are different or are in different slots the drive will produce a 'Card Option' trip. If the data is being transferred to a drive of a different voltage or current rating a 'Card Rating' trip will occur. It is possible to suppress these trips by setting the warning suppression flag. If this flag is set the drive will not trip if the option module(s) or drive ratings are different between the source and destination drives. The options module or rating dependent parameters will not be transferred.

- Setting 9666 in Pr mm.000 will set the warning suppression flag
- Setting 9555 in Pr mm.000 will clear the warning suppression flag

9.3.9 9888 / 9777 - Setting and clearing the NV Media Card read only flag

The NV Media Card may be protected from writing or erasing by setting the read only flag. If an attempt is made to write or erase a data block when the read only flag is set, a 'Card Read Only' trip is initiated. When the read only flag is set only codes 6yyy or 9777 are effective.

- Setting 9888 in Pr mm.000 will set the read only flag
- Setting 9777 in Pr mm.000 will clear the read only flag

9.4 Data block header information

Each data block stored on a NV Media Card has header information detailing the following:

- NV Media Card File Number (11.037)
- NV Media Card File Type (11.038)
- NV Media Card File Version (11.039)
- NV Media Card File Checksum (11.040)

The header information for each data block which has been used can be viewed in Pr 11.038 to Pr 11.040 by increasing or decreasing the data block number set in Pr 11.037. If there is no data on the card Pr 11.037 can only have a value of 0.

9.5 NV Media Card parameters

Table 9-2 Key to parameter table coding

RW	Read / Write	ND	No default value
RO	Read only	NC	Not copied
Num	Number parameter	PT	Protected parameter
Bit	Bit parameter	RA	Rating dependant
Txt	Text string	US	User save
Bin	Binary parameter	PS	Power-down save
Fl	Filtered	DE	Destination

11.036 {00.029} NV Media Card File Previously Loaded	
RO	Num
OL	
RFC-A	⇕
RFC-S	
	0 to 999
	⇒
	0

This parameter shows the number of the data block last transferred from a NV Media Card to the drive. If defaults are subsequently reloaded this parameter is set to 0.

11.037 NV Media Card File Number	
RO	Num
OL	
RFC-A	⇕
RFC-S	
	0 to 999
	⇒
	0

This parameter should have the data block number which the user would like the information displayed in Pr 11.038, Pr 11.039 and Pr 11.040.

11.038 NV Media Card File Type	
RO	Txt
OL	
RFC-A	⇕
RFC-S	
	None (0), Open-loop (1), RFC-A (2), RFC-S (3), Regen (4), User Prog (5), Option App (6)
	⇒

Displays the type/mode of the data block selected with Pr 11.037.

Pr 11.038	String	Type / mode
0	None	No file selected
1	Open-loop	Open-loop mode parameter file
2	RFC-A	RFC-A mode parameter file
3	RFC-S	RFC-S mode parameter file
4	Regen	Regen mode parameter file
5	User Prog	Onboard user program file
6	Option App	Option module application file

11.039 NV Media Card File Version	
RO	Num
OL	
RFC-A	⇕
RFC-S	
	0 to 9999
	⇒

Displays the version number of the file selected in Pr 11.037.

11.040 NV Media Card File Checksum	
RO	Num
OL	
RFC-A	⇕
RFC-S	
	--2147483648 to 2147483647
	⇒

Displays the checksum of the data block selected in Pr 11.037.

11.042 Parameter Cloning	
RO	Txt
OL	
RFC-A	⇕
RFC-S	
	None (0), Read (1), Program (2), Auto (3), Boot (4)
	⇒
	None (0)

* Only a value of 3 or 4 in this parameter is saved.

NOTE

If Pr 11.042 is equal to 1 or 2, this value is not transferred to the drive or saved to the EEPROM. If Pr 11.042 is set to 3 or 4 the value is saved to the EEPROM

None (0) = Inactive

Read (1) = Read parameter set from the NV Media Card

Program (2) = Program a parameter set to the NV Media Card

Auto (3) = Auto save

Boot (4) = Boot mode

11.072 NV Media Card Create Special File	
RO	Num
OL	
RFC-A	⇕
RFC-S	
	0 to 1
	⇒
	0

If NV Media Card Create Special File (11.072) = 1 when a parameter file is transferred to an NV media card the file is created as a macro file. NV Media Card Create Special File (11.072) is reset to 0 after the file is created or the transfer fails.

11.073 NV Media Card Type	
RO	Txt
OL	
RFC-A	⇕
RFC-S	
	None (0), SMART Card (1), SD Card (2)
	⇒

This will display the type of media card inserted; it will contain one of the following values:

"None" (0) - No NV Media Card has been inserted.

"SMART Card" (1) - A SMARTCARD has been inserted.

"SD Card" (2) - A FAT formatted SD card has been inserted.

11.075 NV Media Card Read-only Flag	
RO	Bit
OL	
RFC-A	⇕
RFC-S	
	Off (0) or On (1)
	⇒

NV Media Card Read-only Flag (11.075) shows the state of the read-only flag for the currently installed card.

11.076		NV Media Card Warning Suppression Flag											
RO	Bit				ND	NC	PT						
OL													
RFC-A	↕	Off (0) or On (1)				⇒							
RFC-S													

NV Media Card Warning Suppression Flag (11.076) shows the state of the warning flag for the currently installed card.

11.077		NV Media Card File Required Version											
RW	Num				ND	NC	PT						
OL													
RFC-A	↕	0 to 9999				⇒							
RFC-S													

The value of NV Media Card File Required Version (11.077) is used as the version number for a file when it is created on an NV Media Card. NV Media Card File Required Version (11.077) is reset to 0 when the file is created or the transfer fails.

9.6 NV Media Card trips

After an attempt to read, write or erase data from a NV Media Card a trip is initiated if there has been a problem with the command.

See Chapter 13 *Diagnostics* on page 258 for more information on NV Media Card trips.

10 Onboard PLC

10.1 Onboard PLC and Machine Control Studio

The drive has the ability to store and execute a 16 kB Onboard PLC user program without the need for additional hardware in the form of an option module.

Machine Control Studio is an IEC61131-3 development environment designed for use with Unidrive M and compatible application modules. Machine Control Studio is based on CODESYS from 3S-Smart Software Solutions.

All of the programming languages defined in the IEC standard IEC 61131-3 are supported in the Machine Control Studio development environment.

- ST (Structured text)
- LD (Ladder diagram)
- FBD (Function block diagram)
- IL (Instruction list)
- SFC (Sequential function chart)
- CFC (Continuous Function Chart). CFC is an extension to the standard IEC programming languages

Machine Control Studio provides a complete environment for the development of user programs. Programs can be created, compiled and downloaded to a Unidrive M for execution, via the communications port on the front of the drive. The run-time operation of the compiled program on the target can also be monitored using Machine Control Studio and facilities are provided to interact with the program on the target by setting new values for target variables and parameters.

The Onboard PLC and Machine Control Studio form the first level of functionality in a range of programmable options for Unidrive M.

Machine Control Studio can be downloaded from www.controltechniques.com.

See the Machine Control Studio help file for more information regarding using Machine Control Studio, creating user programs and downloading user programs to the drive.

10.2 Benefits

The combination of the Onboard PLC and Machine Control Studio, means that the drive can replace nano and some micro PLCs in many applications

Machine Control Studio benefits from access to the standard CODESYS function and function block libraries as well as those from third parties. Functions and function blocks available as standard in Machine Control Studio include, but not limited to, the following:

- Arithmetic blocks
- Comparison blocks
- Timers
- Counters
- Multiplexers
- Latches
- Bit manipulation

Typical applications for the Onboard PLC include:

- Ancillary pumps
- Fans and control valves
- Interlocking logic
- Sequences routines
- Custom control words.

10.3 Features

The Unidrive M Onboard PLC user program has the following features:

10.3.1 Tasks

The Onboard PLC allows use of two tasks.

- **Clock:** A high priority real time task. The clock task interval can be set from 16 ms to 262 s in multiples of 16 ms. The parameter *Onboard User Program: Clock Task Time Used* (11.051) shows the percentage of the available time used by clock task. A read or write of a drive parameter by the user program takes a finite period of time. It is possible to select up to 10 parameters as fast access parameter which reduced the amount of time it takes for the user program to read from or write to a drive parameter. This is useful when using a clock task with a fast update rate as selecting a parameter for fast access reduces the amount of the clock task resource required to access parameters.
- **Freewheeling:** A non-real time background task. The freewheeling task is scheduled for a short period once every 256 ms. The time for which the task is scheduled will vary depending on the loading of the drive's processor. When scheduled, several scans of the user program may be performed. Some scans may execute in microseconds. However, when the main drive functions are scheduled there will be a pause in the execution of the program causing some scans to take many milliseconds. The parameter *Onboard User Program: Freewheeling Tasks Per Second* (11.050) shows the number of times the freewheeling task has started per second.

10.3.2 Variables

The Onboard PLC supports the use of variables with the data types of Boolean, integer (8 bit, 16 bit and 32 bit, signed and unsigned), floating point (64 bit only), strings and time.

10.3.3 Custom menu

Machine Control Studio can construct a custom drive menu to reside in menu 30 on the drive. The following properties of each parameter can be defined using Machine Control Studio:

- Parameter name
- Number of decimal places
- The units for the parameter to be display on the keypad.
- The minimum, maximum and default values
- Memory handling (i.e. power down save, user save or volatile)
- Data type. The drive provides a limited set of 1 bit, 8 bit, 16 bit and 32 bit integer parameters to create the customer menu.

Parameters in this customer menu can be accessed by the user program and will appear on the keypad.

10.3.4 Limitations

The Onboard PLC user program has the following limitations:

- The flash memory allocated to the Onboard PLC is 16 kB which includes the user program and its header which results in a maximum user program size of about 12 kB
- The Onboard PLC is provided with 2 kB of RAM.
- The drive is rated for 100 program downloads. This limitation is imposed by the flash memory used to store the program within the drive.
- There is only one real-time task with a minimum period of 16 ms.
- The freewheeling background task runs at a low priority. The drive is prioritized to perform the clock task and its major functions first, e.g. motor control, and will use any remaining processing time to execute the freewheeling task as a background activity. As the drive's processor becomes more heavily loaded, less time is spent executing the freewheeling task.
- Breakpoints, single stepping and online program changes are not possible.
- The Graphing tool is not supported.
- The variable data types REAL (32 bit floating point), LWORD (64 bit integer) and WSTRING (Unicode string), and retained variables are not supported.

10.4 Onboard PLC parameters

The following parameters are associated with the Onboard PLC user program.

11.047		Onboard User Program: Enable				
RW	Txt				US	
↕	Stop (0) or Run (1)			⇒	Run (1)	

This parameter stops and starts the user program.

0 - Stop the User Program

The onboard user program is stopped. If it is restarted by setting *Onboard User Program: Enable* (11.047) to a non-zero value the background task starts from the beginning.

1 - Run the User Program

The user program will execute.

11.048		Onboard User Program: Status				
RO	Txt		NC	PT		
↕	-2147483648 to 2147483647			⇒		

This parameter is read-only and indicates the status of the user program in the drive. The user program writes the value to this parameter.

0: Stopped

1: Running

2: Exception

3: No user program present

11.049		Onboard User Program: Programming Events				
RO	Uni		NC	PT	PS	
↕	0 to 65535			⇒		

This parameter holds the number of times an Onboard PLC user program download has taken place and is 0 on dispatch from the factory. The drive is rated for one hundred ladder program downloads. This parameter is not altered when defaults are loaded.

11.050		Onboard User Program: Freewheeling Tasks Per Second				
RO	Uni		NC	PT		
↕	0 to 65535			⇒		

This parameter shows the number of times the freewheeling task has started per second.

11.051		Onboard User Program: Clock Task Time Used				
RO			NC	PT		
↕	0.0 to 100.0 %			⇒		

This parameter shows the percentage of the available time used by the user program clock task.

11.055		Onboard User Program: Clock Task Scheduled Interval				
RO			NC	PT		
↕	0 to 262128 ms			⇒		

This parameter shows the interval at which the clock task is scheduled to run at in ms.

If the drive detects an error in the user program it will initiate a User Program trip. The sub-trip number for the User Program trip details the reason for the error. See Chapter 13 *Diagnostics* on page 258 for more information on the User Program trip.

11 Advanced parameters

This is a quick reference to all parameters in the drive showing units, ranges limits etc, with block diagrams to illustrate their function. Full descriptions of the parameters can be found in the *Parameter Reference Guide*.



These advanced parameters are listed for reference purposes only. The lists in this chapter do not include sufficient information for adjusting these parameters. Incorrect adjustment can affect the safety of the system, and damage the drive and or external equipment. Before attempting to adjust any of these parameters, refer to the *Parameter Reference Guide*.

Table 11-1 Menu descriptions

Menu	Description
0	Commonly used basic set up parameters for quick / easy programming
1	Frequency / Speed reference
2	Ramps
3	Frequency slaving, speed feedback and speed control
4	Torque and current control
5	Motor control
6	Sequencer and clock
7	Analog I/O, Temperature monitoring
8	Digital I/O
9	Programmable logic, motorized pot, binary sum, timers and scope
10	Status and trips
11	Drive set-up and identification, serial communications
12	Threshold detectors and variable selectors
13	Standard motion control
14	User PID controller
15	Option module slot 1 set-up menu
16	Option module slot 2 set-up menu
17	Option module slot 3 set-up menu
18	General option module application menu 1
19	General option module application menu 2
20	General option module application menu 3
21	Second motor parameters
22	Menu 0 set-up
23	Not allocated
28	Reserved menu
29	Reserved menu
30	Onboard user programming application menu
Slot 1	Slot 1 option menus*
Slot 2	Slot 2 option menus*
Slot 3	Slot 3 option menus*

* Only displayed when the option modules are installed.

Operation mode abbreviations:

Open-loop:

Sensorless control for induction motors

RFC-A Sensorless:

Asynchronous Rotor Flux Sensorless Control for induction motors

RFC-S Sensorless: Synchronous Rotor Flux Sensorless Control for synchronous motors including permanent magnet motors.

Default abbreviations:

Standard default value (50 Hz AC supply frequency)

USA default value (60 Hz AC supply frequency)

NOTE

Parameter numbers shown in brackets {...} are the equivalent Menu 0 parameters. Some Menu 0 parameters appear twice since their function depends on the operating mode.

The Range - RFC-A / S column applies to both RFC-A and RFC-S. For some parameters, this column applies to only one of these modes, this is indicated accordingly in the Default columns.

In some cases, the function or range of a parameter is affected by the setting of another parameter. The information in the lists relates to the default condition of any parameters affected in this way.

Table 11-2 Key to parameter table coding

Coding	Attribute
RW	Read/Write: can be written by the user
RO	Read only: can only be read by the user
Bit	1 bit parameter. 'On' or 'Off' on the display
Num	Number: can be uni-polar or bi-polar
Txt	Text: the parameter uses text strings instead of numbers.
Bin	Binary parameter
IP	IP Address parameter
Mac	Mac Address parameter
Date	Date parameter
Time	Time parameter
Chr	Character parameter
FI	Filtered: some parameters which can have rapidly changing values are filtered when displayed on the drive keypad for easy viewing.
DE	Destination: This parameter selects the destination of an input or logic function.
RA	Rating dependent: this parameter is likely to have different values and ranges with drives of different voltage and current ratings. Parameters with this attribute will be transferred to the destination drive by non-volatile storage media when the rating of the destination drive is different from the source drive and the file is a parameter file. However, the values will be transferred if only the current rating is different and the file is a difference from default type file.
ND	No default: The parameter is not modified when defaults are loaded
NC	Not copied: not transferred to or from non-volatile media during copying.
PT	Protected: cannot be used as a destination.
US	User save: parameter saved in drive EEPROM when the user initiates a parameter save.
PS	Power-down save: parameter automatically saved in drive EEPROM when the under volts (UV) trip occurs.

Table 11-3 Feature look-up table

Feature	Related parameters (Pr)												
Acceleration rates	02.010	02.011 to 02.019		02.032	02.033	02.034	02.002						
Analog speed reference 1	01.036	07.010	07.001	07.007	07.008	07.009	07.025	07.026	07.030				
Analog speed reference 2	01.037	07.014	01.041	07.002	07.011	07.012	07.013	07.028	07.031				
Analog I/O	Menu 7												
Analog input 1	07.001	07.007	07.008	07.009	07.010	07.025	07.026	07.030					
Analog input 2	07.002	07.011	07.012	07.013	07.014	07.028	07.031						
Analog input 3	07.003	07.015	07.016	07.017	07.018	07.029	07.032						
Analog output 1	07.019	07.020	07.021	07.033									
Analog output 2	07.022	07.023	07.024										
Application menu	Menu 18			Menu 19			Menu 20						
At speed indicator bit	03.006	03.007	03.009	10.006	10.005	10.007							
Auto reset	10.034	10.035	10.036	10.001									
Autotune	05.012	05.016	05.017	05.023	05.024	05.025	05.010	05.029	05.030				
Binary sum	09.029	09.030	09.031	09.032	09.033	09.034							
Bipolar speed	01.010												
Brake control	12.040 to 12.049												
Braking	10.011	10.010	10.030	10.031	06.001	02.004	02.002	10.012	10.039	10.040			
Catch a spinning motor	06.009	05.040											
Coast to stop	06.001												
Comms	11.023 to 11.026												
Copying	11.042	11.036 to 11.040											
Cost - per kWh electricity	06.016	06.017	06.024	06.025	06.026	06.040							
Current controller	04.013	04.014											
Current feedback	04.001	04.002	04.017	04.004	04.012	04.020	04.023	04.024	04.026	10.008	10.009	10.017	
Current limits	04.005	04.006	04.007	04.018	04.015	04.019	04.016	05.007	05.010	10.008	10.009	10.017	
DC bus voltage	05.005	02.008											
DC injection braking	06.006	06.007	06.001										
Deceleration rates	02.020	02.021 to 02.029		02.004	02.035 to 02.037		02.002	02.008	06.001	10.030	10.031	10.039	02.009
Defaults	11.043	11.046											
Digital I/O	Menu 8												
Digital I/O read word	08.020												
Digital I/O T24	08.001	08.011	08.021	08.031									
Digital I/O T25	08.002	08.012	08.022	08.032									
Digital I/O T26	08.003	08.013	08.023	08.033									
Digital input T27	08.004	08.014	08.024										
Digital input T28	08.005	08.015	08.025	08.039									
Digital input T29	08.006	08.016	08.026	08.039									
Digital lock	13.010	13.001 to 13.009			13.011	13.012	13.016	03.022	03.023	13.019 to 13.023			
Digital output T22	08.008	08.018	08.028										
Direction	10.013	06.030	06.031	01.003	10.014	02.001	03.002	08.003	08.004	10.040			
Drive active	10.002	10.040											
Drive derivative	11.028												
Drive OK	10.001	08.027	08.007	08.017	10.036	10.040							
Dynamic performance	05.026												
Dynamic V/F	05.013												
Enable	06.015	08.009	08.010										
External trip	10.032	08.010	08.007										
Fan speed	06.045												
Fast disable	06.029												
Field weakening - induction motor	05.029	05.030	01.006	05.028									
Field weakening - PM motor	05.022	01.006	05.009										
Filter change	06.019	06.018											
Frequency reference selection	01.014	01.015											
Hard speed reference	03.022	03.023											
Heavy duty rating	05.007	11.032											
High stability space vector modulation	05.019												
I/O sequencer	06.004	06.030	06.031	06.032	06.033	06.034	06.042	06.043	06.041				
Inertia compensation	02.038	05.012	04.022	03.018									
Jog reference	01.005	02.019	02.029										
Keypad reference	01.017	01.014	01.043	01.051	06.012	06.013							
Kt	05.032												

Feature	Related parameters (Pr)												
Limit switches	06.035	06.036											
Line power supply loss	06.003	10.015	10.016	05.005									
Local position reference	13.020 to 13.023												
Logic function 1	09.001	09.004	09.005	09.006	09.007	09.008	09.009	09.010					
Logic function 2	09.002	09.014	09.015	09.016	09.017	09.018	09.019	09.020					
Low voltage supply	06.044	06.046											
Maximum speed	01.006												
Menu 0 set-up	Menu 22												
Minimum speed	01.007	10.004											
Modules - number of	11.035												
Motor map	05.006	05.007	05.008	05.009	05.010	05.011							
Motor map 2	Menu 21		11.45										
Motorized potentiometer	09.021	09.022	09.023	09.024	09.025	09.026	09.027	09.028					
Offset speed reference	01.004	01.038	01.009										
Onboard PLC	11.047 to 11.051												
Open loop vector mode	05.014	05.017	05.023										
Operating mode	00.048	11.031	03.024	05.014									
Orientation	13.010	13.013 to 13.015											
Output	05.001	05.002	05.003	05.004									
Overspeed threshold	03.008												
PID controller	Menu 14												
Positive logic	08.029												
Power up parameter	11.022	11.021											
Precision reference	01.018	01.019	01.020	01.044									
Preset speeds	01.015	01.021 to 01.028			01.016	01.014	01.042	01.045 to 01.048			01.050		
Programmable logic	Menu 9												
Quasi square operation	05.020												
Ramp (accel / decel) mode	02.004	02.008	06.001	02.002	02.003	10.030	10.031	10.039					
Rated speed autotune	05.016	05.008											
Regenerating	10.010	10.011	10.030	10.031	06.001	02.004	02.002	10.012	10.039	10.040			
Relative jog	13.017 to 13.019												
Relay output	08.007	08.017	08.027										
Reset	10.033	08.002	08.022	10.034	10.035	10.036	10.001						
RFC-A Sensorless	03.024	03.042	04.012	05.040									
S ramp	02.006	02.007											
Sample rates	05.018												
SAFE TORQUE OFF input	08.009	08.010											
Security code	11.030	11.044											
Serial comms	11.023 to 11.026												
Skip speeds	01.029	01.030	01.031	01.032	01.033	01.034	01.035						
Slip compensation	05.027	05.008											
NV media card	11.036 to 11.040			11.042									
Firmware version	11.029	11.034											
Speed controller	03.010 to 03.017			03.019	03.020	03.021							
Speed feedback	03.002	03.003	03.004										
Speed feedback - drive	03.026												
Speed reference selection	01.014	01.015	01.049	01.050	01.001								
Status word	10.040												
Supply	06.044	05.005	06.046										
Switching frequency	05.018	05.035	07.034	07.035									
Thermal protection - drive	05.018	05.035	07.004	07.005	07.006	07.032	07.035	10.018					
Thermal protection - motor	04.015	05.007	04.019	04.016	04.025	07.015							
Thermistor input	07.015	07.003											
Threshold detector 1	12.001	12.003 to 12.007											
Threshold detector 2	12.002	12.023 to 12.027											
Time - filter change	06.019	06.018											
Time - powered up log	06.020	06.021	06.028										
Time - run log	06.022	06.023	06.028										
Torque	04.003	04.026	05.032										
Torque mode	04.008	04.011	04.009	04.010									
Trip detection	10.037	10.038	10.020 to 10.029										
Trip log	10.020 to 10.029			10.041 to 10.051			06.028	10.070 to 10.079					
Under voltage	05.005	10.016	10.015										
V/F mode	05.015	05.014											
Variable selector 1	12.008 to 12.015												

Feature	Related parameters (Pr)												
Variable selector 2	12.028 to 12.035												
Velocity feed forward	01.039	01.040											
Voltage controller	05.031												
Voltage mode	05.014	05.017	05.023	05.015									
Voltage rating	11.033	05.009	05.005										
Voltage supply	06.044	06.046	05.005										
Warning	10.019	10.012	10.017	10.018	10.040								
Zero speed indicator bit	03.005	10.003											

Parameter ranges and Variable minimum/maximums:

Some parameters in the drive have a variable range with a variable minimum and a variable maximum values which is dependent on one of the following:

- The settings of other parameters
- The drive rating
- The drive mode
- Combination of any of the above

The tables below give the definition of variable minimum/maximum and the maximum range of these.

VM_AC_VOLTAGE		Range applied to parameters showing AC voltage
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	VM_AC_VOLTAGE[MAX] is drive voltage rating dependent. See Table 11-4 VM_AC_VOLTAGE[MIN] = 0	

VM_AC_VOLTAGE_SET		Range applied to the AC voltage set-up parameters
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	VM_AC_VOLTAGE[MAX] is drive voltage rating dependent. See Table 11-4 VM_AC_VOLTAGE[MIN] = 0	

VM_ACCEL_RATE		Maximum applied to the ramp rate parameters
Units	s / 100 Hz, s / 1000 rpm, s / 1000 mm/s	
Range of [MIN]	Open-loop: 0.0 RFC-A, RFC-S: 0.000	
Range of [MAX]	Open-loop: 0.0 to 3200.0 RFC-A, RFC-S: 0.000 to 3200.000	
Definition	<p>Open-loop mode</p> <p>If <i>Ramp Rate Units</i> (02.039) = 0: VM_ACCEL_RATE[MAX] = 3200.0</p> <p>If <i>Ramp Rate Units</i> (02.039) = 1: VM_ACCEL_RATE[MAX] = 3200.0 x Pr 01.006 / 100.0</p> <p>VM_ACCEL_RATE[MIN] = 0.0</p> <p>RFC-A, RFC-S modes</p> <p>If <i>Ramp Rate Units</i> (02.039) = 0: VM_ACCEL_RATE[MAX] = 3200.000</p> <p>If <i>Ramp Rate Units</i> (02.039) = 1: VM_ACCEL_RATE[MAX] = 3200.000 x Pr 01.006 / 1000.0</p> <p>VM_ACCEL_RATE[MIN] = 0.000</p> <p>If the second motor map is selected (Pr 11.045 = 1) Pr 21.001 is used instead of Pr 01.006.</p>	

VM_AMC_ROLL_OVER		Range applied the position parameters in the advanced motion controller
Units	User units	
Range of [MIN]	0 or -2^{31}	
Range of [MAX]	0 or $-2^{31}-1$	
Definition	$VM_AMC_ROLL_OVER[MAX] = 2^{31}-1$ $VM_AMC_ROLL_OVER[MIN] = 2^{31}$	

VM_AMC_UNIPOLAR_ROLL_OVER		Range applied the position parameters in the advanced motion controller that are restricted to positive values
Units	User units	
Range of [MIN]	0 L	
Range of [MAX]	0 to $2^{31}-1$	
Definition	$VM_AMC_UNIPOLAR_ROLL_OVER[MAX] = VM_AMC_ROLL_OVER[MAX]$ $VM_AMC_UNIPOLAR_ROLL_OVER[MIN] = 0$	

VM_DC_VOLTAGE		Range applied to parameters showing DC voltage
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	$VM_DC_VOLTAGE[MAX]$ is the full scale d.c. link voltage feedback (over voltage trip level) for the drive. This level is drive voltage rating dependent. See Table 11-4 $VM_DC_VOLTAGE[MIN] = 0$	

VM_DC_VOLTAGE_SET		Range applied to DC voltage reference parameters
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to the value listed below	
Definition	$VM_DC_VOLTAGE_SET[MAX]$ is drive voltage rating dependent. See Table 11-4 $VM_DC_VOLTAGE_SET[MIN] = 0$	

VM_DRIVE_CURRENT		Range applied to parameters showing current in A
Units	A	
Range of [MIN]	-99999.999 to 0.000	
Range of [MAX]	0.000 to 99999.999	
Definition	$VM_DRIVE_CURRENT[MAX]$ is equivalent to the full scale (over current trip level) or K_c value for the drive and is given by <i>Full Scale Current</i> K_c (11.061). $VM_DRIVE_CURRENT[MIN] = -VM_DRIVE_CURRENT[MAX]$	

VM_DRIVE_CURRENT_UNIPOLAR		Unipolar version of VM_DRIVE_CURRENT
Units	A	
Range of [MIN]	0.000	
Range of [MAX]	0.000 to 99999.999	
Definition	$VM_DRIVE_CURRENT_UNIPOLAR[MAX] = VM_DRIVE_CURRENT[MAX]$ $VM_DRIVE_CURRENT_UNIPOLAR[MIN] = 0.000$	

VM_HIGH_DC_VOLTAGE		Range applied to parameters showing high DC voltage
Units	V	
Range of [MIN]	0	
Range of [MAX]	0 to 1500	
Definition	<p>VM_HIGH_DC_VOLTAGE[MAX] is the full scale d.c. link voltage feedback for the high d.c. link voltage measurement which can measure the voltage if it goes above the normal full scale value. This level is drive voltage rating dependent. See Table 11-4</p> <p>VM_HIGH_DC_VOLTAGE[MIN] = 0</p>	

VM_LOW_UNDER_VOLTS		Range applied the low under-voltage threshold
Units	V	
Range of [MIN]	24	
Range of [MAX]	24 to 1150	
Definition	<p>If <i>Back-up Mode Enable</i> (06.068) = 0: VM_LOW_UNDER_VOLTS[MAX] = VM_STD_UNDER_VOLTS[MIN] If <i>Back-up Mode Enable</i> (06.068) = 1: VM_LOW_UNDER_VOLTS[MAX] = VM_STD_UNDER_VOLTS[MIN] / 1.1. VM_LOW_UNDER_VOLTS[MIN] = 24.</p>	

VM_MOTOR1_CURRENT_LIMIT VM_MOTOR2_CURRENT_LIMIT		Range applied to current limit parameters
Units	%	
Range of [MIN]	0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	<p>VM_MOTOR1_CURRENT_LIMIT[MIN] = 0.0</p> <p>Open-loop VM_MOTOR1_CURRENT_LIMIT[MAX] = $(I_{Tlimit} / I_{Trated}) \times 100 \%$ Where: $I_{Tlimit} = I_{MaxRef} \times \cos(\sin^{-1}(I_{Mrated} / I_{MaxRef}))$ $I_{Mrated} = Pr \mathbf{05.007} \sin \phi$ $I_{Trated} = Pr \mathbf{05.007} \times \cos \phi$ $\cos \phi = Pr \mathbf{05.010}$ I_{MaxRef} is 0.7 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty), otherwise it is the lower of 0.7 x Pr 11.061 or 1.1 x Pr 11.060 (i.e. Normal duty).</p> <p>RFC-A VM_MOTOR1_CURRENT_LIMIT[MAX] = $(I_{Tlimit} / I_{Trated}) \times 100 \%$ Where: $I_{Tlimit} = I_{MaxRef} \times \cos(\sin^{-1}(I_{Mrated} / I_{MaxRef}))$ $I_{Mrated} = Pr \mathbf{05.007} \times \cos \phi_1$ $I_{Trated} = Pr \mathbf{05.007} \times \sin \phi_1$ $\phi_1 = \cos^{-1}(Pr \mathbf{05.010}) + \phi_2$. ϕ_1 is calculated during an autotune. See the variable minimum / maximum calculations in the <i>Parameter Reference Guide</i> for more information regarding ϕ_2. I_{MaxRef} is 0.9 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty), otherwise it is the lower of 0.9 x Pr 11.061 or 1.1 x Pr 11.060 (i.e. Normal duty).</p> <p>RFC-S and Regen VM_MOTOR1_CURRENT_LIMIT[MAX] = $(I_{MaxRef} / Pr \mathbf{05.007}) \times 100 \%$ Where: I_{MaxRef} is 0.9 x Pr 11.061 when the motor rated current set in Pr 05.007 is less than or equal to Pr 11.032 (i.e. Heavy duty), otherwise it is the lower of 0.9 x Pr 11.061 or 1.1 x Pr 11.060 (i.e. Normal duty).</p> <p>For VM_MOTOR2_CURRENT_LIMIT[MAX] use Pr 21.007 instead of Pr 05.007 and Pr 21.010 instead of Pr 05.010.</p>	

VM_NEGATIVE_REF_CLAMP1 VM_NEGATIVE_REF_CLAMP2		Limits applied to the negative frequency or speed clamp			
Units	Open-loop: Hz RFC-A, RFC-S: rpm or mm/s				
Range of [MIN]	Open-loop: -550.0 to 0.0 RFC-A, RFC-S: -33000.0 to 0.0				
Range of [MAX]	Open-loop: 0.0 to 550.0 RFC-A, RFC-S: 0.0 to 33000.0				
Definition	Negative Reference Clamp Enable (01.008)	Bipolar Reference Enable (01.010)	VM_NEGATIVE_REF_CLAMP1[MIN]	VM_NEGATIVE_REF_CLAMP1[MAX]	
	0	0	0.0	Pr 01.006	
	0	1	0.0	0.0	
	1	X	-VM_POSITIVE_REF_CLAMP1[MAX]	0.0	
VM_NEGATIVE_REF_CLAMP2 is defined in the same way except that Pr 21.001 is used instead of Pr 01.006.					

VM_POSITIVE_REF_CLAMP1 VM_POSITIVE_REF_CLAMP2		Limits applied to the positive frequency or speed reference clamp			
Units	Open-loop: Hz RFC-A, RFC-S: rpm or mm/s				
Range of [MIN]	Open-loop: 0.0 RFC-A, RFC-S: 0.0				
Range of [MAX]	Open-loop: 550.0 RFC-A, RFC-S: 0.0 to 33000.0				
Definition	VM_POSITIVE_REF_CLAMP1[MAX] defines the range of the positive reference clamp, <i>Maximum Reference Clamp</i> (01.006), which in turn limit the references. In RFC-A and RFC-S modes a limit is applied so that the position feedback does not exceed the speed where the drive can no longer interpret the feedback signal correctly as given in the table below. The limit is based on the position feedback device selected with <i>Motor Control Feedback Select</i> (03.026). It is possible to disable this limit if the <i>RFC Feedback Mode</i> (03.024) ≥ 1 so that the motor can be operated at a speed above the level where the drive can interpret the feedback in sensorless mode. It should be noted that the position feedback device itself may have a maximum speed limit that is lower than those given in the table. Care should be taken not to exceed a speed that would cause damage to the position feedback device.				
	Feedback device	VM_POSITIVE_REF_CLAMP1[MAX]			
	AB, AB Servo	(500 kHz x 60 / rotary lines per revolution) rpm (500 kHz / linear line pitch in mm) mm/s			
	FD, FR, FD Servo, FR Servo	(500 kHz x 60 / rotary lines per revolution)/2 rpm (500 kHz / linear line pitch in mm)/2 mm/s			
	SC, SC Hiper, SC EnDat, SC SSI, SC Servo	(500 kHz x 60 / sine waves per revolution) rpm (500 kHz / linear sine wave pitch in mm) mm/s			
	Resolver	(1000 Hz x 60 / resolver pole pairs) rpm (1000 Hz / pole pitch in mm / resolver pole pairs) mm/s			
	Any other device	33000.0 rpm or mm/s			
In open-loop mode VM_POSITIVE_REF_CLAMP1[MAX] is fixed at 550.0 Hz In RFC mode a limit is applied to the speed reference of 550 x 60 / Motor pole pairs. Therefore, with a 4 pole motor the limit for VM_POSITIVE_REF_CLAMP1[MAX] will be 16,500 rpm. VM_POSITIVE_REF_CLAMP1[MIN] = 0.0 VM_POSITIVE_REF_CLAMP2 is defined in the same way as VM_POSITIVE_REF_CLAMP1 except VM_POSITIVE_REF_CLAMP2[MAX] defines the range of the positive reference clamp, <i>M2 Maximum Reference Clamp</i> (21.001), which in turn limits the references.					

VM_POWER		Range applied to parameters that either set or display power
Units	kW	
Range of [MIN]	-99999.999 to 0.000	
Range of [MAX]	0.000 to 99999.999	
Definition	<p>VM_POWER[MAX] is rating dependent and is chosen to allow for the maximum power that can be output by the drive with maximum a.c. output voltage, at maximum controlled current and unity power factor.</p> <p>$VM_POWER[MAX] = \sqrt{3} \times VM_AC_VOLTAGE[MAX] \times VM_DRIVE_CURRENT[MAX] / 1000$</p> <p>$VM_POWER[MIN] = -VM_POWER[MAX]$</p>	

VM_RATED_CURRENT		Range applied to rated current parameters
Units	A	
Range of [MIN]	-99999.999 to 0.000	
Range of [MAX]	0.000 to 99999.999	
Definition	<p>VM_RATED_CURRENT [MAX] = <i>Maximum Rated Current</i> (11.060) and is dependent on the drive rating. This is the Normal Duty rating of the drive.</p> <p>$VM_RATED_CURRENT [MIN] = 0.00$</p>	

VM_REGEN_REACTIVE		Range applied to the reactive current reference in Regen mode
Units	%	
Range of [MIN]	-1000.0 to 0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	<p>$VM_REGEN_REACTIVE[MAX] = ?(VM_MOTOR1_CURRENT_LIMIT2 - ILimit2)$</p> <p>where</p> <p>ILimit gives the highest level of the active current reference that can occur. This value is defined by the current limit values. If the current limits are all set to their maximum values (i.e. VM_MOTOR1_CURRENT_LIMIT) then there is no current capability left for the reactive current. However, if the current limits are reduced the resulting headroom can be used for the reactive current. ILimit is defined by a combination of all the current limits excluding any reduction of the current limit due to the motor thermal model.</p> <p>$VM_REGEN_REACTIVE[MIN] = - VM_REGEN_REACTIVE[MAX]$</p>	

VM_SPEED		Range applied to parameters showing speed
Units	Open-loop, RFC-A, RFC-S: rpm or mm/s	
Range of [MIN]	Open-loop, RFC-A, RFC-S: -33000.0 to 0.0	
Range of [MAX]	Open-loop, RFC-A, RFC-S: 0.0 to 33000.0	
Definition	<p>This variable minimum/maximum defines the range of speed monitoring parameters. To allow headroom for overshoot the range is set to twice the range of the speed references.</p> <p>$VM_SPEED[MAX] = 2 \times VM_SPEED_FREQ_REF[MAX]$</p> <p>$VM_SPEED[MIN] = 2 \times VM_SPEED_FREQ_REF[MIN]$</p>	

VM_SPEED_FREQ_REF		Range applied to the frequency or speed reference parameters
Units	Open-loop: Hz RFC-A, RFC-S: rpm or mm/s	
Range of [MIN]	Open-loop: -550.0 to 0.0 RFC-A, RFC-S: -33000.0 to 0.0	
Range of [MAX]	Open-loop: 0.0 to 550.0 RFC-A, RFC-S: 0.0 to 33000.0	
Definition	<p>If Pr 01.008 = 0: $VM_SPEED_FREQ_REF[MAX] = Pr\ 01.006$</p> <p>If Pr 01.008 = 1: $VM_SPEED_FREQ_REF[MAX] = Pr\ 01.006$ or $Pr\ 01.007$, whichever is larger.</p> <p>If the second motor map is selected (Pr 11.045 = 1) Pr 21.001 is used instead of Pr 01.006 and Pr 21.002 instead of Pr 01.007.</p> <p>$VM_SPEED_FREQ_REF[MIN] = -VM_SPEED_FREQ_REF[MAX]$.</p>	

VM_SPEED_FREQ_REF_UNIPOLAR		Unipolar version of VM_SPEED_FREQ_REF
Units	Open-loop: Hz RFC-A, RFC-S: rpm or mm/s	
Range of [MIN]	Open-loop: 0.0 RFC-A, RFC-S: 0.0	
Range of [MAX]	Open-loop: 0.0 to 550.0 RFC-A, RFC-S: 0.0 to 33000.0	
Definition	VM_SPEED_FREQ_REF_UNIPOLAR[MAX] = VM_SPEED_FREQ_REF[MAX] VM_SPEED_FREQ_REF_UNIPOLAR[MIN] = 0.0	

VM_SPEED_FREQ_USER_REFS		Range applied to some Menu 1 reference parameters															
Units	Open-loop: Hz RFC-A, RFC-S: rpm or mm/s																
Range of [MIN]	Open-loop: -550.0 to 550.0 RFC-A, RFC-S: -33000.0 to 33000.0																
Range of [MAX]	Open-loop: 0.0 to 550.0 RFC-A, RFC-S: 0.0 to 33000.0																
Definition	VM_SPEED_FREQ_REF_UNIPOLAR[MAX] = VM_SPEED_FREQ_REF[MAX]																
	<table border="1"> <thead> <tr> <th><i>Negative Reference Clamp Enable (01.008)</i></th> <th><i>Bipolar Reference Enable (01.010)</i></th> <th>VM_SPEED_FREQ_USER_REFS [MIN]</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Pr 01.007</td> </tr> <tr> <td>0</td> <td>1</td> <td>-VM_SPEED_FREQ_REF[MAX]</td> </tr> <tr> <td>1</td> <td>0</td> <td>0.0</td> </tr> <tr> <td>1</td> <td>1</td> <td>-VM_SPEED_FREQ_REF[MAX]</td> </tr> </tbody> </table>	<i>Negative Reference Clamp Enable (01.008)</i>	<i>Bipolar Reference Enable (01.010)</i>	VM_SPEED_FREQ_USER_REFS [MIN]	0	0	Pr 01.007	0	1	-VM_SPEED_FREQ_REF[MAX]	1	0	0.0	1	1	-VM_SPEED_FREQ_REF[MAX]	
<i>Negative Reference Clamp Enable (01.008)</i>	<i>Bipolar Reference Enable (01.010)</i>	VM_SPEED_FREQ_USER_REFS [MIN]															
0	0	Pr 01.007															
0	1	-VM_SPEED_FREQ_REF[MAX]															
1	0	0.0															
1	1	-VM_SPEED_FREQ_REF[MAX]															
	If the second motor map is selected (Pr 11.045 = 1) Pr 21.002 is used instead of Pr 01.007.																

VM_STD_UNDER_VOLTS		Range applied the standard under-voltage threshold
Units	V	
Range of [MIN]	0 to 1150	
Range of [MAX]	0 to 1150	
Definition	VM_STD_UNDER_VOLTS[MAX] = VM_DC_VOLTAGE_SET / 1.1 VM_STD_UNDER_VOLTS[MIN] is voltage rating dependent. See Table 11-4	

VM_SUPPLY_LOSS_LEVEL		Range applied to the supply loss threshold
Units	V	
Range of [MIN]	0 to 1150	
Range of [MAX]	0 to 1150	
Definition	VM_SUPPLY_LOSS_LEVEL[MAX] = VM_DC_VOLTAGE_SET[MAX] VM_SUPPLY_LOSS_LEVEL[MIN] is drive voltage rating dependent. See Table 11-4	

VM_SWITCHING_FREQUENCY		Range applied the switching frequency parameters
Units		
Range of [MIN]	0	
Range of [MAX]	6	
Definition	VM_SWITCHING_FREQUENCY[MAX] = Power stage dependent VM_SWITCHING_FREQUENCY[MIN] = 0	

VM_TORQUE_CURRENT		Range applied to torque and torque producing current parameters
Units	%	
Range of [MIN]	-1000.0 to 0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	Select Motor 2 Parameters (11.045)	
	0	VM_TORQUE_CURRENT [MAX] VM_MOTOR1_CURRENT_LIMIT[MAX]
	1	VM_MOTOR2_CURRENT_LIMIT[MAX]
VM_TORQUE_CURRENT[MIN] = -VM_TORQUE_CURRENT[MAX]		

VM_TORQUE_CURRENT_UNIPOLAR		Unipolar version of VM_TORQUE_CURRENT
Units	%	
Range of [MIN]	0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	VM_TORQUE_CURRENT_UNIPOLAR[MAX] = VM_TORQUE_CURRENT[MAX] VM_TORQUE_CURRENT_UNIPOLAR[MIN] = 0.0	

VM_USER_CURRENT		Range applied to torque reference and percentage load parameters with one decimal place
Units	%	
Range of [MIN]	-1000.0 to 0.0	
Range of [MAX]	0.0 to 1000.0	
Definition	VM_USER_CURRENT[MAX] = <i>User Current Maximum Scaling</i> (04.024) VM_USER_CURRENT[MIN] = -VM_USER_CURRENT[MAX]	


VM_USER_CURRENT_HIGH_RES		Range applied to torque reference and percentage load parameters with two decimal places
Units	%	
Range of [MIN]	-1000.00 to 0.00	
Range of [MAX]	0.0 to 1000.00	
Definition	VM_USER_CURRENT_HIGH_RES[MAX] = <i>User Current Maximum Scaling</i> (04.024) with an additional decimal place VM_USER_CURRENT_HIGH_RES[MIN] = -VM_USER_CURRENT_HIGH_RES[MAX]	


Table 11-4 Voltage ratings dependant values

Variable min/max	Voltage level (V)			
	200 V	400 V	575 V	690 V
VM_DC_VOLTAGE_SET(MAX)	400	800	955	1150
VM_DC_VOLTAGE(MAX)	415	830	990	1190
VM_AC_VOLTAGE_SET(MAX)	240	480	575	690
VM_AC_VOLTAGE(MAX)	325	650	780	930
VM_STD_UNDER_VOLTS[MIN]	175	330	435	435
VM_SUPPLY_LOSS_LEVEL[MIN]	205	410	540	540
VM_HIGH_DC_VOLTAGE	1500	1500	1500	1500

11.1 Menu 1: Frequency / speed reference

Figure 11-1 Menu 1 logic diagram

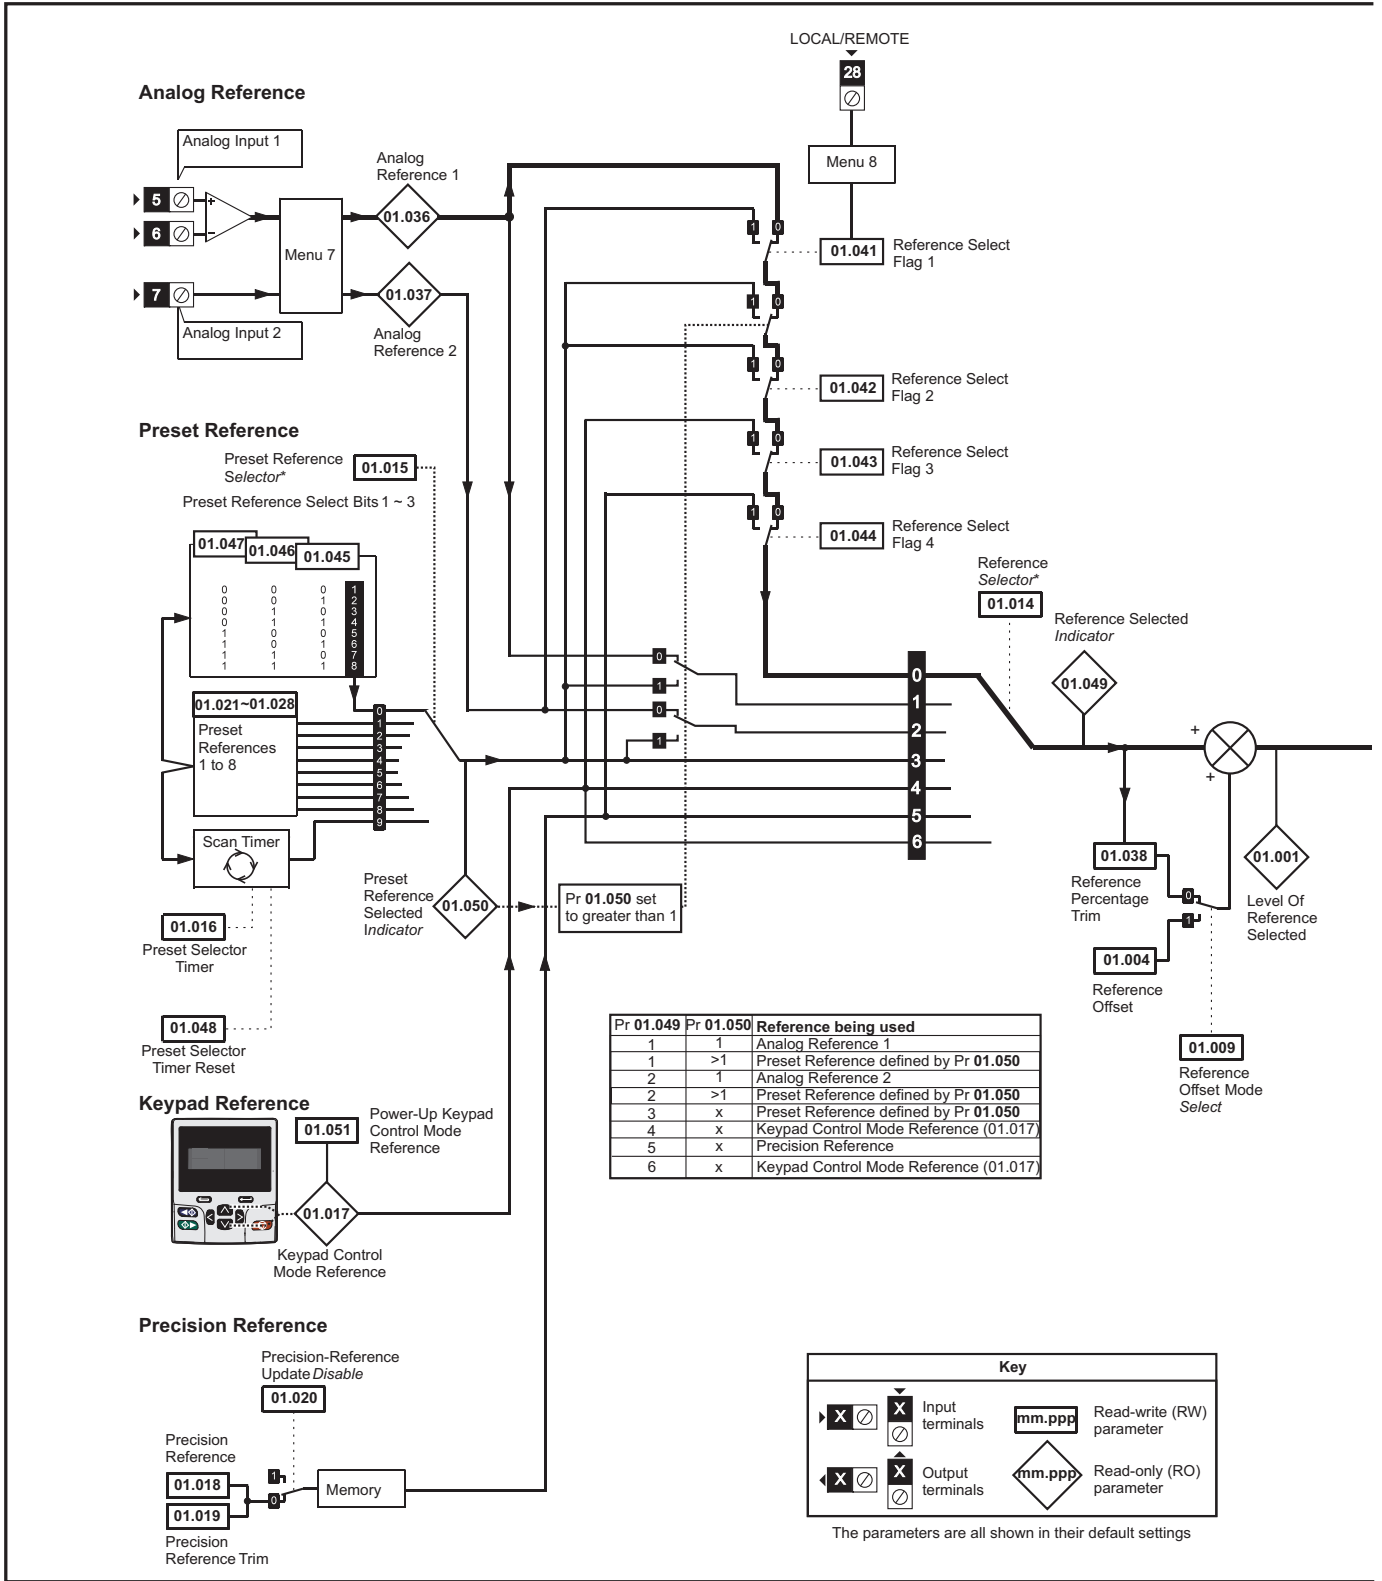

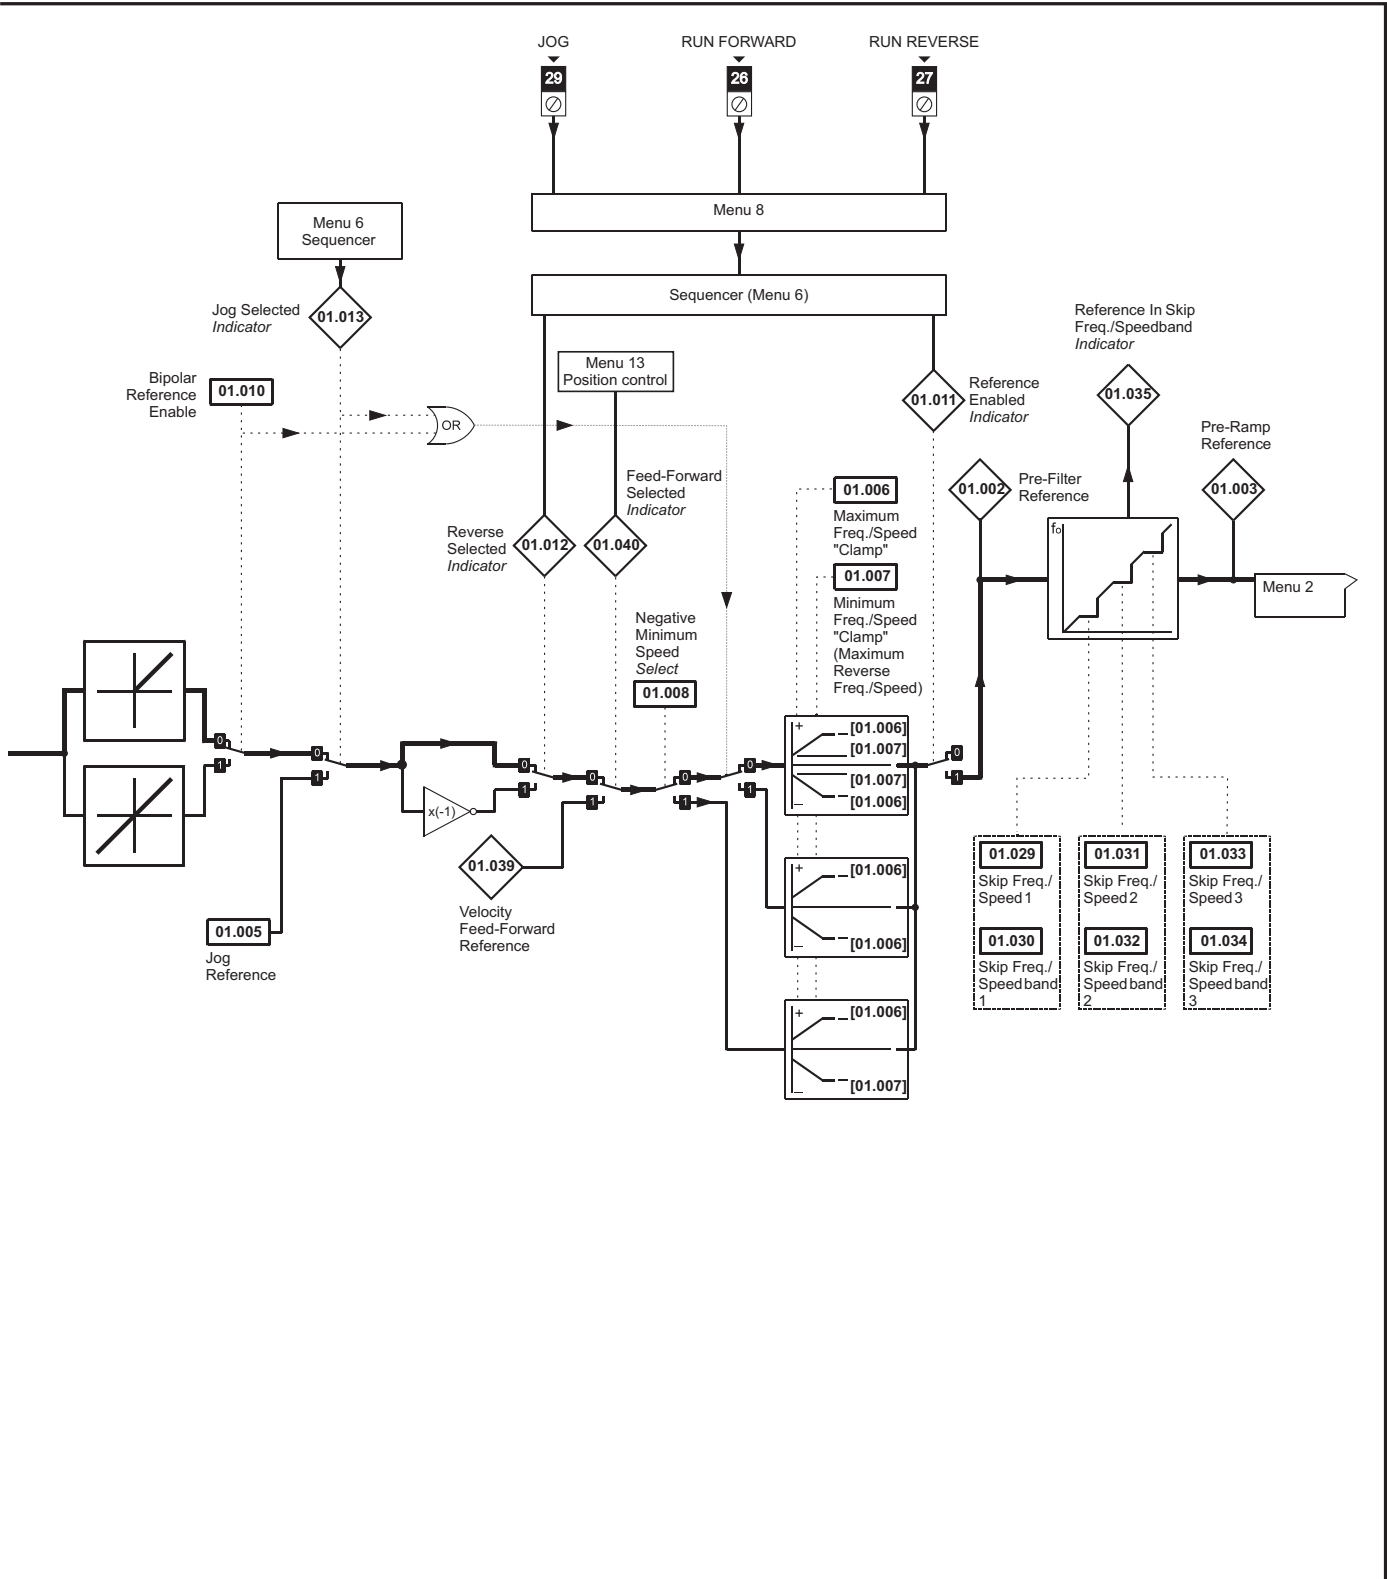


Parameter	Range(⚡)		Default(⇄)			Type								
	OL	RFC-A / S	OL	RFC-A	RFC-S									
01.001	Reference Selected	±VM_SPEED_FREQ_REF Hz	±VM_SPEED_FREQ_REF rpm							RO	Num	ND	NC	PT
01.002	Pre-Skip Filter Reference	±VM_SPEED_FREQ_REF Hz	±VM_SPEED_FREQ_REF rpm							RO	Num	ND	NC	PT
01.003	Pre-Ramp Reference	±VM_SPEED_FREQ_REF Hz	±VM_SPEED_FREQ_REF rpm							RO	Num	ND	NC	PT
01.004	Reference Offset	±VM_SPEED_FREQ_REF Hz	±VM_SPEED_FREQ_REF rpm							RW	Num			US
01.005	Jog Reference	0.0 - 400.0 Hz	0.0 - 4000.0 rpm				0.0			RW	Num			US
01.006	Maximum Reference Clamp	±VM_POSITIVE_REF_CLAMP1 Hz	±VM_POSITIVE_REF_CLAMP1 rpm	50Hz: 50.0 60Hz: 60.0			50Hz: 1500.0 60Hz: 1800.0			RW	Num			US
01.007	Minimum Reference Clamp	±VM_NEGATIVE_REF_CLAMP1	±VM_NEGATIVE_REF_CLAMP1				0.0			RW	Num			US
01.008	Negative Reference Clamp	Off (0) or On (1)					Off (0)			RW	Bit			US
01.009	Reference Offset Select	Off (0) or On (1)					Off (0)			RW	Bit			US
01.010	Bipolar Reference Enable	Off (0) or On (1)					Off (0)			RW	Bit			US
01.011	Reference On	Off (0) or On (1)								RO	Bit	ND	NC	PT
01.012	Reverse Select	Off (0) or On (1)								RO	Bit	ND	NC	PT
01.013	Jog Select	Off (0) or On (1)								RO	Bit	ND	NC	PT
01.014	Reference Selector	A1 A2 (0), A1 Preset (1), A2 Preset (2) Preset (3), Keypad (4), Precision (5) Keypad Ref (6)					A1 A2 (0)			RW	Txt	ND		US
01.015	Preset Selector	0 to 9					0			RW	Num			US
01.016	Preset Selector Time	0.0 to 400.0 s					10.0 s			RW	Num			US
01.017	Keypad Control Mode Reference	±VM_SPEED_FREQ_USER_REFS					0.0			RO	Num		NC	PT
01.018	Precision Reference Coarse	±VM_SPEED_FREQ_REFS					0.0			RW	Num			US
01.019	Precision Reference Fine	0.000 to 0.099 Hz	0.000 to 0.099 rpm	0.000 Hz			0.000 rpm			RW	Num			us
01.020	Precision Reference Update Disable	Off (0) or On (1)					Off (0)			RW	Bit		NC	
01.021	Preset Reference 1	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.022	Preset Reference 2	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.023	Preset Reference 3	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.024	Preset Reference 4	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.025	Preset Reference 5	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.026	Preset Reference 6	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.027	Preset Reference 7	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.028	Preset Reference 8	±VM_SPEED_FREQ_REF					0.0			RW	Num			US
01.029	Skip Reference 1	0.0 to 550.0 Hz	0 to 33,000 rpm	0.0			0			RW	Num			US
01.030	Skip Reference Band 1	0.0 to 25.0 Hz	0 to 250 rpm	0.0			0			RW	Num			US
01.031	Skip Reference 2	0.0 to 550.0 Hz	0 to 33,000 rpm	0.0			0			RW	Num			US
01.032	Skip Reference Band 2	0.0 to 25.0 Hz	0 to 250 rpm	0.0			0			RW	Num			US
01.033	Skip Reference 3	0.0 to 550.0 Hz	0 to 33,000 rpm	0.0			0			RW	Num			US
01.034	Skip Reference Band 3	0.0 to 25.0 Hz	0 to 250 rpm	0.0			0			RW	Num			US
01.035	Reference In Rejection Zone	Off (0) or On (1)								RO	Bit	ND	NC	PT
01.036	Analog Reference 1	±VM_SPEED_FREQ_USER_REFS Hz	±VM_SPEED_FREQ_USER_REFS rpm				0.0			RO	Num		NC	
01.037	Analog Reference 2	±VM_SPEED_FREQ_USER_REFS Hz	±VM_SPEED_FREQ_USER_REFS rpm				0.0			RO	Num		NC	
01.038	Percentage Trim	±100.00 %					0.00 %			RW	Num		NC	
01.039	Speed Feed-forwards	±VM_SPEED_FREQ_REF								RO	Num	ND	NC	PT
01.040	Speed Feed-forwards Select	Off (0) or On (1)								RO	Bit	ND	NC	PT
01.041	Reference Select Flag 1	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.042	Reference Select Flag 2	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.043	Reference Select Flag 3	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.044	Reference Select Flag 4	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.045	Preset Select Flag 1	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.046	Preset Select Flag 2	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.047	Preset Select Flag 3	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.048	Preset Selector Timer Reset	Off (0) or On (1)					Off (0)			RW	Bit	ND	NC	PT
01.049	Reference Selected Indicator	1 to 6								RO	Num	ND	NC	PT
01.050	Preset Selected Indicator	1 to 8								RO	Num	ND	NC	PT
01.051	Power-up Keypad Control Mode Reference	Reset (0), Last (1), Preset (2)					Reset (0)			RW	Txt			US
01.057	Force Reference Direction	None (0), Forward (1), Reverse (2)					None (0)			RW	Num			


RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card Operation	Onboard PLC	Advanced parameters	Technical data	Diagnostics	UL listing information
--------------------	---------------------	-------------------------	-------------------------	-----------------	------------------	-------------------	--------------	-------------------------	-------------	----------------------------	----------------	-------------	------------------------

11.2 Menu 2: Ramps

Figure 11-2 Menu 2 logic diagram

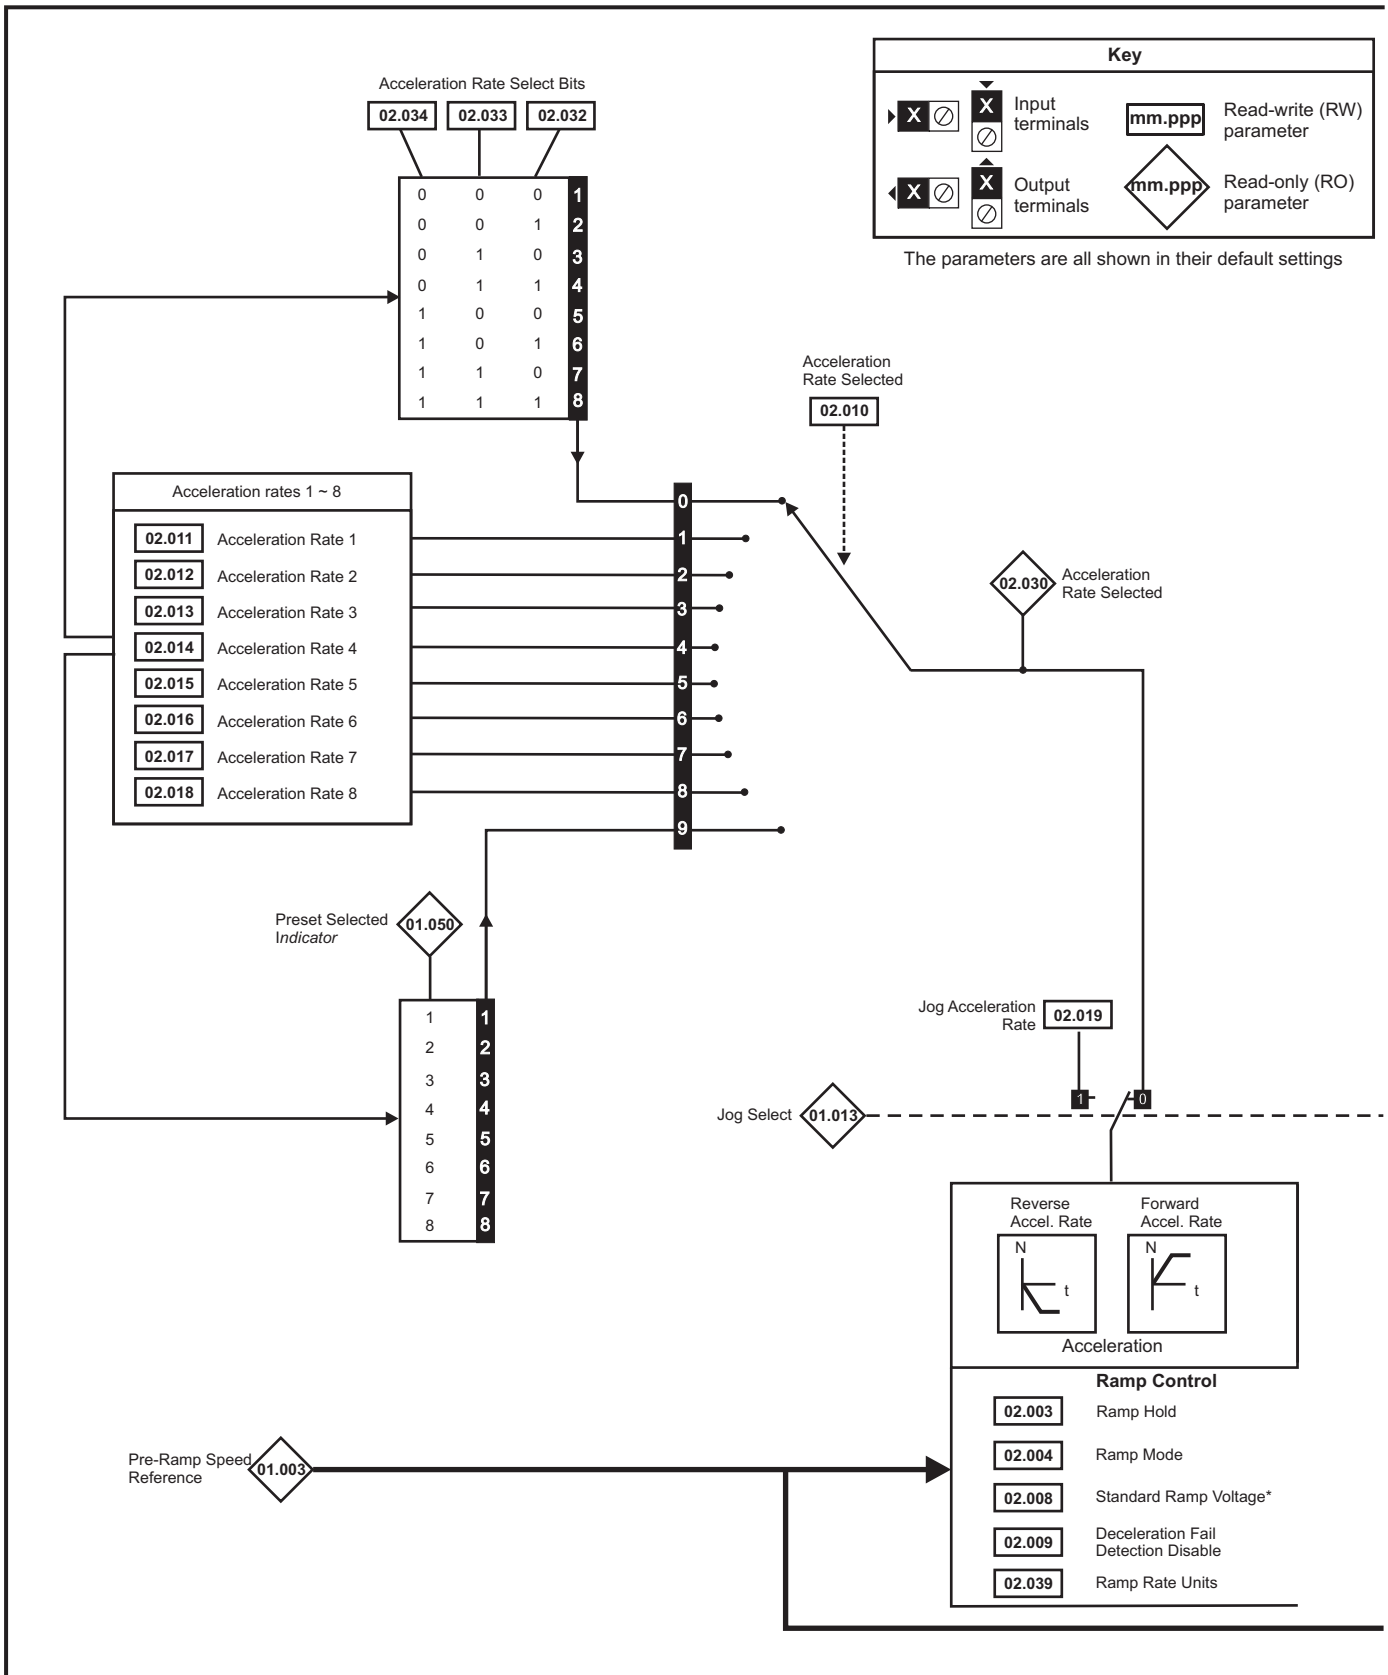

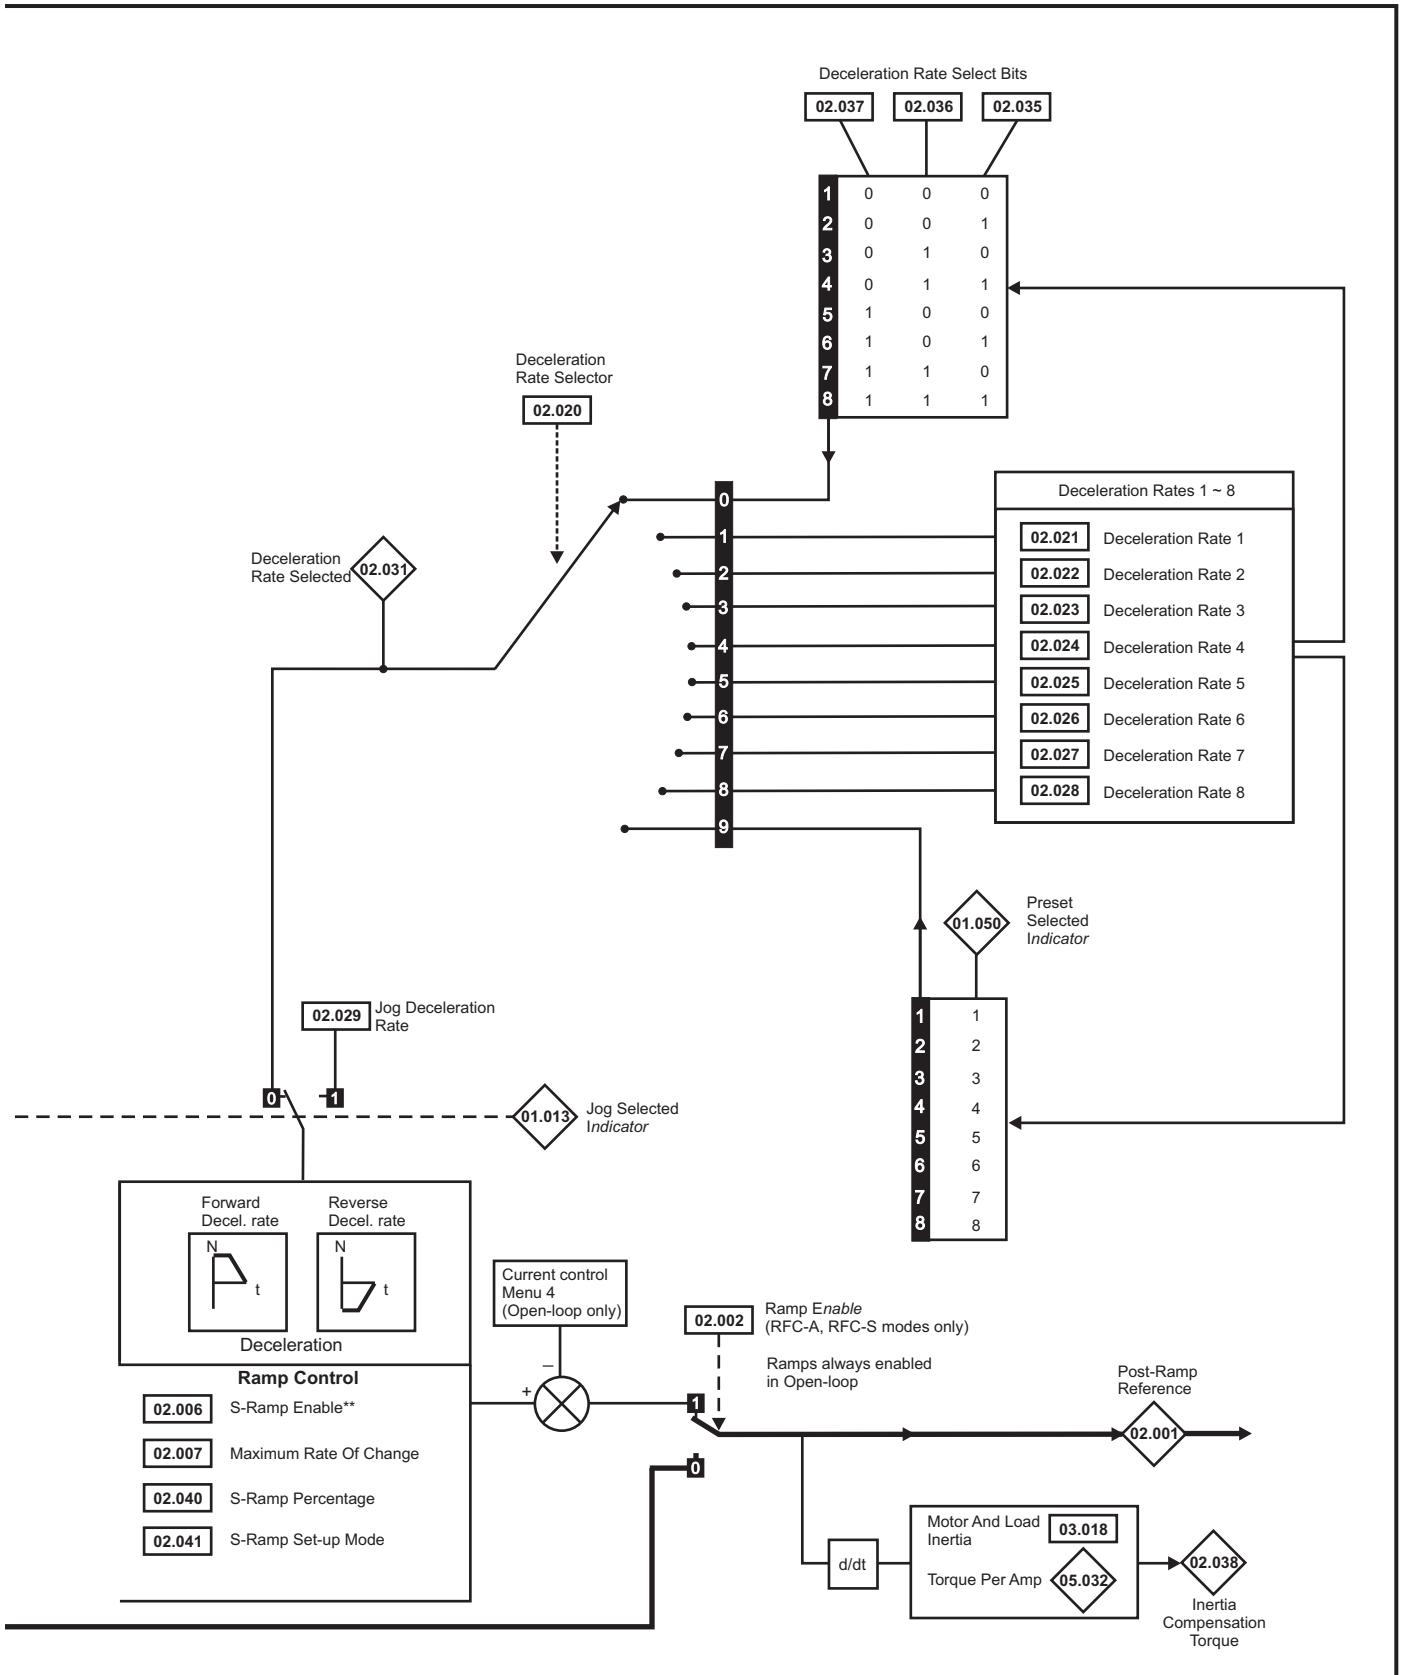

Parameter	Range(↕)		Default(⇨)			Type				
	OL	RFC-A / S	OL	RFC-A	RFC-S	RO	Num	ND	NC	PT
02.001 Post Ramp Reference	±VM_SPEED_FREQ_REF Hz	±VM_SPEED_FREQ_REF rpm				RO	Num	ND	NC	PT
02.002 Ramp Enable		Off (0) or On (1)		On (1)		RW	Bit			US
02.003 Ramp Hold	Off (0) or On (1)		Off (0)			RW	Bit			US
02.004 Ramp Mode	Fast (0), Standard (1), Std boost (2)	Fast (0), Standard (1)	Standard (1)			RW	Txt			US
02.005 Disable Ramp Output		Off (0) or On (1)		Off (0)		RW	Bit			US
02.006 S Ramp Enable	Off (0) or On (1)		Off (0)			RW	Bit			US
02.007 Maximum Rate Of Change Of Acceleration	0.0 to 300.0 s ² /100 Hz	0.000 to 100.000 s ² /1000 rpm	3.1	1.500		RW	Num			US
02.008 Standard Ramp Voltage	±VM_DC_VOLTAGE_SET V		200 V drive: 375 V 400 V drive 50 Hz: 750 V 400 V drive 60 Hz: 775 V 575 V drive: 895 V 690 V: 1075 V			RW	Num		RA	US
02.009 Deceleration Fail Detection Disable	Off (0) or On (1)	Off (0) or On (1)	Off (0)			RW	Bit			US
02.010 Acceleration Rate Selector	0 to 9	0 to 9	0			RW	Num			US
02.011 Acceleration Rate 1	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.012 Acceleration Rate 2	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.013 Acceleration Rate 3	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.014 Acceleration Rate 4	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.015 Acceleration Rate 5	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.016 Acceleration Rate 6	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.017 Acceleration Rate 7	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.018 Acceleration Rate 8	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	5.0 s	2.000 s		RW	Num			US
02.019 Jog Acceleration Rate	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	0.2 s	0.000 s		RW	Num			US
02.020 Deceleration Rate Selector	0 to 9		0			RW	Num			US
02.021 Deceleration Rate 1	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.022 Deceleration Rate 2	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.023 Deceleration Rate 3	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.024 Deceleration Rate 4	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.025 Deceleration Rate 5	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.026 Deceleration Rate 6	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.027 Deceleration Rate 7	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.028 Deceleration Rate 8	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	10.0 s	2.000 s		RW	Num			US
02.029 Jog Deceleration Rate	±VM_ACCEL_RATE s/100 Hz	±VM_ACCEL_RATE s/1000 rpm	0.2 s	0.000 s		RW	Num			US
02.030 Acceleration Rate Selected	0 to 8					RO	Num	ND	NC	PT
02.031 Deceleration Rate Selected	0 to 8					RO	Num	ND	NC	PT
02.032 Acceleration Rate Select Bit 0	Off (0) or On (1)		Off (0)			RW	Bit		NC	
02.033 Acceleration Rate Select Bit 1	Off (0) or On (1)		Off (0)			RW	Bit		NC	
02.034 Acceleration Rate Select Bit 2	Off (0) or On (1)		Off (0)			RW	Bit		NC	
02.035 Deceleration Rate Select Bit 0	Off (0) or On (1)		Off (0)			RW	Bit		NC	
02.036 Deceleration Rate Select Bit 1	Off (0) or On (1)		Off (0)			RW	Bit		NC	
02.037 Deceleration Rate Select Bit 2	Off (0) or On (1)		Off (0)			RW	Bit		NC	
02.038 Inertia Compensation Torque		±1000.0 %				RO	Num	ND	NC	PT
02.039 Ramp Rate Units	Off = 100 Hz (0) or On = Maximum frequency (1)	Off = 1000 rpm or 1000 mm/s (0) or On = Maximum speed (1)	Off = 100 Hz (0)	Off = 1000 rpm or 1000 mm/s (0)		RW	Bit			US
02.040 S Ramp Percentage	0.0 to 50.0 %		0.0 %			RW	Num			US
02.041 S Ramp Set-up Mode	Single (0), Percentage (1), Independent (2)		Single (0)			RW	Txt			US
02.042 Maximum Rate Of Change Of Acceleration 1	0.0 to 300.0 s ² /100 Hz	0.000 to 100.000 s ² / 1000 rpm	0.0 s ² /100 Hz	0.000 s ² / 1000 rpm		RW	Num			US
02.043 Maximum Rate Of Change Of Acceleration 2	0.0 to 300.0 s ² /100 Hz	0.000 to 100.000 s ² / 1000 rpm	0.0 s ² /100 Hz	0.000 s ² / 1000 rpm		RW	Num			US
02.044 Maximum Rate Of Change Of Acceleration 3	0.0 to 300.0 s ² /100 Hz	0.000 to 100.000 s ² / 1000 rpm	0.0 s ² /100 Hz	0.000 s ² / 1000 rpm		RW	Num			US
02.045 Maximum Rate Of Change Of Acceleration 4	0.0 to 300.0 s ² /100 Hz	0.000 to 100.000 s ² / 1000 rpm	0.0 s ² /100 Hz	0.000 s ² / 1000 rpm		RW	Num			US
02.050 Timing Options Select		0000 to 1111		0001		RW	Bin			US
02.051 Timing Options Active		0000 to 1111				RO	Bin	ND	NC	PT

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.3 Menu 3: Frequency slaving, speed feedback and speed control

Figure 11-3 Menu 3 Open-loop logic diagram



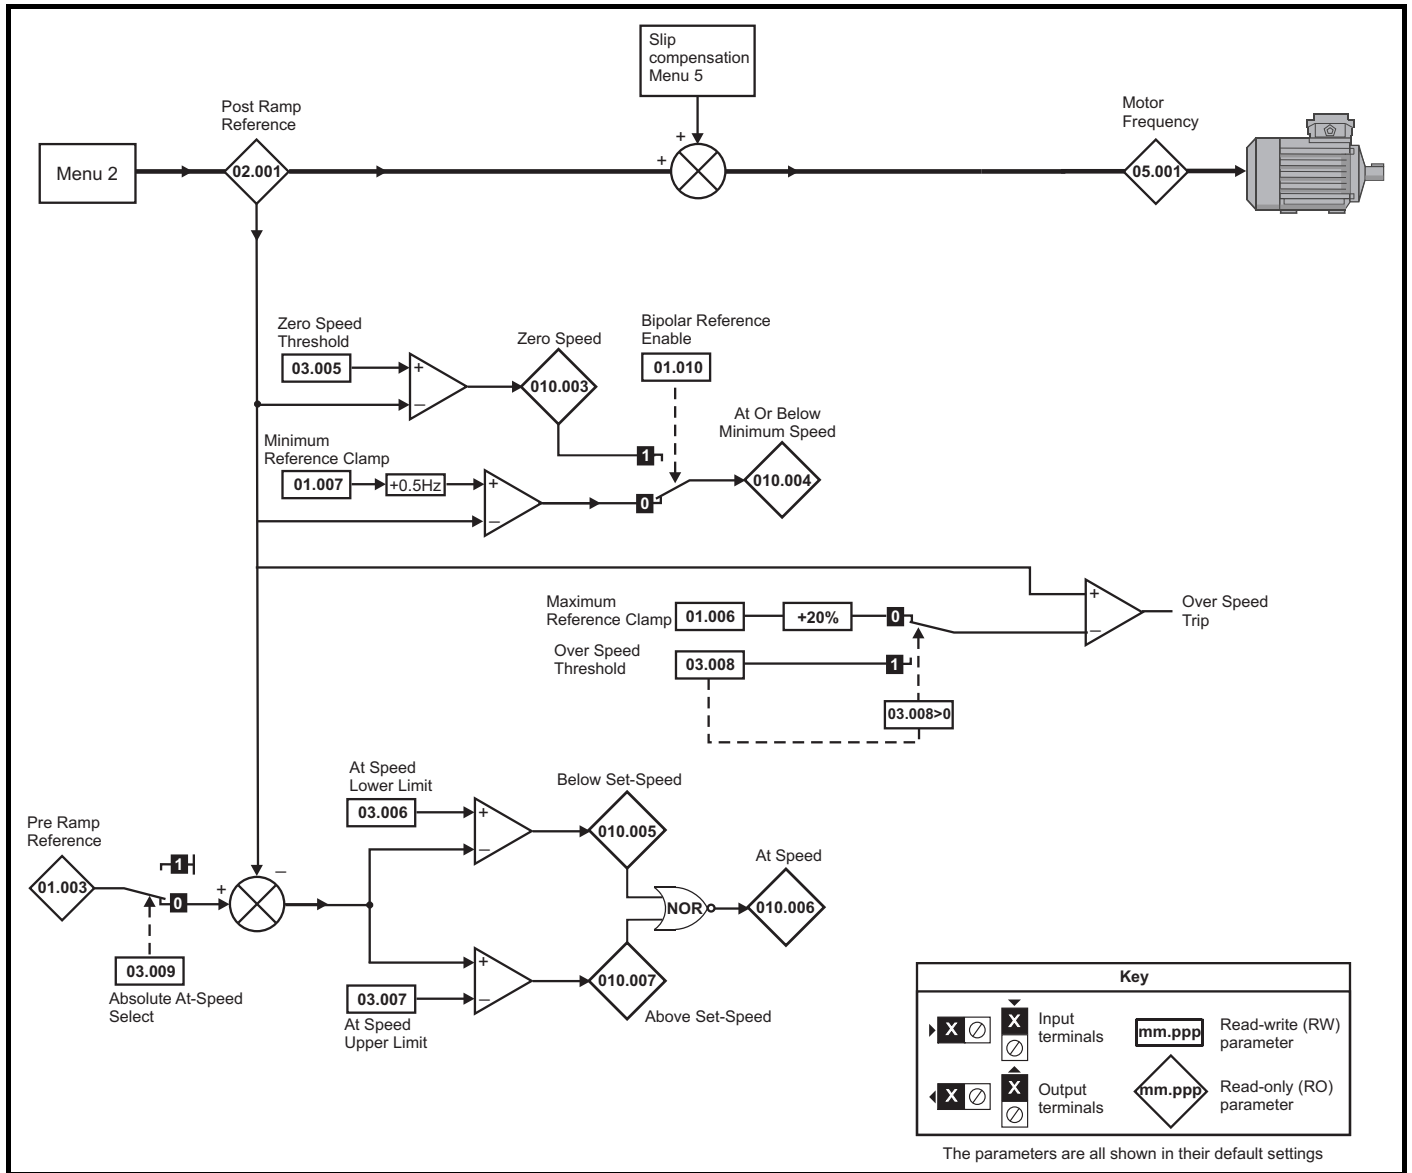


Figure 11-4 Menu 3 RFC-A, RFC-S logic diagram

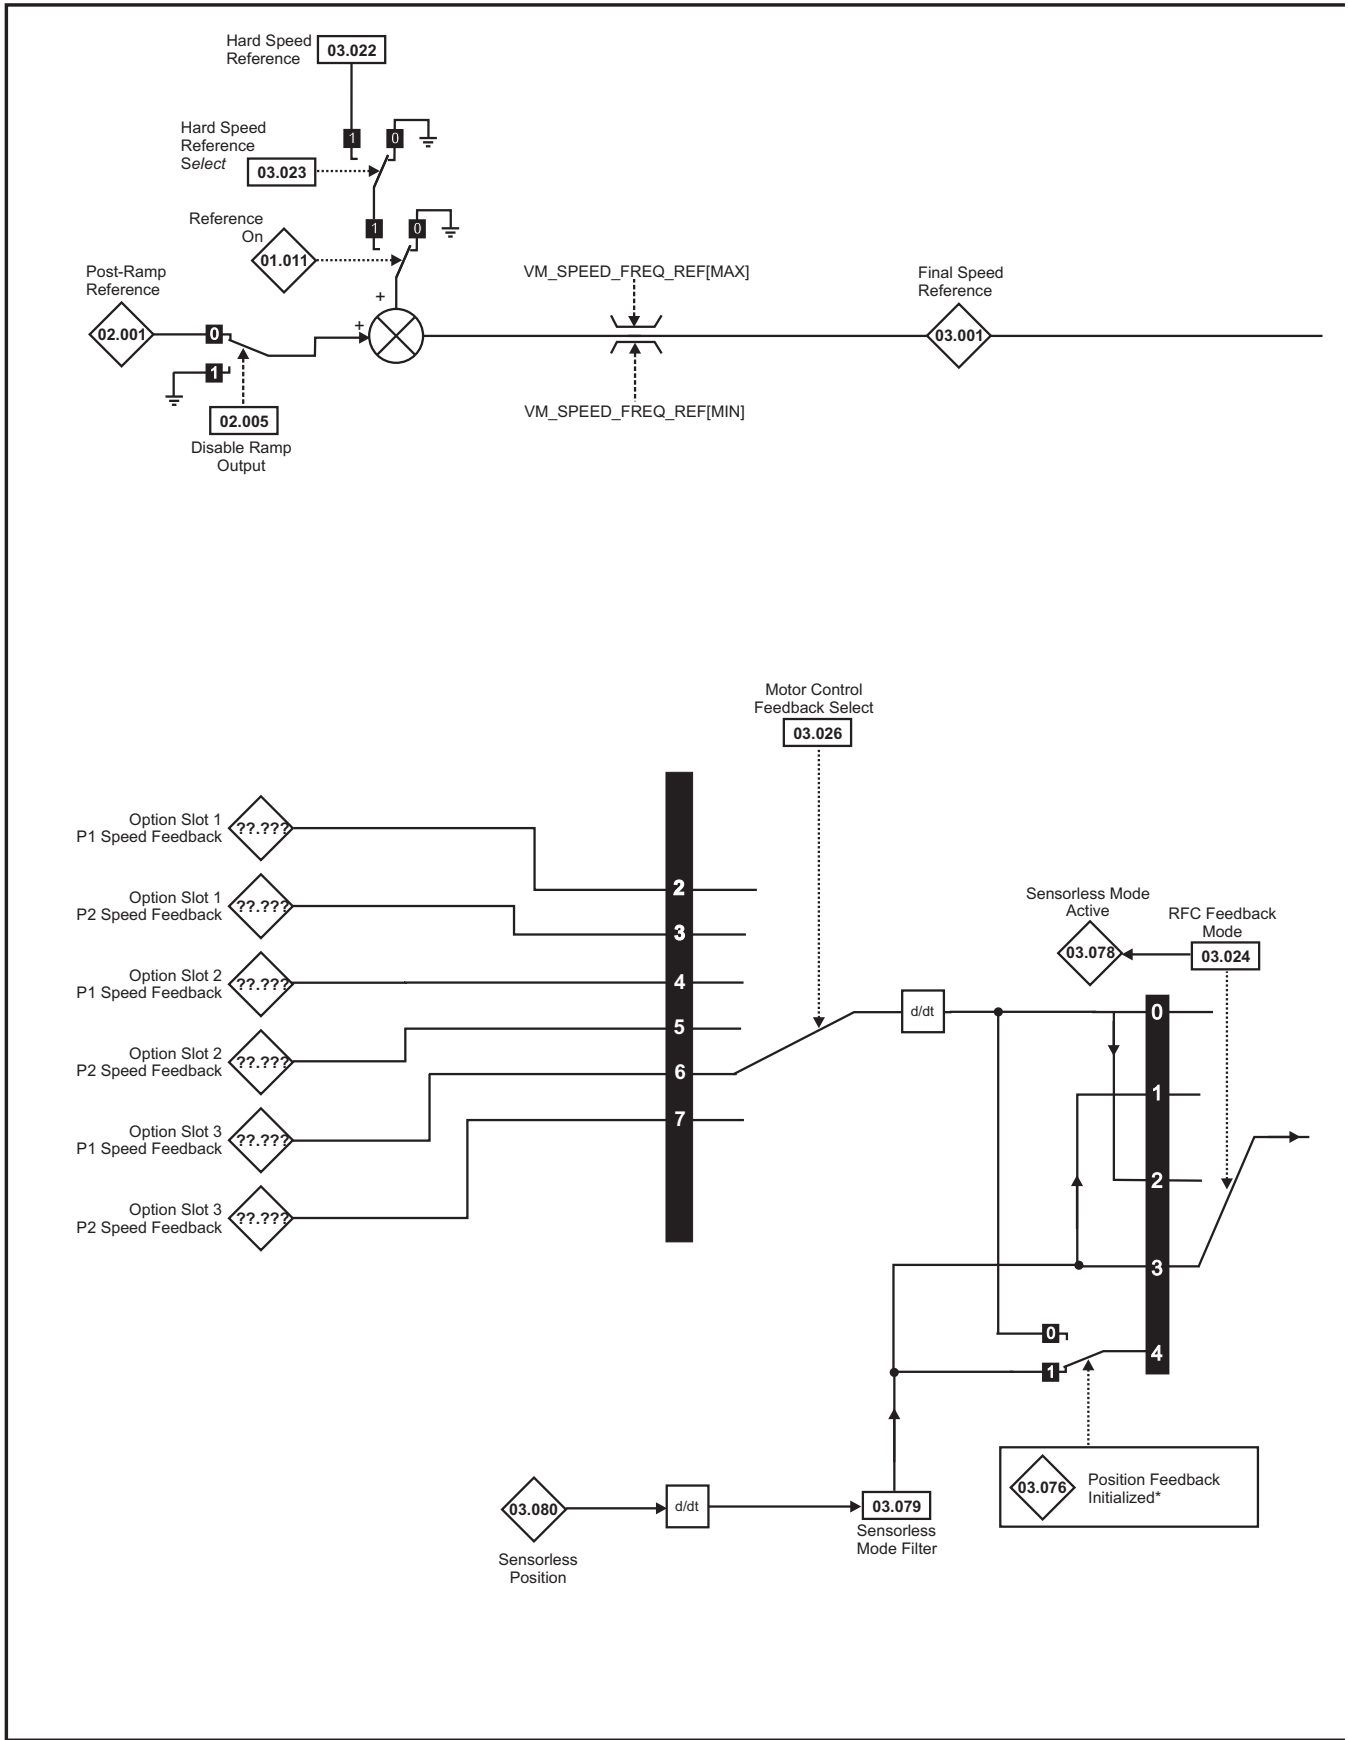

NOTE

* Automatic change over if the relevant 'bit' of *Position Feedback Initialized* (03.076) is 0.

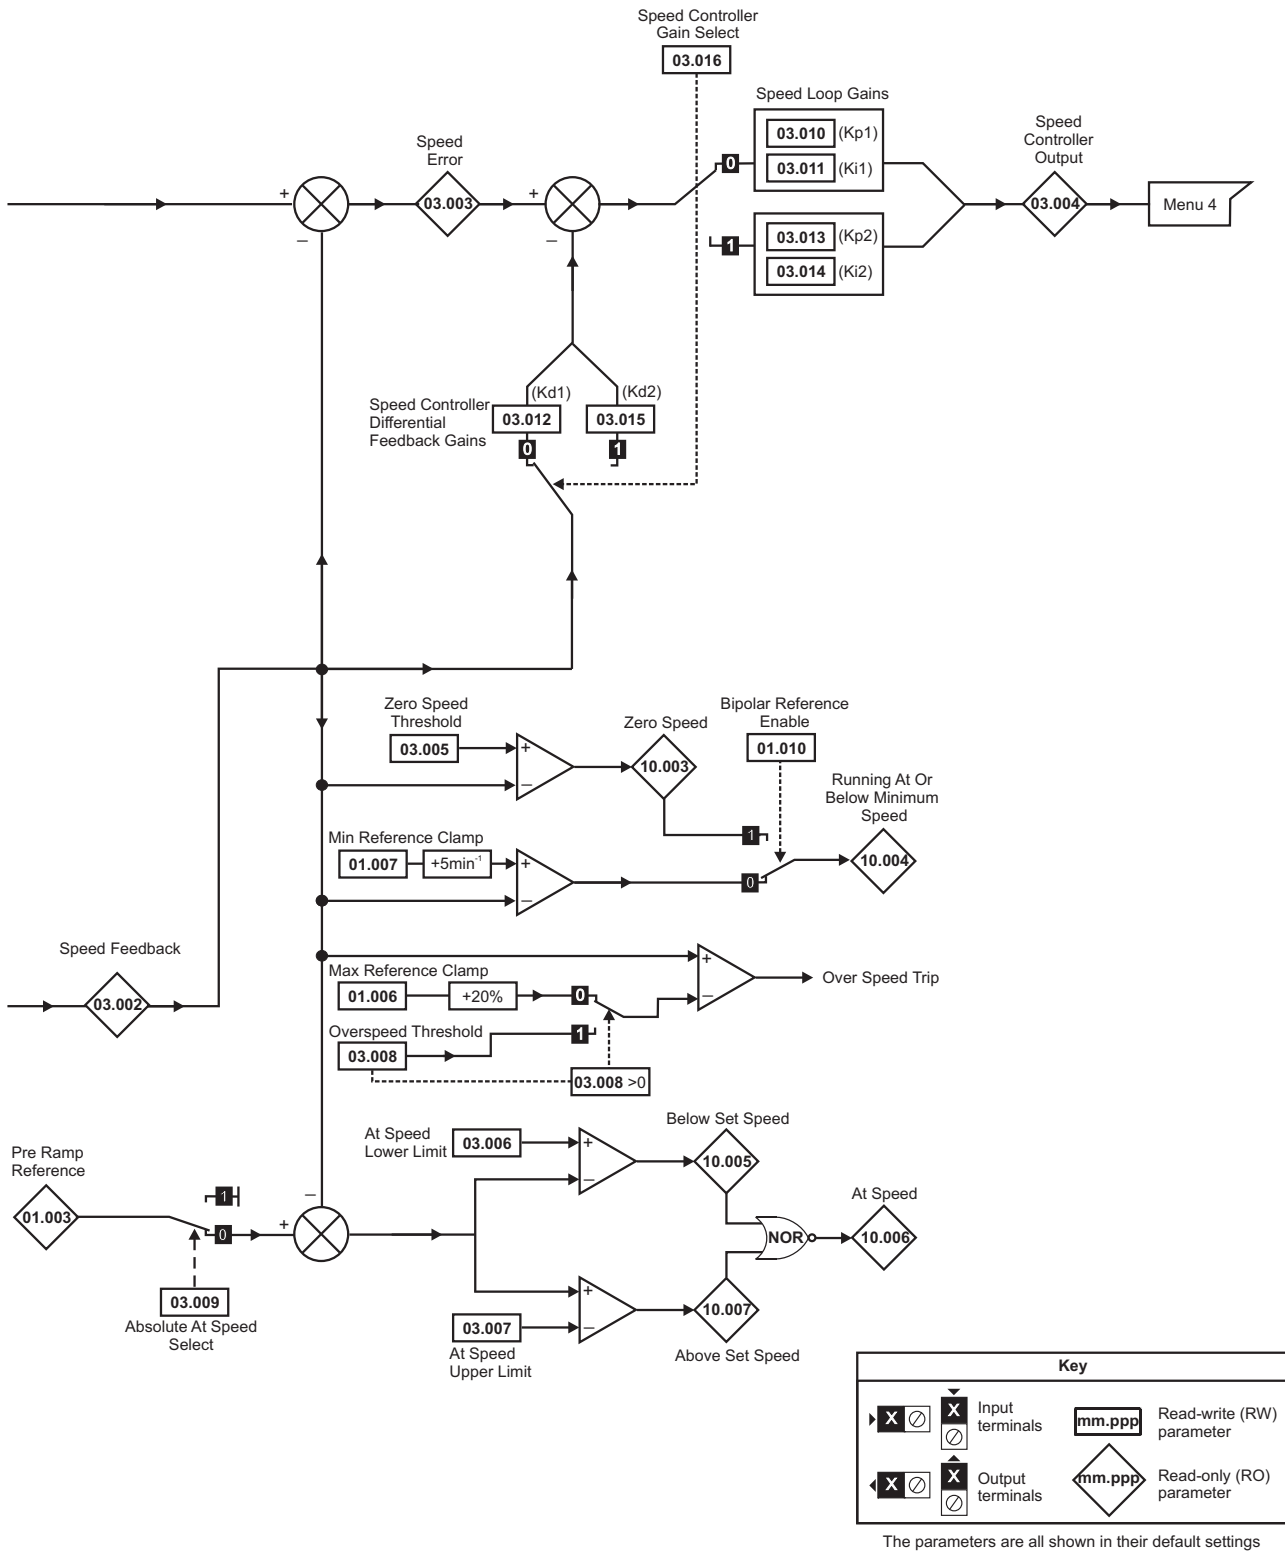

Parameter	Range			Default			Type					
	OL	RFC-A	RFC-S	OL	RFC-A	RFC-S	RO	Num	ND	NC	PT	FI
03.001	Open-loop> Frequency Slaving Demand	±1000.0 Hz					RO	Num	ND	NC	PT	FI
	RFC> Final Speed Reference		±VM_SPEED				RO	Num	ND	NC	PT	FI
03.002	Speed Feedback		±VM_SPEED				RO	Num	ND	NC	PT	FI
03.003	Speed Error		±VM_SPEED				RO	Num	ND	NC	PT	FI
03.004	Speed Controller Output		±VM_TORQUE_CURRENT %				RO	Num	ND	NC	PT	FI
03.005	Zero Speed Threshold	0.0 to 20.0 Hz	0 to 200 rpm	1.0 Hz	5 rpm		RW	Num				US
03.006	At Speed Lower Limit	0.0 to 550.0 Hz	0 to 33000 rpm	1.0 Hz	5 rpm		RW	Num				US
03.007	At Speed Upper Limit	0.0 to 550.0 Hz	0 to 33000 rpm	1.0 Hz	5 rpm		RW	Num				US
03.008	Over Speed Threshold	0.0 to 550.0 Hz	0 to 40000 rpm	0.0 Hz	0 rpm		RW	Num				US
03.009	Absolute At Speed Select		Off (0) or On (1)		Off (0)		RW	Bit				US
03.010	Speed Controller Proportional Gain Kp1		0.0000 to 200.0000 s/rad		0.0300 s/rad		RW	Num				US
03.011	Speed Controller Integral Gain Ki1		0.00 to 655.35 s ² /rad		0.10 s ² /rad		RW	Num				US
03.012	RFC> Speed Controller Differential Feedback Gain Kd1		0.00000 to 0.65535 1/rad		0.00000 1/rad		RW	Num				US
03.013	Speed Controller Proportional Gain Kp2		0.0000 to 200.0000 s/rad		0.0300 s/rad		RW	Num				US
03.014	Speed Controller Integral Gain Ki2		0.00 to 655.35 s ² /rad		0.10 s ² /rad		RW	Num				US
03.015	Speed Controller Differential Feedback Gain Kd2		0.00000 to 0.65535 1/rad		0.00000 1/rad		RW	Num				US
03.016	RFC> Speed Controller Gain Select		Off (0) or On (1)		Off (0)		RW	Bit				US
03.017	Speed Controller Set-up Method		Disabled (0), Bandwidth (1), Comp Angle (2), Kp Gain Times 16 (3), Low Performance (4), Std Performance (5), High Performance (6), First Order (7)		Disabled (0)		RW	Txt				US
03.018	Motor And Load Inertia		0.00000 to 1000.00000 kgm ²		0.00000 kgm ²		RW	Num				US
03.019	Compliance Angle		0.0 to 360.0 °		4.0 °		RW	Num				US
03.020	Bandwidth		5 to 1000 Hz		10 Hz		RW	Num				US
03.021	Damping Factor		0.0 to 10.0		1.0		RW	Num				US
03.022	Hard Speed Reference		±VM_SPEED_ FREQ_REF	±VM_SPEED		0.0	RW	Num				US
03.023	Hard Speed Reference Select		Off (0) or On (1)		Off (0)		RW	Bit				US
03.024	RFC Feedback Mode		Feedback (0), Sensorless (1), Feedback NoMax (2), Sensorless NoMax (3)		Sensorless NoMax (3)		RW	Txt				US
03.026	Motor Control Feedback Select		P1 Slot 1 (2), P2 Slot 1 (3), P1 Slot 2 (4), P2 Slot 2 (5), P1 Slot 3 (6), P2 Slot 3 (7)		P1 Slot 3 (6)		RW	Txt				US
03.075	Initialise Position Feedback		Off (0) or On (1)		Off (0)		RW	Bit		NC		
03.076	Position Feedback Initialized		0000000000 to 1111111111		0000000000		RO	Bin		NC	PT	
03.078	Sensorless Mode Active		Off (0) or On (1)				RO	Bit	ND	NC	PT	
03.079	Sensorless Mode Filter		4 (0), 8 (1), 16 (2), 32 (3), 64 (4) ms		4 (0) ms		RW	Txt				US
03.080	Sensorless Position		-2147483648 to 2147483647				RO	Num	ND	NC	PT	

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.4 Menu 4: Torque and current control

Figure 11-5 Menu 4 Open loop logic diagram

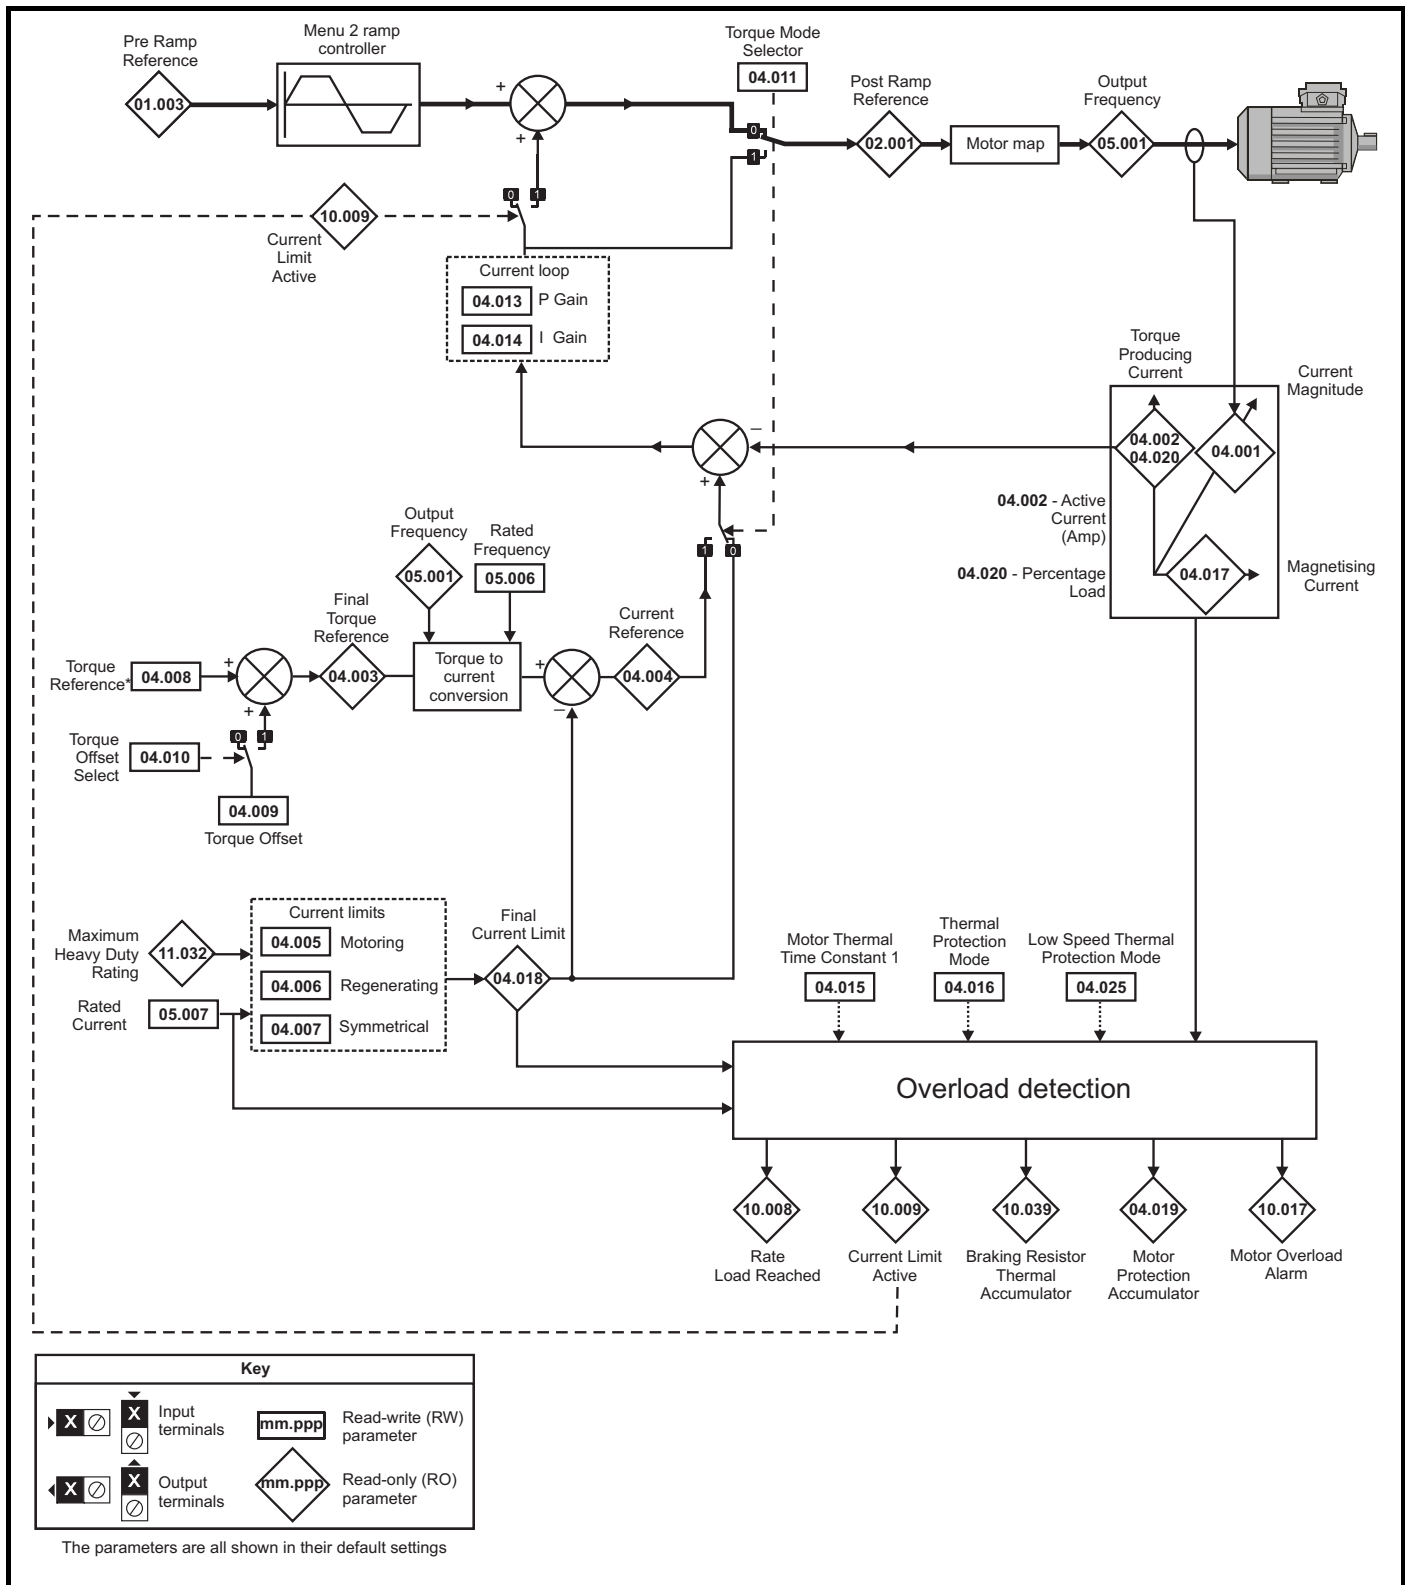


Figure 11-6 Menu 4 RFC-A logic diagram


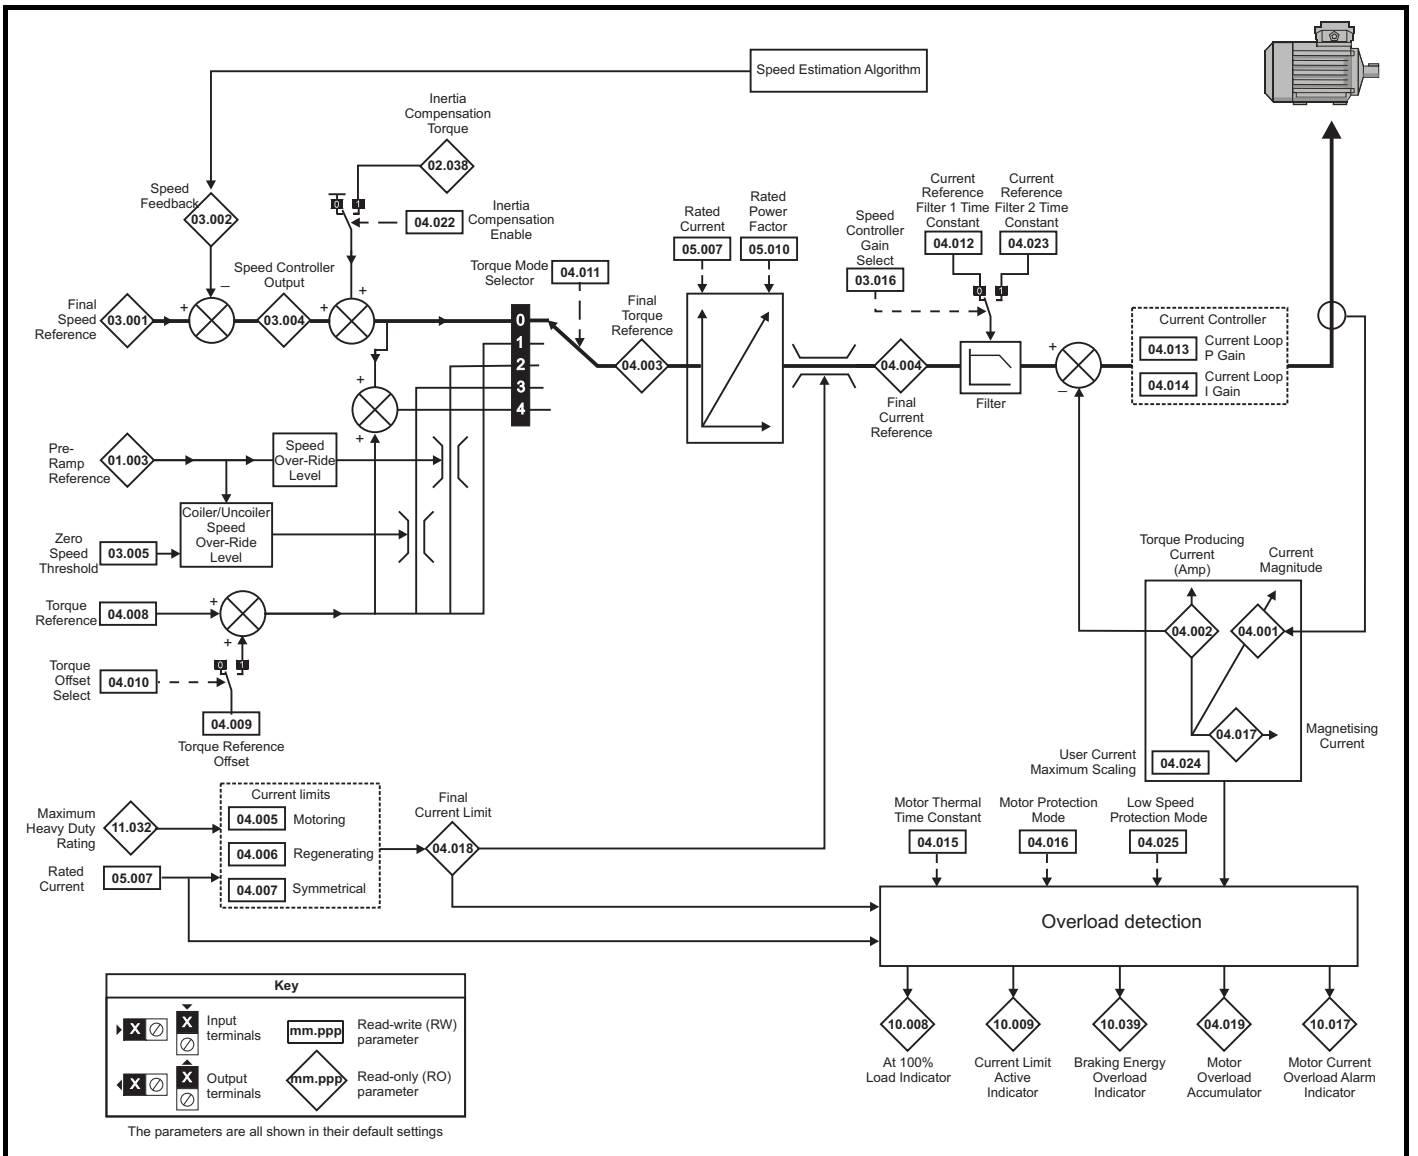


Figure 11-7 Menu 4 RFC-S logic diagram

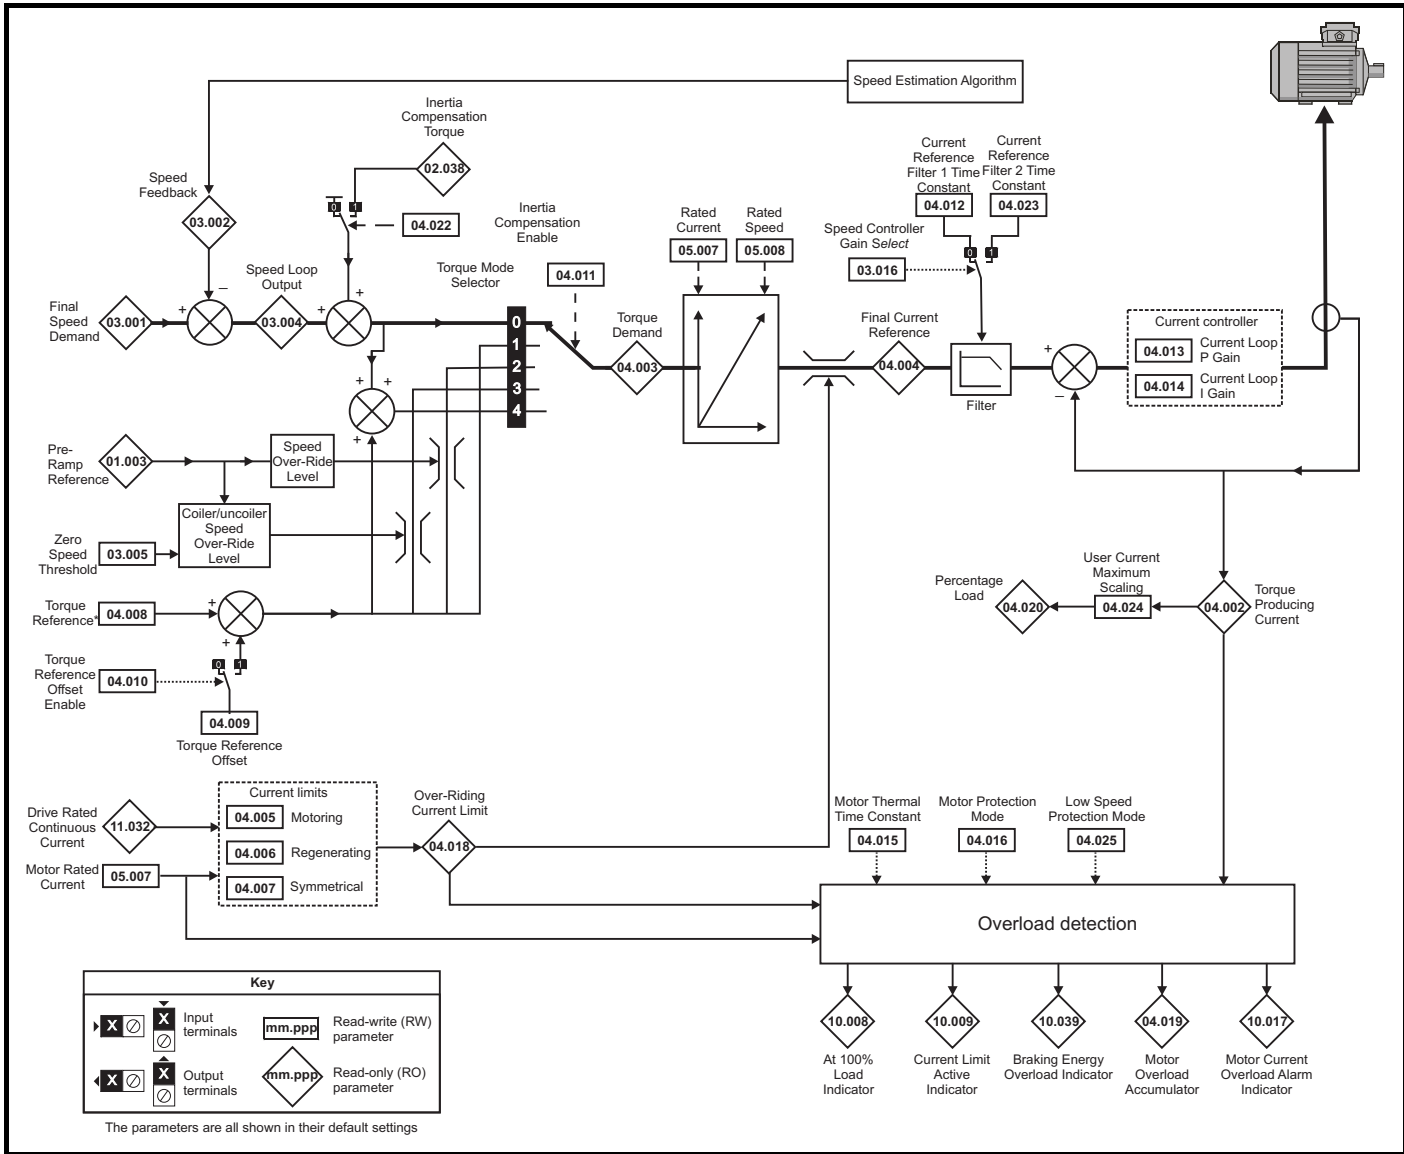

Parameter	Range(⇄)		Default(⇒)			Type					
	OL	RFC-A / S	OL	RFC-A	RFC-S						
04.001	Current Magnitude	±VM_DRIVE_CURRENT_UNIPOLAR				RO	Num	ND	NC	PT	FI
04.002	Torque Producing Current	±VM_DRIVE_CURRENT				RO	Num	ND	NC	PT	FI
04.003	Final Torque Reference	±VM_TORQUE_CURRENT				RO	Num	ND	NC	PT	FI
04.004	Final Current Reference	±VM_TORQUE_CURRENT				RO	Num	ND	NC	PT	FI
04.005	Motoring Current Limit	±VM_MOTOR1_CURRENT_LIMIT		165.0 %	175.0 %	RW	Num		RA		US
04.006	Regenerating Current Limit	±VM_MOTOR1_CURRENT_LIMIT		165.0 %	175.0 %	RW	Num		RA		US
04.007	Symmetrical Current Limit	±VM_MOTOR1_CURRENT_LIMIT		165.0 %	175.0 %	RW	Num		RA		US
04.008	Torque Reference	±VM_USER_CURRENT_HIGH_RES			0.00 %	RW	Num				US
04.009	Torque Offset	±VM_USER_CURRENT			0.0 %	RW	Num				US
04.010	Torque Offset Select	Off (0) or On (1)			Off (0)	RW	Bit				US
04.011	Torque Mode Selector	0 to 1	0 to 5		0	RW	Num				US
04.012	Current Reference Filter 1 Time Constant		0.0 to 25.0 ms		1.0 ms	RW	Num				US
04.013	Current Controller Kp Gain	0 to 30000		20	150	RW	Num				US
04.014	Current Controller Ki Gain	0 to 30000		40	2000	RW	Num				US
04.015	Motor Thermal Time Constant 1	1.0 to 3000.0 s			89.0 s	RW	Num				US
04.016	Thermal Protection Mode	00 to 11			00	RW	Bin				US
04.017	Magnetising Current	±VM_DRIVE_CURRENT				RO	Num	ND	NC	PT	FI
04.018	Final Current Limit	±VM_TORQUE_CURRENT				RO	Num	ND	NC	PT	
04.019	Motor Protection Accumulator	0.0 to 100.0 %				RO	Num	ND	NC	PT	PS
04.020	Percentage Load	±VM_USER_CURRENT				RO	Num	ND	NC	PT	FI
04.021	Current feedback filter disable	Off (0) or On (1)			Off (0)	RW	Bit				US
04.022	Inertia Compensation Enable		Off (0) or On (1)		Off (0)	RW	Bit				US
04.023	Current Reference Filter 2 Time Constant		0.0 to 25.0 ms		1.0 ms	RW	Num				US
04.024	User Current Maximum Scaling	±VM_TORQUE_CURRENT_UNIPOLAR		165.0 %	175.0 %	RW	Num		RA		US
04.025	Low Speed Thermal Protection Mode	0 to 1			0	RW	Num				US
04.026	Percentage Torque	±VM_USER_CURRENT %				RO	Num	ND	NC	PT	FI
04.030	Current Controller Mode		Off (0) or On (1)		Off (0)	RW	Bit				US
04.036	Motor Protection Accumulator Power-up Value	Power down (0), Zero (1), Real time (2)			Power down (0)	RW	Txt				US
04.037	Motor Thermal Time Constant 2	1.0 to 3000.0 s			89.0 s	RW	Num				US
04.038	Motor Thermal Time Constant 2 Scaling	0 to 100 %			0 %	RW	Num				US
04.039	Rated Iron Losses As Percentage Of Losses	0 to 100 %			0 %	RW	Num				US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.5 Menu 5: Motor control

Figure 11-8 Menu 5 Open-loop logic diagram



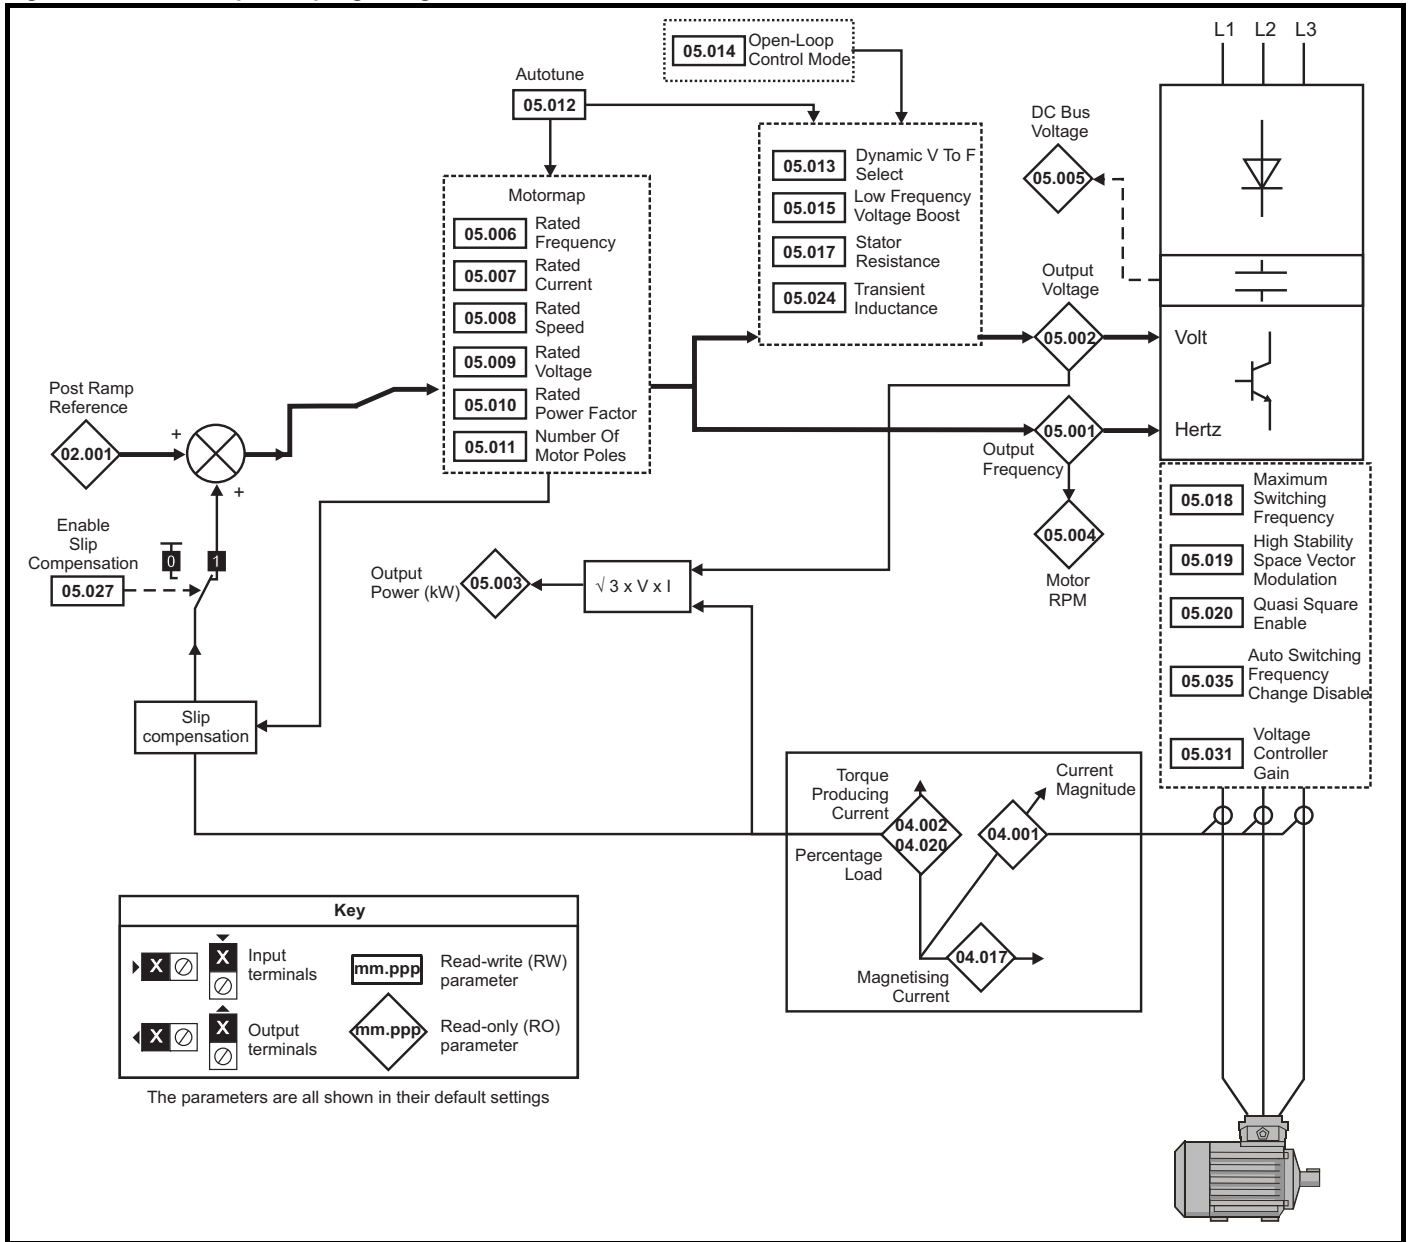


Figure 11-9 Menu 5 RFC-A, RFC-S logic diagram

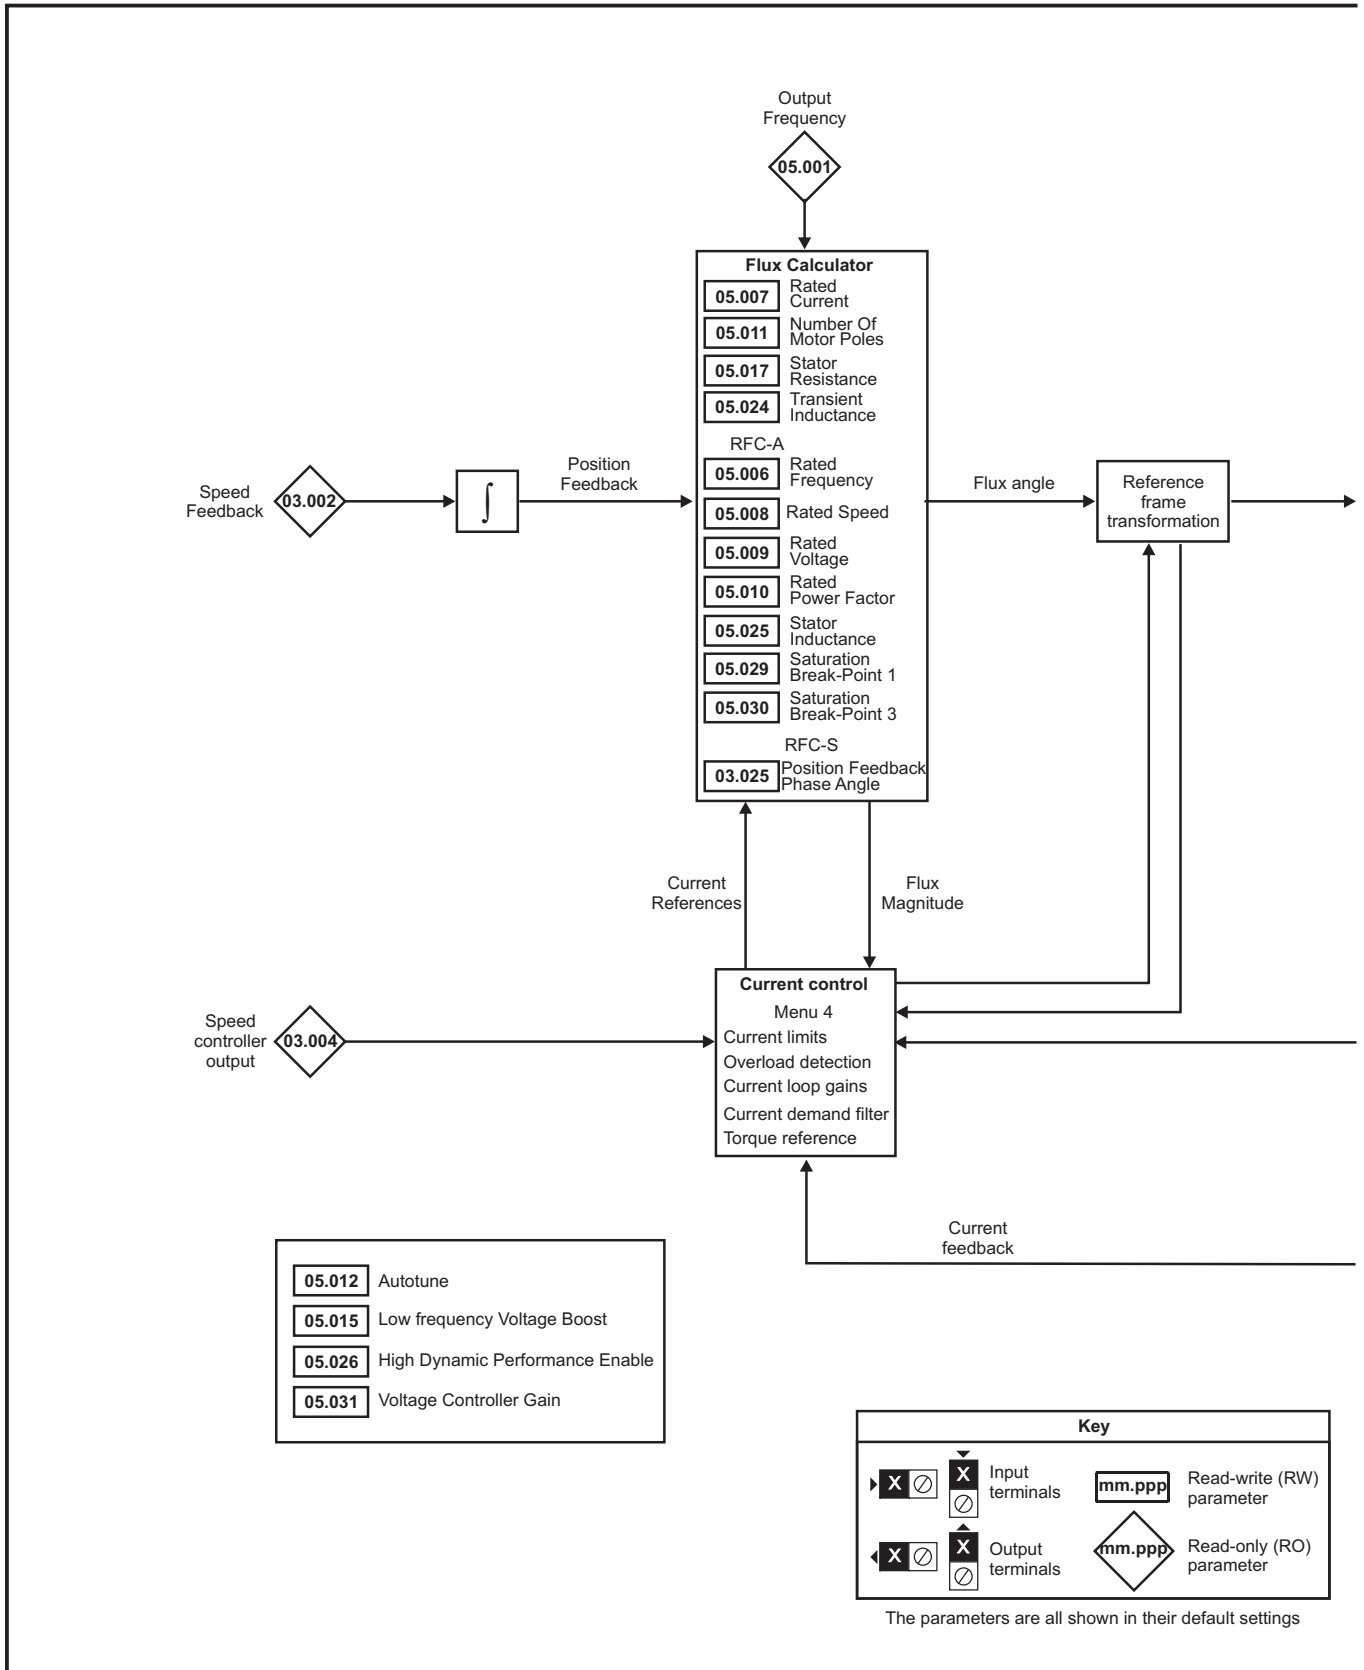

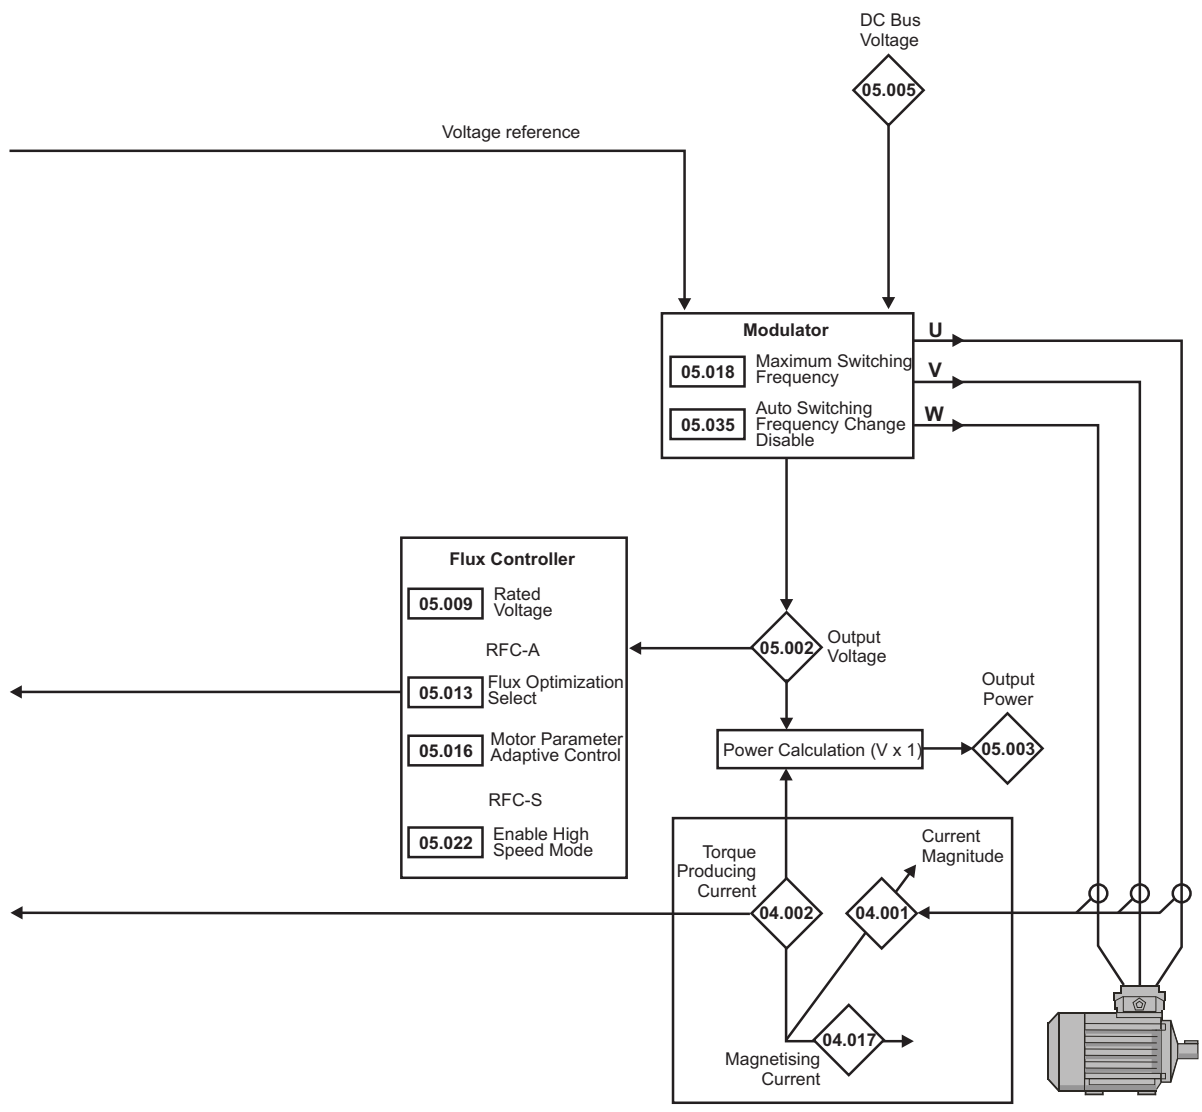

Parameter		Range(±)			Default(⇒)			Type					
		OL	RFC-A	RFC-S	OL	RFC-A	RFC-S						
05.001	Output Frequency	±VM_SPEED_FREQ_REF Hz	±2000.0 Hz					RO	Num	ND	NC	PT	FI
05.002	Output Voltage	±VM_AC_VOLTAGE V						RO	Num	ND	NC	PT	FI
05.003	Output Power	±VM_POWER W						RO	Num	ND	NC	PT	FI
05.004	Motor Rpm	±180000 rpm						RO	Num	ND	NC	PT	FI
05.005	D.C. Bus Voltage	±VM_DC_VOLTAGE V						RO	Num	ND	NC	PT	FI
05.006	Rated Frequency	0.0 to 550.0 Hz			50Hz: 50.0 60Hz: 60.0		RW	Num					US
05.007	Rated Current	±VM_RATED_CURRENT			Maximum Heavy Duty Rating 11.032			RW	Num		RA		US
05.008	Rated Speed	0 to 33000 rpm	0.00 to 33000.00 rpm		Eur - 1500 rpm USA - 1800 rpm	Eur - 1450.00 rpm USA - 1750.00 rpm	3000.00 rpm	RW	Num				US
05.009	Rated Voltage	±VM_AC_VOLTAGE_SET V			200 V drive: 230 V Eur - 400 V drive: 400 V USA - 400 V drive: 460 V 575 V drive: 575 V 690 V drive: 690 V			RW	Num		RA		US
05.010	Rated Power Factor	0.000 to 1.000			0.850		RW	Num		RA			US
05.011	Number Of Motor Poles	Automatic (0) to 480 Poles (240)			Automatic (0)		6 Poles (3)	RW	Txt				US
05.012	Autotune	0 to 2	0 to 3	0 to 4	0			RW	Num		NC		
05.013	Dynamic V To F Select / Flux Optimization Select	Off (0) or On (1)			Off (0)			RW	Bit				US
05.014	Open-loop Control Mode / Action On Enable	Ur S (0), Ur (1), Fixed (2), Ur Auto (3), Ur I (4), Square (5), Current 1P (6)		Disabled (0), Short (1), Short Once (2), Long (3), Long Once (4)	Ur I (4)	Disabled (0)		RW	Txt				US
05.015	Low Frequency Voltage Boost	0.0 to 25.0 %			3.0 %		RW	Num					US
05.016	Motor Parameter Adaptive Control		0 to 2		0		RW	Num					US
05.017	Stator Resistance	0.000000 to 1000.000000 Ω			0.000000 Ω			RW			RA		US
05.018	Maximum Switching Frequency	2 kHz (0), 3 kHz (1), 4 kHz (2), 6 kHz (3), 8 kHz (4), 12 kHz (5), 16 kHz (6)			3 kHz (1)			RW	Txt		RA		US
05.019	High Stability Space Vector Modulation	Off (0) or On (1)			Off (0)		RW	Bit					US
05.020	Quasi-square Enable	Off (0) or On (1)			Off (0)		RW	Bit					US
05.021	Mechanical Load Test Level		0 to 100 %		0 %			RW	Num				US
05.022	Enable High Speed Mode			Limit (-1), Disable (0), Enable (1)	Limit (-1)		RW	Bit					US
05.023	D.c. Bus Voltage High Range	±VM_HIGH_DC_VOLTAGE						RO	Num	ND	NC	PT	FI
05.024	Transient Inductance / Ld	0.000 to 500.000 mH			0.000 mH			RW	Num		RA		US
05.025	Stator Inductance	0.00 to 5000.00 mH			0.00 mH		RW	Num		RA			US
05.026	High Dynamic Performance Enable		Off (0) or On (1)		Off (0)			RW	Bit		RA		US
05.027	Enable Slip Compensation	Off (0) or On (1)			On (1)		RW	Bit		RA			US
05.028	Flux Control Compensation Disable		Off (0) or On (1)		Off (0)		RW	Bit					US
05.029	Saturation Breakpoint 1		0.0 to 100.0 %		50.0 %		RW	Num					US
05.030	Saturation Breakpoint 3		0.0 to 100.0 %		75.0 %		RW	Num					US
05.031	Voltage Controller Gain	1 to 30			1			RW	Num				US
05.032	Torque Per Amp		0.00 to 500.00 Nm/A		1.60 Nm/A		RO	Num	ND	NC	PT		
05.034	Percentage Flux	0.0 to 150.0 %						RO	Num	ND	NC	PT	
05.035	Auto-switching Frequency Change Disable	Enabled (0), Disabled (1), No Ripple Detect (2)			Enabled (0)			RW	Txt				US
05.036	Auto-switching Frequency Step Size	1 to 2			2			RW	Num				US
05.037	Switching Frequency	2 kHz (0), 3 kHz (1), 4 kHz (2), 6 kHz (3), 8 kHz (4), 12 kHz (5), 16 kHz (6)						RO	Txt	ND	NC	PT	
05.038	Minimum Switching Frequency	0 to VM_MIN_SWITCHING_FREQUENCY kHz			2 kHz (0)			RW	Txt				US
05.039	Maximum Inverter Temperature Ripple	20 to 60 °C			60 °C								
05.040	Spin Start Boost	0.0 to 10.0			1.0			RW	Num				US
05.041	Voltage Headroom		0 to 20 %		0 %	10 %		RW	Num				US
05.042	Reverse Output Phase Sequence	Off (0) or On (1)			Off (0)			RW	Bit				US
05.059	Maximum Deadtime Compensation	0.000 to 10.000 μs			0.000 μs			RO	Num		NC	PT	US
05.060	Current At Maximum Deadtime Compensation	0.00 to 100.00 %			0.00 %			RO	Num		NC	PT	US
05.061	Disable Deadtime Compensation	Off (0) or On (1)			Off (0)			RW	Bit				US

Parameter	Range(⇅)			Default(⇄)			Type										
	OL	RFC-A	RFC-S	OL	RFC-A	RFC-S											
05.062	Saturation Breakpoint 2		0.0 to 100.0 %					0.0 %				RW	Num				US
05.063	Saturation Breakpoint 4		0.0 to 100.0 %					0.0 %				RW	Num				US
05.064	RFC Low Speed Mode					Injection (0), Non-salient (1)				Non-salient (1)		RW	Txt				US
05.065	Saliency Torque Control					Off (0) or On (1)				Off (0)		RW	Bit				US
05.067	Percentage Over-current Trip Level					10 (0), 20 (1), 30 (2), 40 (3), 50 (4), 60 (5), 70 (6), 80 (7), 90 (8), 100 (9) %				100 (9) %		RW	Txt				US
05.070	Inverted Saturation Characteristic					Off (0) or On (1)				Off (0)		RW	Bit				US
05.071	Low Speed Sensorless Mode Current Limit					0.0 to 1000.0 %				20.0 %		RW	Num		RA		US
05.072	No-load Lq					0.000 to 500.000 mH				0.000 mH		RW	Num		RA		US
05.075	Iq Test Current For Inductance Measurement					0 to 200 %				100 %		RW	Num				US
05.077	Phase Offset At Iq Test Current					±90.0 °				0.0 °		RW	Num		RA		US
05.078	Lq At The Defined Iq Test Current					0.000 to 500.000 mH				0.000 mH		RW	Num		RA		US
05.082	Id Test Current for Inductance Measurement					-100 to 0 %				-50 %		RW	Num				US
05.084	Lq At The Defined Id Test Current					0.000 to 500.000 mH				0.000 mH		RW	Num		RA		US
05.088	Estimated Lq					0.000 to 500.000 mH						RO	Num	ND	NC	PT	FI

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.6 Menu 6: Sequencer and clock

Figure 11-10 Menu 6 logic diagram


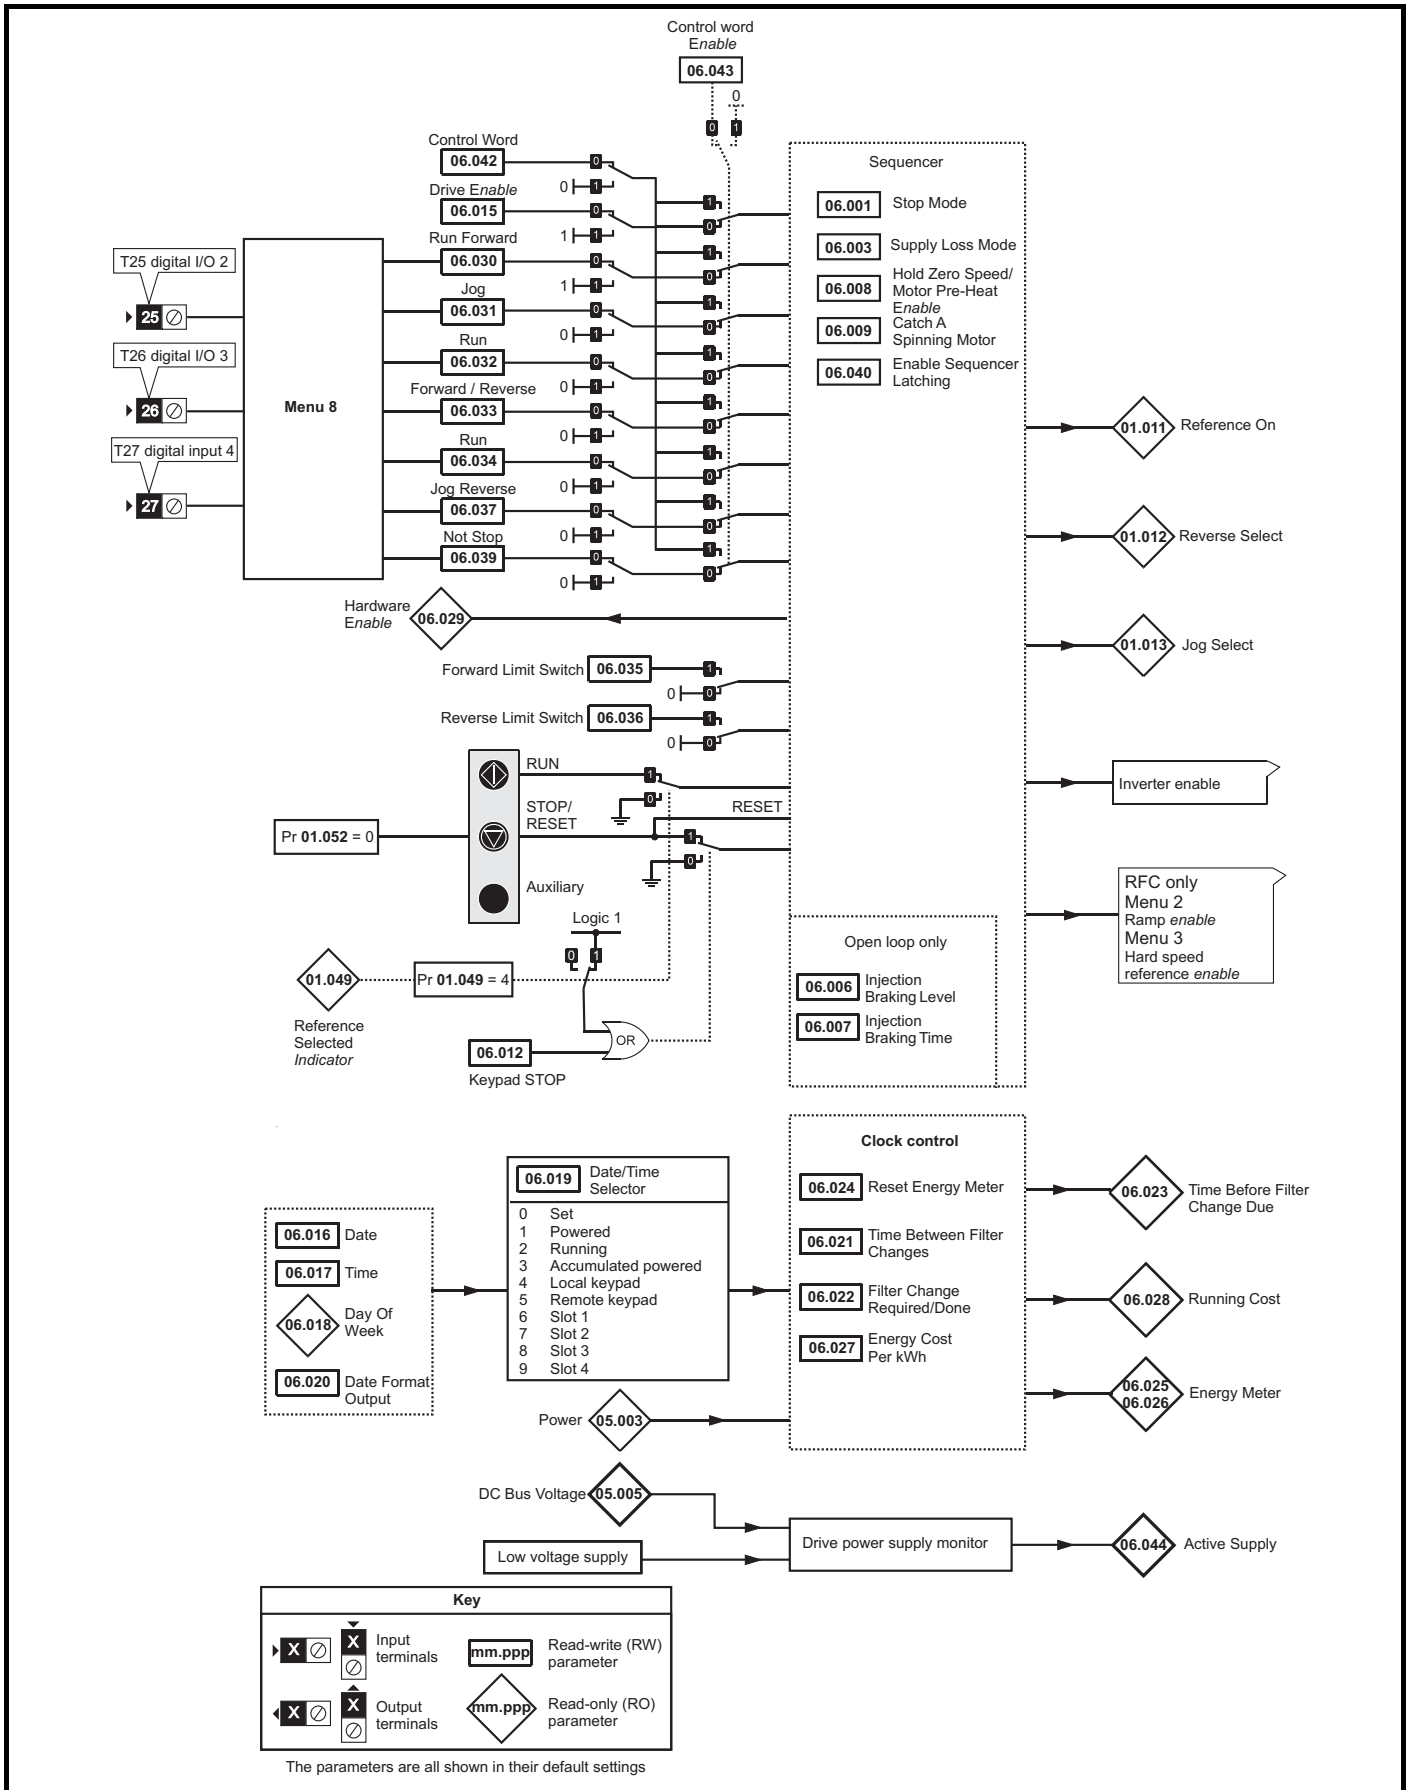


Figure 11-11 Menu 6 Low voltage operation

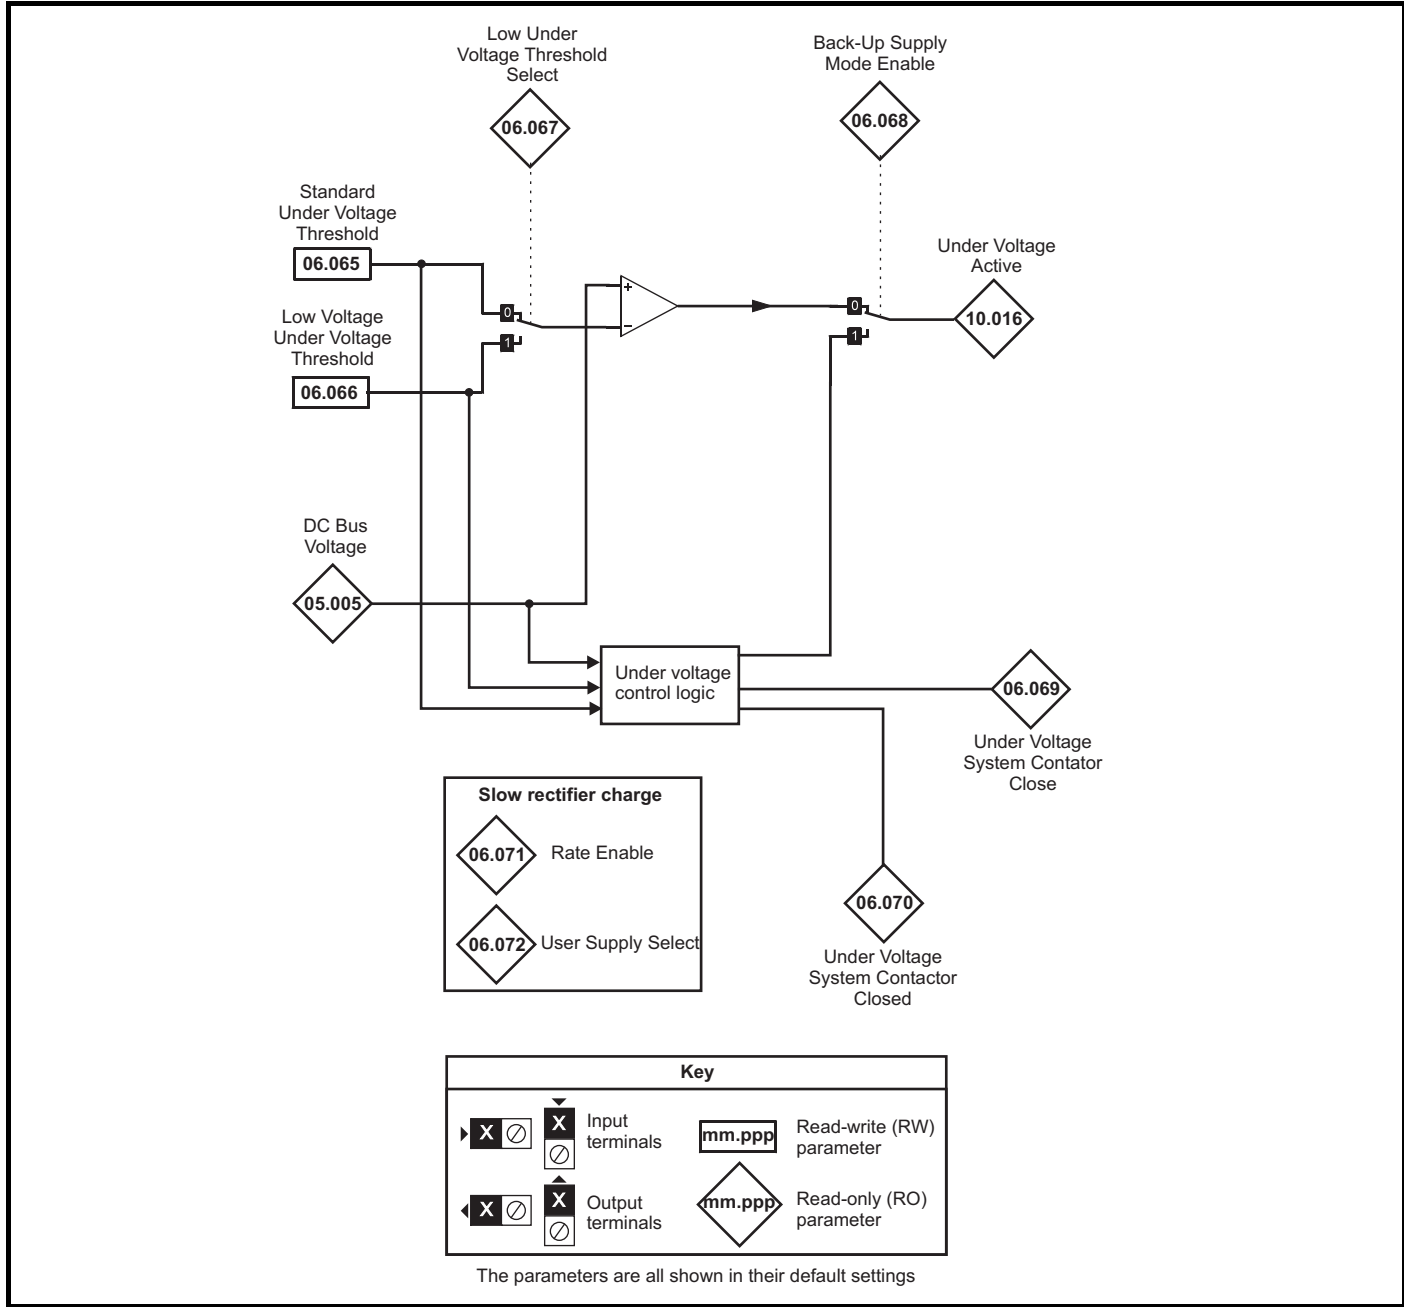


Parameter		Range(⇅)		Default(⇄)			Type							
		OL	RFC-A / S	OL	RFC-A	RFC-S								
06.001	Stop Mode	Coast (0), Ramp (1), Ramp dc I (2), dc I (3), Timed dc I (4), Disable (5)		Coast (0), Ramp (1), No Ramp (2)		Ramp (1)			RW	Txt				US
06.002	Limit Switch Stop Mode			Stop (0) or Ramp (1)		Stop (0)			RW	Txt				US
06.003	Supply Loss Mode	Disable (0), Ramp Stop (1), Ride Thru (2)		Disable (0), Ramp Stop (1), Ride Thru (2), Limit Stop (3)		Disable (0)			RW	Txt				US
06.006	Injection Braking Level	0.0 to 150.0 %				100.0 %				RW	Num		RA	US
06.007	Injection Braking Time	0.0 to 100.0 s				1.0 s				RW	Num			US
06.008	Hold Zero Speed	Off (0) or On (1)				Off (0)			RW	Bit				US
06.009	Catch A Spinning Motor	Disable (0), Enable (1), Fwd Only (2), Rev Only (3)				Disable (0)			RW	Txt				US
06.010	Enable Conditions	000000000000 to 111111111111							RO	Bin	ND	NC	PT	
06.011	Sequencer State Machine Inputs	0000000 to 1111111							RO	Bin	ND	NC	PT	
06.012	Enable Stop Key	Off (0) or On (1)				Off (0)			RW	Bit				US
06.013	Enable Auxiliary Key	Disabled (0), Forward / Reverse (1), Run Reverse (2)				Disabled (0)			RW	Num				US
06.015	Drive Enable	Off (0) or On (1)				On (1)			RW	Bit		NC		US
06.016	Date	00-00-00 to 31-12-99							RW	Date	ND	NC	PT	
06.017	Time	00:00:00 to 23:59:59							RW	Time	ND	NC	PT	
06.018	Day Of Week	Sunday (0), Monday (1), Tuesday (2), Wednesday (3), Thursday (4), Friday (5), Saturday (6)							RO	Txt	ND	NC	PT	
06.019	Date/Time Selector	Set (0), Powered (1), Running (2), Acc Powered (3), Local Keypad (4), Remote Keypad (5), Slot 1 (6), Slot 2 (7), Slot 3 (8), Slot 4 (9)				Powered (1)			RW	Txt				US
06.020	Date Format	Std (0) or US (1)				Std (0)			RW	Txt				US
06.021	Time Between Filter Changes	0 to 30000 Hours				0 Hours			RW	Num				US
06.022	Filter Change Required / Change Done	Off (0) or On (1)							RW	Bit	ND	NC		
06.023	Time Before Filter Change Due	0 to 30000 Hours							RO	Num	ND	NC	PT	PS
06.024	Reset Energy Meter	Off (0) or On (1)				Off (0)			RW	Bit				
06.025	Energy Meter: MWh	-999.9 to 999.0 MWh							RO	Num	ND	NC	PT	PS
06.026	Energy Meter: kWh	±99.99 kWh							RO	Num	ND	NC	PT	PS
06.027	Energy Cost Per kWh	0.0 to 600.0				0.0			RW	Num				US
06.028	Running Cost	±32000							RO	Num	ND	NC	PT	
06.029	Hardware Enable	Off (0) or On (1)							RO	Bit	ND	NC	PT	
06.030	Run Forward	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.031	Jog	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.032	Run Reverse	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.033	Forward/Reverse	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.034	Run	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.035	Forward Limit Switch	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.036	Reverse Limit Switch	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.037	Jog Reverse	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.039	Not Stop	Off (0) or On (1)				Off (0)			RW	Bit		NC		
06.040	Enable Sequencer Latching	Off (0) or On (1)				Off (0)			RW	Bit				US
06.041	Drive Event Flags	00 to 11				00			RW	Bin		NC		
06.042	Control Word	00000000000000 to 11111111111111				00000000000000			RW	Bin		NC		
06.043	Control Word Enable	Off (0) or On (1)				Off (0)			RW	Bit				US
06.044	Active Supply	Off (0) or On (1)							RO	Bit	ND	NC	PT	
06.045	Cooling Fan control	0 to 11				10			RW	Num				US
06.046	Supply Loss Hold Disable	Off (0) or On (1)				Off (0)			RW	Bit				US
06.047	Input Phase Loss Detection Mode	Full (0), Ripple Only (1), Disabled (2)				Full (0)			RW	Txt				US
06.048	Supply Loss Detection Level	±VM_SUPPLY_LOSS_LEVEL				200 V drive: 205 V 400 V drive: 410 V 575 V drive: 540 V 690 V drive: 540 V			RW	Num		RA		US
06.052	Motor Pre-heat Current Magnitude	0 to 100 %				0 %			RW	Num				US
06.059	Output Phase Loss Detection Enable	Disabled (0), Enabled (1)				Disabled (0)			RW	Bit				US
06.060	Standby Mode Enable	Off (0) or On (1)				Off (0)			RW	Bit				US
06.061	Standby Mode Mask	0000000 to 1111111				0000000			RW	Bin				US

Parameter	Range(↕)		Default(⇒)			Type					
	OL	RFC-A / S	OL	RFC-A	RFC-S						
06.065	Standard Under Voltage Threshold	±VM_STD_UNDER_VOLTS	200 V drive: 175 V 400 V drive: 330 V 575 V drive: 435 V 690 V drive: 435 V			RW	Num		RA		US
06.066	Low Voltage Under Voltage Threshold	±VM_LOW_UNDER_VOLTS	200 V drive: 175 V 400 V drive: 330 V 575 V drive: 435 V 690 V drive: 435 V			RW	Num		RA		US
06.067	Low Under Voltage Threshold Select	Off (0) or On (1)	Off (0)			RW	Bit				US
06.068	Back Up Supply Mode Enable	Off (0) or On (1)	Off (0)			RW	Bit				US
06.069	Under-Voltage System Contactor Close	Off (0) or On (1)				RO	Bit	ND	NC	PT	
06.070	Under-Voltage System Contactor Closed	Off (0) or On (1)	Off (0)			RW	Bit				US
06.071	Slow Rectifier Charge Rate Enable	Off (0) or On (1)	Off (0)			RW	Bit				US
06.072	User Supply Select	Off (0) or On (1)	Off (0)			RW	Bit				US
06.073	Braking IGBT Lower Threshold	±VM_DC_VOLTAGE_SET	200 V drive: 390 V 400 V drive: 780 V 575 V drive: 930 V 690 V drive: 1120 V			RW	Num				US
06.074	Braking IGBT Upper Threshold	±VM_DC_VOLTAGE_SET V	200 V drive: 390 V 400 V drive: 780 V 575 V drive: 930 V 690 V drive: 1120 V			RW	Num				US
06.075	Low Voltage Braking IGBT Threshold	±VM_DC_VOLTAGE_SET V	0 V			RW	Num				US
06.076	Low Voltage Braking IGBT Threshold Select	Off (0) or On (1)	Off (0)			RW	Bit				
06.084	Date And Time Offset	±24.00 Hours	0.00 Hours			RW	Num				US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number

11.7 Menu 7: Analog I/O

Figure 11-12 Menu 7 logic diagram

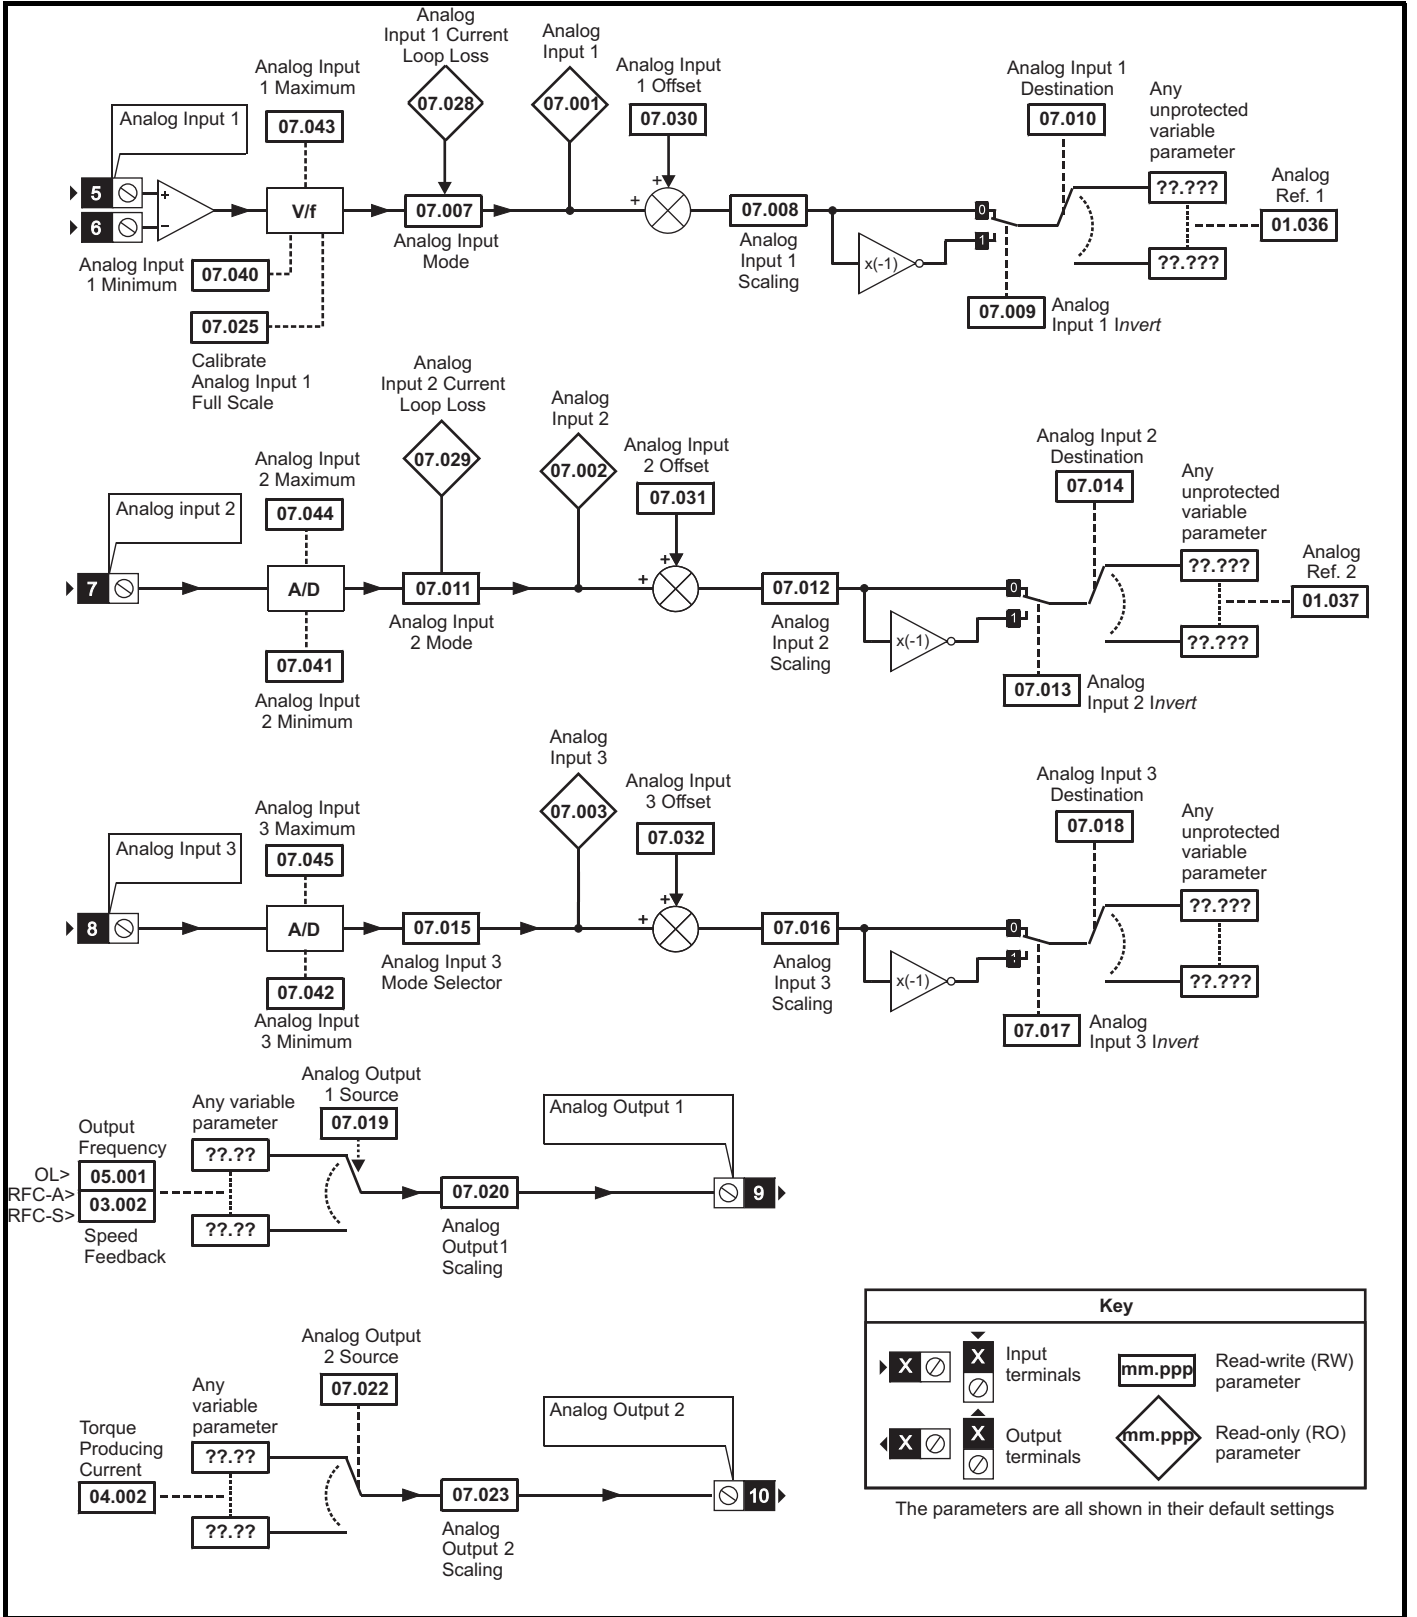


Parameter	Range(⊕)		Default(⇔)			Type						
	OL	RFC-A / S	OL	RFC-A	RFC-S	RO	Num	ND	NC	PT	FI	
07.001	Analog Input 1	±100.00 %				RO	Num	ND	NC	PT	FI	
07.002	Analog Input 2	±100.00 %				RO	Num	ND	NC	PT	FI	
07.003	Analog Input 3	±100.00 %				RO	Num	ND	NC	PT	FI	
07.004	Monitored Temperature 1	±250 °C				RO	Num	ND	NC	PT		
07.005	Monitored Temperature 2	±250 °C				RO	Num	ND	NC	PT		
07.006	Monitored Temperature 3	±250 °C				RO	Num	ND	NC	PT		
07.007	Analog Input 1 Mode	4-20 mA Low (-4), 20-4 mA Low (-3), 4-20 mA Hold (-2), 20-4 mA Hold (-1), 0-20 mA (0), 20-0 mA (1), 4-20 mA Trip (2), 20-4 mA Trip (3), 4-20 mA (4), 20-4 mA (5), Volt (6), Therm Short Cct (7), Thermistor (8), Therm No Trip (9)		Volt (6)		RW	Txt					US
07.008	Analog Input 1 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.009	Analog Input 1 Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
07.010	Analog Input 1 Destination	0.000 to 59.999		1.036		RW	Num	DE			PT	US
07.011	Analog Input 2 Mode	4-20 mA Low (-4), 20-4 mA Low (-3), 4-20 mA Hold (-2), 20-4 mA Hold (-1), 0-20 mA (0), 20-0 mA (1), 4-20 mA Trip (2), 20-4 mA Trip (3), 4-20 mA (4), 20-4 mA (5), Volt (6), Therm Short Cct (7), Thermistor (8), Therm No Trip (9)		Volt (6)		RW	Txt					US
07.012	Analog Input 2 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.013	Analog Input 2 Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
07.014	Analog Input 2 Destination	0.000 to 59.999		1.037		RW	Num	DE			PT	US
07.015	Analog Input 3 Mode	Volt (6), Therm Short Cct (7), Thermistor (8), Therm No Trip (9)		Volt (6)		RW	Txt					US
07.016	Analog Input 3 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.017	Analog Input 3 Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
07.018	Analog Input 3 Destination	0.000 to 59.999		0.000		RW	Num	DE			PT	US
07.019	Analog Output 1 Source	0.000 to 59.999		5.001	3.002	RW	Num				PT	US
07.020	Analog Output 1 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.022	Analog Output 2 Source	0.000 to 59.999		4.002		RW	Num					US
07.023	Analog Output 2 Scaling	0.000 to 10.000		1.000		RW	Num					US
07.025	Calibrate Analog Input 1 Full Scale	Off (0) or On (1)		Off (0)		RW	Bit			NC		
07.026	Analog Input 1 Fast Update Active	Off (0) or On (1)				RO	Bit	ND	NC	PT		
07.027	Analog Input 1 Fast Update Active	Off (0) or On (1)				RO	Bit	ND	NC	PT		
07.028	Analog Input 1 Current Loop Loss	Off (0) or On (1)				RO	Bit	ND	NC	PT		
07.029	Analog Input 2 Current Loop Loss	Off (0) or On (1)				RO	Bit	ND	NC	PT		
07.030	Analog Input 1 Offset	±100.00 %		0.00 %		RW	Num					US
07.031	Analog Input 2 Offset	±100.00 %		0.00 %		RW	Num					US
07.032	Analog Input 3 Offset	±100.00 %		0.00 %		RW	Num					US
07.033	Power Output	±100.0 %				RO	Num	ND	NC	PT		
07.034	Inverter Temperature	±250 °C				RO	Num	ND	NC	PT		
07.035	Percentage Of d.c. Bus Thermal Trip Level	0 to 100 %				RO	Num	ND	NC	PT		
07.036	Percentage Of Drive Thermal Trip Level	0 to 100 %				RO	Num	ND	NC	PT		
07.037	Temperature Nearest To Trip Level	0 to 29999				RO	Num	ND	NC	PT		
07.038	Temperature Monitor Select 1	0 to 29999		1001		RW	Num					US
07.039	Temperature Monitor Select 2	0 to 29999		1002		RW	Num					US
07.040	Analog Input 1 Minimum	±100.00 %		-100.00 %		RW	Num					US
07.041	Analog Input 2 Minimum	±100.00 %		-100.00 %		RW	Num					US
07.042	Analog Input 3 Minimum	±100.00 %		-100.00 %		RW	Num					US
07.043	Analog Input 1 Maximum	±100.00 %		100.00 %		RW	Num					US
07.044	Analog Input 2 Maximum	±100.00 %		100.00 %		RW	Num					US
07.045	Analog Input 3 Maximum	±100.00 %		100.00 %		RW	Num					US
07.046	Analog Input 3 Thermistor Type	DIN44082 (0), KTY84 (1), PT100 (4W) (2), PT1000 (4W) (3), PT2000 (4W) (4), 2.0 mA (4W) (5), PT100 (2W) (6), PT1000 (2W) (7), PT2000 (2W) (8), 2.0 mA (2W) (9)		DIN44082 (0)		RW	Txt					US
07.047	Analog Input 3 Thermistor Feedback	0 to 5000 Ω				RO	Num	ND	NC	PT		
07.048	Analog Input 3 Thermistor Trip Threshold	0 to 5000 Ω		3300 Ω		RW	Num					US
07.049	Analog Input 3 Thermistor Reset Threshold	0 to 5000 Ω		1800 Ω		RW	Num					US
07.050	Analog Input 3 Thermistor Temperature	-50 to 300 °C				RO	Num	ND	NC	PT		
07.051	Analog Input 1 Full Scale	0 to 65535				RO	Num	ND	NC	PT	PS	
07.052	Temperature Monitor Select 3	0 to 29999		1		RW	Num					US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.8 Menu 8: Digital I/O

Figure 11-13 Menu 8 logic diagram

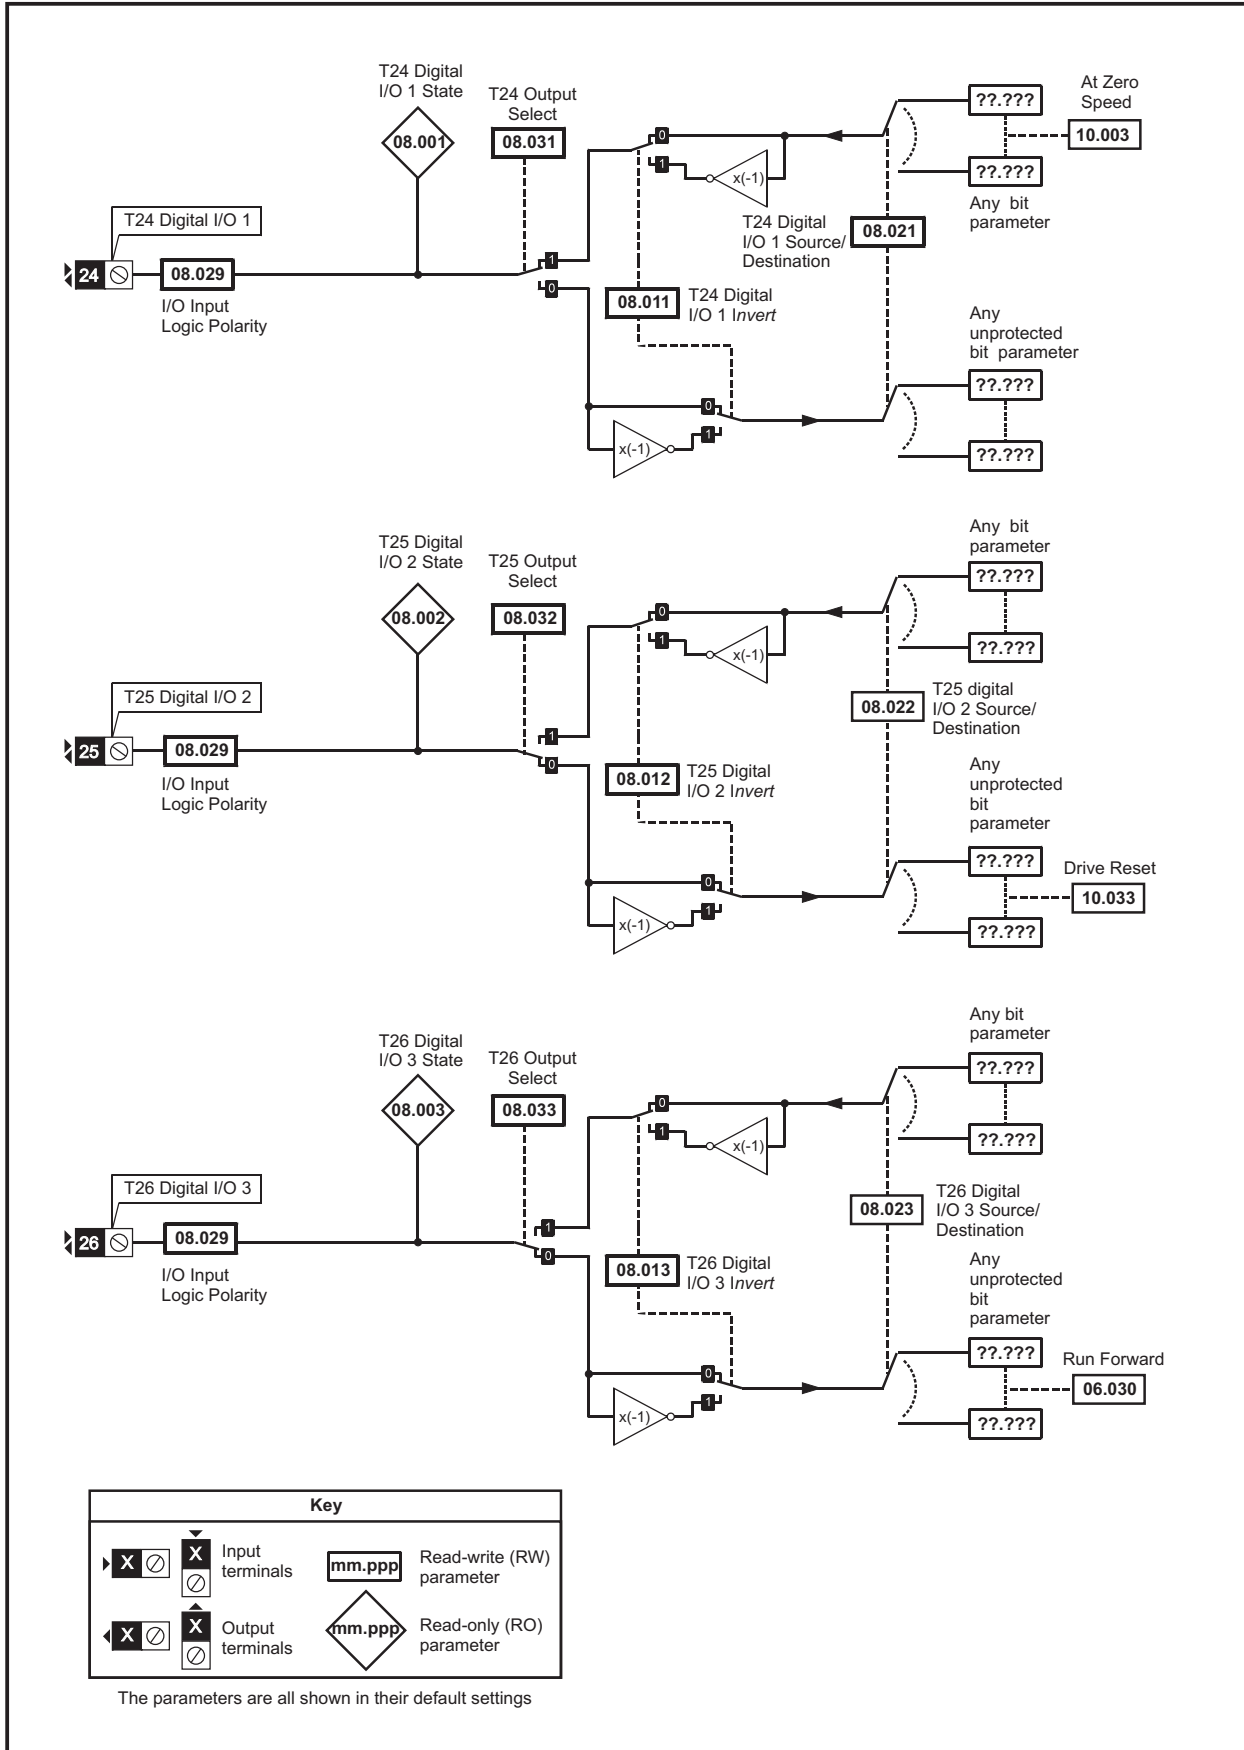

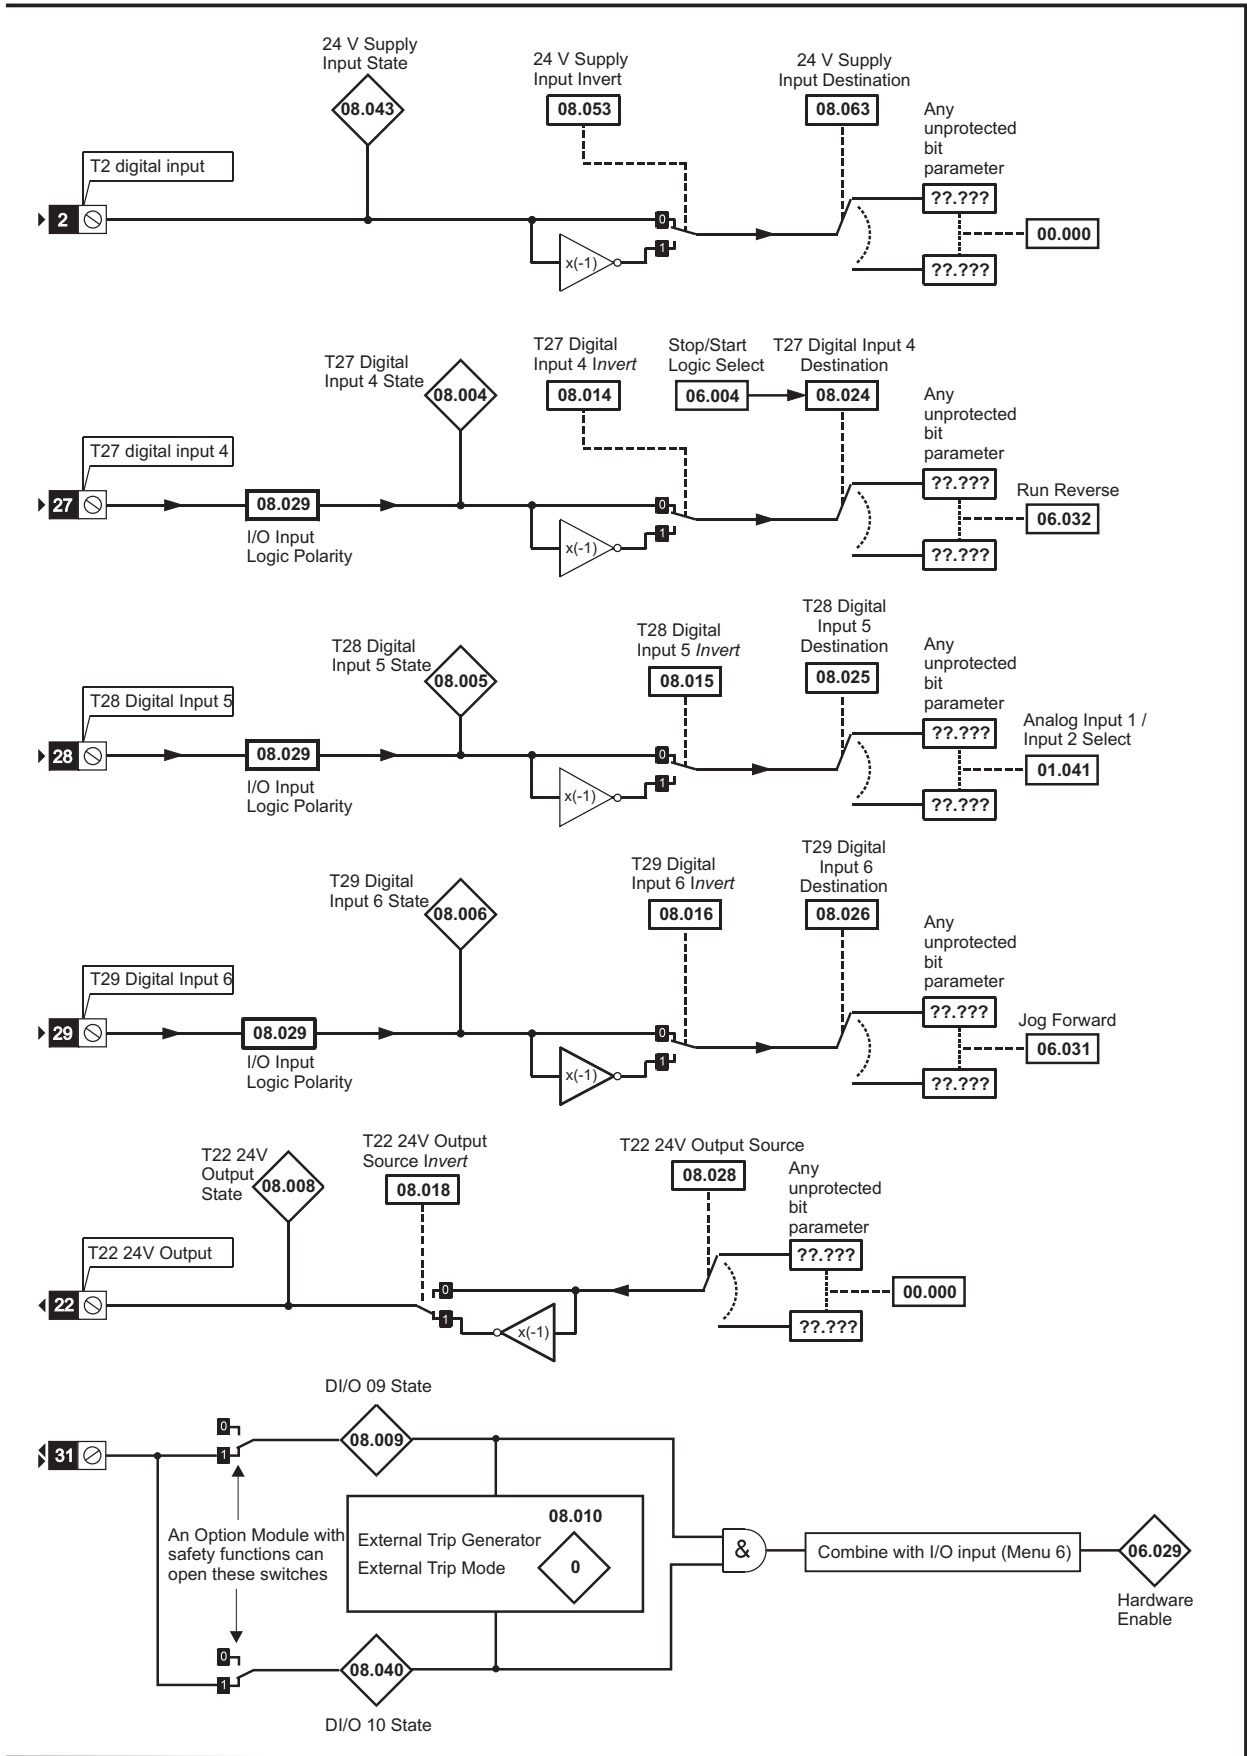


Figure 11-14 Menu 8 logic (cont)


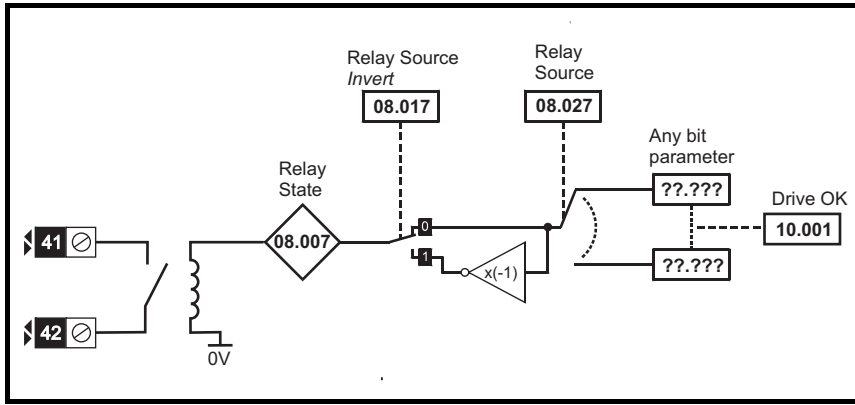


Figure 11-15 Menu 8 logic (cont)

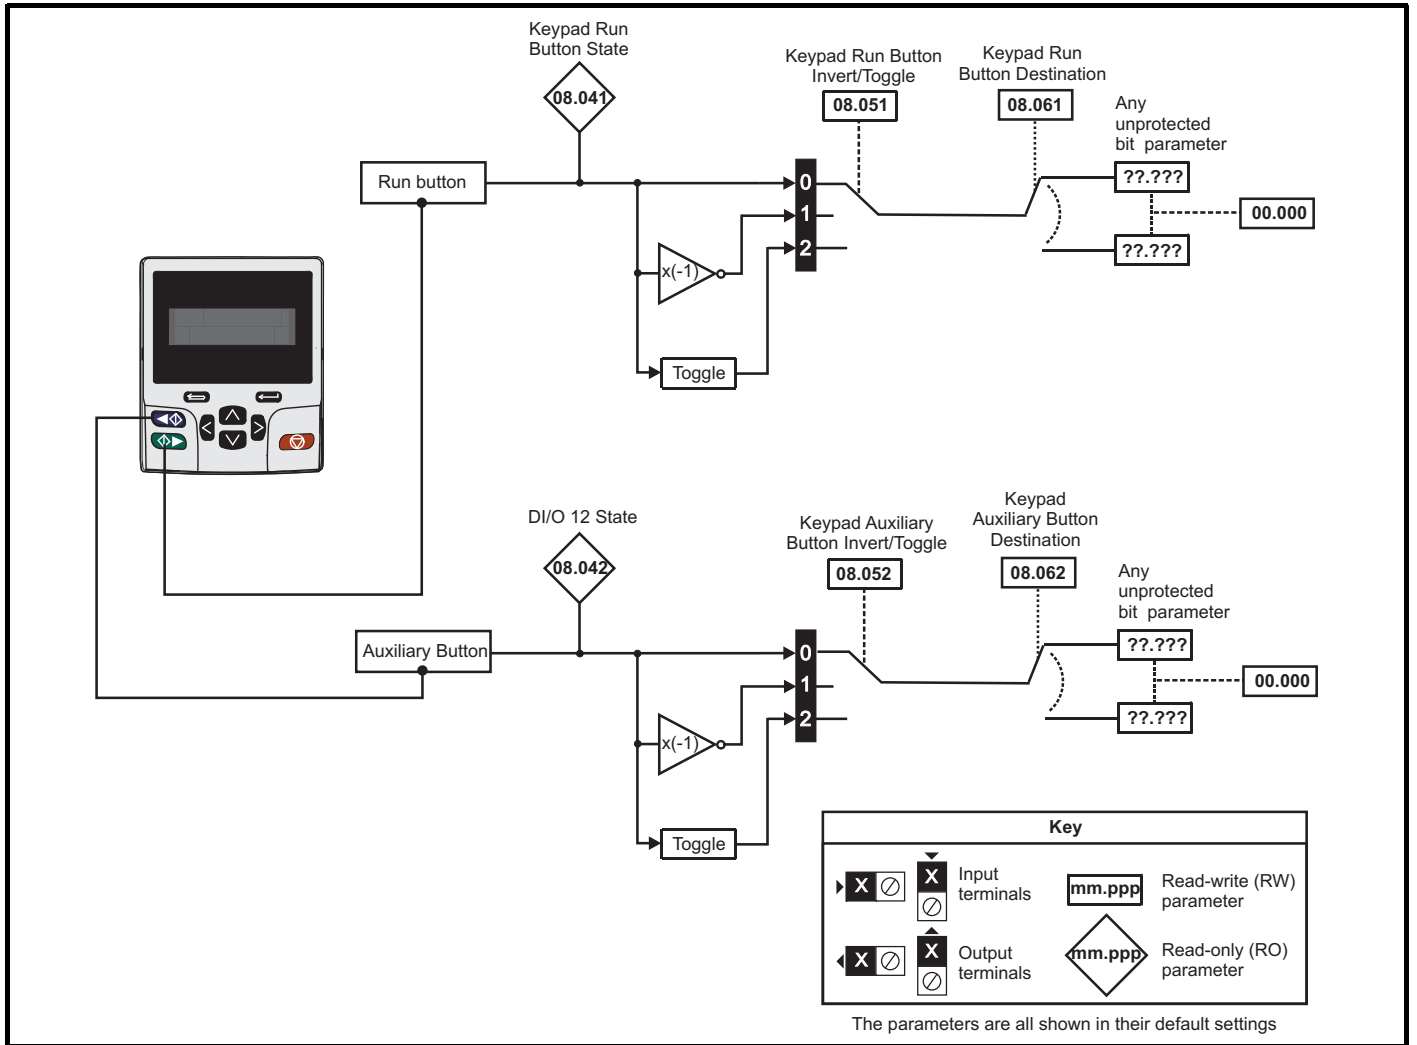

Parameter	Range(⇅)		Default(⇒)			Type						
	OL	RFC-A / S	OL	RFC-A	RFC-S							
08.001	Digital I/O 01 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.002	Digital I/O 02 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.003	Digital I/O 03 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.004	Digital Input 04 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.005	Digital Input 05 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.006	Digital Input 06 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.007	Relay Output State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.008	24V Supply Output State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.009	STO Input 01 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.010	External Trip Mode	Disable (0), STO 1 (1), STO 2 (2), STO 1 OR STO 2 (3)				RW	Txt					US
08.011	Digital I/O 01 Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.012	Digital I/O 02 Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.013	Digital I/O 03 Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.014	Digital Input 04 Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.015	Digital Input 05 Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.016	Digital Input 06 Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.017	Relay Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.018	24V Supply Output Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.020	Digital I/O Read Word	0 to 511				RO	Num	ND	NC	PT		
08.021	Digital I/O 01 Source/Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.022	Digital I/O 02 Source/Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.023	Digital I/O 03 Source/Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.024	Digital Input 04 Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.025	Digital Input 05 Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.026	Digital Input 06 Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.027	Relay Output Source	0.000 to 59.999				RW	Num			PT		US
08.028	24V Supply Output Source	0.000 to 59.999				RW	Num			PT		US
08.029	Input Logic Polarity	Negative Logic (0) or Positive Logic (1)				RW	Txt					US
08.031	Digital I/O 01 Output Select	Off (0) or On (1)				RW	Bit					US
08.032	Digital I/O 02 Output Select	Off (0) or On (1)				RW	Bit					US
08.033	Digital I/O 03 Output Select	Off (0) or On (1)				RW	Bit					US
08.040	STO Input 02 State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.041	Keypad Run Button State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.042	Keypad Auxiliary Button State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.043	24V Supply Input State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.044	Keypad Stop Button State	Off (0) or On (1)				RO	Bit	ND	NC	PT		
08.051	Keypad Run Button Invert/Toggle	Not Invert (0), Invert (1) or Toggle (2)				RW	Txt					US
08.052	Keypad Auxiliary Button Invert/Toggle	Not Invert (0), Invert (1) or Toggle (2)				RW	Txt					US
08.053	24V Supply Input Invert	Not Invert (0) or Invert (1)				RW	Txt					US
08.061	Keypad Run Button Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.062	Keypad Auxiliary Button Destination	0.000 to 59.999				RW	Num	DE		PT		US
08.063	24V Supply Input Source	0.000 to 59.999				RW	Num			PT		US
08.071	DI/O Output Enable Register 1	0000000000000000 to 1111111111111111				RW	Bin			PT		US
08.072	DI/O Input Register 1	0000000000000000 to 1111111111111111				RO	Bin			PT		
08.073	DI/O Output Register 1	0000000000000000 to 1111111111111111				RW	Bin			PT		

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.9 Menu 9: Programmable logic, motorized pot, binary sum and timers

Figure 11-16 Menu 9 logic diagram: Programmable logic

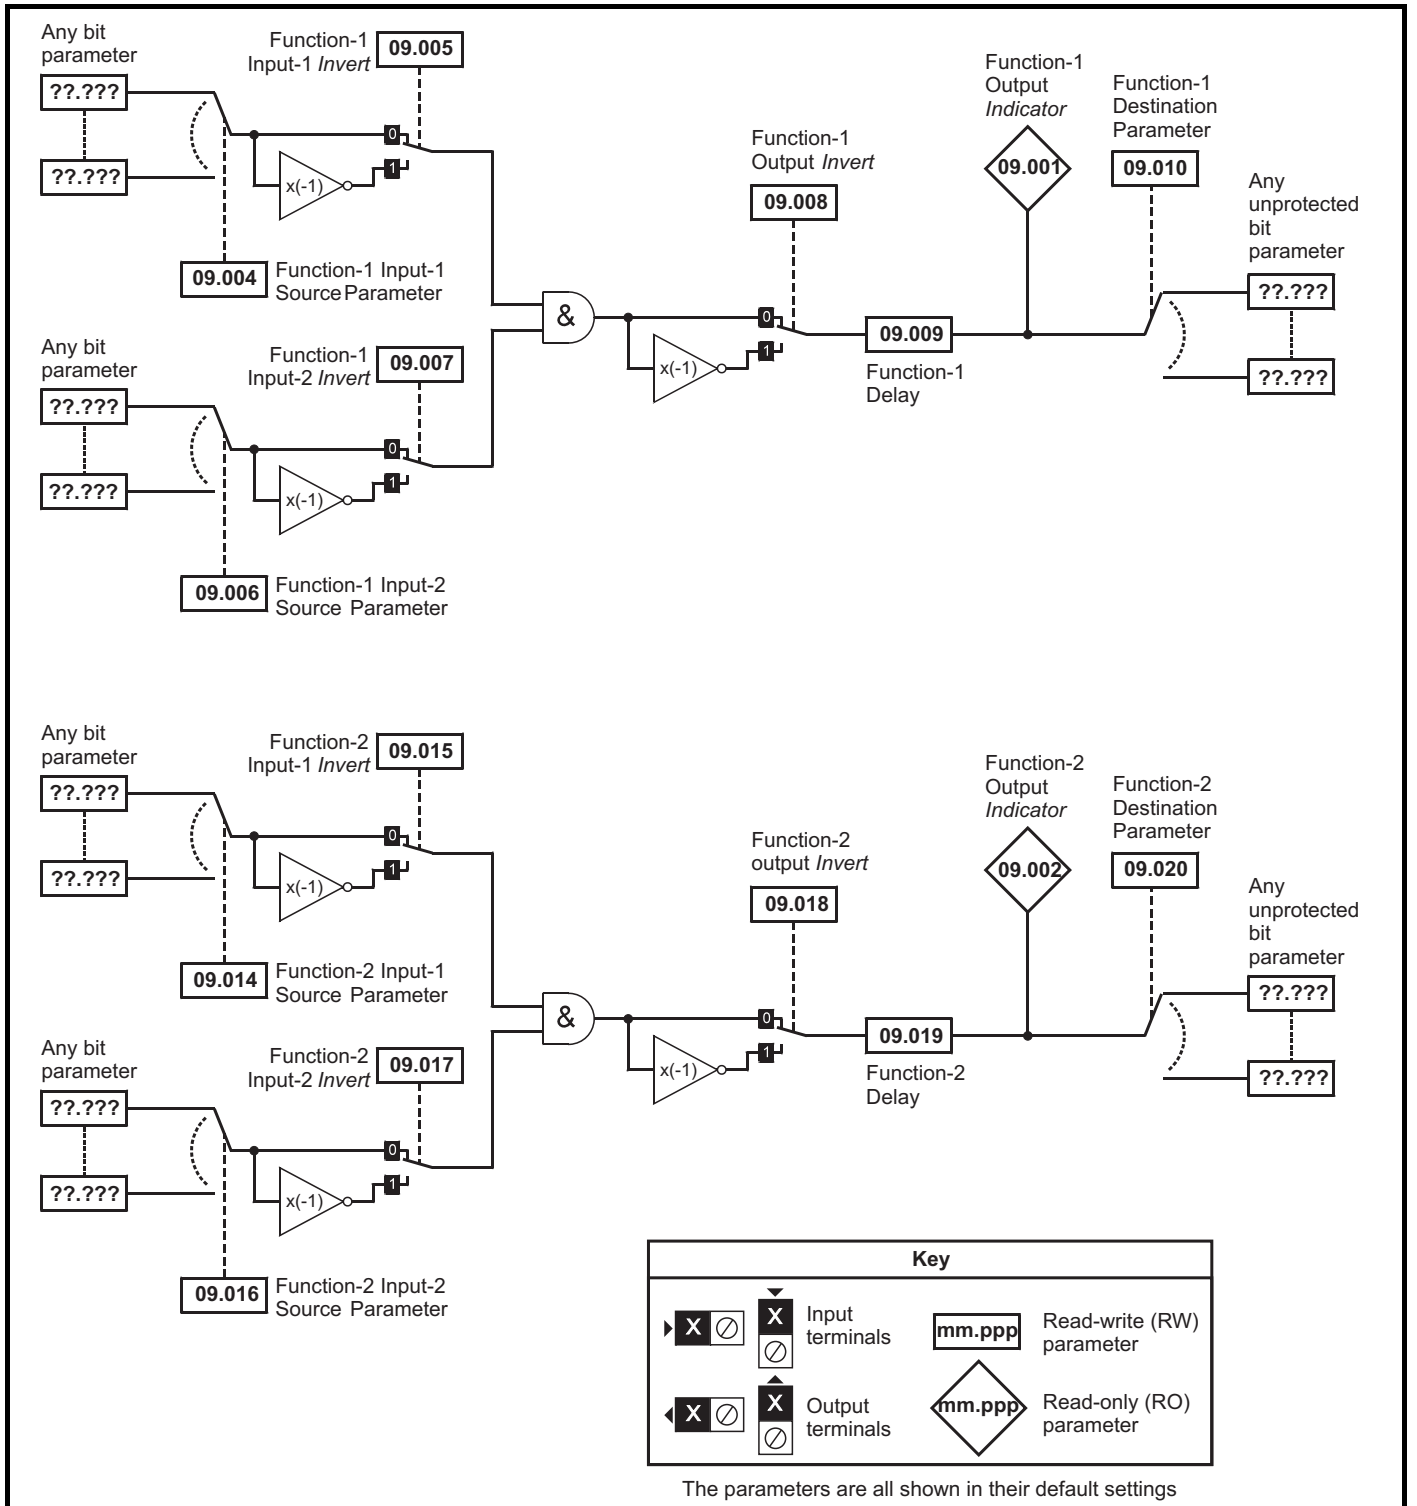


Figure 11-17 Menu 9 logic diagram: Motorized pot and binary sum

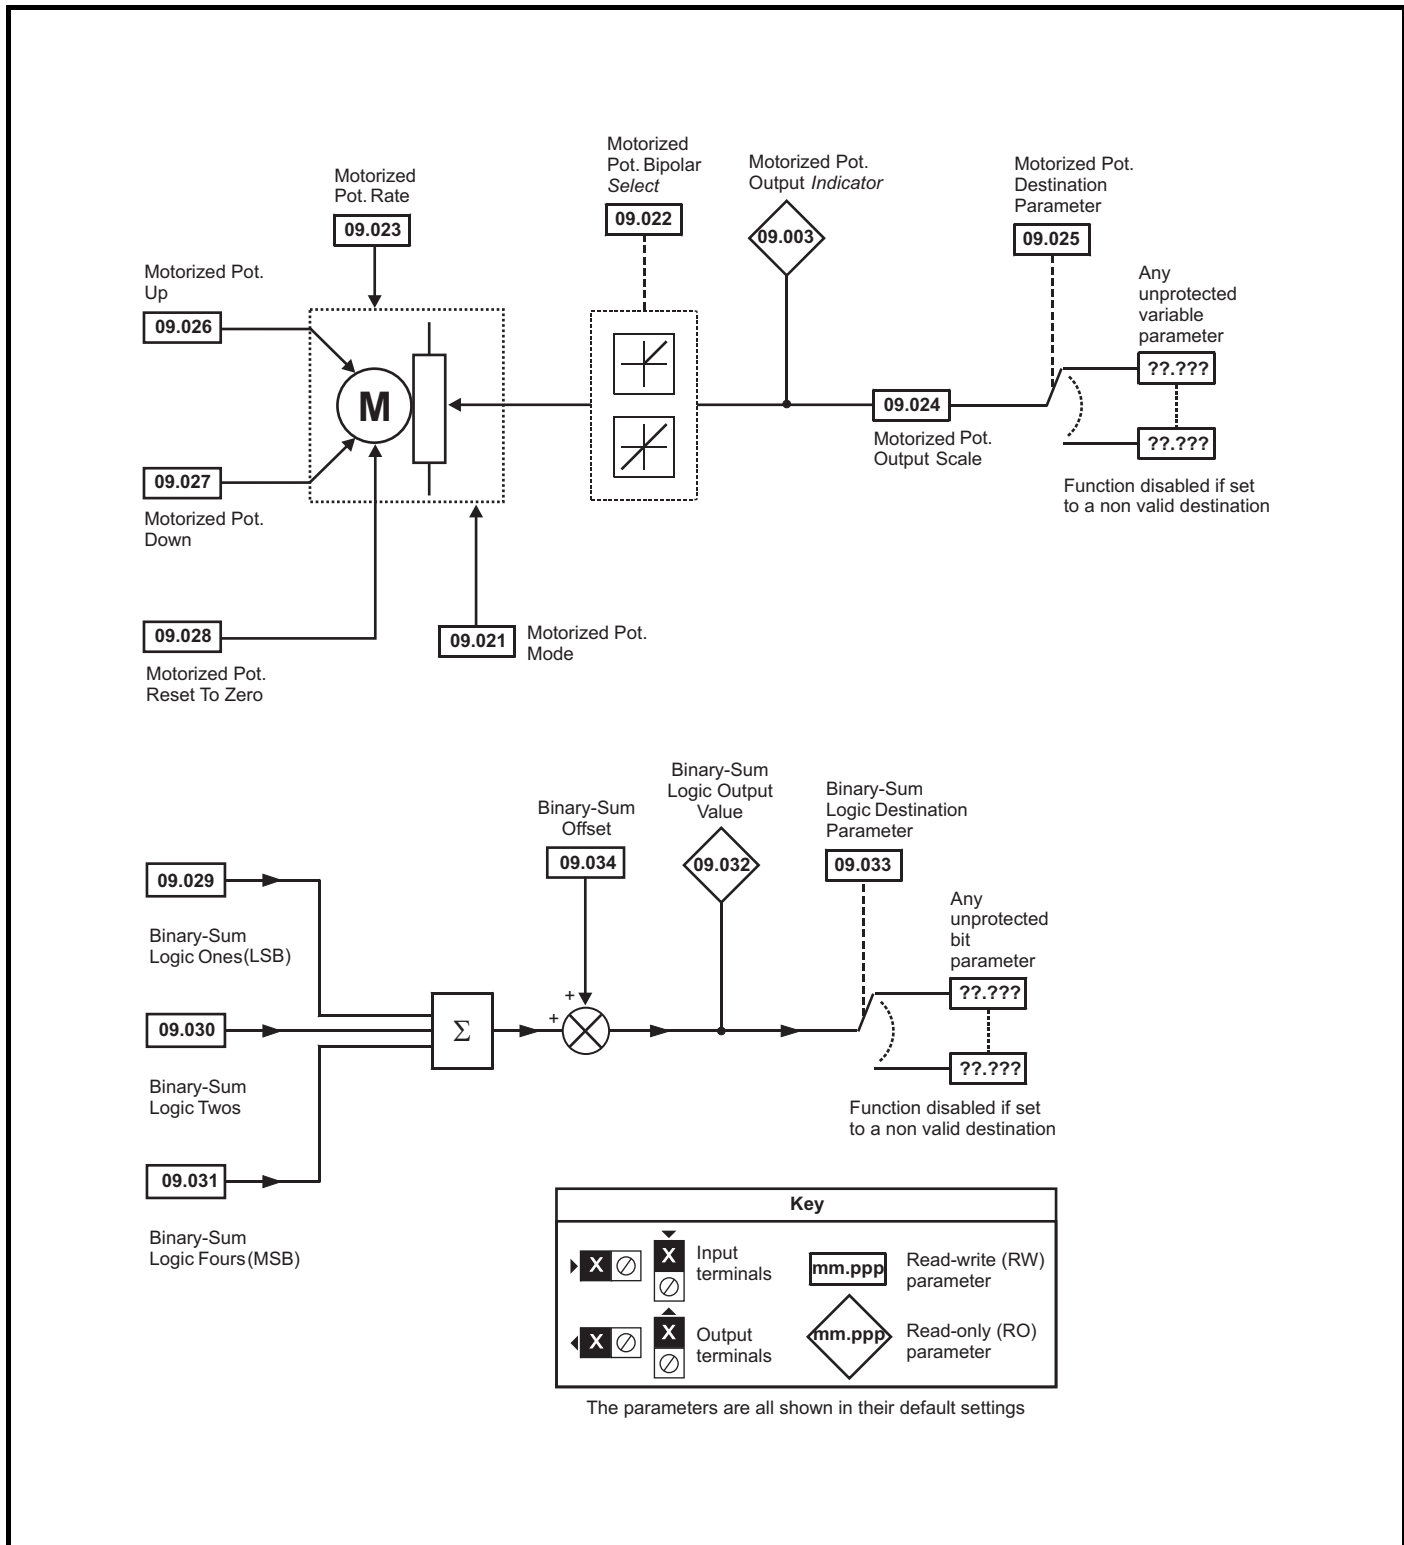


Figure 11-18 Menu 9 logic diagram: Timers


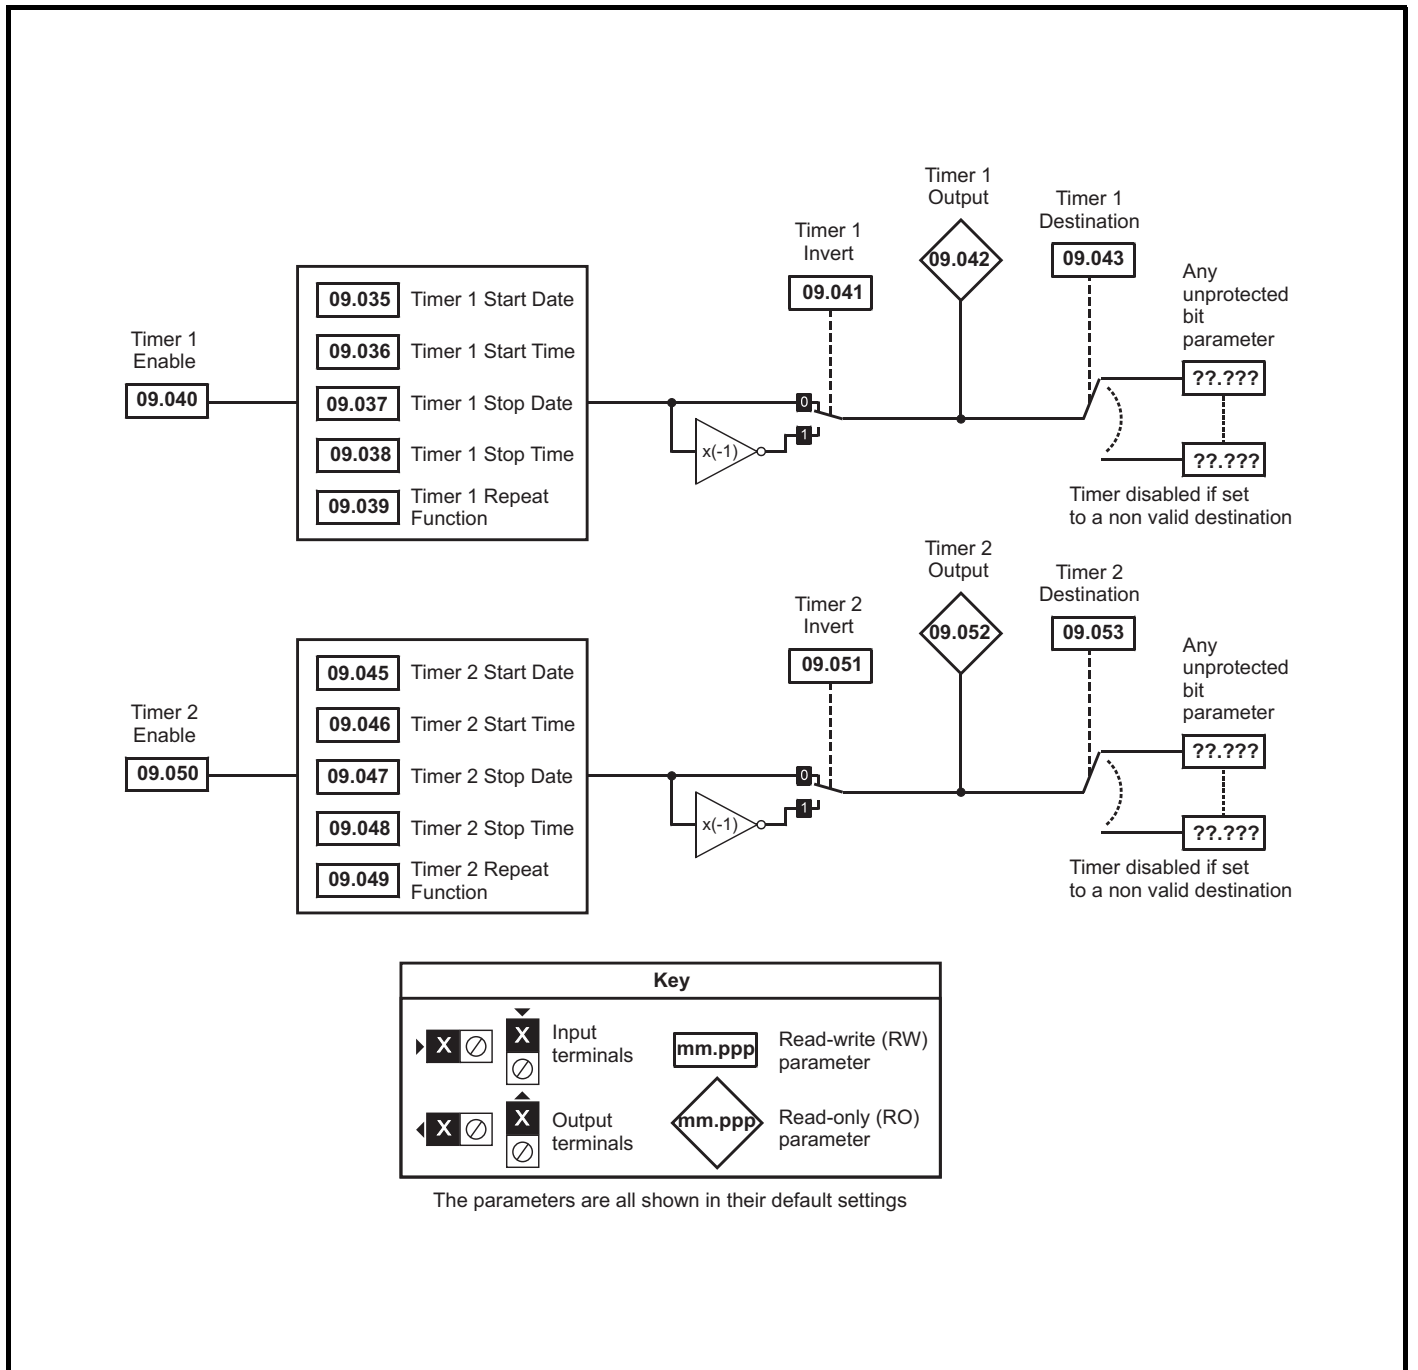


Figure 11-19 Menu 9 logic diagram: Scope function

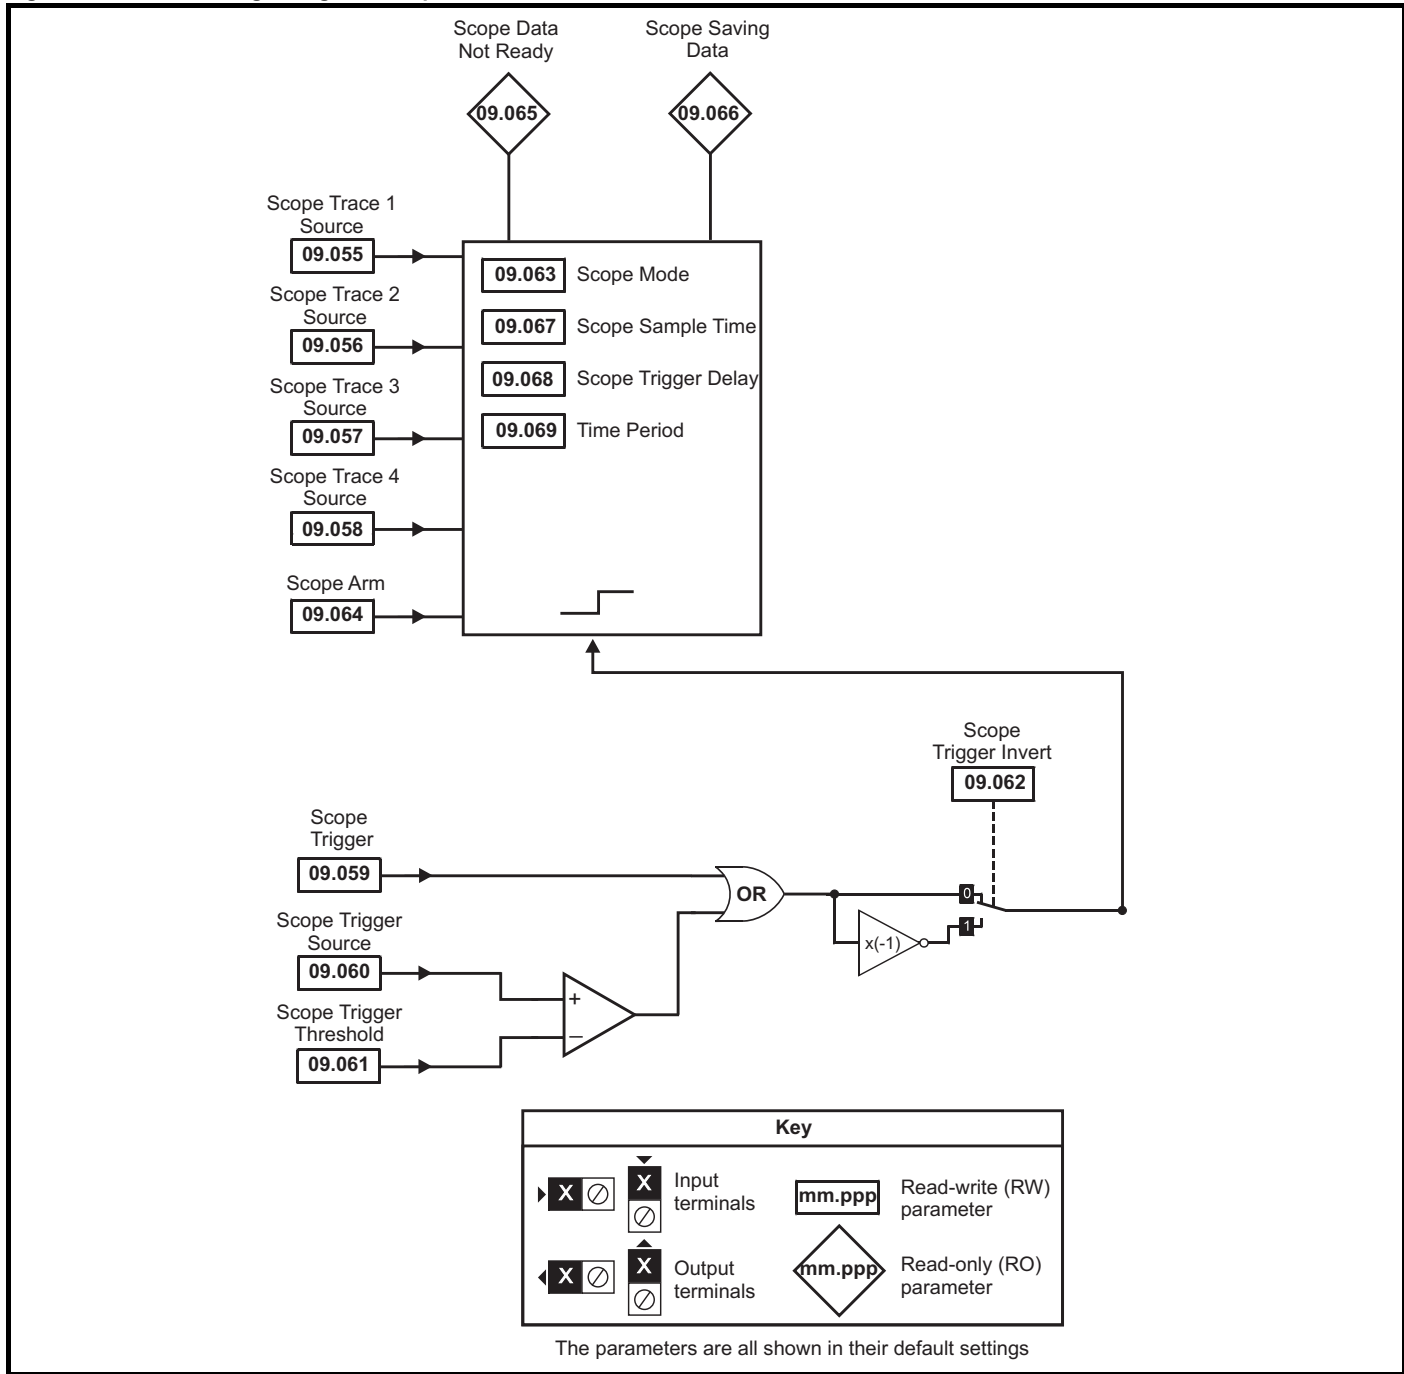

Parameter		Range(⇅)		Default(⇒)			Type						
		OL	RFC-A / S	OL	RFC-A	RFC-S							
09.001	Logic Function 1 Output	Off (0) or On (1)					RO	Bit	ND	NC	PT		
09.002	Logic Function 2 Output	Off (0) or On (1)					RO	Bit	ND	NC	PT		
09.003	Motorized Pot Output	±100.00 %					RO	Num	ND	NC	PT	PS	
09.004	Logic Function 1 Source 1	0.000 to 59.999				0.000	RW	DE			PT	US	
09.005	Logic Function 1 Source 1 Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.006	Logic Function 1 Source 2	0.000 to 59.999				0.000	RW	DE			PT	US	
09.007	Logic Function 1 Source 2 Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.008	Logic Function 1 Output Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.009	Logic Function 1 Delay	±25.0 s				0.0s	RW	Num					US
09.010	Logic Function 1 Destination	0.000 to 59.999				0.000	RW	DE			PT	US	
09.014	Logic Function 2 Source 1	0.000 to 59.999				0.000	RW	Num			PT	US	
09.015	Logic Function 2 Source 1 Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.016	Logic Function 2 Source 2	0.000 to 59.999				0.000	RW	Num			PT	US	
09.017	Logic Function 2 Source 2 Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.018	Logic Function 2 Output Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.019	Logic Function 2 Delay	±25.0 s				0.0 s	RW	Num					US
09.020	Logic Function 2 Destination	0.000 to 59.999				0.000	RW	DE			PT	US	
09.021	Motorized Pot Mode	0 to 4				0	RW	Num					US
09.022	Motorized Pot Bipolar Select	Off (0) or On (1)				Off (0)	RW	Bit					US
09.023	Motorized Pot Rate	0 to 250 s				20 s	RW	Num					US
09.024	Motorized Pot Scaling	0.000 to 4.000				1.000	RW	Num					US
09.025	Motorized Pot Destination	0.000 to 59.999				0.000	RW	DE			PT	US	
09.026	Motorized Pot Up	Off (0) or On (1)				Off (0)	RW	Bit		NC			
09.027	Motorized Pot Down	Off (0) or On (1)				Off (0)	RW	Bit		NC			
09.028	Motorized Pot Reset	Off (0) or On (1)				Off (0)	RW	Bit		NC			
09.029	Binary Sum Ones	Off (0) or On (1)				Off (0)	RW	Bit		NC			
09.030	Binary Sum Twos	Off (0) or On (1)				Off (0)	RW	Bit		NC			
09.031	Binary Sum Fours	Off (0) or On (1)				Off (0)	RW	Bit		NC			
09.032	Binary Sum Output	0 to 255					RO	Num	ND	NC	PT		
09.033	Binary Sum Destination	0.000 to 59.999				0.000	RW	DE			PT	US	
09.034	Binary Sum Offset	0 to 248				0	RW	Num					US
09.035	Timer 1 Start Date	00-00-00 to 31-12-99				00-00-00	RW	Date					US
09.036	Timer 1 Start Time	00:00:00 to 23:59:59				00:00:00	RW	Time					US
09.037	Timer 1 Stop Date	00-00-00 to 31-12-99				00-00-00	RW	Date					US
09.038	Timer 1 Stop Time	00:00:00 to 23:59:59				00:00:00	RW	Time					US
09.039	Timer 1 Repeat Function	None (0), Hour (1), Day (2), Week (3), Month (4), Year (5), One off (6), Minute (7)				None (0)	RW	Txt					US
09.040	Timer 1 Enable	Off (0) or On (1)				Off (0)	RW	Bit					US
09.041	Timer 1 Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.042	Timer 1 Output	Off (0) or On (1)					RO	Bit	ND	NC	PT		
09.043	Timer 1 Destination	0.000 to 59.999				0.000	RW	DE			PT	US	
09.045	Timer 2 Start Date	00-00-00 to 31-12-99				00-00-00	RW	Date					US
09.046	Timer 2 Start Time	00:00:00 to 23:59:59				00:00:00	RW	Time					US
09.047	Timer 2 Stop Date	00-00-00 to 31-12-99				00-00-00	RW	Date					US
09.048	Timer 2 Stop Time	00:00:00 to 23:59:59				00:00:00	RW	Time					US
09.049	Timer 2 Repeat Function	None (0), Hour (1), Day (2), Week (3), Month (4), Year (5), One off (6), Minute (7)				None (0)	RW	Txt					US
09.050	Timer 2 Enable	Off (0) or On (1)				Off (0)	RW	Bit					US
09.051	Timer 2 Invert	Off (0) or On (1)				Off (0)	RW	Bit					US
09.052	Timer 2 Output	Off (0) or On (1)					RO	Bit	ND	NC	PT		
09.053	Timer 2 Destination	0.000 to 59.999				0.000	RW	DE			PT	US	
09.055	Scope Trace 1 Source	0.000 to 59.999				0.000	RW	Num			PT	US	
09.056	Scope Trace 2 Source	0.000 to 59.999				0.000	RW	Num			PT	US	
09.057	Scope Trace 3 Source	0.000 to 59.999				0.000	RW	Num			PT	US	
09.058	Scope Trace 4 Source	0.000 to 59.999				0.000	RW	Num			PT	US	
09.059	Scope Trigger	Off (0) or On (1)				Off (0)	RW	Bit					
09.060	Scope Trigger Source	0.000 to 59.999				0.000	RW	Num			PT	US	
09.061	Scope Trigger Threshold	-2147483648 to 2147483647				0	RW	Num					US

Parameter		Range(⇅)		Default(⇄)			Type						
		OL	RFC-A / S	OL	RFC-A	RFC-S							
09.062	Scope Trigger Invert	Off (0) or On (1)		Off (0)			RW	Bit					US
09.063	Scope Mode	Single (0), Normal (1), Auto (2)		Single (0)			RW	Txt					US
09.064	Scope Arm	Off (0) or On (1)		Off (0)			RW	Bit		NC			
09.065	Scope Data Not Ready	Off (0) or On (1)					RO	Bit	ND	NC	PT		
09.066	Scope Saving Data	Off (0) or On (1)					RO	Bit	ND	NC	PT		
09.067	Scope Sample Time	1 to 200		1			RW	Num					US
09.068	Scope Trigger Delay	0 to 100 %		0 %			RW	Num					US
09.069	Scope Time Period	0.00 to 200000.00 ms					RO	Num	ND	NC	PT		
09.070	Scope Auto-save Mode	Disabled (0), Overwrite (1), Keep (2)					Disabled (0)			RW	Txt		
09.071	Scope Auto-save File Number	0 to 99		0			RO	Num					PS
09.072	Scope Auto-save Reset	Off (0) or On (1)		Off (0)			RW	Bit					
09.073	Scope Auto-save Status	Disabled (0), Active (1), Stopped (2), Failed (3)		Disabled (0)			RO	Txt					PS

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number

11.10 Menu 10: Status and trips

Parameter		Range(↕)		Default(⇔)			Type						
		OL	RFC-A / S	OL	RFC-A	RFC-S							
10.001	Drive OK		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.002	Drive Active		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.003	Zero Speed		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.004	Running At Or Below Minimum Speed		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.005	Below Set Speed		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.006	At Speed		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.007	Above Set Speed		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.008	Rate Load Reached		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.009	Current Limit Active		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.010	Regenerating		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.011	Braking IGBT Active		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.012	Braking Resistor Alarm		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.013	Reverse Direction Commanded		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.014	Reverse Direction Running		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.015	Supply Loss		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.016	Under Voltage Active		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.017	Motor Overload Alarm		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.018	Drive Over-temperature Alarm		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.019	Drive Warning		Off (0) or On (1)				RO	Bit	ND	NC	PT		
10.020	Trip 0		0 to 255				RO	Txt	ND	NC	PT	PS	
10.021	Trip 1		0 to 255				RO	Txt	ND	NC	PT	PS	
10.022	Trip 2		0 to 255				RO	Txt	ND	NC	PT	PS	
10.023	Trip 3		0 to 255				RO	Txt	ND	NC	PT	PS	
10.024	Trip 4		0 to 255				RO	Txt	ND	NC	PT	PS	
10.025	Trip 5		0 to 255				RO	Txt	ND	NC	PT	PS	
10.026	Trip 6		0 to 255				RO	Txt	ND	NC	PT	PS	
10.027	Trip 7		0 to 255				RO	Txt	ND	NC	PT	PS	
10.028	Trip 8		0 to 255				RO	Txt	ND	NC	PT	PS	
10.029	Trip 9		0 to 255				RO	Txt	ND	NC	PT	PS	
10.030	Braking Resistor Rated Power		0.000 to 99999.999 kW			See Table 11-5	RW	Num					US
10.031	Braking Resistor Thermal Time Constant		0.000 to 1500.000 s			See Table 11-5	RW	Num					US
10.032	External Trip		Off (0) or On (1)			Off (0)	RW	Bit		NC			
10.033	Drive Reset		Off (0) or On (1)			Off (0)	RW	Bit		NC			
10.034	Number Of Auto-reset Attempts		None (0), 1, 2, 3, 4, 5, Infinite (6)			None (0)	RW	Txt					US
10.035	Auto-reset Delay		0.0 to 600.0 s			1.0 s	RW	Num					US
10.036	Auto-reset Hold Drive ok		Off (0) or On (1)			Off (0)	RW	Bit					US
10.037	Action On Trip Detection		00000 to 11111			00000	RW	Bin					US
10.038	User Trip		0 to 255				RW	Num	ND	NC			
10.039	Braking Resistor Thermal Accumulator		0.0 to 100.0 %				RO	Num	ND	NC	PT		
10.040	Status Word		0000000000000000 to 1111111111111111				RO	Bin	ND	NC	PT		
10.041	Trip 0 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	
10.042	Trip 0 Time		00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS	
10.043	Trip 1 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	
10.044	Trip 1 Time		00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS	
10.045	Trip 2 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	
10.046	Trip 2 Time		00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS	
10.047	Trip 3 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	
10.048	Trip 3 Time		00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS	
10.049	Trip 4 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	
10.050	Trip 4 Time		00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS	
10.051	Trip 5 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	
10.052	Trip 5 Time		00:00:00 to 23:59:59				RO	Time	ND	NC	PT	PS	
10.053	Trip 6 Date		00-00-00 to 31-12-99				RO	Date	ND	NC	PT	PS	

Parameter		Range(⇅)		Default(⇒)			Type								
		OL	RFC-A / S	OL	RFC-A	RFC-S									
10.054	Trip 6 Time	00:00:00 to 23:59:59		See Table 11-5			RO	Time	ND	NC	PT	PS			
10.055	Trip 7 Date	00-00-00 to 31-12-99					RO	Date	ND	NC	PT	PS			
10.056	Trip 7 Time	00:00:00 to 23:59:59					RO	Time	ND	NC	PT	PS			
10.057	Trip 8 Date	00-00-00 to 31-12-99					RO	Date	ND	NC	PT	PS			
10.058	Trip 8 Time	00:00:00 to 23:59:59					RO	Time	ND	NC	PT	PS			
10.059	Trip 9 Date	00-00-00 to 31-12-99					RO	Date	ND	NC	PT	PS			
10.060	Trip 9 Time	00:00:00 to 23:59:59					RO	Time	ND	NC	PT	PS			
10.061	Braking Resistor Resistance	0.00 to 10000.00 Ω					See Table 11-5			RW	Num				US
10.062	Low Load Detected Alarm	Off (0) or On (1)					Off (0)			RO	Bit	ND	NC	PT	
10.063	Local Keypad Battery Low	Off (0) or On (1)								RO	Bit	ND	NC	PT	
10.064	Remote Keypad Battery Low	Off (0) or On (1)		RO	Bit	ND				NC	PT				
10.065	Auto-tune Active	Off (0) or On (1)		RO	Bit	ND				NC	PT				
10.066	Limit Switch Active	Off (0) or On (1)		RO	Bit	ND				NC	PT				
10.068	Hold Drive OK On Under Voltage	Off (0) or On (1)		Off (0)			RW	Bit				US			
10.069	Additional Status Bits	000000000 to 111111111		Off (0)			RO	Bin	ND	NC	PT				
10.070	Trip 0 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.071	Trip 1 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.072	Trip 2 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.073	Trip 3 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.074	Trip 4 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.075	Trip 5 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.076	Trip 6 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.077	Trip 7 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.078	Trip 8 Sub-trip Number	0 to 65535					RO	Num	ND	NC	PT	PS			
10.079	Trip 9 Sub-trip Number	0 to 65535		RO	Num	ND	NC	PT	PS						
10.080	Stop Motor	Off (0) or On (1)		Off (0)			RO	Bit	ND	NC	PT				
10.081	Phase Loss	Off (0) or On (1)					RO	Bit	ND	NC	PT				
10.101	Drive Status	Inhibit (0), Ready (1), Stop (2), Scan (3), Run (4), Supply Loss (5), Deceleration (6), dc Injection (7), Position (8), Trip (9), Active (10), Off (11), Hand (12), Auto (13), Heat (14), Under Voltage (15), Phasing (16)					RO	Txt	ND	NC	PT				
10.102	Trip Reset Source	0 to 1023					RO	Num	ND	NC	PT	PS			
10.103	Trip Time Identifier	-2147483648 to 2147483647 ms					RO	Num	ND	NC	PT				
10.104	Active Alarm	None (0), Brake Resistor (1), Motor Overload (2), Ind Overload (3), Drive Overload (4), Auto Tune (5), Limit Switch (6), Fire Mode (7), Low Load (8), Option Slot 1 (9), Option Slot 2 (10), Option Slot 3 (11), Option Slot 4 (12)					RO	Txt	ND	NC	PT				
10.106	Potential Drive Damage Conditions	0000 to 1111					RO	Bin	ND	NC	PT	PS			

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number

Table 11-5 Defaults for Pr 10.030, Pr 10.031 and Pr 10.061

Drive size	Pr 10.030	Pr 10.031	Pr 10.061
3	50 W	3.3 s	75 Ω
4 and 5	100 W	2.0 s	38 Ω
All other ratings and frame sizes	0.000		0.00

11.11 Menu 11: General drive set-up

Parameter	Range(⇅)		Default(⇄)			Type								
	OL	RFC-A / S	OL	RFC-A	RFC-S									
11.001	Option Synchronisation Select		Not Active (0), Slot 1 (1), Slot 2 (2), Slot 3 (3), Slot 4 (4), Automatic (5)			Slot 4 (4)			RW	Txt				US
11.002	Option synchronisation Active		Not Active (0), Slot 1 (1), Slot 2 (2), Slot 3 (3), Slot 4 (4)						RO	Txt	ND	NC	PT	
11.018	Status Mode Parameter 1		0.000 to 59.999			0.000			RW	Num			PT	US
11.019	Status Mode Parameter 2		0.000 to 59.999			0.000			RW	Num			PT	US
11.020	Reset Serial Communications		Off (0) or On (1)						RW	Bit	ND	NC		
11.021	Parameter 00.030 Scaling		0.000 to 10.000			1.000			RW	Num				US
11.022	Parameter Displayed At Power-up		0.000 to 0.080			0.010			RW	Num				US
11.023	Serial Address		1 to 247			1			RW	Num				US
11.024	Serial Mode		8 2 NP (0), 8 1 NP (1), 8 1 EP (2), 8 1 OP (3), 8 2 NP M (4), 8 1 NP M (5), 8 1 EP M (6), 8 1 OP M (7), 7 2 NP (8), 7 1 NP (9), 7 1 EP (10), 7 1 OP (11), 7 2 NP M (12), 7 1 NP M (13), 7 1 EP M (14), 7 1 OP M (15)			8 2 NP (0)			RW	Txt				US
11.025	Serial Baud Rate		300 (0), 600 (1), 1200 (2), 2400 (3), 4800 (4), 9600 (5), 19200 (6), 38400 (7), 57600 (8), 76800 (9), 115200 (10)			19200 (6)			RW	Txt				US
11.026	Minimum Comms Transmit Delay		0 to 250 ms			2 ms			RW	Num				US
11.027	Silent Period		0 to 250 ms			0 ms			RW	Num				US
11.028	Drive Derivative		0 to 255						RO	Num	ND	NC	PT	
11.029	Software Version		00.00.00.00 to 99.99.99.99						RO	Num	ND	NC	PT	
11.030	User Security Code		0 to 2147483647						RW	Num	ND	NC	PT	US
11.031	User Drive Mode		Open-loop (1), RFC-A (2), RFC-S (3), Regen (4)			Open-loop (1)	RFC-A (2)	RFC-S (3)	RW	Txt	ND	NC	PT	
11.032	Maximum Heavy Duty Rating		0.000 to 99999.999						RO	Num	ND	NC	PT	
11.033	Drive Rated Voltage		200 V (0), 400 V (1), 575 V (2), 690 V (3)						RO	Txt	ND	NC	PT	
11.034	Software Sub-version		0 to 99						RO	Num	ND	NC	PT	
11.035	Number Of Power Modules Test		-1 to 20			-1			RW	Num				US
11.036	NV Media Card File Previously Loaded		0 to 999			0			RO	Num		NC	PT	
11.037	NV Media Card File Number		0 to 999			0			RW	Num				
11.038	NV Media Card File Type		None (0), Open-loop (1), RFC-A (2), RFC-S (3), Regen (4), User Prog (5), Option App (6)						RO	Txt	ND	NC	PT	
11.039	NV Media Card File Version		0 to 9999						RO	Num	ND	NC	PT	
11.040	NV Media Card File Checksum		-2147483648 to 2147483647						RO	Num	ND	NC	PT	
11.042	Parameter Cloning		None (0), Read (1), Program (2), Auto (3), Boot (4)			None (0)			RW	Txt		NC		US
11.043	Load Defaults		None (0), Standard (1), US (2)						RW	Txt		NC		
11.044	User Security Status		Menu 0 (0), All Menus (1), Read-only Menu 0 (2), Read-only (3), Status Only (4), No Access (5)			Menu 0 (0)			RW	Txt	ND		PT	
11.045	Select Motor 2 Parameters		Motor 1 (0) or Motor 2 (1)			Motor 1 (0)			RW	Txt				US
11.046	Defaults Previously Loaded		0 to 2000						RO	Num	ND	NC	PT	US
11.047	Onboard User Program: Enable		Stop (0) or Run (1)			Run (1)			RW	Txt				US
11.048	Onboard User Program: Status		-2147483648 to 2147483647						RO	Num	ND	NC	PT	
11.049	Onboard User Program: Programming Events		0 to 65535						RO	Num	ND	NC	PT	
11.050	Onboard User Program: Freewheeling Tasks Per Second		0 to 65535						RO	Num	ND	NC	PT	
11.051	Onboard User Program: Clock Task Time Used		0.0 to 100.0 %						RO	Num	ND	NC	PT	
11.052	Serial Number LS		000000000 to 999999999						RO	Num	ND	NC	PT	
11.053	Serial Number MS		0 to 999999999						RO	Num	ND	NC	PT	
11.054	Drive Date Code		0 to 65535						RO	Num	ND	NC	PT	
11.055	Onboard User Program: Clock Task Scheduled Interval		0 to 262140 ms						RO	Num	ND	NC	PT	
11.056	Option Slot Identifiers		1234 (0), 1243 (1), 1324 (2), 1342 (3), 1423 (4), 1432 (5), 4123 (6), 3124 (7), 4132 (8), 2134 (9), 3142 (10), 2143 (11), 3412 (12), 4312 (13), 2413 (14), 4213 (15), 2314 (16), 3214 (17), 2341 (18), 2431 (19), 3241 (20), 3421 (21), 4231 (22), 4321 (23)			1234 (0)			RW	Txt			PT	
11.060	Maximum Rated Current		0.000 to 99999.999						RO	Num	ND	NC	PT	
11.061	Full Scale Current Kc		0.000 to 99999.999						RO	Num	ND	NC	PT	
11.063	Product Type		0 to 255						RO	Num	ND	NC	PT	
11.064	Product Identifier Characters		M600	(1295396912) to	(2147483647)	M600			RO	Chr	ND	NC	PT	

Parameter	Range(⇅)		Default(⇄)			Type									
	OL	RFC-A / S	OL	RFC-A	RFC-S										
11.065	Drive Rating And Configuration		00000000 to 999999999			RO	Num	ND	NC	PT					
11.066	Power Stage Identifier		0 to 255			RO	Num	ND	NC	PT					
11.067	Control Board Identifier		0.000 to 65.535			RO	Num	ND	NC	PT					
11.068	Internal I/O Identifier		0 to 255			RO	Num	ND	NC	PT					
11.069	Position Feedback Interface Identifier		0 to 255			RO	Num	ND	NC	PT					
11.070	Core Parameter Database Version		0.00 to 99.99			RO	Num	ND	NC	PT					
11.071	Number Of Power Modules Detected		0 to 20			RO	Num	ND	NC	PT	US				
11.072	NV Media Card Create Special File		0 to 1						0	RW	Num		NC		
11.073	NV Media Card Size		None (0), SMART Card (1), SD Card (2)			RO	Num	ND	NC	PT					
11.075	NV Media Card Read-only Flag		Off (0) or On (1)			RO	Bit	ND	NC	PT					
11.076	NV Media Card Warning Suppression Flag		Off (0) or On (1)			RO	Bit	ND	NC	PT					
11.077	NV Media Card File Required Version		0 to 9999			RW	Num	ND	NC	PT					
11.079	Drive Name Characters 1-4		(-2147483648) to (2147483647)		(0)	RW	Chr			PT	US				
11.080	Drive Name Characters 5-8		(-2147483648) to (2147483647)		(0)	RW	Chr			PT	US				
11.081	Drive Name Characters 9-12		(-2147483648) to (2147483647)		(0)	RW	Chr			PT	US				
11.082	Drive Name Characters 13-16		(-2147483648) to (2147483647)		(0)	RW	Chr			PT	US				
11.084	Drive Mode		Open-loop (1), RFC-A (2), RFC-S (3), Regen (4)			RO	Txt	ND	NC	PT	US				
11.085	Security Status		None (0), Read-only (1), Status-only (2), No Access (3)			RO	Txt	ND	NC	PT	PS				
11.086	Menu Access Status		Menu 0 (0) or All Menus (1)			RO	Txt	ND	NC	PT	PS				
11.090	Keypad Port Serial Address		1 to16						1	RW	Num				US
11.091	Product Identifier Characters 1		(-2147483648) to (2147483647)			RO	Chr	ND	NC	PT					
11.092	Product Identifier Characters 2		(-2147483648) to (2147483647)			RO	Chr	ND	NC	PT					
11.093	Product Identifier Characters 3		(-2147483648) to (2147483647)			RO	Chr	ND	NC	PT					

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	Fl	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination
IP	IP address	Mac	Mac address	Date	Date parameter	Time	Time parameter	SMP	Slot,menu,parameter	Chr	Character parameter	Ver	Version number

11.12 Menu 12: Threshold detectors, variable selectors and brake control function

Figure 11-20 Menu 12 logic diagram


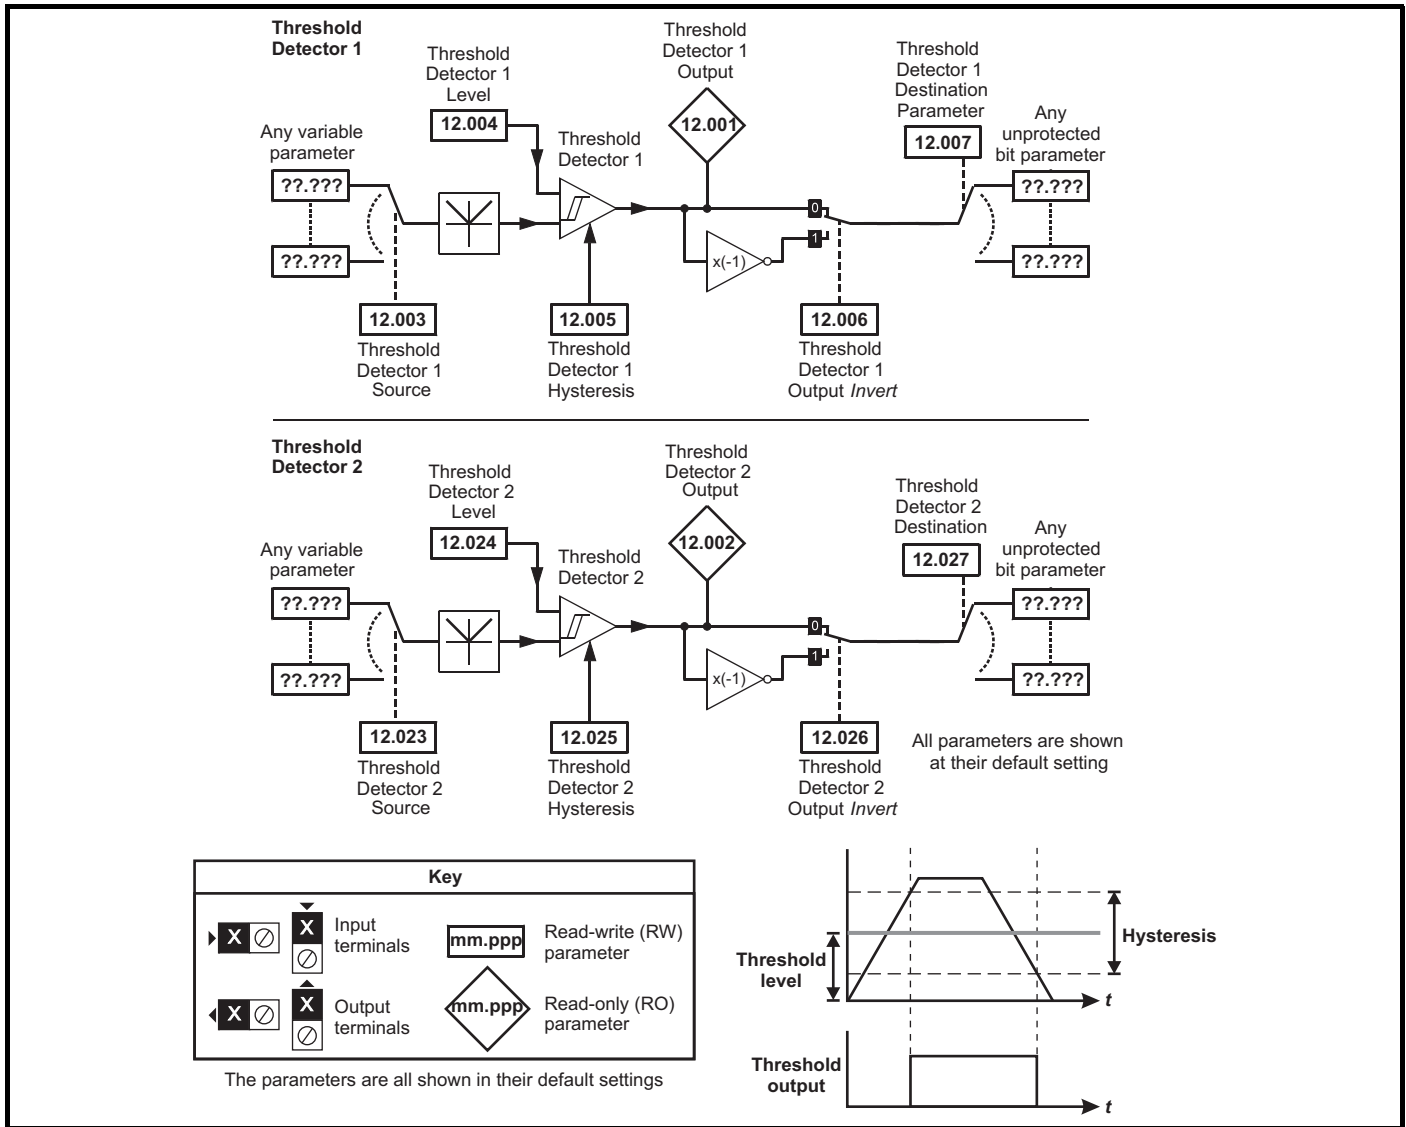


Figure 11-21 Menu 12 logic diagram (continued)





The brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.

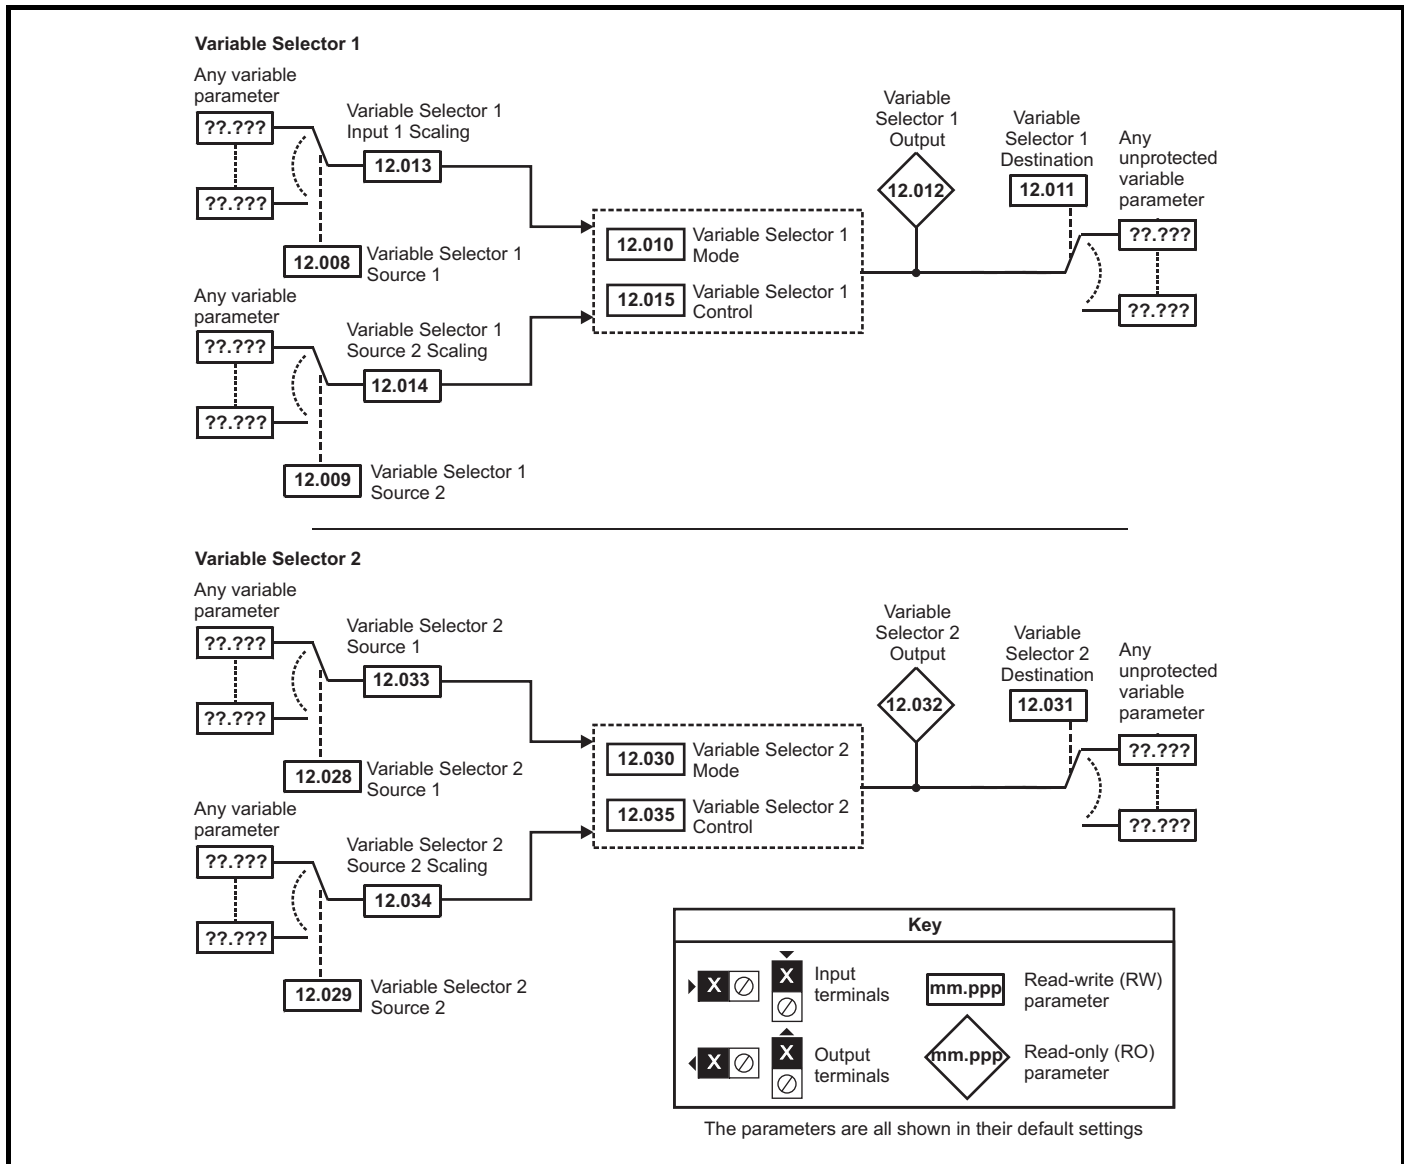

The control terminal relay can be selected as an output to release a brake. If a drive is set up in this manner and a drive replacement takes place, prior to programming the drive on initial power up, the brake may be released. When drive terminals are programmed to non default settings the result of incorrect or delayed programming must be considered. The use of a NV media card in boot mode can ensure drive parameters are immediately programmed to avoid this situation.

Figure 11-22 Open-loop brake function


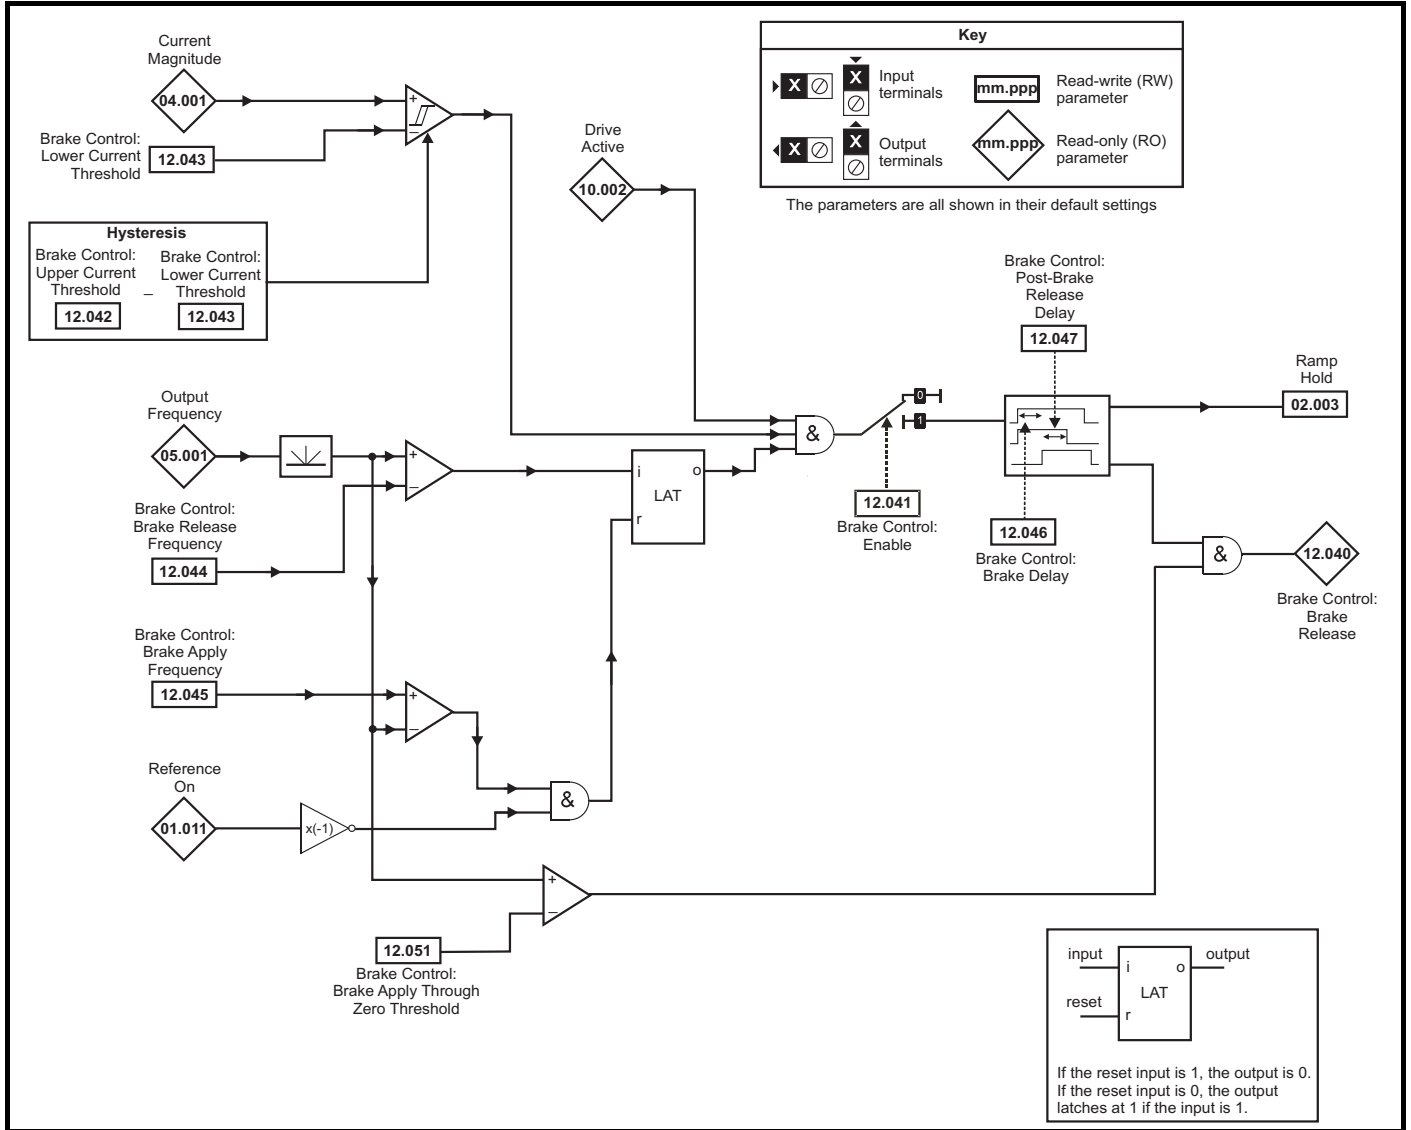


Figure 11-23 Open-loop brake sequence





The brake control functions are provided to allow well co-ordinated operation of an external brake with the drive. While both hardware and software are designed to high standards of quality and robustness, they are not intended for use as safety functions, i.e. where a fault or failure would result in a risk of injury. In any application where the incorrect operation of the brake release mechanism could result in injury, independent protection devices of proven integrity must also be incorporated.

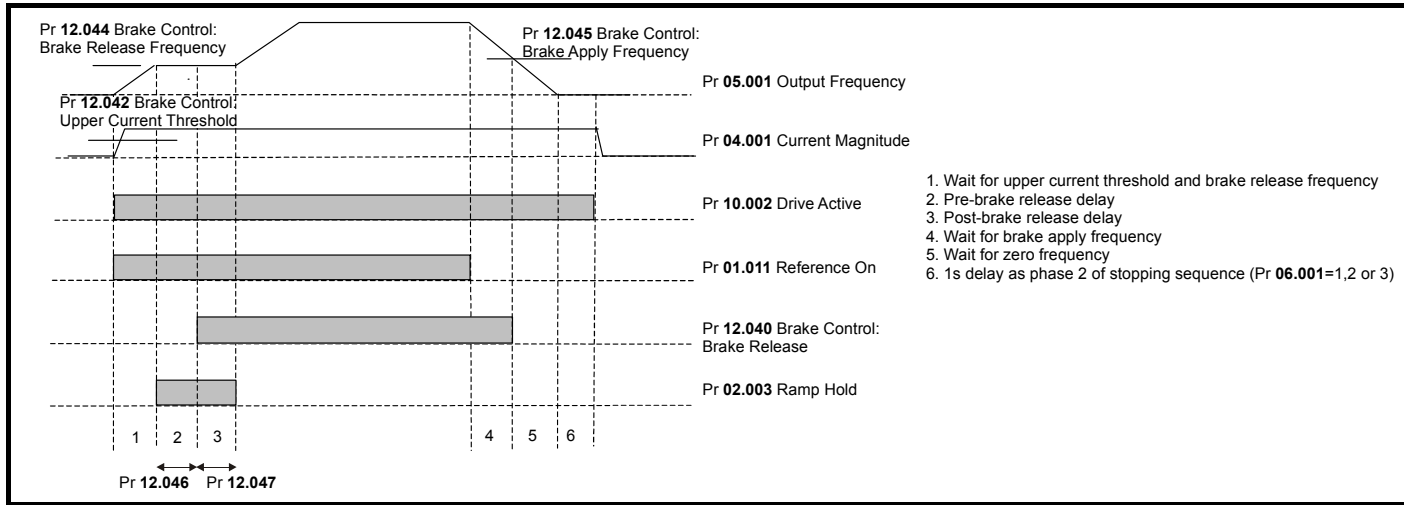

The control terminal relay can be selected as an output to release a brake. If a drive is set up in this manner and a drive replacement takes place, prior to programming the drive on initial power up, the brake may be released. When drive terminals are programmed to non default settings the result of incorrect or delayed programming must be considered. The use of a NV media card in boot mode can ensure drive parameters are immediately programmed to avoid this situation.

Figure 11-24 RFC-A mode with brake controller mode (12.052) =1


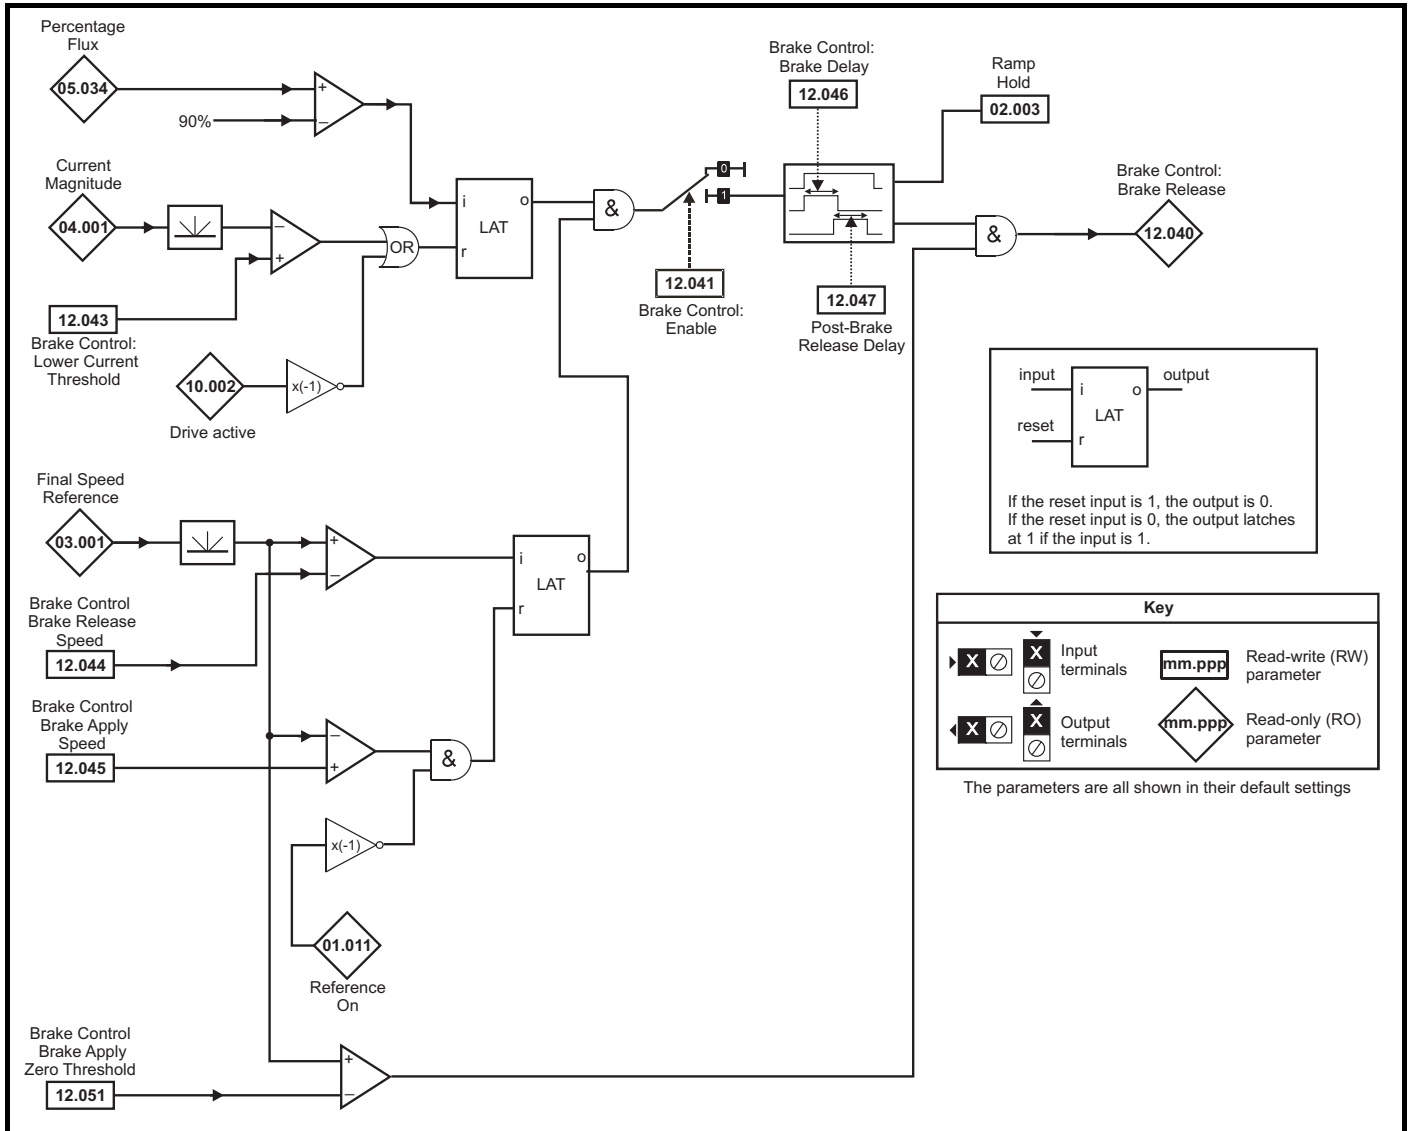


Figure 11-25 RFC-A brake sequence

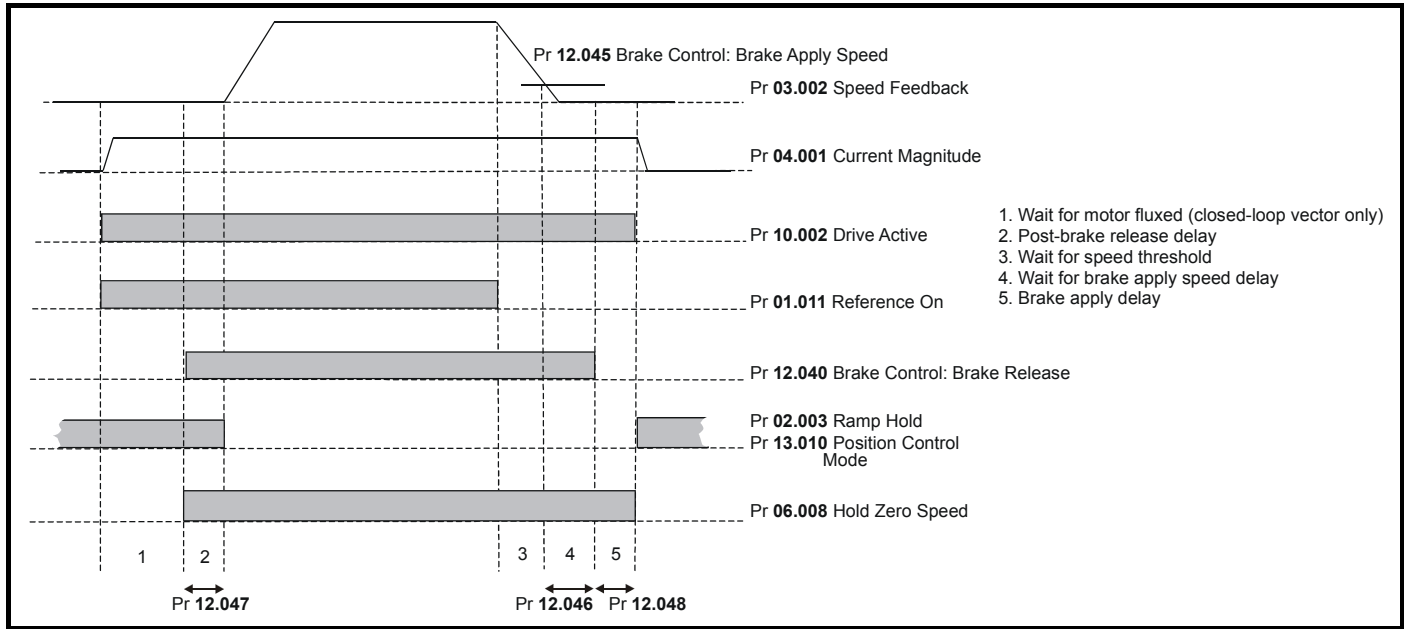


Parameter		Range(⇅)		Default(⇄)			Type							
		OL	RFC- A / S	OL	RFC-A	RFC-S								
12.001	Threshold Detector 1 Output	Off (0) or On (1)					RO	Bit	ND	NC	PT			
12.002	Threshold Detector 2 Output	Off (0) or On (1)					RO	Bit	ND	NC	PT			
12.003	Threshold Detector 1 Source	0.000 to 59.999				0.000	RW	Num			PT	US		
12.004	Threshold Detector 1 Level	0.00 to 100.00 %				0.00 %	RW	Num					US	
12.005	Threshold Detector 1 Hysteresis	0.00 to 25.00 %				0.00 %	RW	Num					US	
12.006	Threshold Detector 1 Output Invert	Off (0) or On (1)				Off (0)	RW	Bit					US	
12.007	Threshold Detector 1 Destination	0.000 to 59.999				0.000	RW	Num	DE		PT	US		
12.008	Variable Selector 1 Source 1					0.000	RW	Num				PT	US	
12.009	Variable Selector 1 Source 2					0.000	RW	Num				PT	US	
12.010	Variable Selector 1 Mode	Input 1 (0), Input 2 (1), Add (2), Subtract (3), Multiply (4), Divide (5), Time Const (6), Ramp (7), Modulus (8), Powers (9), Sectional (10)				Input 1 (0)	RW	Txt					US	
12.011	Variable Selector 1 Destination	0.000 to 59.999				0.000	RW	Num	DE		PT	US		
12.012	Variable Selector 1 Output	±100.00 %					RO	Num	ND	NC	PT			
12.013	Variable Selector 1 Source 1 Scaling	±4.000				1.000	RW	Num					US	
12.014	Variable Selector 1 Source 2 Scaling	±4.000				1.000	RW	Num					US	
12.015	Variable Selector 1 Control	0.00 to 100.00				0.00	RW	Num					US	
12.016	Variable Selector 1 Enable	Off (0) or On (1)				On (1)	RW	Bit					US	
12.023	Threshold Detector 2 Source	0.000 to 59.999				0.000	RW	Num			PT	US		
12.024	Threshold Detector 2 Level	0.00 to 100.00 %				0.00 %	RW	Num					US	
12.025	Threshold Detector 2 Hysteresis	0.00 to 25.00 %				0.00 %	RW	Num					US	
12.026	Threshold Detector 2 Output Invert	Off (0) or On (1)				Off (0)	RW	Bit					US	
12.027	Threshold Detector 2 Destination	0.000 to 59.999				0.000	RW	Num	DE		PT	US		
12.028	Variable Selector 2 Source 1	0.000 to 59.999				0.000	RW	Num			PT	US		
12.029	Variable Selector 2 Source 2	0.000 to 59.999				0.000	RW	Num			PT	US		
12.030	Variable Selector 2 Mode	Input 1 (0), Input 2 (1), Add (2), Subtract (3), Multiply (4), Divide (5), Time Const (6), Ramp (7), Modulus (8), Powers (9), Sectional (10)				Input 1 (0)	RW	Txt					US	
12.031	Variable Selector 2 Destination	0.000 to 59.999				0.000	RW	Num	DE		PT	US		
12.032	Variable Selector 2 Output	±100.00 %					RO	Num	ND	NC	PT			
12.033	Variable Selector 2 Source 1 Scaling	±4.000				1.000	RW	Num					US	
12.034	Variable Selector 2 Source 2 Scaling	±4.000				1.000	RW	Num					US	
12.035	Variable Selector 2 Control	0.00 to 100.00				0.00	RW	Num					US	
12.036	Variable Selector 2 Enable	Off (0) or On (1)				On (1)	RW	Bit					US	
12.040	Brake Control: Brake Release	Off (0) or On (1)					RO	Bit	ND	NC	PT			
12.041	Brake Control: Enable	Off (0) or On (1)				Off (0)	RW	Bit					US	
12.042	Brake Control: Upper Current Threshold	0 to 200 %		50 %			RW	Num					US	
12.043	Brake Control: Lower Current Threshold	0 to 200 %				10 %	RW	Num					US	
12.044	OL: Brake Control: Brake Release Frequency	0.0 to 20.0 Hz				1.0 Hz	RW	Num					US	
	RFC-A: Brake Control: Brake Release Speed		0 to 200 rpm			10 rpm	RW	Num					US	
12.045	OL: Brake Control: Brake Apply Frequency	0.0 to 20.0 Hz				2.0 Hz	RW	Num					US	
	RFC-A/S: Brake Control: Brake Apply Speed		0 to 200 rpm			5 rpm	RW	Num					US	
12.046	Brake Control: Brake Delay	0.0 to 25.0 s				1.0 s	RW	Num					US	
12.047	Brake Control: Post-brake Release Delay	0.0 to 25.0 s				1.0 s	RW	Num					US	
12.048	Brake Control: Brake Apply Delay		0.0 to 25.0 s			1.0 s	RW	Num					US	
12.049	Brake Control: Enable Position Control During Brake Release	Off (0) or On (1)				Off (0)	RW	Bit					US	
12.050	Brake Control: Initial Direction	Ref (0), Forward (1), Reverse (2)				Ref (0)	RW	Txt					US	
12.051	Brake Control: Brake Apply Through Zero Threshold	0.0 to 25.0 Hz	0 to 250 rpm	0.0 Hz	0 rpm		RW	Num					US	
12.052	Brake Control: Mode	Off (0) or On (1)				On (1)	RW	Bit					US	


RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card Operation	Onboard PLC	Advanced parameters	Technical data	Diagnostics	UL listing information
--------------------	---------------------	-------------------------	-------------------------	-----------------	------------------	-------------------	--------------	-------------------------	-------------	----------------------------	----------------	-------------	------------------------

11.13 Menu 13: Standard motion controller

Figure 11-26 Menu 13 logic diagram

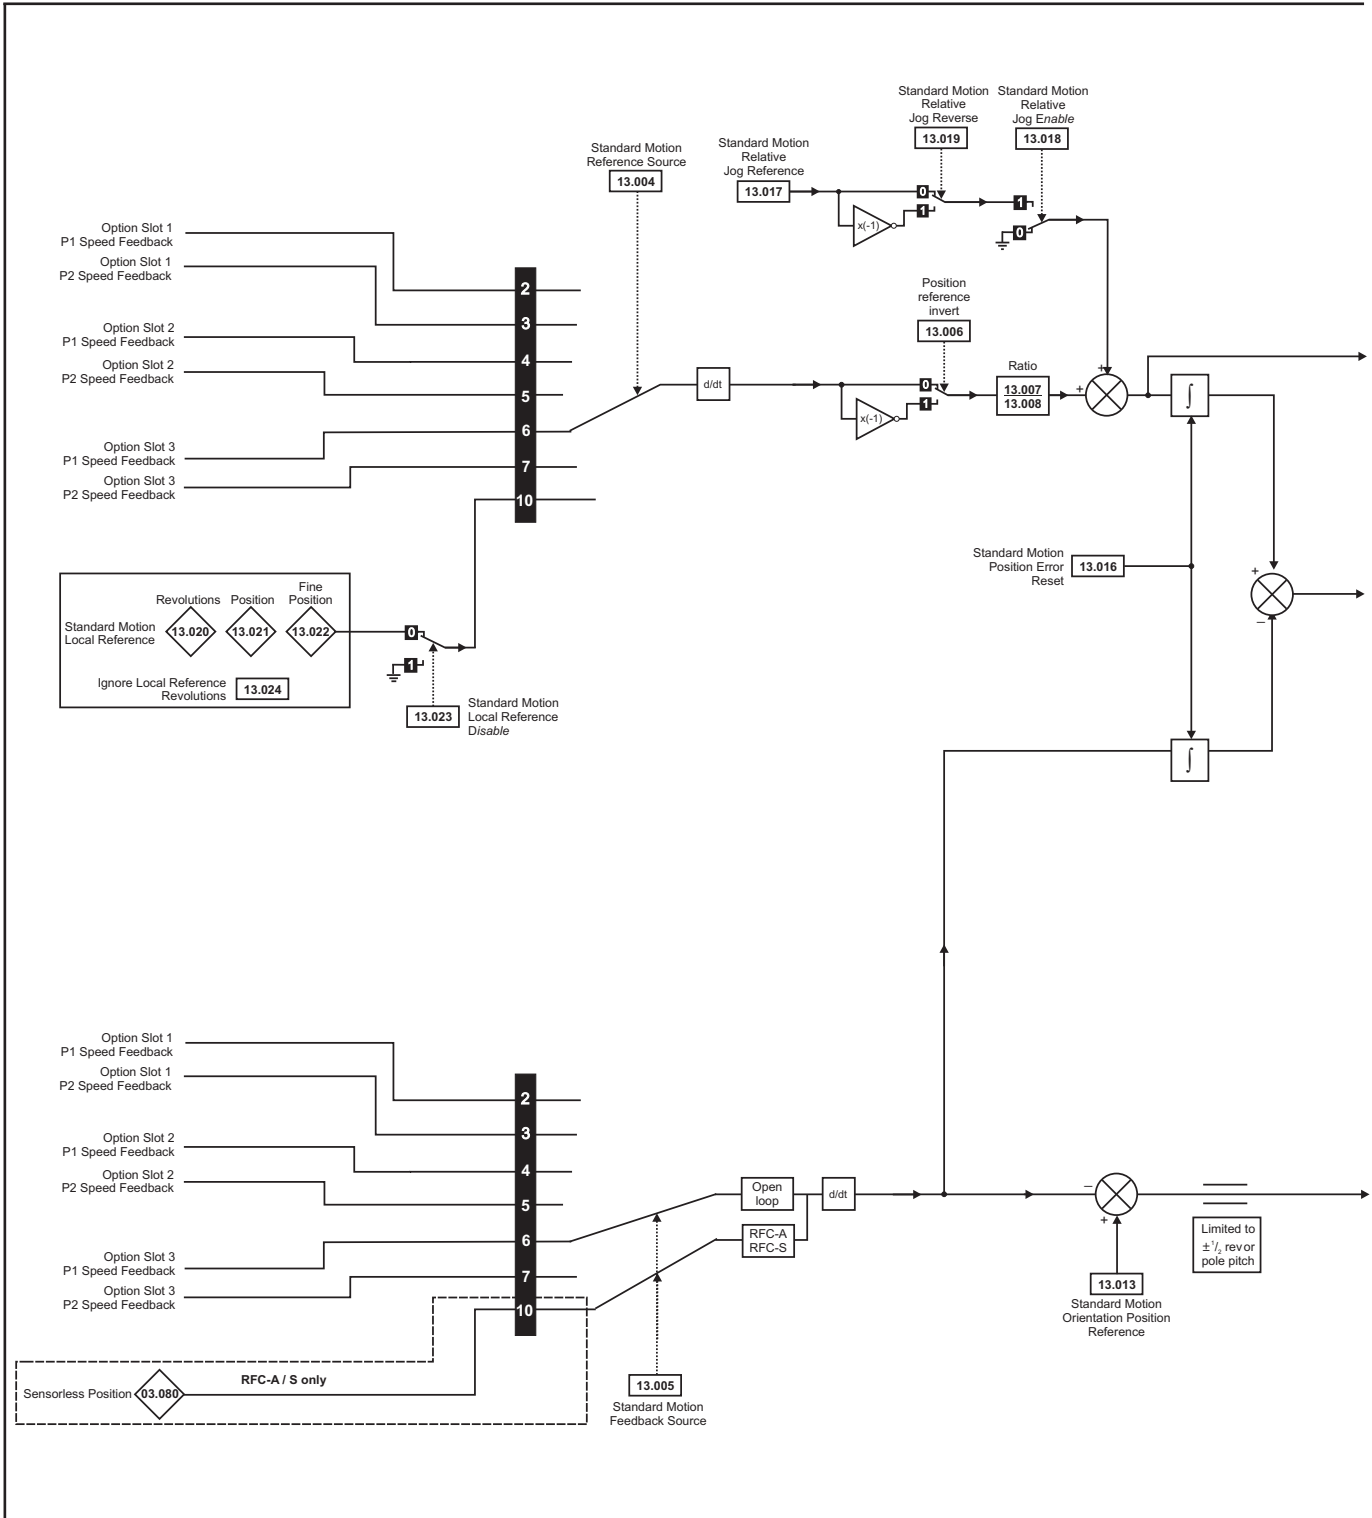

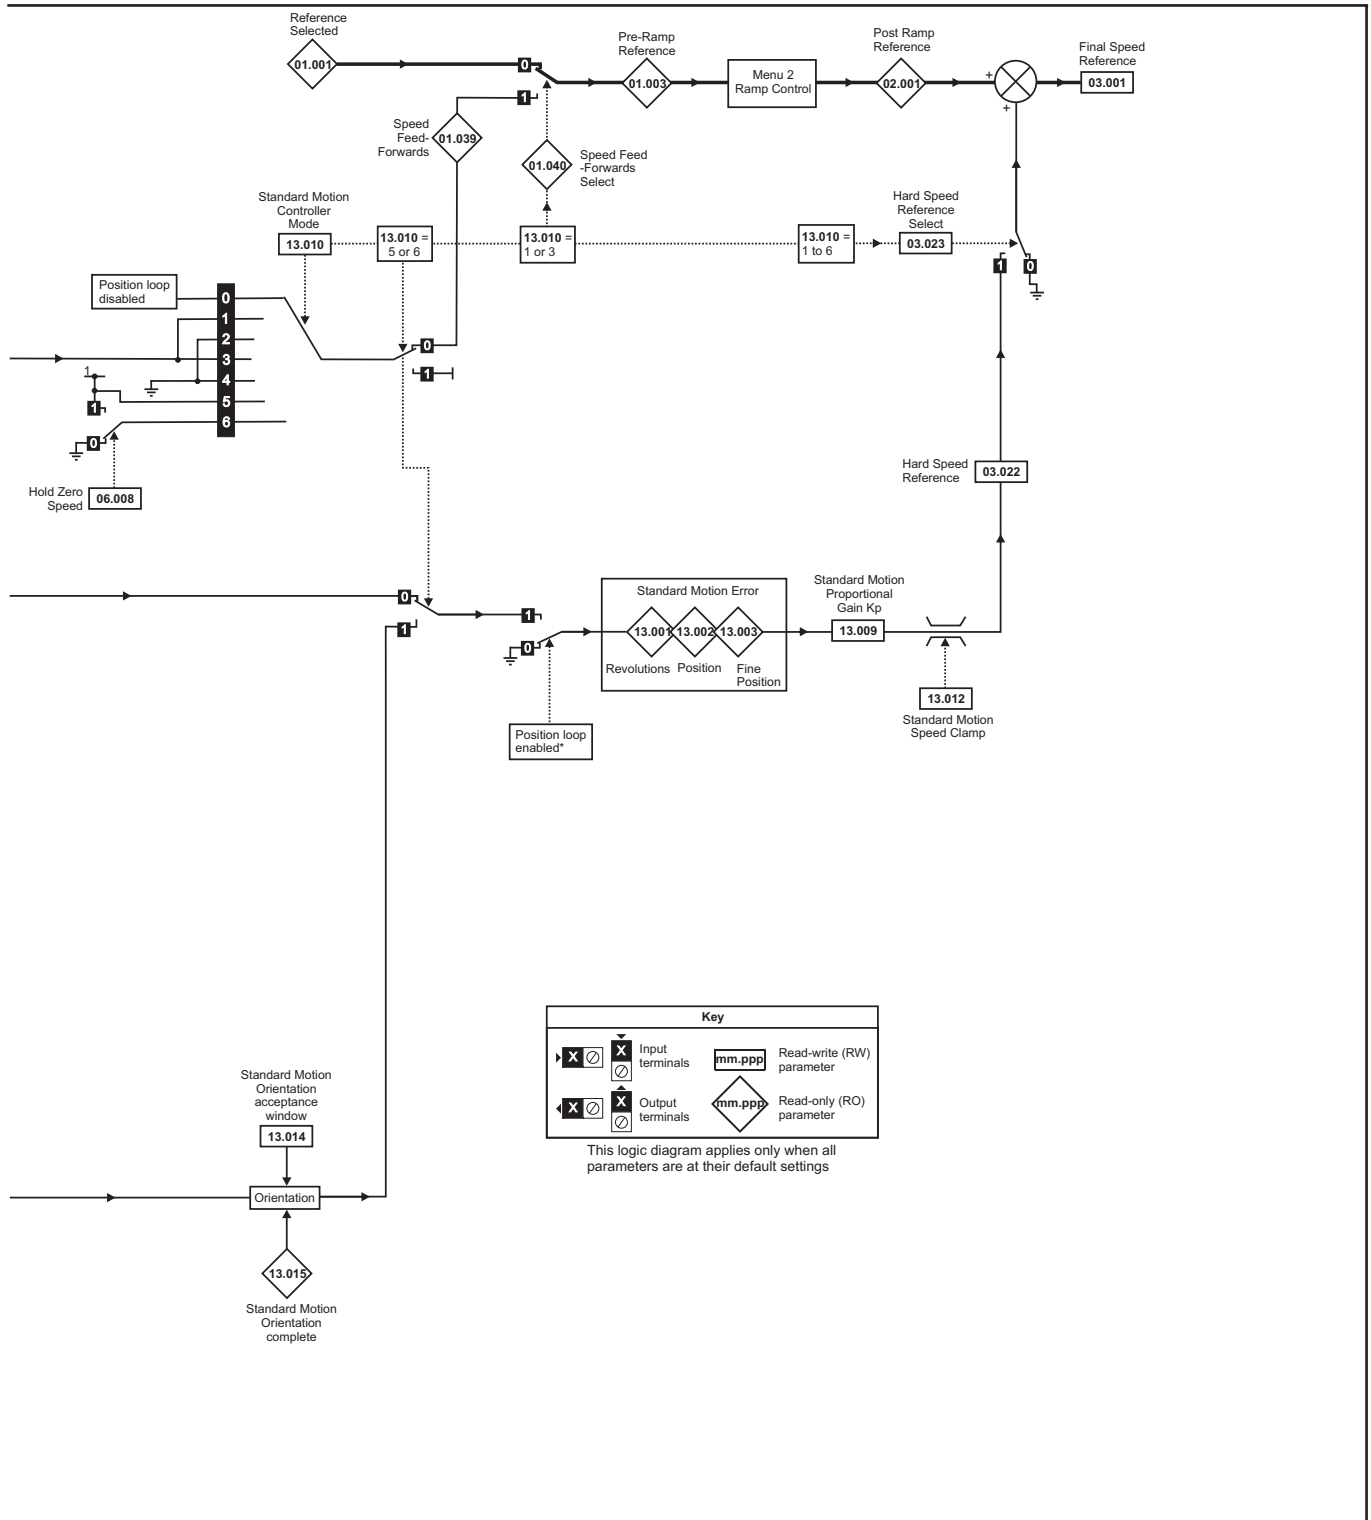

*The position controller is disabled and the error integrator is also reset under the following conditions:


1. If the drive is disabled (i.e. inhibited, ready or tripped)
2. If the position controller mode (Pr **13.010**) is changed. The position controller is disabled transiently to reset the error integrator.
3. The absolute mode parameter (Pr **13.011**) is changed. The position controller is disabled transiently to reset the error integrator.
4. One of the position sources is invalid.
5. The position feedback initialized parameter (Pr **03.048**) is zero.


Parameter	Range(φ)		Default(⇒)			Type								
	OL	RFC-A / S	OL	RFC-A	RFC-S									
13.001	Standard Motion Revolutions Error	-32768 to 32767 revs								RO	Num	ND	NC	PT
13.002	Standard Motion Position Error	-32768 to 32767								RO	Num	ND	NC	PT
13.003	Standard Motion Fine Position Error	-32768 to 32767								RO	Num	ND	NC	PT
13.004	Standard Motion Reference Source	P1 Slot 1 (2), P2 Slot 1 (3), P1 Slot 2 (4), P2 Slot 2 (5), P1 Slot 3 (6), P2 Slot 3 (7), Local (10)		P1 Slot 3 (6)			RW	Txt						US
13.005	Standard Motion Feedback Source	(1), P1 Slot 1 (2), P2 Slot 1 (3), P1 Slot 2 (4), P2 Slot 2 (5), P1 Slot 3 (6), P2 Slot 3 (7)	P1 Slot 1 (2), P2 Slot 1 (3), P1 Slot 2 (4), P2 Slot 2 (5), P1 Slot 3 (6), P2 Slot 3 (7), Sensorless (10)	P1 Slot 3 (6)	Sensorless (10)		RW	Txt						US
13.006	Standard Motion Reference Invert	Off (0) or On (1)		Off (0)			RW	Bit						
13.007	Standard Motion Ratio Numerator	0.000 to 10.000		1.000			RW	Num						US
13.008	Standard Motion Ratio Denominator	0.000 to 4.000		1.000			RW	Num						US
13.009	Standard Motion Proportional Gain Kp	0.00 to 100.00		25.00			RW	Num						US
13.010	Standard Motion Controller Mode	Disabled (0), Rigid Spd FF (1), Rigid (2), Non-rigid Spd FF (3), Non-rigid (4)	Disabled (0), Rigid Spd FF (1), Rigid (2), Non-rigid Spd FF (3), Non-rigid (4), Orientate Stop (5), Orientate (6)	Disabled (0)			RW	Num						US
13.011	Standard Motion Absolute Mode Enable	Off (0) or On (1)		Off (0)			RW	Bit						US
13.012	Standard Motion Speed Clamp	0 to 250 rpm		150 rpm			RW	Num						US
13.013	Standard Motion Orientation Position Reference	0 to 65535		0			RW	Num						US
13.014	Standard Motion Orientation Acceptance Window	0 to 4096		256			RW	Num						US
13.015	Standard Motion Orientation Complete	Off (0) or On (1)					RO	Bit	ND	NC	PT			
13.016	Standard Motion Position Error Reset	Off (0) or On (1)		Off (0)			RW	Bit		NC				
13.017	Standard Motion Relative Jog Reference	0.0 to 4000.0 rpm		0.0 rpm			RW	Num						US
13.018	Standard Motion Relative Jog Enable	Off (0) or On (1)		Off (0)			RW	Bit		NC				
13.019	Standard Motion Relative Jog Reverse	Off (0) or On (1)		Off (0)			RW	Bit		NC				
13.020	Standard Motion Local Reference Revolutions	0 to 65535 revs		0 revs			RW	Num		NC				
13.021	Standard Motion Local Reference Position	0 to 65535		0			RW	Num		NC				
13.022	Standard Motion Local Reference Fine Position	0 to 65535		0			RW	Num		NC				
13.023	Standard Motion Local Reference Disable	Off (0) or On (1)		Off (0)			RW	Bit		NC				
13.024	Standard Motion Ignore Local Reference Revolutions	Off (0) or On (1)		Off (0)			RW	Bit						US
13.026	Standard Motion Sample Rate	Not Active (0), 4ms (1)		Not Active (0)			RO	Txt						US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.14 Menu 14: User PID controller

Figure 11-27 Menu 14 Logic diagram

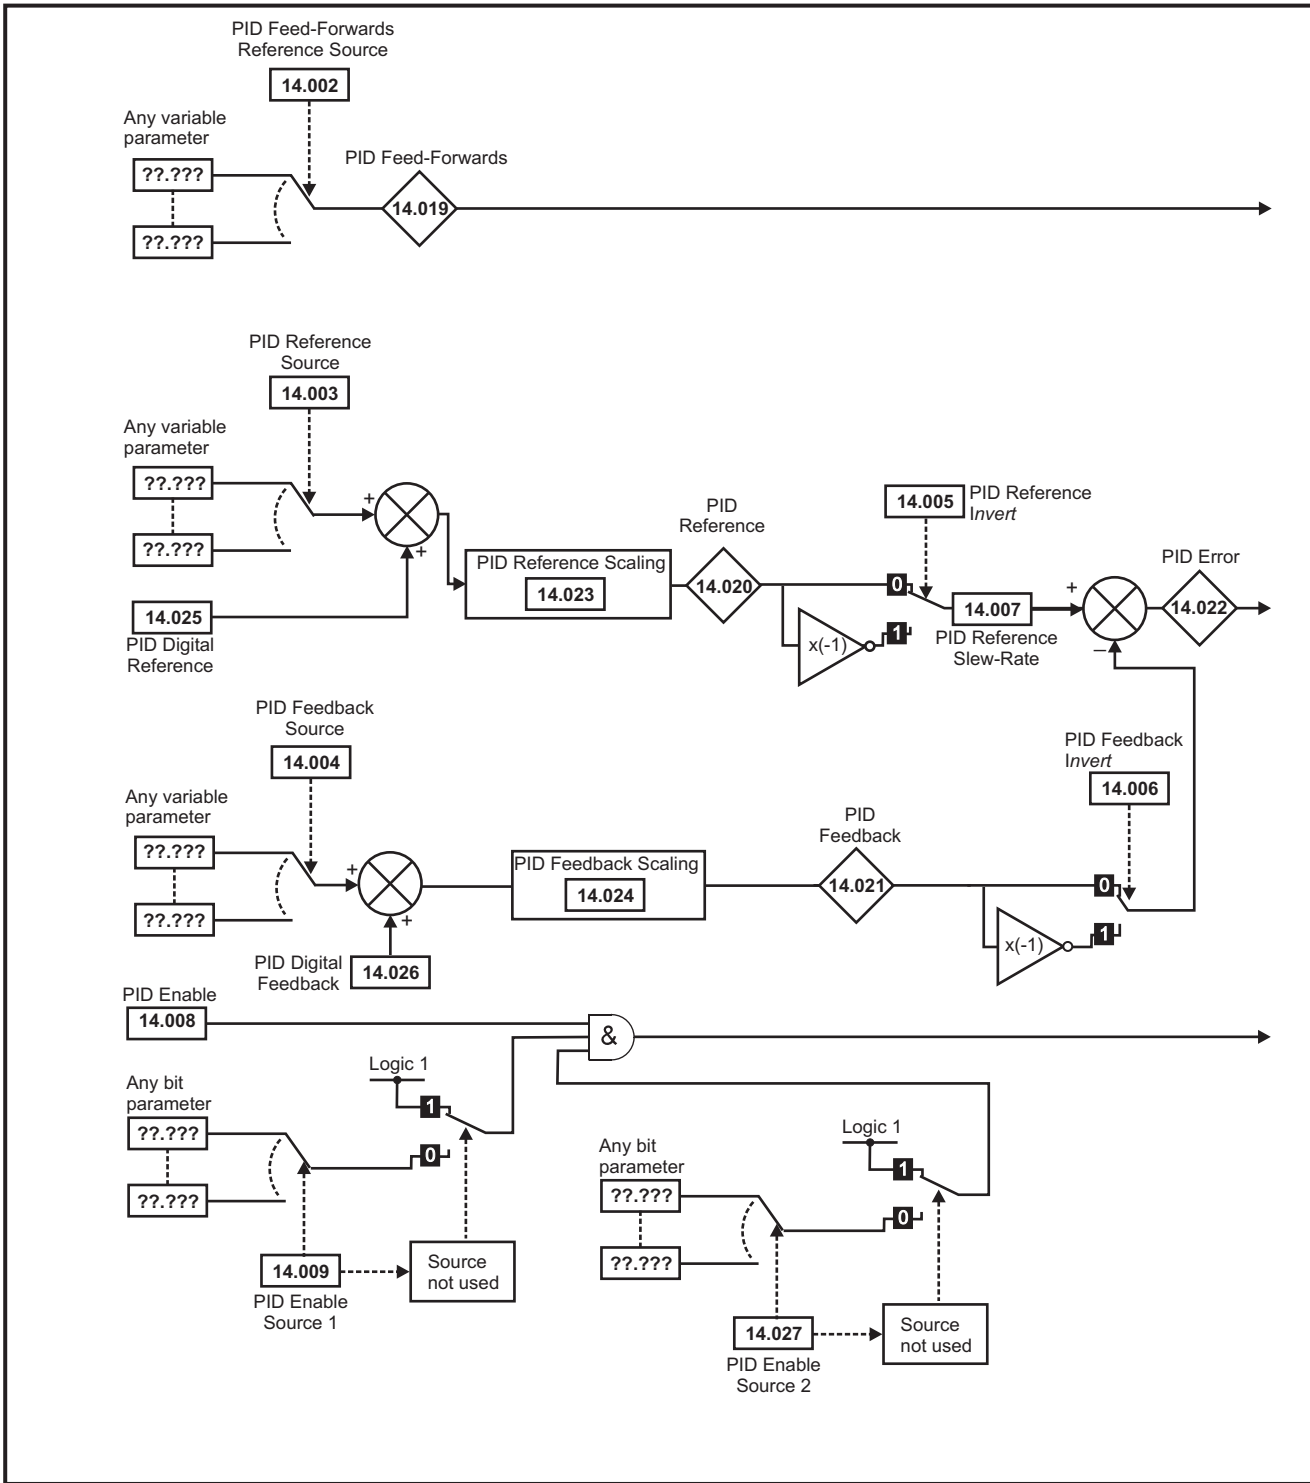

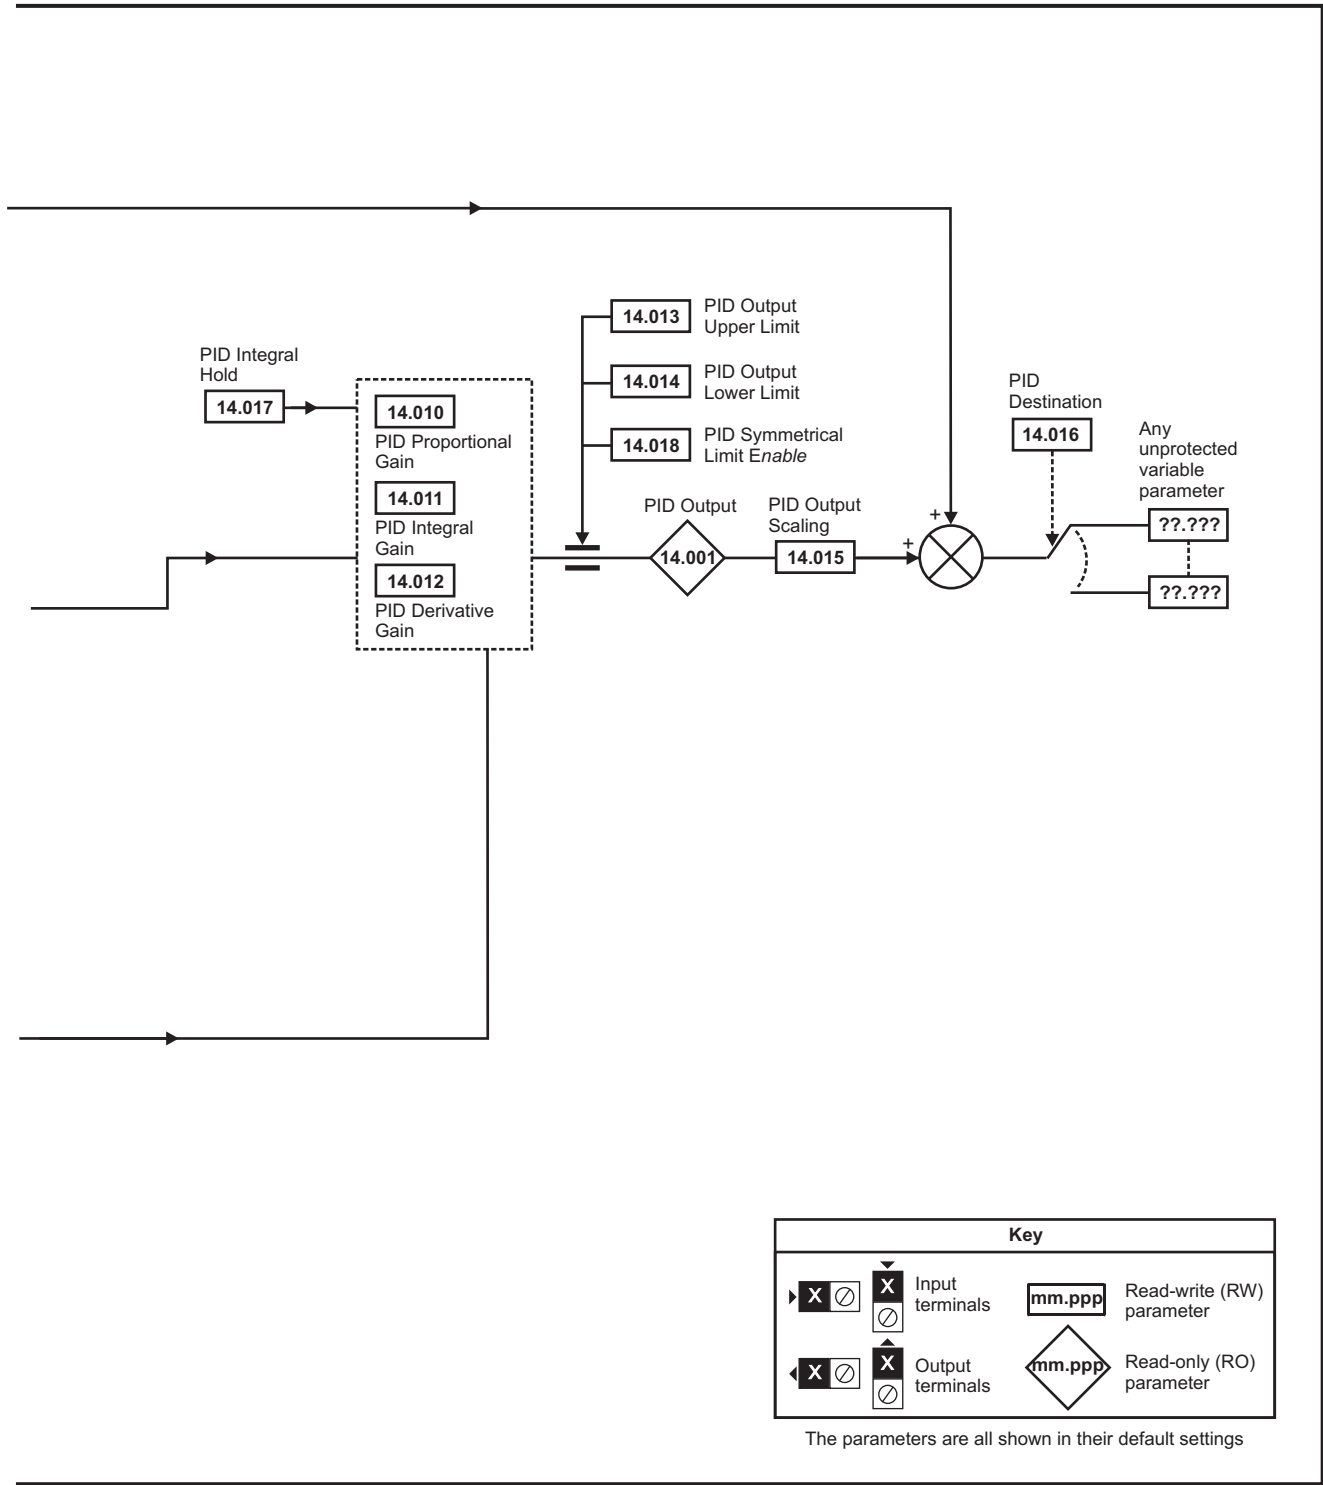

Key			
		Input terminals	Read-write (RW) parameter
		Output terminals	Read-only (RO) parameter


The parameters are all shown in their default settings

Parameter	Range(⊘)		Default(⇄)			Type						
	OL	RFC-A / S	OL	RFC-A	RFC-S							
14.001	PID1 Output	±100.00 %				RO	Num	ND	NC	PT		
14.002	PID1 Feed-forwards Reference Source	0.000 to 59.999		0.000		RW	Num			PT	US	
14.003	PID1 Reference Source	0.000 to 59.999		0.000		RW	Num			PT	US	
14.004	PID1 Feedback Source	0.000 to 59.999		0.000		RW	Num			PT	US	
14.005	PID1 Reference Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
14.006	PID1 Feedback Invert	Off (0) or On (1)		Off (0)		RW	Bit					US
14.007	PID1 Reference Slew Rate	0.0 to 3200.0 s		0.0 s		RW	Num					US
14.008	PID1 Enable	Off (0) or On (1)		Off (0)		RW	Bit					US
14.009	PID1 Enable Source 1	0.000 to 59.999		0.000		RW	Num			PT	US	
14.010	PID1 Proportional Gain	0.000 to 4.000		1.000		RW	Num					US
14.011	PID1 Integral Gain	0.000 to 4.000		0.500		RW	Num					US
14.012	PID1 Differential Gain	0.000 to 4.000		0.000		RW	Num					US
14.013	PID1 Output Upper Limit	0.00 to 100.00 %		100.00 %		RW	Num					US
14.014	PID1 Output Lower Limit	±100.00 %		-100.00 %		RW	Num					US
14.015	PID1 Output Scaling	0.000 to 4.000		1.000		RW	Num					US
14.016	PID1 Destination	0.000 to 59.999		0.000		RW	Num	DE		PT	US	
14.017	PID1 Integral Hold	Off (0) or On (1)		Off (0)		RW	Bit					
14.018	PID1 Symmetrical Limit Enable	Off (0) or On (1)		Off (0)		RW	Bit					US
14.019	PID1 Feed-forwards Reference	±100.00 %				RO	Num	ND	NC	PT		
14.020	PID1 Reference	±100.00 %				RO	Num	ND	NC	PT		
14.021	PID1 Feedback	±100.00 %				RO	Num	ND	NC	PT		
14.022	PID1 Error	±100.00 %				RO	Num	ND	NC	PT		
14.023	PID1 Reference Scaling	0.000 to 4.000		1.000		RW	Num					US
14.024	PID1 Feedback Scaling	0.000 to 4.000		1.000		RW	Num					US
14.025	PID1 Digital Reference	±100.00 %		0.00 %		RW	Num					US
14.026	PID1 Digital Feedback	±100.00 %		0.00 %		RW	Num					US
14.027	PID1 Enable Source 2	0.000 to 59.999		0.000		RW	Num			PT	US	

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.15 Menus 15, 16 and 17: Option module set-up

Figure 11-28 Location of option module slots and their corresponding menu numbers

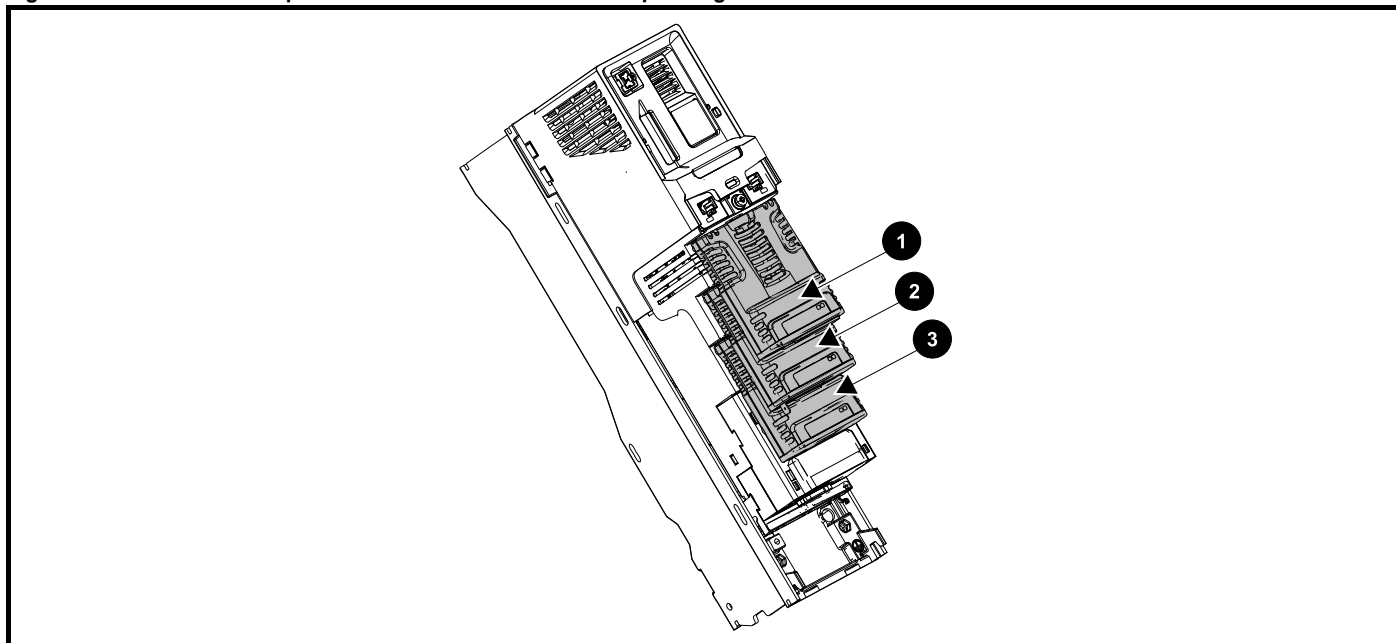

1. Solutions Module Slot 1 - Menu 15
2. Solutions Module Slot 2 - Menu 16
3. Solutions Module Slot 3 - Menu 17

11.15.1 Parameters common to all categories

Parameter		Range(⇅)	Default(⇔)	Type					
mm.001	Module ID	0 to 65535		RO	Num	ND	NC	PT	
mm.002	Software Version	00.00.00 to 99.99.99		RO	Num	ND	NC	PT	
mm.003	Hardware Version	0.00 to 99.99		RO	Num	ND	NC	PT	
mm.004	Serial Number LS	0 to 99999999		RO	Num	ND	NC	PT	
mm.005	Serial Number MS			RO	Num	ND	NC	PT	

The option module ID indicates the type of module that is installed in the corresponding slot. See the relevant option module user guide for more information regarding the module.

Option module ID	Module	Category
0	No module installed	
209	SI-I/O	Automation (I/O Expansion)
443	SI-PROFIBUS	Fieldbus
447	SI-DeviceNet	
448	SI-CANopen	
433	SI-Ethernet	
432	SI-PROFINET RT	
421	SI-EtherCAT	
105	SI-Encoder	Feedback
106	SI-Universal Encoder	
0	SI-Safety	Safety

11.16 Menu 18: Application menu 1

Parameter	Range(⇅)	Default(⇒)			Type										
		OL	RFC-A / S	OL						RFC-A	RFC-S				
18.001 Application Menu 1 Power-down Save Integer	-32768 to 32767			0										PS	
18.002 to 18.010 Application Menu 1 Read-only Integer	-32768 to 32767											ND	NC		US
18.011 to 18.030 Application Menu 1 Read-write Integer	-32768 to 32767			0											US
18.031 to 18.050 Application Menu 1 Read-write bit	Off (0) or On (1)			Off (0)											US
18.051 to 18.054 Application Menu 1 Power-down Save long Integer	-2147483648 to 2147483647			0											PS

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.17 Menu 19: Application menu 2

Parameter	Range(⇅)	Default(⇒)			Type											
		OL	RFC-A / S	OL						RFC-A	RFC-S					
19.001 Application Menu 2 Power-down Save Integer	-32768 to 32767			0												PS
19.002 to 19.010 Application Menu 2 Read-only Integer	-32768 to 32767															US
19.011 to 19.030 Application Menu 2 Read-write Integer	-32768 to 32767			0												US
19.031 to 19.050 Application Menu 2 Read-write bit	Off (0) or On (1)			Off (0)												US
19.051 to 19.054 Application Menu 2 Power-down Save long Integer	-2147483648 to 2147483647			0												PS

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.18 Menu 20: Application menu 3

Parameter	Range(⇅)	Default(⇒)			Type											
		OL	RFC-A / S	OL						RFC-A	RFC-S					
20.001 to 20.020 Application Menu 3 Read-write Integer	-32768 to 32767			0												
20.021 to 20.040 Application Menu 3 Read-write Long Integer	-2147483648 to 2147483647			0												

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.19 Menu 21: Second motor parameters

Parameter	Range(±)			Default(⇒)			Type						
	OL	RFC-A	RFC-S	OL	RFC-A	RFC-S							
21.001	M2 Maximum Reference Clamp	±VM_POSITIVE_REF_CLAMP2			50 Hz: 50.0 60 Hz: 60.0	50 Hz: 1500.0 60 Hz: 1800.0		RW	Num				US
21.002	M2 Minimum Reference Clamp	±VM_NEGATIVE_REF_CLAMP2			0.0			RW	Num				US
21.003	M2 Reference Selector	A1 A2 (0), A1 Preset (1), A2 Preset (2), Preset (3), Keypad (4), Precision (5), Keypad Ref (6)			A1 A2 (0)			RW	Txt				US
21.004	M2 Acceleration Rate 1	±VM_ACCEL_RATE			5.0	2.000		RW	Num				US
21.005	M2 Deceleration Rate 1	±VM_ACCEL_RATE			10.0	2.000		RW	Num				US
21.006	M2 Rated Frequency	0.0 to 550.0 Hz	0.0 to 550.0 Hz		50 Hz: 50.0 60 Hz: 60.0			RW	Num				US
21.007	M2 Rated Current	±VM_RATED_CURRENT			Maximum Heavy Duty Rating 11.032			RW	Num		RA		US
21.008	M2 Rated Speed	0 to 33000 rpm	0 to 33000.0 rpm		50 Hz: 1500 rpm 60 Hz: 1800 rpm	50 Hz: 1450.00 rpm 60 Hz: 1750.00 rpm	3000.00 rpm	RW	Num				US
21.009	M2 Rated Voltage	±VM_AC_VOLTAGE_SET			200 V drive: 230 V Eur - 400 V drive: 400 V USA - 400 V drive: 460 V 575 V drive: 575 V 690 V drive: 690 V			RW	Num		RA		US
21.010	M2 Rated Power Factor	0.000 to 1.000			0.850			RW	Num		RA		US
21.011	M2 Number Of Motor Poles	Automatic (0) to 480 Poles (240)			Automatic (0)		6 Poles (3)	RW	Txt				US
21.012	M2 Stator Resistance	0.000000 to 1000.000000 Ω			0.000000 Ω			RW	Num		RA		US
21.014	M2 Transient Inductance / Ld	0.000 to 500.000 mH			0.000 mH			RW	Num		RA		US
21.015	Motor 2 Active	Off (0) or On (1)						RO	Bit	ND	NC	PT	
21.016	M2 Motor Thermal Time Constant 1	1.0 to 3000.0 s			89.0 s			RW	Num				US
21.017	M2 Speed Controller Proportional Gain Kp1	0.0000 to 200.0000			0.0300			RW	Num				US
21.018	M2 Speed Controller Integral Gain Ki1	0.00 to 655.35			0.10	1.00		RW	Num				US
21.019	M2 Speed Controller Differential Feedback Gain Kd1	0.00000 to 0.65535			0.00000			RW	Num				US
21.021	M2 Motor Control Feedback Select		P1 Slot 1 (2), P2 Slot1 (3), P1 Slot2 (4), P2 Slot2 (5), P1 Slot3 (6), P2 Slot3 (7)		P1 Slot 3 (6)			RW	Txt				US
21.022	M2 Current Controller Kp Gain	0 to 30000			20	150		RW	Num				US
21.023	M2 Current Controller Ki Gain				40	2000		RW	Num				US
21.024	M2 Stator Inductance	0.00 to 5000.00 mH			0.00 mH			RW	Num		RA		US
21.025	M2 Saturation Breakpoint 1		0.0 to 100.0 %			50.0 %		RW	Num				US
21.026	M2 Saturation Breakpoint 3					75.0 %		RW	Num				US
21.027	M2 Motoring Current Limit	±VM_MOTOR2_CURRENT_LIMIT			165.0 %	175.0 %	0.0 %	RW	Num		RA		US
21.028	M2 Regenerating Current Limit	±VM_MOTOR2_CURRENT_LIMIT			165.0 %	175.0 %	0.0 %	RW	Num		RA		US
21.029	M2 Symmetrical Current Limit	±VM_MOTOR2_CURRENT_LIMIT			165.0 %	175.0 %	0.0 %	RW	Num		RA		US
21.030	M2 Volts Per 1000 rpm		0 to 10000 V			98 V		RW	Num				US
21.032	M2 Current Reference Filter Time Constant 1	0.0 to 25.0 ms				1.0 ms		RW	Num				US
21.033	M2 Low Speed Thermal Protection Mode	0 to 1			0			RW	Num				US
21.039	M2 Motor Thermal Time Constant 2	1.0 to 3000.0 s			89.0 s			RW	Num				US
21.040	M2 Motor Thermal Time Constant 2 Scaling	0 to 100 %			0 %			RW	Num				US
21.041	M2 Saturation Breakpoint 2		0.0 to 100.0 %			0.0 %		RW	Num				US
21.042	M2 Saturation Breakpoint 4		0.0 to 100.0 %			0.0 %		RW	Num				US
21.043	RFC-A> M2 Torque Per Amp	0.00 to 500.00						RO	Num	ND	NC	PT	
	RFC-S> M2 Torque Per Amp				0.00 to 500.00 Nm/A	1.60 Nm/A		RW	Num				US
21.046	M2 Inverted Motor Saturation Characteristic				Off (0) or On (1)	Off (0)		RW	Bit				US
21.047	M2 Low Speed Sensorless Mode Current Limit				0.0 to 1000.0 %	20.0 %		RW	Num		RA		US
21.048	M2 No-load Lq				0.000 to 500.000 mH	0.000 mH		RW	Num		RA		US
21.051	M2 Iq Test Current For Inductance Measurement				0 to 200 %	100 %		RW	Num				US
21.053	M2 Phase Offset At Iq Test Current				±90.0 °	0.0 °		RW	Num		RA		US
21.054	M2 Lq At Defined Iq Test Current				0.000 to 500.000 mH	0.000 mH		RW	Num		RA		US
21.058	M2 Id Test Current For Inductance Measurement				-100 to 0 %	-50 %		RW	Num				US
21.060	M2 Lq at the defined Id test current				0.000 to 500.000 mH	0.000 mH		RW	Num		RA		US

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

11.20 Menu 22: Additional Menu 0 set-up

Parameter	Range(⇅)			Default(⇄)			Type						
	OL	RFC-A	RFC-S	OL	RFC-A	RFC-S							
22.001	Parameter 00.001 Set-up					1.007	RW	Num				PT	US
22.002	Parameter 00.002 Set-up					1.006	RW	Num				PT	US
22.003	Parameter 00.003 Set-up					2.011	RW	Num				PT	US
22.004	Parameter 00.004 Set-up					2.021	RW	Num				PT	US
22.005	Parameter 00.005 Set-up					1.014	RW	Num				PT	US
22.006	Parameter 00.006 Set-up					4.007	RW	Num				PT	US
22.007	Parameter 00.007 Set-up				5.014	3.010	RW	Num				PT	US
22.008	Parameter 00.008 Set-up				5.015	3.011	RW	Num				PT	US
22.009	Parameter 00.009 Set-up				5.013	3.012	RW	Num				PT	US
22.010	Parameter 00.010 Set-up				5.004	3.002	RW	Num				PT	US
22.011	Parameter 00.011 Set-up				5.001	3.029	RW	Num				PT	US
22.012	Parameter 00.012 Set-up					4.001	RW	Num				PT	US
22.013	Parameter 00.013 Set-up					4.002	RW	Num				PT	US
22.014	Parameter 00.014 Set-up					4.011	RW	Num				PT	US
22.015	Parameter 00.015 Set-up					2.004	RW	Num				PT	US
22.016	Parameter 00.016 Set-up				0.000	2.002	RW	Num				PT	US
22.017	Parameter 00.017 Set-up				8.026	4.012	RW	Num				PT	US
22.018	Parameter 00.018 Set-up					0.000	RW	Num				PT	US
22.019	Parameter 00.019 Set-up					7.011	RW	Num				PT	US
22.020	Parameter 00.020 Set-up					7.014	RW	Num				PT	US
22.021	Parameter 00.021 Set-up					7.015	RW	Num				PT	US
22.022	Parameter 00.022 Set-up					1.010	RW	Num				PT	US
22.023	Parameter 00.023 Set-up					1.005	RW	Num				PT	US
22.024	Parameter 00.024 Set-up					1.021	RW	Num				PT	US
22.025	Parameter 00.025 Set-up					1.022	RW	Num				PT	US
22.026	Parameter 00.026 Set-up				1.023	3.008	RW	Num				PT	US
22.027	Parameter 00.027 Set-up				1.024	3.034	RW	Num				PT	US
22.028	Parameter 00.028 Set-up					6.013	RW	Num				PT	US
22.029	Parameter 00.029 Set-up		0.000 to 59.999			11.036	RW	Num				PT	US
22.030	Parameter 00.030 Set-up					11.042	RW	Num				PT	US
22.031	Parameter 00.031 Set-up					11.033	RW	Num				PT	US
22.032	Parameter 00.032 Set-up					11.032	RW	Num				PT	US
22.033	Parameter 00.033 Set-up				6.009	5.016	0.000	RW	Num			PT	US
22.034	Parameter 00.034 Set-up					11.030	RW	Num				PT	US
22.035	Parameter 00.035 Set-up					11.024	RW	Num				PT	US
22.036	Parameter 00.036 Set-up					11.025	RW	Num				PT	US
22.037	Parameter 00.037 Set-up					11.023	RW	Num				PT	US
22.038	Parameter 00.038 Set-up					4.013	RW	Num				PT	US
22.039	Parameter 00.039 Set-up					4.014	RW	Num				PT	US
22.040	Parameter 00.040 Set-up					5.012	RW	Num				PT	US
22.041	Parameter 00.041 Set-up					5.018	RW	Num				PT	US
22.042	Parameter 00.042 Set-up					5.011	RW	Num				PT	US
22.043	Parameter 00.043 Set-up				5.010	0.000	RW	Num				PT	US
22.044	Parameter 00.044 Set-up					5.009	RW	Num				PT	US
22.045	Parameter 00.045 Set-up					5.008	RW	Num				PT	US
22.046	Parameter 00.046 Set-up					5.007	RW	Num				PT	US
22.047	Parameter 00.047 Set-up				5.006	5.033	RW	Num				PT	US
22.048	Parameter 00.048 Set-up					11.031	RW	Num				PT	US
22.049	Parameter 00.049 Set-up					11.044	RW	Num				PT	US
22.050	Parameter 00.050 Set-up					11.029	RW	Num				PT	US
22.051	Parameter 00.051 Set-up					10.037	RW	Num				PT	US
22.052	Parameter 00.052 Set-up					11.020	RW	Num				PT	US
22.053	Parameter 00.053 Set-up					4.015	RW	Num				PT	US
22.054	Parameter 00.054 Set-up				0.000	5.064	RW	Num				PT	US
22.055	Parameter 00.055 Set-up				0.000	5.071	RW	Num				PT	US
22.056	Parameter 00.056 Set-up				0.000	5.072	RW	Num				PT	US
22.057	Parameter 00.057 Set-up				0.000	5.075	RW	Num				PT	US

Safety information	Product information	Mechanical installation	Electrical installation	Getting started	Basic parameters	Running the motor	Optimization	NV Media Card Operation	Onboard PLC	Advanced parameters	Technical data	Diagnostics	UL listing information
--------------------	---------------------	-------------------------	-------------------------	-----------------	------------------	-------------------	--------------	-------------------------	-------------	---------------------	----------------	-------------	------------------------

Parameter		Range(⇅)			Default(⇨)			Type								
		OL	RFC-A	RFC-S	OL	RFC-A	RFC-S									
22.058	Parameter 00.058 Set-up	0.000 to 59.999			0.000		5.077	RW	Num			PT	US			
22.059	Parameter 00.059 Set-up				0.000		5.078	RW	Num			PT	US			
22.060	Parameter 00.060 Set-up				0.000		5.082	RW	Num			PT	US			
22.061	Parameter 00.061 Set-up				0.000		5.084	RW	Num			PT	US			
22.062	Parameter 00.062 Set-up				0.000						RW	Num			PT	US
22.063	Parameter 00.063 Set-up										RW	Num			PT	US
22.064	Parameter 00.064 Set-up										RW	Num			PT	US
22.065	Parameter 00.065 Set-up										RW	Num			PT	US
22.066	Parameter 00.066 Set-up										RW	Num			PT	US
22.067	Parameter 00.067 Set-up										RW	Num			PT	US
22.068	Parameter 00.068 Set-up										RW	Num			PT	US
22.069	Parameter 00.069 Set-up										RW	Num			PT	US
22.070	Parameter 00.070 Set-up										RW	Num			PT	US
22.071	Parameter 00.071 Set-up										RW	Num			PT	US
22.072	Parameter 00.072 Set-up							RW	Num			PT	US			
22.073	Parameter 00.073 Set-up							RW	Num			PT	US			
22.074	Parameter 00.074 Set-up							RW	Num			PT	US			
22.075	Parameter 00.075 Set-up							RW	Num			PT	US			
22.076	Parameter 00.076 Set-up							RW	Num			PT	US			
22.077	Parameter 00.077 Set-up							RW	Num			PT	US			
22.078	Parameter 00.078 Set-up				RW	Num			PT	US						
22.079	Parameter 00.079 Set-up				RW	Num			PT	US						
22.080	Parameter 00.080 Set-up				RW	Num			PT	US						

RW	Read / Write	RO	Read only	Num	Number parameter	Bit	Bit parameter	Txt	Text string	Bin	Binary parameter	FI	Filtered
ND	No default value	NC	Not copied	PT	Protected parameter	RA	Rating dependent	US	User save	PS	Power-down save	DE	Destination

12 Technical data

12.1 Drive technical data

12.1.1 Power and current ratings (Derating for switching frequency and temperature)

For a full explanation of 'Normal Duty' and 'Heavy Duty' refer to section 2.1 *Introduction* on page 10.

Table 12-1 Maximum permissible continuous output current @ 40 °C (104 °F) ambient

Model	Normal Duty									Heavy Duty								
	Nominal rating		Maximum permissible continuous output current (A) for the following switching frequencies							Nominal rating		Maximum permissible continuous output current (A) for the following switching frequencies						
	kW	hp	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	kW	hp	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
200 V																		
03200050	1.1	1.5	6.6						0.75	1.0	5.0							
03200066	1.5	2.0	8.0						1.1	1.5	6.6							
03200080	2.2	3.0	11					10.2	1.5	2.0	8.0					7.5		
03200106	3.0	3.0	12.7				12.1	10.2	2.2	3.0	10.6				8.8	7.5		
04200137	4.0	5.0	18						3.0	3.0	13.7							
04200185	5.5	7.5	25			24	22	4.0	5.0	18.5			17.6	16				
05200250	7.5	10	30			27.6	23.7	5.5	7.5	25			24.8	21.5	18.8			
06200330	11	15	50			42.3	24.5	7.5	10	33.0			32	27				
06200440	15	20	58			53	42.3	32.5	11	15	44.0			40	33	27.3		
07200610	18.5	25	75			74.3	59.7	15	20	61					53.1			
07200750	22	30	94			74.3	59.7	18.5	25	75			65.3	53.1				
07200830	30	40	117		114	96	74.3	59.7	22	30	83			80.5	65.6	53.1		
08201160	37	50	149			146	125.2	93	30	40	116		113.7	103	89.3	80.5		
08201320	45	60	180		160.2	148.8	126	93	37	50	132		126.7	114	103	89.8	80.5	
09201760	55	75	216			184	128	93	45	60	176			153	110	81		
09202190	75	100	266		258	218	184	128	93	55	75	219		212	180	153	110	81
10202830	90	125	325			313	266	194	144	75	100	283		264	228	170	127	
10203000	110	150	360			313	266	194	144	90	125	300		264	228	171	129	
400 V																		
03400025	1.1	1.5	3.4						0.75	1.0	2.5							
03400031	1.5	2.0	4.5						1.1	1.5	3.1							
03400045	2.2	3.0	6.2					5.0	1.5	2.0	4.5					3.7		
03400062	3.0	5.0	7.7			6.2	5.0	2.2	3.0	6.2			5.8	4.5	3.8			
03400078	4.0	5.0	10.4			7.6	5.7	3.0	5.0	7.8			7.6	5.7	4.4			
03400100	5.5	7.5	12.3		10.5	7.6	5.8	4.0	5.0	10		9.2	7.7	5.7	4.4			
04400150	7.5	10	18.5			14.6	11.1	5.5	10	15.0			14.4	11.5	9.4			
04400172	11	15	24		21.8	19.2	14.6	11.2	7.5	10	17.2		16.1	14.4	11.5	9.4		
05400270	15	20	30		25.8	22.2	17.1	13.5	11	20	27	25.4	23.7	20.3	17.6	13.8	11.1	
05400300	15	20	31		30.7	26.4	18.3	14.1	15	20	30		27.9	24	21	14.9	12.2	
06400350	18.5	25	38			31	24.3	15	25	35			30	23	18.5			
06400420	22	30	48			41	31	24.5	18.5	30	42		35	30	23	18.5		
06400470	30	40	63		57	48	41	31	24.5	22	30	47	46	42	35	30	23	18.5
07400660	37	50	79			63	53.6	30	50	66			57	48	41	34		
07400770	45	60	94			80.6	63	53.6	37	60	77		70	59	51	44	37	
07401000	55	75	112		95.2	80.6	63	53.8	45	75	100		88	73	61	48	41	

Model	Normal Duty									Heavy Duty								
	Nominal rating		Maximum permissible continuous output current (A) for the following switching frequencies							Nominal rating		Maximum permissible continuous output current (A) for the following switching frequencies						
	kW	hp	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	kW	hp	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
08401340	75	100	155				132	98	77	55	100	134		130	109	91	72	57
08401570	90	125	184			169	142	106.7	77	75	125	157		143	121	104	80.1	65
09402000	110	150	221			192	159	108	77	90	150	200	180		157	130	92	65
09402240	132	200	266	255	231	192	160	109	77	110	150	224	211	190	157	130	92	65
10402700	160	250	320			285	238	173	124	132	200	270			237	200	147	108
10403200	200	300	361		339	285	238	173	126	160	250	320	307	282	237	202	147	109

575 V

05500030	2.2	3.0	3.9						1.5	2.0	3.0							
05500040	4.0	5.0	6.1						2.2	3.0	4.0							
05500069	5.5	7.5	10						4.0	5.0	6.9							
06500100	7.5	10.0	12						5.5	7.5	10							
06500150	11.0	15.0	17					14.8	7.5	10	15						11.6	
06500190	15.0	20.0	22				20.5	15	11	15	19					15.4	11.6	
06500230	18.5	25.0	27			26.2	20	16	15	20	23				20	15.4	12.8	
06500290	22.0	30.0	34		31	26.2	20	16.8	18.5	25	29			23.8	20	15.4	12.8	
06500350	30.0	40.0	43	39.6	31	26.2	20	16.8	22	30	35	34	29.8	23.8	20	15.4	13	
07500440	45	50	53		51.8	40.2	27.7	21.2	30	40	44			39.2	30.8	21.6	16.7	
07500550	55	60	73	71.5	51.8	40.2	27.7	21.2	37	50	55		52.8	39.2	30.8	21.6	17.1	
08500630	75	75	86			73.1	49.7	37.8	45	60	63				53.3	37.2	28.4	
08500860	90	100	108		91.8	73.1	49.7	37.8	55	75	86			67.1	53.3	37.8	28.4	
09501040	110	125	125			101	71	54	75	100	104					85	61	47
09501310	110	150	150		126	100	70	54	90	125	131			106	85	61	47	
10501520	130	200	200	168	126	100	70	54	110	150	152		138	106	85	61	47	
10501900	150	200	200		152	116	76	54	132	200	190	190	186	137	106	70	51	

690 V

07600190	18.5	25	23					21.2	15	20	19							16.7
07600240	22	30	30				27.9	21.2	18.5	25	24					21.8	16.6	
07600290	30	40	36			28.1	21.2	22	30	29						21.8	16.5	
07600380	37	50	46			40.5	28.1	21.2	30	40	38				30.8	21.7	16.7	
07600440	45	60	52		51.5	40.6	28.1	21.2	37	50	44			38.7	30.8	21.6	16.7	
07600540	55	75	73	71.5	51.8	40.6	28.1	21.2	45	60	54	52.9	39	31	21.6	16.7		
08600630	75	100	86			72.2	49.7	37.8	55	75	63				53.3	37	28.4	
08600860	90	125	108		91.8	72.4	49.7	37.8	75	100	86			67.1	53.3	37	28.4	
09601040	110	150	125			100	71	54	90	125	104					85	61	47
09601310	132	175	155		126	100	71	54	110	150	131			105	85	62	47	
10601500	160	200	172	169	126	100	71	55	132	175	150		138	105	86	62	47	
10601780	185	250	197		154	114	75	55	160	200	178			137	105	69	52	

Table 12-2 Maximum permissible continuous output current @ 40 °C (104 °F) ambient with high IP insert installed

Model	Normal Duty							Heavy Duty						
	Maximum permissible continuous output current (A) for the following switching frequencies							Maximum permissible continuous output current (A) for the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
200 V														
03200050	6.6							5.0						
03200066	8.0							6.6						
03200080	11.0						9.7	8.0						6.9
03200106	12.3	11.9	11.1	10.0	9.0	6.4	4.7	10.6			10.4	9.3	7.8	6.8
04200137	14.5			13.5	12.2	10.5	9.6	13.7			13.5	12.2	10.5	9.6
04200185	14.5			13.5	12.2	10.5	9.6	14.5			13.5	12.2	10.5	9.6
05200250	25.5	25.2	24.9	24.3	23.7	22.5	21.6	25.0		24.8	24.3	23.8	22.5	20.0
400 V														
03400025	3.4						3.3	2.5						
03400031	4.5			4.4	4.1	3.6	3.3	3.1						
03400045	5.1	5.0	4.7	4.4	4.1	3.6	3.3	4.5		4.4	4.1	3.6	3.2	
03400062	7.7		7.4	6.7	6.2	5.7	5.0	6.2			5.6	4.5	3.8	
03400078	8.3			7.6	6.9	6.0	5.2	7.8		7.6	6.9	5.3	4.0	
03400100	8.3			7.6	6.9	6.0	5.2	8.3		7.6	6.9	5.3	4.0	
04400150	8.6					8.4	6.9	8.6				8.4	6.9	
04400172	8.6					8.4	6.9	8.6				8.4	6.9	
05400270	17.1	15.6	14.4	12.6	11.4	9.6	8.7	17.3	15.7	14.6	12.7	11.3	9.7	8.6
05400300	19.8	19.5	18.9	17.7	16.4	14.0	11.8	19.8	19.5	18.9	17.7	16.2	13.8	11.7
575 V														
05500030	3.9							3.0						
05500040	6.1							4.0						
05500069	10.0							6.9						

Table 12-3 Maximum permissible continuous output current @ 50 °C (122 °F)

Model	Normal Duty							Heavy Duty						
	Maximum permissible continuous output current (A) for the following switching frequencies							Maximum permissible continuous output current (A) for the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
200 V														
03200050	6.6							5.0						
03200066	8.0							6.6						
03200080	11					10.5	9.1	8.0					7.0	
03200106	12.7	12.6	12.2	11.7	10.5	9.1	10.6			9.6	8.1	7.0		
04200137	18							13.7						
04200185	22.2					20.2	18.5			17.9	16.2	14.8		
05200250	30			29.7	25.2	21.6	25			23	19.8	17.3		
06200330	50			49	38	30	33			29	24.6			
06200440	58		56	49	38	30.2	44		41	36	29	24.6		
07200610	75				59.7	48.8	61				53.1	43.2		
07200750	94		92.1	80	59.7	48.9	75			69.8	53.1	43.2		
07200830	117	112	92.4	80	59.7	49.1	83		81.3	69.7	53.1	43.2		
08201160	149		147	133	113	84	116		104	95.1	81.8	72		
08201320	180	167	148	133	113	84	132	125	117	104	95.1	81.8	72	
09201760	216		197	168	117	84	176		165	140	100	72		
09202190	253	237	221	197	168	117	85	219	210	195	166	140	101	72
10202830	325	320	302	266	241	176	130	283		279	241	207	153	114
10203000	346	320	302	266	241	176	130	300		279	243	207	153	114
400 V														
03400025	3.4							2.5						
03400031	4.5							3.1						
03400045	6.2			5.9	5.4	4.4	4.5				4.2	3.4		
03400062	7.6	7.2	6.9	6.4	5.9	5.4	4.4	7.6		5.8	4.5	3.8		
03400078	10.4		9.3	8.5	6.9	5.1	7.8			7.0	5.1	3.9		
03400100	11.9	11.2	10.5	9.3	8.5	6.9	5.2	10.0		8.3	7.0	5.2	3.9	
04400150	18	17.5	17	16.3	15.8	12.2	9.3	15		14.8	13.2	10.6	8.6	
04400172	18	17.5	17	16.3	15.8	12.2	9.3	17.2		16.8	14.8	13.2	10.6	8.6
05400270	25.5		23.6	20.4	15.6	12.3	24	23.5	21.6	18.6	16.2	12.7	10	
05400300	25.5		23.6		15.9	12.3	24		21.9	19.2	13.8	10.5		
06400350	38			37	28	21.4	35		32	27	21	16.5		
06400420	48		43	36.5	27.4	21.4	42		38	32	27	21	16.5	
06400470	63	58	52	43	37	28	21.4	47	42	38	32	27	21	16.5
07400660	79			73.5	57.7	49	66			55	45	38	30	
07400770	94		86.5	73.3	58.3	49	77		70	57	48	41	34	
07401000	112	109	87.4	72.8	58.3	49.3	100	91	80	65	55	44	37	
08401340	155		146	123	93	69	134		120	99	85	69	55	
08401570	184	180	146	123	93.8	69	157	146	132	110	94.2	73.8	58	
09402000	221		213	175	144	97	69	200	180	174	143	119	83	58
09402240	253	237	213	176	144	98	69	213	193	175	143	119	83	58
10402700	320		300	259	217	154	112	270		259	214	182	131	97
10403200	343	321	300	260	217	155	112	307	282	259	214	182	131	99

Model	Normal Duty							Heavy Duty								
	Maximum permissible continuous output current (A) for the following switching frequencies							Maximum permissible continuous output current (A) for the following switching frequencies								
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz		
575 V																
05500030	3.9							3.0								
05500040	6.1							4.0								
05500069	10							6.9								
06500100	12							10								
06500150	17					13.4	15					14	10.3			
06500190	22				17.8	13.4	19					14	10.3			
06500230	27				23.5	17.8	15	23			21.6	19	14	11.5		
06500290	34			28.2	23.5	18	15	29		27.3	22	19	14	11.6		
06500350	43.0	41.7	36.1	28	23.7	18	15	35	31.2	27.3	21.8	19	14	11.6		
07500440	53			46.7	35.8	24.8	19	44			35.2	28.1	19.3	15		
07500550	73		65	46.7	35.8	24.8	19	55		48.4	35.2	28.1	19.3	15		
08500630	86			76.7	64.5	44.3	31.3	63			61.1	48.5	33.4	24.9		
08500860	104	97.2	90.7	76.7	64.8	44.3	31.3	86		80.8	61.1	49	33.4	24.9		
09501040	125			114	90	62	48	104			97	77	55	42		
09501310	150			114	90	62	48	131		126	97	77	55	42		
10501520	200	184	154	114	90	62	48	152	150	126	97	78	55	43		
10501900	200		196	134	102	66	48	190		171	124	95	63	46		
690 V																
07600190	23					19	19					14.5				
07600240	30				24.8	19	24					19.4	14.5			
07600290	36				35.8	24.8	19	29				27.7	19.4	14.5		
07600380	46				35.8	24.8	19	38			35.3	27.7	19.4	14.5		
07600440	52			46.7	35.8	25	19	44			35.6	27.7	19.4	14.5		
07600540	73		65	46.7	35.8	25	19	54		48.1	35.6	27.7	19.4	14.6		
08600630	86			76.7	64.5	44.3	31.3	63			61.1	48.2	33.4	24.9		
08600860	104	97.2	90.7	76.7	64.8	44.3	31.3	86		80.8	61.1	48.2	33.5	24.9		
09601040	125			114	90	62	48	104			97	77	55	42		
09601310	155		153	113	89	62	48	131		127	97	77	55	42		
10601500	172		153	114	89	62	48	150		128	96	78	56	42		
10601780	197		195	134	102	67	48	178		171	125	94	62	44		

12.1.2 Power dissipation

Table 12-4 Losses @ 40° C (104° F) ambient

Model	Normal Duty									Heavy Duty								
	Nominal rating		Drive losses (W) taking into account any current derating for the given conditions							Nominal rating		Drive losses (W) taking into account any current derating for the given conditions						
	kW	hp	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	kW	hp	2 KHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
200 V																		
03200050	1.1	1.5		93	95	99	104	113	122	0.75	1		78	80	84	87	94	101
03200066	1.5	2		100	102	107	113	122	133	1.1	1.5		89	91	94	99	108	116
03200080	2.2	3		123	126	133	139	151	146	1.5	2		97	99	105	109	118	111
03200106	3	3		136	141	149	158	168	157	2.2	3		115	118	126	134	124	116
04200137	4	5		180	187	201	216	244	273	3	3		145	151	163	174	198	221
04200185	5.5	7.5		239	248	266	284	308	314	4	5		185	192	207	221	237	241
05200250	7.5	10		291	302	324	344	356	342	5.5	7.5		245	254	272	288	284	282
06200330	11	15		394	413	452	490	480		7.5	10		277	290	316	342	382	
06200440	15	20		463	484	528	522	481		11	15		366	382	417	410	388	
07200610	18.5	25		570	597	650	703			15	20		466	488	532	575		
07200750	22	30		718	751	815	881			18.5	25		570	597	650	703		
07200830	30	40		911	951	1004	911			22	30		634	663	720	755		
08201160	37	50		1433	1536	1765	1943			30	40		1105	1193	1343	1373		
08201320	45	60		1753	1894	1914	1985			37	50		1269	1306	1349	1372		
09201760	55	75								45	60							
09202190	75	100								55	75							
10202830	90	125								75	100							
10203000	110	150								90	125							
400 V																		
03400025	1.1	1.5		80	84	94	103	123	141	0.75	1		71	76	83	92	108	124
03400031	1.5	2		88	92	104	115	137	160	1.1	1.5		69	73	82	91	107	124
03400045	2.2	3		104	112	125	139	167	157	1.5	2		83	88	99	109	131	125
03400062	3	5		114	122	137	153	149	147	2.2	3		98	105	118	123	118	127
03400078	4	5		145	158	186	212	201	197	3	5		115	125	145	161	166	165
03400100	5	7.5		163	179	209	208	201	200	4	5		138	151	163	163	166	165
04400150	7.5	10		225	244	283	322	325	310	5.5	10		189	205	238	262	274	286
04400172	11	15		283	307	325	329	325	315	7.5	10		210	227	249	262	274	286
05400270	15	20		324	353	356	355	359	362	11	20		276	282	285	290	301	310
05400300	15	20		332	367	434	441	417	424	15	20		322	333	352	374	372	439
06400350	18.5	25		417	456	532	613	652	645	15	25		389	424	498	496	502	513
06400420	22	30		515	561	657	651	646	650	18.5	30		455	497	487	486	495	513
06400470	30	40		656	659	650	646	643		22	30		500	496	487	486	495	
07400660	37	50		830	907	1062	1218			30	50		692	758	773	763		
07400770	45	60		999	1088	1264	1241			37	60		812	802	800	811		
07401000	55	75		1152	1247	1218	1170			45	75		1017	968	936	907		
08401340	75	100		1652	1817	2154	2121			55	100		1374	1509	1521	1510		
08401570	90	125		2004	2191	2333	2279			75	125		1541	1670	1674	1673		
09402000	110	150								90	150							
09402240	132	200								110	150							

Model	Normal Duty									Heavy Duty									
	Nominal rating		Drive losses (W) taking into account any current derating for the given conditions							Nominal rating		Drive losses (W) taking into account any current derating for the given conditions							
	kW	hp	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	kW	hp	2 KHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	
10402700	160	250								132	200								
10403200	200	300								160	250								
575 V																			
05500030	2.2	3		92	102	121	142			1.5	2		82	91	108	126			
05500040	4	5		135	150	180	209			2.2	3		94	104	124	145			
05500069	5.5	7.5		194	215	260	302			4	5		153	170	204	236			
06500100	7.5	10		215	239	287	334			5.5	7.5		187	208	249	291			
06500150	11	15		284	315	376	438			7.5	10		265	294	351	410			
06500190	15	20		362	399	484	569			11	15		317	350	418	496			
06500230	18.5	25		448	505	596	682			15	20		382	421	508	523			
06500290	22	30		623	712	810	822			18.5	25		533	610	628	635			
06500350	30	40		798	836	813	823			22	30		546	624	622	627			
07500440	45	50		1004	1139	1358	1262			30	40		817	929	1028	967			
07500550	55	60		1248	1375	1209	1122			37	50		886	1002	914	863			
08500630	75	75		1861	2180	2814	2982			45	60		1345	1585	2136	2284			
08500860	90	100		2374	2753	2947	2963			55	75		1813	2174	2212	2218			
09501040	110	125								75	100								
09501310	110	150								90	125								
10501520	130	200								110	150								
10501900	150	200								132	200								
690 V																			
07600190	18.5	25		428	491	617	743			15	20		360	413	519	625			
07600240	22	30		551	631	791	952			18.5	25		446	513	644	776			
07600290	30	40		660	754	941	1129			22	30		533	610	765	920			
07600380	37	50		854	971	1206	1271			30	40		697	796	993	966			
07600440	45	60		985	1117	1350	1275			37	50		817	929	1015	967			
07600540	55	75		1248	1375	1209	1122			45	60		888	1004	909	869			
08600630	75	100		1861	2180	2814	2945			55	75		1345	1585	2136	2284			
08600860	90	125		2374	2753	2947	2935			75	100		1813	2174	2212	2218			
09601040	110	150								90	125								
09601310	132	175								110	150								
10601500	160	200								132	175								
10601780	185	250								160	200								

Table 12-5 Losses @ 40°C (104° F) ambient with high IP insert installed

Model	Normal Duty							Heavy Duty						
	Drive losses (W) taking into consideration any current derating for the given conditions							Drive losses (W) taking into consideration any current derating for the given conditions						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
200 V														
03200050		93	95	99	104	113	122		78	80	84	87	94	101
03200066		100	102	107	113	122	133		89	91	94	99	108	116
03200080		123	126	133	140	158	157		97	99	105	109	118	112
03200106		128	124	122	118	98	84		115	119	127	122	120	122
04200137		145	151	151	146	142	146		153	160	161	155	152	155
04200185		215	205	194	189	187	199		185	192	202	193	191	200
05200250		244	249	262	274	298	328		245	251	264	278	301	306
400 V														
03400025		80	84	94	103	123	137		71	76	83	92	108	124
03400031		88	92	102	105	110	134		69	73	82	91	107	126
03400045		84	85	89	92	109	134		83	88	96	100	109	130
03400062		114	117	122	135	172	203		98	105	118	122	136	155
03400078		118	134	155	173	221	267		115	126	155	173	195	205
03400100		118	134	155	173	221	267		112	126	155	173	195	205
04400150		105	114	132	153	197	207		108	118	136	156	202	214
04400172		101	111	131	152	197	207		105	114	133	157	202	214
05400270		170	173	182	194	223	268		172	177	184	194	225	265
05400300		218	240	284	329	432	564		218	240	284	325	425	560
575 V														
05500030														
05500040														
05500069														

Table 12-6 Losses @ 50° C (122° F) ambient

Model	Normal Duty							Heavy Duty						
	Drive losses (W) taking into account any current derating for the given conditions							Drive losses (W) taking into account any current derating for the given conditions						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
200 V														
03200050		93	95	99	104	113	122		78	80	84	87	94	101
03200066		100	102	107	113	122	133		89	91	94	99	108	116
03200080		123	126	133	139	144	139		97	99	105	109	118	113
03200106		136	140	143	147	151	150		115	118	126	121	117	116
04200137		180	187	201	216	253	297		145	151	163	174	198	228
04200185		214	223	244	265	312	334		185	192	207	217	230	247
05200250		292	306	331	357	357	357		247	258	279	278	283	288
06200330		394	413	452	481	434			277	290	316	342	346	
06200440		463	484	509	483	437			366	382	389	369	342	
07200610		570	597	650	703				466	488	532	575		
07200750		718	751	799	750				570	597	650	654		
07200830		898	898	805	751				634	663	705	653		
08201160		1433	1536	1741	1770				1105	1193	1228	1277		
08201320		1737	1740	1759	1771				1202	1206	1228	1278		
09201760														
09202190														
10202830														
10203000														
400 V														
03400025		80	84	118	103	123	141		71	76	83	92	108	124
03400031		88	92	104	115	137	160		69	73	82	91	107	124
03400045		104	112	125	132	146	155		83	88	99	109	122	121
03400062		106	109	114	117	145	155		124	132	148	148	140	139
03400078		145	158	175	194	225	225		115	125	148	160	166	172
03400100		152	160	175	194	225	230		138	152	158	160	170	172
04400150		213	227	262	300	323	325		189	205	240	253	276	297
04400172		212	227	262	300	318	321		211	226	240	253	276	297
05400270		288	323	368	384	417			267	274	290	305	340	373
05400300		280	316	366	452	453	511		264	297	383	420	463	523
06400350		417	456	536	607	609	597		389	424	459	452	468	472
06400420		515	561	597	595	601	614		455	449	450	445	468	491
06400470		613	600	593	601	613			455	449	450	446	464	
07400660		830	907	1062	1141				692	758	751	725		
07400770		999	1087	1163	1138				808	804	779	773		
07401000		1136	1200	1118	1074				922	878	838	828		
08401340		1652	1815	2016	1970				1410	1392	1391	1432		
08401570		1957	2114	1998	1979				1564	1539	1518	1531		
09402000														
09402240														
10402700														
10403200														

Model	Normal Duty							Heavy Duty						
	Drive losses (W) taking into account any current derating for the given conditions							Drive losses (W) taking into account any current derating for the given conditions						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
575 V														
05500030		92	102	121	142				82	91	108	126		
05500040		135	150	180	209				94	104	124	145		
05500069		194	215	260	302				153	170	204	236		
06500100		215	239	287	334				187	208	249	291		
06500150		284	315	376	443				265	294	351	410		
06500190		362	399	482	575				317	350	421	504		
06500230		445	490	592	614				382	422	477	504		
06500290		623	712	739	751				533	574	580	555		
06500350		774	758	734	757				572	572	572	607		
07500440		988	1115	1225	1144				817	923	923	898		
07500550		1225	1228	1098	1030				923	914	828	809		
08500630		1850	2172	2540	2672				1345	1585	2292	2242		
08500860		2090	2291	2540	2684				1845	2029	2039	2047		
09501040														
09501310														
10501520														
10501900														
690 V														
07600190		428	491	617	743				360	413	519	625		
07600240		551	631	791	958				446	513	644	776		
07600290		660	754	944	1144				533	610	765	809		
07600380		854	965	1206	1144				697	796	926	885		
07600440		969	1094	1225	1144				817	923	933	885		
07600540		1225	1228	1098	1030				906	908	837	797		
08600630		1850	2172	2540	2672				1345	1585	2292	2229		
08600860		2090	2291	2540	2684				1845	2029	2039	2014		
09601040														
09601310														
10601500														
10601780														

Table 12-7 Power losses from the front of the drive when through-panel mounted

Frame size	Power loss
3	≤ 50 W
4	≤ 75 W
5	≤ 100 W
6	≤ 100 W
7	≤ 204 W
8	≤ 347 W
9	≤ 480 W
10	≤ 480 W

12.1.3 Supply requirements

AC supply voltage:

200 V drive: 200 V to 240 V ±10 %

400 V drive: 380 V to 480 V ±10 %

575 V drive: 500 V to 575 V ±10 %

690 V drive: 500 V to 690 V ±10 %

Number of phases: 3

Maximum supply imbalance: 2 % negative phase sequence (equivalent to 3 % voltage imbalance between phases).

Frequency range: 45 to 66 Hz

For UL compliance only, the maximum supply symmetrical fault current must be limited to 100 kA

12.1.4 Line reactors

Input line reactors reduce the risk of damage to the drive resulting from poor phase balance or severe disturbances on the supply network.

Where line reactors are to be used, reactance values of approximately 2 % are recommended. Higher values may be used if necessary, but may result in a loss of drive output (reduced torque at high speed) because of the voltage drop.

For all drive ratings, 2 % line reactors permit drives to be used with a supply unbalance of up to 3.5 % negative phase sequence (equivalent to 5 % voltage imbalance between phases).

Severe disturbances may be caused by the following factors, for example:

- Power factor correction equipment connected close to the drive.
- Large DC drives having no or inadequate line reactors connected to the supply.
- Across the line (DOL) started motor(s) connected to the supply such that when any of these motors are started, the voltage dip exceeds 20 %

Such disturbances may cause excessive peak currents to flow in the input power circuit of the drive. This may cause nuisance tripping, or in extreme cases, failure of the drive.

Drives of low power rating may also be susceptible to disturbance when connected to supplies with a high rated capacity.

Line reactors are particularly recommended for use with the following drive models when one of the above factors exists, or when the supply capacity exceeds 175 kVA:

03200050, 03200066, 03200080, 03200106,

03400025, 03400031, 03400045, 03400062

Model sizes 03400078 to 07600540 have an internal DC reactor and 082001160 to 08600860 have internal AC line reactors so they do not require AC line reactors except for cases of excessive phase unbalance or extreme supply conditions. Drive sizes 9E and 10 do not have internal input line reactors hence an external input line reactor must be used. For more information refer to section 4.2.3 *Input line reactor specification for size 9E and 10* on page 66.

When required each drive must have its own reactor(s). Three individual reactors or a single three-phase reactor should be used.

Reactor current ratings

The current rating of the line reactors should be as follows:

Continuous current rating:

Not less than the continuous input current rating of the drive

Repetitive peak current rating:

Not less than twice the continuous input current rating of the drive

12.1.5 Motor requirements

No. of phases: 3

Maximum voltage:

200 V drive: 240 V

400 V drive: 480 V

575 V drive: 575 V

690 V drive: 690 V

12.1.6 Temperature, humidity and cooling method

Ambient temperature operating range:

- 20 °C to 50 °C (- 4 °F to 122 °F).

Output current derating must be applied at ambient temperatures >40 °C (104 °F).

Cooling method: Forced convection

Maximum humidity: 95 % non-condensing at 40 °C (104 °F)

12.1.7 Storage

-40 °C (-40 °F) to +50 °C (122 °F) for long term storage, or to +70 °C (158 °F) for short term storage.

Storage time is 2 years.

Electrolytic capacitors in any electronic product have a storage period after which they require reforming or replacing.

The DC bus capacitors have a storage period of 10 years.

The low voltage capacitors on the control supplies typically have a storage period of 2 years and are thus the limiting factor.

Low voltage capacitors cannot be reformed due to their location in the circuit and thus may require replacing if the drive is stored for a period of 2 years or greater without power being applied.

It is therefore recommended that drives are powered up for a minimum of 1 hour after every 2 years of storage.

This process allows the drive to be stored for a further 2 years.

12.1.8 Altitude

Altitude range: 0 to 3,000 m (9,900 ft), subject to the following conditions:

1,000 m to 3,000 m (3,300 ft to 9,900 ft) above sea level: de-rate the maximum output current from the specified figure by 1% per 100 m (330 ft) above 1,000 m (3,300 ft)

For example at 3,000 m (9,900 ft) the output current of the drive would have to be de-rated by 20 %.

12.1.9 IP / UL Rating

The drive is rated to IP21 pollution degree 2 (dry, non-conductive contamination only) (NEMA 1). However, it is possible to configure the drive to achieve IP65 rating (sizes 3 to 8) or IP55 rating (size 9 and 10) (NEMA 12) at the rear of the heatsink for through-panel mounting (some current derating is required).

In order to achieve the high IP rating at the rear of the heatsink with drive sizes 3,4 and 5 it is necessary to seal a heatsink vent by installing the high IP insert.

The IP rating of a product is a measure of protection against ingress and contact to foreign bodies and water. It is stated as IP XX, where the two digits (XX) indicate the degree of protection provided as shown in Table 12-8.

Table 12-8 IP Rating degrees of protection

First digit	Second digit
Protection against contact and ingress of foreign bodies	Protection against ingress of water
0 No protection	0 No protection
1 Protection against large foreign bodies $\phi > 50$ mm (large area contact with the hand)	1 Protection against vertically falling drops of water
2 Protection against medium size foreign bodies $\phi > 12$ mm (finger)	2 Protection against spraywater (up to 15 ° from the vertical)
3 Protection against small foreign bodies $\phi > 2.5$ mm (tools, wires)	3 Protection against spraywater (up to 60 ° from the vertical)
4 Protection against granular foreign bodies $\phi > 1$ mm (tools, wires)	4 Protection against splashwater (from all directions)
5 Protection against dust deposit, complete protection against accidental contact.	5 Protection against heavy splash water (from all directions, at high pressure)
6 Protection against dust ingress, complete protection against accidental contact.	6 Protection against deckwater (e.g. in heavy seas)
7 -	7 Protection against immersion
8 -	8 Protection against submersion

Table 12-9 UL enclosure ratings

UL rating	Description
Type 1	Enclosures are intended for indoor use, primarily to provide a degree of protection against limited amounts of falling dirt.
Type 12	Enclosures are intended for indoor use, primarily to provide a degree of protection against dust, falling dirt and dripping non-corrosive liquids.

12.1.10 Corrosive gasses

Concentrations of corrosive gasses must not exceed the levels given in:

- Table A2 of EN 50178:1998
- Class 3C2 of IEC 60721-3-3

This corresponds to the levels typical of urban areas with industrial activities and/or heavy traffic, but not in the immediate neighborhood of industrial sources with chemical emissions.

12.1.11 RoHS compliance

The drive meets EU directive 2002-95-EC for RoHS compliance.

12.1.12 Vibration

Maximum recommended continuous vibration level 0.14 g r.m.s. broad-band 5 to 200 Hz.

NOTE

This is the limit for broad-band (random) vibration. Narrow-band vibration at this level which coincides with a structural resonance could result in premature failure.

Bump Test

Testing in each of three mutually perpendicular axes in turn.

Referenced standard: IEC 60068-2-29: Test Eb:

Severity: 18 g, 6 ms, half sine

No. of Bumps: 600 (100 in each direction of each axis)

Random Vibration Test

Testing in each of three mutually perpendicular axes in turn.

Referenced standard: IEC 60068-2-64: Test Fh:

Severity: 1.0 m²/s³ (0.01 g²/Hz) ASD from 5 to 20 Hz
-3 dB/octave from 20 to 200 Hz

Duration: 30 minutes in each of 3 mutually perpendicular axes.

Sinusoidal Vibration Test

Testing in each of three mutually perpendicular axes in turn.

Referenced standard: IEC 60068-2-6: Test Fc:

Frequency range: 5 to 500 Hz

Severity: 3.5 mm peak displacement from 5 to 9 Hz
10 m/s² peak acceleration from 9 to 200 Hz
15 m/s² peak acceleration from 200 to 500 Hz

Sweep rate: 1 octave/minute

Duration: 15 minutes in each of 3 mutually perpendicular axes.

EN 61800-5-1:2007, Section 5.2.6.4. referring to IEC 60068-2-6

Frequency range: 10 to 150 Hz

Amplitude: 10 to 57 Hz at 0.075 mm pk
57 to 150 Hz at 1g p

Sweep rate: 1 octave/minute

Duration: 10 sweep cycles per axis in each of 3 mutually perpendicular axes

12.1.13 Starts per hour

By electronic control: unlimited

By interrupting the AC supply: ≤20 (equally spaced)

12.1.14 Start up time

This is the time taken from the moment of applying power to the drive, to the drive being ready to run the motor:

Sizes 3:

12.1.15 Output frequency / speed range

In all operating modes (Open loop, RFC-A, RFC-S) the maximum output frequency is limited to 550 Hz.

12.1.16 Accuracy and resolution

Speed:

The absolute frequency and speed accuracy depends on the accuracy of the crystal used with the drive microprocessor. The accuracy of the crystal is 100 ppm, and so the absolute frequency/speed accuracy is 100 ppm (0.01 %) of the reference, when a preset speed is used. If an analog input is used the absolute accuracy is further limited by the absolute accuracy of the analog input.

The following data applies to the drive only; it does not include the performance of the source of the control signals.

Open loop resolution:

Preset frequency reference: 0.1 Hz

Precision frequency reference: 0.001 Hz

Closed loop resolution

Preset speed reference: 0.1 rpm

Precision speed reference: 0.001 rpm

Analog input 1: 11 bit plus sign

Analog input 2: 11 bit plus sign

Current:

The resolution of the current feedback is 10 bit plus sign.

Accuracy: typical 2 %

worst case 5 %

12.1.17 Acoustic noise

The heatsink fan generates the majority of the sound pressure level at 1 m produced by the drive. The heatsink fan on size 3 is a variable speed fan. The drive controls the speed at which the fan runs based on the temperature of the heatsink and the drive's thermal model system.

Table 12-10 gives the sound pressure level at 1 m produced by the drive for the heatsink fan running at the maximum and minimum speeds.

Table 12-10 Acoustic noise data

Size	Max speed dBA	Min speed dBA
3	35	30
4	40	35
5		
6	48	40
7		
8		

12.1.18 Overall dimensions

H Height including surface mounting brackets

W Width

D Projection forward of panel when surface mounted

F Projection forward of panel when through-panel mounted

R Projection rear of panel when through-panel mounted

Table 12-11 Overall drive dimensions

Size	Dimension				
	H	W	D	F	R
3	382 mm (15.04 in)	83 mm (3.27 in)	200 mm (7.87 in)	134 mm (5.28 in)	67 mm (2.64 in)
4	391 mm (15.39 in)	124 mm (4.88 in)			66 mm (2.59 in)
5	391 mm (15.39 in)	143 mm (5.63 in)	202 mm (7.95 in)	135 mm (5.32 in)	67 mm (2.64 in)
6	391 mm (15.39 in)	210 mm (8.27 in)	227 mm (8.94 in)	131 mm (5.16 in)	96 mm (3.78 in)
7	557 mm (21.93 in)	270 mm (10.63 in)	279 mm (10.98 in)	187 mm (7.36 in)	92 mm (3.62 in)
8	803 mm (31.61 in)	310 mm (12.21 in)	290 mm (11.42 in)	190 mm (7.48 in)	100 mm (3.94 in)
9E and 10	1069 mm (42.09 in)	310 mm (12.21 in)	289 mm (11.38 in)	190 mm (7.48 in)	99 mm (3.90 in)

12.1.19 Weights

Table 12-12 Overall drive weights

Size	Model	kg	lb
3	034300078, 034300100	4.5	9.9
	All other variants	4.0	8.8
4	All variants	6.5	14.30
5	All variants	7.4	16.30
6	All variants	14	30.90
7	All variants	28	61.70
8	All variants	52	114.64
9E	All variants	46	101.40
10	All variants		

12.1.20 SAFE TORQUE OFF data

Data as verified by TÜV Rheinland:

According to EN ISO 13849-1:

PL = e

Category = 4

MTTF_D = High

DC_{av} = High

Mission Time and Proof Test Interval = 20 years

The calculated MTTF_D for the complete STO function is:

STO1 2574 yr

According to EN 61800-5-2:

SIL = 3

PFH = $4.21 \times 10^{-11} \text{ h}^{-1}$

Logic levels comply with IEC 61131-2:2007 for type 1 digital inputs rated at 24 V. Maximum level for logic low to achieve SIL3 and PL e 5 V and 0.5 mA.

12.1.21 Input current, fuse and cable size ratings

The input current is affected by the supply voltage and impedance.

Typical input current

The values of typical input current are given to aid calculations for power flow and power loss.

The values of typical input current are stated for a balanced supply.

Maximum continuous input current

The values of maximum continuous input current are given to aid the selection of cables and fuses. These values are stated for the worst case condition with the unusual combination of stiff supply with bad balance. The value stated for the maximum continuous input current would only be seen in one of the input phases. The current in the other two phases would be significantly lower.

The values of maximum input current are stated for a supply with a 2 % negative phase-sequence imbalance and rated at the maximum supply fault current given in Table 12-13.

Table 12-13 Supply fault current used to calculate maximum input currents

Model	Symmetrical fault level (kA)
All	100



Fuses

The AC supply to the drive must be installed with suitable protection against overload and short-circuits. Table 12-14 shows the recommended fuse ratings. Failure to observe this requirement will cause risk of fire.

Table 12-14 AC Input current and fuse ratings (200 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
03200050	8.2	10.4	15.8	16	25	gG	20	25	CC or J
03200066	9.9	12.6	20.9	20					
03200080	14	17	25	25					
03200106	16	20	34	25					
04200137	17	20	30	25	25	gG	25	25	CC or J
04200185	23	28	41	32	32		30	30	
05200250	24	31	52	40	40	gG	40	40	CC or J
06200330	42	48	64	63	63	gG	60	60	CC or J
06200440	49	56	85				60		
07200610	58	67	109	80	80	gG	80	80	CC or J
07200750	73	84	135	100	100		100	100	
07200830	91	105	149	125	125		125	125	
08201160	123	137	213	200	200		gR	200	
08201320	149	166	243			225		225	
09201760	172	205	270	250	250	gR	250	250	HSJ
09202190	228	260	319	315	315		300	300	
10202830	277	305	421	400	400	gR	400	400	HSJ
10203000	333	361	494	450	450		450	450	

Table 12-15 AC Input current and fuse ratings (400 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
03400025	5	5	7	10	10	gG	10	10	CC or J
03400031	6	7	9						
03400045	8	9	13						
03400062	11	13	21						
03400078	12		20						
03400100	14	16	25	20	20	gG	20	20	CC or J
04400150	17	19	30	25	25	gG	25	25	CC or J
04400172	22	24	35	32	32		30	30	
05400270	26	29	52	40	40	gG	35	35	CC or J
05400300	27	30	58						
06400350	32	36	67	63	63	gR	40	60	HSJ or DFJ
06400420	41	46	80				50		
06400470	54	60	90				60		
07400660	67	74	124	100	100	gG	80	80	CC or J
07400770	80	88	145				100	100	
07401000	96	105	188				125	125	
08401340	137	155	267	250	250	gR	225	225	HSJ
08401570	164	177	303						
09402000	211	232	306	315	315	gR	300	300	HSJ
09402240	245	267	359				350	350	
10402700	306	332	445	400	400	gR	400	400	HSJ
10403200	370	397	523	450	450		450	450	

Table 12-16 AC Input current and fuse ratings (575 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating						
				IEC			UL / USA			
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class	
05500030	4	4	7	10	20	gG	10	10	CC or J	
05500040	6	7	9				20	20		
05500069	9	11	15				20	20		
06500100	12	13	22	20	40	gG	20	30	CC or J	
06500150	17	19	33				32			25
06500190	22	24	41				40			30
06500230	26	29	50	50	63	gG	35	50	CC or J	
06500290	33	37	63				40			40
06500350	41	47	76				63			50
07500440	41	45	75	50	50	gG	50	50	CC or J	
07500550	57	62	94	80	80		80	80		
08500630	74	83	121	125	125	gR	100	100	HSJ	
08500860	92	104	165	160	160		150	150		
09501040	145	166	190	150	150	gR	150	150	HSJ	
09501310	145	166	221	200	200		175	175		
10501520	177	197	266	250	250	gR	250	250	HSJ	
10501900	199	218	310				250	250		


Table 12-17 AC Input current and fuse ratings (690 V)

Model	Typical input current A	Maximum continuous input current A	Maximum overload input current A	Fuse rating					
				IEC			UL / USA		
				Nominal A	Maximum A	Class	Nominal A	Maximum A	Class
07600190	18	20	32	25	50	gG	25	50	CC or J
07600240	23	26	41	32			30		
07600290	28	31	49	40			35		
07600380	36	39	65	50	80	gG	50	80	CC or J
07600440	40	44	75				80		
07600540	57	62	92	80	80	gR	80	80	HSJ
08600630	74	83	121	125	125		100	100	
08600860	92	104	165	160	160	150	150	HSJ	
09601040	124	149	194	150	150	gR	150	150	HSJ
09601310	145	171	226	200	200		200	200	
10601500	180	202	268	225	225	gR	250	250	HSJ
10601780	202	225	313	250	250	aR*	250	250	

* Class aR fuses do not provide branch circuit protection. Ensure that the input cables are suitably protected using HRC fuses or breaker.

NOTE

Ensure cables used suit local wiring regulations.



The nominal cable sizes below are only a guide. The mounting and grouping of cables affects their current-carrying capacity, in some cases smaller cables may be acceptable but in other cases a larger cable is required to avoid excessive temperature or voltage drop. Refer to local wiring regulations for the correct size of cables.

CAUTION

Table 12-18 Cable ratings (200V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
03200050	1.5	4	B2	1.5	4	B2	14	10	14	10
03200066				4			12			
03200080	4	4	B2	4	4	B2	12	10	12	10
03200106				4			12			
04200137	6	8	B2	6	8	B2	10	8	10	8
04200185	8			8						
05200250	10	10	B2	10	10	B2	8	8	8	8
06200330	16	25	B2	16	25	B2	4	3	4	3
06200440	25			3			3			
07200610	35	70	B2	35	70	B2	2	1/0	2	1/0
07200750				1			1			
07200830				70			1/0		1/0	
08201160	95	2 x 70	B2	95	2 x 70	B2	3/0	2 x 1	3/0	2 x 1
08201320	2 x 70			2 x 1			2 x 1			
09201760	2 x 70		B1	2 x 95		B2	2 x 2/0		2 x 2/0	
09202190	2 x 95			2 x 120			2 x 4/0		2 x 4/0	
10202830	2 x 120		B1	2 x 120		C	2 x 250		2 x 250	
10203000	2 x 150		C	2 x 120			2 x 300		2 x 250	

Table 12-19 Cable ratings (400 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
03400025	1.5	4	B2	1.5	4	B2	18	10	18	10
03400031				16			16			
03400045				14			14			
03400062	2.5	4	B2	2.5	4	B2	12	10	12	10
03400078				12			12			
03400100	2.5	4	B2	2.5	4	B2	12	10	12	10
04400150	4	6	B2	4	6	B2	10	8	10	8
04400172	6			8			8			
05400270	6	6	B2	6	6	B2	8	8	8	8
05400300	6	6	B2	6	6	B2	8	8	8	8
06400350	10	25	B2	10	25	B2	6	3	6	3
06400420	16			4			4			
06400470	25			3			3			
07400660	35	70	B2	35	70	B2	1	1/0	1	1/0
07400770	50			2			2			
07401000	70			1/0			1/0			
08401340	2 x 50	2 x 70	B2	2 x 50	2 x 70	B2	2 x 1	2 x 1/0	2 x 1	2 x 1/0
08401570	2 x 70			2 x 1/0			2 x 1/0			
09402000	2 x 70		B1	2 x 95		B2	2 x 3/0		2 x 2/0	
09402240	2 x 95			2 x 120			2 x 4/0		2 x 4/0	
10402700	2 x 120		C	2 x 120		B2	2 x 300		2 x 250	
10403200	2 x 150			2 x 150			2 x 350		2 x 300	

Table 12-20 Cable ratings (575 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
05500030	0.75	1.5	B2	0.75	1.5	B2	16	16	16	16
05500040	1			1			14		14	
05500069	1.5			1.5			14		14	
06500100	2.5	25	B2	2.5	25	B2	14	3	14	3
06500150	4			4			10		10	
06500190	6			6			10		10	
06500230	10			10			8		8	
06500290							6		6	
06500350							6		6	
07500440							16		16	
07500550	25	25	3	3						
08500630	35	50	B2	35	50	B2	1	1	1	1
08500860	50			50			1		1	
09501040	2 x 70		B2	2 x 35		B2	2 x 1		2 x 3	
09501310				2 x 50					2 x 1	
10501520	2 x 70		B2	2 x 70		B2	2 x 2/0		2 x 2/0	
10501900	2 x 95									

Table 12-21 Cable ratings (690 V)

Model	Cable size (IEC) mm ²						Cable size (UL) AWG			
	Input			Output			Input		Output	
	Nominal	Maximum	Installation method	Nominal	Maximum	Installation method	Nominal	Maximum	Nominal	Maximum
07600190	10	25	B2	10	25	B2	8	3	8	3
07600240				6			6			
07600290				6			6			
07600380				4			4			
07600440				4			4			
07600540				3			3			
08600630	50	70	B2	50	70	B2	2	1/0	2	1/0
08600860	70			70			1/0		1/0	
09601040	2 x 50		B2	2 x 35		B2	2 x 1		2 x 3	
09601310	2 x 70			2 x 50			2 x 1/0		2 x 1	
10601500	2 x 70		B2	2 x 70		B2	2 x 2/0		2 x 1/0	
10601780	2 x 95						2 x 3/0		2 x 2/0	

12.1.22 Protective ground cable ratings

Table 12-22 Protective ground cable ratings

Input phase conductor size	Minimum ground conductor size
$\leq 10 \text{ mm}^2$	Either 10 mm^2 or two conductors of the same cross-sectional area as the input phase conductor (an additional ground connection is provided on sizes 3, 4 and 5 for this purpose).
$> 10 \text{ mm}^2$ and $\leq 16 \text{ mm}^2$	The same cross-sectional area as the input phase conductor
$> 16 \text{ mm}^2$ and $\leq 35 \text{ mm}^2$	16 mm^2
$> 35 \text{ mm}^2$	Half of the cross-sectional area of the input phase conductor

12.1.23 Input line reactor specification for size 9E and 10



A separate line reactor (INLXXX) of at least the value shown in Table 12-24 and Table 12-23 must be used with size 9E and 10. Failure to provide sufficient reactance could damage or reduce the service life of the drive.

CAUTION

Table 12-23 Size 9E and 10 Model and Line reactor part number

Size	Drive model	Inductor model	Line reactor part number
9	09201760, 09202190, 09402000, 09402240	INL 401	4401-0181
	09501040, 09501310, 09601040, 09601310	INL 401W*	4401-0208
10	10202830, 10203000, 10402700, 10403200	INL 601	4401-0183
		INL 402	4401-0182
	10501520, 10501900, 10601500, 10601780	INL 402W*	4401-0209
		INL 602	4401-0184

Figure 12-1 Input line reactor dimensions

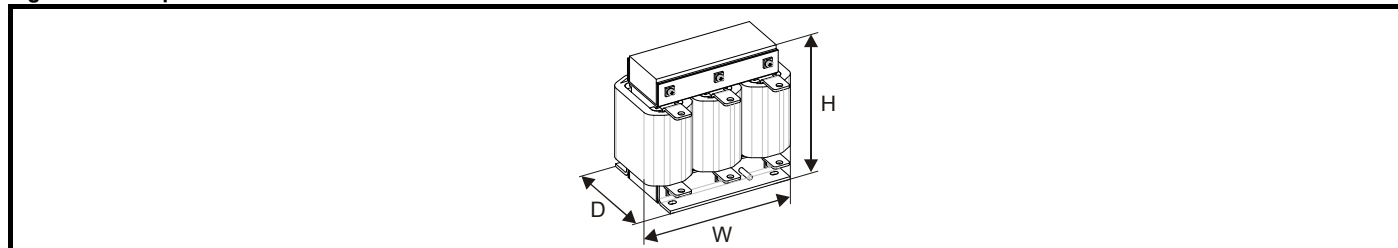


Table 12-24 Input line reactor ratings

Part number	Model	Current	Inductance	Overall width (W)	Overall depth (D)	Overall height (H)	Weight	Max ambient temp	Min airflow	Maximum losses	Quantity required
		A	μH	mm	mm	mm	kg	$^{\circ}\text{C}$	m/s	W	
4401-0181	INL 401	245	63	240	190	225	32	50	1	148	1
4401-0182	INL 402	339	44	276	200	225	36	50	1	205	1
4401-0208	INL 401W*	245	63	255	235	200	27	40	3		1
4401-0209	INL 402W*	339	44	255	235	200	27	40	3		1
4401-0183	INL 601	145	178	240	190	225	33	50	1	88	1
4401-0184	INL 602	192	133	276	200	225	36	50	1	116	1

*May represent a more economic solution where operating temperature and cooling requirements are observed.

NOTE

If symmetrical fault current exceeds 38 kA then a line reactor with a higher inductance must be used, consult the supplier of the drive.

12.1.24 Maximum motor cable lengths

Table 12-25 Maximum motor cable lengths (200 V drives)

200 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
03200050	65 m (210 ft)						
03200066	100 m (330 ft)						
03200080	130 m (425 ft)			100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
03200106	200 m (660 ft)		150 m (490 ft)				
04200137	200 m (660 ft)		150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
04200185							
05200250	200 m (660 ft)		150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
06200330	300 m (984 ft)	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	
06200440							
07200610	250 m (820 ft)		185 m (607 ft)	125 m (410 ft)	90 m (295 ft)		
07200750							
07200830							
08201160	250 m (820 ft)		185 m (607 ft)	125 m (410 ft)	90 m (295 ft)		
08201320							
09201760	250 m (820 ft)						
09202190							
10202830	250 m (820 ft)						
10203000							

Table 12-26 Maximum motor cable lengths (400 V drives)

400 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
03400025	65 m (210 ft)						
03400031	100 m (330 ft)						
03400045	130 m (425 ft)			100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
03400062	200 m (660 ft)		150 m (490 ft)				
03400078	200 m (660 ft)		150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
03400100							
04400150	200 m (660 ft)		150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
04400172							
05400270	200 m (660 ft)		150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	37 m (120 ft)
05400300							
06400350	300 m (984 ft)	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	
06400420							
06400470							
07400660	250 m (820 ft)		185 m (607 ft)	125 m (410 ft)	90 m (295 ft)		
07400770							
07401000							
08401340	250 m (820 ft)		185 m (607 ft)	125 m (410 ft)	90 m (295 ft)		
08401570							
09402000	250 m (820 ft)						
09402240							
10402700	250 m (820 ft)						
10403200							

Table 12-27 Maximum motor cable lengths (575 V drives)

575 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
05500030	200 m (660 ft)						
05500040							
05500069							
06500100	300 m (984 ft)	200 m (660 ft)	150 m (490 ft)	100 m (330 ft)	75 m (245 ft)	50 m (165 ft)	
06500150							
06500190							
06500230							
06500290							
06500350							
07500440	200 m (660 ft)						
07500550							
08500630	250 m (820 ft)						
08500860							
09501040	250 m (820 ft)						
09501310							
10501520	250 m (820 ft)						
10501900							

Table 12-28 Maximum motor cable lengths (690 V drives)

690 V Nominal AC supply voltage							
Model	Maximum permissible motor cable length for each of the following switching frequencies						
	2 kHz	3 kHz	4 kHz	6 kHz	8 kHz	12 kHz	16 kHz
07600190	250 m (820 ft)		185 m (607 ft)	125 m (410 ft)	90 m (295 ft)		
07600240							
07600290							
07600380							
07600440							
07600540							
08600630	250 m (820 ft)		185 m (607 ft)	125 m (410 ft)	90 m (295 ft)		
08600860							
09601040	250 m (820 ft)						
09601310							
10601500	250 m (820 ft)						
10601780+							

- Cable lengths in excess of the specified values may be used only when special techniques are adopted; refer to the supplier of the drive.
 - The default switching frequency is 3 kHz for Open-loop and RFC-A and 6 kHz for RFC-S mode.
- The maximum cable length is reduced from that shown in Table 12-27 and Table 12-28 if high capacitance or reduced diameter motor cables are used. For further information, refer to section 4.9.2 *High-capacitance / reduced diameter cables* on page 76.

12.1.25 Braking resistor values

Minimum resistances and power ratings for the braking resistor at 40 °C (104 °F)

Table 12-29 Braking resistor resistance and power rating (200 V)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
03200050	20	8.5	1.5
03200066			1.9
03200080			2.8
03200106			3.6
04200137			4.6
04200185	18	9.4	6.3
05200250	16.5	10.3	8.6
06200330	8.6	19.7	12.6
06200440			16.4
07200610			20.5
07200750	6.1	27.8	24.4
07200830	4.5	37.6	32.5
08201160	2.2	76.9	41
08201320			47.8
09201760	1.2	144.5	59.4
09202190			79.7
10202830	1.3	130	98.6
10203000			116.7

Table 12-30 Braking resistor resistance and power rating (400 V)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
03400025	74	9.2	1.5
03400031			2.0
03400045			2.8
03400062			4.6
03400078			5.0
03400100	50	13.6	6.6
04400150	34	19.9	9.0
04400172			12.6
05400270	31.5	21.5	16.2
05400300	18	37.5	19.6
06400350	17	39.8	21.6
06400420			25
06400470			32.7
07400660	9.0	75.2	41.6
07400770			50.6
07401000	7.0	96.6	60.1
08401340	4.8	140.9	81
08401570			98.6
09402000	2.4	282.9	118.6
09402240			156.9
10402700	2.6	260	198.2
10403200			237.6

Table 12-31 Braking resistor resistance and power rating (575 V)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
05500030	80	12.1	2.6
05500040			4.6
05500069			6.5
06500100	13	74	8.7
06500150			12.3
06500190			16.3
06500230			19.9
06500290			24.2
06500350			31.7
07500440	8.5	113.1	39.5
07500550			47.1
08500630	5.5	174.8	58.6
08500860			78.1
09501040	3.3	291.3	97.7
09501310			116.7
10501520	3.3	291.3	155.6
10501900	2.5	384.4	

Table 12-32 Braking resistor resistance and power rating (690 V)

Model	Minimum resistance* Ω	Instantaneous power rating kW	Continuous power rating kW
07600190	11.5	121.2	20.6
07600240			23.9
07600290			32.5
07600380			41.5
07600440			47.8
07600540			60.5
08600630	5.5	253.5	79.7
08600860			95.2
09601040	4.2	331.9	116.3
09601310			139.1
10601500	4.2	331.9	166.7
10601780	3.3	422.4	193

* Resistor tolerance: ±10 %

12.1.26 Torque settings

Table 12-33 Drive control and relay terminal data

Model	Connection type	Torque setting
All	Plug-in terminal block	0.5 N m (0.4 lb ft)

Table 12-34 Drive power terminal data

Unidrive M frame size	AC and motor terminals		DC and braking		Ground terminal	
	Recommended	Maximum	Recommended	Maximum	Recommended	Maximum
3 and 4	Plug-in terminal block		T20 Torx (M4)		T20 Torx (M4) / M4 Nut (7 mm AF)	
	0.7 N m (0.5 lb ft)	0.8 N m (0.6 lb ft)	2.0 N m (1.4 lb ft)	2.5 N m (1.8 lb ft)	2.0 N m (1.4 lb ft)	2.5 N m (1.8 lb ft)
5	Plug-in terminal block		T20 Torx (M4) / M4 Nut (7 mm AF)		M5 Nut (8 mm AF)	
	1.5 N m (1.1 lb ft)	1.8 N m (1.3 lb ft)	1.5 N m (1.1 lb ft)	2.5 N m (1.8 lb ft)	2.0 N m (1.4 lb ft)	5.0 N m (3.7 lb ft)
6	M6 Nut (10 mm AF)		M6 Nut (10 mm AF)		M6 Nut (10 mm AF)	
	6.0 N m (4.4 lb ft)	8.0 N m (6.0 lb ft)	6.0 N m (4.4 lb ft)	8.0 N m (6.0 lb ft)	6.0 N m (4.4 lb ft)	8.0 N m (6.0 lb ft)
7	M8 Nut (13 mm AF)		M8 Nut (13 mm AF)		M8 Nut (13 mm AF)	
	12 N m (8.8 lb ft)	14 N m (10.0 lb ft)	12 N m (8.8 lb ft)	14 N m (10.0 lb ft)	12 N m (8.8 lb ft)	14 N m (10.0 lb ft)
8 to 10	M10 Nut (17 mm AF)		M10 Nut (17 mm AF)		M10 Nut (17 mm AF)	
	15 N m (11.1 lb ft)	20 N m (14.8 lb ft)	15 N m (11.1 lb ft)	20 N m (14.8 lb ft)	15 N m (11.1 lb ft)	20 N m (14.8 lb ft)

Table 12-35 Plug-in terminal block maximum cable sizes

Model size	Terminal block description	Max cable size
All	11 way control connectors	1.5 mm ² (16 AWG)
	2 way relay connector	2.5 mm ² (12 AWG)
3	6 way AC power connector	6 mm ² (10 AWG)
4		
5	3 way AC power connector 3 way motor connector	8 mm ² (8 AWG)
6	2 way low voltage power 24 V supply connector	1.5 mm ² (16 AWG)
7		
8		
9E		
10		

Table 12-36 External EMC filter terminal data

CT part number	Power connections		Ground connections	
	Max cable size	Max torque	Ground stud size	Max torque
4200-0122	16 mm ² (6 AWG)	2.3 N m (1.7 lb ft)	M6	4.8 N m (2.8 lb ft)
4200-0252		1.8 N m (1.4 lb ft)		
4200-0272				
4200-0312				
4200-0402				
4200-3230	4 mm ² (12 AWG)	0.8 N m (0.59 lb ft)	M5	3.0 N m (2.2 lb ft)
4200-3480	4 mm ² (12 AWG)	0.8 N m (0.59 lb ft)	M5	
4200-2300	16 mm ² (6 AWG)	2.3 N m (1.70 lb ft)	M6	4.8 N m (2.8 lb ft)
4200-4800				
4200-3690				

12.1.27 Electromagnetic compatibility (EMC)

This is a summary of the EMC performance of the drive. For full details, refer to the *EMC Data Sheet* which can be obtained from the supplier of the drive.

Table 12-37 Immunity compliance

Standard	Type of immunity	Test specification	Application	Level
IEC61000-4-2 EN61000-4-2	Electrostatic discharge	6 kV contact discharge 8 kV air discharge	Module enclosure	Level 3 (industrial)
IEC61000-4-3 EN61000-4-3	Radio frequency radiated field	10 V/m prior to modulation 80 - 1000 MHz 80 % AM (1 kHz) modulation	Module enclosure	Level 3 (industrial)
IEC61000-4-4 EN61000-4-4	Fast transient burst	5/50 ns 2 kV transient at 5 kHz repetition frequency via coupling clamp	Control lines	Level 4 (industrial harsh)
		5/50 ns 2 kV transient at 5 kHz repetition frequency by direct injection	Power lines	Level 3 (industrial)
IEC61000-4-5 EN61000-4-5	Surges	Common mode 4 kV 1.2/50 μs waveshape	AC supply lines: line to ground	Level 4
		Differential mode 2 kV 1.2/50 μs waveshape	AC supply lines: line to line	Level 3
		Lines to ground	Signal ports to ground ¹	Level 2
IEC61000-4-6 EN61000-4-6	Conducted radio frequency	10V prior to modulation 0.15 - 80 MHz 80 % AM (1 kHz) modulation	Control and power lines	Level 3 (industrial)
IEC61000-4-11 EN61000-4-11	Voltage dips and interruptions	-30 % 10 ms +60 % 100 ms -60 % 1 s <-95 % 5 s	AC power ports	
IEC61000-6-1 EN61000-6-1:2007	Generic immunity standard for the residential, commercial and light - industrial environment			Complies
IEC61000-6-2 EN61000-6-2:2005	Generic immunity standard for the industrial environment			Complies
IEC61800-3 EN61800-3:2004	Product standard for adjustable speed power drive systems (immunity requirements)		Meets immunity requirements for first and second environments	

¹ See section *Surge immunity of control circuits - long cables and connections outside a building* on page 90 for control ports for possible requirements regarding grounding and external surge protection

Emission

The drive contains an in-built filter for basic emission control. An additional optional external filter provides further reduction of emission. The requirements of the following standards are met, depending on the motor cable length and switching frequency.

Table 12-38 Size 3 emission compliance (200 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 - 2	C3			C4			
Using internal filter and ferrite ring (2 turns):							
0 - 10	C3				C4		
10-20	C3			C4			
Using external filter:							
0 - 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 - 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-39 Size 3 emission compliance (400 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 - 5	C3			C4			
Using internal filter and ferrite ring (2 turns):							
0 - 10	C3				C4		
Using external filter:							
0 - 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 - 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-40 Size 4 emission compliance (200 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 - 2	C3			C4			
Using internal filter and ferrite ring (2 turns):							
0 - 4	C3			C4			
Using external filter:							
0 - 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 - 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-41 Size 4 emission compliance (400 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 - 4	C3			C4			
Using internal filter and ferrite ring (2 turns):							
0 - 10	C3			C4			
Using external filter:							
0 - 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 - 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-42 Size 5 emission compliance (200 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 - 2	C3			C4			
Using internal filter and ferrite ring (1 turn - no advantage to 2 turns):							
0 - 2	C3				C4		
0 - 5	C3			C4			
0 - 7	C3			C4			
0 - 10	C3	C4					
Using external filter:							
0 - 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 - 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-43 Size 5 emission compliance (400 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 – 4	C3			C4			
0 – 10	C3	C4					
No advantage to using ferrite ring							
Using external filter:							
0 – 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 – 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-44 Size 5 emission compliance (575 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
-	C4						
Using internal filter and ferrite ring (2 turns):							
0 – 4	C3			C4			
0 – 2	C3					C4	
Using external filter:							
0 – 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 – 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-45 Size 6 emission compliance (200 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 – 2	C3	C4					
Using internal filter and ferrite ring (1 turn – no advantage to 2 turns):							
0 – 2	C3					C4	
0 – 5	C3			C4			
0 – 7	C3		C4				
0 – 10	C3	C4					
Using external filter:							
0 – 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 – 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-46 Size 6 emission compliance (400 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
0 – 4	C3			C4			
0 – 10	C3	C4					
No advantage to using ferrite ring							
Using external filter:							
0 – 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 – 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Table 12-47 Size 6 emission compliance (575 V drives)

Motor cable length (m)	Switching Frequency (kHz)						
	2	3	4	6	8	12	16
Using internal filter:							
-	C4						
Using internal filter and ferrite ring (2 turns):							
0 – 4	C3			C4			
0 – 2	C3					C4	
Using external filter:							
0 – 20	R (C1)	R (C1)	I (C2)	I (C2)	I (C2)	I (C2)	I (C2)
20 – 100	I (C2)	I (C2)	C3	C3	C3	C3	C3

Size 3 emission compliance (400 V drives)

Key (shown in decreasing order of permitted emission level):

- E2R EN 61800-3:2004 second environment, restricted distribution (Additional measures may be required to prevent interference)
- E2U EN 61800-3:2004 second environment, unrestricted distribution
- I Industrial generic standard EN 61000-6-4:2007
EN 61800-3:2004 first environment restricted distribution (The following caution is required by EN 61800-3:2004)



This is a product of the restricted distribution class according to IEC 61800-3. In a residential environment this product may cause radio interference in which case the user may be required to take adequate measures.

- R Residential generic standard EN 61000-6-3:2007
EN 61800-3:2004 first environment unrestricted distribution

EN 61800-3:2004 defines the following:

- The first environment is one that includes residential premises. It also includes establishments directly connected without intermediate transformers to a low-voltage power supply network which supplies buildings used for residential purposes.
- The second environment is one that includes all establishments other than those directly connected to a low-voltage power supply network which supplies buildings used for residential purposes.
- Restricted distribution is defined as a mode of sales distribution in which the manufacturer restricts the supply of equipment to suppliers, customers or users who separately or jointly have technical competence in the EMC requirements of the application of drives.

IEC 61800-3:2004 and EN 61800-3:2004

The 2004 revision of the standard uses different terminology to align the requirements of the standard better with the EC EMC Directive.

Power drive systems are categorized C1 to C4:

Category	Definition	Corresponding code used above
C1	Intended for use in the first or second environments	R
C2	Not a plug-in or movable device, and intended for use in the first environment only when installed by a professional, or in the second environment	I
C3	Intended for use in the second environment, not the first environment	E2U
C4	Rated at over 1000 V or over 400 A , intended for use in complex systems in the second environment	E2R

Note that category 4 is more restrictive than E2R, since the rated current of the PDS must exceed 400 A or the supply voltage exceed 1000 V, for the complete PDS.

12.2 Optional external EMC filters

Table 12-48 EMC filter cross reference

Model	CT part number
200 V	
03200050 to 03200106	4200-3230
04200137 to 04200185	4200-0272
05200250	4200-0312
06200330 to 06200440	4200-2300
07200610 to 07200830	4200-1132
08201160 to 08201320	4200-1972
400 V	
03400025 to 03400100	4200-3480
04400150 to 04400172	4200-0252
05400270 to 05400300	4200-0402
06400350 to 06400470	4200-4800
07400660 to 07401000	4200-1132
08401340 to 08401570	4200-1972
575 V	
05500030 to 05500069	4200-0122
06500100 to 06500350	4200-3690
07500440 to 07500550	4200-0672
08500630 to 08500860	4200-1662
690 V	
07600190 to 07600540	4200-0672
08600630 to 08600860	4200-1662

12.2.1 EMC filter ratings

Table 12-49 Optional external EMC filter details

CT part number	Maximum continuous current		Voltage rating		IP rating	Power dissipation at rated current		Ground leakage		Discharge resistors MΩ
	@ 40 °C (104 °F)	@ 50 °C (122 °F)	IEC	UL		@ 40 °C (104 °F)	@ 50 °C (122 °F)	Balanced supply phase-to-phase and phase-to-ground	Worst case	
	A	A	V	V		W	W	mA	mA	
4200-3230	20	18.5	250	300	20	20	17	2.4	60	1.68
4200-0272	27	24.8	250	300		33	28	6.8	137	
4200-0312	31	28.5	250	300		20	17	2.0	80	
4200-2300	55	51	250	300		41	35	4.2	69	
4200-3480	16	15	528	600		13	11	10.7	151	
4200-0252	25	23	528	600		28	24	11.1	182	
4200-0402	40	36.8	528	600		47	40	18.7	197	
4200-4800	63	58	528	600		54	46	11.2	183	
4200-0122	12	11	760	600						
4200-3690	42	39	760	600		45	39	12	234	

12.2.2 Overall EMC filter dimensions

Table 12-50 Optional external EMC filter dimensions

CT part number	Dimension (mm)						Weight	
	H		W		D			
	mm	inch	mm	inch	mm	inch	kg	lb
4200-3230	426	16.77	83	3.27	41	1.61	1.9	4.20
4200-0272	437	17.20	123	4.84	60	2.36	4.0	8.82
4200-0312	437	17.20	143	5.63	60	2.36	5.5	12.13
4200-2300	434	17.09	210	8.27	60	2.36	6.5	14.30
4200-3480	426	16.77	83	3.27	41	1.61	2.0	4.40
4200-0252	437	17.20	123	4.84	60	2.36	4.1	9.04
4200-0402	437	17.20	143	5.63	60	2.36	5.5	12.13
4200-4800	434	17.09	210	8.27	60	2.36	6.7	14.80
4200-0122	437	17.20	143	5.63	60	2.36	5.5	12.13
4200-3690	434	17.09	210	8.27	60	2.36	7.0	15.40
4200-1132	270	10.63	90	3.54	205	8.07	6.9	15.20
4200-0672	270	10.63	90	3.54	205	8.07		
4200-1972	270	10.63	90	3.54	205	8.07	6.9	15.20
4200-1662	270	10.63	90	3.54	205	8.07		

12.2.3 EMC filter torque settings


Table 12-51 Optional external EMC Filter terminal data

CT part number	Power connections		Ground connections	
	Max cable size	Max torque	Ground stud size	Max torque
4200-1132	50 mm ² (1/0 AWG)	8.0 N m (6.0 lb ft)	M10	18 N m (13.3 lb ft)
4200-0672		20 N m (14.8 lb ft)		
4200-1972		2.3 N m (1.7 lb ft)		
4200-1662	16 mm ² (6 AWG)	1.8 N m (1.4 lb ft)	M6	5.0 N m (3.7 lb ft)
4200-0122		0.8 N m (0.59 lb ft)		
4200-0252		0.8 N m (0.59 lb ft)		
4200-0272				
4200-0312				
4200-0402				
4200-3230	4 mm ² (12 AWG)	0.8 N m (0.59 lb ft)	M5	2.5 N m (1.8 lb ft)
4200-3480	4 mm ² (12 AWG)	0.8 N m (0.59 lb ft)	M5	
4200-2300	16 mm ² (6 AWG)	2.3 N m (1.70 lb ft)	M6	5.0 N m (3.7 lb ft)
4200-4800				
4200-3690				

13 Diagnostics

The keypad display on the drive gives various information about the status of the drive. The keypad display provides information on the following categories:

- Trip indications
- Alarm indications
- Status indications




Users must not attempt to repair a drive if it is faulty, nor carry out fault diagnosis other than through the use of the diagnostic features described in this chapter. If a drive is faulty, it must be returned to an authorized Control Techniques distributor for repair.

WARNING


13.1 Status modes (Keypad and LED status)

Figure 13-1 Keypad status modes

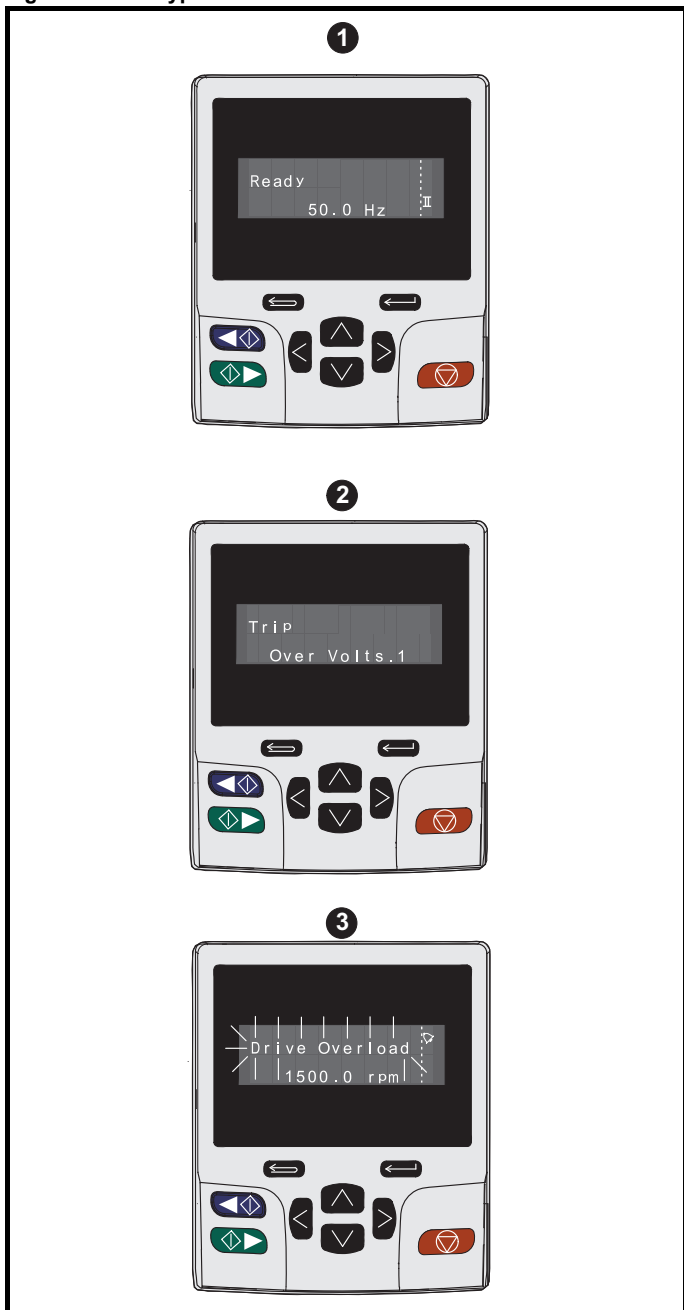

1. Drive OK status
2. Trip status
3. Alarm status

Figure 13-2 Location of the status LED

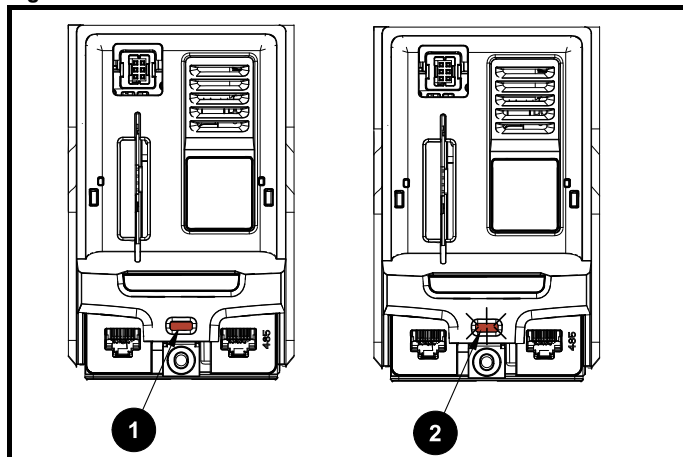

1. Non flashing: Normal status
2. Flashing: Trip status

13.2 Trip indications

The output of the drive is disabled under any trip condition so that the drive stops controlling the motor. If the motor is running when the trip occurs it will coast to a stop.


During a trip condition, where a KI-Keypad is being used, the upper row of the display indicates that a trip has occurred and the lower row of the keypad display will display the trip string. Some trips have a sub-trip number to provide additional information about the trip. If a trip has a sub-trip number, the sub-trip number is flashed alternately with the trip string unless there is space on the second row for both the trip string and the sub-trip number in which case both the trip string and sub-trip information is displayed separated by a decimal place.

The back-light of the KI-Keypad display will also flash during a trip condition. If a display is not being used, the drive LED Status indicator will flash with 0.5 s duty cycle if the drive has tripped. Refer to Figure 13-2.

Trips are listed alphabetically in Table 13-3 based on the trip indication shown on the drive display. Alternatively, the drive status can be read in Pr **10.001** 'Drive OK' using communication protocols. The most recent trip can be read in Pr **10.020** providing a trip number. It must be noted that the hardware trips (HF01 to HF20) do not have trip numbers. The trip number must be checked in Table 13-4 to identify the specific trip.

Example

1. Trip code 2 is read from Pr **10.020** via serial communications.
2. Checking Table 13-3 shows Trip 2 is an Over Volts trip.

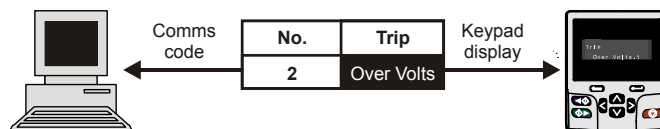

3. Look up Over Volts in Table 13-3.
4. Perform checks detailed under *Diagnostics*.

13.3 Identifying a trip / trip source

Some trips only contain a trip string whereas some other trips have a trip string along with a sub-trip number which provides the user with additional information about the trip.

A trip can be generated from a control system or from a power system. The sub-trip number associated with the trips listed in Table 13-1 is in the form xxyzz and used to identify the source of the trip.

Table 13-1 Trips associated with xxyzz sub-trip number


Over Volts	OHT dc bus
OI ac	Phase Loss
OI Brake	Power Comms
PSU	OI Snubber
OHT Inverter	OHT Rectifier
OHT Power	Temp Feedback
OHT Control	Power Data

The digits xx are 00 for a trip generated by the control system. For a single drive (not part of a multi-power module drive), if the trip is related to the power system then xx will have a value of 01, when displayed the leading zeros are suppressed.

The y digit is used to identify the location of a trip which is generated by a rectifier module connected to a power module (if xx is non zero). For a control system trip (xx is zero), the y digit, where relevant is defined for each trip. If not relevant, the y digit will have a value of zero.

The zz digits give the reason for the trip and are defined in each trip description.

Figure 13-3 Key to sub-trip number

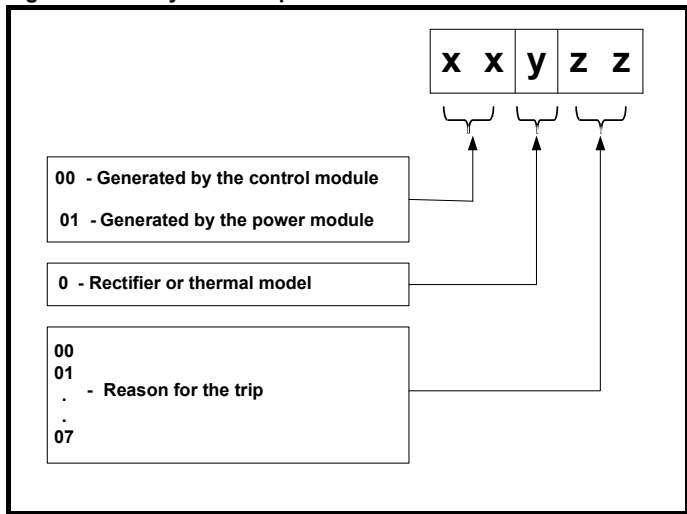

For example, if the drive has tripped and the lower line of the display shows 'OHT Control.2', with the help Table 13-2 below the trip can be interpreted as; an over temperature has been detected; the trip was generated by fault in the control module, the control board thermistor 2 over temperature.

Table 13-2 Sub-trip identification

Source	xx	y	zz	Description
Control system	00	0	01	Control board thermistor 1 over temperature
Control system	00	0	02	Control board thermistor 2 over temperature
Control system	00	0	03	Control board thermistor 3 over temperature

13.4 Trips, Sub-trip numbers

Table 13-3 Trip indications

Trip	Diagnosis								
An Input 1 Loss	Analog input 1 current loss								
28	<p><i>An Input 1 Loss</i> trip indicates that a current loss was detected in current mode on Analog input 1 (Terminal 5, 6). In 4-20 mA and 20-4 mA modes loss of input is detected if the current falls below 3 mA.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check control wiring is correct • Check control wiring is undamaged • Check the <i>Analog Input 1 Mode</i> (07.007) • Current signal is present and greater than 3 mA 								
An Input 2 Loss	Analog input 2 current loss								
29	<p><i>An Input 2 Loss</i> indicates that a current loss was detected in current mode on Analog input 2 (Terminal 7). In 4-20 mA and 20-4 mA modes loss of input is detected if the current falls below 3 mA.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check control wiring is correct • Check control wiring is undamaged • Check the <i>Analog Input 2 Mode</i> (07.011) • Current signal is present and greater than 3 mA 								
An Output Calib	Analog output calibration failed								
219	<p>The <i>An output Calib</i> trip indicates that one or both of the Analog outputs have failed during the zero offset calibration. The failed output can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Output 1 failed (Terminal 9)</td> </tr> <tr> <td>2</td> <td>Output 2 failed (Terminal 10)</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the wiring associated with analog outputs • Remove all the wiring that is connected to analog outputs and perform the calibration • If trip persists replace the drive 	Sub-trip	Reason	1	Output 1 failed (Terminal 9)	2	Output 2 failed (Terminal 10)		
Sub-trip	Reason								
1	Output 1 failed (Terminal 9)								
2	Output 2 failed (Terminal 10)								
App Menu Changed	Customization table for an application module has changed								
217	<p>The <i>App Menu Changed</i> trip indicates that the customization table for an application menu has changed. The menu that has been changed can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Menu 18</td> </tr> <tr> <td>2</td> <td>Menu 19</td> </tr> <tr> <td>3</td> <td>Menu 20</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Reset the trip and perform a parameter save to accept the new settings 	Sub-trip	Reason	1	Menu 18	2	Menu 19	3	Menu 20
Sub-trip	Reason								
1	Menu 18								
2	Menu 19								
3	Menu 20								
Autotune 1	Position feedback did not change or required speed could not be reached								
11	<p>The drive has tripped during an autotune. The cause of the trip can be identified from the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The position feedback did not change when position feedback is being used during rotating autotune.</td> </tr> <tr> <td>2</td> <td>The motor did not reach the required speed during rotating autotune or mechanical load measurement.</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the motor is free to turn i.e. mechanical brake was released • Ensure Pr 03.026 and Pr 03.038 are set correctly (or appropriate 2nd motor map parameters) • Check feedback device wiring is correct • Check encoder mechanical coupling to the motor 	Sub-trip	Reason	1	The position feedback did not change when position feedback is being used during rotating autotune.	2	The motor did not reach the required speed during rotating autotune or mechanical load measurement.		
Sub-trip	Reason								
1	The position feedback did not change when position feedback is being used during rotating autotune.								
2	The motor did not reach the required speed during rotating autotune or mechanical load measurement.								

Trip	Diagnosis						
Autotune 2	Position feedback direction incorrect						
12	The drive has tripped during a rotating autotune. The cause of the trip can be identified from the associated sub-trip number.						
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The position feedback direction is incorrect when position feedback is being used during a rotating autotune</td> </tr> <tr> <td>2</td> <td>The motor did not reach the required speed during rotating autotune or mechanical load measurement.</td> </tr> </tbody> </table>	Sub-trip	Reason	1	The position feedback direction is incorrect when position feedback is being used during a rotating autotune	2	The motor did not reach the required speed during rotating autotune or mechanical load measurement.
	Sub-trip	Reason					
	1	The position feedback direction is incorrect when position feedback is being used during a rotating autotune					
2	The motor did not reach the required speed during rotating autotune or mechanical load measurement.						
Recommended actions: <ul style="list-style-type: none"> • Check motor cable wiring is correct • Check feedback device wiring is correct • Swap any two motor phases 							
Autotune 3	Measured inertia has exceeded the parameter range or commutation signals changed in wrong direction						
13	The drive has tripped during a rotating autotune or mechanical load measurement test. The cause of the trip can be identified from the associated sub-trip number.						
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Measured inertia has exceeded the parameter range during a mechanical load measurement</td> </tr> <tr> <td>2</td> <td>The commutation signals changed in the wrong direction during a rotating autotune</td> </tr> </tbody> </table>	Sub-trip	Reason	1	Measured inertia has exceeded the parameter range during a mechanical load measurement	2	The commutation signals changed in the wrong direction during a rotating autotune
	Sub-trip	Reason					
	1	Measured inertia has exceeded the parameter range during a mechanical load measurement					
2	The commutation signals changed in the wrong direction during a rotating autotune						
Recommended actions: <ul style="list-style-type: none"> • Check motor cable wiring is correct • Check feedback device U,V and W commutation signal wiring is correct 							
Autotune 7	Motor number of poles / position feedback resolution set incorrectly						
17	An <i>Autotune 7</i> trip is initiated during a rotating autotune, if the motor poles or the position feedback resolution have been set up incorrectly where position feedback is being used.						
	Recommended actions: <ul style="list-style-type: none"> • Check line per revolution for feedback device • Check the number of poles in Pr 05.011 						
Autotune Stopped	Autotune test stopped before completion						
18	The drive was prevented from completing an autotune test, because either the drive enable or the drive run were removed.						
	Recommended actions: <ul style="list-style-type: none"> • Check the drive enable signal (Terminal 31) was active during the autotune • Check the run command was active in Pr 08.005 during autotune 						
Brake R Too Hot	Braking resistor overload timed out (I²t)						
19	The <i>Brake R Too Hot</i> indicates that braking resistor overload has timed out. The value in <i>Braking Resistor Thermal Accumulator</i> (10.039) is calculated using <i>Braking Resistor Rated Power</i> (10.030), <i>Braking Resistor Thermal Time Constant</i> (10.031) and <i>Braking Resistor Resistance</i> (10.061). The <i>Brake R Too Hot</i> trip is initiated when <i>Braking Resistor Thermal Accumulator</i> (10.039) reaches 100 %.						
	Recommended actions: <ul style="list-style-type: none"> • Ensure the values entered in Pr 10.030, Pr 10.031 and Pr 10.061 are correct • If an external thermal protection device is being used and the braking resistor software overload protection is not required, set Pr 10.030, Pr 10.031 or Pr 10.061 to 0 to disable the trip. 						
CAM	Advanced motion controller CAM failure						
99	The <i>CAM</i> trip indicates that the advanced motion controller CAM has detected a problem.						
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>CAM index or segment is out of range</td> </tr> <tr> <td>2</td> <td><i>AMC CAM Index</i> (35.007) has been made to change by more than 2 in one sample</td> </tr> </tbody> </table>	Sub-trip	Reason	1	CAM index or segment is out of range	2	<i>AMC CAM Index</i> (35.007) has been made to change by more than 2 in one sample
	Sub-trip	Reason					
	1	CAM index or segment is out of range					
2	<i>AMC CAM Index</i> (35.007) has been made to change by more than 2 in one sample						
Card Access	NV Media Card Write fail						
185	The <i>Card Access</i> trip indicates that the drive was unable to access the NV Media Card. If the trip occurs during the data transfer to the card then the file being written may be corrupted. If the trip occurs when the data being transferred to the drive then the data transfer may be incomplete. If a parameter file is transferred to the drive and this trip occurs during the transfer, the parameters are not saved to non-volatile memory, and so the original parameters can be restored by powering the drive down and up again.						
	Recommended actions: <ul style="list-style-type: none"> • Check NV Media Card is installed / located correctly • Replace the NV Media Card 						

Trip	Diagnosis								
Card Boot	The Menu 0 parameter modification cannot be saved to the NV Media Card								
177	<p>Menu 0 changes are automatically saved on exiting edit mode.</p> <p>The <i>Card Boot</i> trip will occur if a write to a Menu 0 parameter has been initiated via the keypad by exiting edit mode and Pr 11.042 is set for auto or boot mode, but the necessary boot file has not been created on the NV Media Card to take the new parameter value. This occurs when Pr 11.042 is changed to Auto (3) or Boot (4) mode, but the drive is not subsequently reset.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure that Pr 11.042 is correctly set, and then reset the drive to create the necessary file on the NV Media Card • Re-attempt the parameter write to the Menu 0 parameter 								
Card Busy	NV Media Card cannot be accessed as it is being accessed by an option module								
178	<p>The <i>Card Busy</i> trip indicates that an attempt has been made to access a file on NV Media Card, but the NV Media Card is already being accessed by an option module, such as one of the Applications modules. No data is transferred.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Wait for the option module to finish accessing the NV Media Card and re-attempt the required function 								
Card Data Exists	NV Media Card data location already contains data								
179	<p>The <i>Card Data Exists</i> trip indicates that an attempt has been made to store data on a NV Media Card in a data block which already contains data.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Erase the data in data location • Write data to an alternative data location 								
Card Compare	NV Media Card file/data is different to the one in the drive								
188	<p>A compare has been carried out between a file on the NV Media Card, a Card Compare trip is initiated if the parameters on the NV Media Card are different to the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Set Pr mm.000 to 0 and reset the trip • Check to ensure the correct data block on the NV Media Card has been used for the compare. 								
Card Drive Mode	NV Media Card parameter set not compatible with current drive mode								
187	<p>The <i>Card Drive Mode</i> trip is produced during a compare if the drive mode in the data block on the NV Media Card is different from the current drive mode. This trip is also produced if an attempt is made to transfer parameters from a NV Media Card to the drive if the operating mode in the data block is outside the allowed range of operating modes.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the destination drive supports the drive operating mode in the parameter file. • Clear the value in Pr mm.000 and reset the drive • Ensure destination drive operating mode is the same as the source parameter file 								
Card Error	NV Media Card data structure error								
182	<p>The <i>Card Error</i> trip indicates that an attempt has been made to access a NV Media Card but an error has been detected in the data structure on the card. Resetting the trip will cause the drive to erase and create the correct folder structure. The cause of the trip can be identified by the sub-trip.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The required folder and file structure is not present</td> </tr> <tr> <td>2</td> <td>The HEADER.DAT file is corrupted</td> </tr> <tr> <td>3</td> <td>Two or more files in the GT8DATA\DRIVE folder have the same file identification number</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Erase all the data block and re-attempt the process • Ensure the card is located correctly • Replace the NV Media Card 	Sub-trip	Reason	1	The required folder and file structure is not present	2	The HEADER.DAT file is corrupted	3	Two or more files in the GT8DATA\DRIVE folder have the same file identification number
Sub-trip	Reason								
1	The required folder and file structure is not present								
2	The HEADER.DAT file is corrupted								
3	Two or more files in the GT8DATA\DRIVE folder have the same file identification number								
Card Full	NV Media Card full								
184	<p>The <i>Card Full</i> trip indicates that an attempt has been made to create a data block on a NV Media Card, but there is not enough space left on the card.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Delete a data block or the entire NV Media Card to create space • Use a different NV Media Card 								
Card No Data	NV Media Card data not found								
183	<p>The <i>Card No Data</i> trip indicates that an attempt has been made to access non-existent file or block on a NV Media Card.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure data block number is correct 								

Trip	Diagnosis
Card Option	NV Media Card trip; option modules installed are different between source drive and destination drive
180	<p>The <i>Card Option</i> trip indicates that parameter data or default difference data is being transferred from a NV Media Card to the drive, but the option module categories are different between source and destination drives. This trip does not stop the data transfer, but is a warning that the data for the option modules that are different will be set to the default values and not the values from the card. This trip also applies if a compare is attempted between the data block and the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the correct option modules are installed. • Ensure the option modules are in the same option module slot as the parameter set stored. • Press the red reset button to acknowledge that the parameters for one or more of the option modules installed will be at their default values • This trip can be suppressed by setting Pr mm.000 to 9666 and resetting the drive.
Card Product	NV Media Card data blocks are not compatible with the drive derivative
175	<p>The <i>Card Product</i> trip is initiated either at power-up or when the card is accessed, If <i>Drive Derivative</i> (11.028) is different between the source and target drives. This trip can be reset and data can be transferred in either direction between the drive and the card.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Use a different NV Media Card • This trip can be suppressed by setting Pr mm.000 to 9666 and resetting the drive
Card Rating	NV Media Card Trip; The voltage and / or current rating of the source and destination drives are different
186	<p>The Card Rating trip indicates that parameter data is being transferred from a NV Media Card to the drive, but the current and / or voltage ratings are different between source and destination drives. This trip also applies if a compare (using Pr mm.000 set to 8yyy) is attempted between the data block on a NV Media Card and the drive. The Card Rating trip does not stop the data transfer but is a warning that rating specific parameters with the RA attribute may not be transferred to the destination drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Reset the drive to clear the trip • Ensure that the drive rating dependent parameters have transferred correctly
Card Read Only	NV Media Card has the Read Only bit set
181	<p>The <i>Card Read Only</i> trip indicates that an attempt has been made to modify a read-only NV Media Card or a read-only data block. A NV Media Card is read-only if the read-only flag has been set.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Clear the read only flag by setting Pr mm.000 to 9777 and reset the drive. This will clear the read-only flag for all data blocks in the NV Media Card
Card Slot	NV Media Card Trip; Option module application program transfer has failed
174	<p>The <i>Card Slot</i> trip is initiated, if the transfer of an option module application program to or from an application module failed because the option module does not respond correctly. If this happens this trip is produced with the sub-trip indicating the option module slot number.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the source / destination option module is installed on the correct slot
Configuration	The number of power modules installed is different from the modules expected
111	<p>The <i>Configuration</i> trip indicates that the <i>Number Of Power Modules Detected</i> (11.071) does not match the previous value stored.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure that all the power modules are correctly connected / simultaneously • Ensure all the power modules have powered up correctly • Ensure that the value in Pr 11.071 is set to the number of power modules connected • Set Pr 11.035 to 0 to disable the trip if it is not required
Control Word	Trip initiated from the Control Word (06.042)
35	<p>The Control Word trip is initiated by setting bit 12 on the control word in Pr 06.042 when the control word is enabled (Pr 06.043 = On).</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the value of Pr 06.042. • Disable the control word in <i>Control Word Enable</i> (Pr 06.043) Bit 12 of the control word set to a one causes the drive to trip on Control Word When the control word is enabled, the trip can only be cleared by setting bit 12 to zero
Current Offset	Current feedback offset error
225	<p>The <i>Current Offset</i> trip indicates that the current offset is too larger to be trimmed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure that there is no possibility of current flowing in the output phases of the drive when the drive is not enabled • Hardware fault – Contact the supplier of the drive

Trip	Diagnosis																				
Data Changing	Drive parameters are being changed																				
97	<p>A user action or a file system write is active that is changing the drive parameters and the drive has been commanded to enable, i.e. <i>Drive Active</i> (10.002) = 1.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Ensure the drive is not enabled when one of the following is being carried out <ul style="list-style-type: none"> Loading defaults Changing drive mode Transferring data from NV Media Card or position feedback device Transferring user programs 																				
Destination	Two or more parameters are writing to the same destination parameter																				
199	<p>The <i>Destination</i> trip indicates that destination output parameters of two or more logic functions (Menus 3, 7, 8, 9, 12 or 14) within the drive are writing to the same parameter.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Set Pr mm.000 to 'Destinations' or 12001 and check all visible parameters in all menus for parameter write conflicts 																				
Drive Size	Power stage recognition: Unrecognized drive size																				
224	<p>The <i>Drive Size</i> trip indicates that the control PCB has not recognized the drive size of the power circuit to which it is connected.</p> <p>Recommended action:</p> <ul style="list-style-type: none"> Ensure the drive is programmed to the latest firmware version Hardware fault - return drive to supplier 																				
Derivative Image	Derivative Image error																				
248	<p>The <i>Derivative Image</i> trip indicates that an error has been detected in the derivative image.</p> <p>Recommended action:</p> <p>Contact the supplier of the drive</p>																				
EEPROM Fail	Default parameters have been loaded																				
31	<p>The <i>EEPROM Fail</i> trip indicates that default parameters have been loaded. The exact cause/reason of the trip can be identified from the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The most significant digit of the internal parameter database version number has changed</td> </tr> <tr> <td>2</td> <td>The CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set of parameters cannot be loaded</td> </tr> <tr> <td>3</td> <td>The drive mode restored from internal non-volatile memory is outside the allowed range for the product or the derivative image does not allow the previous drive mode</td> </tr> <tr> <td>4</td> <td>The drive derivative image has changed</td> </tr> <tr> <td>5</td> <td>The power stage hardware has changed</td> </tr> <tr> <td>6</td> <td>The internal I/O hardware has changed</td> </tr> <tr> <td>7</td> <td>The position feedback interface hardware has changed</td> </tr> <tr> <td>8</td> <td>The control board hardware has changed</td> </tr> <tr> <td>9</td> <td>The checksum on the non-parameter area of the EEPROM has failed</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Default the drive and perform a reset Allow sufficient time to perform a save before the supply to the drive is removed If the trip persists - return drive to supplier 	Sub-trip	Reason	1	The most significant digit of the internal parameter database version number has changed	2	The CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set of parameters cannot be loaded	3	The drive mode restored from internal non-volatile memory is outside the allowed range for the product or the derivative image does not allow the previous drive mode	4	The drive derivative image has changed	5	The power stage hardware has changed	6	The internal I/O hardware has changed	7	The position feedback interface hardware has changed	8	The control board hardware has changed	9	The checksum on the non-parameter area of the EEPROM has failed
Sub-trip	Reason																				
1	The most significant digit of the internal parameter database version number has changed																				
2	The CRC's applied to the parameter data stored in internal non-volatile memory indicate that a valid set of parameters cannot be loaded																				
3	The drive mode restored from internal non-volatile memory is outside the allowed range for the product or the derivative image does not allow the previous drive mode																				
4	The drive derivative image has changed																				
5	The power stage hardware has changed																				
6	The internal I/O hardware has changed																				
7	The position feedback interface hardware has changed																				
8	The control board hardware has changed																				
9	The checksum on the non-parameter area of the EEPROM has failed																				
Encoder 9	Position feedback is selected from a option module slot which does not have a feedback option module installed																				
197	<p>The <i>Encoder 9</i> trip indicates that position feedback source selected in Pr 03.026 (or Pr 21.021 for the second motor map) is not valid</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check the setting of Pr 03.026 (or Pr 21.021 if the second motor parameters have been enabled) Ensure that the option slot selected in Pr 03.026 has a feedback option module installed 																				

Trip	Diagnosis								
External Trip	An External trip is initiated								
6	An <i>External Trip</i> has occurred. The cause of the trip can be identified from the sub trip number displayed after the trip string. See table below. An external trip can also be initiated by writing a value of 6 in Pr 10.038 .								
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td><i>External Trip Mode</i> (08.010) = 1 or 3 and SAFE TORQUE OFF input 1 is low</td> </tr> <tr> <td>2</td> <td><i>External Trip Mode</i> (08.010) = 2 or 3 and SAFE TORQUE OFF input 2 is low</td> </tr> <tr> <td>3</td> <td><i>External Trip</i> (10.032) = 1</td> </tr> </tbody> </table>	Sub-trip	Reason	1	<i>External Trip Mode</i> (08.010) = 1 or 3 and SAFE TORQUE OFF input 1 is low	2	<i>External Trip Mode</i> (08.010) = 2 or 3 and SAFE TORQUE OFF input 2 is low	3	<i>External Trip</i> (10.032) = 1
	Sub-trip	Reason							
	1	<i>External Trip Mode</i> (08.010) = 1 or 3 and SAFE TORQUE OFF input 1 is low							
	2	<i>External Trip Mode</i> (08.010) = 2 or 3 and SAFE TORQUE OFF input 2 is low							
3	<i>External Trip</i> (10.032) = 1								
Recommended actions:									
<ul style="list-style-type: none"> • Check the SAFE TORQUE OFF signal voltage on terminal 31 equals to 24 V • Check the value of Pr 08.009 which indicates the digital state of terminal 31, equates to 'on'. • If external trip detection of the SAFE TORQUE OFF input is not required, set Pr 08.010 to OFF (0). • Check the value of Pr 10.032. • Select 'Destinations' (or enter 12001) in Pr mm.000 and check for a parameter controlling Pr 10.032. • Ensure Pr 10.032 or Pr 10.038 (= 6) is not being controlled by serial comms 									
Frequency Range	Out of range of frequency has been detected in regen mode								
168	The <i>Frequency Range</i> trip indicates that the supply frequency is outside the range defined by <i>Regen Minimum Frequency</i> (03.024) and <i>Regen Maximum Frequency</i> (03.025) for more than 100 ms. Recommended actions: <ul style="list-style-type: none"> • Ensure the supply is operating within the drive specification • Ensure Pr 03.024 and Pr 03.025 are set correctly • Check the supply voltage waveform using an oscilloscope • Reduce the level of supply disturbance 								
HF01	Data processing error: CPU address error								
	The <i>HF01</i> trip indicates that a CPU address error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								
HF02	Data processing error: DMAC address error								
	The <i>HF02</i> trip indicates that a DMAC address error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								
HF03	Data processing error: Illegal instruction								
	The <i>HF03</i> trip indicates that an illegal instruction has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								
HF04	Data processing error: Illegal slot instruction								
	The <i>HF04</i> trip indicates that an illegal slot instruction has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								
HF05	Data processing error: Undefined exception								
	The <i>HF05</i> trip indicates that an undefined exception error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								
HF06	Data processing error: Reserved exception								
	The <i>HF06</i> trip indicates that a reserved exception error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								
HF07	Data processing error: Watchdog failure								
	The <i>HF07</i> trip indicates that a watchdog failure has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> • Hardware fault – Contact the supplier of the drive 								

Trip	Diagnosis								
HF08	Data processing error: CPU Interrupt crash								
	The <i>HF08</i> trip indicates that a CPU interrupt crash has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF09	Data processing error: Free store overflow								
	The <i>HF09</i> trip indicates that a free store overflow has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF10	Data processing error: Parameter routing system error								
	The <i>HF10</i> trip indicates that a Parameter routing system error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF11	Data processing error: Access to EEPROM failed								
	The <i>HF11</i> trip indicates that access to the drive EEPROM has failed. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF12	Data processing error: Main program stack overflow								
	The <i>HF12</i> trip indicates that the main program stack over flow has occurred. The stack can be identified by the sub-trip number. This trip indicates that the control PCB on the drive has failed. <table border="1" data-bbox="316 888 896 1031"> <thead> <tr> <th>Sub-trip</th> <th>Stack</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Freewheeling tasks</td> </tr> <tr> <td>2</td> <td>Clock tasks</td> </tr> <tr> <td>3</td> <td>Main system interrupts</td> </tr> </tbody> </table> Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 	Sub-trip	Stack	1	Freewheeling tasks	2	Clock tasks	3	Main system interrupts
Sub-trip	Stack								
1	Freewheeling tasks								
2	Clock tasks								
3	Main system interrupts								
HF13	Data processing error: Firmware incompatible with hardware								
	The <i>HF13</i> trip indicates that the drive firmware is not compatible with the hardware. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Re-program the drive with the latest version of the drive firmware Hardware fault – Contact the supplier of the drive 								
HF14	Data processing error: CPU register bank error								
	The <i>HF14</i> trip indicates that a CPU register bank error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF15	Data processing error: CPU divide error								
	The <i>HF15</i> trip indicates that a CPU divide error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF16	Data processing error: RTOS error								
	The <i>HF16</i> trip indicates that a RTOS error has occurred. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								
HF17	Data processing error: Clock supplied to the control board is out of specification								
	The <i>HF17</i> trip indicates that the clock supplied to the control board logic is out of specification. This trip indicates that the control PCB on the drive has failed. Recommended actions: <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 								

Trip	Diagnosis																				
HF18	Data processing error: Internal flash memory has failed																				
	The <i>HF18</i> trip indicates that the internal flash memory has failed when writing option module parameter data. The reason for the trip can be identified by the sub-trip number.																				
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Option module initialization timed out</td> </tr> <tr> <td>2</td> <td>Programming error while writing menu in flash</td> </tr> <tr> <td>3</td> <td>Erase flash block containing setup menus failed</td> </tr> <tr> <td>4</td> <td>Erase flash block containing application menus failed</td> </tr> <tr> <td>5</td> <td>Incorrect setup menu CRC contained in flash</td> </tr> <tr> <td>6</td> <td>Incorrect application menu CRC contained in flash</td> </tr> <tr> <td>7</td> <td>Incorrect common application menu 18 CRC contained in flash</td> </tr> <tr> <td>8</td> <td>Incorrect common application menu 19 CRC contained in flash</td> </tr> <tr> <td>9</td> <td>Incorrect common application menu 20 CRC contained in flash</td> </tr> </tbody> </table>	Sub-trip	Reason	1	Option module initialization timed out	2	Programming error while writing menu in flash	3	Erase flash block containing setup menus failed	4	Erase flash block containing application menus failed	5	Incorrect setup menu CRC contained in flash	6	Incorrect application menu CRC contained in flash	7	Incorrect common application menu 18 CRC contained in flash	8	Incorrect common application menu 19 CRC contained in flash	9	Incorrect common application menu 20 CRC contained in flash
Sub-trip	Reason																				
1	Option module initialization timed out																				
2	Programming error while writing menu in flash																				
3	Erase flash block containing setup menus failed																				
4	Erase flash block containing application menus failed																				
5	Incorrect setup menu CRC contained in flash																				
6	Incorrect application menu CRC contained in flash																				
7	Incorrect common application menu 18 CRC contained in flash																				
8	Incorrect common application menu 19 CRC contained in flash																				
9	Incorrect common application menu 20 CRC contained in flash																				
	Recommended actions: <ul style="list-style-type: none"> Hardware fault - Contact the supplier of the drive. 																				
HF19	Data processing error: CRC check on the firmware has failed																				
	The <i>HF19</i> trip indicates that the CRC check on the drive firmware has failed.																				
	Recommended actions: <ul style="list-style-type: none"> Re-program the drive Hardware fault - Contact the supplier of the drive 																				
HF20	Data processing error: ASIC is not compatible with the hardware																				
	The <i>HF20</i> trip indicates that the ASIC version is not compatible with the drive firmware. The ASIC version can be identified from the sub-trip number.																				
	Recommended actions: <ul style="list-style-type: none"> Hardware fault - Contact the supplier of the drive 																				
Inductor Too Hot	The regen inductor has overloaded																				
93	In Regen mode, this trip indicates a regen inductor thermal overload based on the <i>Rated Current</i> (Pr 05.007) and the <i>Inductor Thermal Time Constant</i> (Pr 04.015). Pr 04.019 displays the inductor temperature as a percentage of the maximum value. The drive will trip on <i>Inductor Too Hot</i> when Pr 04.019 gets to 100 %.																				
	Recommended actions: <ul style="list-style-type: none"> Check the load / current through the inductor has not changed. Ensure the <i>Rated Current</i> (Pr 05.007) is not zero. 																				
I/O Overload	Digital output overload																				
26	The <i>I/O Overload</i> trip indicates that the total current drawn from 24 V user supply or from the digital output has exceeded the limit. A trip is initiated if one or more of the following conditions: <ul style="list-style-type: none"> Maximum output current from one digital output is 100 mA. The combined maximum output current from outputs 1 and 2 is 100 mA The combined maximum output current from output 3 and +24 V output is 100 mA 																				
	Recommended actions: <ul style="list-style-type: none"> Check total loads on digital outputs Check control wiring is correct Check output wiring is undamaged 																				
Island	Island condition detected in regen mode																				
160	The <i>Island</i> trip indicates that the AC mains is no longer present and the inverter would be on 'islanded' power supply if it continued to operate.																				
	Recommended actions: <ul style="list-style-type: none"> Check the supply / supply connections to the regen drive 																				
Keypad Mode	Keypad has been removed when the drive is receiving the speed reference from the keypad																				
34	The <i>Keypad Mode</i> trip indicates that the drive is in keypad mode [<i>Reference Selector</i> (01.014) = 4 or 6] and the keypad has been removed or disconnected from the drive.																				
	Recommended actions: <ul style="list-style-type: none"> Re-install keypad and reset Change <i>Reference Selector</i> (01.014) to select the reference from another source 																				

Trip	Diagnosis																				
Line Sync	Synchronization to the power supply has been lost																				
39	The <i>Line Sync</i> trip indicates that the inverter has lost the synchronization with the ac supply in Regen mode. Recommended actions: <ul style="list-style-type: none"> • Check the supply / supply connections to the regen drive 																				
Low Load	The load on the drive has fallen below the low load detection level																				
38	When the low load detector is active, the low load condition is detected when the <i>Percentage Load</i> (Pr 04.020) falls below the threshold defined by the <i>Low Load Detection Level</i> (Pr 04.027). <i>Enable Trip On Low Load</i> (Pr 04.029) defines the action taken when low load is detected. If <i>Enable Trip On Low Load</i> (Pr 04.029) = 0, a Low Load warning is displayed and <i>Low Load Detected Alarm</i> (Pr 10.062) = 1. If <i>Enable Trip On Low Load</i> (Pr 04.029) = 1 no warning is given, but a Low Load trip is initiated. Recommended actions: <ul style="list-style-type: none"> • Check the load on the motor has not changed 																				
Motor Too Hot	Output current overload timed out (I²t)																				
20	The <i>Motor Too Hot</i> trip indicates a motor thermal overload based on the output current (Pr 05.007) and motor thermal time constant (Pr 04.015). Pr 04.019 displays the motor temperature as a percentage of the maximum value. The drive will trip on <i>Motor Too Hot</i> when Pr 04.019 gets to 100 %. Recommended actions: <ul style="list-style-type: none"> • Ensure the load is not jammed / sticking • Check the load on the motor has not changed • If seen during an auto-tune test in RFC-S mode, ensure the motor rated current in Pr 05.007 is ≤ Heavy duty current rating of the drive • Tune the rated speed parameter (RFC-A mode only) • Check feedback signal for noise • Ensure the motor rated current is not zero 																				
Name Plate	Electronic nameplate transfer has failed																				
176	The <i>Name Plate</i> trip is initiated if an electronic name plate transfer between the drive and the motor has failed. The exact reason for the trip can be identified from the sub-trip number. Recommended actions: <ul style="list-style-type: none"> • Ensure that the correct data is stored in the encoder by re-transferring the required data from drive into the encoder. • Enter the motor nameplate parameters manually • Replace the feedback device 																				
OHT Brake	Braking IGBT over-temperature																				
101	The <i>OHT Brake</i> over-temperature trip indicates that braking IGBT over-temperature has been detected based on software thermal model. Recommended actions: <ul style="list-style-type: none"> • Check braking resistor value is greater than or equal to the minimum resistance value 																				
OHT Control	Control stage over temperature																				
23	This <i>OHT Control</i> trip indicates that a control stage over-temperature has been detected. From the sub-trip 'xyzz', the Thermistor location is identified by 'zz'. <table border="1" data-bbox="316 1325 1450 1476"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>01</td> <td>Control board thermistor 1 over temperature</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>02</td> <td>Control board thermistor 2 over temperature</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>03</td> <td>I/O board thermistor over temperature</td> </tr> </tbody> </table> Recommended actions: <ul style="list-style-type: none"> • Check enclosure / drive fans are still functioning correctly • Check enclosure ventilation paths • Check enclosure door filters • Increase ventilation • Reduce the drive switching frequency • Check ambient temperature 	Source	xx	y	zz	Description	Control system	00	0	01	Control board thermistor 1 over temperature	Control system	00	0	02	Control board thermistor 2 over temperature	Control system	00	0	03	I/O board thermistor over temperature
Source	xx	y	zz	Description																	
Control system	00	0	01	Control board thermistor 1 over temperature																	
Control system	00	0	02	Control board thermistor 2 over temperature																	
Control system	00	0	03	I/O board thermistor over temperature																	

Trip	Diagnosis										
Oht dc bus	DC bus over temperature										
27	<p>The <i>Oht dc bus</i> trip indicates a DC bus component over temperature based on a software thermal model. The drive includes a thermal protection system to protect the DC bus components within the drive. This includes the effects of the output current and DC bus ripple. The estimated temperature is displayed as a percentage of the trip level in Pr 07.035. If this parameter reaches 100 % then an <i>Oht dc bus</i> trip is initiated. The drive will attempt to stop the motor before tripping. If the motor does not stop in 10 seconds the drive trips immediately.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>2</td> <td>00</td> <td>DC bus thermal model gives trip with sub-trip 0</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check the AC supply voltage balance and levels • Check DC bus ripple level • Reduce duty cycle • Reduce motor load • Check the output current stability. If unstable; <ul style="list-style-type: none"> Check the motor map settings with motor nameplate (Pr 05.006, Pr 05.007, Pr 05.008, Pr 05.009, Pr 05.010, Pr 05.011) – (All Modes) Disable slip compensation (Pr 05.027 = 0) – (Open loop) Disable dynamic V to F operation (Pr 05.013 = 0) - (Open loop) Select fixed boost (Pr 05.014 = Fixed) – (Open loop) Select high stability space vector modulation (Pr 05.020 = 1) – (Open loop) Disconnect the load and complete a rotating autotune (Pr 05.012) – (RFC-A, RFC-S) Auto-tune the rated speed value (Pr 05.016 = 1) – (RFC-A, RFC-S) Reduce speed loop gains (Pr 03.010, Pr 03.011, Pr 03.012) – (RFC-A, RFC-S) Add a speed feedback filter value (Pr 03.042) – (RFC-A, RFC-S) Add a current demand filter (Pr 04.012) – (RFC-A, RFC-S) Check encoder signals for noise with an oscilloscope (RFC-A, RFC-S) Check encoder mechanical coupling - (RFC-A, RFC-S) 	Source	xx	y	zz	Description	Control system	00	2	00	DC bus thermal model gives trip with sub-trip 0
	Source	xx	y	zz	Description						
	Control system	00	2	00	DC bus thermal model gives trip with sub-trip 0						
Oht Inverter	Inverter over temperature based on thermal model										
21	<p>This trip indicates that an IGBT junction over-temperature has been detected based on a software thermal model.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>1</td> <td>00</td> <td>Inverter thermal model gives {Oht Inverter} trip with sub-trip 0</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Reduce the selected drive switching frequency • Ensure <i>Auto-switching Frequency Change Disable</i> (05.035) is set to OFF • Reduce duty cycle • Decrease acceleration / deceleration rates • Reduce motor load • Check DC bus ripple • Ensure all three input phases are present and balanced 	Source	xx	y	zz	Description	Control system	00	1	00	Inverter thermal model gives {Oht Inverter} trip with sub-trip 0
	Source	xx	y	zz	Description						
	Control system	00	1	00	Inverter thermal model gives {Oht Inverter} trip with sub-trip 0						
Oht Power	Power stage over temperature										
22	<p>This trip indicates that a power stage over-temperature has been detected. From the sub-trip 'xyzz', the Thermistor location is identified by 'zz'.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>01</td> <td>0</td> <td>zz</td> <td>Thermistor location in the drive defined by zz</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check enclosure / drive fans are still functioning correctly • Force the heatsink fans to run at maximum speed • Check enclosure ventilation paths • Check enclosure door filters • Increase ventilation • Reduce the drive switching frequency • Reduce duty cycle • Decrease acceleration / deceleration rates • Reduce motor load • Check the derating tables and confirm the drive is correctly sized for the application. • Use a drive with larger current / power rating 	Source	xx	y	zz	Description	Power system	01	0	zz	Thermistor location in the drive defined by zz
	Source	xx	y	zz	Description						
	Power system	01	0	zz	Thermistor location in the drive defined by zz						

Trip	Diagnosis													
OHT Rectifier	Rectifier over temperature													
102	<p>The <i>OHT Rectifier</i> indicates that a rectifier over-temperature has been detected. The thermistor location can be identified from the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>Power module number</td> <td>Rectifier number</td> <td>zz</td> <td>Thermistor location defined by zz</td> </tr> </tbody> </table> <p>Recommend actions:</p> <ul style="list-style-type: none"> • Check the motor and motor cable insulation with an insulation tester • Fit an output line reactor or sinusoidal filter • Force the heatsink fans to run at maximum speeds by setting Pr 06.045 = 11 • Check enclosure / drive fans are still functioning correctly • Check enclosure ventilation paths • Check enclosure door filters • Increase ventilation • Decrease acceleration / deceleration rates • Reduce duty cycle • Reduce motor load 	Source	xx	y	zz	Description	Power system	Power module number	Rectifier number	zz	Thermistor location defined by zz			
	Source	xx	y	zz	Description									
Power system	Power module number	Rectifier number	zz	Thermistor location defined by zz										
OI ac	Instantaneous output over current detected													
3	<p>The instantaneous drive output current has exceeded above VM_DRIVE_CURRENT_MAX.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>Rectifier number</td> <td rowspan="2">00</td> <td rowspan="2">Instantaneous over-current trip when the measured a.c. current exceeds VM_DRIVE_CURRENT[MAX].</td> </tr> <tr> <td>Power system</td> <td>Power module number</td> <td>0</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Acceleration/deceleration rate is too short • If seen during auto-tune reduce the voltage boost • Check for short circuit on the output cabling • Check integrity of the motor insulation using an insulation tester • Check feedback device wiring • Check feedback device mechanical coupling • Check feedback signals are free from noise • Is motor cable length within limits for the frame size • Reduce the values in the speed loop gain parameters - (Pr 03.010, 03.011, 03.012) or (Pr 03.013, 03.014, 03.015) • Has the phase angle autotune been completed? (RFC-S mode only) • Reduce the values in current loop gain parameters (RFC-A, RFC-S modes only) 	Source	xx	y	zz	Description	Control system	00	Rectifier number	00	Instantaneous over-current trip when the measured a.c. current exceeds VM_DRIVE_CURRENT[MAX].	Power system	Power module number	0
	Source	xx	y	zz	Description									
Control system	00	Rectifier number	00	Instantaneous over-current trip when the measured a.c. current exceeds VM_DRIVE_CURRENT[MAX].										
Power system	Power module number	0												
OI Brake	Braking IGBT over current detected: short circuit protection for the braking IGBT activated													
4	<p>The <i>OI Brake</i> trip indicates that over current has been detected in braking IGBT or braking IGBT protection has been activated.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>Power module number</td> <td>0</td> <td>00</td> <td>Braking IGBT instantaneous over-current trip</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Check brake resistor wiring • Check braking resistor value is greater than or equal to the minimum resistance value • Check braking resistor insulation 	Source	xx	y	zz	Description	Power system	Power module number	0	00	Braking IGBT instantaneous over-current trip			
	Source	xx	y	zz	Description									
Power system	Power module number	0	00	Braking IGBT instantaneous over-current trip										
OI dc	Power module over current detected from IGBT on state voltage monitoring													
109	<p>The <i>OI dc</i> trip indicates that the short circuit protection for the drive output stage has been activated.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> • Disconnect the motor cable at the drive end and check the motor and cable insulation with an insulation tester • Replace the drive 													

Trip	Diagnosis										
OI Snubber	Snubber over-current detected										
92	The <i>OI Snubber</i> trip indicates that an over-current condition has been detected in the rectifier snubber circuit. The reason for the trip can be identified by the sub-trip number.										
	<table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>Power module number</td> <td>Rectifier number</td> <td>00</td> <td>Rectifier snubber over-current trip detected.</td> </tr> </tbody> </table>	Source	xx	y	zz	Description	Power system	Power module number	Rectifier number	00	Rectifier snubber over-current trip detected.
	Source	xx	y	zz	Description						
Power system	Power module number	Rectifier number	00	Rectifier snubber over-current trip detected.							
<p>Recommended actions:</p> <ul style="list-style-type: none"> • Ensure the internal EMC Filter is installed • Ensure the motor cable length does not exceed the maximum for selected switching frequency • Check for supply voltage imbalance • Check for supply disturbance such as notching from a DC drive • Check the motor and motor cable insulation with an insulation tester • Fit an output line reactor or sinusoidal filter 											
Option Disable	Option module does not acknowledge during drive mode changeover										
215	The <i>Option Disable</i> trip indicates that the option module did not acknowledge notifying the drive that communications with the drive has been stopped during the drive mode changeover with in the allocated time. <p>Recommended trip:</p> <ul style="list-style-type: none"> • Reset the trip • If the trip persists replace the option module 										
Out Phase Loss	Output phase loss detected										
98	The <i>Out Phase Loss</i> trip indicates that a phase loss has been detected at the drive output. If <i>Output Phase Loss Detection Enable</i> (06.059) = 1 then output phase loss is detected as follows: <ol style="list-style-type: none"> 1. When the drive is enabled short pulses are applied to make sure each output phase is connected. 2. During running the output current is monitored and the output phase loss condition is detected if the current contains more than TBD % negative phase sequence current for TBDs. <p>Recommended action:</p> <ul style="list-style-type: none"> • Check motor and drive connections • To disable the trip set <i>Output Phase Loss Detection Enable</i> (06.059) = 0 										
Over Frequency	Output frequency has exceeded the maximum frequency threshold										
222	The <i>Over Frequency</i> trip indicates that the output frequency has exceeded 560 Hz for more than 4 ms.										
Over Speed	Motor speed has exceeded the over speed threshold										
7	In open loop mode, if the <i>Output Frequency</i> (05.001) exceeds the threshold set in <i>Over Speed Threshold</i> (03.008) in either direction an Over Speed trip is produced. In RFC-A and RFC-S mode, if the Speed Feedback (03.002) exceeds the Over Speed Threshold in Pr 03.008 in either direction an Over Speed trip is produced. If Pr 03.008 is set to 0.0 the threshold is then equal to 1.2 x the value set in Pr 01.006 . <p>Recommended actions:</p> <ul style="list-style-type: none"> • Reduce the <i>Speed Controller Proportional Gain</i> (03.010) to reduce the speed overshoot (RFC-A, RFC-S modes only) • If an SSI encoder is being used set Pr 03.047 to 1 										

Trip	Diagnosis																
Over Volts	DC bus voltage has exceeded the peak level or maximum continuous level for 15 seconds																
2	The <i>Over Volts</i> trip indicates that the DC bus voltage has exceeded the VM_DC_VOLTAGE[MAX] or VM_DC_VOLTAGE_SET[MAX] for 15 s. The trip threshold varies depending on voltage rating of the drive as shown below.																
	<table border="1"> <thead> <tr> <th>Voltage rating</th> <th>VM_DC_VOLTAGE[MAX]</th> <th>VM_DC_VOLTAGE_SET[MAX]</th> </tr> </thead> <tbody> <tr> <td>200</td> <td>415</td> <td>410</td> </tr> <tr> <td>400</td> <td>830</td> <td>815</td> </tr> <tr> <td>575</td> <td>990</td> <td>970</td> </tr> <tr> <td>690</td> <td>1190</td> <td>1175</td> </tr> </tbody> </table>	Voltage rating	VM_DC_VOLTAGE[MAX]	VM_DC_VOLTAGE_SET[MAX]	200	415	410	400	830	815	575	990	970	690	1190	1175	
	Voltage rating	VM_DC_VOLTAGE[MAX]	VM_DC_VOLTAGE_SET[MAX]														
	200	415	410														
	400	830	815														
575	990	970															
690	1190	1175															
Sub-trip Identification																	
<table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].</td> </tr> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].</td> </tr> <tr> <td>Power system</td> <td>Power module number</td> <td>0</td> <td>00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].</td> </tr> </tbody> </table>	Source	xx	y	zz	Control system	00	0	01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].	Control system	00	0	02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].	Power system	Power module number	0	00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].	
Source	xx	y	zz														
Control system	00	0	01: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].														
Control system	00	0	02: Time delayed trip indicating that the DC bus voltage is above VM_DC_VOLTAGE_SET[MAX].														
Power system	Power module number	0	00: Instantaneous trip when the DC bus voltage exceeds VM_DC_VOLTAGE[MAX].														
Recommended actions:	<ul style="list-style-type: none"> • Increase deceleration ramp (Pr 00.004) • Decrease the braking resistor value (staying above the minimum value) • Check nominal AC supply level • Check for supply disturbances which could cause the DC bus to rise • Check motor insulation using a insulation tester 																
Phase Loss	Supply phase loss																
32	The <i>Phase Loss</i> trip indicates that the drive has detected an input phase loss or large supply imbalance. The drive will attempt to stop the motor before this trip is initiated. If the motor cannot be stopped in 10 seconds the trip occurs immediately. The <i>Phase Loss</i> trip works by monitoring the ripple voltage on the DC bus of the drive, if the DC bus ripple exceeds the threshold, the drive will trip on Phase Loss. Potential causes of the DC bus ripple are input phase loss, Large supply impedance and severe output current instability.																
	<table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Control system</td> <td>00</td> <td>0</td> <td>00: Phase loss detected based on control system feedback. The drive attempts to stop the drive before tripping unless bit 2 of <i>Action On Trip Detection</i> (10.037) is set to one.</td> </tr> <tr> <td>Power system</td> <td rowspan="2">Power module number</td> <td rowspan="2">Rectifier number</td> <td>00: Phase loss has been detected by the rectifier module. Ensure that on a single phase supply, the unused supply terminal is connected to one of the other supply terminals.</td> </tr> <tr> <td>Control system</td> <td>01: Mains loss has been detected by the rectifier module in a multi-power module system, where this must be treated as a phase loss condition to prevent damage to the drive.</td> </tr> </tbody> </table>	Source	xx	y	zz	Control system	00	0	00: Phase loss detected based on control system feedback. The drive attempts to stop the drive before tripping unless bit 2 of <i>Action On Trip Detection</i> (10.037) is set to one.	Power system	Power module number	Rectifier number	00: Phase loss has been detected by the rectifier module. Ensure that on a single phase supply, the unused supply terminal is connected to one of the other supply terminals.	Control system	01: Mains loss has been detected by the rectifier module in a multi-power module system, where this must be treated as a phase loss condition to prevent damage to the drive.		
	Source	xx	y	zz													
	Control system	00	0	00: Phase loss detected based on control system feedback. The drive attempts to stop the drive before tripping unless bit 2 of <i>Action On Trip Detection</i> (10.037) is set to one.													
Power system	Power module number	Rectifier number	00: Phase loss has been detected by the rectifier module. Ensure that on a single phase supply, the unused supply terminal is connected to one of the other supply terminals.														
Control system			01: Mains loss has been detected by the rectifier module in a multi-power module system, where this must be treated as a phase loss condition to prevent damage to the drive.														
Input phase loss detection can be disabled when the drive is required to operate from the DC supply or from a single phase supply in <i>Input Phase Loss Detection Mode</i> (06.047).																	
Recommended actions:	<ul style="list-style-type: none"> • Check the AC supply voltage balance and level at full load • Check the DC bus ripple level with an isolated oscilloscope • Check the output current stability • Reduce the duty cycle • Reduce the motor load • Disable the phase loss detection, set Pr 06.047 to 2. 																

Trip	Diagnosis				
Power Comms	Communication has been lost / errors detected between power, control and rectifier modules				
90	The <i>Power Comms</i> trip is initiated if there is no communications between power, control or the rectifier module or if excessive communication errors have been detected. The reason for the trip can be identified by the sub-trip number.				
	Source	xx	y	zz	
	Control system	00	0	01: No communications between the control system and the power system	
				02: Excessive communication errors between the control system and power system	
Power module number	Rectifier number	00: Excessive communications errors detected by the rectifier module			
Recommended actions:					
<ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 					
Power Data	Power system configuration data error				
220	The <i>Power Data</i> trip indicates that there is an error in the configuration data stored in the power system.				
	Source	xx	y	zz	Description
	Control system	00	0	01	No data was obtained from the power board.
	Control system	00	0	02	There is no data table in node 1.
	Control system	00	0	03	The power system data table is bigger than the space available in the control pod to store it.
	Control system	00	0	04	The size of the table given in the table is incorrect.
	Control system	00	0	05	Table CRC error.
	Control system	00	0	06	The version number of the generator software that produced the table is too low.
	Power system	Power module number	0	00	The power data table used internally by the power module has an error.
	Power system	Power module number	0	01	The power data table that is uploaded to the control system on power up has an error.
	Power system	Power module number	0	02	The power data table used internally by the power module does not match the hardware identification of the power module.
	Recommended actions:				
<ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 					
Power Down Save	Power down save error				
37	The <i>Power Down Save</i> trip indicates that an error has been detected in the power down save parameters saved in non-volatile memory.				
	Recommended actions:				
<ul style="list-style-type: none"> Perform a 1001 save in Pr mm.000 to ensure that the trip doesn't occur the next time the drive is powered up. 					
PSU	Internal power supply fault				
5	The <i>PSU</i> trip indicates that one or more internal power supply rails are outside limits or overloaded.				
	Source	xx	y	zz	Description
	Control system	00	0	00	Internal power supply overload.
	Power system	Power module number	Rectifier number		
Recommended actions:					
<ul style="list-style-type: none"> Remove any option modules and perform a reset Remove encoder connection and perform a reset Hardware fault within the drive – return the drive to the supplier 					

Trip	Diagnosis																
PSU 24V	24V internal power supply overload																
9	<p>The total user load of the drive and option modules has exceeded the internal 24 V power supply limit. The user load consists of the drive digital outputs and main encoder supply.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Reduce the load and reset Provide an external 24 V power supply on control terminal 2 Remove all option modules 																
Rating Mismatch	Power stage recognition: Multi module voltage or current rating mismatch																
223	<p>The <i>Rating Mismatch</i> trip indicates that there is a voltage rating or current rating mismatch in a multi-module drive system. This trip is only applicable to modular drives that are connected in parallel. A mixture of power modules with different voltage or current ratings within the same multi-module drive system is not allowed and will cause a Rating Mismatch trip.</p> <p>Recommended action:</p> <ul style="list-style-type: none"> Ensure that all modules in a multi-modular drive system are of the same frame size and rating (voltage and current) Hardware fault – Contact the supplier of the drive 																
Reserved	Reserved trips																
01 94 -95 103 – 108 161 164 – 197 170 – 173 228 - 247	<p>These trip numbers are reserved trip numbers for future use. These trips should not be used by the user application programs.</p> <table border="1"> <thead> <tr> <th>Trip Number</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>Reserved resettable trip</td> </tr> <tr> <td>94 -95</td> <td>Reserved resettable trip</td> </tr> <tr> <td>103 - 108</td> <td>Reserved resettable trip</td> </tr> <tr> <td>161</td> <td>Reserved resettable trip</td> </tr> <tr> <td>164 – 197</td> <td>Reserved resettable trip</td> </tr> <tr> <td>170 - 173</td> <td>Reserved resettable trip</td> </tr> <tr> <td>228 - 247</td> <td>Reserved non-resettable trip</td> </tr> </tbody> </table>	Trip Number	Description	01	Reserved resettable trip	94 -95	Reserved resettable trip	103 - 108	Reserved resettable trip	161	Reserved resettable trip	164 – 197	Reserved resettable trip	170 - 173	Reserved resettable trip	228 - 247	Reserved non-resettable trip
Trip Number	Description																
01	Reserved resettable trip																
94 -95	Reserved resettable trip																
103 - 108	Reserved resettable trip																
161	Reserved resettable trip																
164 – 197	Reserved resettable trip																
170 - 173	Reserved resettable trip																
228 - 247	Reserved non-resettable trip																
Resistance	Measured resistance has exceeded the parameter range																
33	<p>The Resistance trip indicates that the measured stator resistance during an auto-tune test has exceeded the maximum possible value of <i>Stator Resistance</i> (05.017).</p> <p>The stationary auto-tune is initiated using the auto-tune function (Pr 05.012) or in open loop vector mode (Pr 05.014) on the first run command after power up in mode 4 (Ur_I) or on every run command in modes 0 (Ur_S) or 3 (Ur_Auto). This trip can occur if the motor is very small in comparison to the rating of the drive.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check the motor cable / connections Check the integrity of the motor stator winding using a insulation tester Check the motor phase to phase resistance at the drive terminals Check the motor phase to phase resistance at the motor terminals Ensure the stator resistance of the motor falls within the range of the drive model Select fixed boost mode (Pr 05.014 = Fixed) and verify the output current waveforms with an oscilloscope Replace the motor 																
Slot4 Not Fitted	Interface in slot 4 has been removed																
253	<p>The <i>Slot4 Not Fitted</i> trip indicates that the interface in slot 4 on the drive has been removed since the last power-up.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault - Contact the supplier of the drive. 																
Slot App Menu	Application menu Customization conflict error																
216	<p>The Slot App Menu trip indicates that more than one option slot has requested to customize the application menus 18, 19 and 20. The sub-trip number indicates which option slot has been allowed to customize the menus.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Ensure that only one of the Application modules is configured to customize the application menus 18, 19 and 20 																

Trip	Diagnosis																				
SlotX Different	Option module in option slot X has changed																				
204 209 214	The <i>SlotX Different</i> trip indicates that the option module in option slot X on the drive is a different type to that installed when parameters were last saved on the drive. The reason for the trip can be identified by the sub-trip number.																				
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>No module was installed previously</td> </tr> <tr> <td>2</td> <td>A module with the same identifier is installed, but the set-up menu for this option slot has been changed, and so default parameters have been loaded for this menu.</td> </tr> <tr> <td>3</td> <td>A module with the same identifier is installed, but the applications menu for this option slot has been changed, and so default parameters have been loaded for this menu.</td> </tr> <tr> <td>4</td> <td>A module with the same identifier is installed, but the set-up and applications menu for this option slot have been changed, and so default parameters have been loaded for these menus.</td> </tr> <tr> <td>>99</td> <td>Shows the identifier of the module previously installed.</td> </tr> </tbody> </table>	Sub-trip	Reason	1	No module was installed previously	2	A module with the same identifier is installed, but the set-up menu for this option slot has been changed, and so default parameters have been loaded for this menu.	3	A module with the same identifier is installed, but the applications menu for this option slot has been changed, and so default parameters have been loaded for this menu.	4	A module with the same identifier is installed, but the set-up and applications menu for this option slot have been changed, and so default parameters have been loaded for these menus.	>99	Shows the identifier of the module previously installed.								
	Sub-trip	Reason																			
	1	No module was installed previously																			
	2	A module with the same identifier is installed, but the set-up menu for this option slot has been changed, and so default parameters have been loaded for this menu.																			
	3	A module with the same identifier is installed, but the applications menu for this option slot has been changed, and so default parameters have been loaded for this menu.																			
4	A module with the same identifier is installed, but the set-up and applications menu for this option slot have been changed, and so default parameters have been loaded for these menus.																				
>99	Shows the identifier of the module previously installed.																				
Recommended actions:	<ul style="list-style-type: none"> Turn off the power, ensure the correct option modules are installed in the correct option slots and re-apply the power. Confirm that the currently installed option module is correct, ensure option module parameters are set correctly and perform a user save in Pr mm.000. 																				
SlotX Error	Option module in option slot X has detected a fault																				
202 207 212	The <i>SlotX Error</i> trip indicates that the option module in option slot X on the drive has detected an error. The reason for the error can be identified by the sub-trip number.																				
	Recommended actions: <ul style="list-style-type: none"> See relevant <i>Option Module User Guide</i> for details of the trip 																				
SlotX HF	Option module X hardware fault																				
200 205 210	The <i>SlotX HF</i> trip indicates that the option module in option slot X on the drive has indicated a hardware fault. The possible causes of the trip can be identified by the sub-trip number.																				
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The module category cannot be identified</td> </tr> <tr> <td>2</td> <td>All the required customized menu table information has not been supplied or the tables supplied are corrupt</td> </tr> <tr> <td>3</td> <td>There is insufficient memory available to allocate the comms buffers for this module</td> </tr> <tr> <td>4</td> <td>The module has not indicated that it is running correctly during drive power-up</td> </tr> <tr> <td>5</td> <td>Module has been removed after power-up or it has stopped working</td> </tr> <tr> <td>6</td> <td>The module has not indicated that it has stopped accessing drive parameters during a drive mode change</td> </tr> <tr> <td>7</td> <td>The module has failed to acknowledge that a request has been made to reset the drive processor</td> </tr> <tr> <td>8</td> <td>The drive failed to correctly read the menu table from the module during drive power up</td> </tr> <tr> <td>9</td> <td>The drive failed to upload menu tables from the module and timed out (5 s)</td> </tr> </tbody> </table>	Sub-trip	Reason	1	The module category cannot be identified	2	All the required customized menu table information has not been supplied or the tables supplied are corrupt	3	There is insufficient memory available to allocate the comms buffers for this module	4	The module has not indicated that it is running correctly during drive power-up	5	Module has been removed after power-up or it has stopped working	6	The module has not indicated that it has stopped accessing drive parameters during a drive mode change	7	The module has failed to acknowledge that a request has been made to reset the drive processor	8	The drive failed to correctly read the menu table from the module during drive power up	9	The drive failed to upload menu tables from the module and timed out (5 s)
	Sub-trip	Reason																			
	1	The module category cannot be identified																			
	2	All the required customized menu table information has not been supplied or the tables supplied are corrupt																			
	3	There is insufficient memory available to allocate the comms buffers for this module																			
	4	The module has not indicated that it is running correctly during drive power-up																			
	5	Module has been removed after power-up or it has stopped working																			
	6	The module has not indicated that it has stopped accessing drive parameters during a drive mode change																			
	7	The module has failed to acknowledge that a request has been made to reset the drive processor																			
8	The drive failed to correctly read the menu table from the module during drive power up																				
9	The drive failed to upload menu tables from the module and timed out (5 s)																				
Recommended actions:	<ul style="list-style-type: none"> Ensure the option module is installed correctly Replace the option module Replace the drive 																				
SlotX Not installed	Option module in option slot X has been removed																				
203 208 213	The <i>SlotX Not installed</i> trip indicates that the option module in option slot X on the drive has been removed since the last power up.																				
	Recommended actions: <ul style="list-style-type: none"> Ensure the option module is installed correctly. Re-install the option module. To confirm that the removed option module is no longer required perform a save function in Pr mm.000. 																				
SlotX Watchdog	Option module watchdog function service error																				
201 206 211	The <i>SlotX Watchdog</i> trip indicates that the option module installed in Slot X has started the option watchdog function and then failed to service the watchdog correctly.																				
	Recommended actions: <ul style="list-style-type: none"> Replace the option module 																				

Trip	Diagnosis																																																								
Soft Start	Soft start relay failed to close, soft start monitor failed																																																								
226	<p>The <i>Soft Start</i> trip indicates that the soft start relay in the drive failed to close or the soft start monitoring circuit has failed.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 																																																								
Stored HF	Hardware trip has occurred during last power down																																																								
221	<p>The Stored HF trip indicates that a hardware trip (HF01 –HF17) has occurred and the drive has been power cycled. The sub-trip number identifies the HF trip i.e. stored HF.17.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Enter 1299 in Pr mm.000 and press reset to clear the trip 																																																								
Sub-array RAM	RAM allocation error																																																								
227	<p>The Sub-array RAM indicates that an option module, derivative image or user program image has requested more parameter RAM than is allowed. The RAM allocation is checked in order of resulting sub-trip numbers, and so the failure with the highest sub-trip number is given. The sub-trip is calculated as (parameter size) + (parameter type) + sub-array number.</p> <table border="1" style="display: inline-table; margin-right: 20px;"> <thead> <tr> <th>Parameter size</th> <th>Value</th> </tr> </thead> <tbody> <tr><td>1 bit</td><td>1000</td></tr> <tr><td>8 bit</td><td>2000</td></tr> <tr><td>16 bit</td><td>3000</td></tr> <tr><td>32 bit</td><td>4000</td></tr> <tr><td>64 bit</td><td>5000</td></tr> </tbody> </table> <table border="1" style="display: inline-table;"> <thead> <tr> <th>Parameter type</th> <th>Value</th> </tr> </thead> <tbody> <tr><td>Volatile</td><td>0</td></tr> <tr><td>User save</td><td>100</td></tr> <tr><td>Power-down save</td><td>200</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Sub-array</th> <th>Menus</th> <th>Value</th> </tr> </thead> <tbody> <tr><td>Applications menus</td><td>18-20</td><td>1</td></tr> <tr><td>Derivative image</td><td>29</td><td>2</td></tr> <tr><td>User program image</td><td>30</td><td>3</td></tr> <tr><td>Option slot 1 set-up</td><td>15</td><td>4</td></tr> <tr><td>Option slot 1 applications</td><td>25</td><td>5</td></tr> <tr><td>Option slot 2 set-up</td><td>16</td><td>6</td></tr> <tr><td>Option slot 2 applications</td><td>26</td><td>7</td></tr> <tr><td>Option slot 3 set-up</td><td>17</td><td>8</td></tr> <tr><td>Option slot 3 applications</td><td>27</td><td>9</td></tr> <tr><td>Option slot 4 set-up</td><td>24</td><td>10</td></tr> <tr><td>Option slot 4 applications</td><td>28</td><td>11</td></tr> </tbody> </table>	Parameter size	Value	1 bit	1000	8 bit	2000	16 bit	3000	32 bit	4000	64 bit	5000	Parameter type	Value	Volatile	0	User save	100	Power-down save	200	Sub-array	Menus	Value	Applications menus	18-20	1	Derivative image	29	2	User program image	30	3	Option slot 1 set-up	15	4	Option slot 1 applications	25	5	Option slot 2 set-up	16	6	Option slot 2 applications	26	7	Option slot 3 set-up	17	8	Option slot 3 applications	27	9	Option slot 4 set-up	24	10	Option slot 4 applications	28	11
Parameter size	Value																																																								
1 bit	1000																																																								
8 bit	2000																																																								
16 bit	3000																																																								
32 bit	4000																																																								
64 bit	5000																																																								
Parameter type	Value																																																								
Volatile	0																																																								
User save	100																																																								
Power-down save	200																																																								
Sub-array	Menus	Value																																																							
Applications menus	18-20	1																																																							
Derivative image	29	2																																																							
User program image	30	3																																																							
Option slot 1 set-up	15	4																																																							
Option slot 1 applications	25	5																																																							
Option slot 2 set-up	16	6																																																							
Option slot 2 applications	26	7																																																							
Option slot 3 set-up	17	8																																																							
Option slot 3 applications	27	9																																																							
Option slot 4 set-up	24	10																																																							
Option slot 4 applications	28	11																																																							
Temp Feedback	Internal thermistor has failed																																																								
218	<p>The <i>Temp Feedback</i> trip indicates that an internal thermistor has failed. The thermistor location can be identified by the sub-trip number.</p> <table border="1"> <thead> <tr> <th>Source</th> <th>xx</th> <th>y</th> <th>zz</th> </tr> </thead> <tbody> <tr> <td>Power system</td> <td>Power module number</td> <td>0</td> <td>Always zero</td> </tr> <tr> <td>Power system</td> <td>Power module number</td> <td>Rectifier number</td> <td>Always zero</td> </tr> </tbody> </table> <p>Recommended actions:</p> <ul style="list-style-type: none"> Hardware fault – Contact the supplier of the drive 	Source	xx	y	zz	Power system	Power module number	0	Always zero	Power system	Power module number	Rectifier number	Always zero																																												
Source	xx	y	zz																																																						
Power system	Power module number	0	Always zero																																																						
Power system	Power module number	Rectifier number	Always zero																																																						
Th Brake Res	Brake resistor over temperature																																																								
10	<p>The <i>Th Brake Res</i> is initiated, if hardware based braking resistor thermal monitoring is connected and the resistor overheats. If the braking resistor is not used then this trip must be disabled with bit 3 of Action <i>On Trip Detection</i> (10.037) to prevent this trip.</p> <p>Recommended actions:</p> <ul style="list-style-type: none"> Check brake resistor wiring Check braking resistor value is greater than or equal to the minimum resistance value Check braking resistor insulation 																																																								

Trip	Diagnosis						
Th Short Circuit	Motor thermistor short circuit						
25	The <i>Th Short Circuit</i> trip indicates that the motor thermistor connected to terminal 8 (analog input 3) on the control connections or terminal 15 on the encoder terminal (15-way D-type connector) is short circuit or low impedance. The cause of the trip can be identified by the sub-trip number.						
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td><i>P1 Thermistor Short Circuit Detect</i> (03.123) = 1 and the resistance of the thermistor connected to the drive P1 position feedback interface is less than 50 Ω.</td> </tr> <tr> <td>2</td> <td><i>Analog Input 3 Mode</i> (07.015) = 7 and the resistance of the thermistor connected to analog input 3 is less than 50 Ω.</td> </tr> </tbody> </table>	Sub-trip	Reason	1	<i>P1 Thermistor Short Circuit Detect</i> (03.123) = 1 and the resistance of the thermistor connected to the drive P1 position feedback interface is less than 50 Ω.	2	<i>Analog Input 3 Mode</i> (07.015) = 7 and the resistance of the thermistor connected to analog input 3 is less than 50 Ω.
	Sub-trip	Reason					
	1	<i>P1 Thermistor Short Circuit Detect</i> (03.123) = 1 and the resistance of the thermistor connected to the drive P1 position feedback interface is less than 50 Ω.					
2	<i>Analog Input 3 Mode</i> (07.015) = 7 and the resistance of the thermistor connected to analog input 3 is less than 50 Ω.						
Recommended actions: <ul style="list-style-type: none"> • Check thermistor continuity • Replace motor / motor thermistor 							
Thermistor	Motor thermistor over-temperature						
24	The <i>Thermistor</i> trip indicates that the motor thermistor connected to terminal 8 (analog input 3) on the control connections or terminal 15 on the encoder terminal (15 way D-type connector) has indicated a motor over temperature. The cause of the trip can be identified by the sub-trip number						
	<table border="1"> <thead> <tr> <th>Sub-trip</th> <th>Reason</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Trip initiated from P1 position feedback interface</td> </tr> <tr> <td>2</td> <td>Trip initiated from analog input 3</td> </tr> </tbody> </table>	Sub-trip	Reason	1	Trip initiated from P1 position feedback interface	2	Trip initiated from analog input 3
	Sub-trip	Reason					
	1	Trip initiated from P1 position feedback interface					
2	Trip initiated from analog input 3						
Recommended actions: <ul style="list-style-type: none"> • Check motor temperature • Check thermistor continuity 							
Undefined	Drive has tripped and the cause of the trip is Undefined						
110	The <i>Undefined</i> trip indicates that the power system has generated but did not identify the trip the power system. The cause of the trip is unknown.						
	Recommended actions: <ul style="list-style-type: none"> • Hardware fault – return the drive to the supplier 						
User 24V	User 24 V supply is not present on control terminals (1,2)						
91	A <i>User 24 V</i> trip is initiated, if <i>User Supply Select</i> (Pr 06.072) is set to 1 or <i>Low Under Voltage Threshold Select</i> (06.067) = 1 and no user 24 V supply is present on control terminals 1 and 2.						
	Recommended actions: <ul style="list-style-type: none"> • Ensure the user 24 V supply is present on control terminals 1 (0 V) and 2 (24 V) 						

Trip	Diagnosis		
User Program	On board user program error		
	The <i>User Program</i> trip indicates that an error has been detected in the onboard user program image. The reason for the trip can be identified by the sub-trip number.		
	Sub-trip	Reason	Comments
	1	Divide by zero	
	2	Undefined trip	
	3	Attempted fast parameter access set-up with non-existent parameter	
	4	Attempted access to non-existent parameter	
	5	Attempted write to read-only parameter	
	6	Attempted and over-range write	
	7	Attempted read from write-only parameter	
	30	The image has failed because either its CRC is incorrect, or there are less than 6 bytes in	Occurs when the drive powers-up or the image is programmed. The image tasks will not run
	31	The image requires more RAM for heap and stack than can be provided by the drive.	As 30
	32	The image requires an OS function call that is higher than the maximum allowed	As 30
	33	The ID code within the image is not valid	As 30
	34	The derivative image has been changed for an image with a different derivative number.	As 30
	40	The timed task has not completed in time and has been suspended	
	41	Undefined function called, i.e. a function in the host system vector table that has not been	As 40
	51	Core menu customization table CRC check failed	As 30
	52	Customized menu table CRC check failed	As 30
	53	Customized menu table changed	Occurs when the drive powers-up or the image is programmed and the table has changed. Defaults are loaded for the derivative menu and the trip will keep occurring until drive parameters are saved.
	61	The option module installed in slot 1 is not allowed with the derivative image	As 30
	62	The option module installed in slot 2 is not allowed with the derivative image	As 30
	63	The option module installed in slot 3 is not allowed with the derivative image	As 30
	64	The option module installed in slot 4 is not allowed with the derivative image	As 30
	70	An option module that is required by the derivative image is not installed in any slot.	As 30
	71	An option module specifically required to be installed in slot 1 not present	As 30
	72	An option module specifically required to be installed in slot 2 not present	As 30
	73	An option module specifically required to be installed in slot 3 not present	As 30
	74	An option module specifically required to be installed in slot 4 not present	As 30
	80	Image is not compatible with the control board	Initiated from within the image code
	81	Image is not compatible with the control board serial number	As 80

249

Trip	Diagnosis
User Prog Trip	Trip generated by an onboard user program
96	This trip can be initiated from within an onboard user program using a function call which defines the sub-trip number. Recommended actions: <ul style="list-style-type: none"> • Check the user program
User Save	User Save error / not completed
36	The <i>User Save</i> trip indicates that an error has been detected in the user save parameters saved in non-volatile memory. For example, following a user save command, if the power to the drive was removed when the user parameters were being saved. Recommended actions: <ul style="list-style-type: none"> • Perform a user save in Pr mm.000 to ensure that the trip doesn't occur the next time the drive is powered up. • Ensure that the drive has enough time to complete the save before removing the power to the drive.
User Trip	User generated trip
40 -89 112 -159	These trips are not generated by the drive and are to be used by the user to trip the drive through an application program. Recommended actions: <ul style="list-style-type: none"> • Check the user program
Volts Range	Supply voltage out of range detected in Regen mode
169	The <i>Volts Range</i> trip is initiated, if the <i>Regen Minimum Voltage</i> (03.026) is set to a non-zero value and the supply voltage is outside the range defined by <i>Regen Maximum Voltage</i> (03.027) and <i>Regen Minimum Voltage</i> (03.026) for more than 100 ms. Recommended actions: <ul style="list-style-type: none"> • Ensure the supply voltage is operating within the drive specification. • Ensure Pr 03.026 and Pr 03.027 are set correctly • Check the supply voltage waveform using an oscilloscope • Reduce the level of supply disturbance • Set <i>Maximum Voltage</i> (03.027) to zero to disable the trip.
Watchdog	Control word watchdog has timed out
30	The <i>Watchdog</i> trip indicates that the control word has been enabled and has timed out Recommended actions:

Table 13-4 Serial communications look up table

No	Trip	No	Trip	No	Trip
1	Reserved 001	92	OI Snubber	198	Encoder 10
2	Over Volts	93	Inductor Too Hot	199	Destination
3	OI ac	94 - 95	Reserved 94 - 95	200	Slot1 HF
4	OI Brake	96	User Prog Trip	201	Slot1 Watchdog
5	PSU	97	Data Changing	202	Slot1 Error
6	External Trip	98	Out Phase Loss	203	Slot1 Not installed
7	Over Speed	99	CAM	204	Slot1 Different
8	Reserved 008	100	Reset	205	Slot2 HF
9	PSU24	101	OHT Brake	206	Slot2 Watchdog
10	Th Brake Res	102	OHT Rectifier	207	Slot2 Error
11	Autotune 1	103 - 108	Reserved 103 - 108	208	Slot2 Not installed
12	Autotune 2	109	OI dc	209	Slot2 Different
13	Autotune 3	110	Undefined	210	Slot3 HF
14	Autotune 4	111	Configuration	211	Slot3 Watchdog
15	Autotune 5	112 - 167	User Trip 112 - 167	212	Slot3 Error
16	Autotune 6	168	Frequency Range	213	Slot3 Not installed
17	Autotune 7	169	Voltage Range	214	Slot3 Different
18	Autotune Stopped	170 - 173	Reserved 170 - 173	215	Option Disable
19	Brake R Too Hot	174	Card Slot	216	Slot App Menu
20	Motor Too Hot	175	Card Product	217	App Menu Changed
21	OHT Inverter	176	Name Plate	218	Temp Feedback
22	OHT Power	177	Card Boot	219	An Output Calib
23	OHT Control	178	Card Busy	220	Power Data
24	Thermistor	179	Card Data Exists	221	Stored HF
25	Th Short Circuit	180	Card Option	222	Over Frequency
26	I/O Overload	181	Card Read Only	223	Rating Mismatch
27	OHT dc bus	182	Card Error	224	Drive Size
28	An Input Loss 1	183	Card No Data	225	Current Offset
29	An Input Loss 2	184	Card Full	226	Soft Start
30	Watchdog	185	Card Access	227	Sub-array RAM
31	EEPROM Fail	186	Card Rating	228 - 247	Reserved 228 - 247
32	Phase Loss	187	Card Drive Mode	248	Derivative Image
33	Resistance	188	Card Compare	249	User Program
34	Keypad Mode	189	Encoder 1	250	Slot4 HF
35	Control Word	190	Encoder 2	251	Slot4 Watchdog
36	User Save	191	Encoder 3	252	Slot4 Error
37	Power Down Save	192	Encoder 4	253	Slot4 Not installed
38	Low Load	193	Encoder 5	254	Slot4 Different
39	Line Sync	194	Encoder 6	255	Reset Logs
40 - 89	User Trip 40 - 89	195	Encoder 7		
90	Power Comms	196	Encoder 8		
91	User 24V	197	Encoder 9		

The trips can be grouped into the following categories. It should be noted that a trip can only occur when the drive is not tripped or is already tripped but with a trip with a lower priority number.

Table 13-5 Trip categories

Priority	Category	Trips	Comments
1	Internal faults	HF01, HF02, HF03, HF04, HF05, HF06, HF07, HF08, HF09, HF10, HF11, HF12, HF13, HF14, HF15, HF16, HF17, HF18, HF19, HF20	These indicate internal problems and cannot be reset. All drive features are inactive after any of these trips occur. If an KI-Keypad is installed it will show the trip, but the keypad will not function.
1	Stored HF trip	{Stored HF}	This trip cannot be cleared unless 1299 is entered into <i>Parameter (mm.000)</i> and a reset is initiated.
2	Non-resettable trips	Trip numbers 218 to 247, {Slot1 HF}, {Slot2 HF}, {Slot3 HF} or {Slot4 HF}	These trips cannot be reset.
3	Volatile memory failure	{EEPROM Fail}	This can only be reset if Parameter mm.000 is set to 1233 or 1244, or if <i>Load Defaults</i> (11.043) is set to a non-zero value.
3	Internal 24 V power supply	{PSU 24}	
4	NV Media Card trips	Trip numbers 174, 175 and 177 to 188	These trips are priority 5 during power-up.
5	Trips with extended reset times	{OI ac}, {OI Brake}, and OI dc}	These trips cannot be reset until 10 s after the trip was initiated.
5	Phase loss and d.c. link power circuit protection	{Phase Loss} and {Oht dc bus}	The drive will attempt to stop the motor before tripping if a {Phase Loss}.000 trip occurs unless this feature has been disabled (see <i>Action On Trip Detection</i> (10.037)). The drive will always attempt to stop the motor before tripping if an {Oht dc bus} occurs.
5	Standard trips	All other trips	

13.5 Internal / Hardware trips

Trips {HF01} to {HF20} are internal faults that do not have trip numbers. If one of these trips occurs, the main drive processor has detected an irrecoverable error. All drive functions are stopped and the trip message will be displayed on the drive keypad. If a non permanent trip occurs this may be reset by power cycling the drive. On power up after it has been power cycled the drive will trip on Stored HF. Enter 1299 in **mm.000** to clear the Stored HF trip.

13.6 Alarm indications

In any mode, an alarm is an indication given on the display by alternating the alarm string with the drive status string on the first row and showing the alarm symbol in the last character in the first row. If an action is not taken to eliminate any alarm except "Auto Tune and Limit Switch" the drive may eventually trip. Alarms are not displayed when a parameter is being edited, but the user will still see the alarm character on the upper row.

Table 13-6 Alarm indications

Alarm string	Description
Brake Resistor	Brake resistor overload. <i>Braking Resistor Thermal Accumulator</i> (10.039) in the drive has reached 75.0 % of the value at which the drive will trip.
Motor Overload	<i>Motor Protection Accumulator</i> (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
Ind Overload	Regen inductor overload. <i>Inductor Protection Accumulator</i> (04.019) in the drive has reached 75.0 % of the value at which the drive will trip and the load on the drive is >100 %.
Drive Overload	Drive over temperature. <i>Percentage Of Drive Thermal Trip Level</i> (07.036) in the drive is greater than 90 %.
Auto Tune	The autotune procedure has been initialized and an autotune in progress.
Limit Switch	Limit switch active. Indicates that a limit switch is active and that is causing the motor to be stopped.

13.7 Status indications

Table 13-7 Status indications

Upper row string	Description	Drive output stage
Inhibit	The drive is inhibited and cannot be run. The SAFE TORQUE OFF signal is not applied to SAFE TORQUE OFF terminals or Pr 06.015 is set to 0	Disabled
Ready	The drive is ready to run. The drive enable is active, but the drive inverter is not active because the final drive run is not active	Disabled
Stop	The drive is stopped / holding zero speed.	Enabled
Run	The drive is active and running	Enabled
Scan	The drive is enabled in Regen mode and is trying to synchronize to the supply	Enabled
Supply Loss	Supply loss condition has been detected	Enabled
Deceleration	The motor is being decelerated to zero speed / frequency because the final drive run has been deactivated.	Enabled
dc injection	The drive is applying dc injection braking	Enabled
Position	Positioning / position control is active during an orientation stop	Enabled
Trip	The drive has tripped and no longer controlling the motor. The trip code appears in the lower display	Disabled
Active	The regen unit is enabled and synchronized to the supply	Enabled
Under Voltage	The drive is in the under voltage state either in low voltage or high voltage mode	Disabled
Heat	The motor pre-heat functions inactive	Enabled
Phasing	The drive is performing a 'phasing test on enable'.	Enabled

Table 13-8 Option module and NV Media Card and other status indications at power-up

First row string	Second row string	Status
Booting	Parameters	Parameters are being loaded
Drive parameters are being loaded from a NV Media Card		
Booting	User Program	User program being loaded
User program is being loaded from a NV Media Card to the drive		
Booting	Option Program	User program being loaded
User program is being loaded from a NV Media Card to the option module in slot X		
Writing To	NV Card	Data being written to NV Media Card
Data is being written to a NV Media Card to ensure that its copy of the drive parameters is correct because the drive is in Auto or Boot mode		
Waiting For	Power System	Waiting for power stage
The drive is waiting for the processor in the power stage to respond after power-up		
Waiting For	Options	Waiting for an option module
The drive is waiting for the Options Modules to respond after power-up		
Uploading From	Options	Loading parameter database
At power-up it may be necessary to update the parameter database held by the drive because an option module has changed or because an applications module has requested changes to the parameter structure. This may involve data transfer between the drive an option modules. During this period 'Uploading From Options' is displayed		

13.8 Programming error indications

Following are the error message displayed on the drive keypad when an error occurs during programming of drive firmware.

Table 13-9 Programming error indications

Error String	Reason	Solution
Error 1	There is not enough drive memory requested by all the option modules.	Power down drive and remove some of the option modules until the message disappears.
Error 2	At least one option module did not acknowledge the reset request.	Power cycle drive
Error 3	The boot loader failed to erase the processor flash	Power cycle drive and try again. If problem persists, return drive
Error 4	The boot loader failed to program the processor flash	Power cycle drive and try again. If problem persists, return drive
Error 5	One option module did not initialize correctly. Option module did not set Ready to Run flag.	Remove faulty option module.

13.9 Displaying the trip history

The drive retains a log of the last ten trips that have occurred. *Trip 0* (10.020) to *Trip 9* (10.029) store the most recent 10 trips that have occurred where *Trip 0* (10.020) is the most recent and *Trip 9* (10.029) is the oldest. When a new trip occurs it is written to *Trip 0* (10.020) and all the other trips move down the log, with oldest being lost. The date and time when each trip occurs are also stored in the date and time log, i.e. *Trip 0 Date* (10.041) to *Trip 9 Time* (10.060). The date and time are taken from *Date* (06.016) and *Time* (06.017). The date / time source can be selected with *Date / Time Selector* (06.019). Some trips have sub-trip numbers which give more detail about the reason for the trip. If a trip has a sub-trip number its value is stored in the sub-trip log, i.e. *Trip 0 Sub-trip Number* (10.070) to *Trip 9 Sub-trip Number* (10.079). If the trip does not have a sub-trip number then zero is stored in the sub-trip log.

If any parameter between Pr **10.020** and Pr **10.029** inclusive is read by serial communication, then the trip number in Table 13-3 is the value transmitted.

NOTE

The trip logs can be reset by writing a vale of 255 in Pr **10.038**.

13.10 Behaviour of the drive when tripped

If the drive trips, the output of the drive is disabled so the load coasts to a stop. If any trip occurs the following read only parameters are frozen until the trip is cleared. This is to help in diagnose the cause of the trip.

Parameter	Description
01.001	Frequency / speed reference
01.002	Pre-skip filter reference
01.003	Pre-ramp reference
02.001	Post-ramp reference
03.001	Frequency slaving demand / Final speed ref
03.002	Speed feedback
03.003	Speed error
03.004	Speed controller output
04.001	Current magnitude
04.002	Active current
04.017	Reactive current
05.001	Output frequency
05.002	Output voltage
05.003	Power
05.005	DC bus voltage
07.001	Analog input 1
07.002	Analog input 2
07.003	Analog input 3

If the parameters are not required to be frozen then this can be disabled by setting bit 4 of Pr **10.037**.

14 UL listing information

14.1 General

Drive sizes 3, 4, 5 and 6 have been assessed to meet both UL and cUL requirements.

UL listings can be viewed online at www.UL.com. The UL file number is E171230.

14.2 Mounting

Drives can be installed in the following configurations:

- Standard or surface mounted. This is described in section 3.5.1 *Surface mounting* on page 32.
- Through-hole mounted. This is described in section 3.5.2 *Through-panel mounting* on page 37.
- Tile mounted. The drive is mounted sideways with the side panel against the mounting surface. This configuration reduces the overall depth of the installation. A Tile mounting kit is available. See UL listed accessories.
- Bookcase mounted. Drives are mounted side by side with no space between them. This configuration minimises the overall width of the installation.

14.3 Environment

Drives are able to meet the following UL/ NEMA environmental ratings:

- Type 1. The drive must either be installed with a UL Type 1 kit or be installed in a Type 1 enclosure.
- Type 12. The drive must be installed in a Type 12 enclosure.
- If the drive is through-hole mounted inside a Type 12 enclosure, then both the High-IP insert and the Type 12 sealing kit must be installed in order to provide protection against ingress of dirt and water. See section 3.9 *Enclosing standard drive for high environmental protection* on page 45.
- The remote keypad is rated to both UL Type 1 and UL Type 12
- Drives must be installed in a pollution degree 2 environment or better.

14.4 Electrical installation

The following precautions must be observed when installing drives to UL requirements:

- Drives are rated for use at 40 °C, 50 °C and 55 °C ambient temperature except where indicated otherwise in Table 12-1 to Table 12-3. Size 4, 400 V variant drives are rated to 35 °C, 40 °C and 45 °C when used in 'bookcase mounting configuration.
- For operation up to 50 °C, the temperature rating of the power cables must be at least 60 °C.
- For operation up to 55 °C, the temperature rating of the power cables must be at least 75 °C.
- If the drive control stage is powered from an external power supply (+24 V), the power supply must be listed or recognized to UL class 2 with appropriate fusing, see section 4.5 *24 Vdc supply* on page 68.
- Ground connections must use UL listed closed loop (ring) terminals.

14.5 UL listed accessories

The following options are UL listed

- | | |
|----------------------|-----------------------------|
| • KI-Keypad | • Tile mounting kit |
| • KI-Keypad RTC | • Metal conduit entry plate |
| • KI-Keypad Advanced | • Type 12 sealing kit |
| • SI-PROFIBUS | • SD card kit |
| • SI-DeviceNet | • UL Type 1 kit |
| • SI-CANopen | |
| • SI-Register | |

14.6 Motor overload protection

- The drives are installed with solid state motor overload protection.
- The default overload protection level is less than 150 % of full load rated current for open loop operation.
- The default overload protection level is less than 175 % of full load rated current for closed loop vector or servo mode operation.
- In order for the motor protection to work correctly, the motor rated current must be entered into Pr **00.046** or Pr **05.007**
- The protection level may be adjusted below 150 % if required. See section 8.3 *Current limits* on page 151.

14.7 Motor overspeed protection

The drive is installed with solid state motor overspeed protection. However, this feature does not provide the level of protection provided by an independent, high-integrity overspeed protection device.

14.8 Thermal memory retention

Drives incorporate thermal memory retention that complies fully with the requirements of UL508C.

The drive is provided with motor load and speed sensitive overload protection with thermal memory retention that complies with the US National Electrical Code (NFPA 70) clause 430.126, and Underwriters Laboratories Standard UL508C, clause 20.1.11 (a). The purpose of this protection is to protect both drive and motor from dangerous overheating in the event of repeated overload or failure to start, even if the power to the drive is removed between overload events.

For a full explanation of the thermal protection system, refer to section 8.4 *Motor thermal protection* on page 151.

In order to comply with UL requirements for thermal memory retention it is necessary to set the *Thermal Protection Mode* (Pr 04.016) to zero; and the *Low Speed Protection Mode* (Pr 04.025) must be set to 1 if the drive is operated in Heavy Duty mode.

Alternatively, an external thermal sensor or switch may be used as a means of motor and drive overload protection that complies with the requirements of UL508C, clause 20.1.11 (b). This protection method is particularly recommended where independent forced cooling of the motor is used, because of the risk of overheating if the cooling is lost.

External thermal sensor

The drive is provided with a means to accept and act upon a signal from a thermal sensor or switch imbedded in the motor or from an external protective relay. Refer to section 4.14.2 *Control terminal specification* on page 93.

14.9 Electrical Ratings

- Drives are listed for connection to an AC supply capable of delivering no more than 100 kA symmetrical amperes at 264 Vac rms maximum (200 V drives), 528 Vac rms maximum (400 V drives) or 600 Vac rms maximum (575 V and 690 V drives). See Table 4-6.
- Drives are listed for Over Voltage CAT III.
- Power and current ratings are given in Table 12-1 to Table 12-3.
- Fuse and circuit breaker ratings are given in Table 4-6 to
- Unless indicated otherwise in Table 4-7 to Table 4-10, fuses may be any UL listed Class J or CC with a voltage rating of at least 600 VAC.
- Unless indicated otherwise in Table 4-7 to Table 4-10, circuit breakers may be any UL listed type, category control number: DIVQ or DIVQ7, with a voltage rating of at least 600 Vac.

14.10 cUL requirements for 575 V frame size 7 and 8

For size 7 and 8 575Vac models only (07500440, 07500550, 08500630, 08500860), the following must be adhered to in order to comply with cUL approval requirements:

TRANSIENT SURGE SUPPRESSION SHALL BE INSTALLED ON THE LINE SIDE OF THIS EQUIPMENT AND SHALL BE RATED 575 Vac (PHASE TO GROUND), 575 Vac (PHASE TO PHASE), SUITABLE FOR OVERVOLTAGE CATEGORY III, AND SHALL PROVIDE PROTECTION FOR A RATED IMPULSE WITHSTAND VOLTAGE PEAK OF 6 kV AND A CLAMPING VOLTAGE OF MAXIMUM 2400 V.

14.11 Group installation

14.11.1 Definition

Group Installation Definition: A motor branch circuit for two or more motors, or one or more motors with other loads, protected by a circuit breaker or a single set of fuses.

14.11.2 Limitations on use

All motors rated less than 1 hp

The drives may be used in group installations where each of the motors is rated 1 hp or less. The full-load current rating of each motor must not exceed 6 A. The motor drive provides individual overload protection in accordance with the NEC clause 430.32.

Smallest motor protected

The drives may be used in group installations where the smallest motor is protected by the branch fuses or circuit breaker. Limits on the current rating of branch circuit protective fuses and circuit breakers are given in the NEC Table: 430.52.

Other installations

The motor drives described in this user guide are not UL listed for group installation.

Index

Symbols

+10V user output	93
+24V external input	68, 93, 96
+24V user output	94

Numerics

0V common	93
-----------------	----

A

AC supply contactor	74
AC supply requirements	65
Acceleration	112, 130, 131, 132, 133
Access	23
Accuracy	243
Acoustic noise	243
Advanced menus	101
Advanced parameters	161
Air-flow in a ventilated enclosure	44
Alarm	282
Alarm Indications	282
Altitude	242
Analog input 2	94
Analog input 3	94
Analog output 1	94
Analog output 2	94
Autotune	140

B

Basic requirements	125
Braking	77
Braking resistor values	252

C

Cable clearances	87
Cable lengths (maximum)	249
Cable size ratings	244
Cable types and lengths	75
Cautions	8
Control connections	91
Control terminal specification	93
Cooling	23
Cooling method	242
Current limit	112
Current limits	151
Current loop gains	149
Current ratings	232

D

DC bus paralleling	67
DC bus voltage	77
Deceleration	77, 115, 130, 131, 132, 133
Defaults (restoring parameter)	104
Derating	232
Destination parameter	91
Diagnostics	258
Digital I/O 1	95
Digital I/O 2	95
Digital I/O 3	95
Digital Input 1	95
Digital Input 2	95
Digital Input 3	95
Dimensions (overall)	243
Display	98
Display messages	102
Drive enable	95

E

Electrical safety	23
Electrical terminals	55
Electromagnetic compatibility (EMC)	24, 82, 254
EMC - Compliance with generic emission standards	87
EMC - General requirements	84
EMC - Variations in the wiring	89
EMC filter dimensions (external, overall)	257
EMC filter torque settings (external)	257
EMC filters (optional external)	256
Emission	254
EN61800-3:2004 (standard for power drive systems)	87
Enclosure	43
Enclosure Layout	43
Enclosure sizing	44
Environmental protection	23
External EMC filter	48

F

Feedback device cable shielding	87
Field weakening (constant power) operation	152
Fire protection	23
Fixed V/F mode	15
Fuse ratings	244
Fuse types	74

G

Getting Started	98
Ground connections	74, 86
Ground leakage	81
Ground terminals	55
Grounding bracket	83
Grounding clamp	82

H

Hazardous areas	24
Heatsink mounted braking resistor	77
High speed operation	152
Humidity	242

I		N	
Input current ratings	244	NEMA rating	45, 242
Input inductor calculation	66	Notes	8
Internal EMC filter	84	NV media card operation	154
IP Rating (Ingress protection)	242	O	
Isolator switch	90	Onboard PLC	159
Items supplied with the drive	21	Open loop mode	15
K		Open loop vector mode	15
Keypad and display - Installing / removing	31	Operating mode (changing)	103, 125
Keypad operation	98	Operating modes	15
L		Operating-mode selection	121
Line reactors	65, 241	Optimization	139
M		Option Module	227
Maximum speed / frequency	153	Options	18
Mechanical Installation	23	Output contactor	77
Menu 0	101	Output frequency	243
Menu 01 - Frequency / speed reference	172	P	
Menu 02 - Ramps	176	Parameter access level	104
Menu 03 - Slave frequency, speed feedback and speed control	179	Parameter ranges	164
Menu 04 - Torque and current control	183	Parameter security	104
Menu 05 - Motor control	187	Parameter x.00	112
Menu 06 - Sequencer and clock	192	Planning the installation	23
Menu 07 - Analog I/O	196	Position feedback module category parameters	227
Menu 08 - Digital I/O	198	Power ratings	78, 232, 252
Menu 09 - Programmable logic, motorized pot and binary sum	202	Power terminals	55
Menu 10 - Status and trips	208	Precision reference Analog input 1	93
Menu 11 - General drive set-up	210	Product information	10
Menu 12 - Threshold detectors and variable selectors	212	Q	
Menu 13 - Position control	220	Quadratic V/F mode	15
Menu 14 - User PID controller	224	Quick start commissioning / Start-up	130
Menu 18 - Application menu 1	228	Quick start connections	125
Menu 19 - Application menu 2	228	R	
Menu 20 - Application menu 3	228	Ramps	112
Menu 21 - Second motor parameters	229	Ratings	10, 69
Menu 22 - Additional Menu 0 set-up	230	Reactor current ratings	65, 242
Menu structure	100	Relay contacts	95
Minimum connections to get the motor running in any operating mode	126	Residual current device (RCD)	81
Mode parameter	91	Resistances (minimum)	78
Monitoring	114	Resolution	243
Motor (running the motor)	125	RFC-A mode	15
Motor cable - interruptions	89	RFC-S mode	15
Motor isolator / disconnect-switch	90	Routine maintenance	58
Motor number of poles	139		
Motor operation	77		
Motor parameters	120		
Motor rated current	139		
Motor rated current (maximum)	151		
Motor rated frequency	139		
Motor rated power factor	139		
Motor rated speed	139		
Motor rated voltage	139		
Motor requirements	242		
Motor thermal protection	151		
Motor winding voltage	76		
Multiple motors	76		

S

SAFE TORQUE OFF	97
SAFE TORQUE OFF/drive enable	95
Safety Information	8, 23
Saving parameters	103
Sealed enclosure - sizing	44
Serial comms lead	91
Serial communications connections	91
Serial communications look-up table	260
Serial communications port isolation	91
Single line descriptions	106
Solutions Module - Installing / removing	30
Speed loop gains	145, 148, 150
Speed range	243
Speed reference selection	112
Speed-loop PID gains	113
Start up time	243
Starts per hour	243
Status	282
Status Indications	282
Status information	121
Storage	242
Supply requirements	241
Supply types	65
Surface mounting the drive	32
Surge immunity of control circuits - long cables and connections outside a building	90
Surge suppression for analog and bipolar inputs and outputs	90
Surge suppression for digital and unipolar inputs and outputs	90
Switching frequency	152

T

Technical data	232
Temperature	242
Terminal block in the enclosure	89
Terminal cover removal	24
Terminal sizes	55
Thermal protection circuit for the braking resistor	81
Through-panel mounting the drive	37
Torque settings	57, 252
Trip	258
Trip History	283
Trip Indications	258

U

UL Listing Information	284
User Security	104

V

Ventilation	43
Vibration	243
Voltage boost	113
Voltage mode	140, 141

W

Warnings	8
Weights	244



0478-0004-03